FCC Class B Certification

APPENDIX H

: USER'S MANUAL

LCD Monitor User's Guide

Models IL-1513A

TABLE OF CONTENTS

INTRODUCTION

	FCC Compliance Statement	i
	Safety Instructions	iii
	General Information	1
	Equipment Check list	2
	Monitor Features	3
GET	TING STARTED	
	Installation	4
	Control Buttons	5
	On-Screen Display	6
ON-	SCREEN CONTROLS	
	Menu Descriptions	7
REF	ERENCE	
	Power Management	10
	Timing Guide	11
	Pin Assignment	12
	Specifications	13
	Troubleshooting	14

FCC COMPLIANCE STATEMENT

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against radio frequency interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception (this can be determined by turning this equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

CAUTION:

To comply within the limits for an FCC Class B computing device, always use the shielded signal cord and shielded power cord supplied with this unit.

CAUTION TO THE USER:

The Federal Communications Commission warns that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If necessary, the user should contact the dealer or an experienced radio/television technician for additional suggestions. The user may find the Federal Communications Commission booklet, **How to Identify and Resolve Radio-TV Interference Problems**, helpful. This booklet is available from the U.S. Government Printing Office, Washington, D.C., Stock No. 004-000-00345-4.

NOTICE OF COMPLIANCE WITH CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS

FCC COMPLIANCE STATEMENT

DDC COMPLIANCE NOTICE:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

SAFETY INSTRUCTIONS

■ Handling

Due to its fragile glass panel, this monitor must be handled with caution and not be exposed to impact or shock.

Never touch the display area or rub it with a hard object or tool, as the panel is easily scratched.

INTRODUCTION

■ Cleaning

The display area is sensitive to scratching. Do not use ketone-type cleaners (i.e. acetone), ethyl alcohol, toluene, ethyl acid or methyl chloride to clean the panel. Doing so may result in permanent damage.

Water, IPA (Iso Prophyl Alcohol) and Hexane are safe cleaners.

Do not allow oil or water to penetrate the display, this will cause staining and discoloration.

Avoid getting food particles and fingerprints on the display area at all times.

■ Storage

Store the monitor in a dark place away from sunlight and ultraviolet (UV) radiation, this may cause air bubbles to develop within the glass panel.

Do not store the display in temperatures higher than 40°C/104°F or humidity greater than 90%. Avoid condensation.

ii iii

SAFETY INSTRUCTIONS

■ Caution

- 1. Do not open any covers on the monitor. No user serviceable parts are inside.
- 2. In an emergency, disconnect the AC power plug.
- 3. To avoid electrical shock, disconnect the power cord from the monitor before connecting the signal cable to the computer.
- 4. Keep away from liquids and flame. Do not immerse this monitor in water or any other liquid. Do not use this device in excessively hot conditions.
- 5. Handle the power cord with care. Do not bend the power cord excessively or place heavy objects on it. Do not use a damaged power cord, doing so can result in fire or electrical shock hazards. When disconnecting the power cord, always grasp the plug, not the cord.
- 6. The liquid crystals in the display panel contain several irritants. If the panel is damaged or broken, do not allow the liquid to come in contact with skin, eyes, or mouth. If you come in contact with the liquid, flush the affected area with running water for at least 15 minutes, then consult a doctor.
- 7. Handle this monitor with care when moving it. When lifting the monitor, support it with one hand holding the stand, and one hand holding the LCD screen.
- 8. Always disconnect the power cord when moving this monitor.
- 9. Do not lay this monitor in a horizontal position when operating.

GENERAL INFORMATION

Your new LCD monitor incorporates the latest state-of the art color Liquid Crystal Display (LCD) technology providing a wider viewing angle with higher contrast ratio.

Your new LCD monitor has many advantages: safe from electromagnetic wave, lights, sharps and slims. This makes the monitor extremely suitable in the environment of administration, transportation system research, etc.

Your new LCD monitor is designed for Analog input only.

Your new LCD monitor does not emit any X-ray radiation and the magnetic emission greatly reduces the eyestrain. Moreover, our On Screen Controls on the side of the panel provide flexibility with simple controls. You can use these controls to adjust the display as you desire.

Your new LCD monitor incorporates an active TFT module. It has a 1024 x 768 pixel resolution, high contrast, wide viewing angle and colors up to 16M.

iv 1

EQUIPMENT CHECK LIST

Before operating your display, please check to make sure that all of the items listed are present in your package:

- 1) Color TFT LCD Monitor (With 15-pin D-SUB cable)
- 2) Power Card
- 3) Manual



◆ Power Requirements

The monitor is equipped with an auto-sensing power supply for voltage ranging from 100-120VAC/200-240VAC, 50/60Hz.

Confirm the power rating of the AC Source before you plug the AC cable to the wall outlet.

MONITOR FEATURES

- * Supports Analog IBM compatible PC, Apple Macintosh™ (Adapter optional)
- * Supports DPMS for monitor power management
- * Support DDC2B
- * On Screen Control: Auto-Tune, Contrast, Brightness, H/V Position, H-Size, Phase, Auto-Level, Color Control, OSD Position, OSD Time-out, Power Save Delay, Language, Information.
- * Built-in color active matrix TFT (Thin Film Transistor) Liquid Crystal Display (LCD) that uses amorphous silicon TFTs as a switching device.
- * Resolution: up to 1024 x 768
- * Color : 16M Color support.
- * Dot pitch: 0.297mm(H) x 0.297mm(W)
- * Scanning frequency: 30kHz~60kHz(H), 55Hz ~ 75Hz(V).
- * Universal power supply : AC 100 240V allowed.
- * Power consumption Normal : 34 Watt Max.

Off: 3 Watt Max.

* Outside dimension : 358mm(W) x 360mm(H) x 186mm(D)

14"(W) x 14.2"(H) x 7.3"(D)


* Weight (net) : 4.0kg (8.8 lbs.)

INSTALLATION

CENTRY SYNTED


◆ Follow these steps to install the monitor

- 1. Before you connect the cables, make sure the monitor and system unit power switches are OFF.
- 2. Plug one end of the 15-pin signal cable to the rear of your system. The adapter may be required for certain Apple Macintosh computers. Tighten the two screws on the cable connector.
- 3. Connect the power cord to the inlet socket which is located at the rear of the display. Connect the plug into an AC wall outlet.

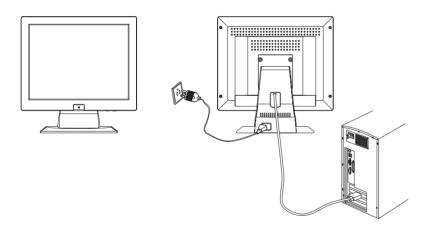

(fig. 1)

CONTROL BUTTONS

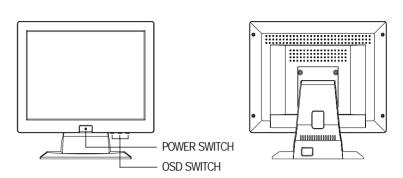

Button Description:

- 2. \oplus : Move selected icon up to select one of the controls. Increase the control value.
- 3. \bigcirc : Move selected icon down to select one of the controls. Decrease the control value.
- (A): Exits the On Screen Control.
 Do Auto In Progress function. (Press and hold this button for two seconds.)

ON-SCREEN DISPLAY

This LCD monitor features an On-Screen Display (OSD) menu. These icons are designed to make your monitor display settings easier to control. When highlighted, the icons illustrate the control function to assist you in identifying which control needs adjustment.


Before activating the OSD menu, the A button can be used to automatically adjust the display to the proper size and horizontal and vertical position. (Press button for 2 seconds.)


The OSD menu activates automatically when you press the Enter button e on the rear of the monitor. The OSD remains centered on the screen while you make your adjustments. Use either the e or o button to move the highlight to your selection. a submenu or control with a status bar will appear. The status bar indicates the direction which adjustments are being made. Use the e or o button to adjust the control.

The contrast and brightness menu can also be adjusted by simply pressing either the \oplus or \ominus buttons.

When you have finished making adjustments, press the $\ \$ button to save setting and exit back to main menu.

MENU DESCRIPTIONS

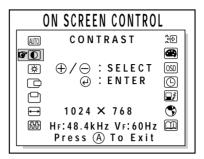

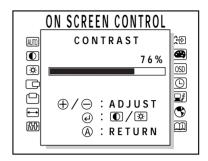

Main Menu

AUTO-TUNE AUTO

This control will automatically make adjustments to the horizontal and vertical size, horizontal and vertical position and phase.

CONTRAST (1)

This control allows you to make adjustments to the contrast of the display screen.

BRIGHTNESS 🗱

Selecting this control allows you to make adjustments to the luminosity level of the display screen.

H-POSITION(HORIZONTAL POSITION)

Select this control and then use the \oplus and \ominus buttons to center the image horizontally on the screen.

V-POSITION(VERTICAL POSITION)

Select this control and then use the \oplus and \ominus buttons to center the image vertically on the screen.

H-SIZE (HORIZONTAL SIZE)

Select this control and then use the \oplus and \ominus buttons to expand or decrease the image width to horizontally fill the display screen.

PHASE R

Select this control and then use the \oplus and \ominus buttons to adjust the screen image until it looks focused, crisp and sharp.

AUTO-LEVEL

This control will automatically make adjustment to the input levels of video signal.(ex. 0.714Vp-p, 1.0Vp-p)

COLOR CONTROL (43)

Select this control, then use the \oplus and \ominus buttons to scroll to the desired color temperature. Use the @ button to select the 9300K, 6500K, 5500K or USER for custom setting.

R-GAIN(RED) R

Select "USER" then use the @ button to scroll up and down the RGB menu to R(Red). Use the \oplus and \ominus buttons to adjust the red level of the display.

G-GAIN(GREEN) G

Select "USER" then use the @ button to scroll up and down the RGB menu to G(Green). Use the \oplus and \ominus buttons to adjust the red level of the display.

B-GAIN(BLUE) B

Select "USER" then use the @ button to scroll up and down the RGB menu to B(Blue). Use the \oplus and \ominus buttons to adjust the red level of the display.

OSD POSITION OSD

Select this control and then use the @ button to select the direction to move the OSD menu. Use the \oplus and \ominus buttons to move the OSD menu.

OSD TIME-OUT

Select this control and then use the @ button to select the duration time for the OSD menu. Use the
and
buttons to select the time. (5, 15, 30, 60 SEC)

POWER SAVE DELAY



This feature directs the monitor to stay in the "on" mode even after the computer goes into "sleep" mode. The user is able to select time of 5 seconds, 1 minute, 60 minutes, or OFF for the display to appear on the monitor screen.

LANGUAGE (\$)



Select this control and then use the \oplus and \ominus buttons to choose from English(ENGLISH), German(DEUTSCH), Spanish(ESPAÑOL), Italian(ITALIANO), French(FRANCAIS), Japanese.

INFORMATION III



Select this control and it will allows you to confirm information of the display.

*Note:

You can get the best quality of the image under full-screen with your computer on. The function of AUTO-TUNE may not work properly if background color is dark or if the input image does not fill the screen. (ex: DOS text mode)

We strongly recommend that you just run the AUTO-LEVEL & AUTO-TUNE function to get the best image quality when you unpack the monitor or when you install a different VGA card or use a new PC.

POWER MANAGEMENT

LED INDICATOR (POWER MANAGEMENT ACTIVE)

The power management feature is comprised of two stages: On or Out Of Range (Green), Off (Green blinking).

In the off mode, all circuitry in the monitor is shut down, except for a low power detection circuit. This circuit allows the monitor to wake up when the mouse is moved or a key on the keyboard is pressed.

Power Mode	H-Sync	V-Sync	Video	LED Color
Normal	Pulse	Pulse	Active	Green
Out Of Range	Pulse	Pulse	Active	Green
Off	Pulse	No Pulse	Blanked	Green blinked per 1 second
Off	No pulse	Pulse	Blanked	Green blinked per 1 second
Off	No pulse	No pulse	Blanked	Green blinked per 1 second

TIMING GUIDE

The LCD is a multi-frequency display. It operates at horizontal frequencies between 30KHz ~ 60KHz and vertical frequencies between 55Hz ~ 75Hz. Because of its microprocessor-based design, it offers autosynchronization and auto-sizing capabilities. This monitor offers 8 preprogrammed settings that are listed in the timing table on page 11.

These preset modes cover most of the common video modes supported by popular graphics adapters. However, each adapter's implementation of these video modes may vary slightly. If you find it necessary to make minor display adjustments (for example, horizontal and vertical position), please refer to the On Screen Display section of this manual for instructions.

If you would like to use one of the preset timing modes, please refer to your video card manufacturer's installation guide for instructions on how to make these changes. The video card controls the refresh rate. Most video cards provide a software utility or hardware DIP switches that allows you to change the frequency used for each resolution.

REFERENCE

Timing Table

Preset		Resol	ution	Frequency		Clock	Polarity
		Horizontal	Vertical	Horizontal	Vertical	[MHz]	(H/V)
VGA	M1	720	400	31.5kHz	70Hz	28.322	-/+
	M2	640	480	31.5kHz	60Hz	25.175	-/-
	М3	640	480	37.5kHz	75Hz	31.500	-/-
\/FCA	M4	800	600	37.9kHz	60Hz	40.000	+/+
VESA	M5	800	600	46.9kHz	75Hz	49.500	+/+
	M6	1024	768	48.4kHz	60Hz	65.000	-/-
	M7	1024	768	60.0kHz	75Hz	78.750	+/+
MAC	M8	832	624	49.7kHz	75Hz	57.284	-/-

^{*} If you use a Macintosh™, you may need a Mac adapter.


PIN ASSIGNMENT

VGA Connector

REFERENCE

Pin Red Pin 2 Green Pin Blue 3 No Connection 4 Pin Ground Pin 5 Red Ground Pin 6 Pin 7 Green Ground Blue Ground 8 Pin No Connection 9 Pin Pin 10 Ground Pin 11 Ground Pin 12 DDC SDA Horizontal Sync. Pin 13 Pin 14 Vertical Sync. DDC SCL Pin 15

VGA CONNECTOR

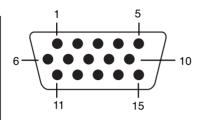

Note: When resolutions are shown that are lower than the pixel count of the LCD panel, text may appear choppy or bold. This is normal for all current flat panel technologies when displaying non-native resolutions on a full screen (below than 1024 x 768 resolution). In flat panel technologies, each dot on the screen is actually one pixel, so to expand resolutions to full screen, an interpolation of the resolution must be down. When the interpolated resolution is not an exact multiple of the native resolution, the mathematical interpolation necessary may cause some lines to appear thicker than others.

SPECIFICATIONS

LCD	Type Color Filter Colors Glass surface	15" diagonal viewable screen TFT (Thin Film Transistor), Active Matrix Panel, 0.297mm pixel pitch R,G,B vertical stripe 16M Anti-glare coating
Viewing Angles	Left / Right Up / Down	70°/ 70° 55°/ 60°
Contrast Ratio	Тур.	300:1
Luminance of White	Тур.	250cd/m ²
Compatibility	PC	IBM XT, AT, 386, 486, Pentium or PS/2 and compatibles(from VGA up to 1024 x 768 @ 75Hz NI.)
Refresh Rate	Max.	1024 x 768 @ 75Hz NI (60Hz for optimal display)
Connectors	Input Signal Power	15-pin D-SUB AC In let Socket
Power	Input Consumption	AC 100-240V 50-60Hz 34 watts (Maximum)
Display Area	Max.	304.1mm(H) x 228.1mm(V)
Operating	Temperature Humidity Altitude	32°F to 104°F(0°C to 40°C) 20% RH to 80%RH (no condensation) To 10,000 feet
Storage Conditions	Temperature Humidity	-14°F to 104°F (-20°C to 40°C) 5%RH to 90%RH (no condensation)
Dimension		358mm(W) x 360mm(H) x 186mm(D) 14.1" (W) x 14.2" (H) x 7.3" (D)
Weight	Net	4.0Kg (8.8lbs)

TROUBLESHOOTING

No power.

- ✓ Flip the power switch ON. The Power LED turns on.
- ✓ Make sure AC power cord is securely connected to a power outlet.

♦ Power on but no screen image.

- ✓ Make sure the video cable attached with this monitor is tightly secured to the video output port on the back of the computer.
- ✓ Adjust the brightness and contrast.

◆ Image is unstable, unfocused.

- ✓ Use "AUTO-TUNE" to adjust automatically.
- ✓ If the image is still unstable after "AUTO-TUNE" processing, please adjust "PHASE" manually to get image focused.
- ✓ Check whether the resolution or refresh rate in windows display setting is beyond supported range(please refer to the specification of supported mode).

◆ Flickering.

- ✓ Not enough power is being supplied to the LCD Monitor. Connect the LCD Monitor to a different outlet. If a surge protector is being used, there may be too many devices plugged in.
- ✓ See Timing Guide in this manual with a list of refresh rates and frequency settings showing the recommended setting for the LCD Monitor.

◆ Wrong or abnormal colors.

✓ If any colors (Red, Green, or Blue) are missing, check the video cable to make sure it is securely connected. Loose pins in the cable connector could cause a bad connection.

- ✓ Connect the LCD Monitor to another computer.
- ✓ Check the graphics card for proper sync scheme (or sync polarities) to match the LCD Monitor's specifications.

◆ Double (split) screen image.

✓ Make sure your graphics card is set to Non-Interlaced mode.

◆ Entire screen image rolls (scrolls) vertically.

- ✓ Make sure the input signals are within the LCD monitor's specified frequency range.
 - (Maximum: VESA, MAC 1024 x 768@75Hz)
- ✓ Connect the video cable securely.
- ✓ Try the this Monitor with another power source.

♦ Control buttons do not work.

✓ Press only one button at a time.

ABOUT THE LCD -

The LCD contains over 2,359,296 thin-film transistors (TFTs). A small number of missing, discolored, or lighted dots on the screen is an intrinsic characteristic of TFT LCD technology and is not an LCD defect. If you display a fixed pattern for more than 10 hours, its image may remain on the screen in overlap mode when you display something else.