SIZE: 720 X H105 MM



- iPod touch® (3rd and 4th generation) iPhone[®] 4S
- iPhone[®] 4 iPhone[®] 3GS
- iPhone® 3G iPad® 2

• iPad®

od touch, iPhone, and iPad are trademarks of Apple Inc., registered in the U.S. and other Made for iPod touch," "Made for iPhone," and "Made for iPad" mean that an electronic acces-

has been designed to connect specifically to iPod touch, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible e operation of this device or its compliance with safety and regulatory standards. Please note talt the use of this accessory with iPod touch, iPhone, or iPad may affect wireless performance. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Ascion, LLC is under license. Other trademarks and trade name

Reverie

For technical support or service.

1-800-973-8374

or visit

www.reverie.com

are those of their respective owners. Wi-Fi is a mark of the Wi-Fi Alliance

TABLE OF CONTENTS

How to download the App Software ... How to install the Bluetooth® / Wi-Fi™ Module4 Bluetooth® / Wi-Fi[™] Connection Instructions.......6 iPad® Remote... iPhone® Remote Operating Instructions Remote Operation Tips Outlet Pairing ... Froubleshooting. FCC Compliance ..

How to download the App Software

STFP 1

Please use your iPod Touch® (3rd and 4th generation), iPhone® 4S, iPhone® 4, iPhone® 3GS, iPhone® 3G, iPad® 2, or iPad® to log into the App

STEP 2

Type "Reverie Remote" in the search column.

Select the Reverie Icon for app best suited to your device.



STFP 4 Click Install to download the app.

How to install the Bluetooth® / Wi-Fi[™] Module

STEP 1

Carefully remove your module from the packaging.

STEP 2

Plug the module cord into the control box (PLC) under the bed. The connector slot for the module is on the control box (PLC) next to the slot where the head lift motor is plugged in.



STFP 3

Both the green standby (the green light will stay on for about 20 seconds after the module has been plugged into the PLC) and red power lights will light on if the module has been plugged into the control box (PLC) correctly.

Raise and lower head and foot section of base.

C. Zero Gravity:

 Legs slightly above the chest, for better circulation.

• Levels the bed: Press and hold for 3 seconds

Note: To cancel, press buttons A or B

• You can store 2 personalized memory positions.

F. Anti-Snore:

Raises head for better breathing, less snoring.

G, H. Head and foot massage controls:


Starts at intensity 5 of 10.

Note: The lowest setting will turn off the corresponding massage unit.

stepped on. Place the module and cable on the left hand side of the middle bar.)

STEP 4





After the standby light goes out, you can initiate the

connection between your iPad® / iPod® / iPhone®

and the adjustable bed per the instructions below.

(Place Accessory module near the edge of the bed

for the best reception. DO NOT place Accessory

module in an area where it can easily be kicked or

I. Full body massage function

 Turns on both head and foot massage motors and alternates between Wave mode 1, 2 and 3.

Note: You must stop the massage before you can switch to another wave function or to the full body massage.

J. Massage stop button:

Press for 2 seconds to stop all massage features

K. Wave massage mode:

• Turns on both head and foot massage motors to one of the 3 wave functions.

ATTENTION:

If FLAT BUTTON (D) is pushed, massage motors will stop until bed is flat. Massage resumes in 30 seconds.

L. Wi-Fi set up function

M. Outlet switch function: Plug in the outlet.

 The indicator light will flash around 3 seconds. Please choose "Outlet A / B / C" to set up.

• If you don't reset the memory buttons while the light is flashing, the outlet will maintain its previously set memory position.

N. Instructions

Bluetooth[®] / Wi-Fi[™] Connection Instructions

- 1. Press the home key to exit the app.
- 2. Go go to settings → General → Bluetooth.



- 3. Look for the device ID code, which should be the number / letter combination that appears on the side of the module.
- 4. The device code will show "Not Paired". Tap the code on the screen to start the pairing process.
- 5. After a short time, it will show "Connected"



- 6. Press the home key and run the app again. 7. Status at the bottom should indicate
- "Connected" after a few moments.

Remote Operation Tips

- memory position.
- 2. To call a memory position, simply press and hold the numbered memory button you desire for at least one second. The bed will respond by moving into the position you programmed.

scroll between screens by swiping the screen, as you would or any other app, or by touching the arrow buttons on the side of the screen.

Remote Outlets and Wi-Fi setup.

8. Press and hold Head or Foot buttons to raise and lower the head and foot to confirm the remote is functional.

Wi-Fi Setup:

9. To setup Wi-Fi connection, press "setup Wi-Fi" and the onboard wifi module will start to scan available networks.



- 10. When networks are received, a list will appear
- 11. Select your preferred network.
- 12. Enter the password for the network, if there is one, and press return.

If there is no password, then simply press return.

13. When the status indicates "Wi-Fi Setup Complete" the iPod® and interface will be connected through Wi-Fi and Bluetooth.

At this point you can disconnect your Bluetooth module if you choose and the Wi-Fi will stay connected as long as the Wi-Fi is on.

Outlet Pairing

WIRELESS HANDHELD CONTROL FOR REVERIE® DELUXE



Plug in the remote outlet and press and hold any following:



If your iPod touch® / iPhone® / iPad® cannot connect to the accessory box via Wi-Fi or Bluetooth, try the

• The green light on your module should not be lit up when the device screen shows "connected". If the light is still on, you may have to reset the device.

- To do this, press the home button and power button at the same time and then "Slide to Power Off".
- When the device is off, press and hold the power button to power it on again.
- Alternatively, try closing and reopening the app and checking for the connected screen.

FCC Compliance

FCC COMPLIANCE

Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected


• Consult the dealer or an experienced radio / TV technician

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and

2. this device must accept any interference received. including interference that may cause undesired operation

WIRELESS HANDHELD CONTROL FOR REVERIE® DELUXE

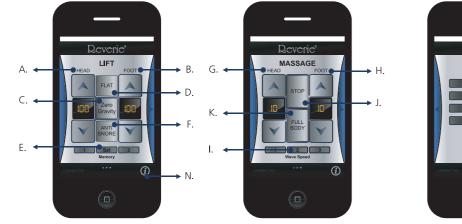



Operating Instructions

A, B. Head and Foot adjustment:

D. Bed "Flat" Button:

to activate button.

E. Two programmable memory buttons:

 To set a memory position, press the "set" button when you are in your desired position, then press the 1 or 2 memory button to lock in the position.

• To increase massage intensity, press (<) button.

13 14

1. To set a memory position, first use the remote control to position the bed in the position you would like to program. Then press the "set" button. (The set button will become highlighted when you have pressed it.) Then press the memory button number of your choice (1 or 2). An alert box will appear asking if you are sure you want to set the

If you are using an iPod Touch® or iPhone®, you can

There are three screens on theiPod Touch® / iPhone® application – one for Lift one for Massage and one for

outlet button (either A. B or C) on the control interface on your iPod touch, iPhone or iPad within 3 seconds. Release the outlet button when you hear the outlet Click or the LED on the outlet flickering. You can pair multiple outlets to one remote control outlet button (A. B. or C).



Remote outlet is optional accessor

12