


Audio Transmitter


Quick Guide

Product shape

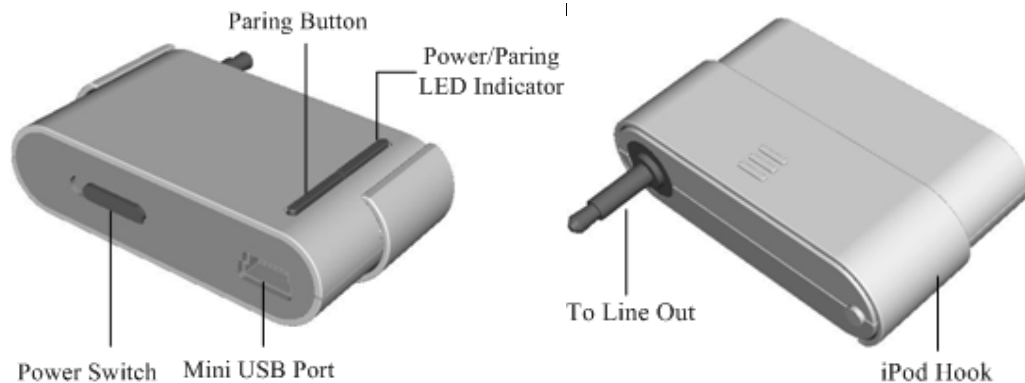

Connecting my Audio Transmitter

1. Insert the plug on the top of the Audio Transmitter into the line out of the device.
2. Press the unit until it is firmly attached..
3. For iPod mini user, slide the iPod hook on the Audio Transmitter for the greatest stability after the connection. The iPod Hook may be removed if unwanted.

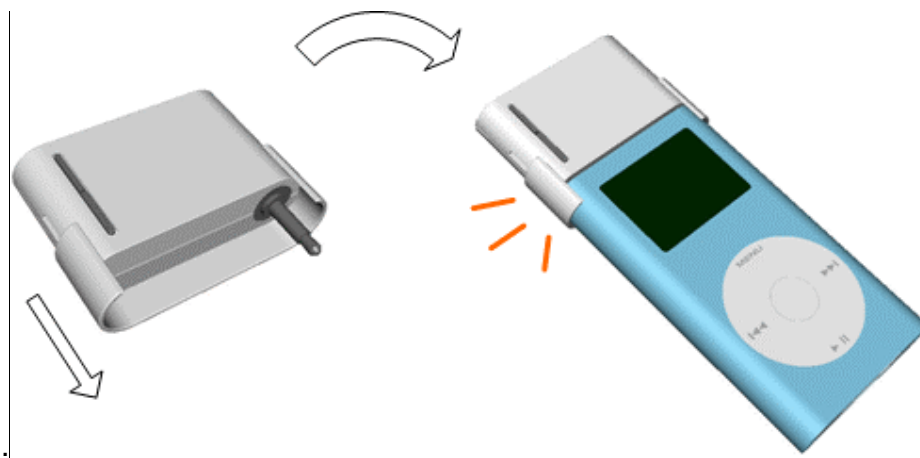

Audio Transmitter LED Indicator

Mode	Low Power	Searching	Pairing in process	Connecting	Charging
LED Indicator	Red flashing	Red and blue flashing alternatively	Red and blue illuminating	Blue flashing every 4 seconds	Red illuminating

Pairing with Bluetooth headset device

Before using your Audio Transmitter for the first time, charge battery, you must pair it with a Bluetooth enabled headset prior to usage. The “Pairing” process creates a unique wireless link between two devices. Once paired the communications between the paired devices does not need any further authentication or authorization.

Please follow the instruction below to pair the Audio Transmitter with a Bluetooth enabled headset:

1. Follow the operating instructions that came with your Bluetooth headset to initiate the pairing process.
2. After powering on the Audio Transmitter, it enters the pairing mode automatically with the “Pairing LED indicator” flashing red and blue and waiting to be paired with another Bluetooth headset for 3 minutes.
3. Once pairing is successful between the Audio Transmitter and the Bluetooth headset, the Audio Transmitter will exit the pairing mode with the “Pairing LED indicator” blinking blue every 5 seconds and will be ready to use.

* Note: Audio transmitter will remember the last paired device its memory. Upon re-startup, it will search for the last paired device (red and blue LED illuminating).

* Note: To re-pair the Audio Transmitter with another device, press and hold the Pairing Button for 3 seconds to enter the searching and pairing mode.

Charging battery

You may charge the Li-ion battery inside the Audio Transmitter by using the mini USB cable. While charging takes effect, the charging LED remains on. The LED turns off when the battery is fully charged. Battery charging will not affect the functionality of the Audio Transmitter.

1. Plug the USB cable into the mini USB port of the Audio Transmitter and plug the other end into your computer’s USB port.
2. When charging, the red LED will remain lit.
3. The LED will turn off after the battery is fully charged.
4. Remove the USB cable from the Audio Transmitter’s mini USB port.

* Note: Please charge approximately 2.5 hours before initial use.

FCC Caution

1. The device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
3. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.