www.sylvania.com

METALARC PRO-TECH® POWERBALL® ECOLOGIC® High CRI, Ceramic Metal Halide PAR Lamps



METALARC PRO-TECH POWERBALL ECOLOGIC lamps meet today's color critical needs by combining conventional metal halide pulse start characteristics such as good efficacy and long life with improved lamp-to-lamp color consistency and high CRI.

Compared to conventional guartz metal halide products, SYLVANIA ceramic arc tube metal halide lamps exhibit less color variation and higher efficacy. Their high mean lumens, excellent color characteristics and compact size allow them to be used in a wide variety of applications.

METALARC PRO-TECH POWERBALL ECOLOGIC lamps operate on existing ANSI specified magnetic ballasts and on compatible electronic ballasts. The lamps can be used in appropriate existing fixtures designed for metal halide lamps of similar wattages and configurations.

Key Features & Benefits

- Excellent CRI, up to 95, vields more natural colors
- Offers up to 15,000 hours rated average life and last 5X longer than halogen lamps
- · Lower thermal output than tungsten halogen lamps having similar light output
- Superior color stability over the life of the lamp
- Improved lamp-to-lamp color consistency*

*Compared to quartz metal halide lamps of similar wattage

ECOLOGIC® is a comprehensive program of OSRAM SYLVANIA focused on addressing environmental issues at all stages of lamp life.



METALARC PRO-TECH design

for open fixture applications • Open fixture rated products

improve fixture efficiency and simplify maintenance

• UV-Stop technology significantly reduces UV output and minimizes

discoloration and fading of

Pulse start arc tube technology

· Ideal for open recessed cans or track lighting fixtures

materials

SYLVANIA METALARC PRO-TECH POWERBALL ECOLOGIC lamps are designed to pass the Federal Toxic Characteristic Leaching Procedure (TCLP1) criteria for classification as non-hazardous waste in most states.²

Product Offering

Bulb Shape
PAR20, PAR30LN
PAR20, PAR30LN
PAR30LN, PAR38
PAR38
PAR38

¹ TCLP test results are based on NEMA LL Series standards and are available on request. ² Regulations may vary. Check your local and state regulations

Application Information

Applications

- Accent lighting
- Display lighting
- Landscape lighting
- Lobbies
- Malls
- Office areas
- · Retail stores
- Studio lighting

Application Notes

1. METALARC PRO-TECH POWERBALL Ceramic PAR20, PAR30LN and PAR38 lamps are rated for use in both open and enclosed fixtures.

Fixtures

Contact your local fixture agent for available fixtures.

Ballast Information

Contact your OSRAM SYLVANIA representative for a list of compatible electronic control systems.



Specification Data

Fixture Description:	Туре
Project/Job:	
SYLVANIA lamp:	
SYLVANIA ballast:	
Notes:	

Ordering Information

ltem Number	Ordering Abbreviation	Watts	Bulb	Base	ANSI Code⁴	Average Rated Life (hrs.)	Initial Lumens	Initial MBCP (cd)	Beam Angle	ССТ	CRI
64860	MCP20PAR20/U/830/FL/EC0 PB ^{1, 5}	20	PAR20	Med.	C156/0	12,000	900	2,650	30°	3000K	82
64879	MCP20PAR30LN/U/830/SP/EC0 PB ^{1, 5}	20	PAR30LN	Med.	C156/0	12,000	1,200	21,000	10°	3100K	82
64878	MCP20PAR30LN/U/830/FL/EC0 PB ^{1, 5}	20	PAR30LN	Med.	C156/0	12,000	1,200	4,000	30°	3100K	82
64264*	MCP39PAR20/U/830/SP/EC0 PB ^{1, 2}	39	PAR20	Med.	C130/0	12,000	2,000	18,500	10°	3000K	87
64265*	MCP39PAR20/U/830/FL/EC0 PB ^{1, 2}	39	PAR20	Med.	C130/0	12,000	2,000	5,000	30°	3000K	87
64268*	MCP39PAR30LN/U/940/FL/EC0 PB ^{1, 2}	39	PAR30LN	Med.	C130/0	12,000	2,200	7,500	30°	4200K	90
64269*	MCP39PAR30LN/U/830/SP/EC0 PB ^{1, 2}	39	PAR30LN	Med.	C130/0	12,000	2,300	39,600	10°	3000K	85
64270*	MCP39PAR30LN/U/830/FL/EC0 PB ^{1, 2}	39	PAR30LN	Med.	C130/0	12,000	2,300	8,000	30°	3000K	85
64271*	MCP39PAR30LN/U/830/VWFL/EC0 PB ^{1, 2}	39	PAR30LN	Med.	C130/0	12,000	2,300	3,500	46°	3000K	85
64272*	MCP70PAR30LN/U/940/FL/EC0 PB ^{1, 2}	70	PAR30LN	Med.	C139/0	12,000	4,000	13,000	27°	4200K	90
64273*	MCP70PAR30LN/U/930/SP/EC0 PB ^{1, 2}	70	PAR30LN	Med.	C139/0	12,000	3,600	42,000	12°	3000K	95
64274*	MCP70PAR30LN/U/930/FL/EC0 PB ^{1, 2}	70	PAR30LN	Med.	C139/0	12,000	3,600	12,000	30°	3000K	95
64749	MCP70PAR38/U/830/SP/EC0 PB3	70	PAR38	Med. Skt.	C98/0	15,000	4,300	40,000	15°	3000K	88
64750	MCP70PAR38/U/830/FL/EC0 PB ³	70	PAR38	Med. Skt.	C98/0	15,000	4,300	15,500	25°	3000K	88
64751	MCP70PAR38/U/830/VWFL/EC0 PB3	70	PAR38	Med. Skt.	C98/0	15,000	4,300	3,500	65°	3000K	88
64752	MCP100PAR38/U/830/SP/EC0 PB ³	100	PAR38	Med. Skt.	C90/0	15,000	6,500	49,500	15°	3000K	88
64753	MCP100PAR38/U/830/FL/EC0 PB3	100	PAR38	Med. Skt.	C90/0	15,000	6,500	25,000	25°	3000K	88
64754	MCP100PAR38/U/830/VWFL/EC0 PB ³	100	PAR38	Med. Skt.	C90/0	15,000	6,500	6,000	60°	3000K	88
64841	MCP150PAR38/U/830/SP/EC0 PB3	150	PAR38	Med. Skt.	C102/0	15,000	9,100	50,000	15°	3000K	88
64842	MCP150PAR38/U/830/FL/EC0 PB ³	150	PAR38	Med. Skt.	C102/0	15,000	9,100	28,000	25°	3000K	88

* 64264 formerly 64824, 64265 formerly 64826, 64268 formerly 64898, 64269 formerly 64880, 64270 formerly 64881,

64271 formerly 64885, 64272 formerly 64224, 64273 formerly 64201, 64274 formerly 64202

Notes:

- 1. The circuit must include overcurrent protection (i.e., Thermally Switched Ballast).
- 2. Minimum open circuit voltage for starting is measured with the ignitor in the circuit, minimum open circuit voltage is 209 VRMS.

3. Lamps with medium skirt base are not compatible with exclusionary medium sockets.

4. The first letter of the ANSI code represents the lamp type; "C" for ceramic metal halide and "M" for quartz metal halide. The numbers following the lamp type refer to the electrical

characteristics required by the ballast to start and operate the lamp reliably. Ceramic, "C", or quartz, "M" lamps with the same electrical characteristic number will operate on the same ballast (per ANSI C78.380-2007). For example, a 150W ceramic lamp with a C102 designation will operate on a ballast intended for a 150W quartz lamp with an M102 designation. 5. Designed for operation only on electronic ballasts.

General Notes:

• Contact your local OSRAM SYLVANIA representative for compatible electronic ballasts.

• All ceramic lamps should be used with 4000V pulse rated socket only.

Ordering Guide											
МСР	39	PAR30LN	7	U	7	830	1	SP	1	EC0	PB
M=METALARC® C=CERAMIC P=Protected (METALARC PR0-TECH®)	Wattage: 20, 39, 70, 100, 150	Bulb Shape: PAR20, PAR30LN PAR38		Operating position: Universal	30	8 = 80+ CRI 9 = 90+ CRI = 3000K, 3100K (40 = 4200K CCT	ст	Beam Spread SP=Spot, FL=Flood NFL=Narrow Flood VWFL=Wide Flood	,	ECOLOGIC®	PB=POWERBALL®

Technical Information


Typical Mortality Curve



Typical Lumen Maintenance Curve (with Magnetic Ballast)




Typical Lumen Maintenance Curve (with QUICKTRONIC® Electronic Ballasts)

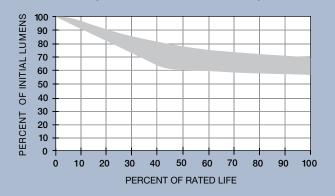


Lamp Dimensions

	(A)	(B)
	MOL	Bulb Diameter
PAR20	3.65" (92.7 mm)	2.54" (64.5 mm)
PAR30LN	4.76" (120.9 mm)	3.75" (95.3 mm)
PAR38	5.32" (135.1 mm)	4.76" (120.9 mm)

Typical Spectral Power Distribution (CRI = 80+)

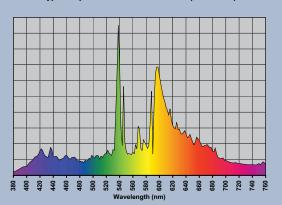

Typical Spectral Power Distribution (CRI = 90+)

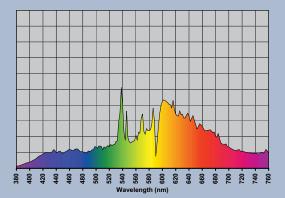

Sample Specification

Lamp(s) shall be METALARC® PRO-TECH® POWERBALL® ECOLOGIC® CERAMIC 70PAR30LN/U/930/SP/EC0 PB lamp(s), and shall be constructed with a spherical ceramic arc-tube with initial lumens of 3600. Lamp(s) shall have a CRI of 95, CCT of 3000K, and shall exhibit a maximum color shift of ± 150 K over life. Lamps shall be rated for open fixture use.

United States OSRAM SYLVANIA

100 Endicott Street Danvers, MA 01923 1-800-LIGHTBULB

Trade

Phone: 800-255-5042 Fax: 800-255-5043

 National Accounts

 Phone:
 800-562-4671

 Fax:
 800-562-4674

OEM/Special Markets Phone: 800-762-7191

Fax: 800-762-7192 Retail

Phone: 800-842-7010 Fax: 800-842-7011

 SYLVANIA Lighting Services

 Phone:
 800-323-0572

 Fax:
 800-537-0784

Display/Optic Phone: 888-677-2627 Fax: 855-543-1043

Canada

OSRAM SYLVANIA LTD. 2001 Drew Road

Mississauga, ON L5S 1S4 1-800-LIGHTBULB

 Trade

 Phone:
 800-263-2852

 Fax:
 800-667-6772

OEM/Special Markets/Display/Optic

Phone: 800-265-2852 Fax: 800-667-6772

Retail Phone: 8

Phone: 800-720-2852 Fax: 800-667-6772

SYLVANIA Lighting ServicesPhone:800-663-4268

Fax: 866-239-1278 Mexico

OSRAM MEXICO Tultitlan/Edo de Mexico Phone: 011-52-55-58-99-18-50

ENCELIUM Technologies

 United States

 Phone:
 201-928-2400

 Fax:
 201-928-4028

Canada

Phone: 905-731-7678 Fax: 905-731-1401

www.sylvania.com

≫ /sylvania ₣ /sylvania

WARNING: This lamp can cause serious skin burn and eye inflammation from shortwave ultraviolet radiation if the outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available.

ECOLOGIC, SYLVANIA, METALARC and METALARC PRO-TECH are registered trademarks of OSRAM SYLVANIA Inc. SEE THE WORLD IN A NEW LIGHT is a registered trademark of OSRAM SYLVANIA Inc. POWERBALL and QUICKTRONIC are registered trademarks of OSRAM GmbH. Specifications subject to change without notice.