

fisica

Sensor Case
Legal



Compatible With



iPhone 4
16GB 32GB



iPhone 3GS
8GB 16GB 32GB



iPhone 3G
8GB 16GB

 Works with
iPhone

"Made for iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPhone may affect wireless performance.

iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.

Warnings

Before beginning or modifying any exercise program, please consult your physician. If you have a pacemaker or other implanted electronic device, consult your physician before using a heart rate sensor. This product is intended for recreational use only and is not intended for medical purposes. Heart rate and other readings could be influenced by interference from external sources.

If you use this product with navigation software, always be aware of your surroundings and do not fixate on the screen. Moreover, set destinations and other user inputs prior to your departure to ensure your attention stays on task and your facilities are directed to your activity and not the device.

This device contains no user serviceable parts and repairs/modifications should only be made by a technician authorized by Wahoo Fitness. Any unauthorized modifications or repairs will void your warranty. Do not leave device exposed to excessive heat or cold.

California Proposition 65

The enclosed hardware and its packaging contain chemicals the State of California has found to cause cancer, birth defects or reproductive harm.

FCC Rules Part 15

The enclosed hardware device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) it must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Wahoo Fitness warrants this product to be free from defects in material and workmanship, under normal use, for one year from the date of original purchase. Defects that have resulted from improper or unreasonable use or maintenance, accident, excess moisture, insects, improper packing, lightning, power surges, or unauthorized tampering, alteration or modification are not covered. Wahoo Fitness will, at its discretion, repair or replace with a comparable product, at no charge to the customer for parts or labor, so long as customer is responsible for shipping costs. Products may be new, refurbished or reconditioned and are warranted for the unexpired period of the original purchase, or 60 days from return, whichever is greater. Any products replaced become the property of Wahoo Fitness.

WHERE PERMITTED, THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WRITTEN WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT SHALL WAHOO FITNESS BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES. SOME PLACES DO NOT ALLOW LIMITATIONS ON THE EXCLUSION OR LIMITATION OF LIABILITY TO SPECIFIED AMOUNTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

To obtain warranty service, contact Wahoo Fitness for shipping instructions and an RMA tracking number. Return your device, freight prepaid, along with the original sales receipt which is a required proof of purchase for warranty repairs, with the RMA tracking number written on the outside of the package, and mail to Wahoo Fitness.

fisica

Instructions



Download

Wahoo Fitness Utility App from iTunes.

Insert

fisica securely into 30-pin connector at bottom of iPhone, iPod touch or iPad.



Open

Wahoo Fitness Utility and select Sensor tab.

Select

sensor you would like to pair with iPhone, iPod touch or iPad. Ensure the sensor is within 5' of *fisica*.

Done!

Your sensor should show data from the sensor, the signal strength and the serial number of your sensor. Since ANT+ sensors 'sleep' when not in use, you may have to 'awaken' it - for example, a footpod can be activated by taking a few steps.

Other Apps

Each App has a unique way in which it works with sensors so there is no universal method for using *fisica* with all Apps. One common feature is that each App can be 'paired' with a particular sensor to avoid readings from other people's sensors. Check our website for the current list of Apps compatible with your *fisica* sensor key.

3rd Party Sensors

fisica will work with all wireless sensors that conform to the ANT+ standard. However, third party sensors have not been tested or verified by Wahoo Fitness and the accuracy of the data produced may not be as precise as those of Wahoo Fitness sensors

Contact Wahoo Fitness

Please feel free to contact Wahoo Fitness for any questions you have regarding your product.

Wahoo Fitness L.L.C.
1604 athens Hwy
Gainesville, Georgia, USA 30507
(404) 939-2447
www.wahoofitness.com
AP201



fisica

Legal



wahoo
FITNESS

Compatible With



iPhone 3G
8GB 16GB



iPhone 3GS
16GB 32GB



iPod touch
1st generation
8GB 16GB 32GB



iPod touch
2nd generation
8GB 16GB 32GB 64GB

iPhone is a trademark of Apple, Inc., registers in the U.S. and other countries.

iPhone is a trademark of Apple, Inc., registers in the U.S. and other countries.

Made for

 iPod  iPhone

"Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Warnings

Before beginning or modifying any exercise program, please consult your physician. If you have a pacemaker or other implanted electronic device, consult your physician before using a heart rate monitor. This product is intended for recreational use only and is not intended for medical purposes. Heart rate and other readings could be influenced by interference from external sources.

If you use this product with navigation software, always be aware of your surroundings and do not fixate on the screen. Moreover, set destinations and other user inputs prior to your departure to ensure your attention and facilities are directed on your activity and not the device.

This device contains no user serviceable parts and repairs/modifications should only be made by a technician authorized by Wahoo Fitness. Any unauthorized modifications or repairs will void your warranty. Do not leave device exposed to excessive heat or cold.

California Proposition 65

The enclosed hardware and its packaging contain chemicals the State of California has found to cause cancer, birth defects or reproductive harm.

FCC Rules Part 15

The enclosed hardware device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) it must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Wahoo Fitness warrants this product to be free from defects in material and workmanship, under normal use, for one year from the date of original purchase. Defects that have resulted from improper or unreasonable use or maintenance, accident, excess moisture, insects, improper packing, lightning, power surges, or unauthorized tampering, alteration or modification are not covered. Wahoo Fitness will, at its discretion, repair or replace with a comparable product, at no charge to the customer for parts or labor, so long as customer is responsible for shipping costs. Products may be new, refurbished or reconditioned and are warranted for the unexpired period of the original purchase, or 60 days from shipment, whichever is greater. Any products replaced become the property of Wahoo Fitness.

WHERE PERMITTED, THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WRITTEN WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT SHALL WAHOO FITNESS BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES. SOME PLACES DO NOT ALLOW LIMITATIONS ON THE EXCLUSION OR LIMITATION OF LIABILITY TO SPECIFIED AMOUNTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

To obtain warranty service, contact Wahoo Fitness for shipping instructions and an RMA tracking number. Return your device, freight prepaid, along with the original sales receipt which is a required proof of purchase for warranty repairs, with the RMA tracking number written on the outside of the package, and mail to Wahoo Fitness.

fisica

Sensor Case



Thank you for buying the Wahoo Fitness *fisica* Sensor Case! With *fisica* technology, a world of sensor information is opened to your iPhone and scores of Apps are available to access sensor information in countless ways. Provided here is a quick start guide to using your *fisica* Sensor Case - for more information please see our website for more detailed information and troubleshooting...

www.wahoofitness.com/fisicacaseinfo

Quick Start Guide

Open the *fisica* Case by unseating each of the six release tabs. Remove cover. Select and install the appropriate rubber cradle for your iPhone, either the iPhone 3G/3GS cradle or the iPhone 4 cradle (the case comes with the iPhone 4 cradle already installed). Slide your iPhone into the Case from the top so that the slot at the bottom of the iPhone slides into the 30-pin connector located at the bottom of the Case. Replace cover and secure by engaging all six release tabs.

Find Sensors

Each App that incorporates *fisica* technology uses a unique method to pair with sensors and you should consult the instructions of the App you are using for the appropriate pairing technique. If you are having a problem getting your sensor to pair with a particular App, you can check if the case is working with a particular sensor by using the *fisica* Sensor Utility App. To do this, download the free *fisica* Sensor Utility App onto your iPhone from iTunes. Open the App, go to the Sensors tab and select the appropriate sensor you are trying to find - ensure the sensor is within 5' of *fisica*. Your iPhone should show data from the sensor, the signal strength and the serial number of your sensor. Since most ANT+ sensors 'sleep' when not in use, you may have to 'awaken' it - for example, a stride sensor can be activated by taking a few steps.

Bike Mount

The *fisica* Case comes with a semi-permanent Bike Mount. The Bike Mount is secured by threading each of the two Cable Ties through the mounting eyes on the bike mount (located under the body of the mount) and wrapping around either the handlebars or the stem, depending on preference. Pull the Cable Ties through their self mating receivers and pull tight (excess length can be trimmed with scissors). The Bike Mount can rotate in 90 degree increments by loosening the set screw in the middle of the base, turning as desired, and re-tightening the set screw.

Auxilliary Battery

Any iPhone compatible auxilliary battery that utilizes a microUSB connector can be used by plugging the battery into the microUSB port located at the bottom of the Case.

Useability

The Case is designed to be weather and impact resistant. However, Wahoo Fitness does not warrant against damage to the Case or your iPhone as a result of water, impact or other factors. It is your responsibility to determine if the Case will provide adequate protection given the conditions in which it is being used.

3rd Party Sensors



fisica will work with all wireless sensors that conform to the ANT+ standard. However, third party sensors have not been tested or verified by Wahoo Fitness and the accuracy of the data produced may not be as precise as those of Wahoo Fitness sensors.

Contact Wahoo Fitness

Feel free to contact Wahoo Fitness for any questions you have regarding your product.

Wahoo Fitness L.L.C.
1604 Athens Hwy
Gainesville, Georgia, USA 30507
www.wahoofitness.com
AP202

Quick Start Instructions

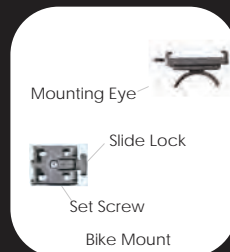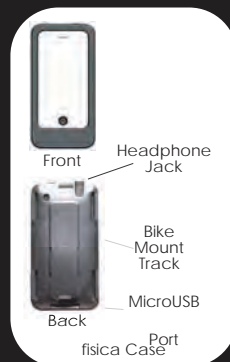

For a list of Apps compatible with the *fisica* Case, please visit wahoofitness.com/Apps/Apps.asp



WFPeto01

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

Radiation Exposure Statement

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

fisica



IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et les utilisateurs peuvent obtenir l'information canadienne sur l'exposition et la conformité de rf.

Canadian Representative as seen below:

Name: DYNASTREAM INNOVATIONS INC.

Address: 228 River Avenue, Cochrane, Alberta, T4C 2C1, Canada

Tel: 403 932-9292

