


 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
CB.2742		No: CB2742	
	Version:	1.0	
Page 1 of 5			

CB2742 Function instruction

1. Function Picture

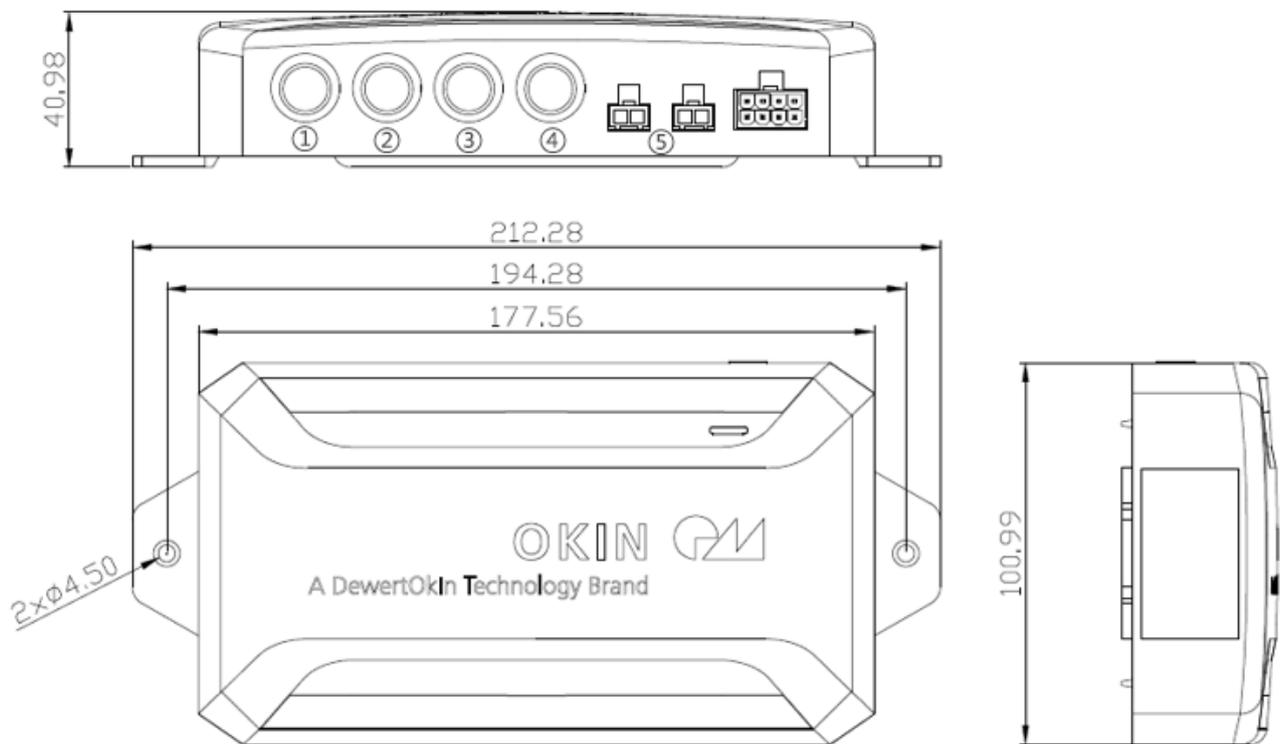

1. Process of test

1.1. HEAD

Connect to head actuator, control by remote single:

Click head up button on the remote, head actuator moves out, stop when released;

Click head down button, head actuator moves in, stop when released;

 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
CB.2742		No: CB2742	
	Version:	1.0	
	Page 2 of 5		

This function takes effect only by pressing the corresponding button on the remote.

1.2. FOOT

Connect to foot actuator,control by remote single:

Click foot up button, foot actuator moves out, stop when released;

Click foot down button, foot actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.

1.3. Lumbar

Connect to foot actuator,control by remote single:

Click Lumbar up button, foot actuator moves out, stop when released;

Click Lumbar down button, foot actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.

1.4. Tilt

Connect to foot actuator,control by remote single:

Click Tilt up button, foot actuator moves out, stop when released;

Click Tilt down button, foot actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.

1.5. Massage

Connect to head & Foot massage,control by remote:

Click head massage + button,head massage strengthens by one level;

Click head massage - button,head massage weakenby one level;

This function takes effect only by pressing the corresponding button on the remote.

1.6. MFP2

Connect to WIFI box or Bluetooth or anyother device.

 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
CB.2742		No: CB2742	
	Version:	1.0	
	Page 3 of 5		

1.7. underbed light

Click button of underbed light, turns on(or turns off) the underbed light, switch the status once when click once; This function takes effect only by pressing the corresponding button on the remote.

1.8. SYNC port

Connect with the same other Control box or Other accessories;

1.9. Power LED & PAIRING LED

Power supply for control box, PAIRING LED of control box is blue, POWER LED is green.

1.10. Power

Connect to the 29V DC;

1.11. Pair button

Press and hold the Pair button, the Head, Foot actuators will moves to lower position.

1.12. Pair Function

Double click Pair button, pairing LED turns on, the control box enters into mode of code paring;
 Press and hold the paring LED of Remote, the backlight of paring LED flashes, the backlight of remote flashes, the remote enters into mode of code paring;
 The backlight of paring LED of remote stops flashing, and the paring led of control box turns off, it indicates that the code paring is successful;
 If fails, repeat all the processes above;

1.13. MFP1

Connect to slideswitch

 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
CB.2742		No: CB2742	
		Version:	1.0
Page 4 of 5			

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Note:

Radiation Exposure Statement

This device has been evaluated to meet general RF exposure requirement. This device can be used in portable exposure condition without restriction.

ISED Statement

- English: This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 <p>OKIN REFINED A Phoenix Mecano Company</p>	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
		No: CB2742	
	CB.2742	Version:	1.0
Page 5 of 5			

Informations sur l'exposition RF

L'appareil a été évalué pour répondre aux exigences générales en matière d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portables sans restriction.