USER MANUAL GBR-100

 \square S \land T E C H \square


SATECHI

CAUTION

Improper use of the laser may result in hazardous outcomes.

WARNING

Do not look directly into the laser beam. Do not point the laser at any person. Keep out of reach of children.

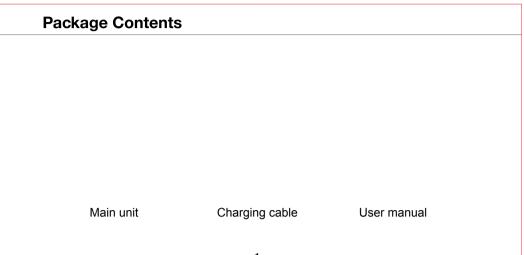


1 **Bluetooth Pairing** Bluetooth pairing is required before the first usage LED Indicator with the remote. 1. Turn the power switch to the ON position. 12345 2. Press the Bluetooth button 67890 - The Led light will blink blue indicating it is in pairing mode


14 13




2




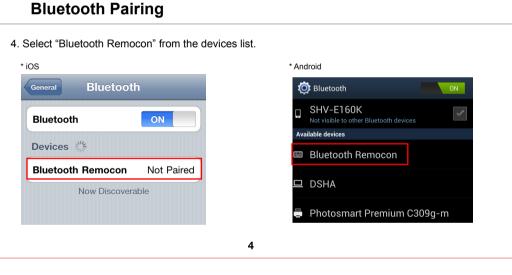


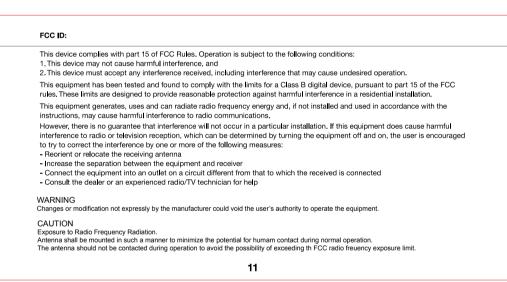

12

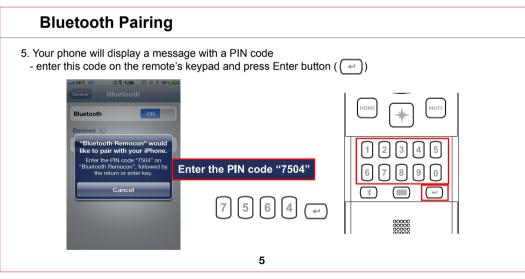

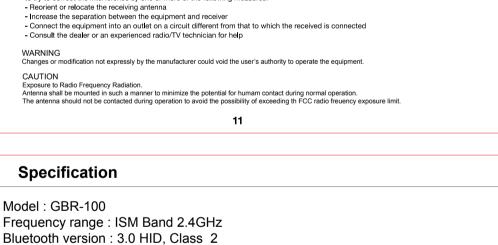


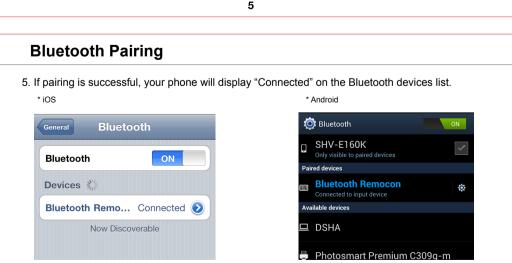

10 3. Accessibility mode You can control your iPhone and iPad. : Choosing and excute applications. * Voice over function must be turned on for using Accessibility mode.

9

Battery life: Laser pointer 15 hours, Remote 33 hours, Standby 1,000 hours

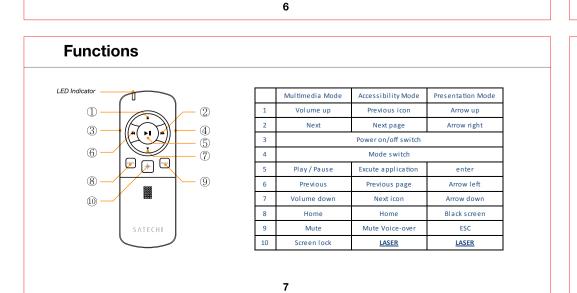

You can control the playback of music and video in your phone. : Play/Pause, Next/Previous track, Volume control, Mute * Remote camera shutter : Take Photos without leaving yourself out and eliminate any camera instability.

You can control MS power or Ketnote for presentation. : Going to Next/Previous page, Black screen

Battery: LI-polymer 3.7V/500mA Charging: USB to Mini USB Charging time: Max. 2 hours

Range: ~30ft

1. Multimedia mode

2. Presentation mode

8