

FC300 User Guide



WH-FC300USER-001

Notice: LXE Inc. reserves the right to make improvements or changes to published FC300 information at any time without notice. While reasonable efforts have been made in the preparation of this publication to assure its accuracy, LXE assumes no liability resulting from any errors or omissions in this publication, or from the use of the information contained herein. Further, LXE Incorporated, reserves the right to revise this publication and to make changes to it from time to time without any obligation to notify any person or organization of such revision or changes.

Trademarks:

Copyright © 2009 by LXE Inc., An EMS Technologies Company, 125 Technology Parkway, Norcross, GA 30092 U.S.A. (770) 447-4224

LXE® and **Spire®** are registered trademarks of LXE Inc.

Microsoft®, **ActiveSync®**, **MSN**, **Outlook®**, **Windows®**, the Windows logo, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Intel and Intel XScale are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

Summit Data Communications, Inc. Summit Data Communications, the Summit logo, and “The Pinnacle of Performance” are trademarks of Summit Data Communications, Inc.

The **Bluetooth®** word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LXE, Inc. is under license.

PowerScan is a registered trademark of Datalogic Scanning, Inc., located in Eugene, OR.

Symbol® is a registered trademark of Symbol Technologies. **MOTOROLA®** and the Stylized M Logo are registered trademarks of Motorola®, Inc.

Hand Held® is a registered trademark of Hand Held Products, Inc., located in Skaneateles Falls, NY.

RAM® and RAM Mount™ are both trademarks of National Products Inc., 1205 S. Orr Street, Seattle, WA 98108.

When any part of this publication is in PDF format: “Acrobat ® Reader Copyright © 2009 **Adobe** Systems Incorporated. All rights reserved. Adobe, the Adobe logo, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated” applies.

Other product names mentioned within this publication may be trademarks or registered trademarks of other companies.

Table of Contents

Introduction	1
Laser Warnings and Labels	2
Label Location	2
Label	2
Set Up A New FC300	3
Hardware Setup	3
Software Setup	3
Batteries	4
How To Connect or Remove the Battery Pack	4
Insert/Replace Battery	4
Remove Battery	4
Insert Battery in HazLoc FC300	5
Remove Battery from HazLoc FC300	5
Hotswap the Main Battery	5
Tapping the Touchscreen with a Stylus	6
Backlights and Indicators	7
Status LEDs	7
System Status LED	7
Battery Charging Status LED	7
Bluetooth Status LED	7
Keypad Backlight Setting	8
Connecting Cables to the FC300	9
Connecting the USB Host and Power Cable	9
Host Cable Assembly	9
Connecting the USB Client and Power Cable	10
Client Cable Assembly	10
Connecting the Serial and Power Cable	11
Serial/Power Cable Assembly	11
Connecting an External Power Supply	12
Connecting Vehicle Power	12
Connecting the Headset Cable	13
Adjust Headset / Microphone and Secure Cable	14
Connecting a Tethered Scanner	15
Attaching the Handstrap	16
Assemble the Carry Case	17
Carry Case with Metal Snaps	17

Set Date and Time Zone.....	18
Grab Time Utility.....	18
Using the Input Panel / Virtual Keyboard.....	19
Set Power Scheme Timers.....	20
Battery Power Scheme.....	20
AC Power Scheme.....	20
Set Speaker Volume.....	21
Using the Keypad.....	21
Using the Control Panel.....	21
Touchscreen.....	22
Calibrating the Touchscreen.....	22
Adjust the Display Backlight Brightness.....	22
Adjusting the Display Backlight Timer.....	22
Apply the Touchscreen Protective Film.....	23
Cleaning.....	23
Using the AppLock Switchpad.....	24
Using the Keypad.....	24
Using the Touchscreen.....	24
Connecting to Bluetooth Devices.....	25
Taskbar Connection Indicator.....	25
LED Connection Indicator.....	25
Reboot.....	26
Warm Boot.....	26
Troubleshooting.....	26
Regulatory Notices and Safety Information	27
Class B Digital Device.....	27
RF Notices.....	28
AC Power Supply Safety Statement.....	29
Laser Light Safety Statement.....	30
Hazardous Locations Warnings.....	32
Index	33

Introduction

The Itron® FC300 is a ruggedized handheld computer targeted for indoor and outdoor use. It is powered by a lightweight main battery that can be removed and replaced without the need for special tools.

FC300 wireless connectivity is secured by user-configured encryption and authentication protocols. The FC300 has an integrated keyboard, outdoor readable touch display, a tethered stylus, Microsoft® Windows® CE® 5.0 operating system, and many wireless connection options.

The keypad is available in a 62-key configuration. The 62-key keypad is also available in a French configuration.

Barcode reader options are: an imager integrated in the FC300, or a handheld scanner tethered to the port at the base of the FC300, Bluetooth mobile barcode imagers and scanners, or the LXE Bluetooth ring scanner / ring imager.


Wireless network connection can be accomplished using a Summit WLAN 802.11 radio, WWAN, and Bluetooth.

Desk and vehicle cradles, a handstrap, holsters with shoulder straps or belts, Bluetooth scanners and printer, a battery and in-vehicle battery chargers are among the many accessories available for the FC300.


Note: This document contains start up information and instruction for the FC300 end-user. Technical and advanced instruction is contained in the FC300 Reference Guide.

Laser Warnings and Labels

- Do not look into the laser's lens.
- Do not stare directly into the laser beam.
- Do not remove the laser caution labels from the FC300.
- Do not connect the laser barcode aperture to any other device. The laser barcode aperture is certified for use with the FC300 only.

<p>Caution:</p> 	<p>Laser radiation when open. Please read the caution labels. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.</p>
---	---

Label Location

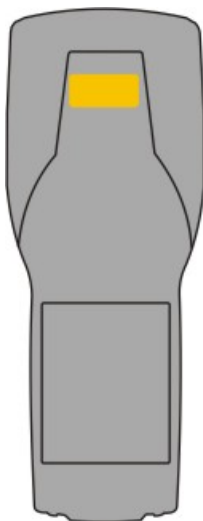

Label



Set Up A New FC300

Note: LXE recommends that installation or removal of accessories be performed on a clean, well-lit surface. When necessary, protect the work surface, the FC300, and components from electrostatic discharge.

While the FC300 is in a Hazardous Location DO NOT:

- Connect an external power source to the FC300.
- Connect a USB device or audio jack to the FC300.
- Connect the Car Power Adapter to the I/O connector at the base of the FC300.
- Remove or install a battery pack in the FC300.
- Connect a tethered scanner to the FC300.
- Place the FC300 in a powered cradle.

Hardware Setup

1. Connect accessories.
2. [Connect cables](#).
3. [Insert/connect a fully charged battery](#)
4. Press the Power key.

Software Setup

Prerequisite: Hardware setup is complete.

1. [Calibrate Touch screen](#)
2. [Set Date and Time Zone](#)
3. [Set Power Schemes Timers](#)
4. [Set Speaker Volume](#)
5. [Pair Bluetooth devices](#)
6. [Save changed settings](#) to the registry

Batteries

How To Connect or Remove the Battery Pack

Warning: Never remove or replace any battery in a hazardous location.

Note: The FC300 will not function unless the battery pack is in place and securely latched.

Note: Be sure to place the unit in Suspend Mode (by pressing the Power key or tapping Start | Suspend) before removing the battery. Failing to properly place the device in Suspend mode will result in a loss of all unsaved data.

The main battery is located in a compartment on the back of the unit. The battery case serves as the back cover for the battery well of the FC300.

With a fully charged backup battery, an FC300 will retain data, while the main battery is removed and replaced with a fully charged main battery, for 5 minutes. **Important:** When the backup battery power is Low or Very Low connect the AC adapter to the FC300 before replacing the main battery.

Note: The battery should not be replaced in a dirty, harsh or hazardous environment. When the battery is not connected to the FC300, any dust or moisture that enters the battery well or connector may transfer to the battery/well terminals, potentially causing damage.

Warning: Only use LXE MX9380BATTERY 161888-0001 or 161915-0001 (Low Temperature) 163086-0001 batteries as replacements.

Insert/Replace Battery

To insert the main battery, complete the following steps:

1. Detach the bottom hook of the handstrap (if installed).
2. Tilt the end (with the terminals) of the fully charged battery pack into the upper end of the battery compartment, and firmly press down on the other end until it is fully inserted into the battery compartment.
3. Push down on the battery until the retaining clip clicks into place.
4. Replace the handstrap clip in its holder (if installed).

The FC300 draws power from the battery immediately upon successful terminal connection.

Check battery status by tapping the **Start | Settings | Control Panel | Battery** icon. Main battery level, status and other details are displayed.

Remove Battery

To remove the battery, complete the following steps:

1. Place the FC300 in Suspend mode.
2. Detach the bottom hook of the handstrap (if installed).
3. Slide the battery retaining clip down to release the main battery.
4. Pull the battery up and out of the battery well with a hinge motion.

Insert Battery in HazLoc FC300

1. Detach the bottom hook of the handstrap (if installed).
2. Tilt the end (with the terminals) of the fully charged battery pack into the upper end of the battery compartment, and firmly press the other end until it is seated into the battery compartment.
3. Push down on the battery pack until it clicks into place.
4. Place the **tethered plastic locking tab** over the battery latch, matching up the screw holes in the FC300 and the screw holes in the tethered plastic locking tab.
5. Using a flat head screwdriver, secure the battery in the battery well by securing the locking screws to the FC300 body.
6. Replace the hand strap clip in its holder.

Remove Battery from HazLoc FC300

1. Place the FC300 in Suspend mode.
2. Detach the bottom hook of the handstrap (if installed).
3. Using a flat head screwdriver, unfasten the **tethered plastic lock's** captive locking screws.
4. Place the tethered plastic locking tab to one side. Do not remove or unfasten the tether.
5. Press the battery locking tab down to release the battery pack.
6. Pull the battery up and out of the battery well with a hinge motion.

Hotswap the Main Battery

Warning: Never replace (hotswap) the FC300 battery in a hazardous location.

Place the FC300 in Suspend Mode. Itron recommends any work in progress be saved prior to replacing the battery pack.

Simply replace the discharged battery with a fully-charged battery. An FC300, with a fully charged backup battery, will retain data during a battery hotswap for 5 minutes.

Tapping the Touchscreen with a Stylus

Note: Always use the point of the stylus for tapping or making strokes on the touchscreen.

Never use an actual pen, pencil, or sharp/abrasive object to write on the touchscreen.

Hold the stylus as if it were a pen or pencil. Touch an element on the screen with the tip of the stylus then remove the stylus from the screen.

Firmly press the stylus into the stylus holder when the stylus is not in use.

Using a stylus is similar to moving the mouse pointer then left-clicking icons on a desktop computer screen.

Using the stylus to tap icons on the touchscreen is the basic action that can:

- Open applications
- Choose menu commands
- Select options in dialog boxes or drop-down boxes
- Drag the slider in a scroll bar
- Select text by dragging the stylus across the text
- Place the cursor in a text box prior to typing in data
- Place the cursor in a text box prior to retrieving data using the scanner/imager or an input/output device connected to the serial port.

A right-click can be simulated by touching the touchscreen with the stylus and holding it for a short time.

A stylus replacement kit is available.

Backlights and Indicators

Status LEDs

Several LEDs are located on the front of the FC300 above the integrated speaker. They are:

- **System Status LED** indicates power management status.
- **Battery Charging Status LED** indicates main battery charging status.
- **Bluetooth Status LED** applies to Bluetooth client functions.

System Status LED

Blinking Red	Battery power fail; critical suspend
Solid Red	Main battery low
Blinking Green	Display turned off
Yellow / Amber	Initial few seconds when Power key is pressed

Battery Charging Status LED

Off	No battery, no AC power, battery pack not plugged in or no AC power applied
Flashing Red	Fault, battery pack fault or failure
Yellow / Amber	Standby, battery pack temperature out of range
Red	Charging, battery pack charging (icon on touchscreen)
Green	Charged, battery pack fully charged. Connected to external power.

Bluetooth Status LED

- Blue when Bluetooth activated
- Off when Bluetooth not activated.

Keypad Backlight Setting

[Start](#) | [Settings](#) | [Control Panel](#) | [KeyMap](#)

The keypad backlight is white and can be set to be on or off.

The default value is on.

When set to off, the keypad backlight does not turn on during Suspend/Restart or reboots.

When set to on, the keypad backlight follows the display backlight settings. The keypad backlight turns off when the display backlight dims.

Connecting Cables to the FC300

Note: Do not connect or disconnect cables in a Hazardous location.

Connecting the USB Host and Power Cable

Prerequisite : AC/DC Adapter, Assembled

Note: Do not connect AC power to the AC Adapter yet.

Host Cable Assembly



1. Holding the cable I/O connector, pinch the catch release buttons in until the catches are open. Connect the cable to the FC300 I/O port by matching the shape of the I/O connector on the cable with the shape of the I/O connector at the base of the FC300. Release the catch release buttons.
2. Insert the AC adapter single pin cable (2).
3. Connect the AC Adapter to a power source (wall outlet).
4. Insert the USB host plug (3) into the USB Host port.

The FC300 and the host device are connected.

Connecting the USB Client and Power Cable

Prerequisite : AC/DC Adapter Assembled

Note: Do not connect AC power to the AC Adapter yet.

Client Cable Assembly



1. Holding the cable I/O connector (3), pinch the catch release buttons in until the catches are open. Connect the cable to the FC300 I/O port by matching the shape of the I/O connector on the cable with the shape of the I/O connector at the base of the FC300. Release the catch release buttons.
2. Insert the AC adapter single pin cable (2).
3. Connect the AC Adapter to a power source (wall outlet).
4. Insert the USB client plug (1) into the target USB Client port.

The FC300 and the USB client are connected.

Connecting the Serial and Power Cable

Prerequisite : AC/DC Adapter, Assembled

Note: Do not connect AC power to the AC Adapter yet.

Serial/Power Cable Assembly



1. Holding the cable I/O connector (1) , squeeze the catch release buttons in until the catches are open. Connect the cable to the FC300 I/O port by matching the shape of the I/O connector on the cable with the shape of the I/O connector at the base of the FC300. Release the catch release buttons.
2. Connect the AC adapter single pin cable end here (2).
3. Connect the assembled AC/DC Adapter to a power source (wall outlet).
4. Connect the RS-232 cable end (3) to the desired serial device. Turn the thumbscrews clockwise until the connection is finger-tight.

The FC300 and the serial device are connected.

Connecting an External Power Supply



1. Connects to AC single-pin cable end
2. AC receptacle
3. Wall plug
4. AC connection from wall to adapter

To apply external power to the FC300 follow the steps below in sequence.

1. Plug the 3 prong AC adapter cable end of the external power assembly into an AC power source (e.g. wall outlet).
2. Firmly press the female end of the power cable into the male connector on the power adapter. When AC power is being supplied to the power adapter, the LED on the power adapter illuminates green.
3. Squeeze the catches of the I/O connector and push the cable connector into the FC300 I/O port until it clicks. The click means the connector is seated firmly.
4. Press the power cable connector pin from the power adapter into the connector on the (USB/Power or Serial/Power) cable attached to the base of the FC300. External power is now being supplied to the FC300.

Whenever possible, use the AC power adapter with the FC300 to conserve the main battery power

Connecting Vehicle Power

Complete vehicle cradle mounting and power instruction is contained in the FC300 Cradle Guide.

The FC300 must have a main battery installed before docking the FC300 in a vehicle cradle.


Connecting the Headset Cable



Headset

1. Connects to voice cable end of voice cable
2. Headphones
3. Microphone

Connect the FC300 voice cable I/O connector to the I/O port on the FC300. The FC300 internal microphone and speaker are automatically disabled.

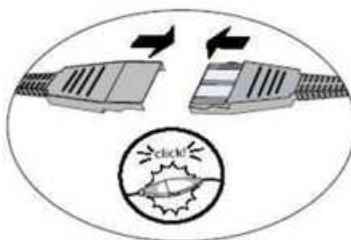


Slide the voice cable ends together until they click shut. Do not twist or bend the connectors. The FC300 is ready for voice-enabled applications.

Adjust Headset / Microphone and Secure Cable

The headset consists of an earpiece, a microphone, a clothing clip and a cable. The headset attaches to the audio cable end of the voice cable which attaches to the FC300.

Align the audio connector and the headset quick connect cable end. Firmly push the cable ends together until they click and lock in place.

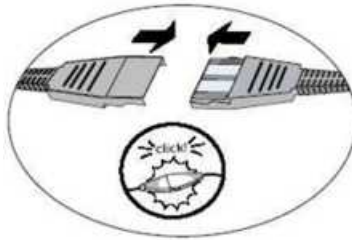

Do not twist the microphone boom when adjusting the microphone. The microphone should be adjusted to be about two finger widths from your mouth.

Make sure the microphone is pointed at your mouth. Note the small “Talk” label near the mouthpiece. Make sure the Talk label is in front of your mouth. The microphone cable can be routed over or under clothing.

Under Clothing

- Leave the cable exposed only at the top of the collar.
- Be sure to leave a small loop of cable to allow movement of your head.

Over Clothing

- Use clothing clips to hold the cable close to your body.
- Tuck the cable under the belt, but leave a small loop where it goes under the belt.
- Do not wear the cable on the front of your body. It may get in your way or get caught on protruding objects.

Connecting a Tethered Scanner



1. Connect to I/O port
2. Connect to tethered scanner

1. Squeeze the I/O port connector latches inwards. Connect part (1) of the RS232 cable to the I/O port at the base of the FC300. Release the connector latches and test the connection for stability.
2. Match the shape of the serial port (2) on the RS232 cable with the shape of the tethered scanner cable end.
3. Press the ends firmly together.
4. Secure the connection by tightening the thumbscrews on the tethered scanner cable end until they are finger tight.

Attaching the Handstrap



1. Place the FC300 with the screen facing down, on a flat stable surface.
2. Place the handstrap base (2) in the grooved area, matching the screw holes in the handstrap base with the screw holes in the body of the FC300.
3. Insert the screws (supplied) into each of the four holes and fasten the base securely.
4. Slide the handstrap bottom clip pins into the slots at the base of the FC300 and pull the strap towards the top of the FC300 until the top clip slips into the groove.
5. Making sure the closed loop fastener surface on the handstrap are facing up, slide the strap through the latch in the top clip.
6. Fold the end of the strap over so that the closed loop fastener surfaces mate evenly and the handstrap is secured to the FC300.
7. Test the strap's connection making sure the FC300 is securely connected to each end of the strap connectors.

Check the closed loop fastener and handstrap base connection frequently. If loose, they must be tightened or replaced before the FC300 is placed into service again.

Assemble the Carry Case

Note: Itron recommends that accessory installation or removal be performed on a clean, well-lit surface. When necessary, protect the work surface, the FC300, and components from electrostatic discharge.

1. Remove any cables connected to the I/O port at the bottom of the FC300.
2. Separate the hook and loop fabric on the carry case without removing the hook and loop fabric from the carry case.
3. Slip the removable, clear plastic protector for the keypad and touchscreen into the case. Position it against the openings for the keypad and touchscreen in the case. The voice case does not require the clear plastic protector.
4. Slide the FC300 into the case, making sure the touchscreen and keypad (including the Scan LED) are visible and accessible through the front openings of the case.
5. Securely tether the stylus to the case, if necessary. Place the stylus in the stylus holder on the hand-strap or the trigger handle.
6. Loosen then tighten the handstrap (on cases without a trigger handle opening) until the carry case assembly is secure in your hand.
7. When a shoulder strap is available, secure the clips at each end of the shoulder strap to the D rings on either side of the carry case. The shoulder strap allows the FC300 to hang upside down until needed.

The main battery can be removed and inserted without taking the FC300 out of the carry case.

Carry Case with Metal Snaps

The metal snap has a bulge in the lip and a dot indentation on the opposite side. To snap the cap closed, tuck the lip bulge under the snap lip and press on the dot to snap closed.

Pull the snap up to open.

Set Date and Time Zone

[Start](#) | [Settings](#) | [Control Panel](#) | [Date/Time icon](#)

Set Date, Time, Time Zone, and assign a Daylight Savings location on the FC300 after a warm boot or anytime.

There is very little functional change from standard desktop PC Date/Time Properties options. Adjust the settings and tap the OK button or the Apply button to save changes to the registry. Any changes take effect immediately.

Double-tapping the time displayed in the Taskbar causes the Date/Time Properties screen to appear.

Grab Time Utility

The GrabTime utility can be configured to synchronize the time with a local server during each reboot function.

Using the Input Panel / Virtual Keyboard



The virtual keyboard is always available when needed e.g. text entry.

Tap the **Keyboard** icon in the Taskbar to put the virtual keyboard on the display.

Place the cursor in the text entry field and, using the stylus:

- Tap the Shift key to type one capital letter.
- Tap the CAPS key to type all capital letters.
- Tap the áü key to access symbols.

Some applications do not automatically display the Input Panel. In this case, do the following to use the Input Panel:



Input Panel icon in the taskbar

- Tap the Input Panel icon in the taskbar.
- Select **Keyboard** from the menu.
- Move the cursor into the text entry field when you want to enter data using the Input Panel.



Keyboard icon in the taskbar

When finished entering data, tap the **Keyboard** icon in the Taskbar. Select **Hide Input Panel**.

Set Power Scheme Timers

[Start](#) | [Settings](#) | [Control Panel](#) | [Power](#) | [Schemes](#)

Change the parameter values and tap OK to save the changes.

Battery Power Scheme

Use this option when the FC300 will be running on battery power only.

Switch state to User Idle ¹	Default is After 3 seconds
Switch state to System Idle ²	Default is After 15 seconds
Switch state to Suspend ³	Default is After 5 minutes

AC Power Scheme

Use this option when the FC300 will be running on external power (e.g. connected to an A/C power source).

Switch state to User Idle	Default is After 2 minute
Switch state to System Idle	Default is After 2 minutes
Switch state to Suspend	Default is After 5 minutes

The timers are cumulative. The System Idle timer begins the countdown after the User Idle timer has expired and the Suspend timer begins the countdown after the System Idle timer has expired. When the User Idle timer is set to "Never", the power scheme timers never place the FC300 in User Idle, System Idle or Suspend modes (even when the FC300 is idle).

Because of the cumulative effect, and, using the Battery Power Scheme Defaults listed above:

- The backlight turns off after 3 seconds of no activity,
- The display turns off after 18 seconds of no activity (15 seconds + 3 seconds),
- And the FC300 enters Suspend after 5 minutes and 18 seconds of no activity.

¹An amount of time has passed, set by the User Idle timer, and the device shuts down a minimum number of services e.g. backlights. The System Idle timer and the Suspend timer have not expired yet.

²An amount of time has passed, set by the System Idle timer, and the device shuts down a few more services e.g. touch display. The User Idle timer has expired and the Suspend timer has not expired yet.

³Suspend mode is entered when (1) the unit is inactive for a predetermined period of time, (2) the user taps the Power key, or (3) Start | Suspend is chosen. Inactivity means that no internal devices are causing interrupts to reset the power state.

Set Speaker Volume

The speaker is located between the large keys and underneath the LEDs.

Speaker volume can be adjusted to a comfortable level for the listener by using the keypad or by changing parameters in the Volume & Sounds control panel.

Using the Keypad

Note: Volume & Sounds (in Settings | Control Panel) must be enabled before the following key sequences can adjust the volume.

The volume is increased or decreased one step each time the volume key sequence is pressed.

To adjust speaker volume:

- **Blue+V+Up Arrow** and **Blue+V+Down Arrow** keys
- Press any key, except the keys used to adjust the volume, to exit.

Volume control using a keypad key press has six volume settings that match those supported by the Volume and Sounds Control panel. Volume does not “roll-over” from minimum to maximum or from maximum to minimum. Continuously holding down the up or down arrow keys does not cause an automatic repeat of the up (or down) arrow key.

Using the Control Panel

Tap **Start | Settings | Control Panel | Volume & Sounds | Volume** tab. Change the volume setting and tap OK to save the change.

You can also select / deselect sounds for key clicks and screen taps and whether each is loud or soft.

As the volume scrollbar is moved between Loud and Soft, the FC300 emits a tone each time the volume increases or decreases.

Touchscreen

Calibrating the Touchscreen

If the touchscreen is not responding properly to stylus taps, you may need to recalibrate the touchscreen. Recalibration involves tapping the center of a target. If you miss the center, keep the stylus on the screen, slide it over the target's center, and then lift the stylus.

To recalibrate the screen, select **Start | Settings | Control Panel | Stylus | Calibration** tab.

To begin, tap the Recalibrate button on the screen with the stylus.

Follow the instructions on the screen and press the Enter key to save the new calibration settings or press Esc to cancel or quit.

Adjust the Display Backlight Brightness

When the display backlight is on, press the **Blue** key and then press the **B** key.

- Use the **Up Arrow** and **Down Arrow** keys to adjust backlight brightness until the display lightens or darkens to your satisfaction.
- Press any key, except the up arrow or down arrow keys, to exit this mode.

At the minimum dimness level, the display is still viewable. The brightness setting is recalled upon a return from Suspend and also upon a warmboot.

Note: The brightness of the keypad backlight is not affected by display brightness adjustments or the display brightness default setting.

Adjusting the Display Backlight Timer

Start | Settings | Control Panel | Display | Backlight

The backlight settings use the Itron set of default timeouts and are synchronized to the User Idle setting in the Schemes tab in the Power control panel.

When the backlight timer expires, the display backlight is dimmed, not turned off. When both checkboxes are unchecked, the backlight never turns off (or dims).

Default values are 3 seconds for Battery, 2 minutes for External and both the check boxes are enabled.

When the **keypad backlight** is set to *Follow the touchscreen backlight*, the keypad backlight turns off when the touchscreen backlight dims.

Apply the Touchscreen Protective Film

First, [clean the touchscreen](#) of fingerprints, lint particles, dust and smudges.

Remove the protective film from its container. Remove any protective backing from the film sheet by lifting the backing from a corner of the film. Discard the backing.

Apply the film to the touchscreen starting at one side and smoothing it across the display. If air bubbles appear, raise the film slightly and continue smoothing the film across the display until it covers the glass surface of the display. If dust, lint or smudges are trapped between the protective film and the glass display, remove the protective film, clean the display and apply the protective film again.

Cleaning

Cleaning any area of the FC300 should only be done with mild household cleaning chemicals such as Windex. Cleaning chemicals should never be sprayed directly onto the FC300. Do not scrub optical surfaces. If possible, clean only those areas which are soiled. Lint and particulates can be removed with clean, filtered canned air. Apply the cleaning compound sparingly to a soft, non-abrasive cloth and rub gently. Use of harsher chemicals such as hand creams or insect repellent on the FC300 can damage the materials and void the warranty.

Using the AppLock Switchpad

Note: The touchscreen must be enabled. Select Start | Settings | Control Panel | Options | Misc. tab to verify touchscreen status.



Switchpad Menu



Switchpad Icon in Taskbar

A checkmark indicates applications currently active or available for Launching by the FC300 user. When Keyboard, on the Switchpad Menu, is selected, the default input method (Input Panel, Transcriber, or custom input method) is activated.

Using the Keypad

One switch key sequence (or hotkey) is defined by the Administrator for the end-user to use when switching between locked applications. This is known as the **Activation key**.

When the switch key sequence is pressed on the keypad, the next application in the AppLock configuration is moved to the foreground and the previous application moves to the background. The previous application continues to run in the background. FC300 key presses affect the application in focus only.

Using the Touchscreen

The figure shown above is an example and is shown only to aid in describing how the user can switch between applications using a stylus.

When the user taps the Switchpad icon with the stylus, a menu pops up listing the applications available to the user. The user can tap an application name in the popup menu and the selected application is brought to the foreground. The previous application continues to run in the background. Stylus taps affect the application in focus only. When the user needs to use the Input Panel, they tap the Keyboard option. Input Panel taps affect the application in focus only.

Connecting to Bluetooth Devices

Prerequisites:

- The system administrator has discovered and paired (using the default LXEZ Pairing Control Panel) Bluetooth devices for each FC300: one mobile Bluetooth scanner, two Bluetooth serial devices and one Bluetooth printer.
- The system administrator has enabled and disabled LXEZ Pairing parameters for the FC300.
- The system administrator has also assigned a Computer Friendly Name using the LXEZ Pairing Control Panel for the FC300.



To connect Bluetooth devices, the FC300 should be as close as possible and in direct line of sight with the targeted Bluetooth device during the discovery and pairing process.

If the devices are in Suspend, tap the power key to wake the FC300.

Using the correct procedure, wake the targeted Bluetooth device if necessary.

There may be audible or visual signals as both devices discover and pair with each other.

Taskbar Connection Indicator

	<p>Bluetooth module is connected to one or more of the targeted Bluetooth device(s).</p>
	<p>FC300 is not connected to any Bluetooth device. FC300 is ready to connect with any Bluetooth device. FC300 is out of range of all paired Bluetooth device(s). Connection is inactive.</p>

LED Connection Indicator

When the Bluetooth LED on the FC300 is **off**, Bluetooth hardware has been turned off or it does not exist in the FC300.

When the Bluetooth LED on the FC300 is **on**:

- the FC300 is paired with another Bluetooth device but is out of range or not connected, or
- is paired and connected to another Bluetooth device, or
- is discovering other Bluetooth devices.

The Bluetooth LED

- Blinks **slowly**¹ when it is idle.
- Blinks **quickly**² when the FC300 is discovering other Bluetooth devices.

¹Bluetooth LED is on for one second, off for five seconds

²Bluetooth LED is on for 1/4 second, off for 2 seconds.

³Bluetooth LED is on for 1/2 second, off for 1/2 second

- And blinks **normally**¹ when it is connected.

There may be audible or visual signals from paired devices as they move back into range and re-connect with the Bluetooth client in the FC300.

Reboot

When the Windows CE desktop is displayed or an application begins, the power up (or reboot) sequence is complete.

Warm Boot

Start | Warmboot

or Start | Settings | Control Panel | Registry | Warmboot

or Start | Run, type WARMBOOT and press Enter

The Warm Boot function refreshes the Windows operating system without clearing RAM or deleting installed programs. FC300 user-set parameters are unchanged.

Warmboot terminates an ActiveSync connection. The ActiveSync connection must be re-established after the warm boot.

The WARMBOOT text command **is not case-sensitive**².

Troubleshooting

Can't change the date/time or adjust the volume.	AppLock is installed and may be running in User Mode on the FC300. AppLock user mode restricts access to the control panels.
Touchscreen is not accepting stylus taps or needs recalibration.	Press <Ctrl>+<Esc> to force the Start Menu to appear. Use the tab, back-tab and cursor keys to move the cursor from element to element.
New FC300 main batteries don't last more than a few hours.	New batteries must be fully charged prior to first use. Li-Ion batteries (like all batteries) gradually lose their capacity over time (in a linear fashion) and never just stop working. This is important to remember – the FC300 is always 'on' even when in the Suspend state and draws battery power at all times.

¹Bluetooth LED is on for 1/2 second, off for 1/2 second

²The text typed in the text box can be upper or lower case or a combination of upper and lower case letters.

Regulatory Notices and Safety Information

RF Notices

Waste Electrical and Electronic Equipment (WEEE)



Important:

This symbol is placed on the product to remind users to dispose of Waste Electrical and Electronic Equipment (WEEE) appropriately, per Directive 2002-96-EC. In most areas, this product can be recycled, reclaimed and re-used when properly discarded. Do not discard labeled units with trash. For information about proper disposal, contact LXE through your local sales representative, or visit www.lxe.com.

Class B Digital Device

NOTICE

This device complies with Part 15 of the FCC Rules [and with RSS-210 of Industry Canada]. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTICE

Changes or modifications made to this equipment not expressly approved by LXE, Inc., may void the FCC authorization to operate this equipment.

Industry Canada

This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada. Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le brouillage radioélectrique édités par le ministère des Communications du Canada.

Li-Ion Battery

When disposing of the FC300 main battery, the following precautions should be observed: The battery should be disposed of properly. The battery should not be disassembled or crushed. The battery should not be heated above 212°F (100°C) or incinerated.

NOTICE:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [] est conforme à la norme NMB-003 du Canada.*

RF Notices

This device contains transmitter Module FCC ID: KDZLXE4830P

RF Safety Notice (Summit Client - 4830)

Caution:



This portable device with its antenna complies with FCC and Industry Canada RF exposure limits set for an uncontrolled environment. This equipment has shown compliance with FCC and Industry Canada Specific Absorption Rate (SAR) limits. Highest reported SAR for the FC300 is Unknown W/kg on body. Any accessories not provided by LXE should not be used with this device. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

This device contains transmitter Module FCC ID: KDZLXE4831P

RF Safety Notice (Summit Client - 4831)

Caution:



This portable device with its antenna complies with FCC and Industry Canada RF exposure limits set for an uncontrolled environment. This equipment has shown compliance with FCC and Industry Canada Specific Absorption Rate (SAR) limits. Highest reported SAR for the FC300 is Unknown W/kg on body. Any accessories not provided by LXE should not be used with this device. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Directive Requirements (Applies only to equipment operated within the EU/EFTA)

Information to User



A label on the exterior of the device should resemble one of the labels shown below (the label contains the LXE part number of the installed radio card). The labels shown below and affixed to the device, identify where the device may be used and where its use is restricted. Use of a device is prohibited in countries not listed below or otherwise identified by the label. (May or may not include the 0560 Notified Body Number. Substitute 4 digit Notified Body Number may also be applied.)



LXE Part Number



LXE Part Number

AC Power Supply Safety Statement

The LXE-approved AC Power Adapter is only intended for use in a 25°C (77°F) maximum ambient temperature environment.

FC300 : Output Rated 15VDC, 4A 60W.

Optional A/C Power Supply: Outside North America, this unit is intended for use with an IEC certified ITE power supply with output rated as stated at the top of this page. (US)

Alimentation c.a. optionnelle: Hors de l'Amérique du Nord, cette unité est conçue pour être utilisée avec une alimentation ITE certifiée CEI de sortie nominale indiquée au haut de cette page. (FR)

Valgfrit vekselstrømforsyning Udenfor Nord Amerika er denne enhed udstattet med en IEC (international elektronisk Kommission) udfærdiget med en ITE strømforsyning med strømudgang som fastslået på denne sides begyndelse. (DK)

Vaihtoehtoinen vaihtovirran syöttölaite: Pohjois-Amerikan ulkopuolella tämä laite on tarkoitettu käytettäväksi sellaisen IEC:n sertifioiman ITE-tehonsyöttölaitteen kanssa, jonka antoteho on tämän sivun yläosassa esitetyn mukainen. (FI)

Optionales Netzteil (Wechselstrom) Außerhalb Nordamerikas sollte diese Einheit über ein der IEC-Norm entsprechendes ITE-Netzteil gespeist werden, und zwar mit einer wie oben auf dieser Seite genannten Ausspeisung. (DE)

Προαιρετική Τροφοδοσία Συνεχούς Ρεύματος Εκτός Β. Αμερικής, η μονάδα αυτή προορίζεται για χρήση με ένα τροφοδοτικό ITE πιστοποιημένο κατά IEC με ονομαστική ισχύ όπως δηλώνεται στην αρχή της σελίδας. (GR)

Alimentazione opzionale a corrente alternata: Al di fuori dei paesi dell'America del nord, l'unità deve essere impiegata con un dispositivo d'alimentazione per attrezzature informatiche approvato dalla IEC la cui potenza nominale sia pari a quella indicata all'inizio della pagina. (IT)

Vekselstrømforsyning (ekstrautstyr): Utenfor Nord-Amerika skal dette produktet brukes med en IEC-sertifisert ITE-strømforsyning med klassifisert effekt som angitt øverst på denne siden. (NO)

Fornecimento opcional de CA: Fora dos EUA, esta unidade destina-se a ser usada com dispositivos de fornecimento de corrente ITE com certificação IEC, com a capacidade indicada no topo desta página. (PT)

Suministro optativo de corriente alterna Fuera de América del Norte, esta unidad se debe utilizar con un alimentador ITE homologado por la IEC (comisión electrotécnica internacional) con una salida que tenga la calificación que figura en la parte superior de esta página. (ES)

Valfri A/C Strömförsörjning Utanför Nordamerika är det meningen att denna enheten används med en IEC-certifierad ITE-strömförsörjare med den uteffekt som anges längst uppe på den här sidan. (SE)

İsteğe Bağlı A/C Güç Kaynağı: Kuzey Amerika dışında, bu ünite, çıkış sınıflandırması bu sayfanın başında belirtilen IEC sertifikalı bir ITE güç kaynağı ile birlikte kullanılmak üzere tasarlanmıştır. (TR)

Legend: Danish – DK; English – US; Finnish – FI; French- - FR; German – DE; Greek – GR; Italian – IT; Norwegian – NO; Portuguese – PT; Spanish – ES; Swedish – SE; Turkish – TR.

Laser Light Safety Statement



Warning This product uses laser light. One of the following labels is provided on the scanner.
Please read the Caution statement. (US)

Mise én garde: Ce produit utilise un rayon laser. L'une des étiquettes suivantes est apposée sur le scanner. Veuillez lire l'avertissement qu'elle contient. (FR)

Advertência: Este produto usa luz de laser. O scanner contém um dos seguintes avisos. Favor ler o Aviso. (PT)

Varning: Denna produkt använder laserljus. En av de nedanstående etiketterna sitter på scannern. Var god läs varningstexten. (SE)

Advarsel: Dette produkt anvender laserlys. En af følgende mærkater anvendes på scanneren. Læs venligst sikkerhedsforanstaltningen. (DK)

Varoitus: Tämä tuote käyttää laservaloa. Skannerissa on jokin seuraavista tarroista. Lue Huomio-kohta. (FI)

Warnung: Dieses Produkt verwendet Laserlicht. Eines der folgenden Etiketten befindet sich auf dem Scanner. Bitte lesen Sie den Gefahrenhinweis. (DE)

Attenzione: Questo prodotto utilizza luce laser. Una delle etichette seguenti c'è ubicata sullo scanner. Si raccomanda di leggere con attenzione le avvertenze riportate. (IT)





Advarsel: Dette utstyret bruker laserlys. En av følgende etiketter er plassert på scanneren. Les advarselen på etiketten. (NO)

Advertencia: Este producto usa luz de láser. Las etiquetas se proveen en la máquina exploradora. Por favor, lea detenidamente la explicación para las precauciones. (ES)

Waarschuwing: Dit product gebruikt laserlicht. Een van de volgende labels is op de scanner aangebracht. Lees a.u.b. de waarschuwing onder Oppassen. (NL)

<p>Uyarı: Bu ürün lazer ýbýdý kullanýr. Araýdýdaki etiketlerden bir tanesi tarayýcýnýn üstünde saðlanýr. Lütfen Dikkat ifadesini okuyun. (TR)</p>	<p>Προειδοποίηση: Αυτό το προϊόν χρησιμοποιεί λέιζερ φως. Υπάρχει μία από τις ακόλουθες ετικέτες στο σαρωτή. Παρακαλούμε διαβάστε τη δήλωση με τίτλο Προσοχή. (GR)</p>
<p>경고: 본 제품은 레이저 광선을 사용합니다. 다음 라벨 중 하나가 스캐너에 제공됩니다. 주의 사항을 읽어 주십시오. (KR)</p>	<p>警告: この製品はレーザー光線を使用します。 次のラベルのうち1つがスキャナーに貼られています。 注意事項をお読みください。 (JP)</p>
<p>警告: 本产品使用激光。 下列一个标签将随扫描仪一道提供。 请阅读“当心”一栏的内容。(CN)</p> <p>雷射光 本產品使用雷射光掃描條碼，請勿正視雷射光或以雷射光照射眼睛。(Taiwan, ROC)</p>	<p>Legend: Chinese-CN; Danish-DK; Dutch-NL; English-US; Finnish-FI; French-FR; German-DE; Greek-GR; Italian-IT; Japanese-JP; Korean-KR; Norwegian-NO; Portuguese-PT; Republic of China-ROC; Spanish-ES; Swedish-SE; Turkish-TR;</p>

Hazardous Locations Warnings

<p>WARNING</p> 	<p>Do not charge in hazardous area.</p>
<p>WARNING</p> 	<p>Separate connectors only in non-hazardous area.</p>
<p>WARNING</p> 	<p>Only use Itron 161888-0001 163086-0001 batteries as replacements.</p>
<p>WARNING</p> 	<p>EXPLOSION HAZARD. DO NOT DISCONNECT WHILE THE CIRCUIT IS LIVE OR UNLESS THE AREA IS KNOWN TO BE FREE OF IGNITABLE CONCENTRATIONS.</p>

Index

A	
AC Power Scheme	20
AC Power Supply Safety Statement	29
Adjust Headset / Microphone and Secure Cable	14
Adjust the Display Backlight Brightness	22
Adjusting the Display Backlight Timer	22
AppLock Switchpad	24
Apply the Touchscreen Protective Film	23
Assembly	
tethered scanner	15
USB Host	9-11
Attaching the Handstrap	16

B	
Backlight	
Keypad	8
Battery	
Install	4
Remove	4
Battery insert and remove instruction	4
Battery Power Scheme	20
Battery Status LED	7
Bluetooth client functions	7
Bluetooth connection	25
Bluetooth LED	25
Bluetooth LED activity	25
Bluetooth Status LED	7

C	
Calibrate the touchscreen	22
Carry Case with Metal Snaps	17
Class B	27
Cleaning	23
Client Cable Assembly	10

Connect or Remove the Battery Pack	4
Connecting a Tethered Scanner	15
Connecting an External Power Supply	12
Connecting Cables	9
Connecting the Headset Cable	13
Connecting the Serial and Power Cable	11
Connecting the USB Client and Power Cable	10
Connecting the USB Host and Power Cable	9
Connecting Vehicle Power	12
Connection Indicators	25
Cumulative mode timers	20

D

Date, Time, Time Zone	18
Daylight Savings location	18
display backlight	22

G

Grab Time Utility	18
-------------------------	----

H

Handstrap	
assembly	16
Hardware Setup	3
Hazardous Locations Warnings and Information	32
Headset	
Adjusting the microphone	14
Mouthpiece Talk label	14
quick connect	14
cable	
Hide input panel	19
Hide online keyboard	19
Host Cable Assembly	9
Hotswap the Main Battery	5
How To Index of Instructions	1

I	
Input panel	19
Introduction	
Main	1
K	
Keypad Backlight	8, 22
Keypad Backlight Setting	8
L	
Laser Light Safety Statement	30
Laser Warnings and Labels	2
LED	
Battery Status	7
Bluetooth	7
System Status	7
LEDs (Light Emitting Diodes)	7
M	
main battery status	7
P	
Power key	3
power management status	7
Protective film for touchscreen	23
R	
Reboot	26
warm boot	26
Recalibrate the	22
touchscreen	
Remove Battery	4
RF Notices	28

S	
Safety Statement	
AC Power Supply.....	29
Serial and Power Cable.....	11
Set Date and Time Zone.....	18
Set Power Scheme Timers.....	20
Set Speaker Volume.....	21
Set Up A New Device.....	3
SIP soft input panel.....	19
Software Setup.....	3
Status LEDs.....	7
Stylus	
how to use.....	6
Switchpad.....	24
System Status LED.....	7
T	
Tethered scanner cable assembly.....	15
Touchscreen	
and the stylus.....	6
Touchscreen protective film.....	23
Troubleshooting.....	26
U	
USB host cable assembly.....	9-11
Using the AppLock Switchpad.....	24
V	
virtual keyboard.....	19
Volume adjust.....	21
W	
Warm Boot.....	26
WEEE.....	27