

# Instant Translator

ID-V5

FCC ID: YMA-ID-V5



Born for voice translation

【It's easier to communicate without language barriers】

Artificial Intelligence development, especially improvement of speech recognition and speech algorithm, has offered us an opportunity to introduce the speech product-AI translator to people's lives.

It's easy to use. Just a simple click, the translator can convert your speech to text which is displayed on your smart phone and translate to your target language and broadcast.

**Please scan below QR code to download and install translator APP**



**Product features**


A voice-translation system and AI processing device, patent protected, market exclusive.

- Instant translation, instant display on phone, easy to operate.
- Language and grammar database supported by major 3 engines: Baidu,Google,Microsoft
- AI translation: translating ability self learning and grammar correction.
- Update: On The Air (OTA) update.
- 42 languages supported:

Arabic (Egypt, international, Saudi Arabia) 、 Polish、 Danish、 Deutsch、 Russian、 French (France、 Canada) 、 Finnish、 Korean、 Dutch、 Catalan、 Czech、 Croatian、 Romanian、 Malay、 Norwegian、 Portuguese (Brazil, Portuguese) 、 Japanese 、 Swedish、 Slovak、 Thai、 Turkish、 Ukrainian、 Hebrew、 Greek、 Spanish (Latin America, Spanish) 、 Hungarian、 Italian、 Hindi 、 Indonesian、 English (Australia、 USA、 India、 UK) 、 Vietnamese、 Chinese (traditional、 simplified、 Cantonese)

**and more is coming .....**

### Basic user guide

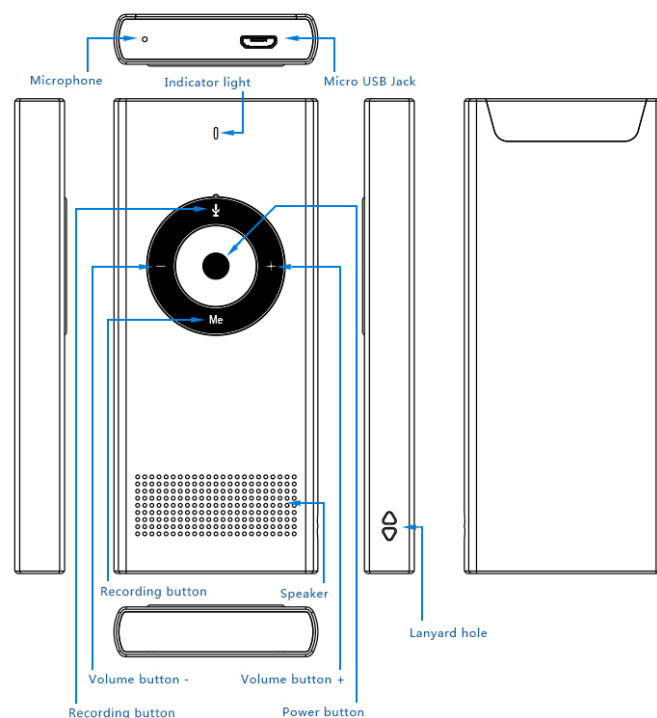


**Important:** AI translation fully relies on support from remote database in cloud servers. Please assure the device is connected to the network when it is in use.

**Note:** This product needs to be connected by smart phone or tablet pc with Bluetooth4.0 or higher.

### Install translator APP:

Please install the translation software to your smart phone by the following procedures, After installation is

accomplished, the icon  appears.

Connecting with Bluetooth:

1.Power on the translator

2.Open the translation app on the smart phone,it will automatically pop up a column address,click to enter the translation interface. (check picture 1-1)

3.On translate interface,slide from left to right to enter setting,and choose Bluetooth to initiate connection to the phone.



Picture 1-1

### Language selection:

Translation software interface,there are language options at the bottom of the screen with national flag icons. Click the icons to select languages.

### Translation:




Picture 1-2

In the lower left corner and the lower right corner of the main interface of the translation software,there is a keyboard and two flags,,two voice signs in the middle,and two-way arrows. (check picture 1-2)

1. **Text translation:**Click on the keyboard icon to enter the language of the selected country ,After the message is sent,it will be translated into the target language which is selected.The voice will be broadcasted in real time. Both of source language and translation result are displayed on the screen. Click the bar of displayed text can play the voice track of corresponding languages.

### 2. Voice translation:

①Press and hold the button of the translation button  on the translator, you can hear a tone from the device and it's ready to take your input. After speak out the content for translation, release the button and the translating process begins immediately. The translated text is displayed under the texts of source language on your phone.


②Press and hold the button of the translation button  on the translator, you can hear a tone from the

device and it's ready to take your input. After speak out the content for translation, release the button and the translating process begins immediately. The translated text is displayed under the texts of source language on your phone.

③You can also repeat similar procedures by using the voice recording button  and  on the app.

### 3. Setting(check picture 1-3)

Please slide from left to right when you enter the translation software interface for the first time(It can only be operated when entering for the first time)

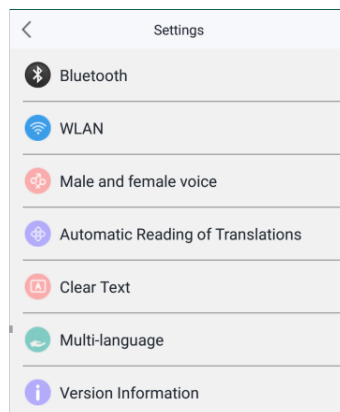


picture1-3

①Bluetooth:Connect to the voice function on the translator


②WLAN: Connecting with WIFI

③Male or Female: Choose the Male or Female voice to broadcast the speech (check picture 1-4)

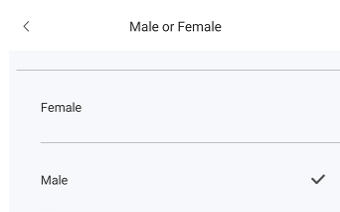


picture1-4

④Automatic Reading of Translations: When the option “Automatic” is selected, the translator broadcast translated result automatically after the translation button is released. When the option “Manual” is selected, the translator would not broadcast translated result unless you click the bar of text on the phone.(check picture 1-5)

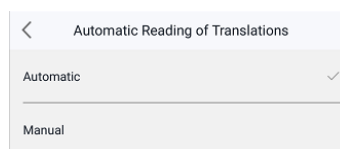


picture1-5

⑤Clear text: To clear all translation records on the phone.(check picture 1-6)

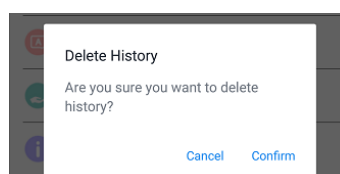


picture1-6

⑥Multi-language:Choose language of translator interface(check picture 1-7)

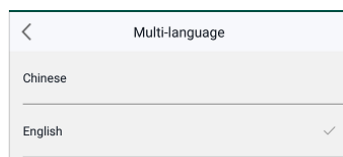

picture1-7

⑦About:You can check IMEI,Version Number and updated here.(check picture 1-8)

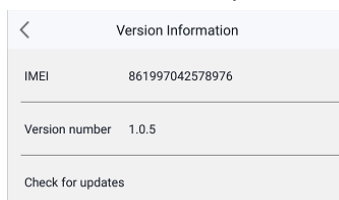

picture 1-8

### Product parameters:

USB Port	Micro 5Pin USB	Battery	800mAh
Adapter	5V/1A	Speaker	2030BOX

### Important Notice:

#### Operation

The components of this product include metal, plastic and other sensitive electronic components. Throwing, incineration, puncture, extrusion or contact with chemical liquids will cause irreversible damage to the equipment.

Working and Storage condition :

This device is designed to be used in temperature from-10 °C to 55°C.

Do not use it in a too much heat, cold or damp environment, Please don't expose it in the sunlight. Please keep it in a ventilated environment for storage.

#### Charging:

Please use the power adapter supplied with device for charging only.

Adapter power in: 100-240v ~ 50/60hz 0.2a output adapter power out: 5V== 1a

### Hints for good translation

In order to get better voice detection and more accurate translation feedback, please follow the below hints in translation:

- Be sure to press down the translation button, then start to speak.
- Keep talk in a normal speech speed, not too fast, not too slow.
- Try to speak a complete sentence each time.
- Try not to use too much warning words, slang or dialects.
- be sure to check the translation display each time after the translation to make sure your talk is correctly detected.

### Normal defects diagnosis:

1.Cannot switch on	·Check to ensure the device, the USB cable, the adapter and the outlets are all connected correctly. Then try again.
1、 Voice recognition is not	·Be sure to press down the translation button, and after your talk, release the key. · Please speak as standard as you can, try to avoid dialect or slang talks.

accurate?	· try to speak coherently, clearly and naturally don't pause too much.
2、 Unable to connect to	· Make sure the indicator lights up normally · and ensure others are not connected
4、 Can't charge?	· make sure to use the supplied adapter. · make sure the USB and the adapter is well connected to the device
5、 Proper maintenance	· Be sure to switch after use. · Don't use the device when the temperature is not within - 10 ° to 55 °Celsius. · this product is not waterproof, please do not use it in rain or in water.

### **warning**

--- Inside the translator, there are precision low power-consumption electrical components, the user is not allowed to replace the internal components, batteries, or change the original circuit design without permission.

--- Any improper operation to the product may cause undesirable consequences and bring loss to the user and relevant part. So before using, be sure to read the user guide carefully.

### **Exemption clause**

· The translation results of this product are for reference only. Please refer to the actual situation for specific matters..

· Do not use this product outside the allowed working conditions.

· this product is not waterproof, do not put into the water in any case.

FCC Warning:

This device complies with Part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.