
INSTRUCTION MANUAL

Setup and use your digital video baby monitor

Installing Baby Unit

A. Place Baby Unit on a flat surface, such as a desk or shelf or mount the camera on a wall.

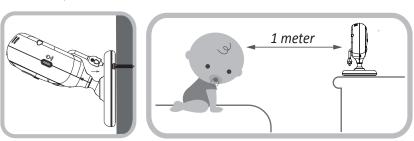

Never place the baby unit or the cord within 1 meter of the crib.


B. Connect the small plug of the power adapter to the Baby Unit and the other end to a suitable electrical outlet. Only use the enclosed adapter (5V DC 1000mA). Press and hold " $\stackrel{\circ}{\ \ }$ " button till green power LED is turned on to turn on baby unit.





C. Connecting the power supply for the Parent Unit.

Connect the small plug of the power adapter to the parent unit and the other end to a electrical outlet. Only use the enclosed adapter (5V DC/1000mA). Recommend charging time of at least 3 hours before first use.








Precaution: use of battery for Parent Unit

Only charge the battery when the battery life indicator is low. Constant recharging of your battery before the low battery indicator light comes on will decrease the life of your batteries.

When battery is low, the power on off LED (icon) will flash red and on screen display battery icon will flash red indicating that the battery needs to be charged.

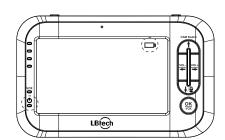

Notice:

If you use the parent unit for the first time, when you turn on the parent unit, some boot menus will pop-up on the screen, we try to explation status and function on these menus, please according to the tips to switch to the monitor system interface. When you are fimaliar with this monitor, you could switch off these on screen tips in menu.

3

STRANGULATION HAZARD — Children have STRANGLED in cords **WARNING** AC Adapters provided.


WARNING

Warning Information

* Keep this instruction manual for * For adult use only


Function of keys and LED indicators

Parent Unit (LB55953R)

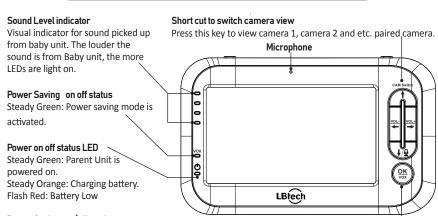

Power Saving-on/off mode

Screen is switched off to save battery energy. When baby cry loud enough, screen is switched on to display baby's video. Baby cry level is adjustable from Menu setting (Sensitivity Level L, M, H, AUTO).

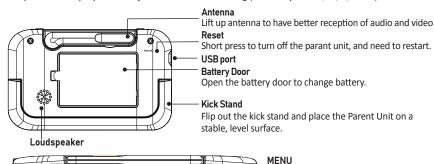


Power: Press and hold to switch "On/Off" the unit

VOL- VOL+	Volume down/up Press to decrease and increase volume.		
Talk Press and hold to talk to		Press and hold to talk to baby unit.	
OK vox	Power Saving-on/off	Press to switch on/off Power Saving (voice activation mode).	
vox	Select	Menu mode (Press to select menu option)	
† †	Up/Down	Menu mode (Press to adjust menu settings)	
+ +	Left/Right	Menu mode (Press to adjust menu settings)	

Baby Unit (LB55953T)

Press to open and exit menu options

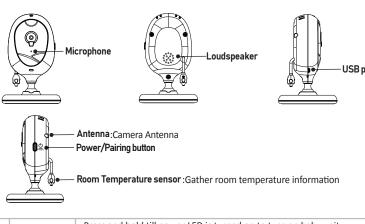

Ů pāīr	Power	Press and hold fill power LED is turned on to turn on baby unit. Short press to turn off baby unit.			
	Pairing button	When camera is powered on, press and hold till power LED starting to blink.			

Start to use monitor

			Status bar				
	•	Tal	lk function is activated	Ĵ≣	Te	Temperature alert is activated	
	⊕,	Zo	om in is activated	⊘ So		an view is activated	
	%	Mo	onitor is muted	al	П	Signal strength reference	
23 °C		°C Baby room temperature		CA	M1	Camera number	
	To the second		Rattery level				



Menu operation

Adjust Parent Unit LCD Brightness lighter or darker



Adjust camera volume: Sound level from 1 to 5.

ADD: Add additional camera.

Step 1: Move the parent unit to the same area as the camera. Both parent and baby unit are switched on.


Step 2: Select ADD in Menu. The next available camera will automatically be highlighted. Press "Select" to begin pairing. Step 3: Within 10 seconds, press "Pairing button" of camera.

Step 4: Once successfully paired, the camera light will stop flashing and video will

appear on the monitor screen within 20 seconds

Delete: Delete paired camera from the list. SCAN: Display paired camera one by one.

View: Select and display the camera. **©** Zoom



Out ⊕ In

Low: Beep Alarm is issued when room temperature is lower than this

C: Display temperature in Celsius scale.

F: Display temperature in Fahrenheit scale.

Temperature calibration: calibrate room temperature display to your standardized one.

ON: Activate room temperature alarm function.

OFF: Deactivate room temperature alarm function.

Baby's crying sound level

To activate Parent unit from Power saving mode

Activation sound level selection in power saving mode.

Auto: Learning environment sound and activation. Recommend for users having white noise machine, fans and lulllabies near by.

Quiet: Baby cry a little bit to activate the Parent Unit.

Medium: Baby cry moderate to activate the Parent Unit.

Loud: Baby cry louder to activate the Parent Unit.

Audio on or off option in power saving mode: Keep audio continuously

on or OFF when screen is off in power saving mode.



Sound Bar: This sound bar is disigned for deaf parents to reflect sound level picked up from camera. You can turn visual sound level indication

Explanation On/Off: We try to explation status and function on the boot menu. You can turn the explanation on or off based on your usage.

WARNING THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION

- Keep parent unit away from heat sources (Such as stoves, radiators, etc)
- This product is not a toy. Do not allow children to play with it.
- The baby monitor should not be considered as a medical device. While using the baby monitor, it is strongly recommended to have an adult directly checking on your baby. Premature babies or children

Battery Warning

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the

removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other

Industry Canada Statement

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en c

IC Radiation Exposure Statement

LBTech's baby monitor warranty policy