



# User's Guide

LG Monitor  
MODEL: **CB221BU**

ENGLISH

---

### **Notice**

Copyright © LG Electronics Inc., 1999

### **All Rights Reserved**

This document is protected by copyright with all rights reserved. No part of the document may be reproduced or transmitted by any means or in any form, without prior consent in writing from LG Electronics Inc.

### **Trademark Acknowledgments**

LG is a trademark of LG Electronics Inc.

IBM is a registered trademark and VGA is a trademark of International Business Machines Corporation.



## Table of Contents

<b>Introduction</b>	Introduction	A1
	Important Precautions	A2
<b>Installation</b>	Connecting the Monitor	A4
	Making use of USB (Universal Serial Bus)	A6
<b>Operation</b>	Location and Function of Controls	A9
	Control Panel Function	A10
	On Screen Display (OSD) Control Adjustment	A11
	On Screen Display(OSD) Selection and Adjustment	A12
<b>Technical Information</b>	Video Memory Modes	A15
	Troubleshooting	A16
	Service	A17
	Specifications	A18
<b>Appendix</b>	Energy Saving Design	A20
	Low Radiation Compliance (MPR II) and	A21
	DDC (Display Data Channel) Communications Regulation Information	A22
	Environmental Labelling of Personal Computers	A23

## Introduction

**Thank you for purchasing a high resolution monitor. It will give you high resolution performance and convenient reliable operation in a variety of video operating modes.**

### Features

- The monitor is a 21 inches (20 inches viewable ) intelligent, microprocessor based monitor compatible with most analog RGB (Red, Green, Blue) display standards, including IBM PC®, PS/2®, Apple®, Macintosh®, Centris®, Quadra®, and Macintosh II family.
- USB (Universal Serial Bus) ports at the back of the monitor are prepared for the USB cable and hub. You can easily and flexibly connect USB-designed devices-such as a mouse, keyboard or printer- to the monitor for true Plug and Play function.
- The monitor provides crisp text and vivid color graphics with VGA, SVGA, XGA, and VESA Ergonomic modes (non-interlaced), and most Macintosh compatible color video cards when used with the appropriate adaptor. The monitor's wide compatibility makes it possible to upgrade video cards or software without purchasing a new monitor.
- Digitally controlled auto-scanning is done with the micro-processor for horizontal scan frequencies between 30 and 115kHz, and vertical scan frequencies between 50-200Hz. The microprocessor-based intelligence allows the monitor to operate in each frequency mode with the precision of a fixed frequency monitor.
- We managed to adapt the advanced design and technology to the monitor. Soft touch buttons on the front panel are simple and allow you to conveniently adjust a variety of image controls. The absolutely flat screen and special screen treatment virtually eliminate distracting glares.
- This monitor is capable of producing a maximum horizontal resolution of 1600 dots and a maximum vertical resolution of 1200 lines. It is well suited for CAD work and sophisticated windowing environments.
- For low cost of monitor operation, this monitor is certified as meeting the EPA Energy Star requirements, and utilizes the VESA Display Power Management Signalling (DPMS) protocol for power saving during non-use periods.

### Monitor Registration

The model and serial numbers are found on the rear of this unit. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase : \_\_\_\_\_  
Dealer Purchased From : \_\_\_\_\_  
Dealer Address : \_\_\_\_\_  
Dealer Phone No. : \_\_\_\_\_  
Model No. : \_\_\_\_\_  
Serial No. : \_\_\_\_\_

## Important Precautions

**This unit has been engineered and manufactured to assure your personal safety, but improper use can result in potential electrical shock or fire hazard. In order not to defeat the safeguards incorporated in this monitor, observe the following basic rules for its installation, use, and servicing. Also follow all warnings and instructions marked directly on your monitor.**

### On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier.

Operate the monitor only from a power source indicated in the specifications of this manual or listed on the monitor. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

#### Do not Open the Monitor

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the monitor is not operating properly.

#### To Avoid Personal Injury :

- Do not place the monitor on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not try to roll a stand with small casters across thresholds or deep pile carpets.

#### To Prevent Fire or Hazards:

- Always turn the monitor OFF if you leave the room for more than a short period of time. Never leave the monitor ON when leaving the house.
- Keep children from dropping or pushing objects into the monitor's cabinet openings. Some internal parts carry hazardous voltages.

### Important Precautions

- Do not add accessories that have not been designed for this monitor.
- During a lightning storm or when the monitor is to be left unattended for an extended period of time, unplug it from the wall outlet.
- Do not bring magnetic devices such as magnets or motors near the picture tube.

### On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the monitor where the power cord is subject to damage.

Do not use this monitor near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Monitors are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard.

Therefore, NEVER:

- Block the bottom ventilation slots by placing the monitor on a bed, sofa, rug, etc.
- Place the monitor in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the monitor near or over a radiator or heat source.

### On Cleaning

- Unplug the monitor before cleaning the face of the picture tube.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the picture tube because overspray may cause electrical shock.

### On Repacking

- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

## Connecting the Monitor

### Connection to any IBM VGA PC compatible system

Figure 1 shows the signal cable connections from the monitor to the Video Graphics Array (VGA) port typical in an IBM PC or PC compatible. This also applies to any graphics video card for PC-CAD or workstation that has a 15 pin high density (3 row) d-Sub connector.

1. Power off both the monitor and PC.
2. Connect the 15 pin VGA connector of the supplied signal cable to the output VGA video connector on the PC and the matching input connector on the rear of the monitor. The connectors will mate only one way. If you cannot attach the cable easily, turn the connector upside down and try again. When mated, tighten the thumbscrews to secure the connection.
3. Power ON the PC, then the monitor.
4. If you see the NO SIGNAL message, check the signal cable and connectors.
5. After using the system, power OFF the monitor, then the PC.

## Connecting to an Apple Macintosh PC

### Connecting the Monitor

Figure 2 shows the connection to an Apple Macintosh, using a separately purchased adapter.

1. Power OFF both the monitor and the PC.
2. Locate the appropriate MAC to VGA adapter block at your local computer store. This adapter changes the high density 3 row 15 pin VGA connector to the correct 15 pin 2 row connection to mate with your MAC. Attach the other end of the signal cable to the side of the adapter block with 3 rows.
3. Connect the attached adapter block/signal cable to the video output on your MAC.
4. Power ON the PC, then the monitor.
5. If you see the NO SIGNAL message, check the signal cable and connectors.
6. After using the system, power OFF the monitor, then the PC.




## Making use of USB (Universal Serial Bus)

### USB connection


USB (Universal Serial Bus) is an innovation in connecting your computer to your monitor. By using the USB, you will be able to connect your mouse, keyboard, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. Plus you will have true Plug and Play capability.

1. Connect the upstream port of the monitor to the downstream port of the USB compliant PC or another hub using the USB cable. (Computer must have a USB port)
2. Connect the USB compliant peripherals to the downstream ports the monitor


*USB Upstream connector*



*USB Downstream connector*



## Making use of USB (Universal Serial Bus)

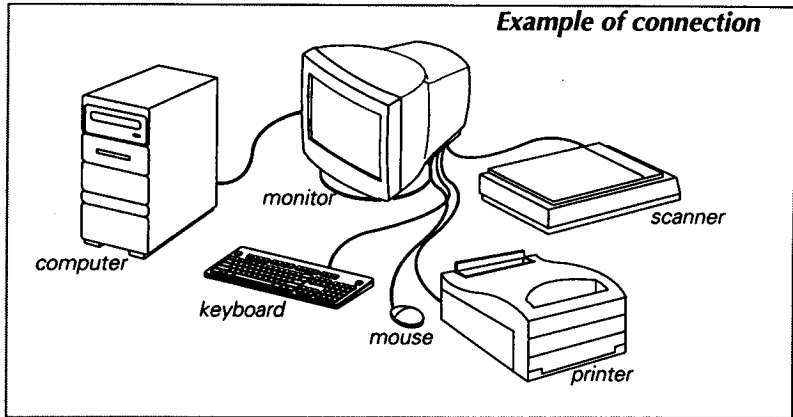

**NOTE**

1. The maximum number of USB devices that can be connected to a single USB port is limited to 127 devices. This limit is based on the USB specification.

2. When you connect the USB cable to the USB port on the computer, the computer will automatically detect the device and install the necessary drivers.

3. When the computer is not connected to the power supply, the external device will not be powered on. To power on the device, connect it to the power supply.

4. If you are using a USB hub, please ensure that the USB hub is connected to the computer and the power supply. The USB hub will provide power to the connected devices and also provide the necessary data communication for the devices.

## USB specifications

<b>USB standard</b>	Rev. 1.0 complied self-powered hub
<b>Downstream power supply</b>	500mA for each (MAX)
<b>Communication speed</b>	12 Mbps (full), 1.5 Mbps (low)
<b>USB ports</b>	1 Upstream port 4 Downstream ports

## USB-Monitor Software function

### Making use of USB (Universal Serial Bus)

As an added advantage, the monitor can be controlled from a computer with a mouse or keyboard. Making adjustments to the image size, position, screen color and operating parameters of the monitor is easy with the USB-Monitor software (please refer to the supplied disk).


#### NOTE

USB-Monitor software is available on the supplied disk.

To access the USB-Monitor software function:

1. Click the right button of the mouse, then select the Properties.


The Display Properties windows appears, as shown in the figure.

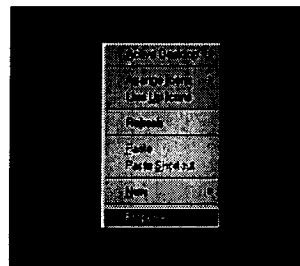

Properties


2. Click the USB-Monitor.

You can select and adjust the Control Options (General, Color and Advanced).

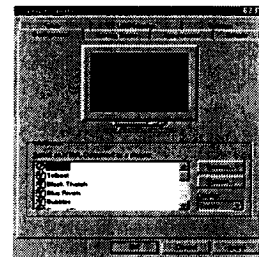

3. When you are finished the making changes, click the Save.

To reset the image without applying changes, click the Default.

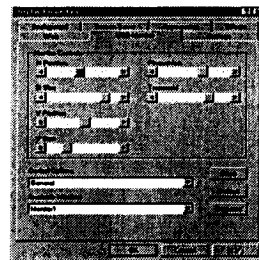


Display Properties


4. To close the window, click OK.

## Location and Function of Controls

Front View

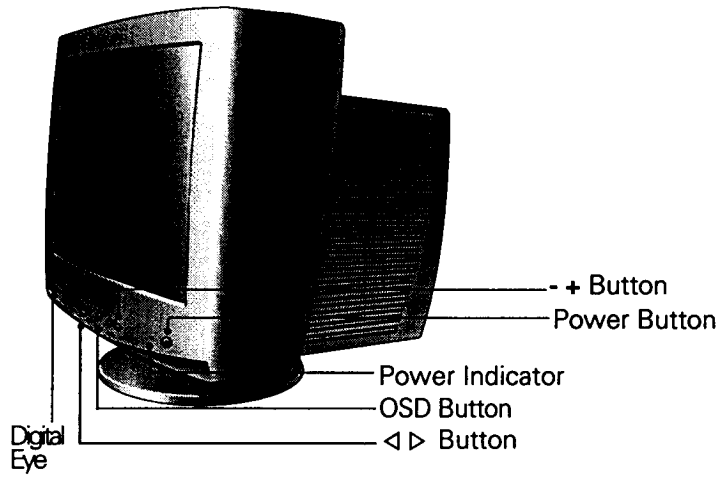


Rear View

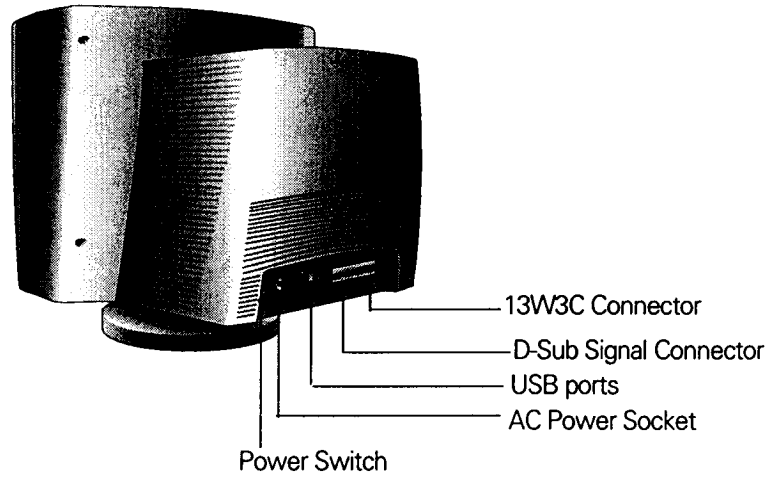

## Control Panel Function

### Front Panel Controls

<b>Digital Eye</b>	<b>OSD Button</b>	<b>Power (DPMS) Indicator</b>
Use this button to enter or exit the On Screen Display.	Use this button to enter or exit the On Screen Display.	This indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/ suspend/power off), this indicator color changes to amber.

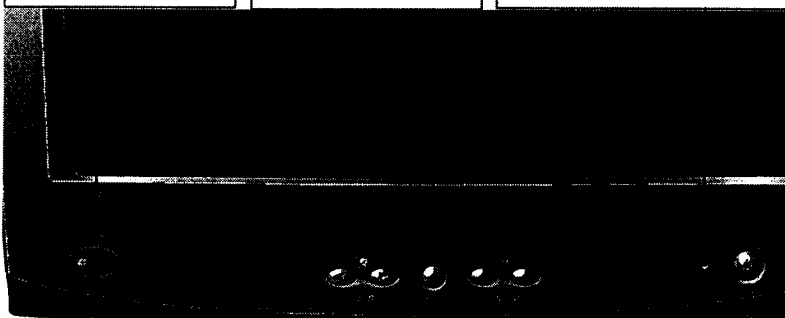

<b>◀ ▶ Buttons</b>	<b>- + Button</b>	<b>Power ON/OFF Button</b>
Use these button to choose or adjust items in the on screen display.	Use these button to enter a selection in the on screen display.	Use this button to turn the monitor on or off.

## On Screen Display (OSD) Control Adjustment

Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system, using only the Enter button and Adjustment Control buttons. A quick example is given below to familiarize you with the use of the controls. Following this section is an outline of the available adjustments and selections you can make using the OSD.

### NOTE





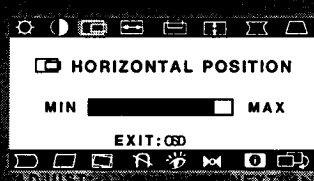
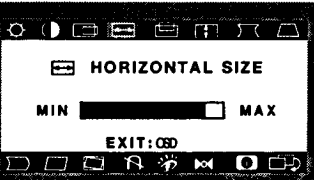


Always refer to the OSD menu structure for the most up to date information on OSD adjustments.

- 1** Press the OSD Button, then the main menu of the OSD appears.
- 2** To access a control, use the  $\Delta$  or  $\nabla$  Buttons. When the icon you want becomes highlighted, press the SET Button.
- 3** Use the  $\Delta\nabla/\triangleleft\triangleright$  Buttons to adjust the item to the desired level.
- 4** Accept the changes by pressing the SET Button.
- 5** Exit the OSD by Pressing the OSD Button.



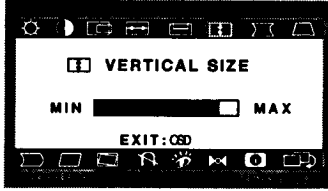

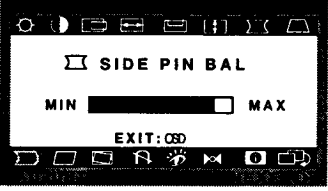

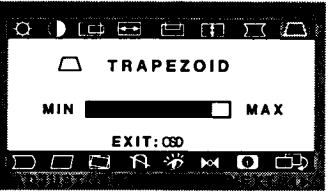

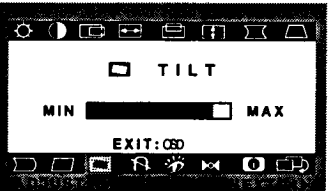




## On Screen Display(OSD) Selection and Adjustment

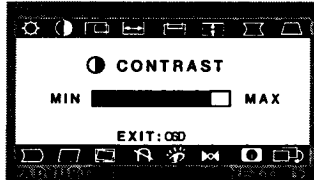You were introduced to the procedure of selection and adjusting an item using the OSD system.

Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.




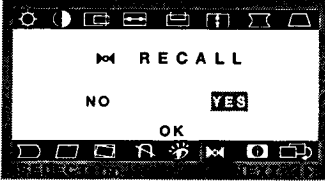
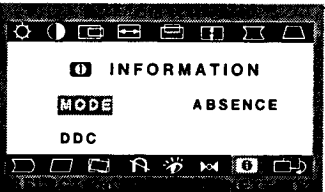
OSD Adjust	Description
	 <b>Brightness</b> Used to adjust the brightness of the screen.
	 <b>Contrast</b> Adjust the display to the contrast desired.
	<b>PRESET</b> 6550K/ 9300K To appear the displays color temperature. <ul style="list-style-type: none"> <li>• 6550K:Slightly reddish white.</li> <li>• 9300K:Slightly bluish white.</li> </ul>
	<b>TEMP</b> User easily color set without adjustment Red, Green and Blue (R/G/B).
	<b>RED</b> To set your own color levels. <b>GREEN</b> To set your own color levels. <b>BLUE</b> To set your own color levels.
	 <b>Vertical Position</b> To move image up and down.
	 <b>Horizontal Position</b> To move picture image left and right.
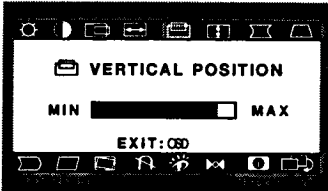
## On Screen Display(OSD) Selection and Adjustment

OSD Adjust	Description
	 <p><b>Vertical Size</b> To adjust image height.</p>
	 <p><b>Horizontal Size</b> To adjust image width.</p>
	 <p><b>Side Pincushion</b> To correct the bowing in and out of the image.</p>
	 <p><b>Side pincushion balance</b> To correct the balance of both sides bowling.</p>
	 <p><b>Trapezoid</b> To correct geometric distortion.</p>
	 <p><b>Parallelogram</b> This control adjusts for a skewing of the screen image.</p>
	 <p><b>Pin S Adjust</b> To correct the balance of both sides S bowling.</p>
	 <p><b>Pin W Adjust</b> To correct the balance of both sides W bowling.</p>
	<p><b>VIDEO LEVEL</b> This item is used to select the monitor's input signal level. The normal level used for most PC's is 0.7V.</p>
	<p><b>DDC</b> To select the DDC function.(ON/OFF)</p>
	<p><b>LANGUAGE</b> To choose the language in which the control names are displayed.</p>
	<p><b>OSD POSITION</b> To adjust position of the OSD window on the screen.</p>



## On Screen Display(OSD) Selection and Adjustment

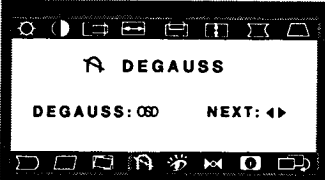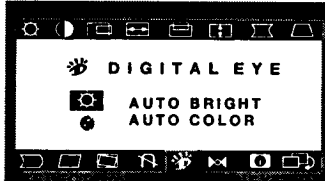OSD Adjust	Description
 <p>The OSD menu for DEGAUSS shows the word "DEGAUSS" at the top. Below it, there is a sub-menu with "DEGAUSS: OSD" and "NEXT: &lt;▶". The menu is framed by a decorative border with various icons.</p>	<p><b>DEGAUSS</b> <b>Degauss</b> To manually demagnetize the screen which may show some image or color incorrectly.</p>
 <p>The OSD menu for DIGITAL EYE shows "DIGITAL EYE" at the top. Below it, there are two options: "AUTO BRIGHT" and "AUTO COLOR". The menu is framed by a decorative border with various icons.</p>	<p><b>RECALL</b> <b>Recall</b> If the monitor is operating in a factory preset mode, this control will reset the image to the factory preset mode. If the monitor is operating in a user mode, this control has no effect.</p>
 <p>The OSD menu for AUTO BRIGHT shows "AUTO BRIGHT" at the top. Below it, there are two options: "OFF" and "ON". The menu is framed by a decorative border with various icons.</p>	<p><b>MOIRE</b> <b>Moire</b> This item allows you to reduce the moire (Moire is caused by interference Horizontal Scan Line with the periodical dot screen). It is normally OFF(H:0/V:0) The moire adjustments may affect the focus of the screen. The screen image may shake slightly while the moire reduction function is on.</p>
 <p>The OSD menu for RECALL shows "RECALL" at the top. Below it, there are two options: "NO" and "YES". At the bottom, there is an "OK" button. The menu is framed by a decorative border with various icons.</p>	
 <p>The OSD menu for INFORMATION shows "INFORMATION" at the top. Below it, there are two options: "MODE" and "ABSENCE". At the bottom, there is a "DDC" label. The menu is framed by a decorative border with various icons.</p>	<p><b>CONVERGENCE</b> <b>Convergence</b> Use th adjust the alignment of red and blue fiekds.</p> <p><b>PURITY</b> <b>Purity</b> Use th adjust the overall purity of the image if the color appears uneven.</p>

## Video Memory Modes

### Display Modes (Resolution)

The monitor has 38 memory locations for display modes, 12 of which are factory preset to popular video modes.

Display Modes (Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
1 VGA 720 x 400	31.469	70
2 VESA 640 x 480	31.469	60
3 VESA 640 x 480	43.269	85
4 MAC 800 x 600	53.674	85
5 VESA 1280 x 1024	60.023	75
6 VESA 1280 x 1024	63.974	60
7 VESA 1024 x 768	68.677	85
8 MAC 1280 x 960	85.938	85
9 MAC 1280 x 1024	91.146	85
10 VESA 1600 x 1200	93.750	75
11 VESA 1600 x 1200	106.25	85
12 VESA 1600 x 1200	112.50	90

### User Modes

- Modes 1-26 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 1.

If you use up the 26 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 1.

### Recalling Display Modes

- When your monitor detects a mode it has seen before, it automatically recalls the image settings you may have made the last time you used that mode.

You may, however, manually force a recall of each of the 12 preset modes by pressing the Recall button. All preset modes are automatically recalled as the monitor senses the incoming signal.

The ability to recall the preset modes is dependent on the signal coming from your PC's video card or system. If this signal does not match any of the factory modes, the monitor automatically sets itself to display the image.

## Troubleshooting

Check the following before calling for service.

### NO SIGNAL message.

- The signal cable is not connected.

### OUT OF FREQUENCY message appears.

- The frequency of the sync input is outside the operating range of the monitor.

\*Horizontal Frequency: 30-115kHz

\*Vertical Frequency: 50-200Hz

Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

### The power LED is illuminated amber.

- Display power management mode.
- There is no sync signal.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

### The image on the SCREEN is not centered, or too small, or not a rectangle shape.

- Image adjustment not been done yet in the current operating mode.  
Use the OSD, SET and ◀ ▶ buttons to set the image to your liking.

### The monitor doesn't enter the power saving off mode (Amber).

- Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

#### NOTE

→ If the power management LED is illuminated amber, it indicates that the monitor is in power saving mode. Press the OSD, SET and ◀ ▶ buttons to set the image to your liking. For more information, refer to the OSD menu.

→ If the power management LED is illuminated red, it indicates that the monitor is in power off mode. Press the OSD, SET and ◀ ▶ buttons to set the image to your liking. For more information, refer to the OSD menu.

### Service

Unplug the monitor from the wall outlet and refer servicing to qualified service personnel when :

- The power cord or plug is damaged or frayed.
- Liquid has been spilled into the monitor.
- The monitor has been exposed to rain or water.
- The monitor does not operate normally following the operating instructions. Adjust only those controls that are covered in the operating instructions. An improper adjustment of other controls may result in damage and often requires extensive work by a qualified technician to restore the monitor to normal operation.
- The monitor has been dropped or the cabinet has been damaged.
- The monitor exhibits a distinct change in performance.
- Snapping or popping from the monitor is continuous or frequent while the monitor is operating. It is normal for some monitors to make occasional sounds when being turned on or off, or when changing video modes.

Do not attempt to service the monitor yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

When replacement parts are required, have the service technician verify in writing that the replacements used have the same safety characteristics as the original parts. Use of manufacturer specified replacements can prevent fire, shock, and other hazards.

Upon completion of any service or repairs to the monitor, ask the service technician to perform the safety check described in the manufacturer's service manual.

When a video monitor reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the monitor.

## Specifications



### Sync Signal Types

Resolution	Type	H.Sync.	V.Sync.
1	Separate Sync.	H. Sync.	V. Sync
2	Composite Sync.	H/V. Sync.	N.C
3	Sync. On Gree	N.C.	N.C

(N.C : No Connection)

### Signal Connector Pin Assignment

#### 15pin VGA Connector

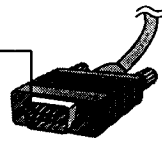

Pin	Signal(D-Sub)
1	Red
2	Green
3	Blue
4	Ground
5	Self-Test
6	Red Ground
7	Green Ground
8	Blue Ground

Pin	Signal(D-Sub)
9	N.C
10	Ground
11	Ground
12	SDA
13	H. Sync
14	V. Sync
15	SCL

**NOTE**  
 NO. 2 Pin (V. Sync) is Ground when in PC state.

# Technical Information

## Specifications

<b>Picture Tube</b>	21 inch (20 inches viewable) FST
	90 degree deflection,
	0.26mm Dot pitch, Non-glare, Dark face
<b>Sync Input</b>	ARAS( Anti-Reflective Anti-Static) coating
	Horizontal Freq. 30 - 115kHz (Automatic)
	Vertical Freq. 50 - 200Hz (Automatic)
<b>Video Input</b>	Input Form Separate TTL, Positive/Negative Composite TTL, Positive/Negative SOG (Sync On Green)
	Signal Input 15pin D-Sub Connector/13W3C Connector
	Input Form Separate, RGB Analog, 0.7Vp-p/75 ohm, Positive
<b>Dimensions (with tilt/swivel stand)</b>	Resolution(max) 1600 x 1200, 90Hz
	Width 65.6 Cm
	Depth 67.4 Cm
<b>Power Input</b>	Height 65.4 Cm
	Voltage AC 100-120/ 200-240V
	Frequency 50/60Hz (Hertz)
<b>Environmental Conditions</b>	Amperage 2.0/1.0A
	Operating Temperature 10 °C to 35 °C
	Humidity 10 % to 90 % non-Condensing
<b>Weight</b>	Storage Temperature 0°C to 60 C
	Humidity 5 % to 90 % non-Condensing
	Net 30.0 kg

### NOTE

by the manufacturer's instructions and should be used only for the intended purpose. The manufacturer is not responsible for any damage or injury caused by the use of this product.

## Energy Saving Design

This monitor complies with the EPA's Energy Star program, which is a program designed to have manufacturers of computer equipment build circuitry into their products to reduce power consumption during time of non-use.

This monitor also goes into its energy saving mode if you exceed the monitor's operating limits, such as the maximum resolution of 1600x1200 or the frequency refresh rates of 30-115kHz horizontal or 50-200Hz vertical. When this monitor is used with a Green or EPA Energy Star PC, or a PC with a screen blanking software following the VESA Display Power Management Signalling (DPMS) protocol, this monitor can conserve significant energy by reducing power consumption during periods of non-use. When the PC goes into the energy saving mode, the monitor will go into a suspended operation state, indicated by the Power LED light changing from a green color to an amber color. After an extended period in the suspended mode, the monitor will then enter a semi-OFF mode to conserve more energy. In the semi-OFF mode or DPMS OFF mode as we call it in our specifications, the Power LED will still show an amber color. When you awaken your PC by hitting a key or moving the mouse, the monitor will also awaken to its normal operating mode, indicated by the green Power LED light. By following these conventions, the power consumption can be reduced to the following levels:

### Power Consumption

Mode	Hori. Sync	Verti. Sync	Video	Power Consumption	LED Color
Normal(Max.)	On	On	Normal	≤160W(180W)	Green
Stand-by	Off	On	Off	≤ 15W( 30W)	Amber
Suspend	On	Off	Off	≤ 15W( 30W)	Amber
Power Off	Off	Off	Off	≤ 3W( 20W)	Amber

\* ( ) : USB

## Low Radiation Compliance (MPR II) and DDC (Display Data Channel)

### Low Radiation Compliance (MPR II)

This monitor meets one of the strictest guidelines available today for low radiation emissions, offering the user extra shielding and an antistatic screen coating. These guidelines, set forth by a government agency in Sweden, limit the amount of emission allowed in the Extremely Low Frequency (ELF) and Very Low Frequency (VLF) electromagnetic range.

### DDC (Display Data Channel)

DDC is a communication channel over which the monitor automatically informs the host system (PC) about its capabilities. This monitor has two DDC function; DDC1, DDC2B. DDC1 and DDC2B carry out uni-directional communication between the PC and the monitor. Under these situations, the PC sends display data to the monitor but not commands to control the monitor settings.

**NOTE**  
The PC must support DDC functions. For details, see the PC manual.  
The monitor must be set to the correct mode for the DDC function to be selected. For details, see the monitor manual.



**FCC Compliance Statement****Communications Regulation Information**

This equipment has been tested and found to comply within the limits of a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment on and off), the user is encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's (or your) authority to operate the equipment. Only peripherals (digital input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this monitor. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Only shielded signal cables may be used with this System.

**Canadian DOC Notice**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

**CE  
Conformity  
Notice**

Products with the "CE" Marking comply with the EMC Directive (89/336/EEC) and LOW VOLTAGE Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms :

- EN 55022 ; Radio Frequency Interference
- EN 50082-1:1992 ; Electromagnetic Immunity
- EN 60555-2 ; Power Line Harmonics
- EN 60555-3 ; Voltage Fluctuations
- EN 60950 ; Product Safety

## Environmental Labelling of Personal Computers



### **Congratulations!**

You have just purchased a TCO'99 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and also to the further development of environmentally adapted electronics products.

### **Why do we have environmentally labelled computers?**

In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem, as far as computers and other electronics equipment are concerned, is that environmentally harmful substances are used both in the products and during their manufacture. Since it is not so far possible to satisfactorily recycle the majority of electronics equipment, most of these potentially damaging substances sooner or later enter nature.

There are also other characteristics of a computer, such as energy consumption levels, that are important from the viewpoints of both the work (internal) and natural (external) environments. Since all methods of electricity generation have a negative effect on the environment (e.g. acidic and climate-influencing emissions, radioactive waste), it is vital to save energy. Electronics equipment in offices is often left running continuously and thereby consumes a lot of energy.

### **What does labelling involve?**

This product meets the requirements for the TCO'99 scheme which provides for international and environmental labelling of personal computers. The labelling scheme was developed as a joint effort by the TCO (The Swedish Confederation of Professional Employees), Svenska Naturskyddsforeningen (The Swedish Society for Nature Conservation) and Statens Energimyndighet (The Swedish National Energy Administration).

## Environmental Labelling of Personal Computers

Approval requirements cover a wide range of issues: environment, ergonomics, usability, emission of electric and magnetic fields, energy consumption and electrical and fire safety.

The environmental demands impose restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs (freons) and chlorinated solvents, among other things. The product must be prepared for recycling and the manufacturer is obliged to have an environmental policy which must be adhered to in each country where the company implements its operational policy.

The energy requirements include a demand that the computer and/or display, after a certain period of inactivity, shall reduce its power consumption to a lower level in one or more stages. The length of time to reactivate the computer shall be reasonable for the user.

Labelled products must meet strict environmental demands, for example, in respect of the reduction of electric and magnetic fields, physical and visual ergonomics and good usability.

Below you will find a brief summary of the environmental requirements met by this product. The complete environmental criteria document may be ordered from:

**TCO Development**

SE-114 94 Stockholm, Sweden

Fax: +46 8 782 92 07

Email (Internet): [development@tco.se](mailto:development@tco.se)

Current information regarding TCO'99 approved and labelled products may also be obtained via the Internet, using the address: <http://www.tco-info.com/>

**Environmental requirements**

## **Environmental Labelling of Personal Computers**

### **Flame retardants**

Flame retardants are present in printed circuit boards, cables, wires, casings and housings. Their purpose is to prevent, or at least to delay the spread of fire. Up to 30% of the plastic in a computer casing can consist of flame retardant substances. Most flame retardants contain bromine or chloride, and those flame retardants are chemically related to another group of environmental toxins, PCBs. Both the flame retardants containing bromine or chloride and the PCBs are suspected of giving rise to severe health effects, including reproductive damage in fish-eating birds and mammals, due to the bio-accumulative\* processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

The relevant TCO'99 demand requires that plastic components weighing more than 25 grams must not contain flame retardants with organically bound bromine or chlorine. Flame retardants are allowed in the printed circuit boards since no substitutes are available.

### **Cadmium\*\***

Cadmium is present in rechargeable batteries and in the colour-generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries, the colour-generating layers of display screens and the electrical or electronics components must not contain any cadmium.

### **Mercury\*\***

Mercury is sometimes found in batteries, relays and switches. It damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries may not contain any mercury. It also demands that mercury is not present in any of the electrical or electronics components associated with the labelled unit.

### **CFCs (freons)**

The relevant TCO'99 requirement states that neither CFCs nor HCFCs may be used during the manufacture and assembly of the product. CFCs (freons) are sometimes used for washing printed circuit boards. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on earth of ultraviolet light with e.g. increased risks of skin cancer (malignant melanoma) as a consequence.

### **Lead\*\***

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning. The relevant TCO'99 requirement permits the inclusion of lead since no replacement has yet been developed.

\* Bio-accumulative is defined as substances which accumulate within living organisms

\*\* Lead, Cadmium and Mercury are heavy metals which are Bio-accumulative.