NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPER ATE THE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential eletrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this monitor, observe the following basic rules for its installation, use, and servicing. Keep it in an accessible place for future reference.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnect device. Ensure that the socket-outlet is easily accessible after installation.

Operate the monitor only from a power source indicated in the specifications of this manual or listed on the monitor. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Hands must be dry when holding the power plug to avoid an electric shock.

Do not damage the power cord by disassembling, bending, pulling or heating up. It can cause fire or electric shock.

Make sure to completely insert the power plug. Insecure connections can cause fire.

Do not Open the Monitor.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the monitor is not operating properly.

To Avoid Personal Injury:

- Do not place the monitor on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not try to roll a stand with small casters across thresholds or deep pile carpets.

Important Precautions

To Prevent Fire or Hazards:

- Always turn the monitor OFF if you leave the room for more than a short period of time. Never leave the monitor ON when leaving the house.
- Keep children from dropping or pushing objects into the monitor's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this monitor.
- During a lightning storm or when the monitor is to be left unattended for an extended period of time, unplug it from the wall outlet.
- Do not bring magnetic devices such as magnets or motors near the picture tube.

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the monitor where the power cord is subject to damage.

Do not use this monitor near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Monitors are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the monitor on a bed, sofa, rug, etc.
- Place the monitor in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the monitor near or over a radiator or heat source.
- Do not install the monitor in a dusty area. It can cause fire.

On Cleaning

- Unplug the monitor before cleaning the face of the monitor screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the monitor screen because overspray may cause electrical shock.

On Repacking

 Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

Connecting the Monitor


- Before setting up the monitor, ensure that the power is turned off to the monitor, computer system, and other attached devices.
- Carefully set the monitor face-down with the underside facing you.

Connecting the Tilt/Swivel stand

- 1. Align the hooks on the tilt/swivel stand with the matching slots in the base of the monitor.
- 2. Insert the hooks into slots.
- **3.** Slide the tilt/swivel stand toward the front of the monitor until the latches click into the locked position.

NOTE

■ This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.

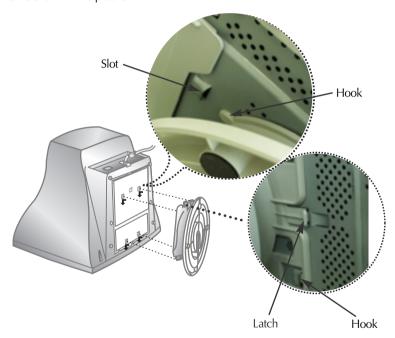

Using the Computer


1. Connect the signal cable. When mated, tighten the thumbscrews to secure the connection.

2. Connect the power cord into a properly power outlet that is easily accessible and close to the monitor.


NOTE

■ This is a simplified representation of the rear view.


This rear view represents a general model; your monitor may differ from the view as shown.

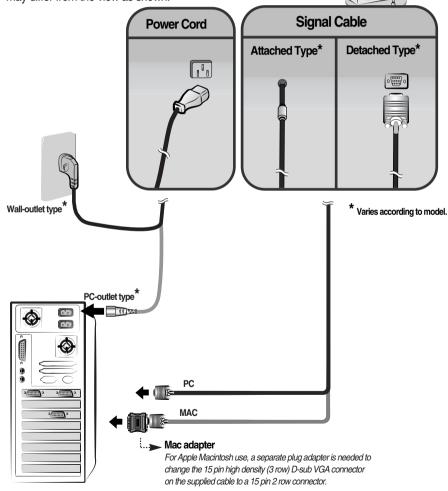

Front Panel Controls

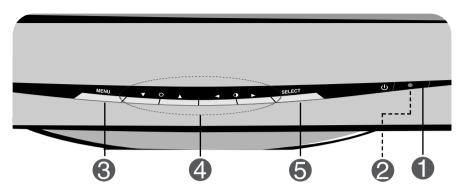

	Control	Function
0	Power Button	Use this button to turn the monitor on or off.
2	Power (DPMS) Indicator	This Indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode, this indicator color changes to amber.
3	MENU (or OSD) Button	Use this button to enter or exit the on screen display.
4	▲ ▼/ ⋖ ► Buttons	Use these buttons to choose or adjust items in the on screen display.
5	SELECT (or SET) Button	Use this button to enter a selection in the on screen display.

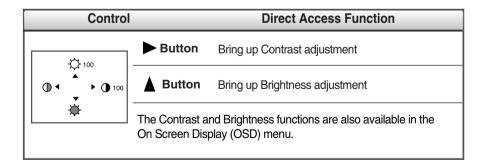

Screen Adjustment

Making adjustments to the image size, position and operating parameters of the monitor is quick and easy with the On Screen Display Control system. A short example is quick and easy given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

■ Allow the monitor to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:

■ Case 1

MENU
$$\rightarrow \triangle \bigvee \rightarrow$$
 SELECT $\rightarrow \triangle \bigvee \blacktriangleleft \triangleright \rightarrow$ SELECT \rightarrow MENU

■ Case 2

OSD $\rightarrow \triangle \bigvee \rightarrow$ SET $\rightarrow \triangle \bigvee \blacktriangleleft \triangleright \rightarrow$ SET \rightarrow OSD

- Press the MENU (or OSD) Button, then the main menu of the OSD appears.
- 2 To access a control, use the ▲ or ▼ Buttons. When the icon you want becomes highlighted, press the SELECT (or SET) Button.
- \mathfrak{F} Use the $\blacktriangle \ \blacktriangledown / \blacktriangleleft \ \blacktriangleright \$ Buttons to adjust the item to the desired level.
- Accept the changes by pressing the SELECT (or SET) Button.
- **5** Exit the OSD by Pressing the MENU (or OSD) Button.

On Screen Display(OSD) Selection and Adjustment

The following table indicates all the On Screen Display control, adjustment, and setting menus.

Main menu	Sub r	nenu		Reference
BRIGHTNESS/	Brightness Contrast			To adjust the brightness and contrast of the screen
CONTRAST				Contract of the corcon
\Diamond	V Position			To adjust the position of the
POSITION	H Positio	า		screen
	V Size			To adjust the size of the screen
SIZE	H Size			
,,,,	Tilt			To adjust the shape of the screen
SHAPE	Side Pincushion			
	S Pincushion Balance			
	Parallelogram Trapezoid H Corner			
	Top Corn		•	
	Bottom C			
RGB	PRESET			To customize the color of the
COLOR		9300K		screen
	Temp	0 1)		
	R/G/B(Us	ser Color)		
, E	Video Level			To customize the screen status
SETUP	Language			for a user's operating environmen
	OSD Time			
—	Degauss			To improve the clarity and
SPECIAL	Recall			stability of the screen
	Reset			
	I ⊢	H Moire		
		/ Moire		
	Converge	nce		
	Purity			
				: Adjustable


On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.


NOTE

■ The order of icons may differ depending on the model (A8~A11).

To adjust the brightness and contrast of the screen

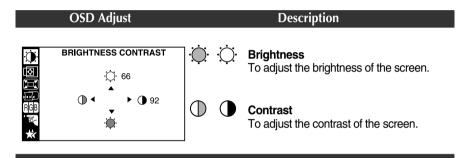


To adjust the position of the screen

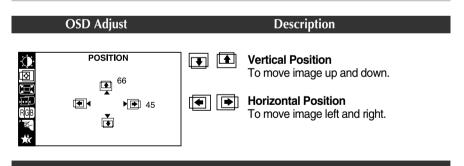

To adjust the size of the screen

OSD Adjust Description Vertical Size To adjust image height. Horizontal Size To adjust image width.


To adjust the shape of the screen

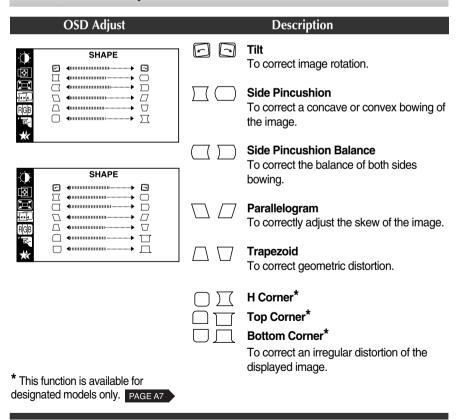

To customize the color of the screen

OSD Adjust Description PRESET 6500K/9300K COLOR Select the screen color. PRESET 6500K 9300K • 6500K: Slightly reddish white. TEMP • 9300K: Slightly bluish white. RED GREEN **TEMP** Select the screen temperature which you BLUE prefer among reddish or bluish or any color in between. RED GREEN Set your own color levels. BLUE


To customize the screen status for a user's operating environment

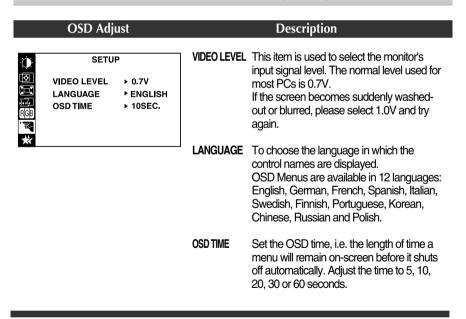

To improve the clarity and stability of the screen

OSD Adjust

Description

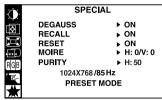

Ċ.	SPECIAL		
\checkmark	DEGAUSS	► ON	
	RECALL	▶ ON	
ā	RESET	▶ ON	
	MOIRE	▶ H: 0/V: 0	
學	CONVERGENCE	► H: 50	
RIGIB	PURITY	► H: 50	
₹.	1024X768/85	Hz	
*	PRESET MODE		

DEGAUSS To manually demagnetize the screen to avoid showing incorrect images or colors.

RECALL You can use this function to reload the modified parameters for screen display

operation, as specified by the user after purchase: Position, Size, Side Pincushion, Trapezoid (These recalled options may differ depending on the mode selected: Preset. User, or New).

If you don't want to recall the monitor to these modified settings, use the ▲ V button to select CANCEL and then press the

SELECT (or SET) button.

RESET Return to all factory default settings

If you don't want to reset the monitor, use the ▲ ▼ button to select CANCEL and then press the SELECT (or SET) button.

MOIRE

This item allows you to reduce the degree of moire. (Moire is caused by interference Horizontal Scan Line with the periodical dot screen). It is normally OFF(H:0/V:0). The moire adjustments may affect the focus

of the screen. Moire adjustments may shake slightly while

the moire reduction function is on.

CONVER- This is to adjust the alignment of red GENCE* and blue fields.

PURITY* Use to adjust the purity on the screen if the color appears uneven.

^{*} This function is available for designated models only. PAGE A7

Check the following before calling for service.

No image appears

- Is the power cord of the monitor connected?
- Is the power indicator light on?
- Is the power on and the power indicator green?
- Is the power indicator amber?
- Do you see an "OUT OF FREQUENCY" message on the screen?
- Do you see a "SELF DIAGNOSITICS" message on the screen?

- Check and see if the power cord is connected properly to the power outlet.
- Press the Power button.
- · Adjust the brightness and the contrast.
- If the monitor is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.
- This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the monitor. See the 'Specifications' section of this manual and configure your monitor again.
- This message appears when the signal cable between your PC and your monitor is not connected. Check the signal cable and try again.

The screen is flickering.

- Is the vertical frequency less than 70Hz or is your monitor set to the interlaced mode?
- Do you have any magnetic material such as adapter, or highvoltage line near to your monitor?
- Do you hear a "~ding" sound while the monitor is flickering?

- Set the vertical frequency to 72Hz or higher, and consult the video card user manual for instructions on converting to a non-interlaced mode.

 (You can set this option under the Display icon of the Control Panel.)
- Remove magnetic sources, such as power adapters, speakers, or high-voltage lines, away from the monitor.
- Use the normal degaussing function. This function clears the screen and reduces any screen blur that may occur due to the surrounding magnetic field. The screen may flicker for about 5 seconds, accompanied by a "~ding" sound.

The screen color is not normal.

- Do you see basic discoloration (16 colors)?
- Is the screen color unstable or monochrome?
- Do you see black dots on the screen?
- Do you see a partial blurring on the screen?

- Set the color depth to 256 colors or higher: use 'Control Panel' → 'Display' → 'Settings' → 'Color Palette'
- Check the connection of the signal cable. Or pull out the video card of the PC and insert it again.
- This is due to a small amount of foreign or abnormally florescent material that became fastened on the mask during manufacturing. It will not affect product performance.
- This happens due to interference from surrounding magnetic fields, as created when speakers, steel structures, or high-voltage lines are placed near the monitor. Remove any such materials from the immediate vicinity and use the DEGAUSS icon on the screen adjustment menu to fix the screen.

I see an after-image on the screen.

- Do you see the after-image even when you turn off the monitor?
- A premature aging of the monitor pixels may cause the prolonged display of a single image on the screen. Be sure to use a screen saver to maximize the service life of the monitor.

I see waves on the screen.

- Do you see the wave directly on the screen?
- This occurs in inverse proportion to the screen focus, which can be caused by a particular frequency or video card. Brighten the screen and use the 'MOIRE' icon on the screen adjustment menu to adjust the screen.

Have you installed the monitor driver?

- Have you installed the monitor driver?
- Be sure to install the monitor driver from the monitor driver CD (or diskette) that comes with your monitor. Or, you can also download the driver from our web site: http://www.lge.com.

Specifications

Picture Tube	17 inches (16.0 inches viewable) Perfect Flat Tube			
	90 degree deflection			
	0.24mm Slot pitch W-ARAS(Wide Anti-Reflective Anti-Static) coating			
Cuma Innust	Horizontal Freg.	30 - 98kHz (Automatic)		
Sync Input	Vertical Freq.	50 - 160Hz (Automatic)		
	Input Form	Separate TTL, Positive/Negative		
	0: 11 .	CompositeTTL, Positive/Negative		
	Signal Input	15 pin D-Sub Connector		
Video Input	Input Form	Separate, RGB Analog, 0.7Vp-p/75 ohm, Positive		
Resolution	Max Flicker Free Recommend	VESA 1600 x 1200@ 75Hz VESA 1280 x 1024@ 85Hz		
Plug&Play DDC 2B		VEGA 1200 × 1024@ 03112		
Power	Normal	83W		
Consumption	Stand-by/Suspend			
	Power Off	≤ 1W		
Dimensions	Width	41.5 cm / 16.3 inches		
&Weight (with tilt/ swivel	Height	41.3 cm / 16.26 inches 43.2 cm / 17.0 inches		
stand)	Depth Net	18.0 kg (39.7 lbs)		
	Europe	AC 200-240V 50Hz 1.0A		
Power Input	Others	AC 100-240V 50/60Hz 2.0A		
		ould be used according to the Power		
	requirements of e			
Environmental	Operating Conditi	ons		
Conditions	Temperature	0°C to 40 °C		
	Humidity	10 % to 90 % non-Condensing		
	Storage Conditions			
	Temperature Humidity	-20°C to 60 °C 5 % to 90 % non-Condensing		
Tilt/Swivel Stand	Attached(), Detached (O)			
Signal cable	Attached (O), Detached (O)			
Power cord	Wall-out type or PC-outlet type			
Regulations	TCO99			
	10000			

NOTE

Information in this document is subject to change without notice.

Specifications

Preset Modes (Resolution)


Di	isplay Mode	es (Resolution)	Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	VESA	640 x 480	43.269	85
2	VESA	800 x 600	53.674	85
3	VESA	1024 x 768	68.677	85
4	VESA	1280 x 1024	91.146	85

Making use of USB (Universal Serial Bus)

USB (Universal Serial Bus) is an innovation in connecting your different desktop peripherals conveniently to your computer. By using the USB, you will be able to connect your mouse, keyboard, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. USB allows you to connect a chain of up to 120 devices on a single USB port; and you can "hot" plug (attach them while the computer is running) or unplug them while maintaining the Plug and the Plug auto detection and configuration. This monitor has an integrated BUS-powered USB hub, allowing up to 2 other USB devices to be attached it.

USB connection

- Connect the upstream port of the monitor to the downstream port of the USB compliant PC or another hub using the USB cable. (Computer must have a USB port)
- 2. Connect the USB compliant peripherals to the downstream ports of the monitor
 - This is a simplified representation of the rear view.

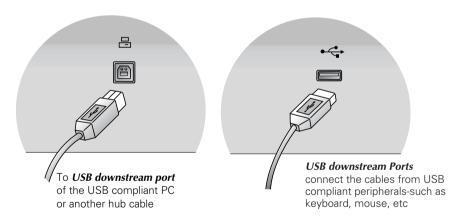

NOTE

- To activate the USB hub function, the monitor must be connected to a USB compliant PC(OS) or another hub with the USB cable(enclosed).
- When connecting the USB cable, check that the shape of the connector at the cable side matches the shape at the connecting side.
- Even if the monitor is in a power saving mode, USB compliant devices will function when they are connected the USB ports(both the upstream and downstream) of the monitor.

Making use of USB (Universal Serial Bus)

USB Specifications

USB standard	Rev. 1.1 complied BUS-powered hub
Downstream power supply	100mA for each (MAX)
Communication speed	12 Mbps (full), 1.5 Mbps (low)
USB port	1 Upstream port / 2 Downstream ports

IMPORTANT: These USB connectors are not designed for use with high-power USB devices such as a video camera, scanner, etc. LGE recommends connecting high-power USB devices directly to the computer