

User's Guide

L1742PM
L1942PM

Make sure to read the **Important Precautions** before using the product.

Keep the User's Guide(CD) in an accessible place for future reference.

See the label attached on the product and give the information to your dealer when you ask for service.



Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential electrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury :

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not drop an object on or apply impact to the product. Do not throw any toys or objects on the product screen.

It can cause injury to human, problem to product and damage the display.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- When the display is to be left unattended for an extended period of time, unplug it from the wall outlet.
- In the presence of thunder and lightning, never touch the power cord and signal cable because it can be very dangerous. It can cause electric shock.

Important Precautions

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.
- Main power breaker is the power cord and this breaking device must be located at a location where it is easy to operate.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

Leaving a fixed image on the screen for a long time may cause damage to the screen and cause image burn-in. Make sure to use a screen saver on the monitor. This phenomenon occurs to products by other manufacturers as well, and this occurrence is not subject to warranty.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

On Disposal

- The fluorescent lamp used in this product contains a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

Important Precautions

NOTE

■ THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTRERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE

- This equipment has been tested and found to comply with the limits for a class B digital device,pursuant to part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Connecting the Display


- Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

Connecting the stand

1. Place the monitor with its front facing downward on a cushion or soft cloth.


2. Assemble the Stand Base into the Stand Body.

Be sure don't pull out the Stop Pin and make the Stand Base direction as shown.

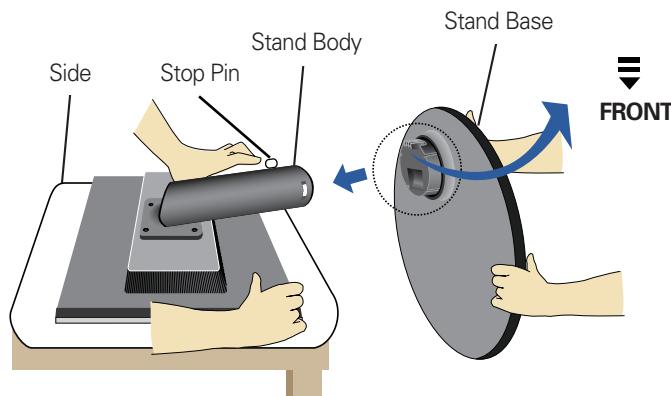

3. Make the monitor stand , then pull out the Stop Pin.

Warning: The tape and locking pin may only be removed from those monitors equipped with a standing base when the base is pulled up. Otherwise, you may be injured by the protruding sections of the stand.

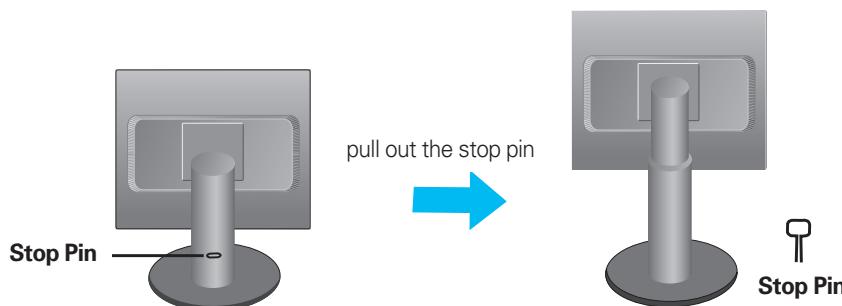

Important

- This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.
- Do not carry the product upside down holding only the stand base. The product may fall and get damaged or injure your foot.


Connecting the Display

- Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.


Positioning your display

1. Adjust the position of the panel in various ways for maximum comfort.

- **Tilt Range:** -6°~17°

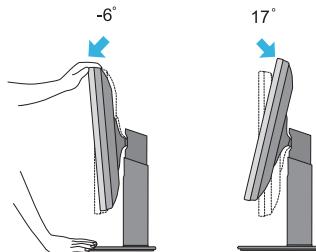

- **Height Range:** maximum 4.33 inch (110.0 mm)

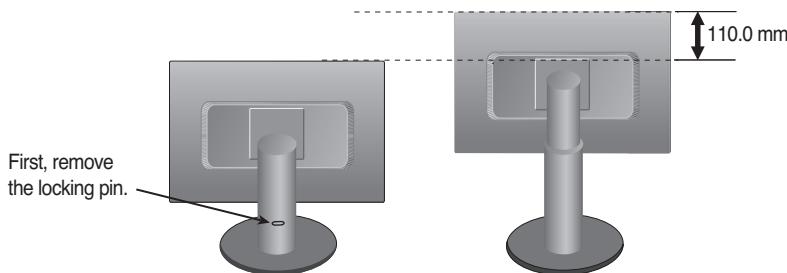

Ergonomic


It is recommended that in order to maintain an ergonomic and comfortable viewing position, the forward tilt angle of the monitor should not exceed 5 degrees.

Using the Pivot function


1. Lift the monitor to its highest height to utilize the Pivot function.

2. Landscape & Portrait : You can rotate the panel 90° clockwise.

Please be cautious and avoid contact between the monitor head and the Stand Base when rotating the screen to access the Pivot function. If the monitor head touches the Stand Base, then the Stand Base could crack.

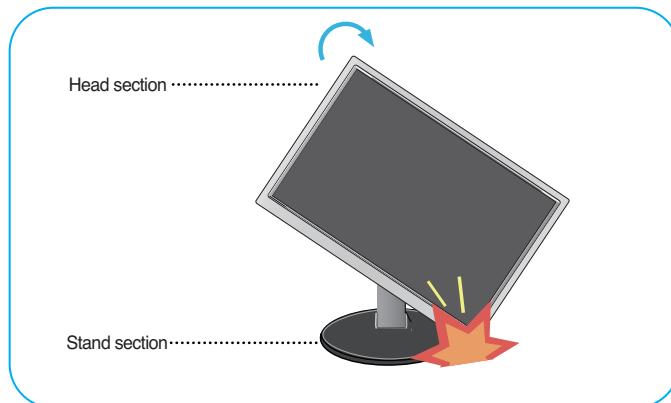

3. For detailed information, please refer to the Pivot Software CD provided.

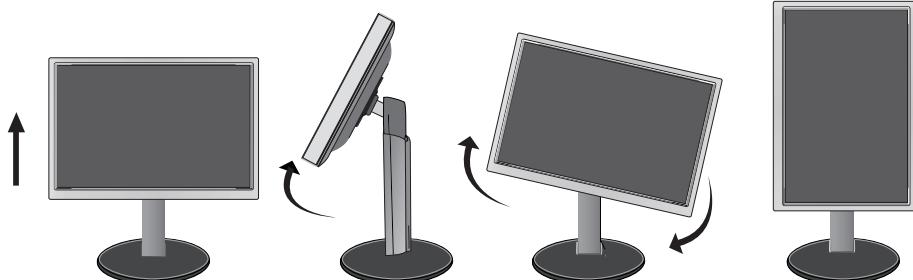


Connecting the Display

- Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

Positioning your display

Using the cable holder

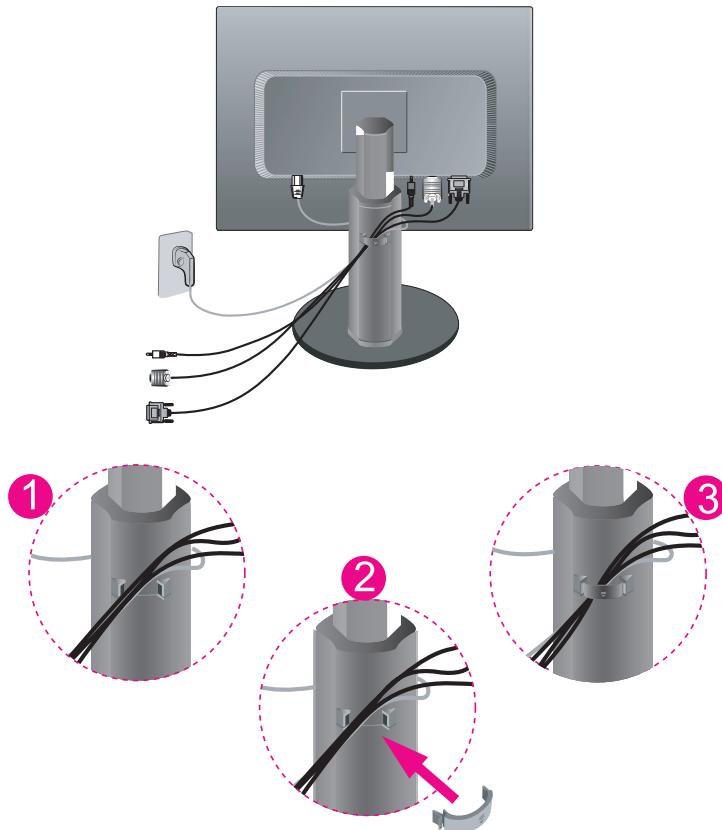

If you want to use the cable holder to let your cables together, please put them through right as shown. For if you don't do like that, you cannot use Pivot function smoothly.

Connecting the Display


Using the Computer

1. Make sure to turn off the computer and product. Connect the cable as below sketch map from ① to ②.

- A Connect DVI Cable
- B Connect Dsub Cable (PC)
- C Connect Dsub Cable (Mac)
- D Connect Audio Cable

NOTE

- This is a simplified representation of the rear view.
- This rear view represents a general model; your display may differ from the view as shown.
- User must use shielded signal interface cables (D-sub 15 pin cable, DVI cable) with ferrite cores to maintain standard compliance for the product.

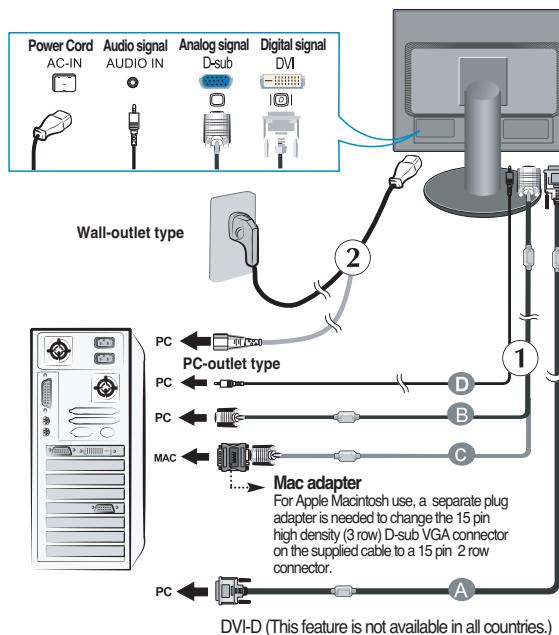

2. Press button on the front switch panel to turn the power on. When monitor power is turned on, the '**'Self Image Setting Function'** is executed automatically.
(Only Analog Mode)

PROCESSING SELF
IMAGE SETTING


NOTE

'Self Image Setting Function'? This function provides the user with optimal display settings. When the user connects the monitor for the first time, this function automatically adjusts the display to optimal settings for individual input signals.

'AUTO/SET' Function? When you encounter problems such as blurry screen, blurred letters, screen flicker or tilted screen while using the device or after changing screen resolution, press the AUTO/SET function button to improve resolution.

Control Panel Functions

Front Panel Controls

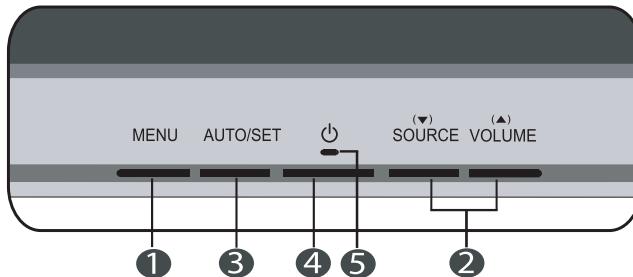

| Control | Function |
|--|---|
| 1 MENU Button | Use this button to enter or exit from the On Screen Display. |
| OSD LOCKED/UNLOCKED OSD LOCKED OSD UNLOCKED | This function allows you to lock the current control settings, so that these settings are not inadvertently changed. To lock the OSD settings, press and hold the MENU button for several seconds. The message " OSD LOCKED " appears. You can unlock the OSD settings at any time by pushing the MENU button for several seconds. The message " OSD UNLOCKED " appears. |

Control Panel Functions

| Control | Function |
|--|--|
| ②  | Use these buttons to select or adjust functions in the On Screen Display. |
| ▼ SOURCE | Use this button to make D-Sub or DVI connector active. This feature is used when two computers are connected to the display. The default setting is D-Sub. |
| ▲ VOLUME | Use these buttons to select or adjust functions in the On Screen Display. Use ▼▲ buttons to decrease or increase the speaker volume.  |
| ③ AUTO/SET Button  | Use this button to select an icon in the On Screen Display. AUTO IMAGE ADJUSTMENT When adjusting your display settings, always press the AUTO/SET button prior to entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode). The best display mode is: 17 inch: 1280x1024 19 inch: 1280x1024 |
| ④ Power Button | Use this button to turn the display on or off. |
| ⑤ Power Indicator | This Indicator lights up as blue when the display is operating normally(On Mode). If the display is in Sleep Mode (Energy Saving), this indicator changes to flicker. |

On Screen Display (OSD) Control Adjustment

Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

- Allow the display to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:

MENU → ▼ ▲ → AUTO/SET → ▼ ▲ → MENU

- 1 Press the **MENU Button**, then the main menu of the OSD appears.
- 2 To access a control, use the **▼ or ▲ Buttons**. When the icon you want becomes highlighted, press the **AUTO/SET Button**.
- 3 Use the **▼ / ▲ Buttons** to adjust the image to the desired level. Use the **AUTO/SET Button** to select other sub-menu items.
- 4 Push the **MENU Button** once to return to the main menu to select another function. Push the **MENU Button** twice to exit from the OSD.

On Screen Display(OSD) Selection and Adjustment

The following table indicates all the On Screen Display control, adjustment, and setting menus.

| Main menu | Sub-menu | A | D | Reference |
|------------------|-----------------|------------|---|---|
| PICTURE | BRIGHTNESS | ● | ● | To adjust the brightness, contrast and gamma of the screen |
| | CONTRAST | ● | ● | |
| | GAMMA | ● | ● | |
| COLOR | PRESET | sRGB | ● | To customize the color of the screen |
| | | 6500K | ● | |
| | | 9300K | ● | |
| | RED | ● | ● | |
| | GREEN | ● | ● | |
| | BLUE | ● | ● | |
| POSITION | HORIZONTAL | ● | | To adjust the position of the screen |
| | VERTICAL | ● | | |
| TRACKING | CLOCK | ● | | To improve the clarity and stability of the screen |
| | PHASE | ● | | |
| | SHARPNESS | ● | ● | |
| SETUP | LANGUAGE | ● | ● | To customize the screen status for a user's operating environment |
| | OSD POSITION | HORIZONTAL | ● | |
| | | VERTICAL | ● | |
| | WHITE BALANCE | ● | | |
| | MUTE | ● | ● | |
| | DDC/CI | ● | ● | |
| | POWER INDICATOR | ● | ● | |
| | FACTORY RESET | ● | ● | |
| FLATRON F-ENGINE | MOVIE | ● | ● | To select or customize desired image settings |
| | INTERNET | ● | ● | |
| | USER | ● | ● | |
| | NORMAL | ● | ● | |
| | DEMO | ● | ● | |

● : Adjustable
A : Analog Input
D : Digital Input


NOTE

- The order of icons may differ depending on the model (A10~A16).

On Screen Display(OSD) Selection and Adjustment


You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.

Press the MENU Button, then the main menu of the OSD appears.

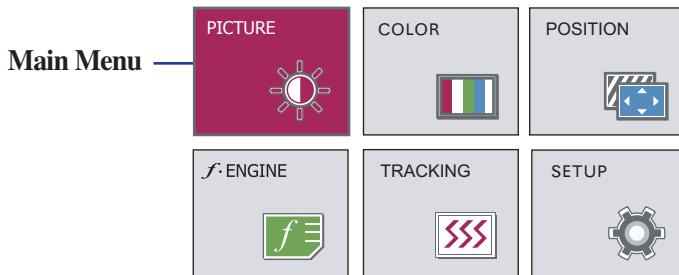

- MENU : Exit
■ : Adjust (Decrease/Increase)
■ SET : Enter
 : Select another sub-menu
 : Restart to select sub-menu

Button Tip

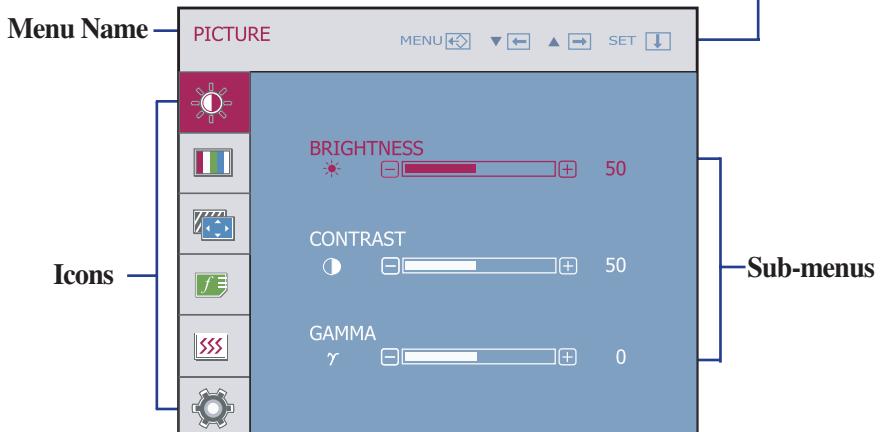

NOTE

- OSD (On Screen Display) menu languages on the monitor may differ from the manual.

On Screen Display(OSD) Selection and Adjustment

| Main menu | Sub menu | Description |
|--|--|--|
|  PICTURE |  BRIGHTNESS CONTRAST GAMMA | To adjust the brightness of the screen. To adjust the contrast of the screen. Set your own gamma value. : -50/0/50 On the monitor, high gamma values display whitish images and low gamma values display high contrast images. |
| | <ul style="list-style-type: none">■ MENU : Exit■ ▼ : Decrease■ ▲ : Increase■ SET : Select another sub-menu | |
|  COLOR |  PRESET <input checked="" type="radio"/> RED <input checked="" type="radio"/> GREEN <input type="radio"/> BLUE | <ul style="list-style-type: none">• sRGB: Set the screen color to fit the SRGB standard color specification.• 6500K: Slightly reddish white.• 9300K: Slightly bluish white. Set your own red color levels. Set your own green color levels. Set your own blue color levels. |
| | <ul style="list-style-type: none">■ MENU : Exit■ ▼ : Decrease■ ▲ : Increase■ SET : Select another sub-menu | |

On Screen Display(OSD) Selection and Adjustment

| Main menu | Sub menu | Description |
|-----------|----------|-------------|
|-----------|----------|-------------|



POSITION



HORIZONTAL To move image left and right.

VERTICAL To move image up and down.

- **MENU** : Exit
- ▼ : Decrease
- ▲ : Increase
- **SET** : Select another sub-menu



f-ENGINE



NORMAL This is under normal operating conditions.

- **MENU** : Exit
- ▼ : Decrease
- ▲ : Increase
- **SET** : Select another sub-menu


On Screen Display(OSD) Selection and Adjustment

| Main menu | Sub menu | Description | | | | | | | | |
|-----------|-----------------|---|---|-------------|---|---------------|---|------------|---|---------------|
| | | | | | | | | | | |
| | USER | <p>You can manually adjust brightness, ACE or RCM. You can save or restore the adjusted value even when using a different environment.</p> <ul style="list-style-type: none"> ... (Brightness): Adjusts screen brightness. ... ACE(Adaptive Clarity Enhancer): Selects the clarity mode. ... RCM(Real Color Management): Selects the color mode. <table border="1"> <tr> <td> 0</td> <td>Not applied</td> </tr> <tr> <td> 1</td> <td>Green enhance</td> </tr> <tr> <td> 2</td> <td>Flesh tone</td> </tr> <tr> <td> 3</td> <td>Color Enhance</td> </tr> </table> | 0 | Not applied | 1 | Green enhance | 2 | Flesh tone | 3 | Color Enhance |
| 0 | Not applied | | | | | | | | | |
| 1 | Green enhance | | | | | | | | | |
| 2 | Flesh tone | | | | | | | | | |
| 3 | Color Enhance | | | | | | | | | |
| | MOVIE | Select the SAVE sub-menu using the AUTO/SET button and save the YES value using the ▼, ▲ buttons . | | | | | | | | |
| | INTERNET | <p>This feature lets you easily select the best desired image condition optimized to the environment (ambient illumination, image types etc).</p> <p>MOVIE: For animation images in videos or movies INTERNET: For text images (Word processing etc.)</p> | | | | | | | | |
| | DEMO | <p>This is just for advertising to customer in the shops. It's setting is same with Movie mode and screen is divided by half.</p> | | | | | | | | |

On Screen Display(OSD) Selection and Adjustment

| Main menu | Sub menu | Description |
|---|------------------|--|
|  | TRACKING | |
|  | CLOCK | To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change. |
| | PHASE | To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters. |
| <ul style="list-style-type: none">■ MENU : Exit■ ▼ : Decrease■ ▲ : Increase■ SET : Select another sub-menu | SHARPNESS | To adjust the clearness of the screen. |

On Screen Display(OSD) Selection and Adjustment
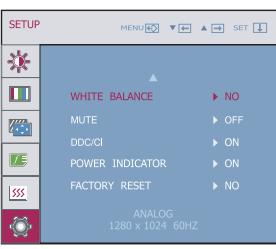
| Main menu | Sub menu | Description |
|--|------------------------|--|
|  | SETUP | |
|  | LANGUAGE | To choose the language in which the control names are displayed. |
| | OSD POSITION | To adjust position of the OSD window on the screen. |
|  | WHITE BALANCE | If the output of the video card is different the required specifications, the color level may deteriorate due to video signal distortion. Using this function, the signal level is adjusted to fit into the standard output level of the video card in order to provide the optimal image. Activate this function when white and black colors are present in the screen. |
| <ul style="list-style-type: none"> ■ MENU : Exit ■ ▼ : Adjust ■ ▲ : Adjust ■ SET : Select another sub-menu | MUTE | Use this function to set the speaker off or on. |
| | DDC/CI | DDC/CI makes it possible to adjust and setup detailed functions on PC instead of the monitor OSD. |
| | POWER INDICATOR | Use this function to set the power indicator on the front side of the monitor to ON or OFF . If you set OFF , it will go off. If you set ON at any time, the power indicator will automatically be turned on. |
| | FACTORY RESET | Restore all factory default settings except " LANGUAGE ". Press the ▼ , ▲ buttons to reset immediately. |

If this does not improve the screen image, restore the factory default settings.
If necessary, perform the white balance function again. This function will be enabled only when the input signal is an analog signal.

Troubleshooting

Check the following before calling for service.

| No image appears | |
|---|---|
| <ul style="list-style-type: none">● Is the power cord of the display connected?● Is the power indicator light on?● Is the power on and the power indicator blue or green?● Is the power indicator flicking?● Do you see an "OUT OF RANGE" message on the screen?● Do you see a "CHECK SIGNAL CABLE" message on the screen? | <ul style="list-style-type: none">• Check and see if the power cord is connected properly to the power outlet.• Press the Power button.• Adjust the brightness and the contrast.• If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen. • Try to turn on the PC.• This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.• This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again. |

| Do you see a "OSD LOCKED" message on the screen? | |
|---|--|
| <ul style="list-style-type: none">● Do you see "OSD LOCKED" when you push MENU button? | <ul style="list-style-type: none">• You can secure the current control settings, so that they cannot be inadvertently changed. You can unlock the OSD controls at any time by pushing the MENU button for several seconds: the message "OSD UNLOCKED" will appear. |

Troubleshooting

Display image is incorrect

| | |
|---|--|
| <ul style="list-style-type: none">● Display Position is incorrect. | <ul style="list-style-type: none">• Press the AUTO/SET button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display. |
| <ul style="list-style-type: none">● On the screen background, vertical bars or stripes are visible. | <ul style="list-style-type: none">• Press the AUTO/SET button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in the on screen display. |
| <ul style="list-style-type: none">● Any horizontal noise appearing in any image or characters are not clearly portrayed. | <ul style="list-style-type: none">• Press the AUTO/SET button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, decrease the horizontal bars using the PHASE icon in the on screen display.• Check Control Panel --> Display --> Settings and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color). |

Important

- Check **Control Panel --> Display --> Settings** and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommended resolution.
- The setting method can differ by computer and O/S (Operation System), and resolution mentioned above may not be supported by the video card performance. In this case, please ask to the computer or the video card manufacturer.

Display image is incorrect

- **The screen color is mono or abnormal.**

- Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.
- Make sure the video card is properly inserted in the slot.
- Set the color setting higher than 24 bits (true color) at **Control Panel - Settings**.

- **The screen blinks.**

- Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.

Have you installed the display driver?

- **Have you installed the display driver?**

- Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: <http://www.lge.com>.

- **Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?**

- Make sure to check if the video card supports Plug&Play function.

| | | |
|---------------------------------|--|---|
| Display | 17 inches (43.2 cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating Visible diagonal size: 43.2 cm 0.264 mm pixel pitch | |
| Sync Input | Horizontal Freq. | Analog : 30 - 83 kHz (Automatic) Digital : 30 - 71 kHz (Automatic) |
| | Vertical Freq. | 56 - 75 Hz (Automatic) |
| | Input Form | Separate TTL, Positive/Negative SOG (Sync On Green) Digital |
| Video Input | Signal Input | 15 pin D-Sub Connector DVI - D connector (Digital) |
| | Input Form | RGB Analog (0.7 Vp-p/ 75 ohm), Digital |
| Resolution | Max | Analog : VESA 1280 x 1024 @75 Hz Digital : VESA 1280 x 1024 @60 Hz |
| | Recommend | VESA 1280 x 1024 @60 Hz |
| Plug&Play | DDC 2B (Digital), DDC 2AB (Analog) | |
| Power Consumption | On Mode | : 32 W(Typ.) |
| | Sleep Mode | ≤ 1 W |
| | Off Mode | ≤ 1 W |
| Dimensions &Weight | With Stand | |
| | Width | 36.96 cm / 14.55 inches |
| | Height | 40.83 cm / 16.07 inches 51.83 cm / 20.41 inches |
| | Depth | 24.16 cm / 9.51 inches |
| | Net | 3.8 kg (8.44 lbs) |
| Tilt Range | Tilt -6°~17° | |
| Power Input | AC 100-240V~ 50/60Hz 0.8A | |
| Environmental Conditions | Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing | |
| | Storage Conditions Temperature -20°C to 60 °C Humidity 5 % to 90 % non-Condensing | |
| Stand Base | Attached(), Detached (O) | |
| Signal cable | Attached(), Detached (O) | |
| Power cord | Wall-outlet type or PC-outlet type | |

NOTE

- Information in this document is subject to change without notice.

| | | |
|---------------------------------|--|---|
| Display | 19 inches (48.2 cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating Visible diagonal size: 48.2 cm 0.294 mm pixel pitch | |
| Sync Input | Horizontal Freq. | Analog : 30 - 83 kHz (Automatic) Digital : 30 - 71 kHz (Automatic) |
| | Vertical Freq. | 56 - 75 Hz (Automatic) |
| | Input Form | Separate TTL, Positive/Negative SOG (Sync On Green) Digital |
| Video Input | Signal Input | 15 pin D-Sub Connector DVI - D connector (Digital) |
| | Input Form | RGB Analog (0.7 Vp-p/ 75 ohm), Digital |
| Resolution | Max | Analog : VESA 1280 x 1024 @75 Hz Digital : VESA 1280 x 1024 @60 Hz |
| | Recommend | VESA 1280 x 1024 @60 Hz |
| Plug&Play | DDC 2B (Digital), DDC 2AB (Analog) | |
| Power Consumption | On Mode | : 36 W(Typ.) |
| | Sleep Mode | ≤ 1 W |
| | Off Mode | ≤ 1 W |
| Dimensions &Weight | With Stand | |
| | Width | 40.63 cm / 16.00 inches |
| | Height | 42.27 cm / 16.64 inches 53.27 cm / 20.97 inches |
| | Depth | 24.16 cm / 9.51 inches |
| | Net | 4.2 kg (9.33 lbs) |
| Tilt Range | Tilt -6°~17° | |
| Power Input | AC 100-240V~ 50/60Hz 0.8A | |
| Environmental Conditions | Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing | |
| | Storage Conditions Temperature -20°C to 60 °C Humidity 5 % to 90 % non-Condensing | |
| Stand Base | Attached(), Detached (O) | |
| Signal cable | Attached(), Detached (O) | |
| Power cord | Wall-outlet type or PC-outlet type | |

NOTE

- Information in this document is subject to change without notice.

Specifications

Preset Modes (Resolution)

| Display Modes (Resolution) | Horizontal Freq. (kHz) | Vertical Freq. (Hz) |
|----------------------------|------------------------|---------------------|
| 1 640 x 350 | 31.469 | 70 |
| 2 720 x 400 | 31.468 | 70 |
| 3 640 x 480 | 31.469 | 60 |
| 4 640 x 480 | 37.500 | 75 |
| 5 800 x 600 | 37.879 | 60 |
| 6 800 x 600 | 46.875 | 75 |
| 7 832 x 624 | 49.725 | 75 |
| 8 1024 x 768 | 48.363 | 60 |
| 9 1024 x 768 | 60.123 | 75 |
| 10 1152 x 870 | 68.681 | 75 |
| 11 1152 x 900 | 61.805 | 65 |
| *12 1280 x 1024 | 63.981 | 60 |
| **13 1280 x 1024 | 79.976 | 75 |

* Recommend Mode

** Only Analog Mode


Indicator

| MODE | LED Color |
|------------|-----------|
| On Mode | blue |
| Sleep Mode | flicker |
| Off Mode | Off |

Installing the Wall mount plate

This monitor satisfies the specifications of the Wall mount plate or the interchange device.

1. Place the monitor with its front facing downward on a soft cloth.
2. Separate the stand after firstly separating 4 screws by using a driver as figure.

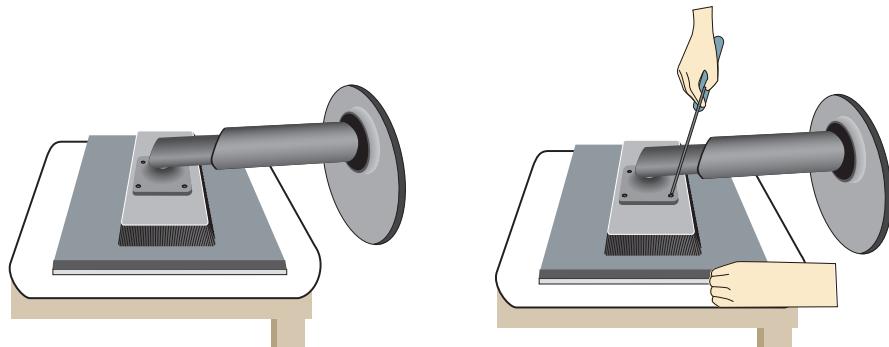


3. Install the Wall mount plate.

Wall mount plate (Separate purchase)

This is stand-type or will mount type and is connectable with Wall mount plate.

Please refer to the installation guide for more details, which is provided when Wall mount plate is purchased.

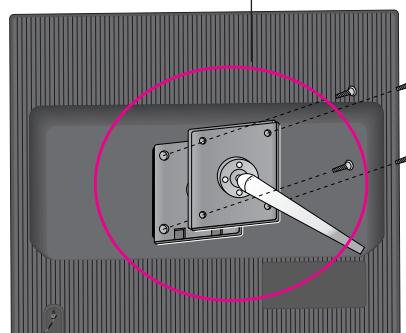

Kensington Security Slot

Connected to a locking cable that can be purchased separately at most computer stores

Digitally yours
.....

