USER'S GUIDE

StudioWorks 995E Color Monitor

G LG

StudioWorks

MODEL : SB995CU



Color Monitor

User's Guide Benutzerhandbuch Manuel d'utilisation Guida Utente Guia del Usuario

Please read this manual carefully before operating your set. Retain it for future reference. Record model number and serial number of the set. See the label attached on the back cover and quote this information to your dealer when you require service.

LG



P/NO : 3828TUL

Printed in Korea



StudioWorks 995SU (SB995CU) Monitor

User's Guide

Notice

Copyright © LG Electronics Inc., 2000

All Rights Reserved

This document is protected by copyright with all rights reserved. No part of the document may be reproduced or transmitted by any means or in any form, without prior consent in writing from LG Electronics Inc.

Trademark Acknowledgments

LG is a trademark of LG Electronics Inc. IBM is a registered trademark and VGA is a trademark of International Business Machines Corporation.

Table of Contents

Introduction	Introduction	A1	
	Important Precautions		
		lGl	
Installation	Connecting the Monitor		
	Making use of USB (Universal Serial Bus)		
		•	
Operation	Location and Function of Controls	A9	
	Control Panel Function	A10	
	On Screen Display (OSD) Control Adjustment	A11	
	On Screen Display(OSD) Selection and Adjustment	A12	
Technical Information	Energy Saving Design	A15	
	Low Radiation Compliance (MPR II) and DDC (Display Data Channel)		
	Video Memory Modes		
	Troubleshooting	A18	
	Service	A19	
	Specifications	A20	
		•	
Appendix	Communications Regulation Information	See back of manual ————	
	Environmental Labelling of Personal Computers	- See back of manual	

Introduction

Thank you for purchasing a high resolution monitor. It will give you high resolution performance and convenient reliable operation in a variety of video operating modes.

Features

Monitor Registration

The model and serial numbers are found on the rear of this unit. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase	
Dealer Purchased From	
Dealer Address	
Dealer Phone No.	
Model No.	
Serial No.	

- The monitor is a 19 inches (18.0 inches viewable) intelligent, microprocessor based monitor compatible with most analog RGB (Red, Green, Blue) display standards, including IBM PC^{*}, PS/2^{*}, Apple^{*}, Macintosh^{*}, Centris^{*}, Quadra^{*}, and Macintosh II family.
 - USB (Universal Serial Bus) ports at the back of the monitor are prepared for the USB cable and hub. You can easily and flexibly connect USBdesigned devices-such as a mouse, keyboard or printer- to the monitor for true Plug and Play function.
 - The monitor provides crisp text and vivid color graphics with VGA, SVGA, XGA, and VESA Ergonomic modes (non-interlaced), and most Macintosh compatible color video cards when used with the appropriate adaptor. The monitor's wide compatibility makes it possible to upgrade video cards or software without purchasing a new monitor.
 - Digitally controlled auto-scanning is done with the micro-processor for horizontal scan frequencies between 30 and 96kHz, and vertical scan frequencies between 50-160Hz. The microprocessor-based intelligence allows the monitor to operate in each frequency mode with the precision of a fixed frequency monitor.
 - This monitor is capable of producing a maximum horizontal resolution of 1600 dots and a maximum vertical resolution of 1200 lines. It is well suited for CAD work and sophisticated windowing environments.
 - For low cost of monitor operation, this monitor is certified as meeting the EPA Energy Star requirements, and utilizes the VESA Display Power Management Signalling (DPMS) protocol for power saving during nonuse periods.

Introduction

Important Precautions

This unit has been engineered and manufactured to assure your personal safety, but improper use can result in potential electrical shock or fire hazard. In order not to defeat the safeguards incorporated in this monitor, observe the following basic rules for its installation, use, and servicing. Also follow all warnings and instructions marked directly on your monitor.

On Safety Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

Operate the monitor only from a power source indicated in the specifications of this manual or listed on the monitor. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Monitor

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the monitor is not operating properly.

To Avoid Personal Injury :

- Do not place the monitor on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not try to roll a stand with small casters across thresholds or deep pile carpets.

To Prevent Fire or Hazards:

- Always turn the monitor OFF if you leave the room for more than a short period of time. Never leave the monitor ON when leaving the house.
- Keep children from dropping or pushing objects into the monitor's cabinet openings. Some internal parts carry hazardous voltages.

Introduction	
	Important Precautions
	 Do not add accessories that have not been designed for this monitor. During a lightning storm or when the monitor is to be left unattended for an extended period of time, unplug it from the wall outlet. Do not bring magnetic devices such as magnets or motors near the picture tube.
On Installation	Do not allow anything to rest upon or roll over the power cord, and do not place the monitor where the power cord is subject to damage.
	Do not use this monitor near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
	 Monitors are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER: Block the bottom ventilation slots by placing the monitor on a bed, sofa, rug, etc. Place the monitor in a built-in enclosure unless proper ventilation is provided. Cover the openings with cloth or other material.
On Cleaning	 Place the monitor near or over a radiator or heat source.
On Cleaning	 Unplug the monitor before cleaning the face of the picture tube. Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the picture tube because overspray may cause electrical shock.
On Repacking	 Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.
A	3
•	

Installation

Connecting the Monitor

Connection to any IBM VGA PC compatible system

Figure 1 shows the signal cable connections from the monitor to the Video Graphics Array (VGA) port typical in an IBM PC or PC compatible. This also applies to any graphics video card for PC-CAD or workstation that has a 15 pin high density (3 row) d-Sub connector.

- 1. Power off both the monitor and PC.
- 2. Connect the 15 pin VGA connector of the supplied signal cable to the matching input connector on the rear of the monitor. The connectors will mate only one way. If you cannot attach the cable easily, turn the connector upside down and try again. When mated, tighten the thumbscrews to secure the connection.
- **3.** Power ON the PC, then the monitor.
- **4.** If you see the SELF DIAGNOSTICS message, check the signal cable and connectors.
- 5. After using the system, power OFF the monitor, then the PC.

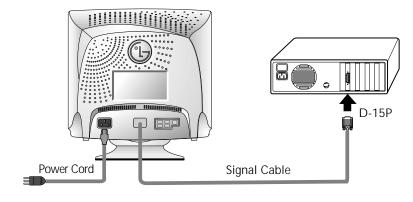


Figure 1.

Connecting to an Apple Macintosh PC

Connecting the Monitor

Figure 2 shows the connection to an Apple Macintosh, using a separately purchased adapter.

- 1. Power OFF both the monitor and the PC.
- 2. Locate the appropriate MAC to VGA adapter block at your local computer store. This adapter changes the high density 3 row 15 pin VGA connector to the correct 15 pin 2 row connection to mate with your MAC. Attach the other end of the signal cable to the side of the adapter block with 3 rows.
- **3.** Connect the attached adapter block/signal cable to the video output on your MAC.
- 4. Power ON the PC, then the monitor.

A5

- **5.** If you see the SELF DIAGNOSTICS message, check the signal cable and connectors.
- **6.** After using the system, power OFF the monitor, then the PC.

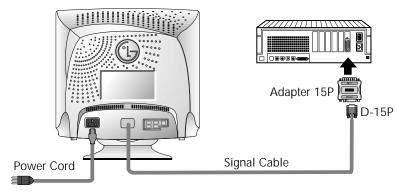



Figure 2.

Making use of USB (Universal Serial Bus)

USB (Universal Serial Bus) is an innovation in connecting your different desktop peripherals conveniently to your computer. By using the USB, you will be able to connect your mouse, keyboard, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. USB allows you to connect chain up to 120 devices on a single USB port, and you can "hot" plug (attach them while the computer is running) or unplug them while maintaining Plug and Plug auto detection and configuration. This monitor has an integrated self-powered USB hub, allowing up to 4 other USB devices to be attached it.


USB connection

- 1. Connect the upstream port of the monitor to the downstream port of the USB compliant PC or another hub using the USB cable (Computer must have a USB port).
- 2. Connect the USB compliant peripherals to the downstream ports of the monitor.

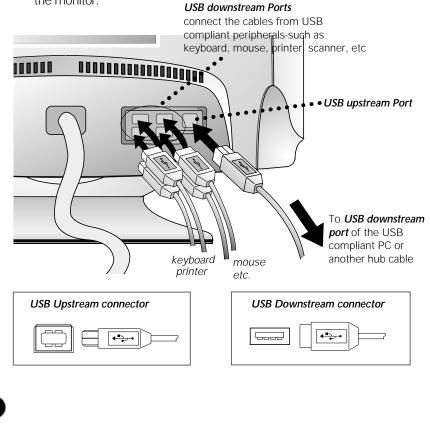

Installation

Making use of USB (Universal Serial Bus)

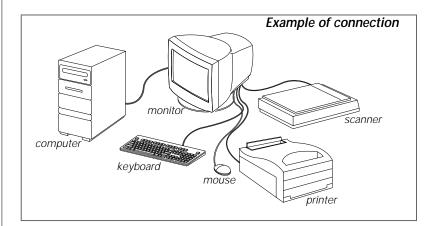

NOTE

A7

- To activate the USB hub function, the monitor must be connected to a USB compliant PC(OS) or another hub with the USB cable(enclosed).
- When connecting the USB cable, check that the shape of the connector at the cable side matches the shape at the connecting side.
- When the monitor is not plugged into an electric socket, the peripherals connected to the downstream ports will not operate.
- Even if the monitor is in a power saving mode, USB compliant devices will function when they are connected the USB ports(both the upstream and downstream) of the monitor.

USB specifications

USB standard Rev. 1.0 complied self-powered hub		
Downstream power supply	Instream power supply 500mA for each (MAX)	
Communication speed	12 Mbps (full), 1.5 Mbps (low)	
JSB port 1 Upstream port		
	4 Downstream ports	

Installation

Making use of USB (Universal Serial Bus)

USB-Monitor Software function

As an added advantage, the monitor can be controlled from a computer with a mouse or keyboard. Making adjustments to the image size, position, screen color and operating parameters of the monitor is easy with the USB-Monitor software (please refer to the supplied disk).

NOTE

• USB-Monitor software function is supported Windows 98 and higher.

To access the USB-Monitor software function:

1. Click the right button of the mouse, then select the Properties.

The **Display Properties** windows appears, as shown in the figure.

2. Click the USB-Monitor.

You can select and adjust the Control Options (General, Color and Advanced).

3. When you are finished the making changes, click the **Save**.

To reset the image without applying changes, click the **Default**.

Degauss removes magnetic field buildup that can be affect color purity and convergence.


4. To close the window, click **OK**.



Properties



Display Properties

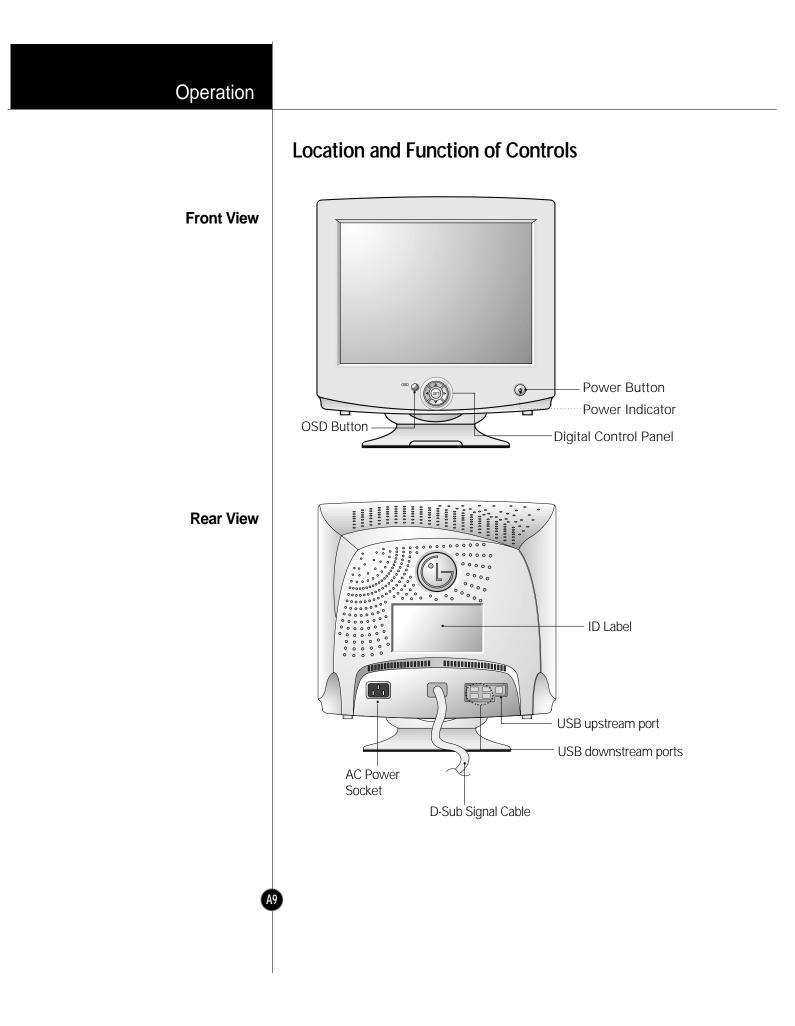


Operation

Control Panel Function

Front Panel Controls

A10

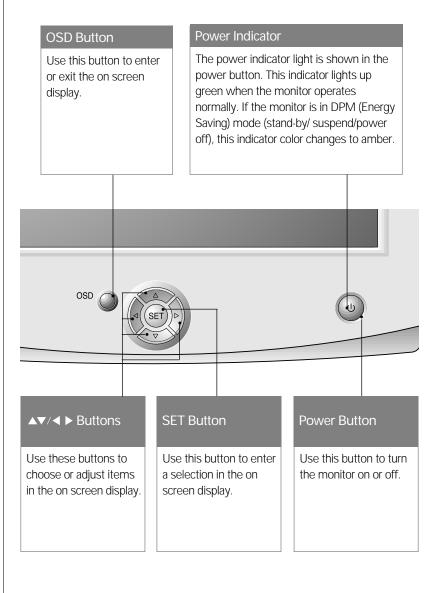

On Screen Display (OSD) Control Adjustment


Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

A11

• Allow the monitor to stabilize for at least 30 minutes before making image adjustment.

To make adjustments in the On Screen Display, follow these steps:

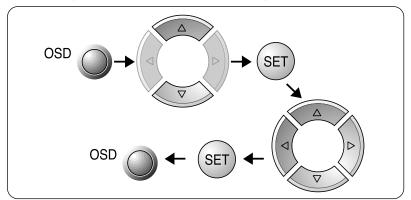



- Press the OSD Button, then the main menu of the OSD appears.
- 2 To acces a control, use the \triangle or \bigtriangledown Buttons. When the icon you want becomes highlighted, press the SET Button.
- 3 Use the $\Delta \nabla / \triangleleft \triangleright$ Buttons to adjust the item to the desired level.
- Accept the changes by pressing the SET Button.
- 5 Exit the OSD by Pressing the OSD Button.

On Screen Display(OSD) Selection and Adjustment


You were introduced to the procedure of selection and adjusting an item using the OSD system.

Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

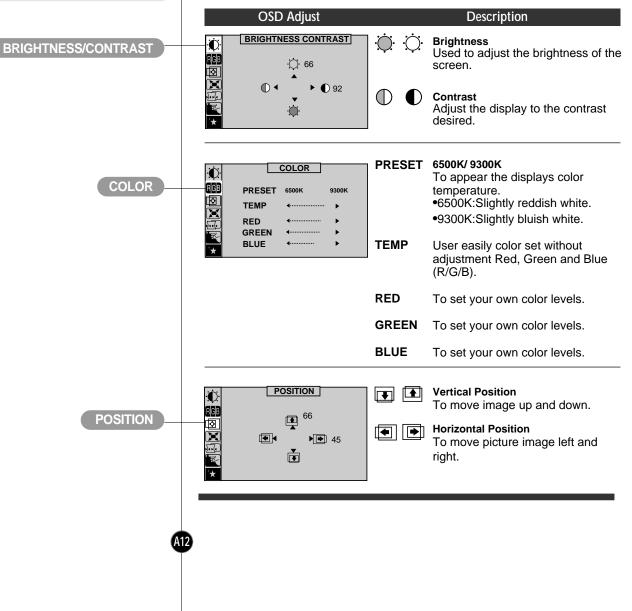


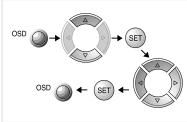


Operation

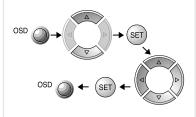

On Screen Display(OSD) Selection and Adjustment

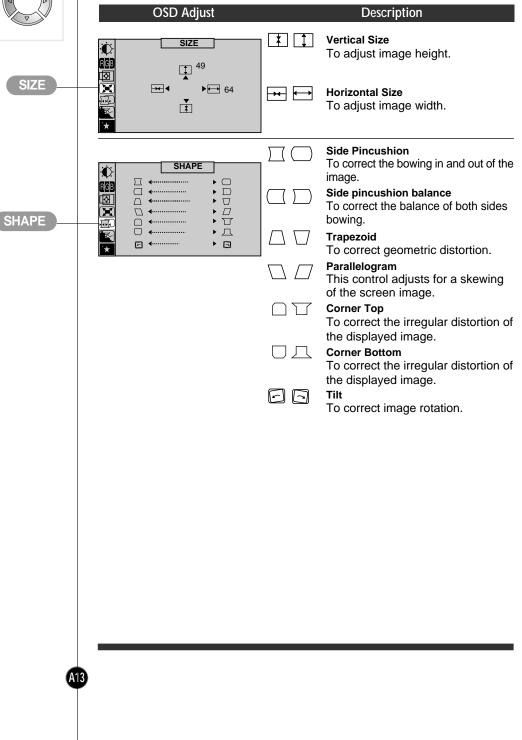

Operation

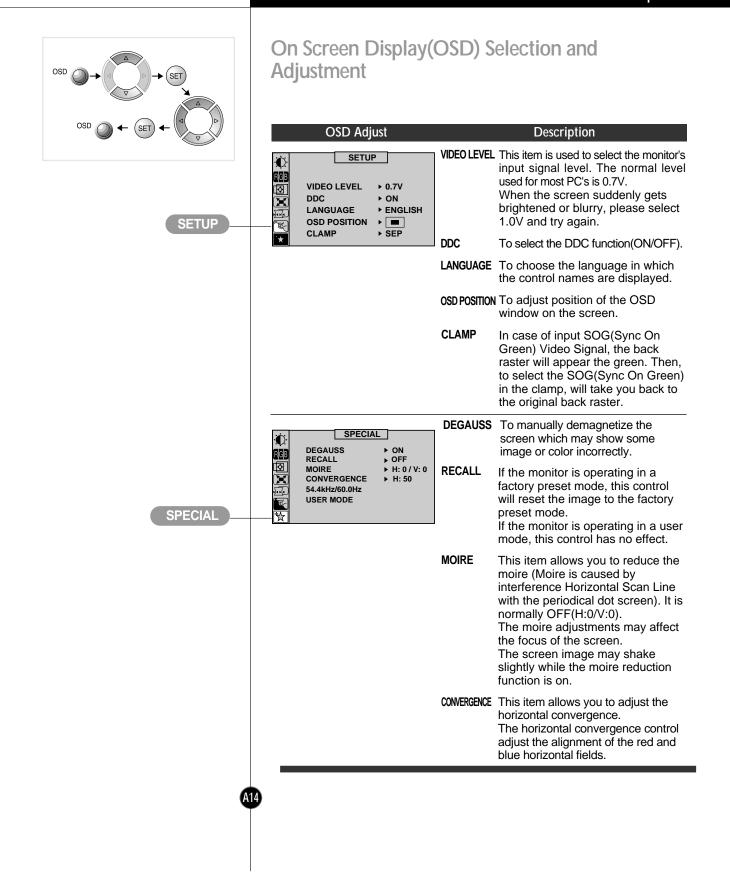

Energy Saving Design

This monitor complies with the EPA's Energy Star program, which is a program designed to have manufacturers of computer equipment build circuitry into their products to reduce power consumption during time of non-use.

This monitor also goes into its energy saving mode if you exceed the monitor's operating limits, such as the maximum resolution of 1600x1200 or the frequency refresh rates of 30-96kHz horizontal or 50-160Hz vertical. When this monitor is used with a Green or EPA Energy Star PC, or a PC with a screen blanking software following the VESA Display Power Management Signalling (DPMS) protocol, this monitor can conserve significant energy by reducing power consumption during periods of nonuse. When the PC goes into the energy saving mode, the monitor will go into a suspended operation state, indicated by the Power LED light changing from a green color to an amber color. After an extended period in the suspended mode, the monitor will then enter a semi-OFF mode to conserve more energy. In the semi-OFF mode or DPMS OFF mode as we call it in our specifications, the Power LED will still show an amber color. When you awaken your PC by hitting a key or moving the mouse, the monitor will also awaken to its normal operating mode, indicated by the green Power LED light. By following these conventions, the power consumption can be reduced to the following levels:

Mode	Hori. Sync	Verti. Sync	Video	Power Consumption	LED Color
Normal(Max.)	On	On	Normal	≤ 150W	Green
Stand-by	Off	On	Off	≤ 8W	Amber
Suspend	On	Off	Off	≤ 8W	Amber
Off	Off	Off	Off	≤ 3W	Amber

Power Consumption

Technical Information

Low Radiation Compliance (MPR II) and DDC (Display Data Channel)

This monitor meets one of the strictest guidelines available today for low radiation emissions, offering the user extra shielding and an antistatic screen coating. These guidelines, set forth by a government agency in Sweden, limit the amount of emission allowed in the Extremely Low Frequency (ELF) and Very Low Frequency (VLF) electromagnetic range.

DDC is a communication channel over which the monitor automatically informs the host system (PC) about its capabilities. This monitor has two DDC function; DDC1 and DDC2B. DDC1 and DDC2B carry out unidirectional communication between the PC and the monitor. Under these situations, the PC sends display data to the monitor but not commands to control the monitor settings.

NOTE

A16

- PC must support DDC functions to do this.
- If your monitor is displaying a mono chrome image or the wrong resolution, select the DDC OFF function.

Low Radiation Compliance (MPR II)

DDC (Display Data Channel)

Video Memory Modes

The monitor has 31 memory locations for display modes, 5 of which are factory preset to popular video modes.

Display Modes (Resolution)	Dis	play Modes	(Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
(Resolution)	1	VESA	640 x 480	43.269	85
	2	VESA	800 x 600	53.674	85
	3	VESA	1024 x 768	68.677	85
	4		1280 x 1024	91.146	85
	5	VESA	1600 x 1200	93.750	75
User Modes	dete one	ects a new of the pres	video mode that	accept new video dat has not been present res the new mode aut ith mode 6.	before or is not
	mo			es and still have more le information in the us	
Recalling Display Modes	reca			node it has seen befor nay have made the las	
	mo	des by pres	sing the Recall b	orce a recall of each of outton. All preset mode onitor senses the inco	es are
	con mat	ning from y	our PC's video ca ne factory mode	nodes is dependent or ard or system. If this s s, the monitor automa	ignal does not

Technical Information

Troubleshooting

Check the following before calling for service.

SELF DIAGNOSTICS message.

The signal cable is not connected, or is loose. Check and secure the connection.

OUT OF FREQUENCY message appears.

 The frequency of the signal from the video card is outside the operating range of the monitor.

*Horizontal Frequency : 30-96kHz

*Vertical Frequency : 50-160Hz

Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

The power LED is illuminated amber.

- Display power management mode.
- There is no active signal coming from the PC.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

The image on the SCREEN is not centered, or too small, or not a rectangle shape.

 Image adjustment not been done yet in the current operating mode. Use the OSD, SET and △▽/< ▷ buttons to set the image to your liking.

The monitor doesn't enter the power saving off mode (Amber).

 Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

NOTE

A18

- If the power indicator(LED) light is blinking amber, may result in abnomal condition of the monitor.
- Then press a power ON/OFF button on the front panel control and call your service technician for more information.

Service

Unplug the monitor from the wall outlet and refer servicing to qualified service personnel when :

- The power cord or plug is damaged or frayed.
- Liquid has been spilled into the monitor.
- The monitor has been exposed to rain or water.
- The monitor does not operate normally following the operating instructions. Adjust only those controls that are covered in the operating instructions. An improper adjustment of other controls may result in damage and often requires extensive work by a qualified technician to restore the monitor to normal operation.
- The monitor has been dropped or the cabinet has been damaged.
- The monitor exhibits a distinct change in performance.
- Snapping or popping from the monitor is continuous or frequent while the monitor is operating. It is normal for some monitors to make occasional sounds when being turned on or off, or when changing video modes.

Do not attempt to service the monitor yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

A19

Technical Information

Specifications

Sync Signal Types

Priority	Туре	H.Sync.	V.Sync.
1	Separate Sync.	H. Sync.	V. Sync.
2	Composite Sync.	H/V. Sync.	N.C
3	Sync. On Green	N.C.	N.C

(N.C : No Connection)

Signal Connector Pin Assignment



Pin	Signal(D-Sub)	Pin	Signal(D-Sub)
1	Red	9	N.C.
2	Green	10	Ground
3	Blue	11	Ground
4	Ground	12	SDA
5	Self-Test	13	H. Sync.
6	Red Ground	14	V. Sync.
7	Green Ground	15	SCL
8	Blue Ground		

NOTE

A20

• No. 5 Pin have to ground on the PC side.

Specifications

19 inch (18.0 inches viewable) FST 100 degree deflection 0.26mm dot pitch ARAS (Anti-Reflective Anti-Static) Coating Horizontal Freq. 30 - 96kHz (Automatic) Vertical Freq. 50 -160Hz (Automatic) Input Form Separate TTL, Positive/Negative Composite TTL, Positive/Negative SOG (Sync On Green) Signal Input 15 pin D-Sub Connector Separate, RGB Analog, 0.7Vp-p/75 ohm, Positive Input Form Resolution(max) 1600 x 1200 @75Hz Width 44.80 cm / 17.6 inches Height 45.79 cm / 18.0 inches Depth 42.07 cm / 16.6 inches AC 100--240V 50/60Hz 2.0A 21.9 kg (48.28 lbs) Net **Operating Condition** Temperature 10 °C to 35 °C Humidity 10 % to 90 % non-Condensing Storage Condition Temperature 0 °C to 60 °C Humidity 5 % to 90 % non-Condensing

NOTE

A21

 Information in this document is subject to change without notice and does not represent a commitment on the part of LG Electronics Inc.

Picture Tube

Sync Input

Video Input

Dimensions (with tilt/swivel stand)

Power Input Weight Environmental Conditions

FCC Compliance Statement	This equipment has been tested and found to comply within the limits of a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.		
	This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.		
	If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment on and off), the user is encouraged to try to correct the interference by using one or more of the following measures:		
	 Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. 		
	Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's (or your) authority to operate the equipment. Only peripherals (digital input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this monitor. Operation with non-certified peripherals is likely to result in interference to radio and TV reception. Only shielded signal cables may be used with this System.		
Canadian DOC Notice	This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations. Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.		
CE Conformity Notice	 Products with the "CE" Marking comply with the EMC Directive(89/336/EEC) and LOW VOLTAGE Directive (73/23/EEC) issued by the Commission of the European Community. Compiance with these directives implies conformity to the following European Norms : EN 55022 ; Radio Frequency Interference EN 50082-1:1992 ; Electromagnetic Immunity EN 60555-2 ; Power Line Harmonics EN 60555-3 ; Voltage Fluctuations EN 60950 ; Product Safety 		

Communications Regulation Information

	Environmental Labelling of Personal Computers
	STATUS ENERGY
Congratulations!	You have just purchased a TCO'99 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and also to the further development of environmentally adapted electronics products.
	This product meets the requirements for the TCO'99 scheme which provides for an international environmental and quality labelling of personal computers. The labelling scheme was developed as a joint effort by the TCO (The Swedish Confederation of Professional Employees), Svenska Naturskyddsforeningen (The Swedish Society for Nature Conservation), Statens Energimyndighet (The Swedish National Energy Administration) and SEMKO AB. The requirements cover a wide range of issues: environment, ergonomics, usability, reduction of electric and magnetic fields, energy consumption and electrical safety.
Why do we have environmentally labelled computers?	In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem, as far as computers and other electronics equipment are concerned, is that environmentally harmful substances are used both in the products and during their manufacture. Since it is not so far possible to satisfactorily recycle the majority of electronics equipment, most of these potentially damaging substances sooner or later enter nature.
	There are also other characteristics of a computer, such as energy consumption levels, that are important from the viewpoints of both the work (internal) and natural (external) environments. Since all methods of electricity generation have a negative effect on the environment (e.g. acidic and climate-influencing emissions, radioactive waste), it is vital to save energy. Electronics equipment in offices is often left running continuously and thereby consumes a lot of energy.

Appendix

What does the environmenal labelling involve?

Environmental requirements

Environmental Labelling of Personal Computers

The environmental demands has been developed by Svenska Naturskyddsforeningen (The Swedish Society for Nature Conservation). These demands impose restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs (freons) and chlorinated solvents, among other things. The product must be prepared for recycling and the manufacturer is obliged to have an environmental policy which must be adhered to in each country where the company implements its operational policy.

The energy requirements include a demand that the computer and/or display, after a certain period of inactivity, shall reduce its power consumption to a lower level in one or more stages. The length of time to reactivate the computer shall be reasonable for the user.

Below you will find a brief summary of the environmental requirements met by this product. The complete environmental criteria document may be ordered from:

TCO Development

SE-114 94 Stockholm, Sweden Fax: +46 8 782 92 07 Email (Internet): development@tco.se Current information regarding TCO'99 approved and labelled products may also be obtained via the Internet, using the address: http://www.tco-info.com/

Flame retardants

Flame retardants are present in printed circuit boards, cables, wires, casings and housings. Their purpose is to prevent, or at least to delay the spread of fire. Up to 30% of the plastic in a computer casing can consist of flame retardant substances. Most flame retardants contain bromine or chloride, and those flame retardants are chemically related to another group of environmental toxins, PCBs. Both the flame retardants containing bromine or chloride and the PCBs are suspected of giving rise to severe health effects, including reproductive damage in fish-eating birds and mammals, due to the bio-accumulative* processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

The relevant TCO'99 demand requires that plastic components weighing more than 25 grams must not contain flame retardants with organically bound bromine or chlorine. Flame retardants are allowed in the printed circuit boards since no substitutes are available.

Environmental Labelling of Personal Computers

Cadmium**

Cadmium is present in rechargeable batteries and in the colour-generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries, the colour-generating layers of display screens and the electrical or electronics components must not contain any cadmium.

Mercury**

Mercury is sometimes found in batteries, relays and switches. It damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries may not contain any mercury. It also demands that mercury is not present in any of the electrical or electronics components associated with the labelled unit. There is however one exception. Mercury is, for the time being, permitted in the back light system of flat panel monitors as there today is no commercially available alternative. TCO aims on removing this exception when a mercury free alternative is available.

CFCs (freons)

The relevant TCO'99 requirement states that neither CFCs nor HCFCs may be used during the manufacture and assembly of the product. CFCs (freons) are sometimes used for washing printed circuit boards. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on earth of ultraviolet light with e.g. increased risks of skin cancer (malignant melanoma) as a consequence.

Lead**

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning. The relevant TCO'99 requirement permits the inclusion of lead since no replacement has yet been developed.

* Bio-accumulative is defined as substances which accumulate within living organisms ** Lead, Cadmium and Mercury are heavy metals which are Bio-accumulative.