User's Guide

W1752T

M ake sure to read the Important Precautions before using the product. Keep the User's Guide(CD) in an accessible place for future reference.

S ee the label attached on the product and give the information to your dealer when you ask for service.



Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential electrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury:

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not drop an object on or apply impact to the product. Do not throw any toys or objects on the product screen.
 - It can cause injury to human, problem to product and damage the display.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- When the display is to be left unattended for an extended period of time, unplug it from the wall outlet.
- In the presence of thunder and lightning, never touch the power cord and signal cable because it can be very dangerous. It can cause electric shock.

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.
- Main power breaker is the power cord and this breaking device must be located at a location where it is easy to operate.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

 Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

On Disposal

- The fluorescent lamp used in this product contains a small amount of mercury.
- Do not dispose of this product with general household waste. Disposal of this product must be carried out in accordance to the regulations of your local authority.

Important Precautions

NOTE

■ THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTRERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE FOLIPMENT.


NOTE

- This epuipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - -Reorient or relocate the receiving antenna.
 - -Increase the separation between the equipment and the receiver.
 - -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -Consult the dealer or an experienced radio/TV technician for help.


 Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

Connecting the stand


- 1. Place the monitor with its front facing downward on a soft cloth.
- 2. Assemble the Stand Body into the product in the correct direction as shown in the picture.

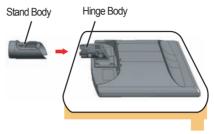

3. Assemble the Stand Base(Front, Rear) into the Stand Body in the correct direction.

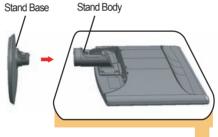

4. Insert the Cable Deco Cover in the Stand Body in the correct direction.

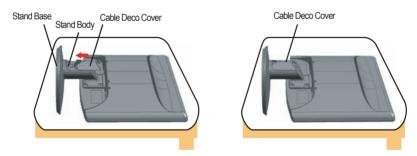

5. Once assembled take the monitor up carefully and face the front side

Important

- This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.
- Do not carry the product upside down holding only the stand base. The product may fall and get damaged or injure your foot.

Disassembling the stand

- 1. Put a cushion or soft cloth on a flat surface.
- 2. Place the monitor face down on the cushion or soft cloth.



3. Slide the Cable Deco Cover out from the stand body.





 $4.\ \mathrm{Press}\ \mathrm{the}\ \mathrm{knob},$ Take off the stand base from stand body





5. Please pull the stand body lightly to separate it from the hinge body.



Important

• Your monitor may differ from the items shown in the picture.

■ Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

20°

Positioning your display

- ${f 1.}$ Adjust the position of the panel in various ways for maximum comfort.
 - Tilt Range: -5°~20°




Ergonomic

It is recommended that in order to maintain an ergonomic and comfortable viewing position, the forward tilt angle of the monitor should not exceed 5 degrees.

Using the Computer

- 1. Make sure to turn off the computer and product. Connect the cable as below sketch map form ① to ②.
- A Connect DVI Cable
- B Connect Dsub Cable (PC)

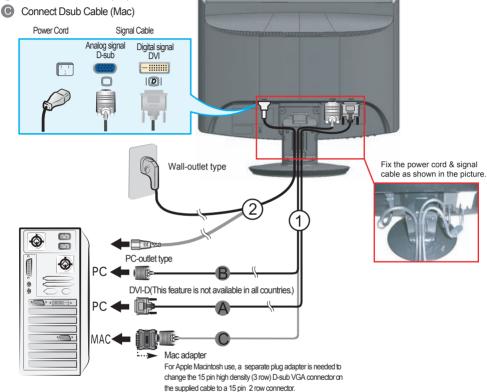

 $2. \ \,$ Insert the Cable Deco Cover in the Stand Body in the correct direction.







 $3. \,\,$ Press (1) button on the front switch panel to turn the power on. When monitor power is turned on, the 'Self Image Setting Function' is executed automatically. (Only Analog Mode)

NOTE

'Self Image Setting Function'? This function provides the user with optimal display settings. When the user connects the monitor for the first time, this function automatically adjusts the display to optimal settings for individual input signals. 'AUTO/SET' Function? When you encounter problems such as blurry screen, blurred letters, screen flicker or tilted screen while using the device or after changing screen resolution, press the AUTO/SET function button to improve resolution.

Front Panel Controls

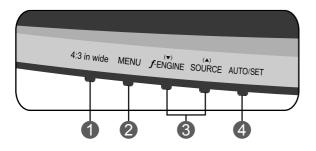



Control

Function




4:3 in Wide

To select the image size of the screen.





* 4:3: Depending on the input video signal ratio, it is automatically changed to an optimized screen it is automatically changed to an optimized screen ratio.



Use this button to enter or exit from the On Screen Display.

OSD LOCKED/UNLOCKED



This function allows you to lock the current control settings, so that these settings are not inadvertently changed. To lock the OSD settings, press and hold the MENU button for several seconds. The message "OSD LOCKED" appears.

You can unlock the OSD settings at any time by pushing the MENU button for several seconds. The message "OSD UNLOCKED" appears.

Control Panel Functions

С	ontrol	Function		
3	▼ ▲ Buttons	Use these buttons to select or adjust functions in the On Screen Display.		
	▼ Button (For more information, refer to page A15.		
	▲ Button (SOURCE Hot key)	Use this button to make either D-Sub or DVI connector active. This feature is used when two computers are connected to the display. The default setting is D-Sub.		
4	AUTO/SET Button	Use this button to selection an icon in the On Screen Display.		
		AUTO IMAGE ADJUSTMENT When adjusting your display settings, always press the AUTO/SET button prior to entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode).		
	PROCESSING AUTO	The best display mode is W1752T: 1440 x 900		
5	Power Button	Use this button to turn the display on or off.		
6	Power Indicator	This Indicator lights up as blue when the display is operating normally(On Mode). If the display is in Sleep Mode (Energy Saving), this indicator color will changes to amber.		

On Screen Display (OSD) Control Adjustment

Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

■ Allow the display to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:



- Press the **MENU Button**, then the main menu of the OSD appears.
- **2** To access a control, use the **▼or ▲ Buttons**. When the icon you want becomes highlighted, press the **AUTO/SET Button**.
- Use the ▼/▲ Buttons to adjust the image to the desired level. Use the AUTO/SET Button to select other sub-menu items.
- Push the **MENU Button** once to return to the main menu to select another function. Push the **MENU Button** twice to exit from the OSD.

The following table indicates all the On Screen Display control, adjustment, and setting menus.


Main menu Sub-menu		Α	D	Reference			
4:3 IN WIDE	3 IN WIDE				To adjust the image size		
	BRIGHTNESS				To adjust the brightness, contrast and gamma of the screen		
PICTURE	CONTRAST						
	GAMMA						
	PRESET	sRGB					
		6500K					
COLOR		9300K			To customize the color of		
COLOR	RED				the screen		
	GREEN						
	BLUE						
	HORIZONTAL						
	VERTICAL				To adjust the position of the		
TRACKING	CLOCK				screen		
	PHASE						
	SHARPNESS						
	LANGUAGE						
	OSD	HORIZONTAL			_ ,		
CETUD	POSITION	VERTICAL			To customize the screen status for a user's operating		
SETUP	WHITE BALANCE				environment		
	POWER INDICATOR						
	FACTORY RESET						
	MOVIE						
FLATRON	INTERNET				To select or customize		
F-ENGINE	USER				desired image settings		
	NORMAL				2.2		
	DEMO						
	• : Adjustable						
A: Analog Input							
D : Digital Input							

NOTE

■ The order of icons may differ depending on the model (A10~A15).

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.


Press the MENU Button, then the main menu of the OSD appears.

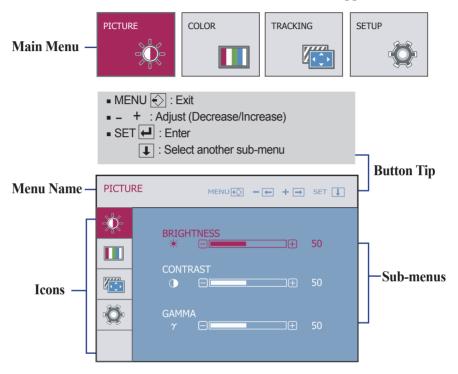

NOTE

■ OSD (On Screen Display) menu languages on the monitor may differ from the manual.

Main menu Sub menu Description **PICTURE **** PICTURE MENU (€) - (+) + (+) SET [] BRIGHTNESS **BRIGHTNESS** To adjust the brightness of the screen. CONTRAST To adjust the contrast of the screen. Ö Set your own gamma value. : -50/0/50 **GAMMA** On the monitor, high gamma values display whitish images and low gamma MENU : Exit values display high contrast images. : Decrease : Increase : Select another sub-menu SET

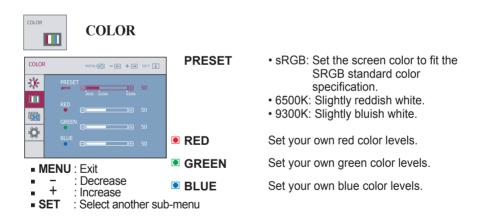

: Select another sub-menu

Main menu Sub menu **Description** TRACKING **POSITION** TRACKING MENU⊕ - ← + → SET ↓ * To move image left and right. HORIZONTAL **1** To move image up and down. **VERTICAL** Ö TRACKING MENU♠ - ← + → SET ↓ ***** CLOCK To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also 1 change. Ö **PHASE** To adjust the focus of the display. ■ MENU : Fxit This item allows you to remove any : Decrease horizontal noise and clear or sharpen : Increase the image of characters.

SHARPNESS To adjust the clearness of the screen.



SETUP





MENU : Exit : Adiust : Adiust

SET : Select another

sub-menu

LANGUAGE

To choose the language in which the

control names are displayed.

OSD POSITION To adjust position of the OSD window

on the screen.

WHITE **BALANCE** If the output of the video card is different the required specifications, the color

level may deteriorate due to video signal distortion. Using this function, the signal level is adjusted to fit into the standard output level of the video card in order to provide the optimal image. Activate this function when white and black colors are present in the screen.

POWER INDICATOR Use this function to set the power indicator on the front side of the monitor

to ON or OFF.

If you set OFF, it will go off.

If you set **ON** at any time, the power indicator will automatically be turned on.

FACTORY RESET

Restore all factory default settings except


"LANGUAGE."

Press the ▼, ▲ button to reset immediately.

If this does not improve the screen image, restore the factory default settings. If necessary, perform the white balance function again. This function will be enabled only when the input signal is an analog signal.

■■ The OSD screen will appear when you touch the f-ENGINE button on the left bottom of the monitor.



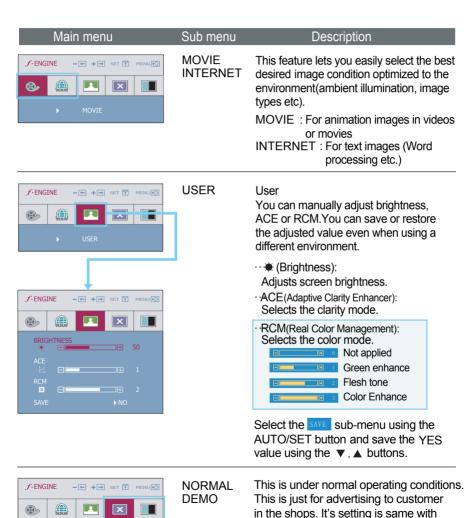

Movie mode and screen is divided by half.

Check the following before calling for service.

No image appears

- Is the power cord of the display connected?
- Check and see if the power cord is connected properly to the power outlet.
- Is the power indicator light on?
- Press the Power button.
- Is the power on and the power indicator blue or green?
- · Adjust the brightness and the contrast.
- Is the power indicator amber?
- If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.
- Try to turn on the PC.
- Do you see an "OUT OF RANGE" message on the screen?
- This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.
- Do you see a "CHECK SIGNAL CABLE" message on the screen?
- This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again.

Do you see a "OSD LOCKED" message on the screen?

- Do you see "OSD LOCKED" when you push MENU button?
- You can secure the current control settings, so that they cannot be inadvertently changed.
 You can unlock the OSD controls at any time by pushing the MENU button for several seconds: the message
 - "OSD UNLOCKED" will appear.

Display image is incorrect

- Display Position is incorrect.
- Press the AUTO button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display.
- On the screen background, vertical bars or stripes are visible.
- Press the AUTO button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in the on screen display.
- Any horizontal noise appearing in any image or characters are not clearly portrayed.
- Press the AUTO button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, decrease the horizontal bars using the PHASE icon in the on screen display.
- Check Control Panel --> Display --> Settings and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color).

Important

- Check Control Panel --> Display --> Settings and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
- Reasons for Recommending Optimal Resolution: The aspect ratio is 16:10. If the input resolution is not 16:10 (for instance, 16:9, 5:4, 4:3), you might encounter problems such as blurred letters, blurry screen, cut-off screen display or tilted screen.
- The setting method can differ by computer and O/S (Operation System), and resolution mentioned above may not be supported by the video card performance. In this case, please ask to the computer or the video card manufacturer.

Display image is incorrect

- The screen color is mono or abnormal.
- Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.
- Make sure the video card is properly inserted in the slot.
- Set the color setting higher than 24 bits (true color) at **Control Panel Settings**.
- The screen blinks.
- Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.

Have you installed the display driver?

- Have you installed the display driver?
- Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: http://www.lge.com.
- Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?
- Make sure to check if the video card supports Plug&Play function.

Specifications

Display	,	n) Flat Panel Act	tive matrix-TFT LCD			
	Anti-Glare coating					
	17 inches viewable					
	0.255*0.255 mm pixel pitch					
Sync Input	Horizontal Freq.	Analog:30 - 83 kHz (Automatic)				
	Mantinal Franci	Digital:30 - 83 kHz (Automatic)				
	Vertical Freq.	56 - 75 Hz (Automatic) Separate TTL, Positive/Negative				
	Input Form	SOG (Sync On Green), Digital				
V. F. d. a. J. barrott	Signal Input	15 pin D-Sub Connector				
Video Input	Signal Input	DVI-D connector (Digital)				
	Input Form	RGB Analog (0.7 Vp-p/ 75 ohm),Digital				
Decelution	Max	Analog:VESA 1440 x 900 @75 Hz				
Resolution	IVIAX					
	Digital:VESA 1440 x 900 @					
	Recommend	VESA 1440 x 900 @60 Hz				
Plug&Play	DDC 2B(Digital),DDC2AB(Analog)					
Power	On Mode	: 23 W(Typ.)			
Consumption	Sleep Mode	≤ 1 W				
	Off Mode	≤ 1 W				
Dimensions	With S	Stand	Without Stand			
&Weight	Width 41.30 cm	/ 16.26 inches	41.30 cm / 16.26 inches			
	Height 36.10 cm	/ 14.21 inches	32.80 cm / 12.91 inches			
	Depth 20.20 cm / 7.95 inches		7.40 cm / 2.91 inches			
	Net	2.80 kg (6.17 lbs)				
Tilt Range	Tilt	-5°~20°				
Power Input	AC 100-240V~ 50/60Hz 0.8A					
Environmental	Operating Conditions					
Conditions	Temperature 10°C to 35 °C					
	Humidity 10 % to 80 % non-Condensing					
	Storage Conditions					
	Temperature -20°C to 60 °C					
	Humidity	5 % to 90 % no	on-Condensing			
Stand Base Attached(), Detached (O)						
Power cord Wall-outlet type or PC-outlet type						

NOTE

• Information in this document is subject to change without notice.

Preset Modes (Resolution)

Dis	play Modes (Resolution)	Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	640 x 350	31.469	70
2	720 x 400	31.468	70
3	640 x 480	31.469	60
4	640 x 480	37.500	75
5	800 x 600	37.879	60
6	800 x 600	46.875	75
7	832 x 624	49.725	75
8	1024 x 768	48.363	60
9	1024 x 768	60.123	75
10	1152 x 870	68.681	75
11	1152 x 900	61.805	65
12	1280 x 1024	63.981	60
13	1280 x 1024	79.976	75
14	1440 x 900	55.500	60
*15	1440 x 900	55.935	60
**16	1440 x 900	70.635	75

*Recommend Mode **Only Analog Mode

Indicator

LED Color
blue
amber
Off

Digitally yours •••••····

