User's Guide



W2253V W2353V

Make sure to read the **Important Precautions** before using the product. Keep the User's Guide(CD) in an accessible place for future reference.

See the label attached on the product and give the information to your dealer when you ask for service.



Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential electrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury :

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not drop an object on or apply impact to the product. Do not throw any toys or objects on the product screen.

It can cause injury to human, problem to product and damage the display.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- When the display is to be left unattended for an extended period of time, unplug it from the wall outlet.
- In the presence of thunder and lightning, never touch the power cord and signal cable because it can be very dangerous. It can cause electric shock.



Important Precautions

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.
- Main power breaker is the power cord and this breaking device must be located at a location where it is easy to operate.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

Leaving a fixed image on the screen for a long time may cause damage to the screen and cause image burn-in. Make sure to use a screen saver on the product. Burn-in and related problems are not covered by the warranty on this product.

On Cleaning

- Unplug the display before cleaning the face of the display screen.Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

On Disposal

- The fluorescent lamp used in this product contains a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.



Important Precautions

NOTE

• THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTRERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE

This epuipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

- -Increase the separation between the equipment and the receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

A3

-Consult the dealer or an experienced radio/TV technician for help.

Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.


Connecting the stand

- 1. Place the monitor with its front facing downward on a soft cloth.
- 2. Assemble the Stand Base(Front, Rear) into the Stand Body in the correct direction.



Stand Base

3. Tie down the base lock to perpendicularity direction.



4. Once assembled take the monitor up carefully and face the front side.

Important

- This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.
- Do not carry the product upside down holding only the stand base. The product may fall and get damaged or injure your foot.



Disassembling the stand

1. Put a cushion or soft cloth on a flat surface.




2. Place the monitor face down on the cushion or soft cloth.



3. Change your lock on the product as it follows and turn it in the arrow direction.



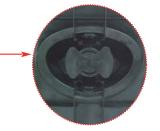

If you can't release the stand base even the locking rib is at a release position, Please push the indicated rib down and retry it.



4. Pull out the stand to remove.










• Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

Positioning your display

- 1. Adjust the position of the panel in various ways for maximum comfort.
 - Tilt Range: -5°~15°

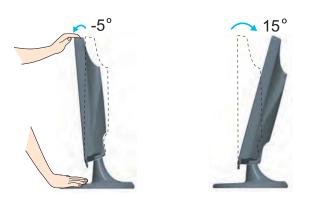


Ergonomic

It is recommended that in order to maintain an ergonomic and comfortable viewing position, the forward tilt angle of the monitor should not exceed 5 degrees.



Using the Computer

1. Make sure to turn off the computer and product. Connect the cable as below sketch map form 0 to 0 .

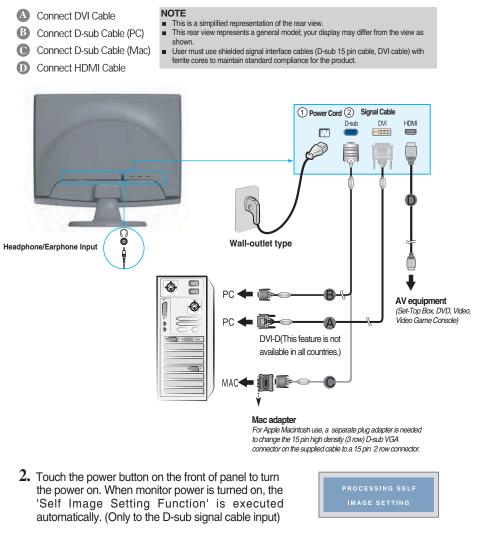


NOTE

'Self Image Setting Function'? This function provides the user with optimal display settings. When the user connects the monitor for the first time, this function automatically adjusts the display to optimal settings for individual input signals.

'AUTO/SET Function'? When you encounter problems such as blurry screen, blurred letters, screen flicker or tilted screen while using the device or after changing screen resolution, touch the AUTO/SET function button to improve resolution.

Control Panel Functions

Front Panel Controls

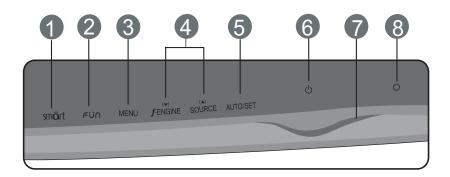

Control	Function
smârt Button	Use this button to enter CINEMA MODE,AUTO BRIGHT,TIME CONTROL,LIVE SENSOR,SMART items,for more information,refer to page A15.
2 FU∩ Button	D-SUB and DVI input, use this button to enter EZ ZOOMING,4:3 IN WIDE, PHOTO EFFECT items. HDMI input, use this button to enter 4:3 IN WIDE, PHOTO EFFECT, VOLUME items. For more information, refer to page A16 -A17.
MENU Button	Use this button to enter or exit from the On Screen Display.
	OSD LOCKED/UNLOCKED
OSD LOCKED	This function allows you to lock the current control settings, so that these settings are not inadvertently changed. To lock the OSD settings, press and hold the MENU button for several seconds. The message " OSD LOCKED " appears.
	You can unlock the OSD settings at any time by pushing the MENU button for several seconds. The message " OSD UNLOCKED " appears.

Control Panel Functions

Control	Function		
4 V A Buttons	Use these buttons to select or adjust functions in the On Screen Display.		
▼ Button (f.ENGINE)	For more information, refer to page A18 -A19.		
Button (SOURCE)	Use this button to make either D-Sub,DVI or HDMI connector active. This feature is used when two computers are connected to the display. The default setting is D-Sub.		
6 AUTO/SET Button	Use this button to select an icon in the On Screen Display.		
PROCESSING AUTO IMAGE ADJUSTMENT	AUTO IMAGE ADJUSTMENT When adjusting your display settings, always press the AUTO/SET button prior to entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode). The best display mode is: W2253V : 1920 x 1080 W2353V : 1920 x 1080		
6 Power Button	Use this button to turn the display on or off.		
Power Indicator	This Indicator lights up as red when the display is operating normally(On Mode). If the display is in Sleep Mode (Energy Saving), this indicator color changes to flicker.		
8 Light sensor	This is lens for light sensor sletect outside luminance, when setting AUTO BRIGHT ON.		

On Screen Display (OSD) Control Adjustment

Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

Allow the display to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:

$MENU \to \blacktriangle \nabla \to AUTO/SET \to \blacktriangle \nabla \to MENU$	
--	--

- Press the MENU Button, then the main menu of the OSD appears.
- 2 To access a control, use the \blacktriangle or \blacktriangledown Buttons. When the icon you want becomes highlighted, press the AUTO/SET Button.
- 3 Use the \blacktriangle / \checkmark Buttons to adjust the image to the desired level. Use the AUTO/SET Button to select other sub-menu items.
- Push the MENU Button once to return to the main menu to select another function. Push the MENU Button twice to exit from the OSD.

The following table indicates all the On Screen Display control, adjustment, and setting menus.

Main menu	Sub-i	menu	R	D	н	Reference
CINEMA MODE			•	•		To focus on the moving picture selected.
AUOT BRIGHT				•		To control screen brightness automatically.
TIME CONTROL			•			To mind user using time.
LIVE SENSOR						To control touch key distance.
SMART			•	•	•	To control smart key menu.
EZ ZOOMING			•	•		To adjust the resolution
4:3 IN WIDE			•	•		To adjust the image size
	NORMAL		•	•		
рното	GAUSSIAN E	BLUR				
EFFECT	SEPIA					To adjust screen color mode
	MONOCHRC	DME				
VOLUME						To adjust the volume
	BRIGHTNES	S				To adjust the brightness,
PICTURE	CONTRAST					contrast and gamma of the
	GAMMA				•	screen
	**BLACK LE					To set offset level
		sRGB				
	PRESET	6500K				
COLOR		9300K			•	To customize the color of the
001011	RED					screen
	GREEN					
	BLUE					
	HORIZONTAL					To adjust the position of the
	VERTICAL					screen
TRACKING	CLOCK					To improve the electity and
	PHASE					To improve the clarity and stability of the screen
	SHARPNESS					
	LANGUAGE					_
	OSD	HORIZONTAL				-
	POSITION	VERTICAL		•		To customize the screen
SETUP	*WHITE BAL					status for a user's operating
	**OVERSCAN					environment
	RTC POWER IND		•	•	•	-
	FACTORY R		•		•	-
	MOVIE		•	•	•	
	*INTERNET					
	**GAME					
FLATRON	USER					To select or customize desired
F-ENGINE	*NORMAL					image settings
	**STANDARD					
	*DEMO				<u> </u>	
**SPORTS						
L		• •	L Adjus	tablo		R : DSUB Input
					יח/ub	VI Input D : DVI Input
			only fo			
		-		_		P


NOTE

The order of icons may differ depending on the model (A10~A19).



You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.

Press the MENU Button, then the main menu of the OSD appears.

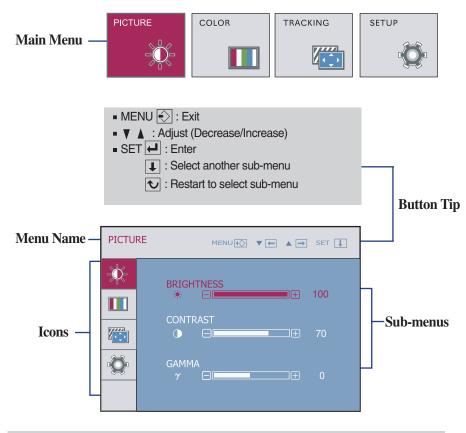

NOTE

OSD (On Screen Display) menu languages on the monitor may differ from the manual.

Main menu	Sub menu	Description
DSUB/DVI input		
	BRIGHTNESS	To adjust the brightness of the screen.
BRIGHTNESS * 100	CONTRAST	To adjust the contrast of the screen.
CONTRAST	GAMMA	Set your own gamma value. : -50/0/50
		On the monitor, high gamma values display whitish images and low gamma values display high contrast images.
HDMI input		
PICTURE MEMORY IN A SET 1 BRIGHTNESS CONTRAST 100	BLACK LEVEL	You can set the offset level. If you select 'HIGH', the screen will be bright and if you select 'LOW', the screen will be dark. (only for HDMI input)
		* Offset? As the criteria for video signal, it is the darkest screen the monitor can show.
 MENU : Exit Y : Decrease A : Increase SET : Select another sub-rease 	menu	
	PRESET	 sRGB: Set the screen color to fit the SRGB standard color
PRESET		specification.
RED 0 50 GREEN 0 50		 6500K: Slightly reddish white. 9300K: Slightly bluish white.
	RED	Set your own red color levels.
• MENU : Exit	GREEN	Set your own green color levels.
 Z: Decrease Increase 	BLUE	Set your own blue color levels.
SET : Select another sub-	menu	

Main menu	Sub menu	Description
TRACKING TRACKING		
TRACKING MENURO VE A SET 1	HORIZONTAL	To move image left and right.
HORIZONTAL 50	VERTICAL	To move image up and down.
TRACKING PERMISS PERMISS PERMISS SO WHASE PHASE 90 90 90 90	CLOCK	To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.
SHARPMESS 6 6 6	PHASE	To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.
 ▼ : Decrease ▲ : Increase SET : Select another sub-m 	SHARPNESS nenu	To adjust the clearness of the screen.

Main menu	Sub menu	Description
SETUP SETUP	LANGUAGE	To choose the language in which the control names are displayed.
SETUP MEMORY VE A SET []	OSD POSITION	To adjust position of the OSD window on the screen.
HORIZOVITAL 50 VENTCAL 0 0 0 0 0 0 0 0 0 0 0 0 0	WHITE BALANCE	If the output of the video card is different the required specifications, the color level may deteriorate due to video
SETUP MENUES VIEL AN SET Q		signal distortion. Using this function, the signal level is adjusted to fit into the
WHITE BALANCE > NO R T C > ON POWER INDICATOR > ON FACTORY RESET > NO DSUB 128 × 1024 GOHZ		standard output level of the video card in order to provide the optimal image. Activate this function when white and black colors are present in the screen. (only for DSUB/DVI input)
HDMI input	OVERSCAN	To select the range of output image for DTV timing in HDMI input. (only for HDMI input)
Image: wide of the second		Recommend overscan function to turn on when connect AV equipment.
POWER INDICATOR ON FACTORY RESET NO HDMI 1280 x 1024 GOHz	RTC	If you set ON , you enable the Response Time Control function.
 MENU : Exit ▼ : Adjust 		If you set OFF , you disable the Response Time Control function.
 A : Adjust SET : Select another sub 	D-menu POWER INDICATOR	Use this function to set the power indicator on the front side of the monitor to ON or OFF . If you set OFF , it will go off. If you set ON at any time, the power
		indicator will automatically be turned on.
	FACTORY RESET	Restore all factory default settings except "LANGUAGE."
		Press the A , V buttons to reset immediately.
If this does not improve the	screen image, restor	e the factory default settings.


It this does not improve the screen image, restore the factory default settings. If necessary, perform the white balance function again. This function will be enabled only when the input signal is an analog signal.

- AUTO BRIGHT LIVE SMART TIME CONTROL CINEMA MODE SENSOR ►OFF ►ON ► OFF ►USER ~~~ AUTO Main menu Sub menu Description **CINEMA MODE** It focuses better on the moving picture in CINEMA MODE selected area. *This function is operated only if the fortmanager is installed to pc. *Only for DSUB and DVI input. AUTO BRIGHT If select on, it automatically controls the **AUTO BRIGHT** brightness of display to best suit the surrounding working environment, providing AUTO the optimal viewing condition and maximized user convenience. If select off,auto brightness is off.
- The OSD screen will appear when you touch the smart button on the right bottom of the monitor.

	TIME CONTROL	Remind user using time by showing alarm OSD and flickering power LED. Selection:OFF/1HOUR/2HOUR
LIVE SENSOR ON	LIVE SENSOR	This function turns on the button LED for pushing comfortable. When detect the presence of users hand before touch it.
SMART	SMART	To adjust AUTO BRIGHT,TIME CONTROL, LIVE SENSOR. If select ON it turns on AUTO BRIGHT,LIVE SENSOR and makes time CONTROL to 1HOUR. If select off, it turns off those. If set AUTO BRIGHT,TIME CONTROL,LIVE SENSER directly,this setting is changed to USER automatically.

Remind user using time by showing alarm

The OSD screen will appear when you touch the **FUN** button on the left bottom of the monitor.

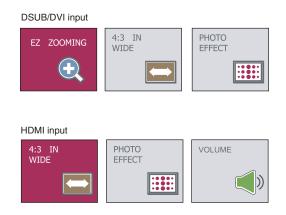

Main menu	Sub menu	Description
	EZ ZOOMING	EZ Zoom lowers the display's resolution in single-step increments. Depressing the button once lowers the resolution by one step; while a second button-press returns the resolution to the original display settings.
		*This function is operated only if the forteManager is installed to PC. *ForteManager is not supported in HDMI input.
4:3 IN WIDE	4:3 IN WIDE	To select the image size of the screen.
		WIDE 4:3
		• WIDE : Switch to full screen mode according to input image signal.
		• 4 : 3 : Change the image signal ratio into 4:3.



Sub menu Main menu ΡΗΟΤΟ EFFECT

PHOTO EFFECT

To select the color of the screen. HOTO EFFECT



• NORMAL :

The PhotoEffect function is disabled.

• GAUSSIAN BLUR :

This option is to add the effect to the screen that the dark and sharp image becomes brighter and more blurred.

Description

• SEPIA :

This option changes the screen to be Sepia tone. The Sepia tone is brown color tone.

• MONOCHROME :

This option changed the screen to be Gray tone. The screen image is displayed with just white, black, gray colors.



NORMAL

GAUSSIAN BLUR SEPIA MONOCHROME

*Photo Effect feature may not work in HDMI Input. (Photo effect operate at DSUB format)

	VOLUME	To adjust the volume of headphone/Earphone. (only for HDMI input)
📢 VOLUME 🔻 🗲	A - SET 🅀 MENU 🚱	
	£ 50	
		A17

the monitor.		
Menu Name —	Ĵ . ENGINE	
Icons —	∞	
Sub-menu Name —	•	MOVIE
Main menu S	Sub menu	Description
•••••••••••••••••••••••••••••	MOVIE	Select this when you are watching a video or movie.
DSUB/DVI input	INTERNET	Select this when you are working on the document (Word etc.)
HDMI input		Select this when you are playing a game.
DSUB/DVI input	NORMAL	Select this when you want to use the product in the most general using environment.
HDMI input	STANDARD	Select this when you want to use the original standard video. * In the General (Standard) mode, the <i>f</i> :ENGINE is turned off.

The OSD screen will appear when you touch the *f*engine button on the left bottom of the monitor.

Main menu	Sub menu	Description
DSUB/DVI input		
✓•ENGINE MENUE ✓ ■ <th< td=""><td>DEMO</td><td>This is used for advertising in the store. The screen will be divided to show the standard mode on the left and video mode on the right so that the consumers can check the difference after applying the video mode.</td></th<>	DEMO	This is used for advertising in the store. The screen will be divided to show the standard mode on the left and video mode on the right so that the consumers can check the difference after applying the video mode.
FENGINE MENU SET Image: Set of the set of	SPORTS	Select this when you watching general sports.
SERUE MERUE TO SER	USER	You can manually adjust brightness, ACE or RCM (only for DSUB/DVI input), HUE or SATURATION (only for HDMI input). You can save or restore the adjusted value ever when using a different environment.
DSUB/DVI input		··· ACE(Adaptive Clarity Enhancer) : Selects the clarity mode.
		■ Not applied
		Weak clarity and luminosity contrast. Strong clarity and luminosity contrast.
RCM 2		····RCM(Real Color Management) : Selects the color mode.
	т	Image: Second
HUE Image: Constraint on the second sec	>	HUE : Adjust the screen hue. SATURATION : Adjust the screen saturation.
MENU : Exit MENU : Decrease Action Crease AUTO/SET : Select another s	sub-menu	

Troubleshooting

Check the following before calling for service.

No image appears		
Is the power cord of the display connected?	 Check and see if the power cord is connected properly to the power outlet. 	
Is the power indicator light on?	Press the Power button.	
Is the power indicator flickering?	 If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen. Try to turn on the PC. 	
Do you see an "OUT OF RANGE" message on the screen?	• This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.	
Do you see a "CHECK SIGNAL CABLE" message on the screen?	 This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again. 	

Do you see a "OSD LOCKED" message on the screen?		
Do you see "OSD LOCKED" when you push MENU button?	• You can secure the current control settings, so that they cannot be inadvertently changed. You can unlock the OSD controls at any time by pushing the MENU button for several seconds: the message " OSD UNLOCKED " will appear.	

Troubleshooting

Display image is incorrect		
 Display Position is incorrect. 	 Press the AUTO/SET button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display. 	
 On the screen background, vertical bars or stripes are visible. 	• Press the AUTO/SET button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in the on screen display.	
Any horizontal noise appearing in any image or characters are not clearly portrayed.	 Press the AUTO/SET button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, decrease the horizontal bars using the PHASE icon in the on screen display. Check Control Panel> Display> Settings and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color). 	

Important

- Check Control Panel --> Display --> Settings and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
- Reasons for Recommending Optimal Resolution : The aspect ratio is 16:9. If the input resolution is not 16:9 (for instance, 16:10, 5:4, 4:3), you might encounter problems such as blurred letters, blurry screen, cut-off screen display or tilted screen.
- The setting method can differ by computer and O/S (Operation System), and resolution mentioned above may not be supported by the video card performance. In this case, please ask to the computer or the video card manufacturer.



Troubleshooting

Display image is incorrect		
 The screen color is mono or abnormal. 	 Check if the signal cable is properly connected and use a screwdriver to fasten if necessary. Make sure the video card is properly inserted in the slot. Set the color setting higher than 24 bits (true color) at Control Panel - Settings. 	
The screen blinks.	 Check if the screen is set to interlace mode and if yes, change it to the recommend resolution. 	

Have you installed the display driver?		
Have you installed the display driver?	• Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: http://www.lge.com.	
 Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message? 	 Make sure to check if the video card supports Plug&Play function. 	

Specifications

W2253V

Anti-Glare coating Visible diagonal size: 54.6 cm 0.248*0.248 mm pixel pitch Sync Input Horizontal Freq. 30 - 83 kHz (Automatic) Vertical Freq. Analog,Digital : 56 - 75 Hz (Automatic) HDMI : 56 - 61 Hz (Automatic) Input Form Separate TTL, Positive/Negative SOG (Sync On Green) Digital (HDCP)				
Sync Input Horizontal Freq. 30 - 83 kHz (Automatic) Vertical Freq. Analog.Digital : 56 - 75 Hz (Automatic) Input Form Separate TTL, Positive/Negative SOG (Sync On Green) Digital (HDCP) Video Input Signal Input 15 pin D-Sub Connector Input Form Analog (0.7 Vp-p/ 75 ohm), Digital, HDMI Resolution Max Analog (0.7 Vp-p/ 75 ohm), Digital, HDMI Resolution Max Analog (0.7 Vp-p/ 75 ohm), Digital, HDMI Recommend VESA 1920 x 1080 @60 Hz Digital : VESA 1920 x 1080 @60 Hz Plug&Play DDC 2B (Digital,HDMI), DDC 2AB (Analog) Power 00n Mode 1 W On Mode : 40 W(Typ.) Sleep Mode < 1 W Sleep Mode < 1 W Sleep Mode < 1 W Dimensions Width 52.25 cm / 20.57 inches 52.25 cm / 20.57 inches 33.66 cm / 13.25 inches Net 4.00 kg (8.82 lbs) Stand Base Net 4.00 kg (8.82 lbs) Tilt -5*-15* Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature -20°C to 60 °C Humidity Humidity 5 %	Display	Anti-Glare coating Visible diagonal size	ze: 54.6 cm	ctive matrix-TFT LCD
Digital (HDCP) Video Input Signal Input 15 pin D-Sub Connector DVI - D connector (Digital) 19 pin HDMI Connector Input Form Analog (0.7 Vp-p/ 75 ohm), Digital, HDMI Resolution Max Analog : VESA 1920 x 1080 @60 Hz Digital : VESA 1920 x 1080 @60 Hz Plug&Play DDC 2B (Digital,HDMI), DDC 2AB (Analog) Power On Mode : 40 W(Typ.) Consumption Sleep Mode < 1 W Off Mode < 1 W Off Mode 1 W Dimensions Width 52.25 cm / 20.57 inches Height 39.63 cm / 15.60 inches Depth 19.80 cm / 7.79 inches 52.25 cm / 20.57 inches 6.05 cm / 2.38 inches Net 4.00 kg (8.82 lbs) Tilt Range Tilt Tilt Range Tilt -5° ~15° Power Input AC 100-240V~ 50/60Hz 1.0A Uperating Conditions Temperature 10 °C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature -20 °C to 60 °C Humidity 5 % to 90 % non-Condensing Stand Base Attached(), Detached (O) Temperature 5 % to 90 % non-Condensing Stand Base Attached(), Detached (O) Vall-outlet type or PC-outlet type Val	Sync Input	Horizontal Freq. Vertical Freq.	30 - 83 kHz (A Analog,Digital HDMI : 56 - 61 Separate TTL,	: 56 - 75 Hz (Automatic) Hz (Automatic) Positive/Negative
$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$				
Input Form Analog (0.7 Vp-p/ 75 ohm), Digital, HDMI Resolution Max Analog : VESA 1920 x 1080 @60 Hz Digital : VESA 1920 x 1080 @60 Hz Recommend VESA 1920 x 1080 @60 Hz Plug&Play DDC 2B (Digital,HDMI), DDC 2AB (Analog) Power On Mode : 40 W(Typ.) Consumption Sleep Mode ≤ 1 W Dimensions With Stand Without Stand &Weight Width 52.25 cm / 20.57 inches Height 52.25 cm / 20.57 inches 33.66 cm / 13.25 inches 0epth Net 4.00 kg (8.82 lbs) 33.66 cm / 13.25 inches 0.50 cm / 7.79 inches 6.05 cm / 2.38 inches Net 4.00 kg (8.82 lbs) Tilt -5°~15° Power Input AC 100-240V~ 50/60Hz 1.0A Operating Conditions Temperature 10 % to 80 % non-Condensing Storage Conditions Temperature -20°C to 60 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature -20°C to 60 °C 1 Humidity 5 % to 90 % non-Condensing Storage Conditions 1 Temperature -20°C to 60 °C 1 1 5 % to 90 % non-Condensing Stand Base Attached(), Detached (O) <	Video Input	Signal Input	15 pin D-Sub C DVI - D connec	Connector ctor (Digital)
Digital : VESA 1920 x 1080 @60 HzRecommendVESA 1920 x 1080 @60 HzPlug&PlayDDC 2B (Digital,HDMI), DDC 2AB (Analog)Power ConsumptionOn Mode: 40 W(Typ.)Sleep Mode< 1 W		Input Form		
Plug&Play DDC 2B (Digital,HDMI), DDC 2AB (Analog) Power On Mode : 40 W(Typ.) Consumption Sleep Mode ≤ 1 W Dimensions With Mode ≤ 1 W Width 52.25 cm / 20.57 inches 52.25 cm / 20.57 inches Height 39.63 cm / 15.60 inches 33.66 cm / 13.25 inches Depth 19.80 cm / 7.79 inches 6.05 cm / 2.38 inches Net 4.00 kg (8.82 lbs) Tilt Range Tilt -5°~15° Power Input AC 100-240V~ 50/60Hz 1.0A Environmental Conditions Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature Temperature -20°C to 60 °C Humidity 5 % to 90 % non-Condensing Stand Base Attached(), Detached (O) Signal cable Attached(), Detached (O) Power cord Wall-outlet type or PC-outlet type	Resolution	Max	•	
Power ConsumptionOn Mode:40 W(Typ.) Sleep ModeSleep Mode \leq 1 WDimensions &WeightWith StandWithout StandWidth52.25 cm / 20.57 inches Height52.25 cm / 20.57 inches 33.66 cm / 13.25 inches 6.05 cm / 2.38 inchesTilt RangeTilt-5°~15°Power InputAC 100-240V~ 50/60Hz 1.0AEnvironmental Conditions TemperatureOperating Conditions TemperatureStorage Conditions Temperature-20°C to 60 °C HumidityStand BaseAttached(), Detached (O)Stand BaseAttached(), Detached (O)Power cordWall-outlet type or PC-outlet type				
ConsumptionSleep Mode Off Mode \leq 1 WDimensions &WeightWith StandWithout StandWidth $52.25 \text{ cm} / 20.57 \text{ inches}$ Height $52.25 \text{ cm} / 20.57 \text{ inches}$ 	Plug&Play	DDC 2B (Digital,HI	DMI), DDC 2AB	(Analog)
Width 52.25 cm / 20.57 inches Height 39.63 cm / 15.60 inches Depth 19.80 cm / 7.79 inches Stand Base Attached(), Detached (O) Stand Base Attached(), Detached (O) Signal cable Attached(), Detached (O) Wailtoutlet type or PC-outlet type		Sleep Mode	≤ 1 W)
Height39.63 cm / 15.60 inches Depth33.66 cm / 13.25 inches 6.05 cm / 2.38 inchesDepth19.80 cm / 7.79 inches6.05 cm / 2.38 inchesNet4.00 kg (8.82 lbs)Tilt RangeTilt-5°~15°Power InputAC 100-240V~ 50/60Hz 1.0AEnvironmental Conditions TemperatureOperating Conditions TemperatureStorage Conditions Temperature-20°C to 35 °C HumidityStorage Conditions Temperature-20°C to 60 °C HumidityStorage Conditions Temperature-20°C to 60 °C HumidityStand BaseAttached(), Detached (O)Signal cableAttached(), Detached (O)Power cordWall-outlet type or PC-outlet type	Dimensions	With S	stand	Without Stand
Tilt -5°~15° Power Input AC 100-240V~ 50/60Hz 1.0A Environmental Conditions Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature Temperature -20°C to 60 °C Humidity 5 % to 90 % non-Condensing Stand Base Attached(), Detached (O) Signal cable Attached(), Detached (O) Power cord Wall-outlet type or PC-outlet type		Height 39.63 cm	/ 15.60 inches	33.66 cm / 13.25 inches
Power Input AC 100-240V~ 50/60Hz 1.0A Environmental Conditions Operating Conditions Temperature 10°C to 35°C Humidity 10% to 80% non-Condensing Storage Conditions Temperature Temperature -20°C to 60°C Humidity 5% to 90% non-Condensing Stand Base Attached(), Detached (O) Signal cable Attached(), Detached (O) Power cord Wall-outlet type or PC-outlet type		Net	4.00 kg (8.82 ll	os)
Environmental Conditions Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature -20°C to 60 °C Humidity 5 % to 90 % non-Condensing Stand Base Attached(), Detached (O) Signal cable Attached(), Detached (O) Power cord Wall-outlet type or PC-outlet type	Tilt Range	Tilt	-5°~15°	
Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature -20°C to 60 °C Humidity 5 % to 90 % non-Condensing Stand Base Attached(), Detached (O) Signal cable Attached(), Detached (O) Power cord Wall-outlet type or PC-outlet type	Power Input	AC 100-240V~ 50/	60Hz 1.0A	
Stand Base Attached(), Detached (O) Signal cable Attached(), Detached (O) Power cord Wall-outlet type or PC-outlet type	Environmental Conditions	Temperature Humidity Storage Conditions Temperature	10°C to 35 °C 10 % to 80 % r -20°C to 60 °C	
Signal cable Attached(), Detached (O) Power cord Wall-outlet type or PC-outlet type	Stand Base			
Power cord Wall-outlet type or PC-outlet type				
	-	(),	()	

NOTE

Information in this document is subject to change without notice.

Specifications

W2353V

Display	23.0 inches (58.4 c Anti-Glare coating Visible diagonal siz 0.266*0.266 mm pi	ze: 58.4 cm	ctive matrix-TFT LCD
Sync Input	Horizontal Freq. Vertical Freq. Input Form	HDMI : 56 - 61	H : 56 - 75 Hz (Automatic) Hz (Automatic) Positive/Negative Green)
Video Input	Signal Input	15 pin D-Sub C DVI - D connec 19 pin HDMI C	Connector ctor (Digital)
Resolution	Max	Analog : VESA	1920 x 1080 @60 Hz 1920 x 1080 @60 Hz
Plug&Play	DDC 2B (Digital,HI		
Power Consumption	On Mode Sleep Mode Off Mode	: 42 W(Typ. ≤ 1 W ≤ 1 W	
Dimensions &Weight	Height 41.75 cm	itand / 21.98 inches / 16.43 inches / 7.79 inches 4.5 kg (9.92 lbs	Without Stand 55.85 cm / 21.98 inches 36.30 cm / 14.29 inches 7.53 cm / 2.96 inches s)
Tilt Range	Tilt	-5°~15°	,
Power Input	AC 100-240V~ 50/		
Environmental Conditions	Operating Conditio Temperature Humidity Storage Conditions Temperature Humidity	10°C to 35 °C 10 % to 80 % r	non-Condensing on-Condensing
Stand Base	Attached(), Deta	ached (O)	
Signal cable	Attached(), Deta	ached (O)	
Power cord	Wall-outlet type or	PC-outlet type	
NOTE			

NOTE

Information in this document is subject to change without notice.

Specifications

Preset Modes (Resolution)

DSUB/DVI Timing

Displ	ay Modes (Resolution)	Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	720 x 400	31.468	70
2	640 x 480	31.469	60
3	640 x 480	37.500	75
4	800 x 600	37.879	60
5	800 x 600	46.875	75
6	1024 x 768	48.363	60
7	1024 x 768	60.123	75
8	1152 x 864	67.500	75
9	1280 x 1024	63.981	60
10	1280 x 1024	79.976	75
11	1680 x 1050	65.290	60
*12	1920 x 1080	67.500	60

* Recommend Mode

HDMI Timing

Display	Modes (Resolution)	Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	480P	31.50	60
2	576P	31.25	50
3	720P	37.50	50
4	720P	45.00	60
5	1080i	28.12	50
6	1080i	33.75	60
7	1080P	56.25	50
8	1080P	67.50	60

Indicator

MODE	LED Color
On Mode	Red
Sleep Mode	Flicker
Off Mode	Off

Digitally yours

