

Users Manual

Contents

1. Introduction
2. Product Package Contents
3. Key Layout
4. Charging the Battery
5. Main features
 - A. Talking function
 - B. Messages
 - C. Contact / Phone book
 - D. Tools
 - E. Notes
 - F. Applications
 - G. Settings
 - H. Checking ID Number

1 - Introduction


This product is a walkie-talkie with features of text messages transferring and data bank. It enables you to converse with other users of this type of Walkie-talkies, which is similar to chat on phone. You can communicate with them by messages transferring through it without any charge.

2 – Product Package Contents

2 Walkie-talkies and 1 instruction manual




3 – Key Layout

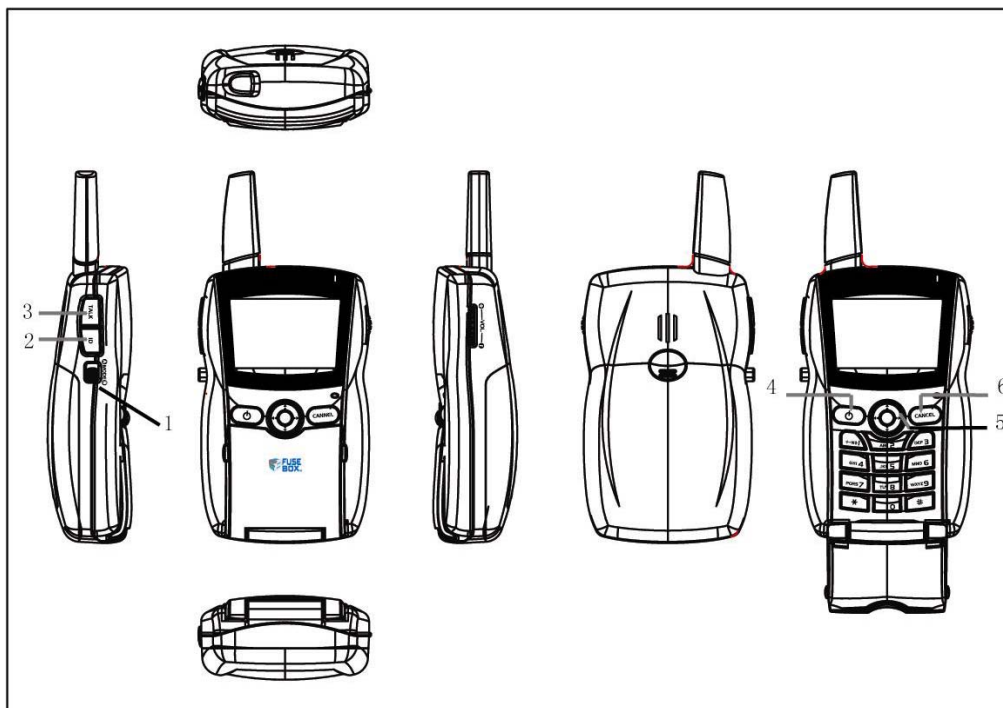


Key	Functions	Remark
1 Talk/SMS switch	Slide switch, which allows you to select talking mode and SMS mode. If mode A is selected, you	Mode A is talking mode Mode B is SMS mode

	can receive the voice transmitted by other Walkie-talkies tuned to the same channel. If model B is selected, you can use SMS transmission to communicate with other users	
2 ID	Press it to see your Walkie-talkie ID	The ID can be showed when mode B is activated.
3 Talk	Press to transmit	This key can work when mode A is activated.
4 Power	Press to switch on/off the Walkie-talkie	This key can work provided that mode B is activated.
5 5-directions key	Moves cursor to select menu items, etc Press the middle "OK" key to confirm your selection	
6 Cancel	Cancel	

Keypad

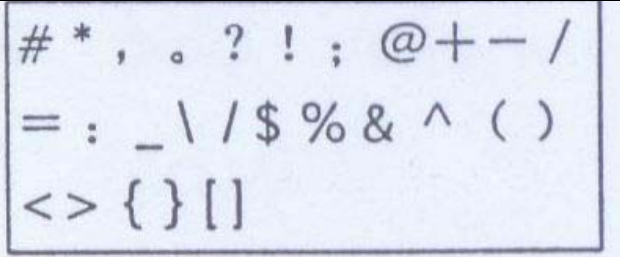* / Shift key	Switches input methods, e.g.: ABC, abc
#	 <p>In SMS mode, launches symbol screen.</p>

4 – Charging the Battery

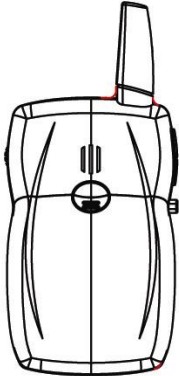	<ol style="list-style-type: none"> 1 Open the battery door 2 Insert 4 AAA batteries into the Walkie-talkie 3 – Close the battery door
---	--


5 - Main features

A - Talking function

Function	Step
Talk through the Walkie-talkie	Press Talk/SMS switch until the screen shows "Talk / Listen" Press "Talk"
Listen	Press Talk/SMS key until the screen shows "Talk / Listen"
Volume	Press → to increase volume Press ← to reduce volume Or adjust the volume through the rotary volume

B - Messages

Press Talk/SMS key until the screen shows the following diagram

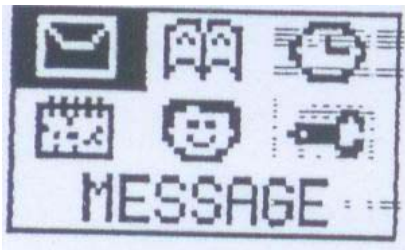

Press "OK"



Fig 1



Fig 2


Fig 3

Fig 4

Fig 5

Function	Steps
Create messages to the Walkie-talkie which ID has been saved on the contact list	Move the cursor to "NEW" by pressing ↓ shown as Fig 2 Press "OK" Press the message you want After you complete your message, press "OK". The screen will change to Fig 4 Move the cursor to "CONTACT" by pressing ↑ or ↓ shown as Fig 4 Press "OK" Select the ID by moving the cursor Press "OK" The screen will change to a new menu shown as Fig 5

	<p>Select "SAVE" if you want to save the message only. Select "SAVE SENT" if you want to save the message and send it out. Select "SENT ONLY" if you want to send the message out and do not want to save it.</p>
<p>Create messages to the Walkie-talkie which ID has not been saved</p>	<p>Move the cursor to "NEW" by pressing ↓ shown as Fig 2 Press "OK" Press the message you want After you complete your message, press "OK". The screen will change to Fig 4 Move the cursor to "NEW NUMBER" by pressing ↑ or ↓ Press "OK" Input ID number Press "OK" The screen will change to a new menu shown as Fig 5 Select "SAVE" if you want to save the message only. Select "SAVE SENT" if you want to save the message and send it out. Select "SENT ONLY" if you want to send the message out and do not want to save it</p>
<p>Check inbox</p>	<p>Move the cursor to "INBOX" in the menu shown as Fig 1 The screen will show MESSAGE 10 FROM XXXXXXXX Move the cursor to the messages you want to read by pressing ↑ or ↓ Press "OK" to read the message Press → change to a new screen shown as Fig 6 Move the cursor to "SAVE " and press "OK" if you want to save the message Move the cursor to "DELETE" and press "OK" if you want to delete the message Move the cursor to "FORWARD" and press "OK" if you want to send forward the message to others Remark: "1" means the message number Max 8 messages can be saved The remark  means the message was saved. The remark  means the message was not saved. "XXXXXXXX" means the message was sent from "XXXXXXXX" If you have 8 messages have been stored, the "MEMORYFULL" shows on the screen if you receive a new message.</p>

	 <p style="text-align: right;">Fig 6</p>
Check Outbox	Similar to the steps in check inbox
Receiving messages	The Walkie-talkie can receive messages in any mode

Remark: you can save 8 messages in the inbox folder and can save 8 messages in the sent folder.

C - Contact / Phone book

Press Talk/SMS key, ← and → until the screen shows the menu as Fig 7



Fig 7

ADD
PHONE BOOK

Fig 8


ALICE
XXXX
XXXX
XXXX

Fig 9

VIEW
EDIT
DELETE

Fig 10

Press “OK”

Function	Steps
Search	<p>Move the cursor to “PHONE BOOK” as shown on Fig 8</p> <p>Press “OK”</p> <p>A new menu Fig 9 is shown</p> <p>Move the cursor to the name you want to search by pressing ↑ or ↓</p> <p>Press “OK”</p> <p>A new menu Fig 10 is shown</p> <p>Move the cursor to “VIEW” and press “OK” if you want to see his/her record</p> <p>Move the cursor to “EDIT” and press “OK” if you want to edit his/her record</p> <p>Move the cursor to “DELETE” and press “OK” if you want to delete his/her record</p>
Save your friends' record	<p>Move the cursor to “ADD” as shown on Fig 8</p> <p>Press “OK”</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; width: 150px;">NEW NUMBER</div> <div style="border: 1px solid black; padding: 5px; width: 150px;">NAME</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">  <p>BIRTHDAY</p> </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> Fig 11 Fig 12 Fig 13 </div> <p>A new menu Fig 11 is shown</p> <p>Input your friend's ID</p> <p>Press “OK”</p> <p>A new menu Fig 12 is shown</p> <p>Input your friend's name</p> <p>Press “OK”</p> <p>A new menu Fig 13 is shown</p> <p>Move the cursor to “BIRTHDAY” and press “OK” if you want to input your friend's birthday</p>

	<p>Move the cursor to “PHONE” and press “OK” if you want to input your friend’s cell phone number</p> <p>Move the cursor to “@” and press “OK” if you want to input your friend’s email address</p> <p>Move the cursor to “HOUSE” and press “OK” if you want to input your friend’s home address</p>
--	--

D - Tools

Press Talk/SMS key, ← and → until the screen shows the menu as Fig 14

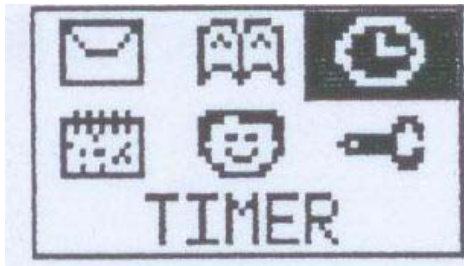


Fig 14

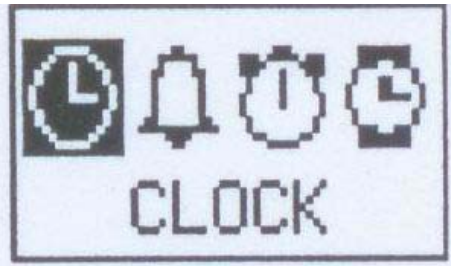


Fig 15

Press “OK”
A new menu Fig 15 is shown.

Function	Steps
Time	Move the cursor to “CLOCK” and press ”OK” The screen shows what time it is
Alarm setting	Move the cursor to “ALARM” and press “OK” Input the alarm you want
Countdown	Move the cursor to “COUNT” and press “OK” Adjust the countdown timer
Stopwatch	Move the cursor to “STOPWATCH” and press “OK” Press “OK” for start counting

E - Notes

Press Talk/SMS key, ← and → until the screen shows the menu as Fig 16

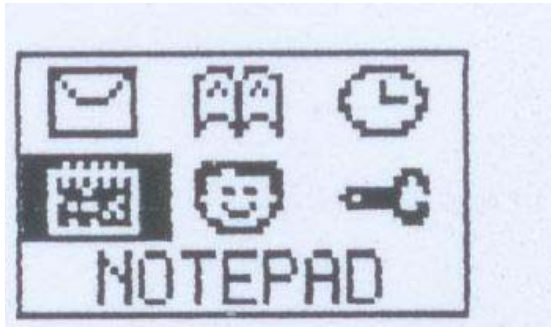


Fig 16

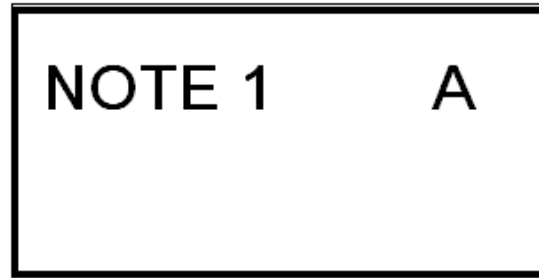


Fig 17

Press "OK"

A new menu Fig 17 is shown

Input the notes you want to save

Press →

A new menu Fig 18 is shown

Move the cursor to "SAVE" and press "OK" if you want to save the notes

Move the cursor to "DELETE" and press "OK" if you do not want to save it



Fig 18

Press "OK" to jump to next fields

Remark: you can save max 8 notes.

F - Applications

Press Talk/SMS key, ← and → until the screen shows the menu as Fig 19

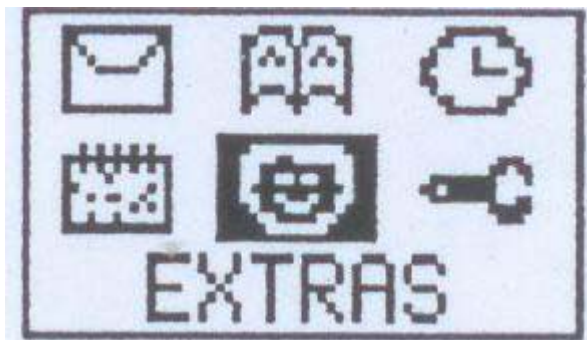


Fig 19

Press "OK"

Function	Steps
To do list	<p>Move the cursor to the date that you want to add records by pressing ↑ and ↓</p> <p>Press →, ↑, ↓ and "OK" to select "edit" or "delete" features.</p> <p>Move the cursor to "Edit" and press "OK" to enter the alarm subject.</p> <p>Move the cursor to "Delete" and press "OK" to delete your current subject.</p>

G - Settings

Press Talk/SMS key, ← and → until the screen shows the menu as Fig 20

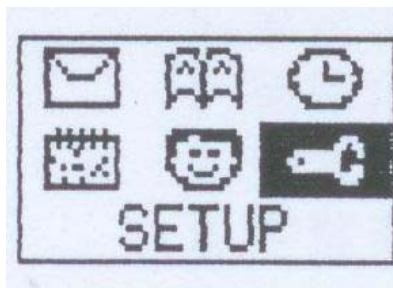


Fig 20

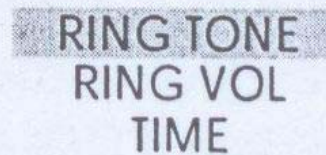



Fig 21

Press "OK"

Function	Steps
Select ring tone	<p>Move the cursor to "RING TONE" and press "OK"</p> <p>4 pre-set ring tone are available</p>
Adjust ring volume	<p>Move the cursor to "RING VOL" and press "OK"</p> <p>4 pre-set volume are available</p>
Time setting	<p>Move the cursor to "TIME" and press "OK"</p> <p>Adjust the time you want</p>

H - Checking ID Number

Press Talk/SMS key, ← and → until the screen shows the following menu

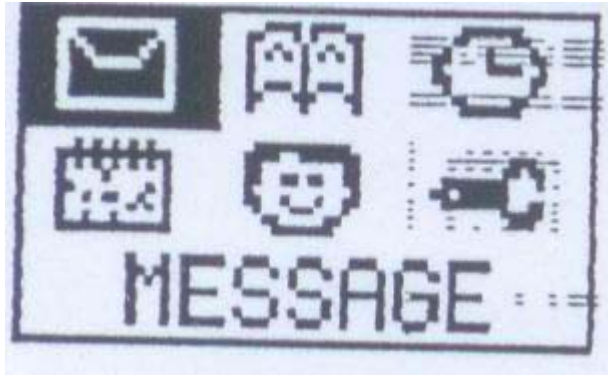

Press "ID"

The screen shows the ID of your Walkie-talkie

Note;

Operation Temperature: 0 °C-40°C

[FCC Warning statement:](#)

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 95 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limit set forth for uncontrolled environment

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.