
Exhibit 5

INSTALLATION AND OPERATING INSTRUCTION

E N

Table of Contents



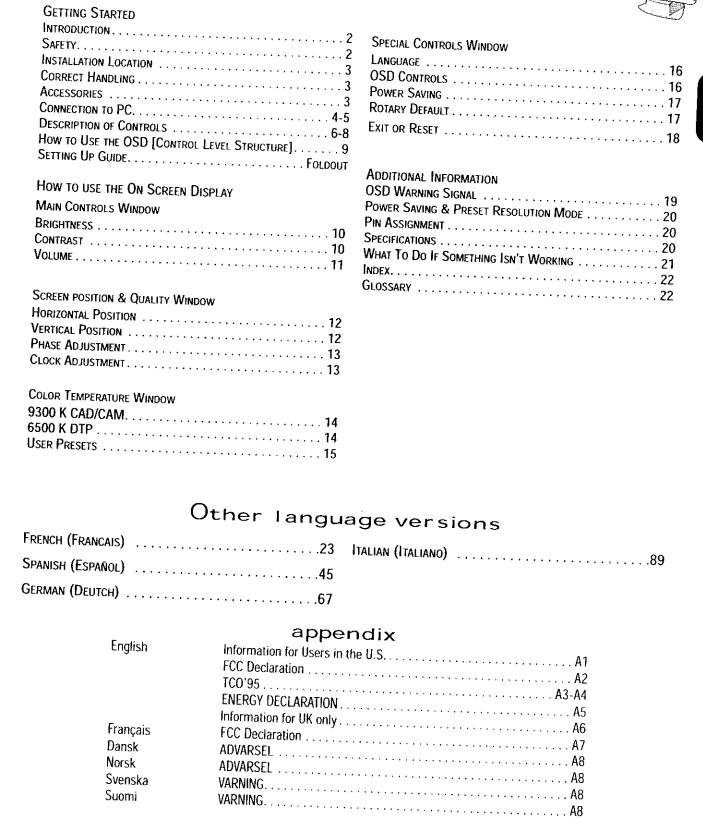



Introduction and Safety

Introduction

The Philips Brilliance151AX Flat Panel Monitor satisfies the need of high-end corporate and professional users. This monitor is for those who are seeking advanced design, a small footprint, high quality picture and ergonomic features in a monitor that takes minimal desk space. Its innovative technology delivers outstanding brightness and contrast, zero emissions, and low-energy consumption.

Features

EXCELLENT DISPLAY QUALITY

- 15.1 inch viewable area display comparable to the viewable screen size of a 17-inch CRT monitor, with even better picture clarity and geometry.
- Full compatibility with all standard video cards and all common VESA modes up to 1024 x 768 Hz with 30 to 61 kHz horizontal scanning.
- \bullet State of the art image processing for optimal full screen image expansion at resolutions for DOS, VGA 640 x 480, and SVGA 800 x 600

- Detachable pedestal for swing arm or wall mount applications. A special hinge design on the monitor insures full tilt and rotation adjustability even on the simplest mount.
- · Easy OSD with five (5) language text.
- TCO '95 approved

OTHERS

- 1+1W stereo front-firing audio and microphone
- USB Bay for an optional powered hub with four (4) downstream ports
- Anti-theft Kensington® socket lock and OSD lock to prevent tampering especially useful at point-of-sale and customer interaction sites.

Note: Your monitor operates according to the VESA DDC level 1/28. Only computers and softwares that support the same guidelines and operate at the same or a higher level can make use of this feature. If your computer does not support the relevant guidelines, you can still use your monitor and computer. However, you may need to manually specify the appropriate resolution in the software or computer.

ERGONOMIC DESIGN

 To protect the LCD panel against wear and scratches, an optional protective cover can be ordered separately. Please inquire with your dealer.



As an Energy Star Partner, PHILIPS has determined that this product meets the Energy Star guidelines for energy efficiency.

Contact us at our web site: HTTP://www.monitors.philips.com

Safety precautions and maintenance

- Unplug the monitor, if you are not going to use it for an extensive period of time.
- Unplug the monitor, if you need to clean it with a slightly damp cloth. Wiping the screen with a dry cloth is possible when the power is off. However, never use alcohol, solvents, or ammonia-based liquids.
- Consult a service technician if the monitor does not operate normally when following the instructions in this manual.
- The casing cover should be opened only by qualified service personnel.
- Keep the monitor out of direct sunlight and away from stoves or any other heat source.
- Remove any object that could fall into the vents or prevent proper cooling of the monitor's electronics.
- · Do not block the ventilation holes on the cabinet.

- Keep the monitor dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- When positioning the monitor, make sure the power plug and outlet are easily accessible.
- If turning off the monitor by detaching mains cord or DC power cord, wait for 6 seconds, then attach the mains cord or DC power cord for normal operation.

End-of-life disposal

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

Please find out about the local regulations on how to dispose of your old monitor.

ENERGY STAR is an U.S. registered mark.

IBM, IBM PC, and Power PC are registered trademarks of International Business Machines Corporation. Apple, Macintosh, Quadra, Performa, and Centris are registered trademarks of Apple Computer, Inc.

Installation Locations & Accessories



Installation Locations

AVOID HEAT AND COLD EXTREMES

- Do not store or use the LCD monitor in locations exposed to heat, direct sunlight, or extreme cold.
- Avoid moving the LCD monitor between locations with large temperature differences. Choose a site falling within the following temperature and humidity ranges.

Temperature: 5-35 ℃ (40-90 F)

Humidity: 20-80% RH

 Do not subject the LCD monitor to severe vibration or high impact conditions. Do not place the LCD monitor inside a car trunk.

- Take care not to mishandle this product by either knocking or dropping during operation or transportation.
- Do not store or use the LCD monitor in locations exposed to high humidity or dusty environment. Also do not allow water or other liquids to spill on or into the LCD monitor.

Correct handling of the monitor

- 1. When handling the monitor, grip the bottom firmly with both hands and ensure that the front panel faces outward before lifting. Please refer to the diagram on the right.
- 2.Handling the monitor with care prevents scratching and damage. If the monitor becomes damaged, immediately disconnect the power from the unit and have it checked by a qualified service person before using it again.
- 3. Do not drop the monitor to prevent fire or electrical shock.
- 4. When moving the monitor, be sure to unplug all power cords in order to avoid injury or damage to the equipment.



Accessories



1. Power cable



Windows disk driver



Macintosh adapter (optional)



4. User manual



5. CD-Rom



Warranty Cards / Service Map / Service Registration cards



7. Quick Set-up Guide



connection to PC

Earphones Jacks

In addition to built-in speakers and microphone, you can connect this monitor to optional earphones. The earphone jack is on the back side of the monitor.

Note: When the earphones are plugged in, there will be no sound from the monitor's built-in speakers.




Microphone and Audio-in CABLE

A microphone cable and audio cable are connected at the back of the monitor. Use them to connect your monitor to your computer.

BLUE CONNECTOR is for audio.

RED CONNECTOR IS for microphone.

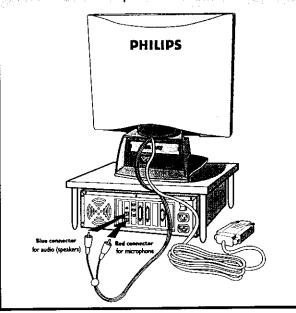

Refer to the owner's manuals included with your earphones and microphone for a detailed guide to setting up these items.

USB Connections


USB (Universal Serial Bus) is an innovation in connecting your IBM-compatible computer to your monitor. By using the USB, you will be able to connect your keyboard, mouse, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. Plus, you will have true plug-and-play capability. Philips provides for the optional USB Hub so you will be ready to take advantage of this advancement in computer development.

For an IBM-compatible Computer:

- 1. Turn off the computer.
- 2. Insert the (optional) USB Hub and connect the USB cable to the computer. (Computer must have USB port.)
- 3. Turn on the monitor. Then turn on the computer.
- 4. With the installation of the correct software, you will be able to connect USB peripherals to the monitor's USB Hub.

Nte

- 1-USB Hub and cables sold separately. The USB Bay is located in back of munitor.
- 2-Please refer to the UBB Hub's manual and installation guide for more details.

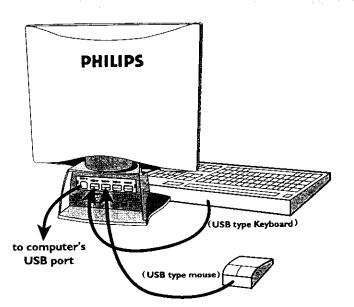

Refer to the "Setting Up your Philips flat panel monitor" foldout for a more detailed guide to set up your monitor.

connection to PC



VIDEO SETTINGS

Before connecting your LCD Monitor to the PC, make sure that the computer's video settings (resolution and frequency) are in accordance with those below.

Vertical Refresh Rate: 56Hz-75Hz Horzonial Frequency 30KFF-61KFF

NOTE: 1. The maximum resolution of this LCD monitor is 1024x768 at maximum Vertical Refresh Rate of 75Hz

- 2.Recommended video mode is 1024x768 at Vertical Refresh Rate of 60Hz.
- 3.Interlace mode is not applicable.


If you have Windows '95 . . .

FOLLOW THESE STEPS TO COMPLETE SETTING UP YOUR MONITOR

- 1. Insert Windows '95 floppy disk supplied with this monitor.
- 2. Click on the "START" icon. Next, click on the "SETTINGS" icon. Then click on "CONTROL PANEL."
- 3. Double-click on "DISPLAY" icon. Next, click on "SETTINGS" tab. Then click on "ADVANCED PROPERTIES" dialog box.
- 4. Click on "MONITOR" tab.
- 5a. If you have an old computer, click on "CHANGE" dialog box. Next, "SELECT DEVICE" screen appears. Now click on "HAVE DISK" dialog box. and select A drive 0r
- 5b. If you have a new computer, "SELECT DEVICE" screen automatically appears. Click on "HAVE DISK" dialog box and select A drive.
- 6. Select "OK" in the "INSTALL FROM DISK" dialog box. If model name of the Philips monitor is correct, click "OK" tab in the "SELECT DEVICE" dialog box.
- 7. Click "CLOSE" tab in the "ADVANCED PROPERTIES" dialog box. If your Windows '95 version is different or you need more detailed installation information, please refer to the Windows '95 user's manual.



Description of Controls

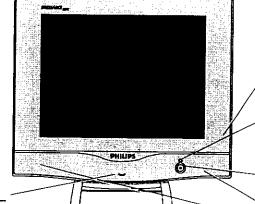

Control Indicators – for Mute, Brightness, and OSD button.

LED – Light Emitting Diode turns green when the monitor is on.

Power Button – Turns the monitor On and Off.

Speakers – Transmit sounds from your computer or amplifier.

Built-in Microphone – Allows you to "speak" to your computer.

FRONT VIEW

SIDE VIEW


Rotary Knob – Helps guide you through the On Screen Display. When not used with the OSD button, can also adjust the volume. See page 11. Mute Button – Mutes the sound from the speakers and the earphones. Press to turn mute on or off. See next page for details.

Brightness Button – Press this button and use the rotary knob to adjust the brightness of the screen.

On Screen Display (OSD) button – Brings up the On Screen Display and helps you navigate through it.

Auto Reset Button – Press this button to return to factory default video modes for optimal picture quality.



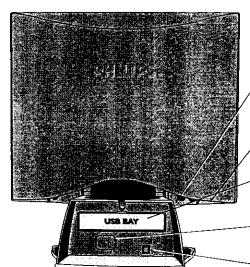

Earphones Jack – Plug in earphones here.
This mutes the sound from the monitor's front speakers.

Kensington Lock Socket – A special feature to lock your monitor for anti-theft.


USB Bay –Slot for plugging in USB Hub. Optional hardware that allows true Plug-and-Play. See page 4 for installation details.

Power Plug – Plug the AC power cord in here. See Setting-up foldout for details.

DC Jack - Plug the monitor's DC power cord here.

Description of Controls




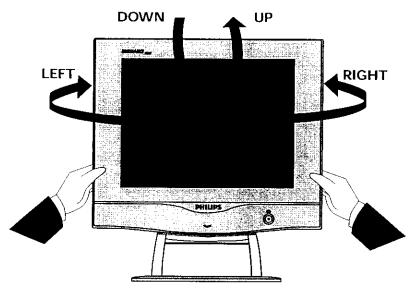

Pedestal - With the built-in pedestal, you can tilt and swivel the monitor to the most comfortable viewing angle. For best viewing, always place the monitor at eye level. This pedestal can be separated from the main LCD monitor body for mechanical arm or wall-mount applications.(as specified within manufactuer's recommendations)

NOTE: Do not remove without first reading "Removing Instructions" found in the guide bundled with the accessories.


Using the Side Panel OSD Button - To use the OSD function, please refer to Page 8 for details.

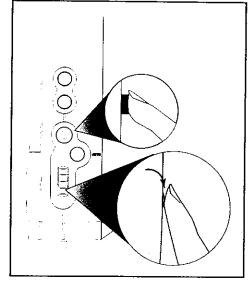

Using rotary knob for AUDIO - Turn rotary knob to adjust audio level.

NOTE: This rotary is used for OSD operation when the OSD button is pressed.

Using the Side Panel Mute Button - To turn the mute On or Off press the mute button.

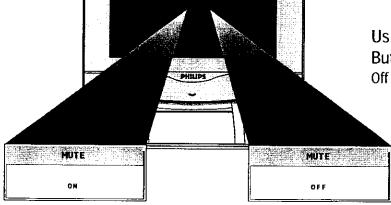

Using the Side Panel Brightness Button - To adjust the screen's brightness, first press the Brightness Button. Next, turn the Rotary Knob to adjust the brightness. To exit brightness completely, press the brightness button again. For another way to adjust the brightness using the OSD, refer to Page10

Using the Side Panel Auto Button - Press this button to return to factory default video mode for optimal picture quality.



Description of Controls

On Screen Display - Your monitor is preset at the factory for normal operation. However, you can adjust it using the On Screen Display Button and the Rotary Knob as described on Page 6. Below is a brief description of the four windows on the On Screen Display function.

Main Controls - The first window highlighted after the OSD has been selected. It has three features: Brightness, Contrast, and Volume. To adjust the three features, turn to page 10 & 11.

OSD Button MANUTED NERVOLS Screen Position & Quality -Kair Kan This is the second window ≨,ग्रह e) w Cli highlighted after the OSD has been olor selected. The four features are: anga in Vertical Position, Horizontal Position, Phase Adjustment, and 024 25/68 60K(7/5)}/4 Clock Adjustment. More details on adjusting these features are on Page 12 & 13.

Color Temperature - The third window highlighted is the adjustment of the Color Temperature. Select the color temperature you prefer or make your own with User Setting 1 or 2. Details are on Pages 14 & 15.

Special Controls - The fourth window features: Language, OSD Controls, Power Saving, and Rotary Default. Details on adjusting these features are on pages16 & 17.


Note: Language allows you to change the On Screen Display from English to French, Spanish, German, or Italian. See Page 16 for more details.

E N

How to Use the On Screen Display (OSD)

OSD Menu control level structure



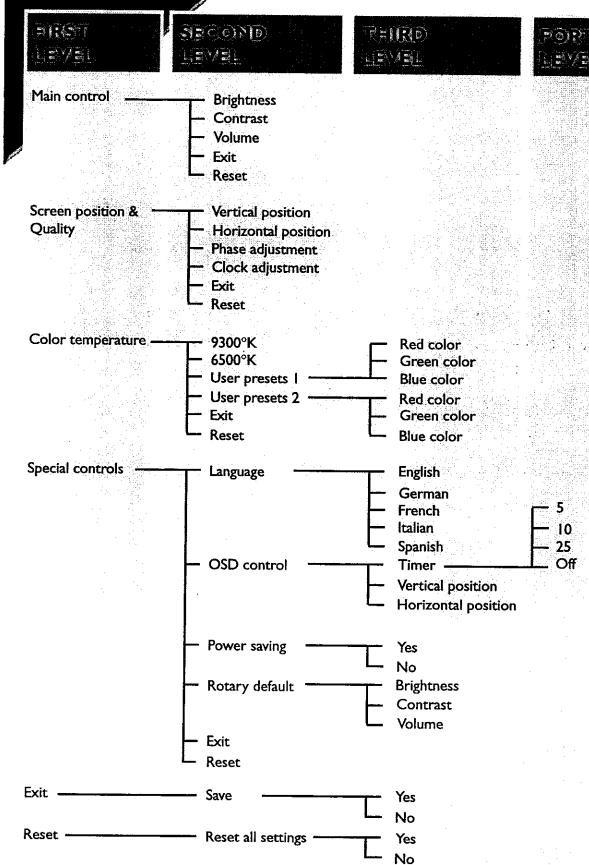




Main Controls window

Brightness

To adjust your screen's brightness, follow the steps below.
Brightness is the overall intensity of the light coming from the screen.

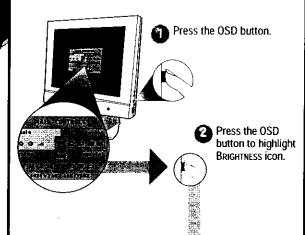













BRIGHTNESS





Turn the Rotary knob to adjust the brightness.

Smart Help


After returning to Exit . .

to continue to Contrast, turn the Royary knob until Main Controls Window is highlighted. Next, follow steps 2 - 5 under CONTRAST,

... to exit completely, press the OSD button and choose either Save or No Save in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)




To adjust your screen's contrast, follow the steps below. Contrast is the difference between the brightest and darkest areas on the screen.

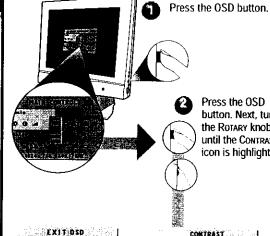












CONTRAST





Press the OSD button to return to Exit

window.

Turn the Rotary knob to adjust the contrast.


Smart Help

After returning to Exit.

to taxtaine to Volume, turn the Rozary knob until Main Controls Window is highlighted. Next, follow steps 2 - 5 under Volume (on the next page).

to eac copietely; press the OSD button and choose either Save or No Save in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)



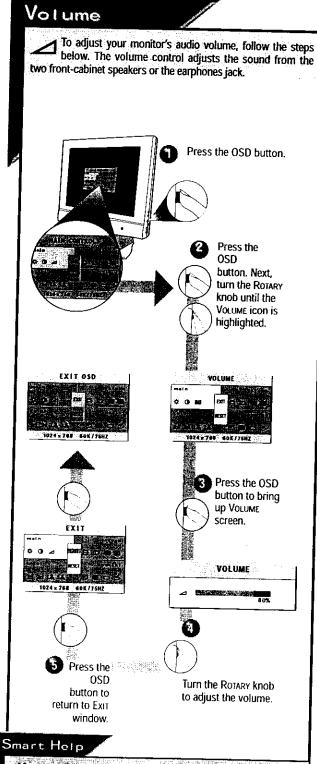

After returning to Exit . . .

... to continue to the Vertical Residen , turn the Royary knob until Screen Position & Quality Window is highlighted. Next, press the OSD button. Follow steps 2-5 under Vertical Position (on the next page).


to edit, completely, press the OSD button and choose either. Save or No Save in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)



Screen Position & Quality window

Vertical Position

Vertical Position adjusts the image on your screen either up or down. Use this feature if your image does not appear centered.

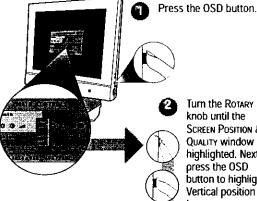

Turn the ROTARY knob until the SCREEN POSITION & QUALITY WINDOW IS highlighted. Next, press the OSD button to highlight Vertical position Icon.














Press the OSD button to return to Exit window.



Turn the Rotary knob until the image is vertically balanced.

Smart Help


After returning to Exit .

to continue to the Harizantal Rosition, turn the Rotary knob until Screen Posmon & Quality is highlighted. Next, press the OSD button: Follow steps 2-5 under Horizontal Posmon.

to exit completely, press the OSD button and choose either Save or No Save in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)

Horizontal Position

Horizontal Position shifts the image on your screen either to the left or right. Use this feature if your image does not appear centered.

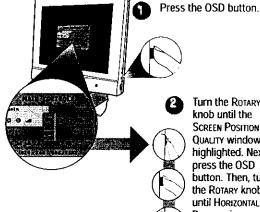


Turn the ROTARY knob until the SCREEN POSITION & QUALITY WINDOW IS highlighted. Next, press the OSD button. Then, turn the ROTARY knob until Horizontal Position is highlighted.













HOUSE STATE





OSD button to return to Exit window.

Turn the Rotary knob until the image is horizontally balanced.

Smart Help


After returning to Exit . . .

to continue to these Adjustment, turn the Rotary knob until Screen Position & Quality is highlighted. Next, press the OSD button. Follow steps 2-5 under Phase Adjustment.

..... to edt completely, press the OSD button and choose either Save or No Save in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)

Screen Position & Quality window



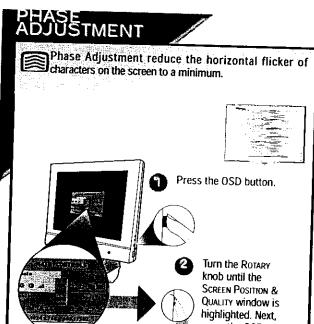





3 Press the OSD button to bring up the Phase Adjustment screen.





Turn the ROTARY knob until the image on the monitor does not flicker.

Smart Help

After returning to Exit...

1024 x 768 GOX /75HZ

Press the

OSD

button to


window.

return to Exit

EXIT OSD

to continue to Clock Adjustment, turn the Rotary knob until Screen Position & Quality is highlighted. Next, press the OSD button. Follow steps 2-5 under Clock Adjustment.

to each corpletely, press the OSD button and choose either SAVE or No SAVE in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)

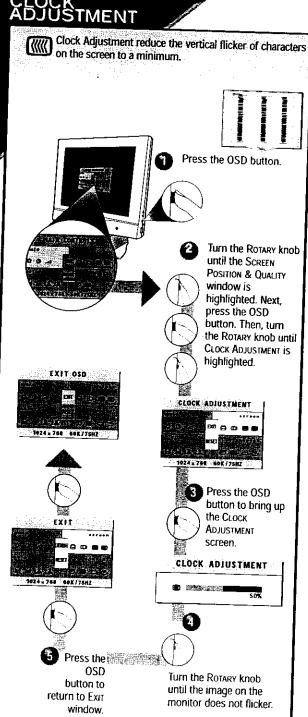

Smart Help

After returning to Exit

. . . to continue to the Color Transcadure window, turn the ROTARY knob until Ext is highlighted. Next, press the OSD button. Then follow steps 2-4 under Color JEMPERATURE WINDOW on the next page.


to exit corpletely, press the OSD button and choose either SAVE OF No SAVE in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)



Color Temperature window

9300 K Cad/Cam 6500 K DTP

Your monitor has two preset options for color temperatures from which you can choose from. One 6500 K option for Desktop Publishing (DTP). Another 9300 K option for Computer Aided Design (CAD) work. When you select an option, the computer automatically adjusts itself for that color temperature. Monitor default setting for color temperatures is 6500 K

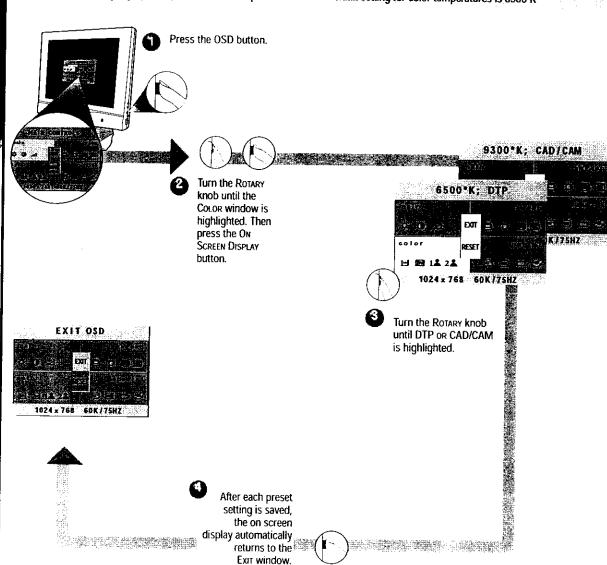

Smart Help


After returning to Exit . .

- ... to continue to the Presess, turn the Rotary knob until Color Temperature Window is highlighted. Next, follow steps 2 4 8 under User Presers on the next page.
- ... to edit conclerely, press the OSD button and choose either Save or No Save in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)

Color Temperature window





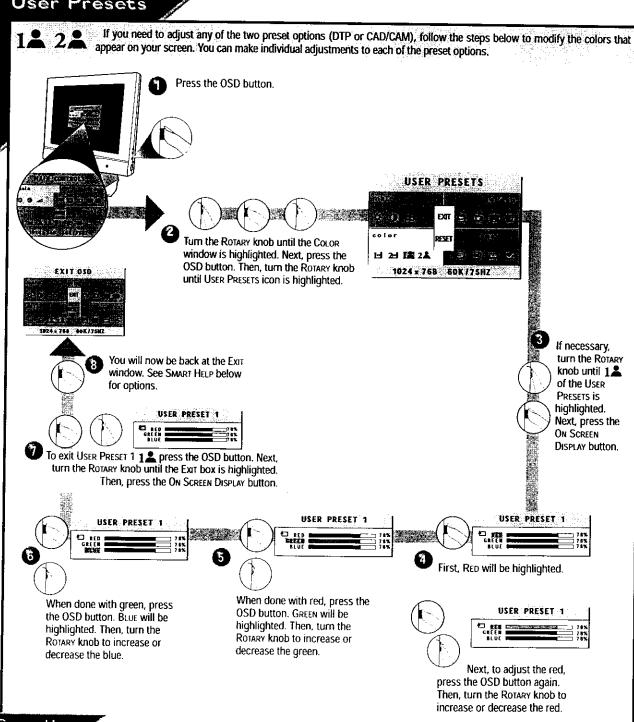

Smart Help

After returning to Exit...


- . . . to continue to User Breest 2 , repeat steps 3 through 7, selecting User Preser 2.
- . . . to continue to Special Controls window, turn the Rotary knob until Special control. Window is highlighted. Next, press the On Screen DISPLAY button. Now, follow steps 2 - 5 under Special Controls on the next page.
- . . . to exit the On Street Display completely , press the OSD button and choose either SAVE or No SAVE in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)



Special Controls window



The On Screen Display shows its settings in one of five languages. The default is English, but you can select French, Spanish, German, or Italian.

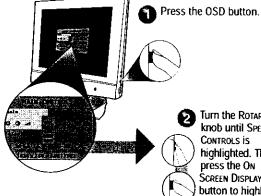

Turn the ROTARY knob until Special CONTROLS IS highlighted. Then, press the ON Screen Display button to highlight Language icon.











LANGUAGE ENGLESMA FRANÇA I S ESPAÑOL HOSTUS CH





Turn the ROTARY knob to until desired language is selected.

OSD button to return to Exit window.

Smart Help


After returning to Ext...

. to continue to Oso Controls, turn the Rotary knob until Special Controls Window is highlighted, Next, Next, press the OSD button: Follow steps 2-5 under OSD Control.


... to exit conjectely, press the OSD button and choose either Save or No Save in setting mode, then push OSD button to exit

Osd Controls

WITH OSD CONTROLS, you can set the time for the On Screen Display to time out, change the vertical and horizontal position of the OSD on the monitor screen.

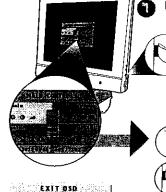

Press the OSD button.



Turn the ROTARY knob until Special CONTROLS IS highlighted. Next, press the OSD button. Then, turn the Rotary knob until the OSD Controls icon is highlighted.



OSD CONTROL 60K 176HZ



Press the OSD button to bring up OSD CONTROLS Screen.


OSD CONTROLS

TIMER




Press the OSD button to return to Exit window.

Press the OSD button to bring up TIMER SCREEN.



Turn the Rotary knob to select: 05, 10, 25 seconds, or Off.



Smart Help


After returning to Extr...

to continue to Power Saving turn the Rotary knob until Special Control Window is highlighted. Next, Next, press the OSD button: Follow steps 2-5 under Power Saving

sto exit corpletely, press the OSD button and choose either SAVE or No SAVE in Setting mode, then push OSD button to exit

Special Controls window



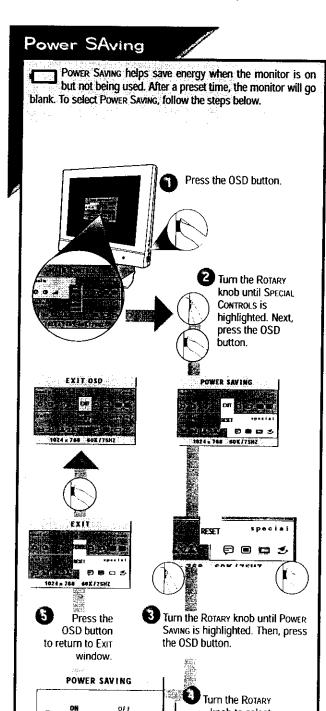

Smart Help

After returning to Ext ...

to certainte to Rotary Deswire, furnithe Rotary knob until Special Control is highlighted. Next, press the Oso button. Follow steps 2-5 under Rotary Derault.

QE#

knob to select


Power Saving

On or Off.

to each concletely, press the OSD button and choose either Save or No Save in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)

Rotary Default

ROTARY DEFAULT allows you to pick the feature your ROTARY knob will default to when not used in adjusting your OSD. The normal default is volume. To select your ROTARY DEFAULT, follow the steps below.

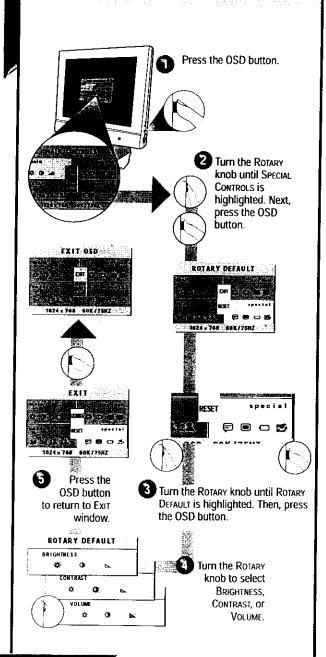

Smart Help

After returning to Exit ...,

to certaine to are the winds, turn the Rotaky knob until that window is highlighted. Next, press the Oso button. Follow the instructions for that window.

... to exir completely, press the OSD button and choose either Save or No Save in setting mode, then push OSD button to exit OSD. (See page 18 for other exit options.)




Exit or Reset



Choosing Exit allows you to save results of adjustment on settings and exit the OSD screen.



When you are at a control window. for example Main Controls, an icon is highlighted.

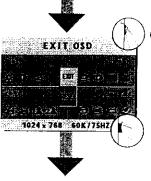

SAVE

NO

WES

Turn the Rotary knob until Exit is highlighted. Next, press the OSD button.


The settings mode is now highlighted. You can choose to either YES or No. Then, press the OSD button to Exit.

Reset

Choosing Reset returns all the settings in that window to factory presets.



Make sure you have exited from all icons in a window. (See To Exit FROM AN INDIVIDUAL WINDOW.) For example, MAIN CONTROLS will be highlighted.

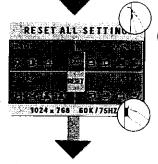

Turn the ROTARY knob until RESET is highlighted. Next, press the OSD button. The On Screen Display will disappear.



Turn the rotary knob to select Reset All Settings, Yes or No. Press the OSD button to exit.

Additional Information



OSD Warning Signal

The monitor will detect various display situation automatically. When the monitor detects the problems, the screen will automatically show the different warning signals to remind you.



• NO VIDEO INPUT •

This screen appears when there is no video signal input. Please check that the signal cable is properly connected to the graphics board or PC.



CANNOT DISPLAY THIS VIDEO MODE •

This screen appears when the input frequency from the computer is not standard video mode or out of the monitor's scanning range. Please change the display mode of the operating software in the computer (i.e. Windows) to1024 x 768 @ 60 Hz for best display results.



ENTERING SLEEP MODE

This screen warns when the monitor is about to enter the sleep mode. Please press any key on the keyboard or click the mouse for waking the monitor and computer.



MONITOR TEMPERATURE TOO HIGH

This screen apppears for 5 seconds of every 3 minutes , when panel temperature is self-detected to be over 50 $^{\circ}$ C. Please turn off the power switch immediately and check the room temperature if too hot. Don't install LCD monitor under direct sunlight or at high room temperature.



USE 1024 X 768 FOR BEST RESULT •

This screen appears when the video mode input is not the recommended 1024 x 768. Non 1024 x 768 mode could cause some picture distortion. Please adjust the video mode in 1024 x 768 at 60 Hz for best display quality.



Additional information

Automatic Power Sayings & Preset Resolution Modes

If you have VESA's DPMS compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If input from a keyboard, mouse, or other device is detected, the PC & monitor automatically "wakes up." The table below shows the power consumption and signalling of this automatic power-saving feature. To turn this feature on and off, see page 17. The table below shows the 14 factory preset video modes.

		Power Ma	nagement De	finition		
VESA mode	Video	H-sync	V-sync	Power used	Power saving(%)	LED
ON	Active	Yes	Yes	< 38W	0%	Green
Stand-by	Blanked	No	Yes	< 5 W	86.8%	Amber
Suspend	Blanked	Yes	No	< 5 W	86.8%	Amber
OFF	Blanked	No	No	< 5 W	86.8%	Amber

- Above power consumptions exclude USB watts.
- This monitor is Energy Star compliant and power management compatible.

AS AN ENERGY STAR PARTNER, PHILIPS HAS DETERMINED THAT THIS PRODUCT MEETS THE ENERGY STAR GUIDELINES FOR ENERGY EFFICIENCY.

The proper operation of the function requires a computer with VESA DPMS power management capabilities.

	Factory	Preset Resol	ution Mode	s
Mod	E RESOLUTION	H. FREQ. (KHZ)	V. FREQ. (Hz)	Standard
1	640 x 350	31.5	70	IBM VGA
2	720 x 400	31.5	70	IBM VGA
3	640 x 480	31.5	60	IBM VGA
4	640 x 480	35.0	67	MAC
5	640 x 480	37.9	73	VESA
6	640 x 480	37.5	75	VESA
7	800 x 600	35.2	56	VESA
8	800 x 600	37.9	60	VESA
9	800 x 600	48.1	72	VESA
10	800 x 600	46.9	75	VESA
11	832 x 624	49.7	75	MAC
12	1024 x 768	48.4	60	VESA
13	1024 x 768	56.5	70	VESA
14	1024 x 768	60.0	75	VESA

Pin Assignment

The 15-pin D-sub connector (male) of the signal cable:

Pin No.	Assignment
1	Red video input
2	Green video input
3	Blue video input
4	Identical output

- connected to pin 10Self test
- 6 Red video ground
- 7 Green video ground
- 8 Blue video ground
- 9 No pin
- 10 Logic ground
- 11 Identical output
- connected to pin 10
- 12 Serial data line (SDA)
- 13 H. Sync / H+V
- 14 V. Sync (VCLK for DDC)
- 15 Data clock line (SCL)




DISPLAY Type	:15.1-inch :Flat panel active matrix-	(38.5 cm) TFT LCD	
VIEWABLE IMAGE SIZE (VIS)	:15.1-inch diagonal (38.35 cm		
Surface treatment Weight (unpacked)	:Anti-glare coating :5.5kgs		
Maximum Dimensions Height Depth Width Maximum Graphics Resolution	:418 mm :176 mm :402 mm :1024 x 768 at 75 Hz Refi	resh Rate	
TEXT MODE	:720 x 400		
Дот Рітсн	:0.30 mm		
HORIZONTAL FREQUENCY	:30 to 61 kHz		
VERTICAL FREQUENCY	:56 to 75 Hz		
Environmental Requirements Temperature Operating Temperature Storage Temperature		5 to 35 ℃ 20 to 60 ℃	
Humidity (non-condensing) Operating Non-operating	:20 to 80% :5 to 95%		
POWER SOURCE	:100-240VAC±10%,60-50Hz(90- 264VAC)		
Power Consumption	:< 38 watt (excluding USB)		

:15-pin D-type connector with cable

Specifications

INPUT TERMINAL

Additional Information





Troubleshooting

This page presents problems that can be corrected by the user. If the problem still exists after these possible solutions, contact your nearest Philips dealer.

No Picture

(Power LED not lit)

- · Make sure the Power cable is plugged to the wall and back of the monitor.
- Make sure the DC power cord has been attached to the DC Jack.
- First, power button in front of the monitor should be in the OFF position, then press it to ON position again.

No Picture

(Power LED is Amber or Yellow in color)

- · Make sure the computer is turned on.
- Make sure the signal cable is properly connected to your computer.
- · Check to see if the monitor cable has bent pins.
- The Energy Saving Feature may be activated. See pages 2 and 20 for more detail.

Screen says

- Make sure the monitor cable is properly connected to your computer. See Setting Up foldout.
- · Check to see if the monitor cable has bent pins.
- · Make sure the computer is turned on.

NO VIDEO INPUT

AUTO button not working

- The Auto Function is designed for use on standard Macintosh or IBM-compatible PC running Microsoft Windows.
- properly
- It may not work properly if using non-standard PC or video board.

Imaging Problems

Display position is incorrect

- · Push the Auto button.
- Adjust the image position using the Horizontal Position &/or Vertical Position in the Screen Position and Quality Window.

Image vibrates on the screen

· Check that the signal cable is properly connected to the graphics board or PC.

Vertical flicker appears

- · Push the Auto button.
- Eliminate the vertical bars using the CLOCK ADJUSTMENT in the SCREEN POSITION& QUALITY WINDOW.
 See Page 13 for details.

Horizontal flicker appears

- · Push the Auto button.
- Eliminate the horizontal bars using the Phase Adjustment in the Screen Position& Quality Window.
 See Page 13 for details.

THE CONTRACT OF THE CONTRACT O

- The screen is too bright or too dark
- Adjust the contrast and brightness using the Main Controls Window. See Page 10 for details.
 (The backlight of the LCD monitor has a fixed life span. When the screen becomes dark or begins to flicker, please contact your dealer.)

An after-image appears

• If an image remains in the screen for an extended period of time, it may be imprinted in the screen and leave an after-image. This usually disappears after a few hours.

An after-image remains after the power has been turned off

• This is characteristic of liquid crystal and is not caused by a malfunction or deterioration of the liquid crystal. The after-image will disappear after a set amount of time.

Green, red, and blue dots remain on the screen

• The remaining dots are charactericstic of the liquid crystal used in today's technology.



Additional Information

Index

Accessories	Re
Audio-in Cable	Re
Audio Controls 4, 6-7	Ro
Automatic Power Saving20	Ro
Brightness	Saf
Built-in microphone 6	Scr
CAD/CAM14	Spe
Clock Adjustment 13	Spe
Color Temperature 14	Spe
Contrast	Tro
Correct handling3	
Description of controls6-8	US
DTP14	US
Earphones jack 4, 6	Use
End-of -life disposal2	Ver
Exit18	Vid
Features	Vid
Glossary22	Vol
Horizontal Position12	Wir
Kensington Lock 6	
Installation location 3	
Language16	
Main Controls 8, 10-11	
Microphone Cable 4	
Mute7	
On Screen Display 10	
OSD button8	
OSD Controls16	
OSD Control Level Structure .9	
OSD Warning Signals 19	
Pedestal	
Phase Adjustment 13	
Pin Assignment 20	
Power button .Set Up Guide, 2	
Power plug Set Up Guide, 2	
Power Saving17	

Reset
Resolution Modes 20
Rotary Default
Rotary knob6-7
Safety precautions2
Screen Size & Quality12-13
Speakers
Special Controls 8, 17-18
Specifications
Troubleshooting21.
Set Up Guide
USB hub6
USB connections4
User Presets
Vertical Position12
Video Input
Video Settings 5
Volume11
Windows '955,
Set Up Guide

Glossary

Here are a few definitions that may help you.

Two ways of connecting your monitor to your computer. Your monitor comes with a D-Sub cable. Universal Serial Bus. A way to connect your computer, monitor, and peripherals for true Plug-and-Play functions. D-Sub USB

Federal Communications Commission (FCC Statement)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use only RF shielded cable that was supplied with the monitor when connecting this monitor to a computer device.

Warning:

WHEN POSITIONING THIS EQUIPMENT ENSURE THAT THE MAINS PLUG AND SOCKET IS EASILY ACCESSIBLE.

To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

This Class B digital apparatus complies with Canadian ICES-003.