Step 4 Activation / configuration

The activation of the station on the cloud (referred as commissioning) is done by the local Sigfox Operator.

If the station has been registered, the station is ready and operational as soon as the boot up is done and the LED is solid green.







Check with your local Sigfox Operator for activation or if any change in the configuration is required.

Understanding the LED of your station

| Light is | Meaning | Then |
|----------------------|--|--|
| Off | No power | Your Access Station Micro is not powered. Please check the PoE power supply is firmly attached. |
| Red (for a few secs) | Power on | Your Access Station Micro is powering on. |
| Green – Flashing | Booting up (20 – 60 sec) | If flashing continue for more than 1 minute contact your support. |
| Green – Solid | In Operation | Your Access Station Micro is up and running. |
| Orange – Flashing | No connectivity | The Ethernet cable or USB dongle may be disconnected. Make sure that the cable or dongle is firmly attached. |
| Orange – Solid | No VPN connection | Your Access Station Micro may not be registered correctly. Contact your support. |
| Purple – Solid | Warming up (temp < 0°) Cooling down (temp > 55°C) | External temperature is too extreme. While your station is in cooling/warming mode, it is not in service. |
| Red – Solid | No Boot | If the light remains red after 1 minute your Access Station Micro may need replacement. Contact the support at your point of purchase. |




Support

Thank you for choosing the Sigfox Access Station Micro.

For more detailed information, product updates and online manuals please check **micro.sigfox.com**.

For support, contact your local Sigfox Operator or distributor.

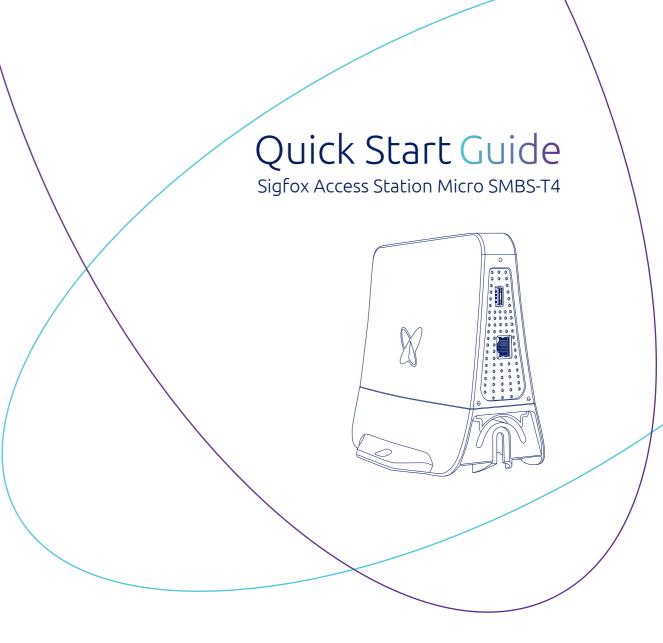

+33 (0)5 82 08 07 10 Bâtiment E-volution 425, rue Jean Rostand 31670 Labège – France sigfox.com



The information presented is subject to change without notice. Sigfox assumes no responsibility for inaccuracies contained herein. Sigfox and the Sigfox logo are trademarks of Sigfox. All other trademarks are the property of their respective owners. Copyright ©2018 Sigfox. All right reserved.

August 2018

Package contents







Passive PoE injector



Power supply adapter (select the correct plug for your region)







Safety notice

Accessories available separately:



3G or 4G USB dongle



Sealing cover

Before you start

This quick start guide will take you through the few steps required to connect and start using your station.


For detailed installation recommendations and product specifications, please refer to the Product Manual available in several languages from your Sigfox Operator or online at:

micro.sigfox.com

For safety information please refer to the notice included in the box.

To use you Access Station Micro, you will need:

- ▼ Internet connection: either by Ethernet port or compatible 3G/4G USB dongle
- ¥ Indoor 220 / 110 V AC power outlet

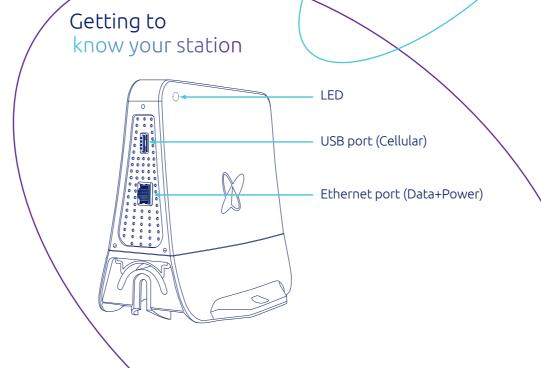


Installing your station

Step 1 Place your station

Place or fix the Access Station Micro at the desired location. Make sure you leave enough space to access the ports and you can see the side to check the LED color.

Step 2 Connect your station to the Internet

Connect the ethernet cable to the Ethernet port and / or the cellular dongle (if used). For sealing cover addition see instruction in sealing cover pack.

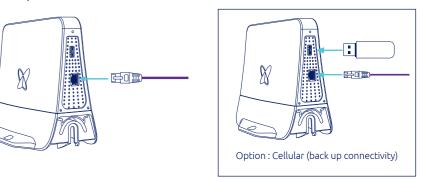

Connect the other end of the Ethernet cable to the PoE injector, and the latter to the wall socket or router.

