



## Select Number App Quick Start

### SELECT COMFORT Corporation

\*Caution Statement: Per FCC 15.21: Changes or modifications to this product not expressly approved by Select Comfort Corporation could void the user's authority to operate the equipment..

This device complies with:

A) Part 15

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received



Including interference that may cause undesirable operation

Caution: To prevent electric shock, Do not remove cover.

No user serviceable parts inside.

Refer to servicing to qualified personnel.

### Step 1: Unpack and check contents

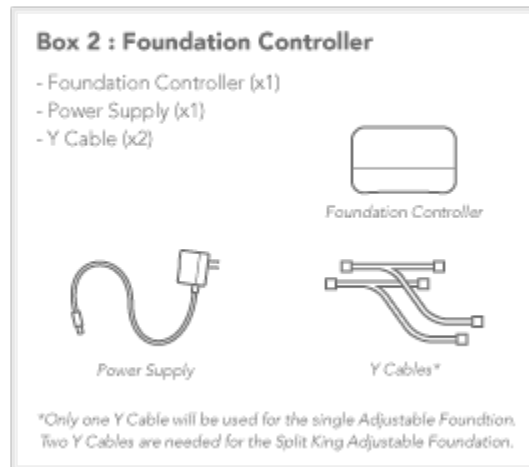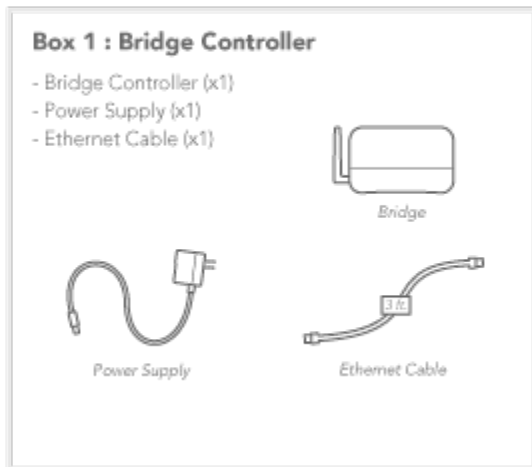

## Select Number App Quick Start

### **Step 2: Connecting to your home network**

The Bridge needs to connect to your home WiFi router using an Ethernet cable. A 3-foot cable has been provided for you, however longer cables can be used to give you more flexibility in positioning the Bridge.

- a) Make sure that the power supply is not plugged into the Bridge yet.
- b) Plug the Ethernet cable into an available Ethernet port on your wireless router.
- c) Plug the other end of the Ethernet cable into the Ethernet port on the back of the Bridge.
- d) Plug the power supply into the power jack on the Bridge and then plug the power cord into the wall. This will power on the Bridge.
- e) The blue Sleep Number icon on the Bridge will glow blue and blink, and the green and amber lights on the Ethernet port will begin to flash.
- f) When the blue Sleep Number icon stops flashing and stays lit, the Bridge has been successfully connected to your home network.

### **Step 3: Connecting your iPhone or iPod Touch to your Sleep Number bed**

Before you can enjoy the benefits of your new Sleep Number App, you need to connect your iPhone or iPod Touch to your Sleep Number bed. This process is referred to as "binding."



- a) To bind a new device, you must first unplug your Sleep Number pump from the power outlet.
- b) Wait 5 seconds, then plug the pump back into the power outlet. These two steps place the pump into a binding mode that lasts for 60 seconds.
- d) The application will automatically bind your device with your bed.
- e) Close the application. The app should be off before starting Step 4.

## Select Number App Quick Start

### Step 4: Connecting the Base Controller to your Base Motor

The Base Controller needs to be connected between the small black RF box and the large Base Motor using the supplied Y Cable. The Y Cable has three separate connectors, one at the base (C) and two on different length cables (D,E). This will allow iPhone or iPod Touch to control your adjustable Base.

- a) Make sure that the power supply is not plugged into the Base Controller yet.
- b) Unplug the data cable from the Base Motor. This is the cable between the small black RF box and the Base Motor.
- c) Connect the base of the Y-Cable (C) to the data cable you just unplugged.
- d) Connect the short cable connector (D) to the Base Controller.
- e) Connect the long cable connector (E) to the Base Motor.
- f) For Eastern King, California King and Split King Adjustable Base beds, repeat steps a-e with the additional Base Motor and RF box.
- g) Plug the power supply into the power jack on the Base Controller and the power cord into the wall.
- h) Launch the Sleep Number App in your iPhone or iPod Touch.
- i) The application will automatically bind your device with your Base Controller.

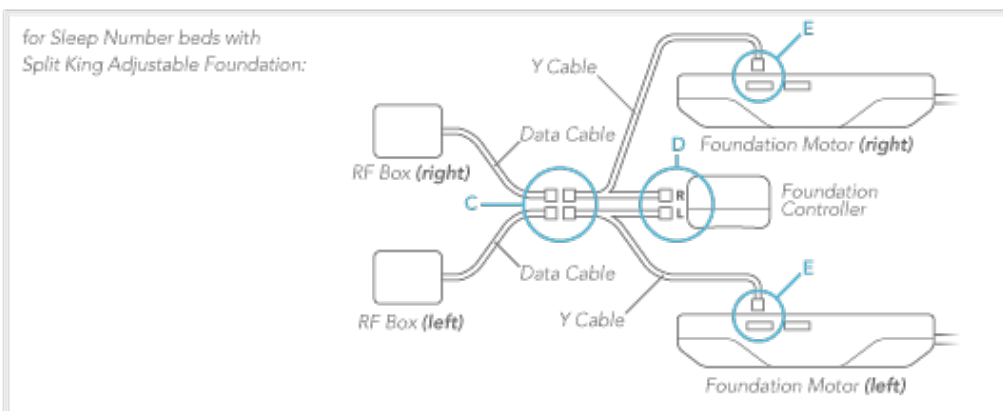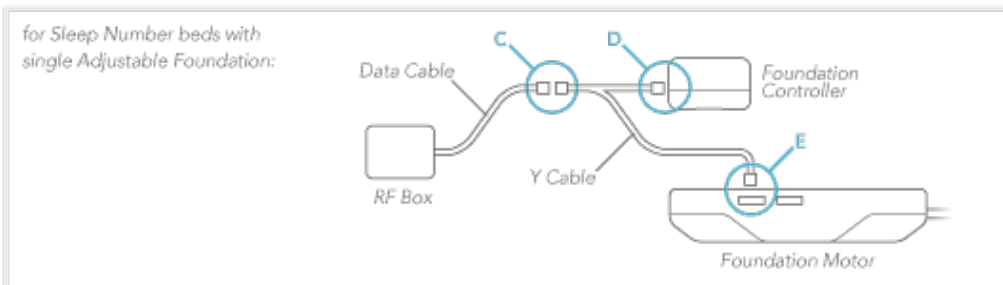

### Step 5: Enjoy. Individualize. Sleep.

You can now use your the Sleep Number App to control your Sleep Number bed.

## Select Number App Quick Start


### Troubleshooting

If you are experiencing difficulties with any of these steps, first navigate to the Diagnostics page in your Sleep Number App:

My Bed >



The Diagnostics page will show the connection status of each of the system components. Search the troubleshooting scenarios below before pressing the ReBind buttons.

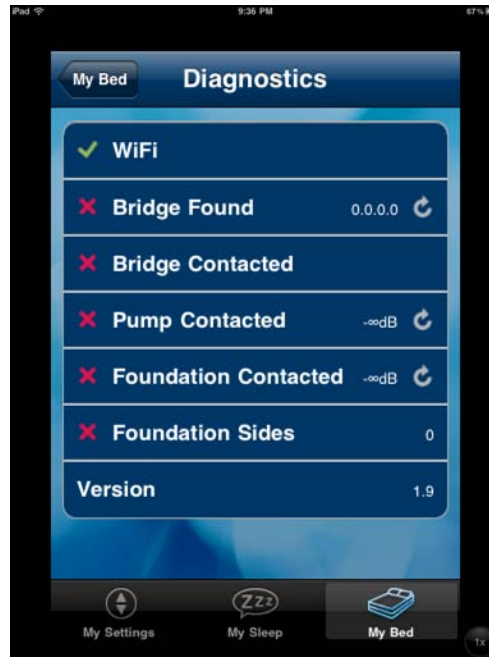

#### My WiFi is not connected:

- Ensure that the WiFi is turned on in your iPhone or iPod Touch: **Settings > WiFi > On**
- Reboot your WiFi router. Unplug the power to the router > Wait 30 seconds > Plug router back in > Confirm WiFi connection on the Diagnostics page.

#### My Bridge is not binding:

- Ensure that the Bridge is powered on. The Sleep Number icon will glow blue.
- Ensure the Bridge is connected to the WiFi router.
  - Check Ethernet cable connections.
  - Check that both the Green and Amber lights on the Ethernet port are lit. The Green light should be constant, the Amber light should be blinking.
- Repeat **Step 2: Connecting to your home network.**

d) Press the ReBind button for the Bridge on the Diagnostics page.

### Select Number App Quick Start

#### My Pump is not binding:

- a) Your Bridge may be out of range to your pump.
  - a. Try moving the Bridge closer to the pump.
  - b. Move the Bridge away from other electronic devices that may be causing signal interference.
- b) Repeat steps **a** and **b** of **Step 3: Connecting your iPhone or iPod Touch to your Sleep Number bed.**
- c) Press the ReBind button for the Pump on the Diagnostics page.

#### My Base is not binding:

- a) Repeat steps **a** through **g** of **Step 4: Connecting the Base Controller to the Base Motor.**
- b) Press the ReBind button for the Base on the Diagnostics page.