






Mercedes-Benz

- **Accessories**

Installation Instructions




Mercedes-Benz Cradle adaptor with
Bluetooth® wireless technology






USA

**Mercedes-Benz Cradle adaptor
with Bluetooth® wireless
technology**

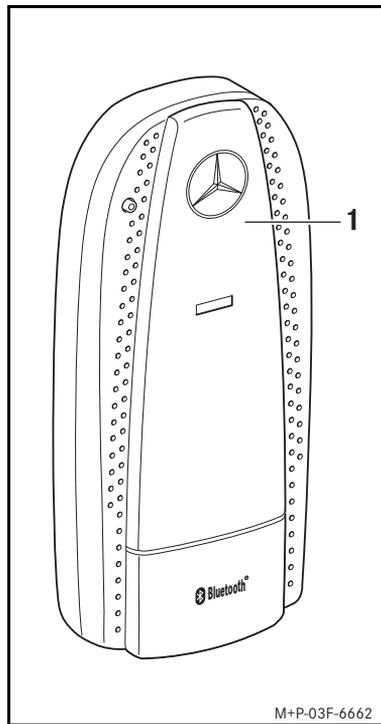

M+P-03F-6662





Mercedes-Benz approved/recommended Bluetooth® Phones can be utilized inside Mercedes-Benz vehicles, in conjunction with this Cradle adaptor.

Application

These installation instructions are valid for vehicles with an MHI hands-free communications systems and a Mercedes-Benz-approved Bluetooth® mobile telephone.

Parts included

- (1) Mercedes-Benz Cradle adaptor with Bluetooth® wireless technology




Warning

For safety reasons, the driver should not use the mobile telephone while the vehicle is in motion. We encourage the driver to stop the vehicle in a safe location before answering or placing a call.

Notes

Please contact your local Mercedes-Benz Center if you encounter difficulties when operating the Mercedes-Benz Hands-Free Communication System.





Notes



The manufacturer reserves the right to change technical details from those shown in the illustrations contained in these installation instructions.

These installation instructions also refer to the vehicle Operator's Manual, COMAND Operator's Manual, and mobile telephone manual. Please refer to them for reference.



A mobile telephone other than a Mercedes-Benz approved/recommend model may not operate properly in conjunction with the Mercedes-Benz Cradle adaptor with Bluetooth® and may not be serviceable by your authorized Mercedes-Benz dealer.



Installing the Mercedes-Benz Cradle adaptor with Bluetooth®

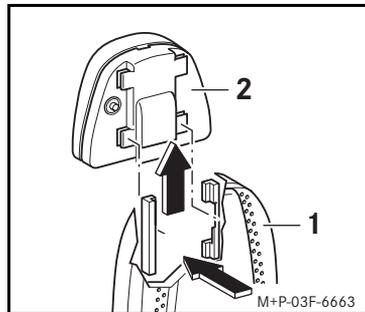

Insert the Mercedes-Benz Cradle adaptor with Bluetooth® (1) into the latches on the pre-installed contact plate (2), located in the center console. To insert the Mercedes-Benz Cradle adaptor with Bluetooth® (1), slide it upwards until it clicks into place.






Pairing the mobile telephone with the Mercedes-Benz Cradle adaptor with Bluetooth®





Make sure that the ignition switch is in position 1 or 2 (see the vehicle Operator's Manual).

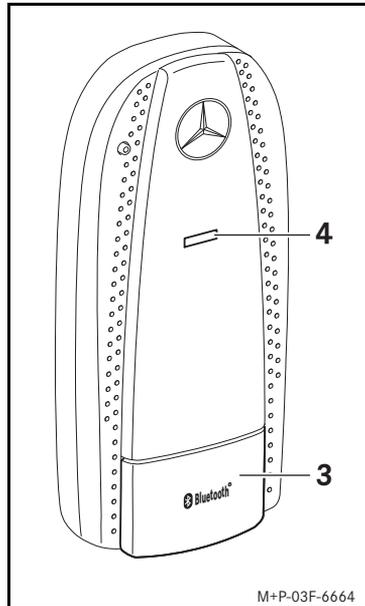

1. With Mercedes-Benz Cradle adaptor with Bluetooth® connected to the vehicle press button (3) for approx. 2-3 seconds.

The LED (4) will begin to flash rapidly. The Mercedes-Benz Cradle adaptor with Bluetooth® is in Discovery Mode and can be detected by a Bluetooth® mobile telephone.





The Mercedes-Benz Cradle adaptor with Bluetooth® will appear as "MB PhoneSystem" on a recommended compatible mobile telephone with Bluetooth capability.

2. For instructions on how to get the mobile telephone ready for pairing, see the mobile telephone manual. Once the mobile telephone and Mercedes-Benz Cradle adaptor with Bluetooth® find each other the mobile telephone will prompt the user to enter a Pass-Key.



3. When prompted, enter the Pass-Key "62872" (MBUSA) into the mobile telephone. Depending on the type of mobile telephone being used, it may be necessary to confirm a connection request (see the mobile telephone manual).



4. Once the Pass-Key has been entered and accepted the LED (4) will be lit continuously. This confirms that the mobile telephone is paired and connected and the mobile telephone information has been stored in the Mercedes-Benz Cradle adaptor with Bluetooth®.



5. The mobile telephone is now ready for use with the Mercedes-Benz Hands-Free Communication System.





Establishing a Bluetooth® Connection

Notes

A maximum of 4 mobile telephones can be paired with the Mercedes-Benz Cradle adaptor with Bluetooth®. However, only one mobile telephone is connected to the Mercedes-Benz Cradle adaptor with Bluetooth® at a time. If a fifth mobile telephone is paired with the Mercedes-Benz Cradle adaptor with Bluetooth®, then the information stored from the first mobile telephone which was paired with the Mercedes-Benz Cradle adaptor with Bluetooth® will be replaced.





When the ignition switch is in position 1 or 2 (see the vehicle Operator's Manual), the Mercedes-Benz Cradle adaptor with Bluetooth® will search for the last connected mobile telephone and reconnect.



The Mercedes-Benz Cradle adaptor with Bluetooth® will automatically begin a continuous search for a previous paired mobile phone after startup.

If the last connected mobile telephone is not found the Mercedes-Benz Cradle adaptor with Bluetooth® will search for one of the previously paired phones and connect to it.

If the connection between the Mercedes-Benz Cradle adaptor with Bluetooth® and mobile telephone is not established automatically, it is possible to establish a connection manually (see page 7).






Note

When employing a Bluetooth® connection the mobile telephone uses more power than usually. Since Bluetooth® connection does not charge the mobile telephone, please make sure the phone has a sufficient charge before use.

SMS messages can not be accessed via the COMAND or radio while the Bluetooth® connection is established.

Not every ring-tone available in your mobile telephone will be reproduced by the vehicle's COMAND system or radio.





3-way-calling and call waiting are not available through the Mercedes-Benz Cradle adaptor with Bluetooth®. An audible peep will signal a waiting call.



The roaming indicator may not be displayed by the vehicle's COMAND system or radio.



The Tele Aid System (emergency call system) will continue to function independently of the hands-free phone system as designed as long as there is a valid service contract, telephone service and a GPS coverage.





Connecting the mobile telephone and Mercedes-Benz Cradle adaptor with Bluetooth® manually



Valid for all Mercedes-Benz vehicles with the exception of the model year 2007 S-Class:

- Press **TEL** button on the COMAND or radio.

Model year 2007 S-Class vehicles:


- Using the COMAND Controller, select "Telephone" → "Telephone" → "Telephone on".

Note

Before manual connection, the mobile telephone must previously be paired with the Mercedes-Benz Cradle adaptor with Bluetooth® (see pairing procedure on page 3).



When the mobile telephone is within the range (approx. 30 ft) of the Mercedes-Benz Cradle adaptor with Bluetooth®, the connection between the mobile telephone and the Mercedes-Benz Cradle adaptor with Bluetooth® remains active, and phone calls made with the mobile telephone use the vehicle's hands-free system. For this reason, the connection between the mobile telephone and the Mercedes-Benz Cradle adaptor with Bluetooth® should be disconnected manually if the mobile telephone is taken out of the vehicle (see page 8).





Disconnecting the Bluetooth® connection automatically

The connection between the Mercedes-Benz Cradle adaptor with Bluetooth® and the mobile telephone is automatically disconnected when the mobile telephone travels outside of the range (approx. 30 ft) of the Mercedes-Benz Cradle adaptor with Bluetooth®.

Disconnecting the Bluetooth® connection manually

The connection between the mobile telephone and the Mercedes-Benz Cradle adaptor with Bluetooth® can be disconnected at any time by using the mobile telephone (see the mobile telephone manual).

To disconnect the paired mobile telephone from Mercedes-Benz Cradle adaptor with Bluetooth® using the COMAND or radio. Valid for all Mercedes-Benz vehicles with the exception of the model year 2007 S-Class:




- Press and hold **TEL** button on the COMAND or radio for approx. 3 seconds.

Model year 2007 S-Class vehicles:

- Using the COMAND Controller, select "Telephone" → "Telephone" → "Telephone off".


Note

If a phone call is in progress, the connection can only be manually disconnected directly on the mobile telephone (see the mobile telephone manual).





Detaching the Mercedes-Benz Cradle adaptor with Bluetooth®

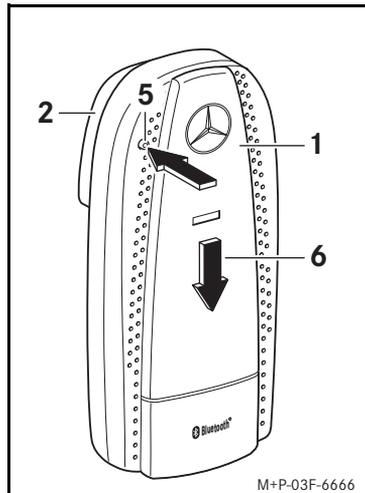



Press and hold the release button (5). Slide the Mercedes-Benz Cradle adaptor with Bluetooth® (1) in direction of arrow (6) and remove it from the pre-installed contact plate (2).




Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.



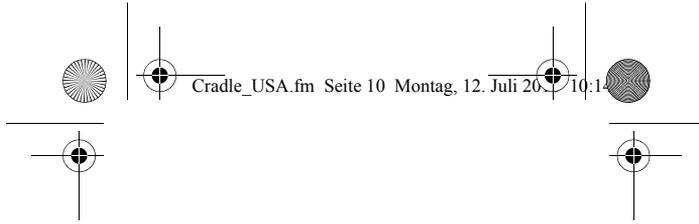

© 2008, Mercedes-Benz Accessories Inc.
Not to be reprinted, translated or otherwise
reproduced, either wholly or in part.
Mercedes-Benz Accessories Inc., Stuttgart ·
A Daimler AG Company
03/08
03F014-08

