




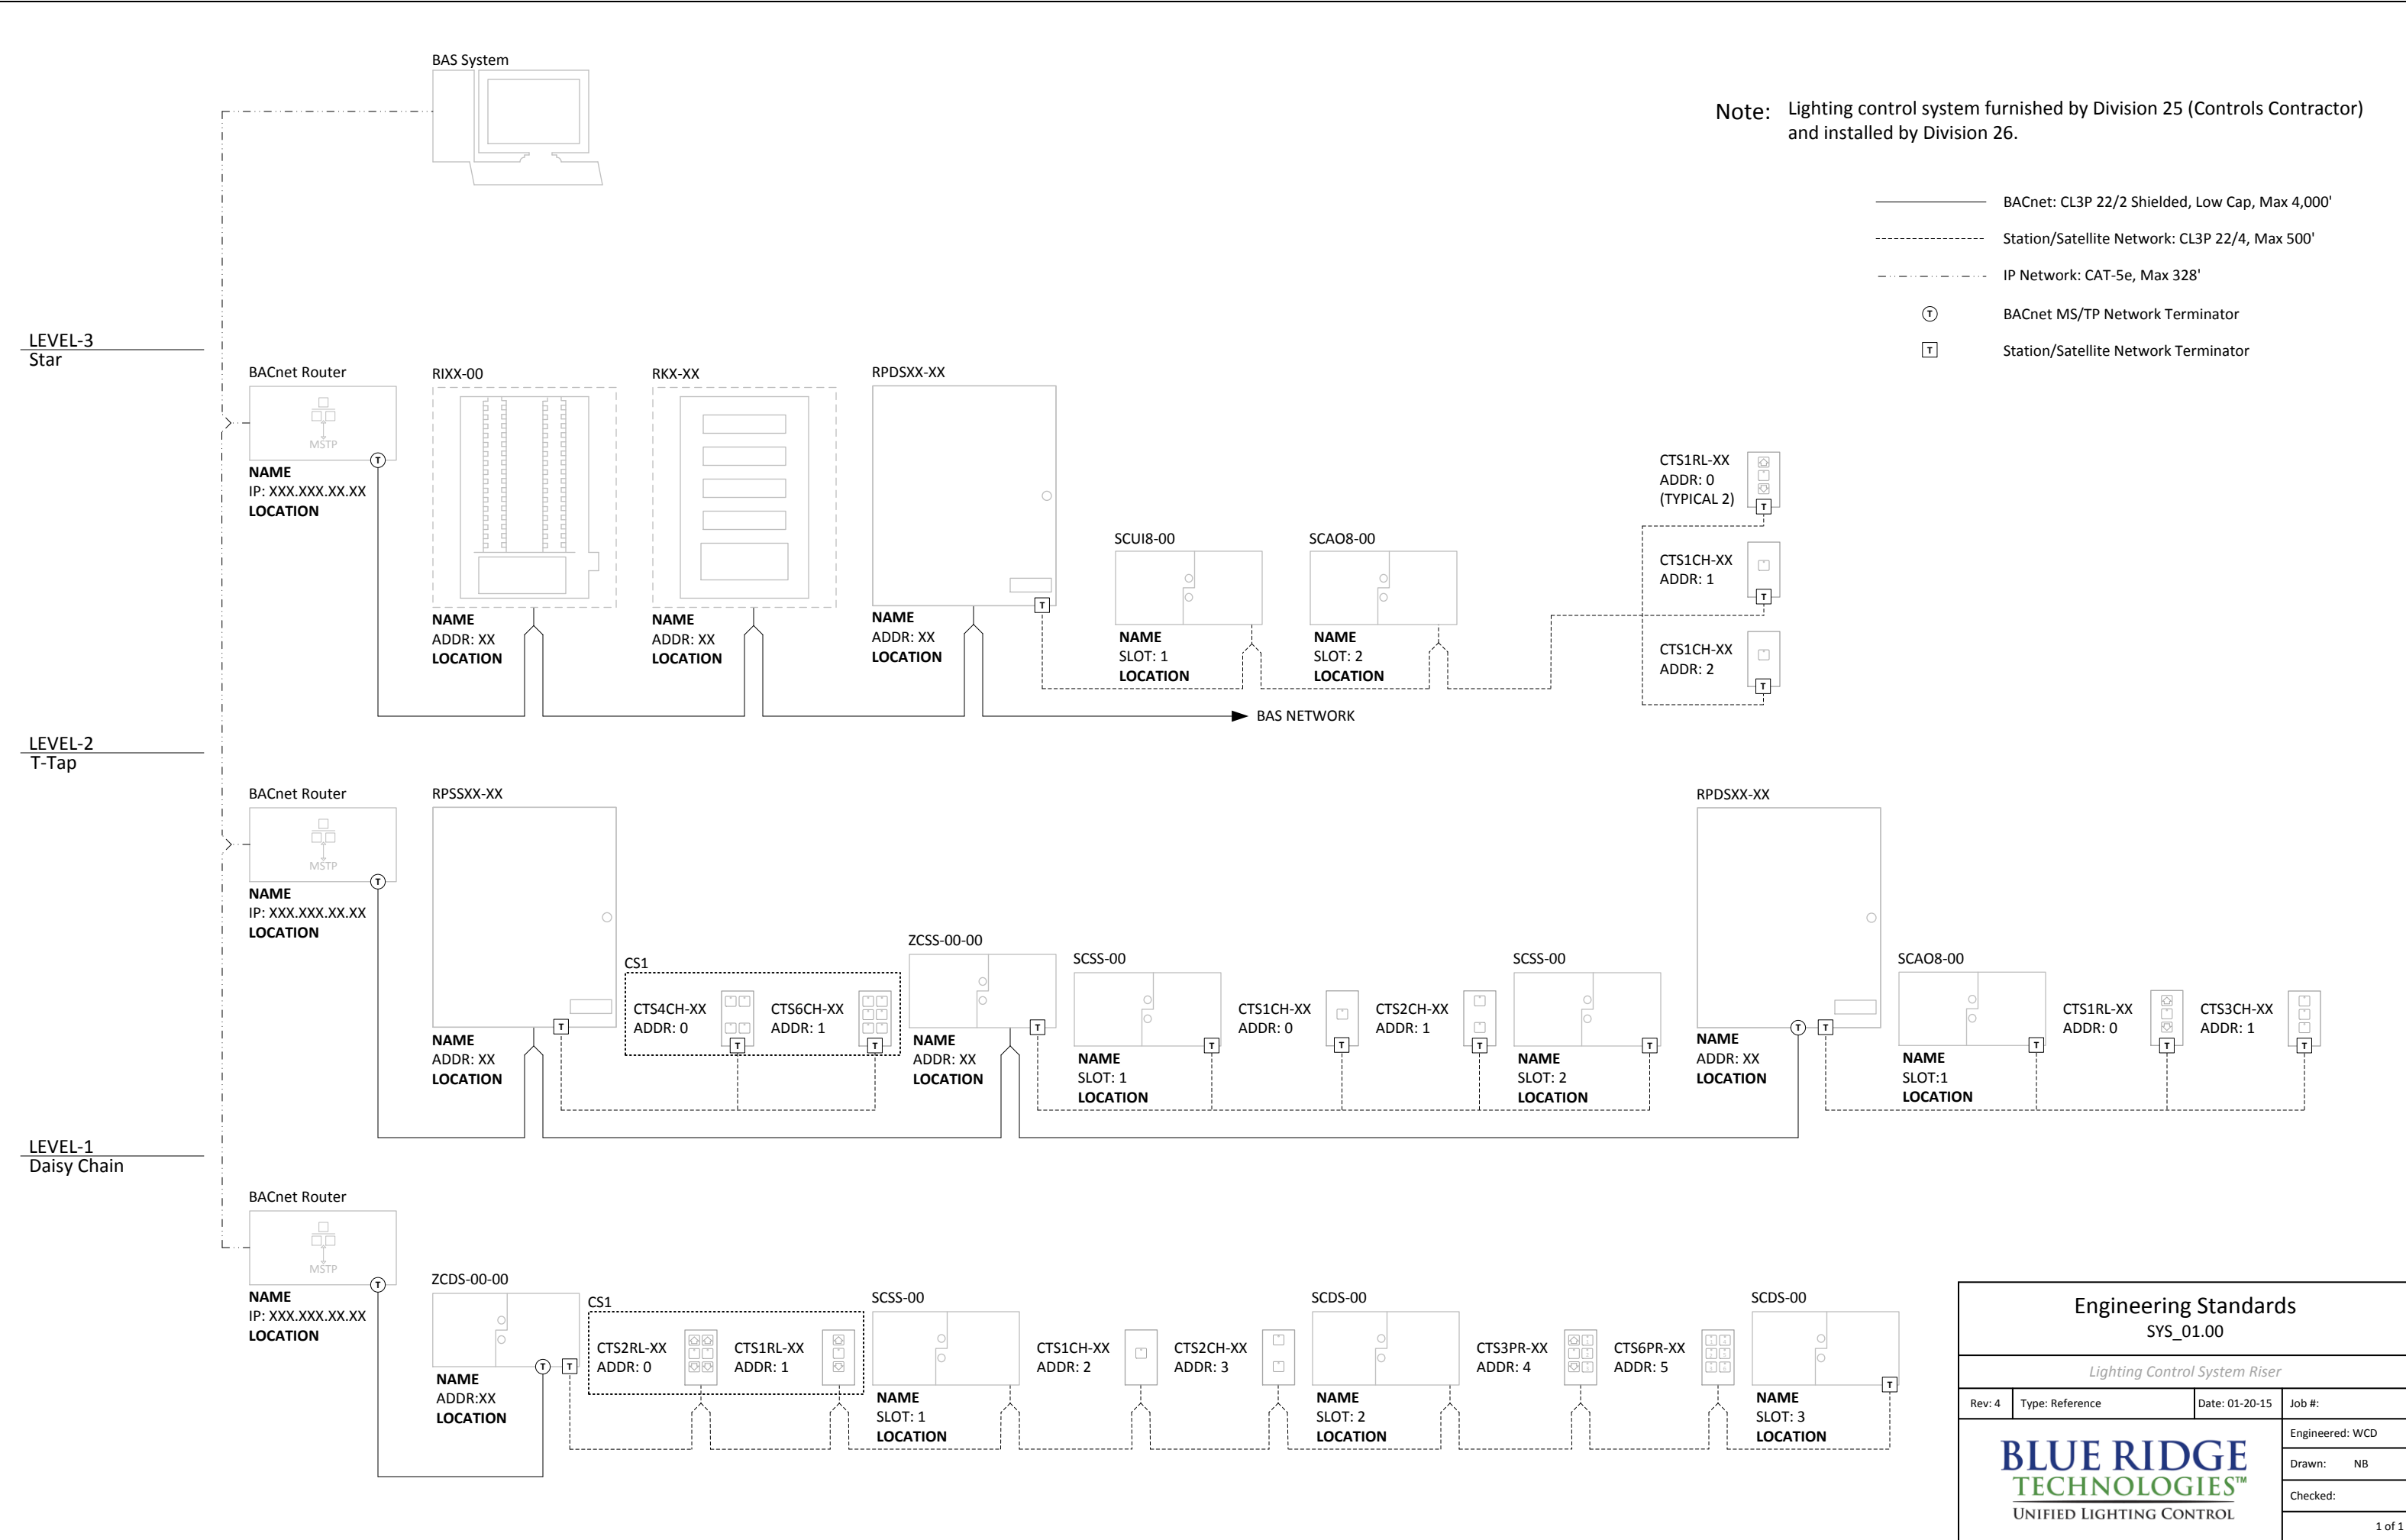

Tech Note 071014_02

Date: July 10, 2014


Product: TK-2.0

Subject: USB Cable and Driver Installation


Note: Recommended USB Installation Procedure

1. Turn the Controller Board Power Switch "Off".
2. Insert the Standard-A USB connector into a USB 2.0 port on your computer.
3. Insert the Micro-B USB connector into the controller.
4. Turn the Controller Board Power Switch "On".

Controller Board Terminations (ZC)

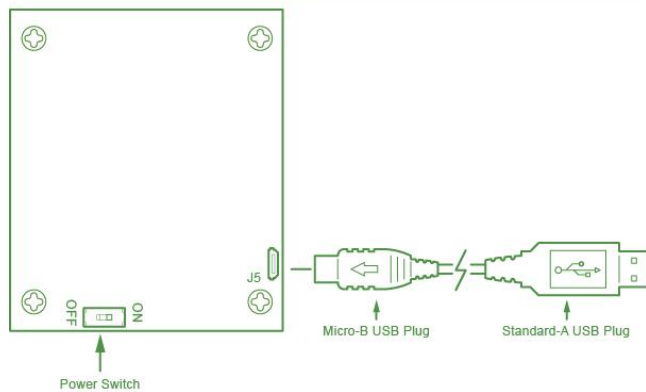

Controller Board Terminations (RI / RK / RP)

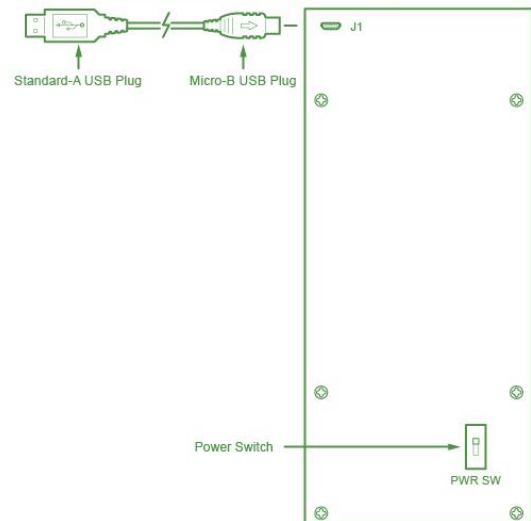


Recommended USB Cable Driver Installation

Computer Requirements


Operating System: Windows 7 (32/64-bit)

USB: Standard-A USB 2.0 port


1. Click the **Start** button, then right click on **Computer** and click **Manage**.
2. Under “System Tools” click **Device Manager**. (The cable will populate under “Other devices”)
3. Right click on **BRT Zone Controller** and click **Update Driver Software**.

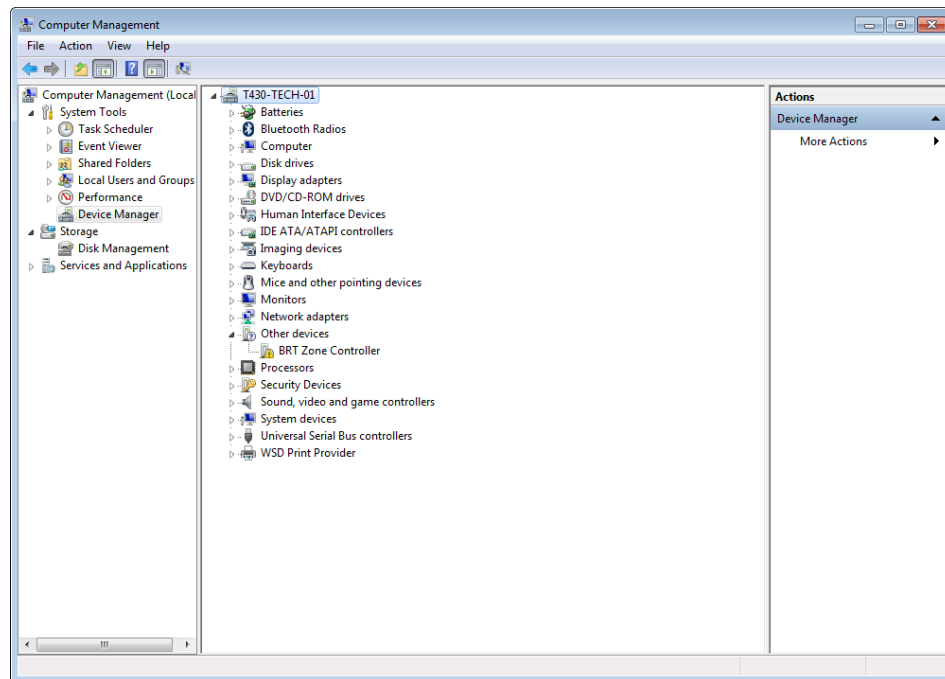


4. Click **Browse my computer for driver software**.

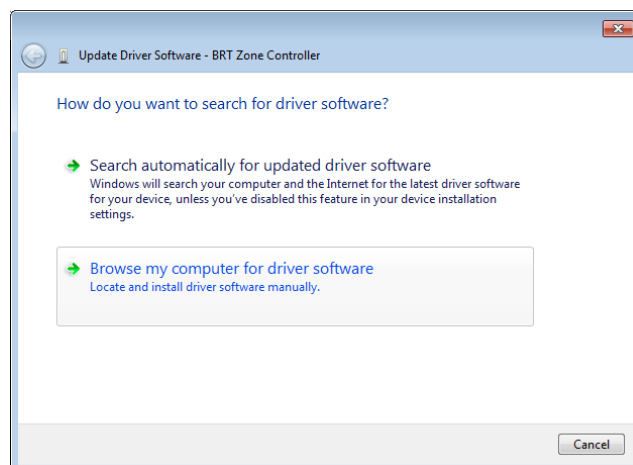

5. Browse for USB driver location and click **Next**.

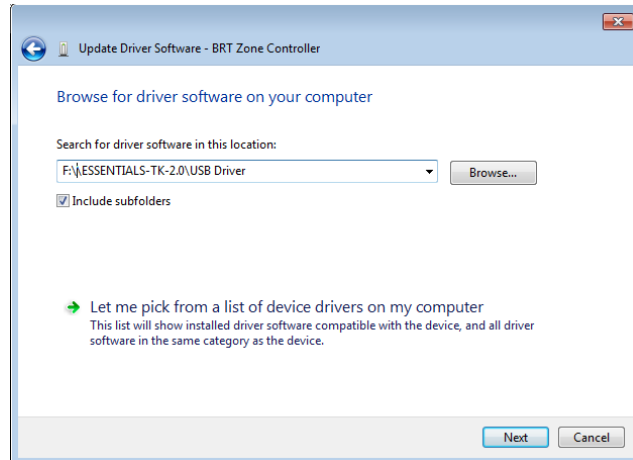

6. The Blue Ridge Technologies driver package has not been digitally signed yet, click **Install this driver software anyway**.

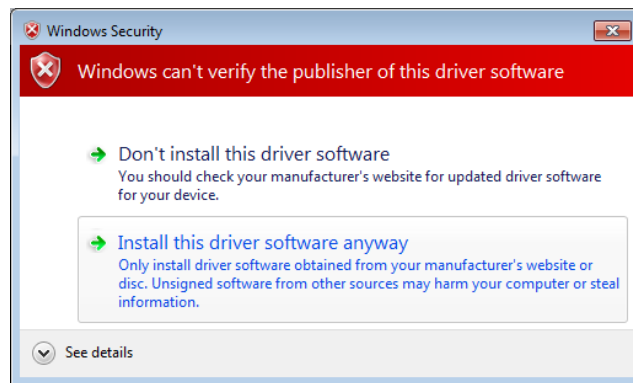

7. In the Update Driver Software pop-up window, Windows has successfully updated your driver software.

