

SIEMENS

Ingenuity for life

Industry Online Support

Home

S7-200 Smart to Stepper Drive Communication

S7-200 SMART V2.4/ TIA V15.1

<https://new.siemens.com/in/en/products/automation/systems/industrial/plc/simatic-s7-200-smart.html>

Siemens
Industry
Online
Support



Legal information

Use of application examples

Application examples illustrate the solution of automation tasks through an interaction of several components in the form of text, graphics and/or software modules. The application examples are a free service by Siemens AG and/or a subsidiary of Siemens AG ("Siemens"). They are non-binding and make no claim to completeness or functionality regarding configuration and equipment. The application examples merely offer help with typical tasks; they do not constitute customer-specific solutions. You yourself are responsible for the proper and safe operation of the products in accordance with applicable regulations and must also check the function of the respective application example and customize it for your system.

Siemens grants you the non-exclusive, non-sub licensable and non-transferable right to have the application examples used by technically trained personnel. Any change to the application examples is your responsibility. Sharing the application examples with third parties or copying the application examples or excerpts thereof is permitted only in combination with your own products. The application examples are not required to undergo the customary tests and quality inspections of a chargeable product; they may have functional and performance defects as well as errors. It is your responsibility to use them in such a manner that any malfunctions that may occur do not result in property damage or injury to persons.

Disclaimer of liability

Siemens shall not assume any liability, for any legal reason whatsoever, including, without limitation, liability for the usability, availability, completeness and freedom from defects of the application examples as well as for related information, configuration and performance data and any damage caused thereby. This shall not apply in cases of mandatory liability, for example under the German Product Liability Act, or in cases of intent, gross negligence, or culpable loss of life, bodily injury or damage to health, non-compliance with a guarantee, fraudulent non-disclosure of a defect, or culpable breach of material contractual obligations. Claims for damages arising from a breach of material contractual obligations shall however be limited to the foreseeable damage typical of the type of agreement, unless liability arises from intent or gross negligence or is based on loss of life, bodily injury or damage to health. The foregoing provisions do not imply any change in the burden of proof to your detriment. You shall indemnify Siemens against existing or future claims of third parties in this connection except where Siemens is mandatorily liable.

By using the application examples, you acknowledge that Siemens cannot be held liable for any damage beyond the liability provisions described.

Other information

Siemens reserves the right to make changes to the application examples at any time without notice. In case of discrepancies between the suggestions in the application examples and other Siemens publications such as catalogs, the content of the other documentation shall have precedence.

The Siemens terms of use (<https://support.industry.siemens.com>) shall also apply.

Security information

Siemens provides products and solutions with Industrial Security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the Internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit <https://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed at: <https://www.siemens.com/industrialsecurity>.

Table of contents

Legal information	2
1 Task	4
1.1 Overview of the automation task	4
2 Automation solution	5
2.1 Hardware and software components used	5
2.2 Setup.....	6
3 Functional mechanisms	7
3.1 Axis Control.....	7
3.2 Control program.....	7
4 Commissioning	12
4.1 Setting Motion Control Wizard.....	12
4.2 Downloading the SIMATIC program.....	18
5 Operation	20
5.1 Positioning.....	20
5.2 Profiling	22
6 Appendix	23
6.1 Service and support.....	23
6.2 Application support	24
6.3 Links and literature	24
6.4 Change documentation.....	24


1 Task

Communication between Stepper Drive and a PLC is often required in a diversity of general “Cutting-to-Lenght” applications. Taking reciprocating controlled positioning of an axis for example, communication between a controller (S7-200 Smart) and a Stepper Drive RHINO MOTION CONTROLS RMCS-1106.

1.1 Overview of the automation task

In the application, RMCS-1106 Stepper Drive controls a RMCS-1107 Stepper Motor using motion control wizard.

The following figure provides an overview of the automation task:

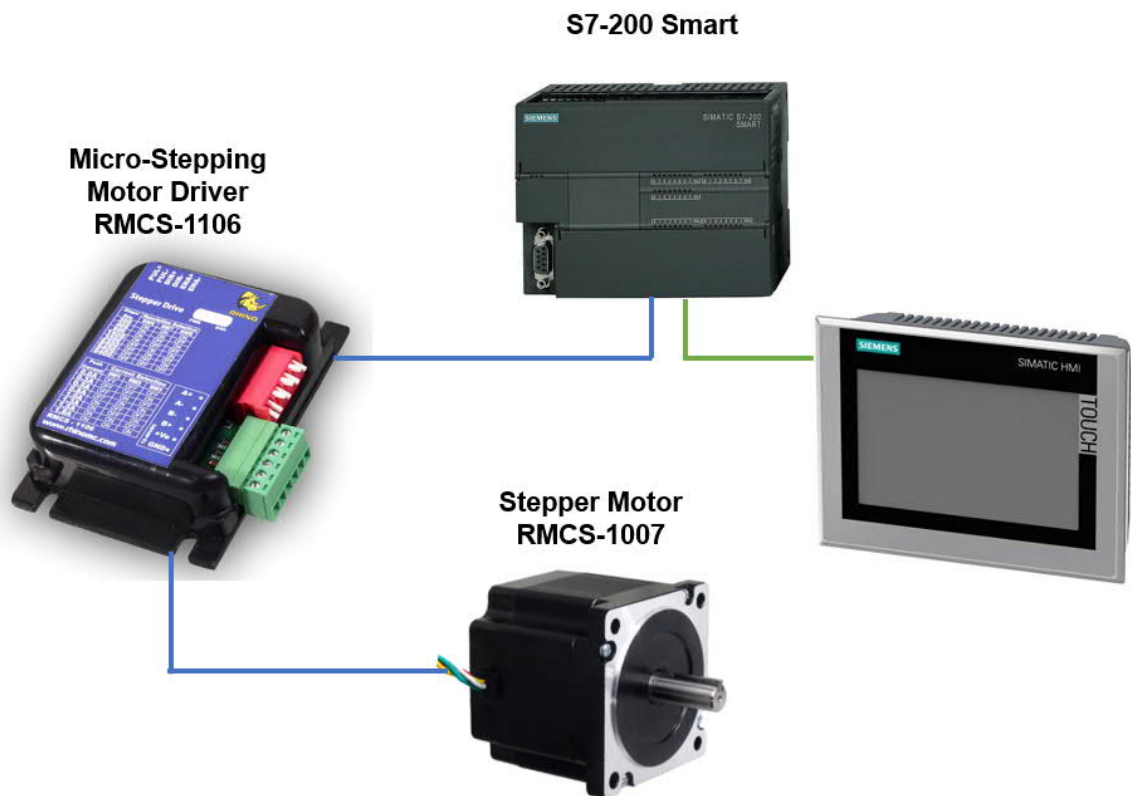

2 Automation solution

2.1 Hardware and software components used

2.1.1 Hardware components

No.	Component	Order number	Quantity
1	SIMATIC S7-200 Smart ST30	6ES72881ST300AA0	1
2	Micro-Stepping Motor Driver (Max. 40Vdc and 2A per phase)	RMCS-1106	1
3	Stepper Motor 3.75° Step Angle 0.65 Kgcm Torque	RMCS-1007	1
4	Comfort Panel TP 700	6AV2124-0GC01-0AX0	1
4	Ethernet Cable		1

2.1.2 Software components

User can order these CDs that contain the following software tools:


No.	Component	Order number	Quantity
1	STEP7 Micro/WIN SMART 2.4	6ES7288-SW01-0AA0	1

Note

Most of the hardware components shown in the table are commercially available in the global market. If unavailable in your country (or region), find an appropriate substitute at your own discretion.

The table lists key hardware components required for this project. Other accessories such as cables and wires, supports, terminal strips, and so on can be purchased separately.

2.2 Setup

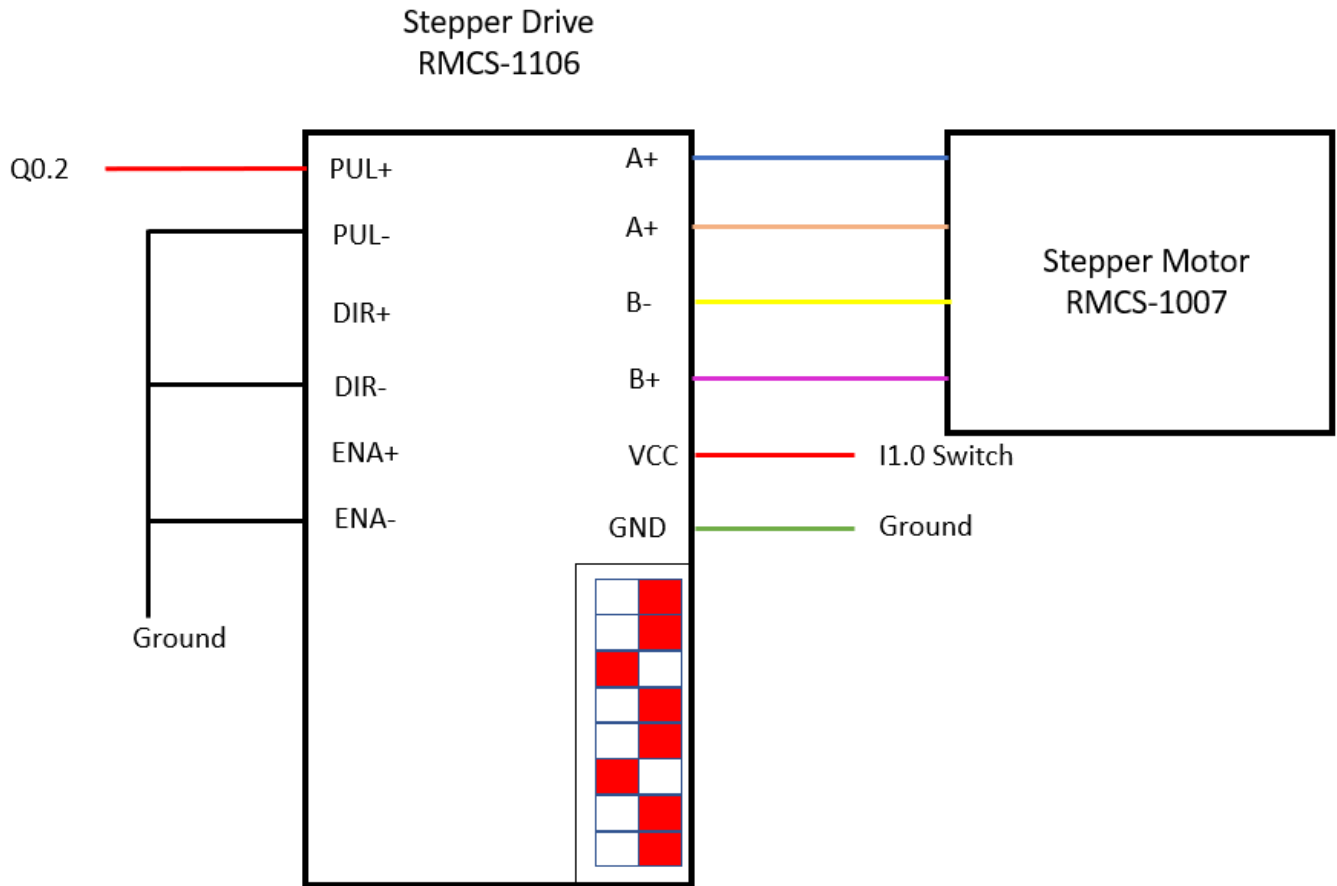

2.2.1 Figure 2-1 Stepper Motor connection

Note For more detail please refer operating manual of Stepper Drive RMCS-1106 and Stepper Motor RMCS-1007

3 Functional mechanisms

3.1 Axis Control

The Axis of Motion provides a single pulse train output with integrated direction control and disable outputs. It also includes programmable inputs which allow the CPU to be configured for several modes of operation, including automatic reference point seek. The Axis of Motion provides a unified solution for open loop control of the speed and position for either stepper motors or servo motors.

To simplify the use of motion control in your application, STEP 7-Micro/WIN SMART provides a Motion wizard to configure Axis of Motion and a PWM wizard to configure PWM. The wizards generate motion instructions that you can use to provide dynamic control of speed and motion in your application. For the Axis of Motion, STEP 7-Micro/WIN SMART also provides a control panel that allows you to control, monitor, and test your motion operations.

The motion control built into the CPU uses an Axis of Motion to control both the speed and motion of a stepper motor or a servo motor. Using the Axis of Motion requires expertise in the field of motion control. This chapter is not meant to educate the novice in this subject. However, it provides fundamental information that will help as you use the Motion wizard to configure the Axis of Motion for your application.

For more details refer operating manual section *12.2 Using Motion Control*

3.2 Control program

3.2.1 AXISx_CTRL subroutine

LAD / FBD	STL	Description
	<pre>CALL AXISx_CTRL, MOD_EN, Done, Error, C_Pos, C_Speed, C_Dir</pre>	<p>The AXISx_CTRL subroutine (Control) enables and initializes the Axis of Motion by automatically commanding the Axis of Motion to load the configuration/profile table each time the CPU changes to RUN mode.</p> <p>Use this subroutine only once in your project per motion axis, and ensure that your program calls this subroutine every scan. Use SM0.0 (Always On) as the input for the EN parameter.</p>

3.2.1.1 Figure 3-1

Input/output	Date Type	Value
MOD_EN	BOOL	I, Q, V, M, SM, S, T, C, L, Power Flow
Done, C_Dir	BOOL	I, Q, V, M, SM, S, T, C, L
Error	BYTE	IB, QB, VB, MB, SMB, SB, LB, AC, *VD, *AC, *LD
C_Pos, C_Speed	DINT, REAL	ID, QD, VD, MD, SMD, SD, LD, AC, *VD, *AC, *LD

The MOD_EN parameter must be on to enable the other motion subroutines to send commands to the Axis of Motion. If the MOD_EN parameter turns off, then the Axis of Motion aborts any command that is in progress and performs a decelerated stop.

The output parameters of the AXISx_CTRL subroutine provide the current status of the Axis of Motion.

The Done parameter turns on when the Axis of Motion completes any subroutine.

The C_Pos parameter is the current position of the Axis of Motion. Based upon the units of measurement, the value is either a number of pulses (DINT) or the number of engineering units (REAL).

The C_Speed parameter provides the current speed of the Axis of Motion. If you configured the measurement system for the Axis of Motion for pulses, C_Speed is a DINT value containing the number of pulses/second. If you configured the measurement system for engineering units, C_Speed is a REAL value containing the selected engineering units/second (REAL).

- Signal state of 0 = positive
- Signal state of 1 = negative

Note

The Axis of Motion reads the configuration/profile table only at power-up or when commanded to load the configuration.

- If you use the Motion wizard to modify the configuration, then the AXISx_CTRL subroutine automatically commands the Axis of Motion to load the configuration/profile table every time the CPU changes to RUN mode.
- If you use the Motion control panel to modify the configuration, clicking the Update Configuration button commands the Axis of Motion to load the new configuration/profile table.
- If you use another method to modify the configuration, then you must also issue an AXISx_CFG command to the Axis of Motion to load the configuration/profile table. Otherwise, the Axis of Motion continues to use the old configuration/profile table.

3.2.2 AXISx_GOTO subroutine

LAD / FBD	STL	Description
	<pre>CALL AXISx_GOTO, START, Pos, Speed, Mode, Abort, Done, Error, C_Pos, C_Speed</pre>	<p>The AXISx_GOTO subroutine commands the Axis of Motion to go to a desired location.</p>

3.2.2.1 Figure 3-2

Input/output	Date Type	Value
START	BOOL	I, Q, V, M, SM, S, T, C, L, Power Flow

Pos, Speed	DINT, REAL	I, Q, V, M, SM, S, T, C, L
Mode	BYTE	IB, QB, VB, MB, SMB, SB, LB, AC, *VD, *AC, *LD, Constant
Abort, Done	BOOL	I, Q, V, M, SM, S, T, C, L
Error	BYTE	IB, QB, VB, MB, SMB, SB, LB, AC, *VD, *AC, *LD
C_Pos, C_Speed	DINT, REAL	ID, QD, VD, MD, SMD, SD, LD, AC, *VD, *AC, *LD

Turn on the EN bit to enable the subroutine. Ensure that the EN bit stays on until the DONE bit signals that the execution of the subroutine has completed.

Turn on the START parameter to send a GOTO command to the Axis of Motion. For each scan when the START parameter is on and the Axis of Motion is not currently busy, the subroutine sends a GOTO command to the Axis of Motion. To ensure that only one GOTO command is sent, use an edge detection element to pulse the START parameter on.

absolute move) or the distance to move (for a relative move). Based upon the units of measurement selected, the value is either a number of pulses (DINT) or the engineering units (REAL).

The Speed parameter determines the maximum speed for this movement. Based upon the units of measurement, the value is either a number of pulses/second (DINT) or the engineering units/second (REAL).

The Mode parameter selects the type of move:

- 0: Absolute position
- 1: Relative position
- 2: Single-speed, continuous positive rotation
- 3: Single-speed, continuous negative rotation

The Done parameter turns on when the Axis of Motion completes this subroutine. Turn on the Abort parameter to command the Axis of Motion to stop execution of this command and decelerate until the motor comes to a stop.

The C_Pos parameter contains current position of the Axis of Motion. Based upon the units of measurement, the value is either a number of pulses (DINT) or the number of engineering units (REAL).

The C_Speed parameter contains the current speed of the Axis of Motion. Based upon the units of measurement, the value is either a number of pulses/second (DINT) or the engineering units/second (REAL).

3.2.3 AXISx_GOTO subroutine

LAD / FBD	STL	Description
	<pre>CALL AXISx_RUN, START, Profile, Abort, Done, Error, C_Profile, C_Step, C_Pos, C_Speed</pre>	<p>The AXISx_RUN subroutine (Run Profile) commands the Axis of Motion to execute the motion operation in a specific profile stored in the configuration/profile table.</p>

3.2.3.1 Figure 3-3

Input/output	Date Type	Value
START	BOOL	I, Q, V, M, SM, S, T, C, L, Power Flow
Profile	BYTE	IB, QB, VB, MB, SMB, SB, LB, AC, *VD, *AC, *LD, Constant
Abort, Done	BOOL	I, Q, V, M, SM, S, T, C, L
Error, C_Profile, C_Step	BYTE	IB, QB, VB, MB, SMB, SB, LB, AC, *VD, *AC, *LD
C_Pos, C_Speed	DINT, REAL	ID, QD, VD, MD, SMD, SD, LD, AC, *VD, *AC, *LD

Ensure that the EN bit stays on until the Done bit signals that the execution of the subroutine has completed.

Turn on the START parameter to send a RUN command to the Axis of Motion. For each scan when the START parameter is on and the Axis of Motion is not currently busy, the subroutine sends a RUN command to the Axis of Motion. To ensure that only one command is sent, use an edge detection element to pulse the START parameter on.

The Profile parameter contains the number or the symbolic name for the motion profile. The "Profile" input must be between 0 - 31. If not, the subroutine will return an error. Turn on the Abort parameter to command the Axis of Motion to stop the current profile and decelerate until the motor comes to a stop.

The Done parameter turns on when the Axis of Motion completes this subroutine. The Error parameter (Page 695) contains the result of this subroutine. The C_Profile parameter contains the profile currently being executed by the Axis of Motion.

The C_Step parameter contains the step of the profile currently being executed. The C_Pos parameter contains the current position of the Axis of Motion. Based upon the units of measurement, the value is either a number of pulses (DINT) or the number of engineering units (REAL).


The C_Speed parameter contains the current speed of the Axis of Motion. Based upon the units of measurement, the value is either a number of pulses/second (DINT) or the engineering units/second (REAL).

3.2.4 Error codes for the Motion instruction

Error Code	Description
0	No error
1	Aborted by user
2	Configuration error (This error occurs if there is an error in the SDB0 configuration.)
3	Illegal command
4	Aborted due to no valid configuration (This error occurs if there is an error in the configuration table.)
5	Reserved
6	Aborted due to no defined reference point
7	Aborted due to STP input active
8	Aborted due to LMT- input active
9	Aborted due to LMT+ input active
10	Aborted due to problem executing motion
11	No profile block configured for specified profile
12	Illegal operation mode
13	Operation mode not supported for this command
14	Illegal number of steps in profile block
15	Illegal direction change
16	Illegal distance
17	RPS/TRIG trigger occurred before target speed reached
18	Insufficient RPS active region width
19	Speed out-of-range
20	Insufficient distance to perform desired speed change
21	Illegal position
22	Zero position unknown
23	No DI1S output is defined
24	Reserved
25	Aborted due to CPU going to stop
26	Aborted due to expiration of Motion control panel heartbeat
27 to 127	Reserved
128	Axis of Motion cannot process this instruction: either the Axis of Motion is busy with another instruction, or there was no Start pulse on this instruction.
129	Reserved
130	Axis of Motion is not enabled
131	Reserved
132	Reserved
133	Illegal profile specified. The AXISx_RUN and AXISx_CACHE instructions profile number range must be between 0 - 31.
134	Illegal mode specified in AXISx_GOTO instruction

4 Commissioning

4.1 Setting Motion Control Wizard

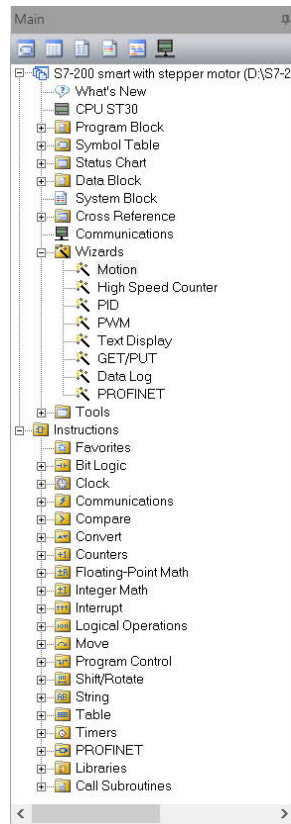

To start the Motion wizard, either click the Tools icon in the navigation bar and then double-click the Motion wizard icon, or select the Tools > Motion wizard menu command.

Motion Control Wizard

- ✓ Axes
 - ✓ Axis 1 (Axis 1)
 - ✓ Measurement System
 - ✓ Directional Control
 - ✓ Inputs
 - ✓ Outputs
 - ✓ Motor Speeds
 - ✓ JOG
 - ✓ Motor Times
 - ✓ Jerk Time
 - ✓ Backlash Compensation
 - ✓ Reference Point
 - ✓ Read Position
 - ✓ Profiles
 - ✓ Memory Allocation
 - ✓ Components
- ✓ Mapping
- ✓ Completion

Introduction

This wizard generates motion instructions based on the configuration and profile data you supply. You then place these instructions in your program to provide dynamic control of speed and position in your motion application.

A separate control panel is available to assist you in commissioning and monitoring your motion application.

Number of Axes

Select axes to configure.

- Axis 0 (Axis 0)
- Axis 1 (Axis 1)
- Axis 2 (Axis 2)

< Previous Next > Generate Cancel

Motion Control Wizard

- ✓ Axes
 - ✓ Axis 1 (Axis 1)
 - ✓ Measurement System
 - ✓ Directional Control
 - ✓ Inputs
 - ✓ Outputs
 - ✓ Motor Speeds
 - ✓ JOG
 - ✓ Motor Times
 - ✓ Jerk Time
 - ✓ Backlash Compensation
 - ✓ Reference Point
 - ✓ Read Position
 - ✓ Profiles
 - ✓ Memory Allocation
 - ✓ Components
- ✓ Mapping
- ✓ Completion

Measurement System

All speeds and distances will be specified by using the following measurement system.

Select measurement system
Engineering Units

Specify the engineering units that should be used to configure your motion profiles. All subsequent distances and speeds in this configuration will maintain the selected unit of measurement.

Number of pulses required for one motor revolution
1600

Base unit of measurement
mm


One motor revolution produces how many 'mm' of motion?
60.0

< Previous Next > Generate Cancel

Motion Control Wizard

- Axes
 - Axis 1 (Axis 1)
 - Measurement System
 - Directional Control
 - Inputs
 - Outputs
 - Motor Speeds
 - JOG
 - Motor Times
 - Jerk Time
 - Backlash Compensation
 - Reference Point
 - Read Position
 - Profiles
 - Memory Allocation
 - Components
- Mapping
- Completion

This diagram shows the different motor speeds that can be configured.

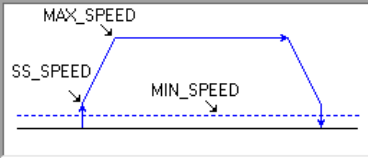

Maximum
What is the maximum motor speed for the application (MAX_SPEED)?
 mm/s


Minimum
With the value you have entered for MAX_SPEED, the minimum speed (MIN_SPEED) that can be specified in a motion profile is:
 mm/s

Start/Stop
What is the Start/Stop Speed for the motor (SS_SPEED)?
 mm/s

Motion Control Wizard

- Axes
 - Axis 1 (Axis 1)
 - Measurement System
 - Directional Control
 - Inputs
 - Outputs
 - Motor Speeds
 - JOG
 - Motor Times
 - Jerk Time
 - Backlash Compensation
 - Reference Point
 - Read Position
 - Profiles
 - Memory Allocation
 - Components
- Mapping
- Completion

The JOG command is used to manually move the tool to a desired location. When the module receives a JOG command for less than 0.5 seconds, it will move the tool a specified distance. Continually issuing the JOG command will result in acceleration to the JOG speed. When the JOG command is terminated, the module will command a decelerated stop.

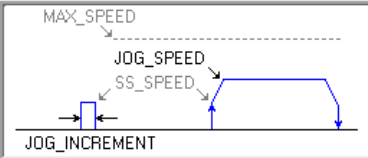

Speed
What is the jog speed for the motor (JOG_SPEED)?
 mm/s

Increment
Specify the distance that the tool should be moved by a JOG command received for less than 0.5 seconds (JOG_INCREMENT).
 mm

Motion Control Wizard

- Axes
 - Axis 1 (Axis 1)
 - Measurement System
 - Directional Control
 - Inputs
 - Outputs
 - Motor Speeds
 - JOG
 - Motor Times
 - Jerk Time
 - Backlash Compensation
 - Reference Point
 - Read Position
 - Profiles
 - Profile
 - Memory Allocation
 - Components
- Mapping
- Completion

Profiles

Create a name and add a comment for each profile you want to use.

	Name	Comment	
1	Profile		<input type="button" value="Add"/> <input type="button" value="Copy"/> <input type="button" value="Delete"/> <input type="button" value="Move Up"/> <input type="button" value="Move Down"/>

< Previous
Next >

Motion Control Wizard

- Axes
 - Axis 1 (Axis 1)
 - Measurement System
 - Directional Control
 - Inputs
 - Outputs
 - Motor Speeds
 - JOG
 - Motor Times
 - Jerk Time
 - Backlash Compensation
 - Reference Point
 - Read Position
 - Profiles
 - Profile
 - Memory Allocation
 - Components
 - Mapping
 - Completion

Profile

Select the mode of operation for this profile

Relative Position ▼

Profiles configured for Absolute Position and Relative Position allow up to 16 individual steps to be configured. Each step allows you to specify the target speed and position.

	Target Speed (mm/s)	Ending Position (mm)	
1	10.0	20.0	<input type="button" value="Add"/> <input type="button" value="Copy"/> <input type="button" value="Delete"/> <input type="button" value="Move Up"/> <input type="button" value="Move Down"/>
2	2.0	8.6	

< Previous
Next >

Motion Control Wizard

- Axes
 - Axis 1 (Axis 1)
 - Measurement System
 - Directional Control
 - Inputs
 - Outputs
 - Motor Speeds
 - JOG
 - Motor Times
 - Jerk Time
 - Backlash Compensation
 - Reference Point
 - Read Position
 - Profiles
 - Profile
 - Memory Allocation
 - Components
- Mapping
- Completion

Memory Allocation

Please specify a starting address where the configuration will be placed in the Data Block. The wizard can also suggest an address that represents an unused block of V-memory of the correct size.

VB - VB1224 (112 bytes)

Motion Control Wizard

- Axes
 - Axis 1 (Axis 1)
 - Measurement System
 - Directional Control
 - Inputs
 - Outputs
 - Motor Speeds
 - JOG
 - Motor Times
 - Jerk Time
 - Backlash Compensation
 - Reference Point
 - Read Position
 - Profiles
 - Profile
 - Memory Allocation
 - Components
- Mapping
- Completion

Components

The requested configuration consists of the following project components:

	Component	Description	Gener...
0	AXIS1_DATA	Data page with configuration placed at (...)	
1	AXIS1_SYM	Symbol table created for this configuration	
2	AXIS1_CTRL	Subroutine initialize position module	
3	AXIS1_CFG	Subroutine reload configuration	<input checked="" type="checkbox"/>
4	AXIS1_DIS	Subroutine activate DIS output	<input checked="" type="checkbox"/>
5	AXIS1_GOTO	Subroutine go To move	<input checked="" type="checkbox"/>
6	AXIS1_LD OFF	Subroutine load reference point offset	<input checked="" type="checkbox"/>
7	AXIS1_LD POS	Subroutine load position	<input checked="" type="checkbox"/>
8	AXIS1_MAN	Subroutine manual mode	<input checked="" type="checkbox"/>
9	AXIS1_RSEEK	Subroutine seek reference point position	<input checked="" type="checkbox"/>
10	AXIS1_RUN	Subroutine run profile	<input checked="" type="checkbox"/>
11	AXIS1_SRATE	Subroutine set rate	<input checked="" type="checkbox"/>
12	AXIS1_CACHE	Subroutine preloads a profile into cache	<input checked="" type="checkbox"/>

Call the initialization and control subroutine AXIS0_CTRL every program scan. The wizard will only generate subroutines that are checked. These subroutines can be used to interface with the built-in motion. Uncheck subroutines you do not want to include.

Motion Control Wizard

- Axes
 - Axis 1 (Axis 1)
 - Measurement System
 - Directional Control
 - Inputs
 - Outputs
 - Motor Speeds
 - JOG
 - Motor Times
 - Jerk Time
 - Backlash Compensation
 - Reference Point
 - Read Position
 - Profiles
 - Profile
 - Memory Allocation
 - Components
 - Mapping
 - Completion

Mapping

I/O mapping table

	Axis	Type	Address
0	Axis 1	P0	Q0.1
1	Axis 1	P1	Q0.7


< Previous Next > Generate Cancel

4.2 Downloading the SIMATIC program

This chapter describes the steps for the installation of the example code.

We offer you examples with test code test parameters as a download. The software examples support you during the first steps and tests with your STEP7-Micro/WIN SMART. The enable quick testing of hardware and software interfaces between the products described in the tool.


No.	Action	Remarks
1.	Start STEP7-Micro/WIN SMART	

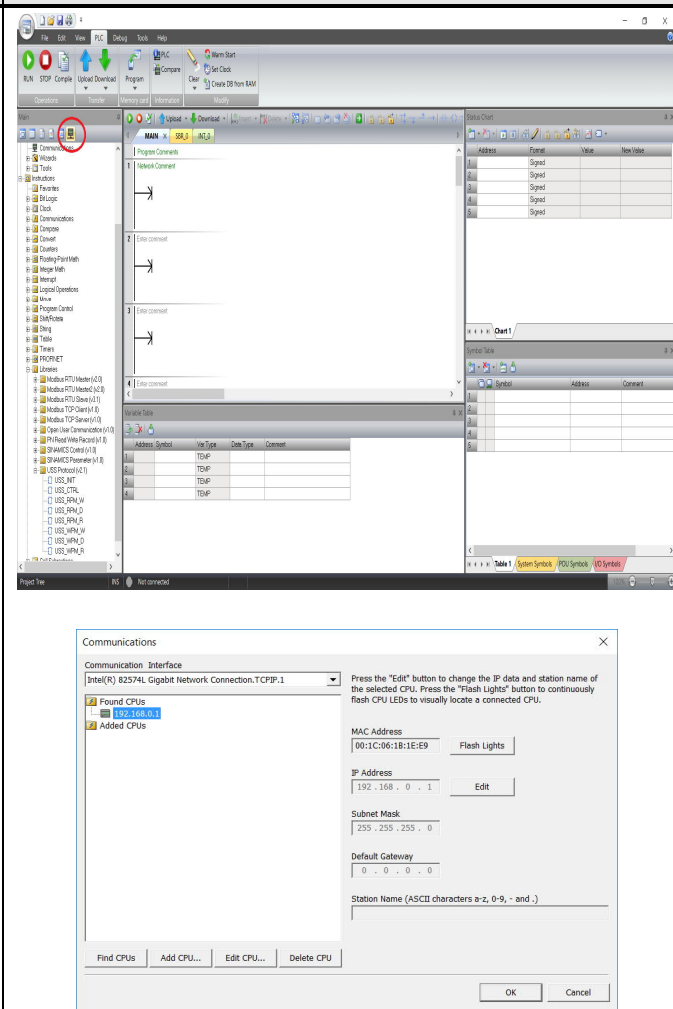No.	Action	Remarks
3.	<p>Call up “Communication”. Click “Communication” and select the right “Find PLC”. (All types of S7-200 SMART are available.)</p>	

5 Operation

Here we have HMI screen shown below for controlling the operations i.e.

- 1) Controlling with settable position and speed.
- 2) Controlling with 'Profile' function.


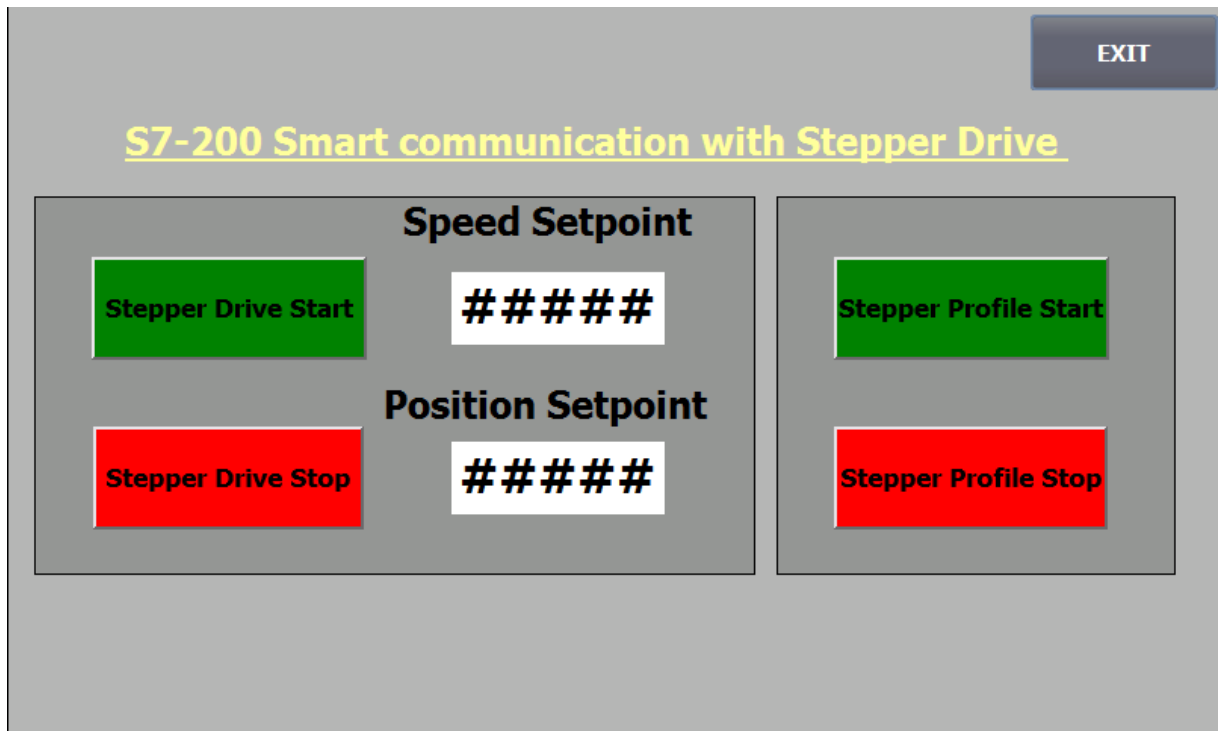


5.1 Positioning

Address	Value	Description
V700.2	1	Start Positioning
VD714	Entered from HMI	Speed
VD710	Entered from HMI	Position

5.1.1 Table 5-1 Positioning address

When you set the input signals as indicated in the Table 5-1, the status changes are shown as follows:

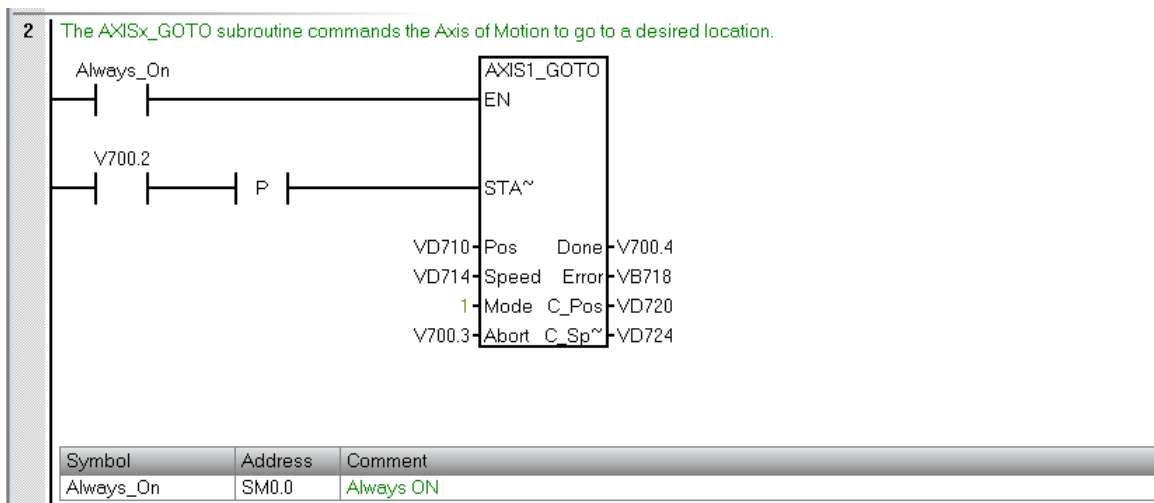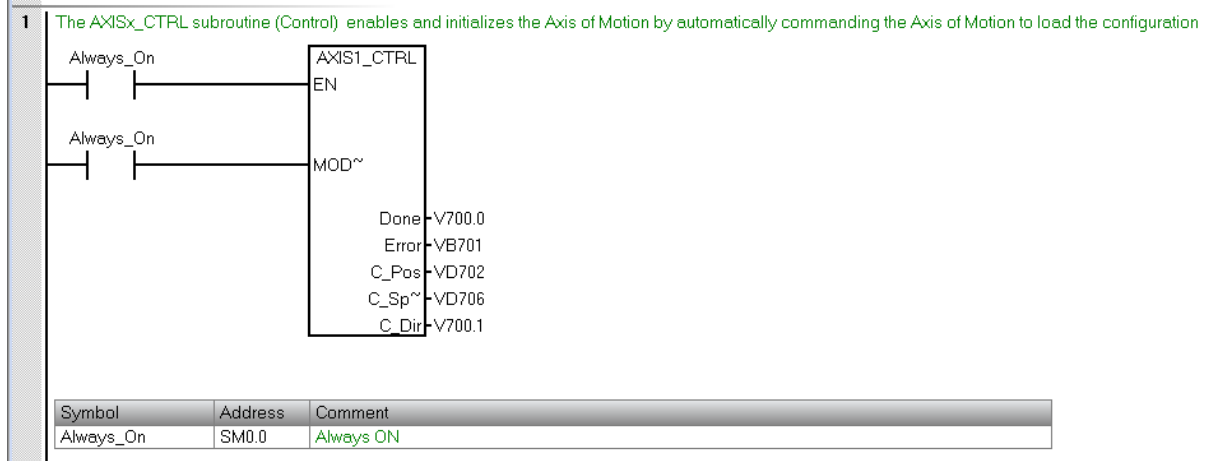


5.2 Profiling

Address	Value	Description
V700.2	1	Start Profiling
VB1223	Entered from HMI	Profile Selection
V700.3	Entered from HMI	Abort

5.1.2 Table 5-2 Profiling address

When you set the input signals as indicated in Table5-2, the status changes are shown as follows:

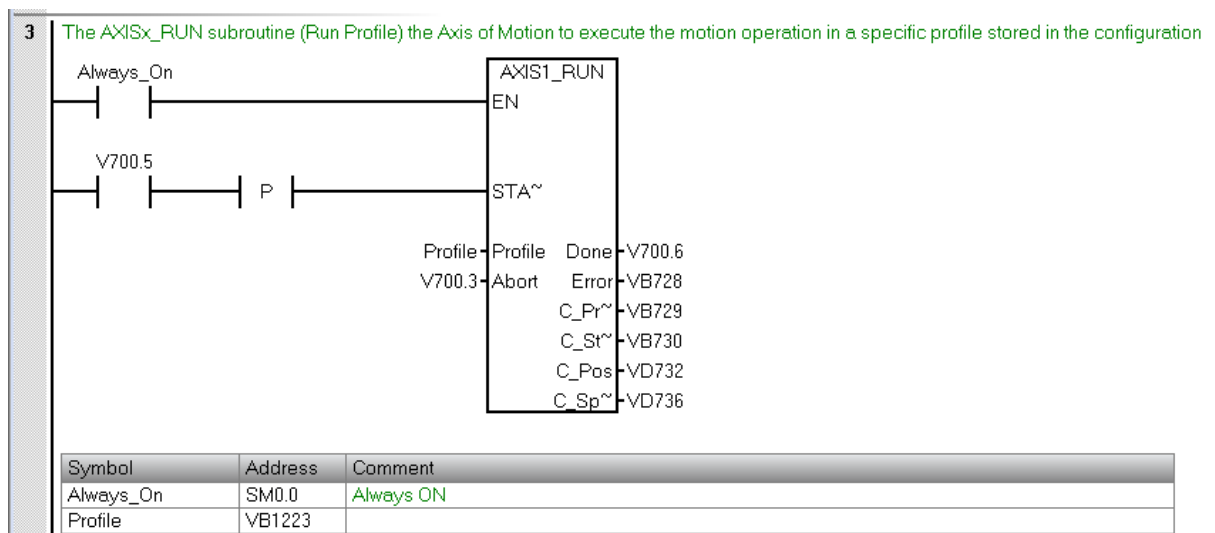

6 Appendix

6.1 Service and support

Industry Online Support

Do you have any questions or need assistance?

Siemens Industry Online Support offers round the clock access to our entire service and support know-how and portfolio.

The Industry Online Support is the central address for information about our products, solutions and services.

Product information, manuals, downloads, FAQs, application examples and videos – all information is accessible with just a few mouse clicks:

support.industry.siemens.com

Technical Support

The Technical Support of Siemens Industry provides you fast and competent support regarding all technical queries with numerous tailor-made offers

– ranging from basic support to individual support contracts. Please send queries to Technical Support via Web form:

www.siemens.com/industry/supportrequest

SITRAIN – Training for Industry

We support you with our globally available training courses for industry with practical experience, innovative learning methods and a concept that's tailored to the customer's specific needs.

For more information on our offered trainings and courses, as well as their locations and dates, refer to our web page:

www.siemens.com/sitrain

Service offer

Our range of services includes the following:

- Plant data services
- Spare parts services
- Repair services
- On-site and maintenance services
- Retrofitting and modernization services
- Service programs and contracts

You can find detailed information on our range of services in the service catalog web page:

support.industry.siemens.com/cs/sc

Industry Online Support app

You will receive optimum support wherever you are with the "Siemens Industry Online Support" app. The app is available for Apple iOS, Android and Windows Phone:

support.industry.siemens.com/cs/ww/en/sc/2067

6.2 Application support

Siemens Ltd
 RC-IN DI FA TECH SUP
 Thane Belapur Road
 Thane 400601, India

Pre-sales Support
 Email: rginslpresales-fa.in@siemens.com

6.3 Links and literature

Table 6-1

	Topic	Title / link
/1/	Reference to the document	
/2/	Siemens Industry Online Support	http://support.automation.siemens.com
/3/	Industry Mall-Siemens DE	https://eb.automation.siemens.com/goos/WelcomePage.aspx?regionUrl=/de&language=en
/4/	S7-200 SMART System Manual	https://assets.new.siemens.com/siemens/assets/api/uuid:aa045b50-b9f4-4e46-a4c4-ca882c5f00ec/version:1573480788/s7-200-smart-system-manual-en-us.pdf
/5/	S7-200 SMART website	https://new.siemens.com/in/en/products/automation/systems/industrial/plc/simatic-s7-200-smart.html

6.4 Change documentation

Table 6-2

Version	Date	Modifications
V1.0	01/2020	First version