

FiRe-78-4 Installation and Operating Manual

Version 0.2



**3116 West Vanowen St.
Burbank, CA 91505
Tel: 818-840-8131
Fax: 818-840-8138**

www.adrftech.com



Information in this document is subject to change without notice.

*Advanced RF Technologies, Inc. 1996-2015.
All rights reserved.*

- Please send comments to:

E-Mail: info@adrfttech.com

Phone: (818) 840-8131

(800) 313-9345

Fax: (818) 840-8138

- Address:

Advanced RF Technologies, Inc.
Attention: Technical Publications Department
3116 Vanowen St.
Burbank, CA 91505
USA
www.adrfttech.com

Revision History

Version	Author	Descriptions	Date
0.1	YH Ko	Initial Release	2017/11/17
0.2	CK CHO	Update	2018/01/09

Change List

Version	Change list	Contents

Table of Contents

1.	Introduction	6
1.1	Highlights	6
1.2	Quick View	7
1.3	Warnings and Hazards	8
2.	Topology	12
3.	Cable Connection	12
3.1	AC Power	12
3.2	External Alarm	13
3.3	RF	13
3.4	Optic	14
3.5	Battery	15
3.6	Grounding	15
4.	RF EXPOSURE WARNING	16
5.	Installation	17
6.	default items	17
7.	Specifications	17
7.1	Electrical Specifications	18
7.2	Mechanical Specifications	19

Figures

Figure 1-1	FiRe-78-4 Quick View (front and bottom)	7
Figure 2-1	FiRe-78-4 DAS topology	12
Figure 3-1	AC Power port	12
Figure 3-2	External Alarm port	13
Figure 3-3	RF port	13
Figure 3-4	Optic port	14
Figure 3-5	Optic Connector Cleaning (left) and Optic Port Cleaning (right)	14
Figure 3-6	SC/APC Optic Connector Dust Cap	15
Figure 3-7	Protective Earthing Conductor	16

Terms and Abbreviations

The following is a list of abbreviations and terms used throughout this document.

Abbreviation/Term	Definition
AGC	Automatic Gain Control
ALC	Automatic Level Control
AROMS	ADRF' Repeater Operation and Management System
BCU	Band Combiner Unit
BTS	Base Transceiver Station
BDA	Bi-directional Amplifier
CDMA	Code Division Multiple Access
CHC	Channel combiner
CW	Continuous Wave (un-modulated signal)
DAS	Distributed Antenna System
DL	Downlink
Downlink	The path covered from the Base Transceiver Station (BTS) to the subscribers' service area via the repeater
HE	Head End
HPA	High Power Amplifier
HW	Hardware
IF	Intermediate Frequency
LNA	Low Noise Amplifier
LTE	Long Term Evolution
MS	Mobile Station
NMS	Network Management System
ODU	Optical Donor Unit which is located in ADXV-HE.
OEU	Optic Expansion Unit
PLL	Phased Locked Loop
POI	Point Of Interface
PSU	Power Supply Unit
RF	Radio Frequency
RU	Remote Unit which is composed of master RU and multiple slaves RU
RM	Remote Module
SW	Software
UL	Uplink
Uplink	The path covered from the subscribers' service area to the Base Transceiver Station (BTS) via the repeater
VSWR	Voltage Standing Wave Ratio

1. INTRODUCTION

FiRe-78-4 which is the wireless Head end of Distributed Antenna System for VHF/UHF band has roles which interfaces with Base Station via wireless and optically distributes by connection with multiple ADXV-R-3378P-N4X, which is one of the ADRF's DAS product lineups, via optic lines.

1.1 Highlights

- Head end supporting 700MHz, 800MHz and Public Safety service band of DAS connected through optic line to ADXV-R-3378P-N4X playing a role of Remote unit of DAS for 700/800MHz/Public Safety band
- Fanless
- Supports a total of 2 wide band and up to 32 non-contiguous narrow band channels (700MHz + 800MHz PS)
- Air convection cooling without fans
- Sharp Filter Roll-off performance (Wide: 60dBc @ Filter Bandwidth Edge + 1MHz | Narrow: 55dBc @ Filter Bandwidth Edge + 3 * Filter BW)
- Supports SNMP v1, v2c, v3 (get, set, & traps)
- Web-based GUI Interface; No 3rd party GUI software required
- Web-GUI connectivity via DHCP in host mode
- External Alarm Function supporting dry contacts, 11 outputs and 1 input

1.2 Quick View

Figure 1-1 FiRe-78-4 Quick View (front and bottom)

1.3 Warnings and Hazards



WARNING! ELECTRIC SHOCK

Opening the PSR-VU-9537 could result in electric shock and may cause severe injury.



WARNING! EXPOSURE TO RF

Working with the PSR-VU-9537 while in operation, may expose the technician to RF electromagnetic fields that exceed FCC rules for human exposure. Visit the FCC website at www.fcc.gov/oet/rfsafety to learn more about the effects of exposure to RF electromagnetic fields.



RF EXPOSURE & ANTENNA PLACEMENT Guidelines

Actual separation distance is determined upon gain of antenna used.

Please maintain a minimum safe distance of at least 200 cm while operating near the donor and the server antennas.

WARRANTY

Opening or tampering the FiRe -78-4 will void all warranties.

Lithium Battery: CAUTION. RISK OF EXPLOSION IF BATTERY IS REPLACED BY INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS.

Preclude indications that Home/ personal use are prohibited.

Use of unauthorized antennas, cables, and/or coupling devices not conforming with ERP/EIRP is prohibited.

FCC Part 15 Class B

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

FCC Part 90 Class A

WARNING. THIS is NOT a CONSUMER device. It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You MUST have an FCC LICENSE or express consent of an FCC Licensee to operate this device. You MUST register Class A signal boosters (as defined in 47 CFR 90.219) online at www.fcc.gov/signal-boosters/registration. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

This device is only for Class A. According to FCC/ISED requirement, the passband of a Class B booster (except for DAS boosters installed in buildings) should not encompass CMRS along with part 90 PLMRS and/or PSRS.

Part 90.635 requirement

Antennas must be installed in accordance with FCC 90.635. With 17 dBi gain antennas the height of the antenna above average terrain (HAAT) must not exceed 85 m. For different gain antennas refer to the relevant rules.

WARRANTY

This is NOT a CONSUMER device. It is designed for installation by an installer approved by an ISED licensee. You MUST have an ISED LICENCE or the express consent of an ISED licensee to operate this device.

FCC Part 15.21

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

RSS-GEN, Sec. 7.1.2– (transmitters)

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada.

Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

RSS-GEN, Sec. 7.1.2– (detachable antennas)

This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

RF Radiation Exposure

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 200 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas require larger separation distances.

RSS-102 RF Exposure

L'antenne (ou les antennes) doit être installée de façon à maintenir à tout instant une distance minimum de au moins 200 cm entre la source de radiation (l'antenne) et toute personne physique. Cet appareil ne doit pas être installé ou utilisé en conjonction avec une autre antenne ou émetteur.

2. TOPOLOGY

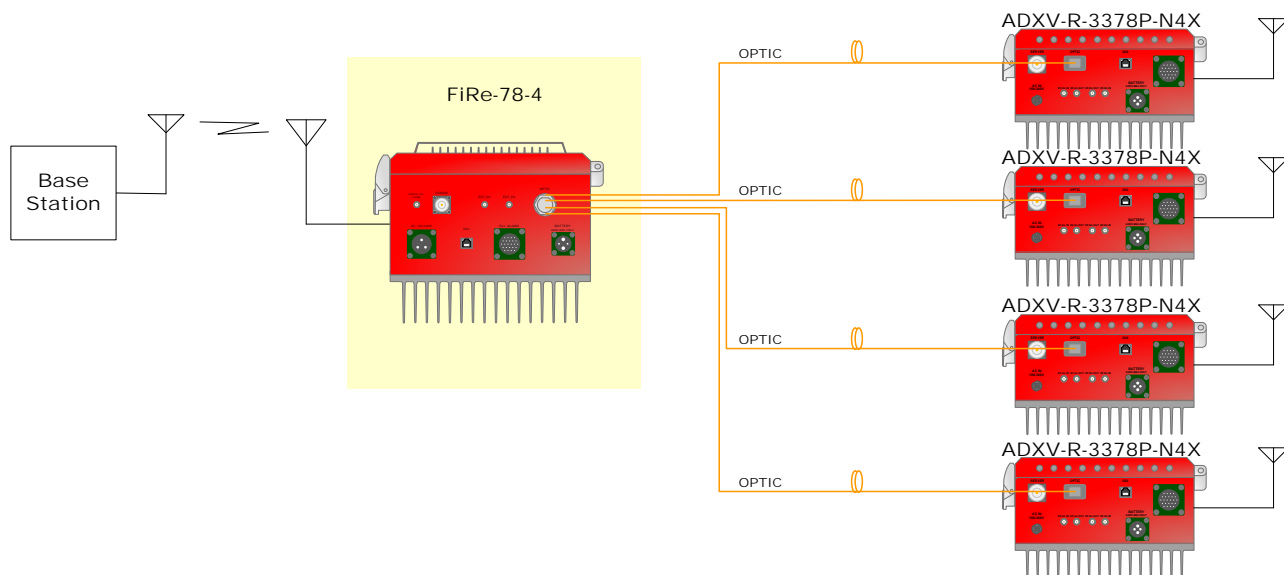


Figure 2-1 FiRe-78-4 DAS topology

3. CABLE CONNECTION

3.1 AC Power

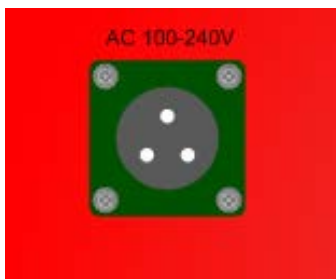


Figure 3-1 AC Power port

AC power is accepted through a standard 3-wire male plug (MS3106A-22-2S) with phase, neutral and ground leads. The AC power is wired to a high efficiency DC switching power supply which is UL listed. The power supply runs the amplifiers and device including RF Module, controller, LED, etc.

The metal enclosure of this equipment is connected to ground.

3.2 External Alarm

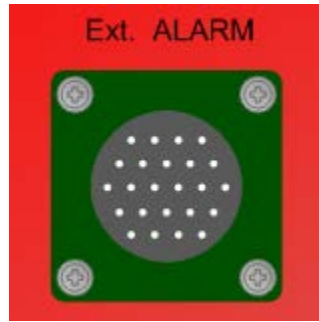


Figure 3-2 External Alarm port

This port should be connected only to ADRF External Alarm Box.

3.3 RF

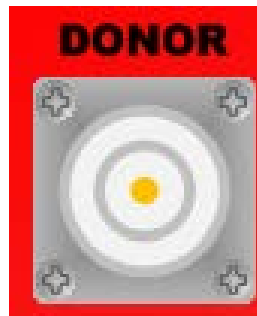


Figure 3-3 RF port

The RF connections are made via three “4.3-10” female connectors. The RF connector labeled “DONOR” must be connected to each antenna pointing towards the base station.

The RF connections must be made through cables with characteristic impedance of 50 ohms.

3.4 Optic

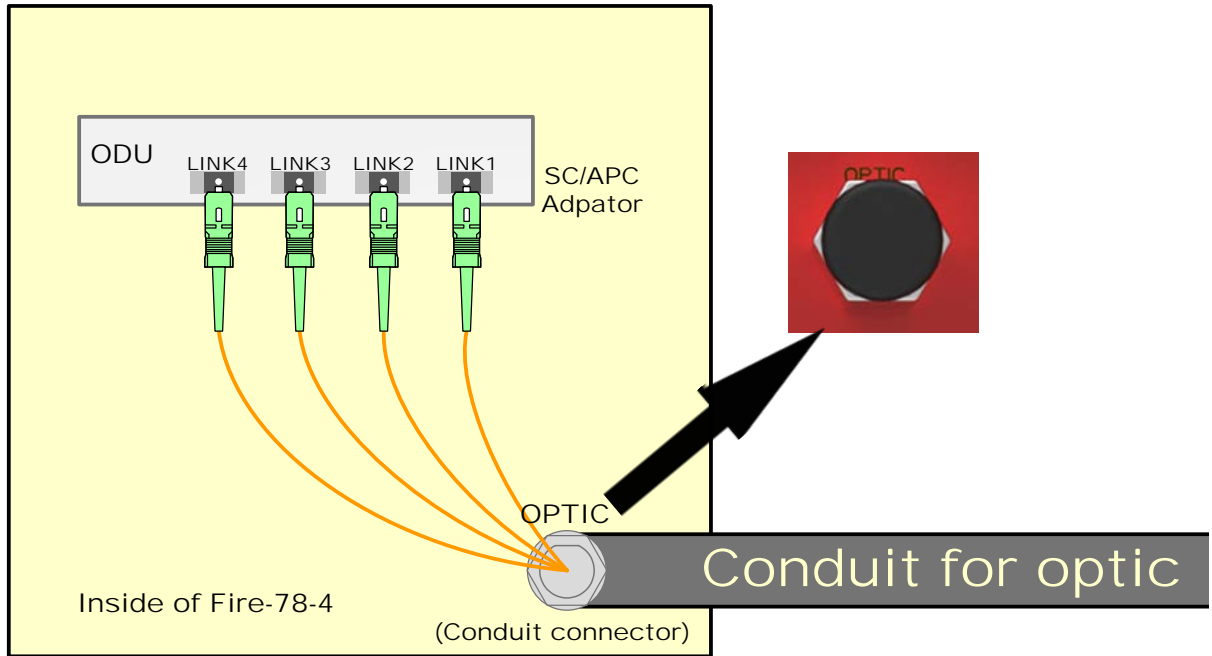


Figure 3-4 Optic port

ODU located inside of equipment has 4 optic ports (SC/APC type) for link to ADXV-R-3378P-N4Xs.

You must verify to keep optic contact be clean and optic line's curvature be not allowed in order to be free from optic loss when you install optic line and conduit.

- We recommend cleaning optic connector using a dry optical cleaning swab or tissue in a dry environment as needed. We recommend cleaning the optic connectors only if the expected optic loss is higher than the loss reported in the Web-GUI by 1.5dB_o. (Figure 3-5)
- When optic connector are not in use, the port should be covered with a protective dust cap. (Figure 3-6)
-

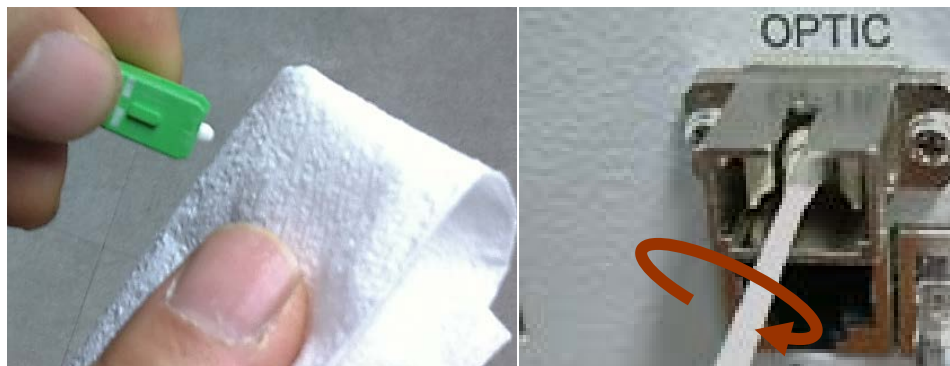


Figure 3-5 Optic Connector Cleaning (left) and Optic Port Cleaning (right)

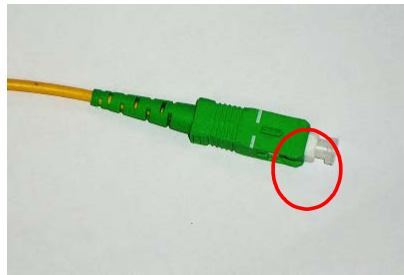


Figure 3-6 SC/APC Optical Connector Dust Cap

3.5 Battery

This port should be connected to ADRF 24VDC BBU (Battery back-up unit) via dedicated cable provided by ADRF.

3.6 Grounding

A ground cable is included in the box. The grounding terminals are located at lower right-hand side of the equipment. The grounding cable should be properly connected before powering on the equipment.

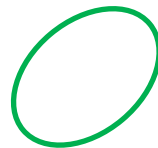


Figure 3-7 Protective Earthing Conductor

Ground terminals located on the side consisted of a 16mm²(6AWG) and should be permanently connected to earth(Protective earthing conductor).

4. RF EXPOSURE WARNING

In order to comply with the FCC RF exposure requirements, the antenna installation must comply with the following:

The outdoor antenna (Yagi type or similar directional antenna if off air donor signal used) must be installed so as to provide a minimum separation distance of 0.3 meters (60 cm) between the antenna and persons within the area. (This assumes a typical antenna with gain of [10.1 dBi, VSWR ≤ 1.5:1, Zo= 50 ohms, and a cable attenuation between 1-10 dB).

The indoor antenna (Omni directional or leaky cable) must be installed so as to provide a minimum separation distance of at least 8 inches (20 cm) between the indoor antenna connected to the RF booster and the human user's

body within the area. (This assumes a typical wide beam type antenna with gain of 0-2 dBi, VSWR \leq 2:1, Zo= 50 ohms, and a cable attenuation of between 1-10 dB).

5. INSTALLATION



WARNING. This is **NOT** a **CONSUMER** device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an FCC Licensee to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

DO NOT APPLY A.C. POWER TO THE BDA UNTIL CABLES ARE CONNECTED TO BOTH PORTS OF THE BDA AND THE ANTENNAS.

1. To mount on a wall. Using appropriate screws and anchors, attach the BDA to the wall at the four mounting holes
 2. Ensure that the isolation between the donor antenna and the service antenna is at least 15 dB greater than the BDA gain.
 3. Connect the cable from the donor antenna to the BDA connector labeled “DONOR” and the cable from the service antennas to the BDA connector labeled “SERVER”.
 4. Connect the AC power cord to the BDA and turn on the switch at the left-hand of PSU.
 5. Installation of the equipment is now complete. Adjust the gain controls to suit the specific signal environment through GUI on your PC.
- To prevent feedback, the donor and server antennas must be separated by an appropriate distance to provide sufficient isolation. Isolation is attained by separating antennas a sufficient distance so that the output of one antenna does not reach the input of the other. This distance is dependent on the gain of the repeater.
 - Prior to equipment use the service must be registered with the FCC. This can be done through the FCC’s website at <https://signalboosters.fcc.gov/signal-boosters>)

6. DEFAULT ITEMS

Items	Model name
Antenna	
Cable	
Coupling device	

7. SPECIFICATIONS

7.1 Electrical Specifications

Parameters		Specifications		Remarks
		DL	UL	
Frequency Range (MHz)	PS 700	769 - 775MHz(For FCC) (768-769MHz Guard band) 768 - 775 MHz (For ISSED)	799 - 805 MHz(For FCC) (798- 799MHz Guard band) 798- 805 MHz (For ISSED)	
	PS 800	851 - 861	806 - 816	
Composite Output Power of FiRe-78-4	PS 700	-24dBm	30dBm	
	PS 800	-24dBm	30dBm	
	PS 700 + PS 800	-24dBm	30dBm	
Composite Output Power of FiRe-78-4+ADXV-R-78PS	PS 700	33dBm	30dBm	
	PS 800	33dBm	30dBm	
System total Gain (dB) [FiRe-78-4+ ADXV-R-3378P-N4X]		95	85	
System total Input power [FiRe-78-4+ADXV-R-3378P-N4X]		-62dBm	-55dBm	
Filter selection		Narrow		
Simultaneous Filter Support numbers	Narrow Band	Up to 16(Non-contiguous) @ PS 700 / PS 800 Up to 32(Non-contiguous) @ PS 700 + PS 800		
	Narrow(kHz)	6.25, 12.5, 25		
	Narrow(kHz)	≥ 60dBc@Filter Bandwidth Edge + 3 x Filter BW		
Spurious		FCC Rule Compliant		
Passband Ripple		±2 dB		
ALC Dynamic Range		≥ 60dB		DL Path Only
Gain Dynamic Range		≥ 40dB		
Channel Setting Resolution		0.025 kHz		
System Group Delay	Broad Band	<6.5us		Except of optic cable delay, Except of ADXV-R-3378P-N4X
	Narrow Band	≤85us@6.25KHz_BW ≤46us@12.5KHz_BW ≤28us@25KHz_BW		
Power Supply		100 -240 VAC, 60Hz (Free Voltage)		With battery backup,
Power Consumption		< 135Watt		
Max RF Input Power without over drive		-20dBm		
UL Noise Figure @ Max. Gain		5.0dB Center Frequency		[ADXV-R-3378P-N4X+ FiRe-78-4]
No damage Max Input Power		+10dBm		DL Path Only
Enclosure Cooling		Natural Convection		
Impedance		50 Ω		
VSWR		<1.5 : 1		DL/UL Input
ODU number per NEMA4-x		1 ODUs(; max 4 RUs)		
Dry Contacts		NFPA 72 2016 Code Compliant		
Remote Alarming / Network Management		Dry Contacts, Web-GUI, SNMP, SNMP-Traps (External Wireless Modem Required)		
Relative Humidity		5% - 90%		
Operating Temperature		-40°F to +140°F (-40°C to +60°C)		
NFPA 1221 2016 Code Compliancy		Compliant		

7.2 Mechanical Specifications

Dimensions W x D x H	11.03 x 21.28 x 10.01 inches	without mount bracket
Weight	60.5lbs (without mount bracket) 64.0lbs (with mount bracket)	
RF Connector	4.3-10(Female)	
Expansion port for V/UHF	2 SMA(Female) port	
Weather Resistances	IP66	
Optic terminal tray(; inside)	1	4 optic cables per optic tray in the enclosure

8. FiRe-78-4 Web-GUI Setup

The Web-GUI allows the user to communicate with the repeater either locally or remotely. To connect to the repeater locally, you will need a laptop with an Ethernet port and an RJ-45 crossover cable. To connect to the repeater remotely, you will need to have an active internet connection via an external modem or LAN.

8.1 Repeater/PC Connection Using Web-GUI

Verify that your Local Area Network Connection is set to obtain an IP address automatically under the Internet Protocol (TCP/IP) properties.

If you are connecting to the unit remotely (use of a modem), then skip step above.


Connect the RJ-45 crossover cable between the laptop's Ethernet port and the repeater's Ethernet port.

Launch an Internet Browser.

Type the following IP address into the address bar of the Internet Browser: <http://192.168.63.1>

If you are connecting to the unit remotely, then type the IP address of the modem to connect to the unit

The following login screen will appear:

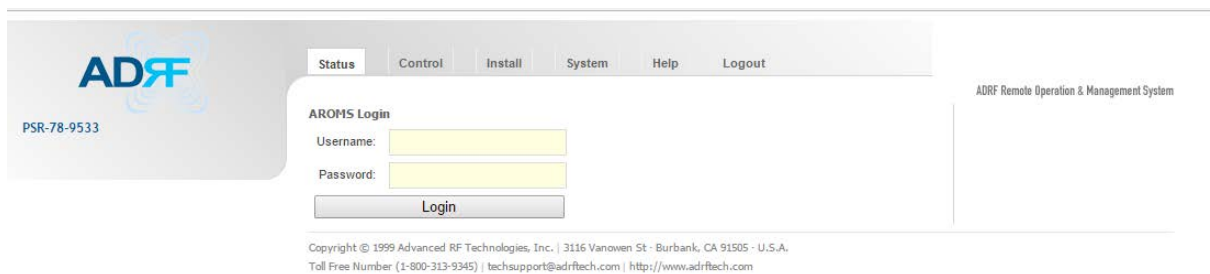

- **Figure 5-1 Login Page**

If you are not the Administrator, please type in your assigned username & password which you should have received from the Administrator.

The default username and password for the General User is adrf & adrf, respectively.

The default Administrator login is admin & admin, respectively.

8.2 Status Tab

ADRF Remote Operations & Management System

Summary

	NKS	ODU	DRU	IRM
Connected	1	1	1	1
Soft Fail	1	0	1	0
Hard Fail	1	0	0	0
Link Fail	0	0	0	0
Not Commissioned	-	0	-	0
Commissioned	-	1	-	1

Power & Gain

	Downlink	Uplink
Input [dBm]	--	--
Outband [dBm]	--	--
Gain [dB]	User Set	49.0
	Actual	49.0
Output [dBm]	--	--

Band Info

		Downlink			Uplink		
		Input (dBm)	Center Frequency (MHz)	BW (KHz)	Input (dBm)	Center Frequency (MHz)	BW (KHz)
Broad	Channel 1	--	766.000000	10000.000	--	796.000000	10000.000
	Channel 2	--	--	--	--	--	--
Narrow	Channel 1	--	--	--	--	--	--
	Channel 2	--	--	--	--	--	--
	Channel 3	--	--	--	--	--	--
	Channel 4	--	--	--	--	--	--
	Channel 5	--	--	--	--	--	--
	Channel 6	--	--	--	--	--	--
	Channel 7	--	--	--	--	--	--
	Channel 8	--	--	--	--	--	--
	Channel 9	--	--	--	--	--	--
	Channel 10	--	--	--	--	--	--
	Channel 11	--	--	--	--	--	--
	Channel 12	--	--	--	--	--	--
	Channel 13	--	--	--	--	--	--
	Channel 14	--	--	--	--	--	--
Channel 15	--	--	--	--	--	--	
Channel 16	--	--	--	--	--	--	

Alarms

System	PS700	Power
Over Temperature	Door Open	
DSP Fail	System Halt	

AAT

- Donor Antenna Malfunction
- Active RF Device Malfunction
- Low Battery Capacity
- System Component Malfunction
- Normal AC Power
- Loss of normal AC Power
- Battery Charger / Cable Connection Failure
- Low Battery Capacity
- Donor Antenna Malfunction
- Active RF Emitting Device Malfunction
- System Component Malfunction
- AAJ Alarm In

Information

Serial Number	adrfstest
Latitude	N +034.142570
Longitude	W -034.123456
Firmware	6F0009
Web GUI	1.0.02

Location

test company
test addr1 test addr2
test city AZ test zip

Description

Technical Support

Phone: 1-800-313-9345
E-mail: techsupport@adrftech.com

Installer Contact Info







Company: test
Installer: test@test.com
Phone: test@test.com
E-mail: test@test.com

• **Figure 5-2 Status Tab**

8.2.1 Navigation Tree

The navigation tree located on the left hand side of the Web-GUI allows the user to switch between the various modules that are connected to the system.

Table 7-1 Navigation tree

Parameters	Description
Expand All	Expands the entire navigation tree
Collapse All	Collapses the entire navigation tree
	The module has the expandable subordinate modules
	The branch is currently expanded
	The module has soft fail alarm
	The module has hard fail alarm
	The module has no alarms (normal)
	The selected module will have bright gray color

8.2.2 System Summary

Table 7-2 System Summary Description

Parameters	Description
Connected	Display the number of modules physically connected to ADXV DAS
Soft Fail	Display the number of soft fail present on each module
Hard Fail	Display the number of hard fail present on each module
Link Fail	Display the number of link fail present on each module
Not Commissioned	Display the number of non-commissioned or commission failed module
Commissioned	Display the number of successfully commissioned module

8.2.3 Band Info

The Band Info section displays frequency information along with the corresponding bandwidths that have been set from the Install tab. Input levels for each channel are also displayed in this section.

Band Info

		Downlink			Uplink		
		Input (dBm)	Center Frequency (MHz)	BW (KHz)	Input (dBm)	Center Frequency (MHz)	BW (KHz)
Broad	Channel 1	--	--	--	--	--	--
	Channel 2	--	--	--	--	--	--
Narrow	Channel 1	--	--	--	--	--	--
	Channel 2	--	--	--	--	--	--
	Channel 3	--	--	--	--	--	--
	Channel 4	--	--	--	--	--	--
	Channel 5	--	--	--	--	--	--
	Channel 6	--	--	--	--	--	--
	Channel 7	--	--	--	--	--	--
	Channel 8	--	--	--	--	--	--
	Channel 9	--	--	--	--	--	--
	Channel 10	--	--	--	--	--	--
	Channel 11	--	--	--	--	--	--
	Channel 12	--	--	--	--	--	--
	Channel 13	--	--	--	--	--	--
	Channel 14	--	--	--	--	--	--
Channel 15	--	--	--	--	--	--	
Channel 16	--	--	--	--	--	--	

• **Figure 5-3 Band Info Display**

8.2.4 Power & Gain

This section displays the Input, Gain, and Output for both downlink and uplink.

• **Figure 5-4 Power & Gain Display**

Input [dBm] – Displays the in-band Downlink/Uplink signal level. The system will display "--.-" when the input level is < -90 dBm.

Outband [dBm] – Displays the out-band composite power.

Gain [dB]

User Set: Displays the amount of gain that the user set.

Actual: Displays the actual amount of gain that is currently in use.

Output [dB] – Displays the Downlink/Uplink composite output power levels. The system will display "--.-", when the output level is < +5 dBm.

8.2.5 Alarms

This section displays the alarm status for System alarms, RF Alarms, and Power alarms. If an alarm is present in the system, then the color of the alarm tab will change according to the type of failure.

Alarms			
System	PS700	PS600	Power
DL Signal Not detected			DL Signal Low
DL Oscillation Alarm			DL RF Power
DL Out of Band overload			UL Out of Band overload
DL DSP Input Overload			UL DSP Input Overload
DL Input Overload			UL Input Overload
DL Over Input			UL Over Input
DL Over Power			UL Over Power
DL Synthesizer Lock Fail			UL Synthesizer Lock Fail
DL VSWR			UL VSWR

■ Normal
 ■ Soft Fail
 ■ Hard Fail
 ■ Inactive

• **Figure 5-5 Alarm Display**

8.2.6 Repeater Info / Repeater Location / Technical Support / Installer Contact Info

Information

Serial Number	
Latitude	
Longitude	
Firmware	F2.0.F
Web GUI	F2.0.0

Location

Description

Technical Support
 Phone: 1-800-313-9345
 E-mail: techsupport@adrftech.com

Installer Contact Info
 Company:
 Installer:
 Phone:
 E-mail:

• **Figure 5-6 Repeater Info / Repeater Location / Technical Support / Installer Contact Info**

Repeater Info: Displays the serial number, latitude, longitude, firmware version, and Web-GUI version

Repeater Location: Displays the address where the repeater is installed

Technical Support: Displays ADRF’s Technical Support contact information

Installer Contact Info: Displays the installer’s name, phone, and e-mail address

Note: Once successfully logged in, the repeater model name and the site/cascade ID will be displayed on the top of all the windows (except for the Main Window).

8.3 Control Tab

Status **Control** Install System Help Logout

General Settings

ALC On

PS 700 DL HPA On PS 800 DL HPA On

PS 700+800 UL HPA On

System

PS700

Manual Gain Control

DL Gain [dB]

UL Gain [dB]

DL ALC Level [dBm]

UL ALC Level [dBm]

DL ALC Offset Level [dBm]

UL ALC Offset Level [dBm]

DL /UL Gain Balance ON

PS800

Alarm Settings

DL Signal Low Level [dBm]

DL Signal Not Detect Level [dBm]

DL RF Power Level [dBm]

DL Over Power Level [dBm]

UL Over Power Level [dBm]

Battery Alarm Settings

Battery Check

Battery Not Charge Check

AAI Test

Closed Open

AAI Test On

Fire Alarm		System Monitoring	
Donor antenna malfunction	<input type="text" value="Normal"/>	Normal AC Power	<input type="text" value="Set"/>
Active RF device malfunction	<input type="text" value="Normal"/>	Loss of normal AC Power	<input type="text" value="Normal"/>
Low battery capacity	<input type="text" value="Normal"/>	Battery charger failure	<input type="text" value="Normal"/>
System component malfunction	<input type="text" value="Normal"/>	Low battery capacity	<input type="text" value="Normal"/>
		Donor antenna malfunction	<input type="text" value="Normal"/>
		Active RF emitting device malfunction	<input type="text" value="Normal"/>
		System component malfunction	<input type="text" value="Normal"/>

Copyright © 1999 Advanced RF Technologies, Inc. | 3116 Vanowen St · Burbank, CA 91505 · U.S.A.
 Toll Free Number (1-800-313-9345) | techsupport@adrftech.com | http://www.adrftech.com


• **Figure 5-7 Control page**

Advanced RF Technologies, Inc.

25

8.3.1 General Setting

The General Setting section allows the user to enable/disable amplifiers and the ALC routine.

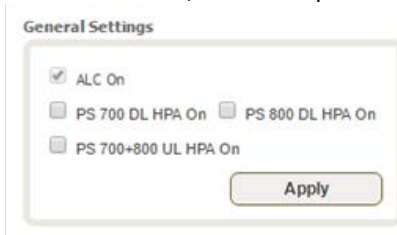

• **Figure 5-8 General Setting**

ALC ON: Enables or disables Automatic Level Control (ALC)

PSR 700 DL HPA On: Enables or disables the Downlink High Power Amplifier (HPA) for 700MHz PS

PSR 800 DL HPA On: Enables or disables the Downlink High Power Amplifier (HPA) for 800MHz PS

PSR 700+800 UL HPA On: Enables or disables the Uplink High Power Amplifier (HPA) for 700+800MHz PS

To enable/disable any of the settings, click on the checkbox and click the Apply button.

8.3.2 System

Under the System section, the user is able to perform soft reboot on the repeater and also can restore factory default settings.



• **Figure 5-9 System**

Reboot: Performs a soft reboot of the repeater

Factory Set: Restores all settings to factory defaults

8.3.3 Manual Gain Control

• **Figure 5-10 Manual Gain Control Setting**

DL/UL Gain: Gain levels of the repeater can be specified here

DL/UL ALC Level: Prevents the output power from exceeding the specified value

DL/UL Output ALC Offset: If any ALC attenuation has been applied, the system will release this attenuation when the signal level drops by the specified level

DL /UL Gain Balance ON: Allows the user to enable or disable the gain balance. When gain balance is enabled, the delta value between the downlink and uplink gains remain constant

8.3.4 Alarm Settings

- **Figure 5-11 Alarm Settings**

DL Signal Low Level: Allows the user to specify how low the signal can be before triggering a “Downlink Signal Low” soft-fail alarm

DL Signal Not Detected Level: Allows the user to specify how low the signal can be before triggering a “Downlink Signal Not Detected” soft-fail alarm

DL RF Power Level: Allows the user to set a maximum deviation value for the downlink RF power before triggering a “DL RF Power Level” soft-fail alarm

For example, if the input signal is -50 dBm and the gain is set to 60 dB, the expected output power should be 10 dBm. If the Downlink RF Power alarm value is set to 6dB, then a soft-fail alarm will trigger if the output power falls below 4 dBm

DL Over Power Level: DL Over Power Alarm will trigger when the DL output level exceeds this level

UL Over Power Level: UL Over Power Alarm will trigger when the UL output level exceeds this level

Battery Check:

- Check All – All battery related alarms are checked which include Battery Fail, Battery Not Installed, Low Battery, and Battery Not Charge
- Except Install – Only Battery Fail, Low Battery, and Battery Not Charge alarms are checked
- Check Off – Does not perform any battery check

Battery Not Charge Check:

- On – Checks for the Battery Not Charge alarm
- Off – Disables the check for the Battery Not Charge alarm

8.4 Install Tab
8.4.1 Install

Status | Control | **Install** | System | Help | Logout

Account | SNMP | Logs | Update | Backup / Restore

Technology

PS700+PS800 (758 - 816MHz) ▼

Band Selection

PS700						PS800		
		Reference Center Frequency (MHz)	Bandwidth (KHz)	Downlink Gain (dB)	Uplink Gain (dB)	Set	Downlink Freq (MHz)	
							Start	End
Broad	PS700 ▼	766.500000	5000.000	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	764.000000	769.000000
	PS800 ▼	856.000000	5000.000	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	853.500000	858.500000
N a r r o w	Ch. 1	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 2	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 3	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 4	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 5	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 6	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 7	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 8	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 9	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 10	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 11	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 12	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 13	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 14	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 15	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--
	Ch. 16	--	OFF ▼	0.0 ▼	0.0 ▼	<input type="button" value="Apply"/>	--	--

SNMP

Site ID

Description

Modem Box Setting

Repeater IP

Subnet Mask

Gateway

Location

Latitude

Longitude

AAI Input

AAI Input 1

Copyright © 1999 Advanced RF Technologies, Inc. | 3116 Vanowen St - Burbank, CA 91505 - U.S.A.
Toll Free Number (1-800-313-9345) | techsupport@adrftech.com | http://www.adrftech.com

• **Figure 5-12 Install Page**

Advanced RF Technologies, Inc.

28

8.4.2 Technology

This section allows the user to set the repeater mode to either use PS700, PS800, or PS700+PS800.



• **Figure 5-13 Technology**

The following choices are available from the dropdown:

- **PS700 (769-775MHz)**
- **PS800 (851-861MHz)**
- **PS700+PS800 (769-861MHz)**

8.4.3 Band Selection

PS700							PS800		
		Reference Center Frequency (MHz)	Bandwidth (KHz)	Downlink Gain (dB)	Uplink Gain (dB)	Set	Downlink Freq (MHz)		
							Start	End	
Broad	PS700 ▼	766.500000	5000.000 ▼	0.0 ▼	0.0 ▼	Apply	764.000000	769.000000	
	PS800 ▼	856.000000	5000.000 ▼	0.0 ▼	0.0 ▼	Apply	853.500000	858.500000	
Narrow	Ch. 1	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 2	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 3	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 4	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 5	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 6	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 7	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 8	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 9	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 10	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 11	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 12	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 13	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 14	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 15	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	
	Ch. 16	--	OFF ▼	0.0 ▼	0.0 ▼	Apply	--	--	

[Show Freq. Table](#)

• **Figure 5-14 Band Selection**

Band selection allows the user specify the desired frequencies by inputting the center frequencies and selecting the bandwidths.

Reference Center Frequency: The user can input the center frequency of the pass-band.

Bandwidth: Allows the user to select the desired bandwidth for the passband. Choices for wide band frequencies include 5 and 10MHz. Narrow band choices include 6.25, 12.5, 25.0, and 200 KHz.

Downlink/Uplink Gain: Minor gain adjustments can be performed on a per channel basis to equalize signal levels

Downlink Freq - Start: Displays the start frequency of the pass-band once the band selection has been set

Downlink Freq - End: Displays the end frequency of the pass-band once the band selection has been set

8.4.4 SNMP

- **Figure 5-15 SNMP**

The SNMP section allows you to specify the Site ID and Description. The Site-ID is the code that is used to identify the repeater.

8.4.5 Location

This section allows the user to input the latitude and the longitude of the repeater.

- **Figure 5-16 Location Setting**

8.4.6 Modem Box Setting

This section allows the user to specify alternative Repeater IP, Subnet Mask, and Gateway settings. These settings are enabled when the Host/Remote switch is set to the Remote position.

- **Figure 5-17 Modem Box Setting**

8.4.7 AAI Input

The PSR-VU-9537 can accept a dry contact input alarms. The alarm can be labeled in this section. Once the alarm is labeled, it will show up in the system with the new custom names on the Status tab.



- **Figure 5-18 AAI Input**

8.4.8 Location Info / Installer Info

This section allows the user to specify the address of the repeater and also the information of the installer.

Location Info

Company

Address1

Address2

City

State

ZIP Code

Installer Info

Company

Name

Phone


E-mail

- **Figure 5-19 Repeater Location Info / Repeater Installer Info**

8.4.9 Date & Time

This section allows the user to specify the current date and time.

Date & Time

Date 

Time

- **Figure 5-20 Date & Time Setting**

8.5 System

The System tab allows the user to perform firmware updates, upload closeout packages, view any changes to the system, backup existing configuration, and add/remove user accounts, and change the login credentials of the Administrator.

8.5.1 System: Account

8.5.1.1 System: Account – Account Management

The Account Management section allows the Administrator to delete any user accounts. Please note that the Account Management section is only available if you are logged into the system as the Administrator. To delete a user account click on the Account Management link and under the Delete column, click on the delete button.

- **Figure 5-21 System: Account- Account Management**

8.5.1.2 System: Account – New Account

The New account section allows the Administrator to create a new user account. Please note that the New account section is only available if you are logged into the system as the Administrator. To create a new user account click on the new account link and fill in the fields shown.

Figure 5-22 System: Account- New Account

8.5.1.3 System: Account – Change Password

The Change Password section allows the current user who is logged into the system to change their login credentials.

- **Figure 5-23 System: Account- Change Password**

8.5.2 System – User Log

This section displays system events that have taken place. The User Log displays who has made the changes, the time and date of when the event took place, and what changes were made to the system.

Event Log / User Log

Seq.	Date / Time	Source	Description	Event	Severity Level
1	2017.11.23 09:05:51	FiRe-78-4	sdaf	[Door Open]Door Open Door Open Alarm Set.	minor
2	2017.11.22 14:26:00	FiRe-78-4	sdaf	[Door Open]Door Open Door Open Alarm Clear.	minor
3	2017.11.22 11:22:44	FiRe-78-4	sdaf	[Door Open]Door Open Door Open Alarm Set.	minor
4	2017.11.22 11:22:40	FiRe-78-4	sdaf	[Door Open]Door Open Door Open Alarm Clear.	minor
5	2017.11.20 11:47:45	FiRe-78-4	sdaf	[Donor Antenna]Dornor Antenna Donor Antenna Shutdown Set.	major
6	2017.11.20 11:37:49	FiRe-78-4	sdaf	[Battery Not Charge]Battery Not Charge Battery Not Charge Alarm Set.	minor
7	2017.11.20 11:17:51	FiRe-78-4	sdaf	Signal Low Signal Low Alarm Set.	minor
8	2017.11.20 11:17:51	FiRe-78-4	sdaf	Signal Not Detected Signal Not Det Alarm Set.	minor
9	2017.11.20 11:17:48	FiRe-78-4	sdaf	[Battery Fail]Battery Fail Battery Fail Alarm Set.	minor
10	2017.11.20 11:17:48	FiRe-78-4	sdaf	[Battery Low]Battery Low Battery Low Alarm Set.	minor
11	2017.11.20 11:17:48	FiRe-78-4	sdaf	[Battery Not Install]Battery Not Installed Battery Not Install Alarm Set.	minor
12	2017.11.20 11:17:47	FiRe-78-4	sdaf	[Door Open]Door Open Door Open Alarm Set.	minor
13	2017.11.20 11:17:44	[1]FiRe-ODU/[3]R-ORU-N4X	-	Battery Not Charge Alarm Set.	minor
14	2017.11.20 11:17:44	[1]FiRe-ODU/[3]R-ORU-N4X	-	Battery Low Alarm Set.	minor
15	2017.11.20 11:17:44	[1]FiRe-ODU/[3]R-ORU-N4X	-	Battery Not Installed Alarm Set.	minor
16	2017.11.20 11:17:44	[1]FiRe-ODU/[3]R-ORU-N4X	-	Battery Fail Alarm Set.	minor
17	2017.11.20 11:17:43	FiRe-78-4	sdaf	Service Initiated.	notification
18	2017.11.20 11:04:42	[1]FiRe-ODU[Unknown]	-	Link Fail Alarm Set.	minor
19	2017.11.20 11:03:48	FiRe-78-4	sdaf	Signal Low Signal Low Alarm Set.	minor
20	2017.11.20 11:03:48	FiRe-78-4	sdaf	Signal Not Detected Signal Not Det Alarm Set.	minor

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46

[Download](#)

• **Figure 5-24 System – User Log**

8.5.3 System – Update

To perform a firmware update, click on the Update tab and the following screen will appear.

Settings Update Files

Update File Upload

Update File Management

Check the available boxes below to select the ADX units to be firmware updated.
Click the UPDATE button at the bottom of this section to begin the firmware update process.

	Description	Current	Available	Progress	Comment
<input type="checkbox"/> [1]FiRe-ODU	asdf	1.0.01	1.0.01	<input type="text"/>	Not Needed
<input type="checkbox"/> [3]R-ORU-N4X		3.0.12	-	<input type="text"/>	Update N/A
<input type="checkbox"/> [1]R-78P-N4X	test rm desc	3.0.1C	-	<input type="text"/>	Update N/A

• **Figure 5-25 System – Update**

Click on the Choose File button and locate the firmware file.
Click on the Upgrade button to perform the firmware update.

8.5.4 System – Backup & Restore

The backup section allows the user to save the settings. To perform the backup, click on the Backup button and system save the backup file. To restore the settings to the system, click on Choose File button, select the backup file, restore unit and click the execute button.

Settings Files

Current Setting Save

Setting File Upload

Current Selected File

Management backup_20000317_042307.tar


Check the available boxes below to select the ADVX units to be restore.
Click the EXECUTE button at the bottom of this section to begin the setting restore process.

Unit list	Progress	Status
<input type="checkbox"/> [0]FiRe-78-4	<input type="text"/>	----
<input type="checkbox"/> [1]FiRe-ODU	<input type="text"/>	----
<input type="checkbox"/> [3]R-ORU-N4X	<input type="text"/>	----
<input type="checkbox"/> [1]R-78P-N4X	<input type="text"/>	----

• **Figure 5-26 System Backup**

8.6 Help

If an internet connection is available, clicking on the Help Tab will redirect the user to our Technical Support page.

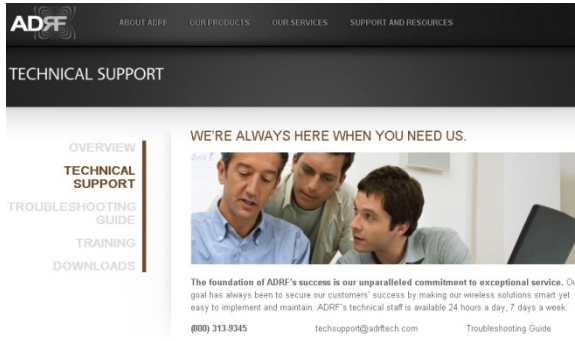

- **Figure 5-27 Help**

8.7 Logout

Clicking the Logout button will log the current user off the system.