

Features

- Selectable wireless panel compatibility
- Rechargeable backup battery
- Accepts any existing hardwire zone type
- Automatic zone polarity and end of line detection
- Battery backed 12VDC output for powered zones
- Cover tamper
- Certified to UL1023 and ULC1023

Quick Setup

1 MOUNT AND WIRE

- Select a mounting position and location.
- Wire the zones.
- Connect 12VDC output to powered zones, if any.
- Connect the power supply to the translator.
 - Ensure the translator cover is open before power-up.

2 TRANSLATOR CONFIGURATION


- Select the brand of panel that the translator must talk to using the "PANEL SELECT" knob.
- Configure Zones.
 - No zone configuration is necessary for installations with normally closed zones that don't require tamper detection.
 - Installations with other zone types: Refer to the Advanced Setup, step 2.

3 PANEL ENROLLMENT (For full zone enrollment instructions, refer to Advanced Setup, step 3)


- Enroll Translator into Panel.
 - Trip the translator tamper to enroll the translator into the panel (For Honeywell® and 2GIG® panels select loop 1).
 - or-
 - Enter translator ID into panel. The translator's base ID is printed on the bar code label and ends with a 0.
- Enroll Zones into panel (not required for Cryptix® Installations)
 - With the cover open, trip each zone to enroll into to the panel (For Honeywell® and 2GIG® panels select loop 1).
 - or-
 - Enter ID into panel. For non-powered zones, the zone ID is the translator's base ID with the last digit replaced with zone number 1-8.

4 FINISH

- Close the cover. Test and verify proper operation of the sensors at the panel.
- Cut the lock wire to lock the translator (For more information on locking, refer to Advanced Setup, step 4).
- Secure cover with screw.

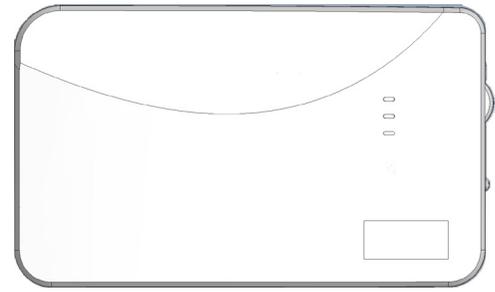


Wall mounting screw locations

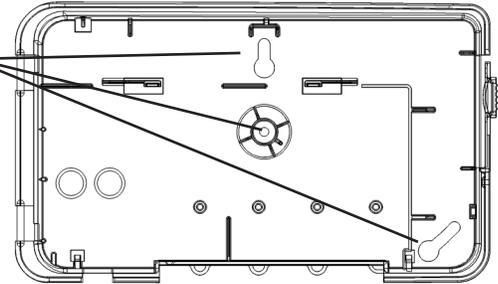

(Mounting hardware not included. Use two #4 or #6 screws for mounting)

WIRING DIAGRAM

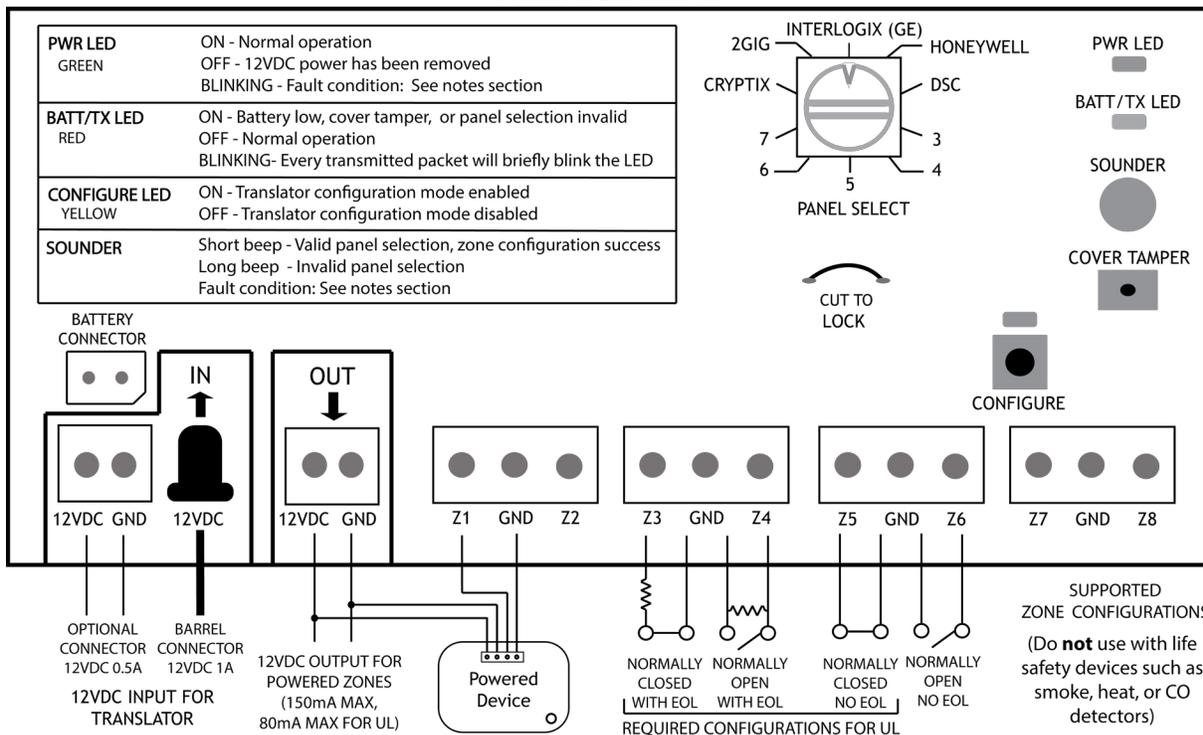

Advanced Setup

1 MOUNT AND WIRE

- A** Select a mounting position and location.
- Mount the translator at least 5 feet from the Control Panel's receiver.
 - Do NOT mount the translator in a metal can or on a metal surface.
 - Verify adequate RF signal strength at the panel before permanently mounting.
- B** Wire the zones.
- End of line resistors are not required.
 - Normally closed zones may have end of line resistors up to 15k ohms.
 - Normally open zones may have end of line resistors down to 750 ohms.
 - Do NOT put power on zone input terminals.
 - The plastic loops along the bottom edge of the translator housing may be used to secure the zone wiring with tie wraps.
- C** Connect 12VDC output to powered zones, if any.
- 12VDC output of the translator must be used to power any powered zones. Do NOT use an external power supply to power zones.
- D** Connect the power supply to the translator using either the supplied barrel connector or flying leads.
- Ensure the translator cover is open before power-up.
 - Rotate the barrel plug down to the right so the wires exit the enclosure through the strain relief area.
 - Ensure the backup battery leads are plugged into the translator.
 - The power transformer must be plugged into a non-switched outlet.
 - In the United States, the transformer must be secured to an outlet.
 - In Canada, the transformer must NOT be secured to an outlet.

2 TRANSLATOR CONFIGURATION

- A** Select the brand of panel that the translator must talk to using the "PANEL SELECT" knob.
- B** Configure Zones:
- Zone configuration is not necessary for installations with normally closed zones that don't require tamper detection.
- Installations with other zone types: Follow steps below.**
- Put all zones into normal (non-alarm) state.
 - Press and release the CONFIGURE button to enter translator configuration mode. The yellow LED will turn on when translator configuration mode is entered. Zone tamper will now be detected for the zones, and will be transmitted to the panel as "alarm."
 - If you want zone tamper to be transmitted to the panel as "tamper" instead of "alarm," cycle each zone to alarm and back to normal while translator is in configuration mode. The translator will beep to confirm as zones are cycled.
 - Press CONFIGURE button to exit translator configuration mode. The yellow LED will turn off when the translator configuration mode is exited.
- Normally closed zones can be cycled at the sensor, or by a break-and-make at the connection to the translator.
 - Normally open zones can be cycled at the sensor, or by a shorting across the connection to the translator.
 - Configuration mode ends automatically when the cover is closed or 10 minutes after the last action.

2 TRANSLATOR CONFIGURATION (continued)

- When re-entering translator configuration mode, zones must be in their normal state. However, previously programmed settings are retained for each zone. There is no need to re-configure every zone if the intention is to modify a subset of the zones.
- Configuration mode is locked out 24 hours after power-up. To re-enable configuration mode, the translator must be power-cycled by removing both the 12VDC input power and backup battery for at least 5 seconds.

3 PANEL ENROLLMENT

- A** Enroll Translator into Panel:
- Trip the cover tamper to enroll the translator into the panel.
-or-
 - Enter ID into panel. The translator's base ID is printed on the bar code label and ends with a 0.
(For Honeywell® and 2GIG® panels, select loop 1)
- B** Enroll Zones into panel (non-Cryptix Installations):
- With the cover open, trip each zone to send an enrollable zone transmission to the panel.
-or-
 - Enter ID into panel. For non-powered zones, the zone ID is the translator's base ID with the last digit replaced with zone number 1-8.
- C** Finish setup of each zone at the panel. Below are guidelines on how to enroll the translator and zones into your panel. Refer to the panel installation manual for complete panel instructions.

Cryptix ®

Translator and Zone enrollment:

- Press the enroll button on the panel.
- Trip the translator cover tamper to enroll the translator.
- Finish setup of each zone at the online portal.

Interlogix ® (formerly GE ®)

Translator enrollment:

- Enter Learn Sensor mode.
- At the Trip Sensor prompt: Trip the translator cover tamper to enroll the translator into the panel. Select Group based on how you want translator tamper to be handled by the panel. Below are recommended groups:
 - Group 13 - Instant perimeter
 - Group 23 - Local instant auxiliary

Zone enrollment:

- Enter Learn Sensor mode.
- At the Trip Sensor prompt: With the translator cover open, trip each zone to enroll it.
 - For the first 24 hours after powerup, all GE zone trips will transmit a temporary tamper for enrollment if the translator cover is open.

Honeywell ®

Translator enrollment:

- Enter Programming mode.
- Zone Type: 8 (24 hour Aux).
- Input Type: 3 (Supervised RF).
- When prompted, trip the translator cover tamper or enter the ID number on the unit to enroll serial number.
- Change the zone to loop 1.

Zone enrollment:

- Enter Programming mode.
- Set up the zone for the desired behavior.
- When prompted, trip the zone.
- Ensure loop 1 is selected.

3 PANEL ENROLLMENT (continued)

DSC ®

Translator enrollment:

- Enter Wireless Enrollment mode.
- Trip the translator cover tamper to enroll the translator.
- Zone Type: 03
 - For the first 24 hours after power-up, all translator tamper trips will send a temporary "open" for enrollment purposes.

Zone enrollment:

- Enter Wireless Enrollment Mode.
- Trip each zone to initiate enrollment.
- Confirm ESN, Enter Zone #, and Zone Type.
- Setup the zone for the desired behavior.

2GIG ®

Translator enrollment:

- Enter RF enrollment mode
- Sensor Type: (01) exit entry
- Equipment Type: (1) contact
- Equipment Code: (0862) DW10-345
- At "Enter RF Serial Number"
 - Press SHIFT, Learn, then trip sensor
 - or-
 - Enter translator's base ID number printed on the unit
- Equipment Age: (0) new
- Loop Number: (1)

Zone enrollment:

- Enter RF enrollment mode.
- Setup the zone for the desired behavior.
- At "Enter RF Serial Number"
 - Press SHIFT, Learn, then trip sensor
 - or-
 - Enter zone ID number (translator's base ID with the last digit replaced with zone number 1-8).
- Equipment Age: (0) new
- Loop Number: (1)

Qolsys ®

- Qolsys IQ panel uses Interlogix 319.5MHz protocol.
- DSC Touch panel made by Qolsys uses DSC 433.92MHz protocol.

4 FINISH

- Close the cover. Test and verify proper operation at the panel. Ensure all zone alarms are reported properly to the central station.
- Translator Locking: Locking the translator locks all translator configuration settings and provides takeover protection.
 - Ensure all zones are functioning as desired.
 - Carefully review the effects of translator locking before proceeding:
 - Translator can not be factory defaulted.
 - Existing zone configurations can not be changed.
 - Panel selection can not be changed.
 - Translator **LOCKING CAN NOT BE UNDONE.**
 - Open the translator cover and cut the lock wire. The green and red LED will flash, and the sounder will beep to confirm.
- With the cover closed, insert the cover securing screw into the screw hole near the cover latch.

Notes

ZONES

- Powered zones have a 60 second lockout after power-up.
- Powered zones are turned off when the battery gets low.
- Powered zones have a four hour minimum battery backup after power failure.
- Non-powered zones have 24-hours minimum battery backup regardless of powered zones.
- All zone status is sent out within a couple minutes of the cover being closed.
- If the translator loses both AC and battery backup power, zone configuration data is retained.
- Low battery, tamper, and supervisory signals are reported by the translator on its base zone with ID ending in "0".
- Zone ID's generally end in 1-8. This is NOT true for Honeywell® and powered zones.
- Low battery signals from the translator are suppressed in the first 24 hours after power-up. However, a missing battery condition is reported right away.

FAULT CONDITIONS

- 12VDC output fault: Flashes and beeps every 10 seconds on the green LED and sounder.
- 12VDC input overvoltage fault: Continually flashes and beeps on the green LED and sounder.
- 12VDC input removed fault: Green LED turns off and the sounder makes a long beep.

FACTORY DEFAULT

- To return the translator to a factory default condition, press and hold the configure button. After a couple seconds, the sounder will start beeping rapidly. Continue holding the button until the sounder stops beeping.
- Factory default is not possible if the translator is locked.

ZONE TABLE

ZONE #	SERIAL #	DESCRIPTION
0		Translator Base
1		
2		
3		
4		
5		
6		
7		
8		

Specifications

PHYSICAL	
Housing Dimensions	8.5 x 5.0 x 1.2 inches
Weight with Battery	10.4 Ounces
Tamper Activation	Cover Opening
Mounting Screws	#4 of #6
ENVIRONMENTAL	
Operating Temperature	32 to 120°F (0 to 49°C)
Storage Temperature	-4 to 86°F (-20 to 30°C)
Maximum Humidity	85% relative humidity, non-condensing
POWER	
12VDC Output	10.2VDC to 13VDC, 150mA Max (80mA Max for UL installations)
Power Transformer	
Input	100-240VAC 50/60Hz 0.5A
Output	12VDC 1A
Part Number	RE012-6
Battery	
Specifications	6VDC 800mAh NiMH
Part Number	34-0012-00
Trickle Charge	8mA
Fast Charge	32mA
WIRELESS RADIO	
RF Frequency	319.5MHz, 345MHz, 433.92MHz
Compatibility	Cryptix®, Interlogix® (formerly GE®), Honeywell®, DSC®, 2GIG®, Qolsys®
ZONES	
Supported Types	
Powered Zones	4-wire devices only
Non-Powered Zones	NC (Normal closed) or NO (Normal open)
Battery Backup	
Powered Zones	4 hours minimum at 80mA
Non-Powered Zones	24 hours minimum
Zone End of Line Resistor	
NC - No Tamper Detect	None (short)
NC - Tamper Detect	750 ohm to 15k ohm
NO - No Tamper Detect	None (open)
NO - Tamper Detect	750 ohm to 15k ohm
Zone Wire Length	1000 feet max
Zone Wire Gauge	22 AWG min
CERTIFICATIONS	
ETL Listings	UL 1023, ORD-C1023-1974
Other	FCC, IC

Specifications subject to change without notice.

This product is NOT for use with life safety devices, such as Smoke, Heat, or CO detectors.

Notices

"GE", "INTERLOGIX", "HONEYWELL", "DSC", "2GIG", AND "QOLSYS" ARE TRADEMARKS OWNED BY GENERAL ELECTRIC COMPANY, UNITED TECHNOLOGIES ELECTRONIC CONTROLS INC., HONEYWELL INTERNATIONAL INC., TYCO SAFETY PRODUCTS CANADA LTD, NORTEK SECURITY & CONTROL LLC, AND TYCO SAFETY PRODUCTS CANADA LTD, RESPECTIVELY.

RESOLUTION PRODUCTS, INC. PRODUCTS WILL FUNCTION WITH ONE OF EITHER INTERLOGIX (FORMERLY GE), HONEYWELL, DSC, 2GIG OR QOLSYS SYSTEMS. HOWEVER, NO RESOLUTION PRODUCT IS PRODUCED BY, ENDORSED BY, NOR IS OFFICIALLY ASSOCIATED WITH INTERLOGIX (FORMERLY GE), HONEYWELL, DSC, 2GIG OR QOLSYS. RESOLUTION RECOMMENDS VERIFYING PROPER ENROLLMENT AND OPERATION, PER CONTROL PANEL INSTALLATION INSTRUCTIONS, AT INSTALLATION.

WARRANTY

RESOLUTION PRODUCTS, INC. WILL REPLACE PRODUCTS THAT ARE DEFECTIVE IN THEIR FIRST FIVE (5) YEARS.

FCC NOTICE

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
 - (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE THAT MAY BE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
- CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY RESOLUTION PRODUCTS, INC. COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

FCC ID: U5X-RE508X

IC NOTICE

THIS DEVICE COMPLIES WITH INDUSTRY CANADA LICENSE-EXEMPT RSS STANDARD(S). OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION OF THE DEVICE.

LE PRÉSENT APPAREIL EST CONFORME AUX CNR D'INDUSTRIE CANADA APPLICABLES AUX APPAREILS RADIO EXEMPTS DE LICENCE. L'EXPLOITATION EST AUTORISÉE AUX DEUX CONDITIONS SUIVANTES :

- (1) L'APPAREIL NE DOIT PAS PRODUIRE DE BROUILLAGE, ET
- (2) L'UTILISATEUR DE L'APPAREIL DOIT ACCEPTER TOUT BROUILLAGE RADIOÉLECTRIQUE SUBI, MÊME SI LE BROUILLAGE EST SUSCEPTIBLE D'EN COMPROMETTRE LE FONCTIONNEMENT.

IC: 8310A-RE508X