


**PCB-i316**

**Quick Start Guide**




## Product Overview

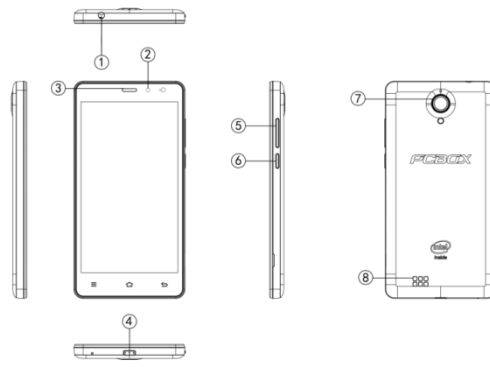


①	Earphone Slot	②	Front-Camera
③	Receiver	④	Micro USB 2.0 HS
⑤	Volume Key	⑥	Power Key
⑦	Rear-Camera	⑧	Speaker


- Remove the back cover

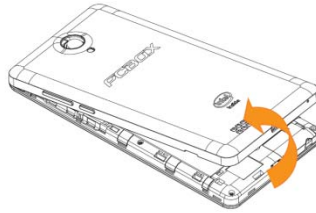


- Assemble SIM Card & TF Card

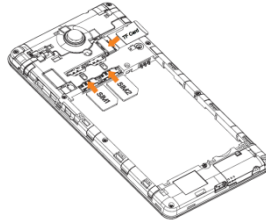

- Assemble the battery

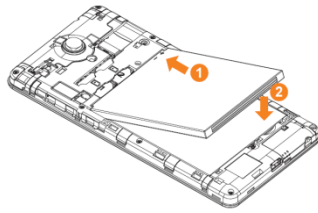

- Assemble the back cover

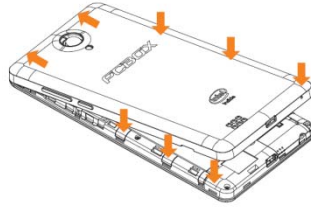

## Getting Started

---

### ■ Turning the phone On/Off

#### To turn On the phone

1. Press and hold the PWR key for a few seconds.
2. Unlock the screen with your finger.


#### To turn Off the phone

1. Press and hold the PWR key, select Power Off.
2. Tap OK. The phone will be off in a few seconds.

### ■ Unlocking screen

The screen is locked by default when you turn on the phone. To unlock the screen.

1. Press the PWR key.
2. Up sliding screen to unlock the screen. Draw a pattern if the screen is protected by pattern lock. Enter a PIN or a password if the screen is locked by a PIN or a password.

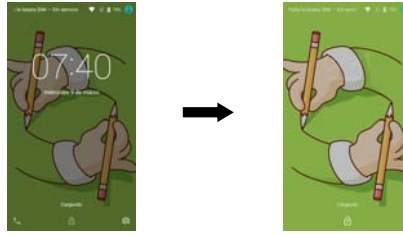

#### ■ Locking screen

To lock the screen, press the PWR key. It is recommended to lock the screen to protect information in the phone and reduce battery usage. You can also configure your phone to automatically lock after a certain period of time.

Tap → Settings → Display → Sleep to set the sleep time from 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, or 30 minutes.

#### ■ Using touch screen

All of the functions of the phone, except for power and volume, are performed on the touch screen. Therefore, it is essential to know how to use the touch screen.

The following finger actions might help you easily understand how to use the touch screen.

- ◇ Tap: Touch an item (e.g. application or widget) once that appears on the screen with your finger to run it or access a menu or an

option

- ✧ Double tap: Tap an item twice with your finger
- ✧ Drag: Tap and hold your finger on an item and move it without losing contact with the screen
- ✧ Flick: Place a finger on an empty space of the screen and move the screen up or down, or left or right
- ✧ Pinch: Place two fingers on the screen and move them apart to zoom in a picture, a document or a web page, or move them together to zoom out
- ✧ Select and tap: Tap an item in the list of options available
- ✧ Press and hold: Press a key or any item for a few seconds until a list of options appears

**Cautions:**

- ✓ Do not use sharp tools that can scratch the touch screen.
- ✓ Do not allow the touch screen to come in contact with chemicals. The screen may malfunction in chemicals.
- ✓ Do not sit on the phone: the touch screen can be damaged.

■ **Status bar**


The status bar at the top of the screen notifications from various apps, time, and the states of various devices such as battery status, WLAN status, Signal status and so on.



1. Notification panel displays notification icons to inform you of new Email, messages, screenshot and so on. Slide the panel down to view the notifications and then tap a notification icon to view details of the notification.



2. Status panel displays status icons to show the current state of your phone, such as battery charging progress, alarms, Bluetooth, and so on. Slide the panel down to access more settings and configuration options.

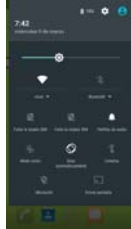

#### ■ Screen orientation

For optimal viewing experience, the screen orientation changes automatically depending on how you hold the phone.

NOTE: To enable or disable auto-rotate, slide down the status panel and tap the Auto-rotate icon.

#### ■ Keys and functions




1. **Back key**
  - ✧ Tap to return to the previous screen and exit the running application.
  - ✧ Tap to close the on-screen keyboard in text input mode.
2. **Home key**
  - ✧ Tap to return to the main screen.
3. **Menu key**
  - ✧ Tap to open the applications list used recently.
- **Apps and widgets**
  - ✧ **Apps:** Software that allows you to perform a specific task. Your phone is preloaded with a variety of applications, and additional applications can be downloaded from the Play Store.
  - ✧ **Widgets:** A small application which resides on the home screen and provides quick and easy access to information.

## **Connecting to the Internet using WLAN**

---


NOTE: The range and quality of the WLAN signal is affected by the distance between the phone and the wireless router, the number of connected devices, infrastructure, and objects through which the signal is transmitted.

1. Tap  → Settings → WIRELESS & NETWORKS → WLAN.
2. Enable WLAN by moving the slider to On position. The phone scans for WLAN networks in range.
3. Tap the network you want to connect to.
4. Type a password (if connecting to a secure network) and tap Connect to connect to the selected WLAN network.






NOTE: To connect to a secured WLAN network, you must provide the security key. If you do not have the security key, contact the person who manages your WLAN network or the router manufacturer.

NOTE: To start a new search for available WLAN networks, on the WLAN screen, tap  → Scan

## **Connecting to the Internet using mobile broadband**

---

1. Tap  Settings → WIRELESS & NETWORKS → WLAN, then touch WLAN to disable it.
2. The phone automatically searches for the carrier signal and connects to the network. When the phone is connected to a mobile broadband network, the network type appears in the status bar.

NOTE: On the LTE/HSPA+ models, if both WLAN and mobile broadband networks are available, the phone gives priority to WLAN connection.

## **Safety Information**

---

The following list shows how to maintain your phone, together with precautions to take.

- Keep your phone and its accessories out of the reach of pets.
- Do not allow children to use your phone. If children use the device

make sure that they use the phone properly.

- Maintain your phone in dry conditions and keep it within normal operating temperatures. Temperatures higher than 50°C or lower than -10°C may damage your phone.
- Do not try to dry your phone in a microwave oven. If you do, sparks can occur and cause an explosion or fire.
- Do not use or store your phone in dusty or dirty areas.
- Do not attempt to disassemble your phone.
- Do not drop or cause severe impact to your phone.
- Do not use chemical products, cleaning solvents or detergents to clean your phone.
- If your phone does not work properly, contact your dealer immediately.
- Use only authorized batteries, battery chargers and accessories. Any malfunction or damage caused by the use of unauthorized batteries, battery chargers and accessories will void the limited product warranty.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This smart phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: PCB-i316 (FCC ID: 2AFK7-PCB-i316) has also been tested against this SAR limit. The

highest SAR value reported under this standard during product certification for use at the ear is 0.403W/kg and when properly worn on the body is 0.821W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

#### **Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.