



Installation, Start-Up and Service Instructions

CONTENTS

	Page
SAFETY CONSIDERATIONS	1
INSTALLATION	1-27
Step 1 — Provide Unit Support	1
• ROOF CURB	
• ALTERNATE UNIT SUPPORT	
Step 2 — Rig and Place Unit	4
• POSITIONING	
• ROOF MOUNT	
Step 3 — Field Fabricate Ductwork	4
Step 4 — Make Unit Duct Connections	7
Step 5 — Trap Condensate Drain	7
Step 6 — Make Electrical Connections	8
• FIELD POWER SUPPLY	
• FIELD CONTROL WIRING	
• OPTIONAL NON-FUSED DISCONNECT	
• OPTIONAL CONVENIENCE OUTLET	
Step 7 — Make Outdoor-Air Inlet Adjustments	10
• MANUAL OUTDOOR-AIR DAMPER	
Step 8 — Install Outdoor-Air Hood	10
Step 9 — Install All Accessories	11
• MOTORMASTER® I CONTROL INSTALLATION	
Step 10 — Adjust Factory-Installed Options	12
• PREMIERLINK™ CONTROL	
• ENTHALPY SWITCH/RECEIVER	
• OUTDOOR ENTHALPY CONTROL	
• DIFFERENTIAL ENTHALPY CONTROL	
• ENTHALPY SENSORS AND CONTROL	
• OPTIONAL ECONOMISERIV AND ECONOMISER2	
• ECONOMISERIV STANDARD SENSORS	
• ECONOMISERIV CONTROL MODES	
Step 11 — Install Humidistat for Optional MoistureMiSer™ Package	25
START-UP	28-34
Unit Preparation	28
Operating Sequence	33
SERVICE	35-40
TROUBLESHOOTING	41-44
INDEX	45
START-UP CHECKLIST	CL-1

SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform basic maintenance functions of cleaning coils and filters and replacing filters. All other

operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloth for unbrazing operations. Have fire extinguishers available for all brazing operations.

▲ WARNING

Before performing service or maintenance operations on unit, turn off main power switch to unit. Electrical shock could cause personal injury.

IMPORTANT: Units have high ambient temperature operating limits. If limits are exceeded, the unit will automatically lock the compressor out of operation. Manual reset will be required to restart the compressor.

INSTALLATION

Inspect unit for transportation damage. If damage is found, file claim with transportation agency.

Step 1 — Provide Unit Support

ROOF CURB — Assemble and install accessory roof curb or horizontal supply roof curb in accordance with instructions shipped with the accessory. Accessory roof curb and horizontal supply roof curb and information required to field fabricate a roof curb or horizontal supply roof curb are shown in Fig. 1 and 2. Install insulation, cant strips, roofing, and counter flashing as shown. Ductwork can be secured to roof curb before unit is set in place.



IMPORTANT: The gasketing of the unit to the roof curb or horizontal supply roof curb is critical for a leakproof seal. Install gasket supplied with the roof curb or horizontal supply roof curb as shown in Fig. 1. Improperly applied gasket can result in air leaks and poor unit performance.

Roof curb must be level. This is necessary to permit unit drain to function properly. Unit leveling tolerance is $\pm 1/16$ in. per linear ft in any direction. Refer to Accessory Roof Curb or Horizontal Supply Roof Curb Installation Instructions for additional information as required.

ALTERNATE UNIT SUPPORT — When the curb or adapter cannot be used, support unit with sleepers using unit curb or adapter support area. If sleepers cannot be used, support long sides of unit with a minimum of 3 equally spaced 4-in. x 4-in. pads on each side.

PKG. NO. REF.	CURB HEIGHT	DESCRIPTION
CRRFCURB010A00	1'-2" (305)	Standard Curb 14" High
CRRFCURB011A00	2'-0" (610)	Standard Curb for Units Requiring High Installation
CRRFCURB012A00	2'-0" (610)	Side Supply and Return Curb for High Installation

- NOTES:
1. Roof curb accessory is shipped disassembled.
 2. Insulated panels: 1" thick neoprene coated 1 1/2 lb density.
 3. Dimensions in () are in millimeters.
 4.  Direction of airflow.
 5. Roof curb: 16 ga. (VA03-56) stl.
 6. **A 90 degree elbow must be installed on the supply ductwork below the unit discharge for units equipped with electric heaters.**
 7. To prevent the hazard of stagnant water build-up in the drain pan of the indoor section, unit can only be pitched as shown.

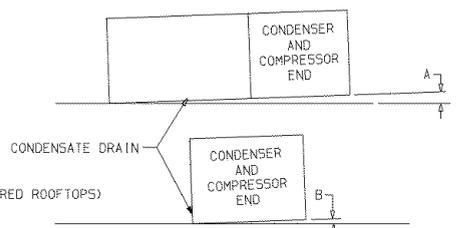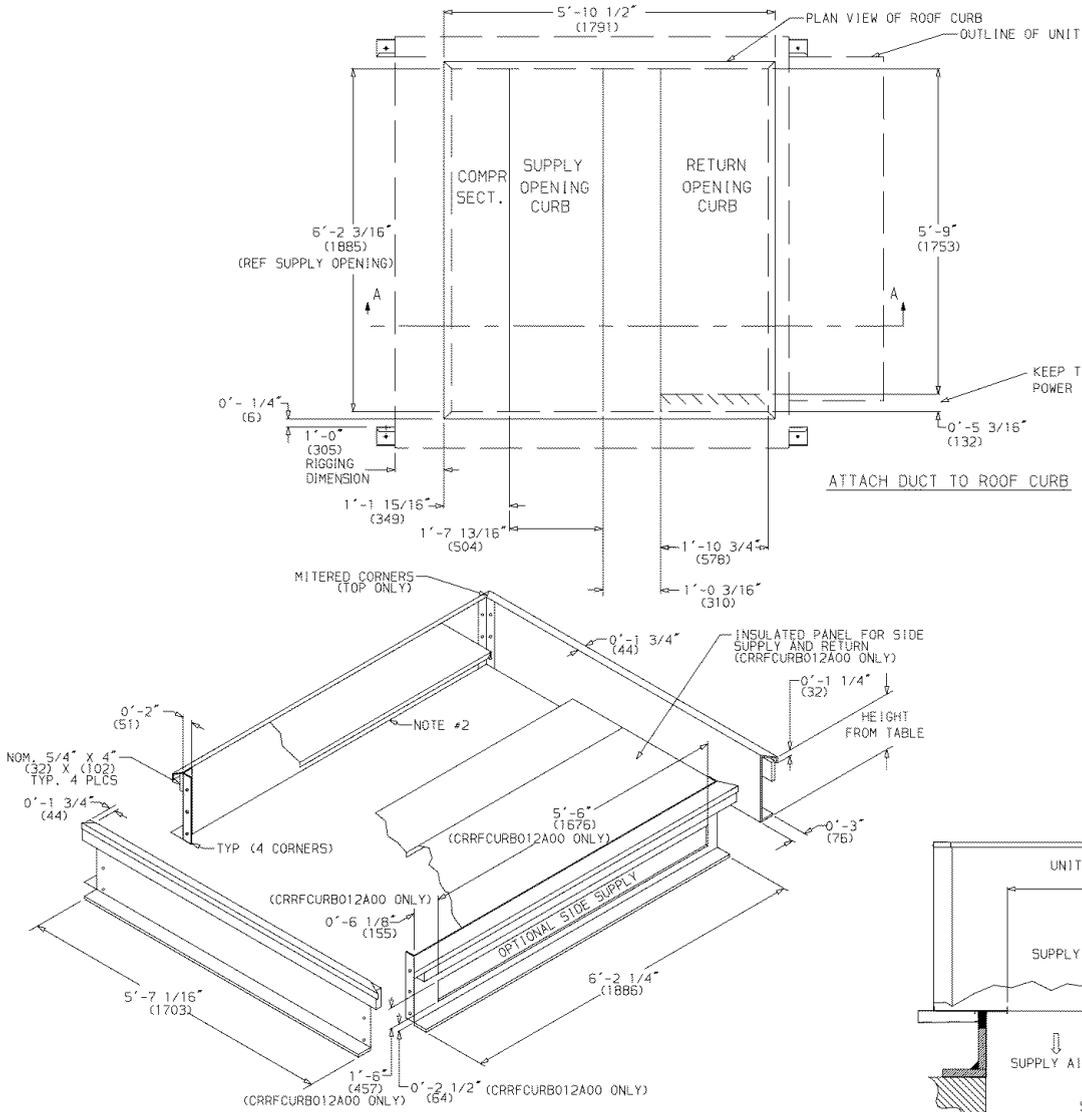

DIMENSIONS* (degrees and inches)

UNIT	A		B	
	Deg.	in.	Deg.	in.
ALL	.28	.45	.28	.43

UNIT LEVELING TOLERANCES
*From edge of unit to horizontal.




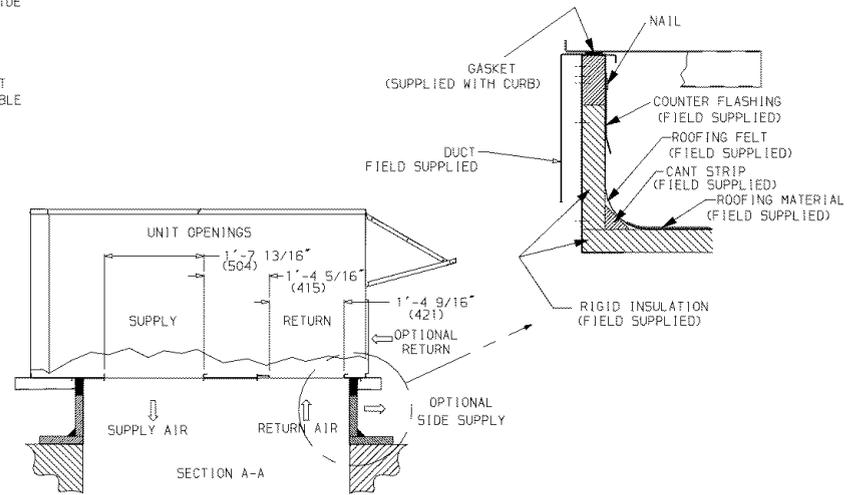


Fig. 1 — Roof Curb Details

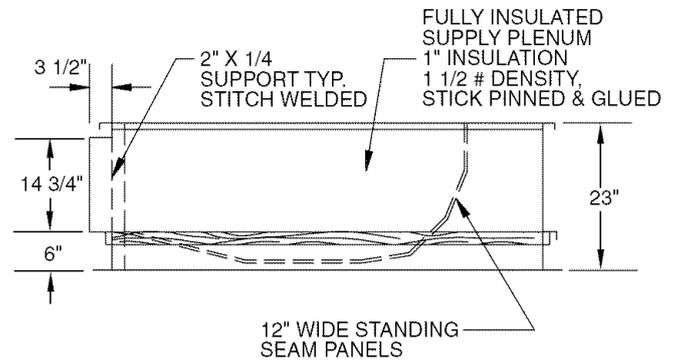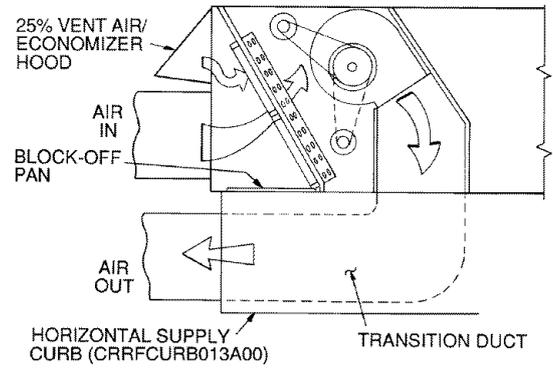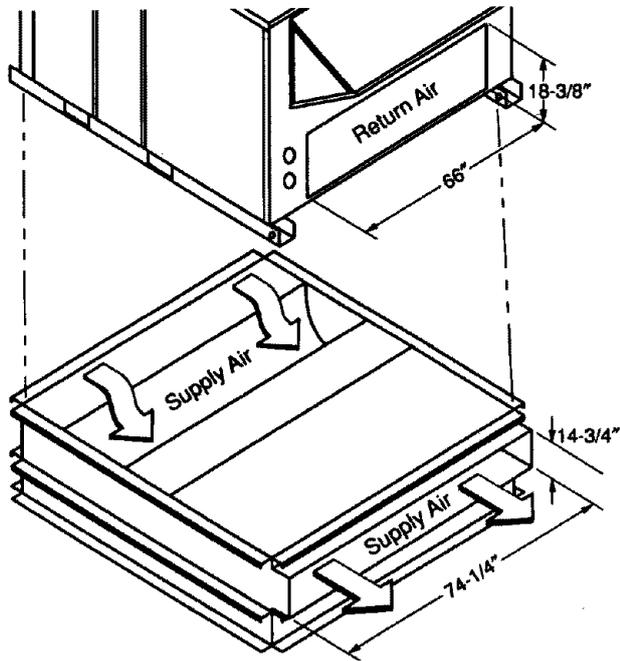

NOTE: CRRFCURB013A00 is a fully factory preassembled horizontal adapter and includes an insulated transition duct. The pressure drop through the adapter curb is negligible.
 For horizontal return applications: The power exhaust and barometric relief dampers must be installed in the return air duct.

ACCESSORY PACKAGE NO.	CURB HEIGHT	DESCRIPTION
CRRFCURB013A00	1'-11" (584)	Pre-Assembled, Horizontal Adapter Roof Curb

Fig. 2 — Horizontal Supply/Return Adapter Installation

Step 2 — Rig and Place Unit — Keep unit upright, and do not drop. Use spreader bars over unit to prevent sling or cable damage. Rollers may be used to move unit across a roof. Level by using unit frame as a reference; leveling tolerance is $\pm 1/16$ in. per linear ft in any direction. See Fig. 3 for additional information. Unit weight is shown in Table 1.

Four lifting holes are provided in ends of unit base rails as shown in Fig. 3. Refer to rigging instructions on unit.

POSITIONING — Provide clearance around and above unit for airflow, safety, and service access (Fig. 4).

Do not install unit in an indoor location. Do not locate air inlets near exhaust vents or other sources of contaminated air.

Although unit is weatherproof, guard against water from higher level runoff and overhangs.

ROOF MOUNT — Check building codes for weight distribution requirements.


Step 3 — Field Fabricate Ductwork — Secure all ducts to building structure. Use flexible duct connectors between unit and ducts as required. Insulate and weatherproof all external ductwork, joints, and roof openings with counter flashing and mastic in accordance with applicable codes.

Ducts passing through an unconditioned space must be insulated and covered with a vapor barrier.

The 50HJ units with electric heat require a 1-in. clearance for the first 24 in. of ductwork.

Outlet grilles must not lie directly below unit discharge.

NOTE: A 90-degree elbow must be provided in the ductwork to comply with UL (Underwriters Laboratories) codes for use with electric heat.

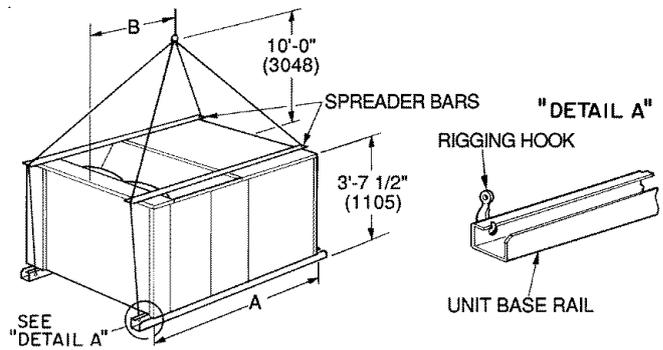

UNIT 50HJ	MAXIMUM SHIPPING WEIGHT		DIMENSIONS			
			A		B	
	lb	kg	ft-in.	mm	ft-in.	mm
015	1625	737	6-11 $\frac{1}{2}$	2121	4-0	1219
017	1700	771	6-11 $\frac{1}{2}$	2121	3-10	1168

NOTES:

1. Dimensions in () are in millimeters.
2. Refer to Table 1 for unit operating weights.
3. Remove boards at ends of unit and runners prior to rigging.
4. Rig by inserting hooks into unit base rails as shown. Use corner post from packaging to protect coil from damage. Use bumper boards for spreader bars.
5. Weights do not include optional economizer. Add 90 lb (41 kg) for economizer weight.
6. Weights given are for aluminum evaporator and condenser coil plate fins. Weights include electric heat.
7. Add 75 lb (34 kg) for crating on 50HJ015 and 017 units.
8. Add 150 lb (68 kg) for copper condenser coil. Add 280 lb (127 kg) for copper condenser and evaporator coils.

⚠ CAUTION


All panels must be in place when rigging.

Fig. 3 — Rigging Details

⚠ WARNING

For vertical supply and return units, tools or parts could drop into ductwork and cause an injury. Install a 90-degree turn in the return ductwork between the unit and the conditioned space. If a 90-degree elbow cannot be installed, then a grille of sufficient strength and density should be installed to prevent objects from falling into the conditioned space. Due to electric heater, supply duct will require 90-degree elbow.

UNIT	STD UNIT WEIGHT		ECONOMIZER WEIGHT		CORNER A		CORNER B		CORNER C		CORNER D		DIM A		DIM B		DIM C	
	Lb	Kg	Lb	Kg	Lb	Kg	Lb	Kg	Lb	Kg	Lb	Kg	ft-in.	mm	ft-in.	mm	ft-in.	mm
50HJ015	1575	714	90	41	407	185	375	170	383	174	410	186	3-5	1039	3-5	1054	1-10	559
50HJ017	1650	748	90	41	375	170	375	170	449	204	452	205	3-2	963	3-7	1092	1-10	559

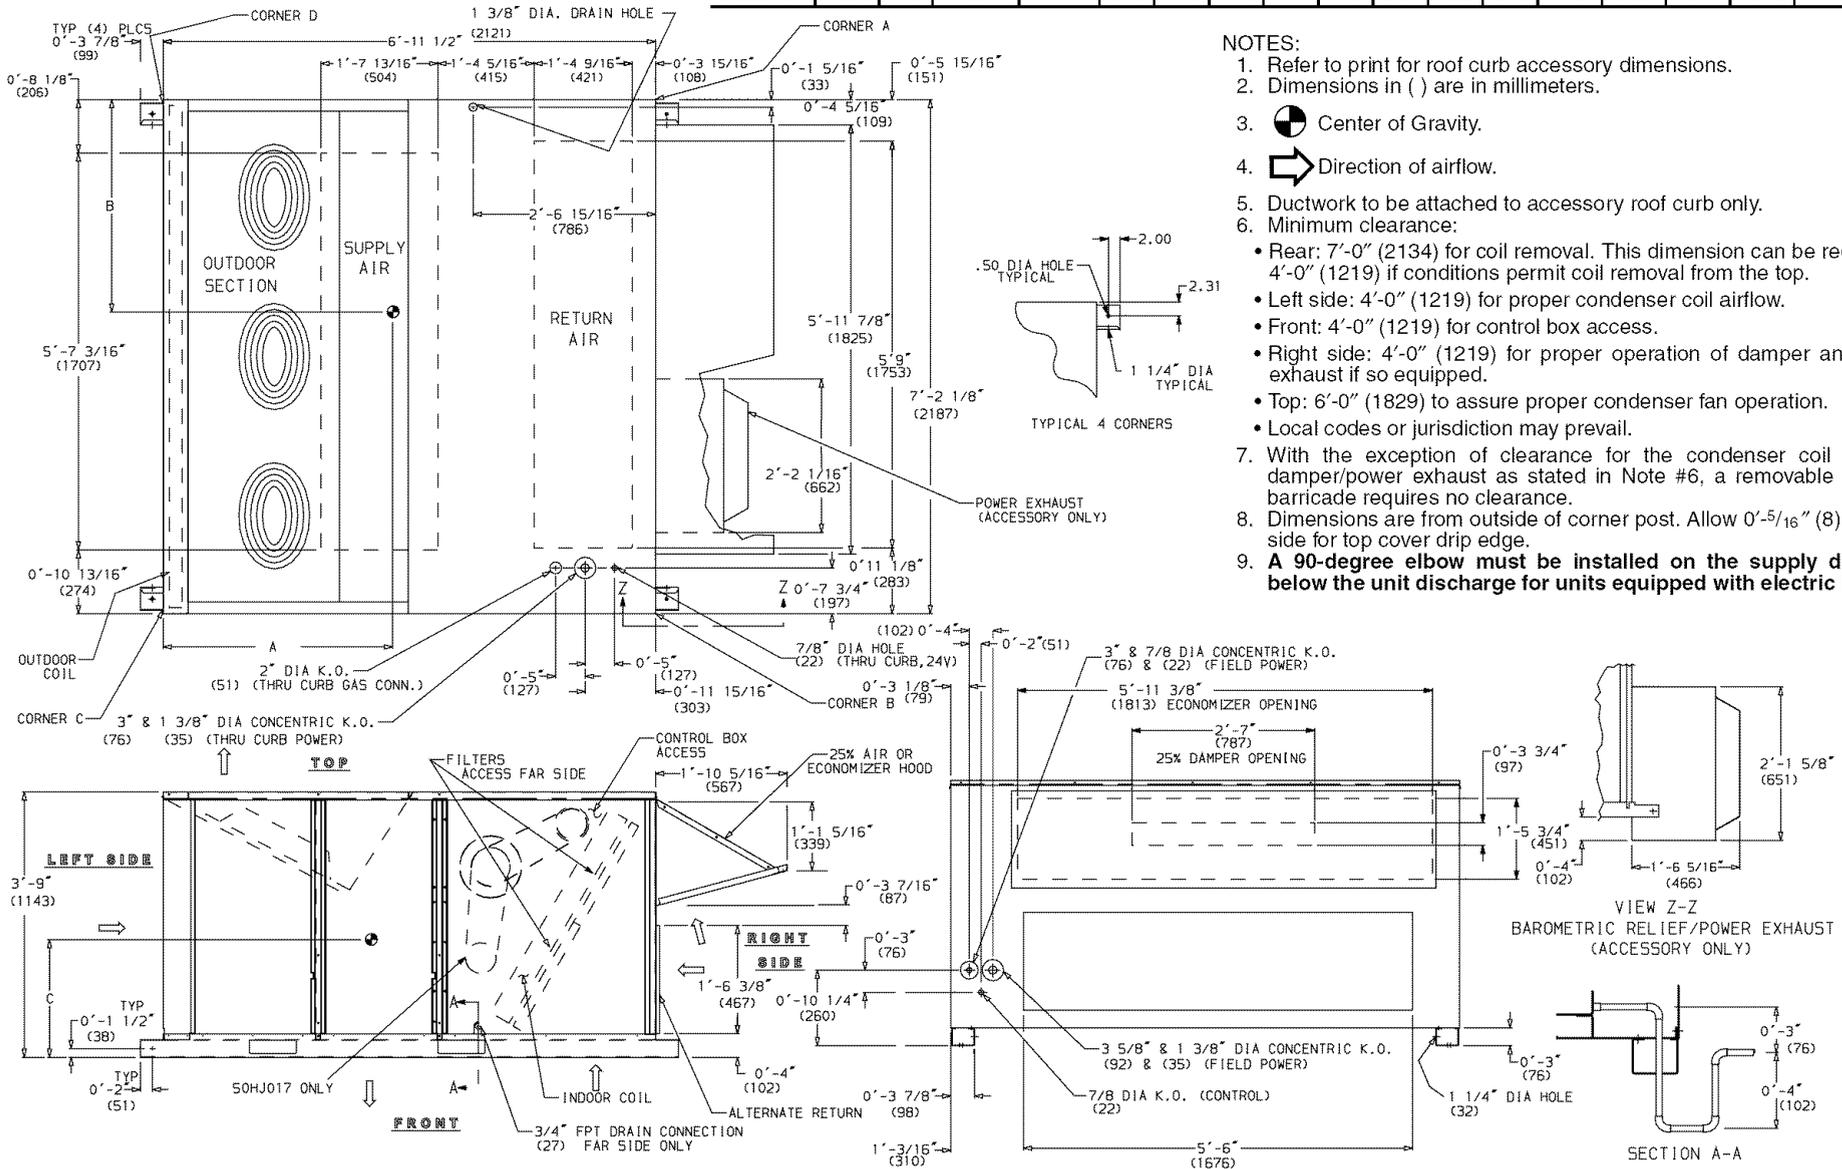

- NOTES:
1. Refer to print for roof curb accessory dimensions.
 2. Dimensions in () are in millimeters.
 3. Center of Gravity.
 4. Direction of airflow.
 5. Ductwork to be attached to accessory roof curb only.
 6. Minimum clearance:
 - Rear: 7'-0" (2134) for coil removal. This dimension can be reduced to 4'-0" (1219) if conditions permit coil removal from the top.
 - Left side: 4'-0" (1219) for proper condenser coil airflow.
 - Front: 4'-0" (1219) for control box access.
 - Right side: 4'-0" (1219) for proper operation of damper and power exhaust if so equipped.
 - Top: 6'-0" (1829) to assure proper condenser fan operation.
 - Local codes or jurisdiction may prevail.
 7. With the exception of clearance for the condenser coil and the damper/power exhaust as stated in Note #6, a removable fence or barricade requires no clearance.
 8. Dimensions are from outside of corner post. Allow 0'-5/16" (8) on each side for top cover drip edge.
 9. **A 90-degree elbow must be installed on the supply ductwork below the unit discharge for units equipped with electric heaters.**

Fig. 4 — Base Unit Dimensions, 50HJ015, 017

Table 1 — Physical Data

UNIT 50HJ	015			017		
	208/230	460	575	208/230	460	575
NOMINAL CAPACITY (tons)	12			15		
OPERATING WEIGHT (lb)						
Unit						
Al/Al*	1575			1650		
Al/Cu*	1725			1800		
Cu/Cu*	1855			1930		
Economizer	90			90		
Roof Curb†	200			200		
MoistureMiSer™ Dehumidification Package	40			40		
COMPRESSOR						
Quantity...Model (Ckt 1, Ckt 2)	2...ZR72KC			1...ZR94KC, 1...ZR72KC		
Number of Refrigerant Circuits	2			2		
Crankcase Heater Watts	70			70		
Loading (% of Full Capacity)	0, 53, 100			0, 60, 100		
Oil (oz) (Ckt 1, Ckt 2)	60, 60			85, 60		
REFRIGERANT TYPE				R-22		
Expansion Device				TXV		
Operating Charge (lb)**						
Circuit 1	20.7			19.5		
Circuit 2	13.4			13.45		
CONDENSER COIL	Cross-Hatched 3/8-in. Copper Tubes, Aluminum Lanced, Aluminum Pre-Coated, or Copper Plate Fins					
Rows...Fins/in.	4...15			4...15		
Total Face Area (sq ft)	21.7			21.7		
CONDENSER FAN	Propeller Type					
Nominal Cfm	10,500			10,500		
Quantity...Diameter (in.)	3...22			3...22		
Motor Hp...Rpm	1/2...1050			1/2...1050		
Watts Input (Total)	1100			1100		
EVAPORATOR COIL	Cross-Hatched 3/8-in. Copper Tubes, Aluminum Lanced or Copper Plate Fins, Face Split					
Rows...Fins/in.	4...15			4...15		
Total Face Area (sq ft)	17.5			17.5		
EVAPORATOR FAN	Centrifugal Type					
Quantity...Size (in.)	2...12 x 12			2...12 x 12		
Type Drive	Belt			Belt		
Nominal Cfm	5200			6000		
Std Motor Hp	2.9			3.0		
Opt Motor Hp	3.7			N/A		
Motor Nominal Rpm	1725			1745		
Std Maximum Continuous Bhp	3.13			3.38		
Opt Maximum Continuous Bhp	4.26			N/A		
Motor Frame Size	56H			184T		
Fan Rpm Range	Low-Medium Static 895-1147 High Static 1040-1315			895-1147 N/A		
Motor Bearing Type	Ball			Ball		
Maximum Allowable Rpm	1,550			1,550		
Motor Pulley Pitch Dia.	Low-Medium Static 3.1/4.1 High Static 3.7/4.7			3.1/4.1 N/A		
Nominal Motor Shaft Diameter (in.)	7/8			7/8		
Fan Pulley Pitch Diameter (in.)	Low-Medium Static 6.0 High Static 6.0			6.0 6.0		
Nominal Fan Shaft Diameter (in.)	13/16			17/16		
Belt, Quantity...Type...Length (in.)	Low-Medium Static 1...BX...45 High Static 1...BX...45			1...BX...45 1...BX...45		
Pulley Center Line Distance (in.)	14.5-16.0			14.5-16.0		
Speed Change per Full Turn of Movable Pulley Flange (Rpm)	Low-Medium Static 45 High Static 45			45 N/A		
Movable Pulley Maximum Full Turns From Closed Position	6			6		
Factory Speed	3.5			3.5		
Factory Speed Setting (Rpm)	Low-Medium Static 987 High Static 1155			1177 N/A		
HIGH-PRESSURE SWITCH (psig)						
Cutout				426		
Reset (Auto.)				320		
LOW-PRESSURE SWITCH (psig)						
Cutout				27		
Reset (Auto.)				44		
FREEZE PROTECTION THERMOSTAT (F)						
Opens				30 ± 5		
Closes				45 ± 5		
OUTDOOR-AIR INLET SCREENS				Cleanable		
Quantity...Size (in.)				2...20 x 25 x 1 1...20 x 20 x 1		
RETURN-AIR FILTERS				Throwaway		
Quantity...Size (in.)				4...20 x 20 x 2 4...16 x 20 x 2		

LEGEND

Al — Aluminum
 Bhp — Brake Horsepower
 Cu — Copper
 TXV — Thermostatic Expansion Valve

*Evaporator coil fin material/condenser coil fin material.


†Weight of 14-in. roof curb.

**Circuit 1 uses the lower portion of condenser coil and lower portion of evaporator coils, and Circuit 2 uses the upper portion of both coils.

‡Due to belt and pulley style, pulley cannot be set from 0 to 1 1/2 turns open.


Step 4 — Make Unit Duct Connections — Unit is shipped for thru-the-bottom duct connections. Ductwork openings are shown in Fig. 5. Field-fabricated concentric ductwork may be connected as shown in Fig. 6 and 7. Attach all ductwork to roof curb and roof curb basepans. Refer to installation instructions shipped with accessory roof curb for more information.

Step 5 — Trap Condensate Drain — See Fig. 4 and 8 for drain location. Plug is provided in drain hole and must be removed when unit is operating. One 3/4-in. half-coupling is provided inside unit evaporator section for condensate drain connection. An 8 1/2 in. x 3/4-in. diameter nipple and a 2-in. x 3/4-in. diameter pipe nipple are coupled to standard 3/4-in. diameter elbows to provide a straight path down through holes in unit base rails (see Fig. 9). A trap at least 4-in. deep must be used.

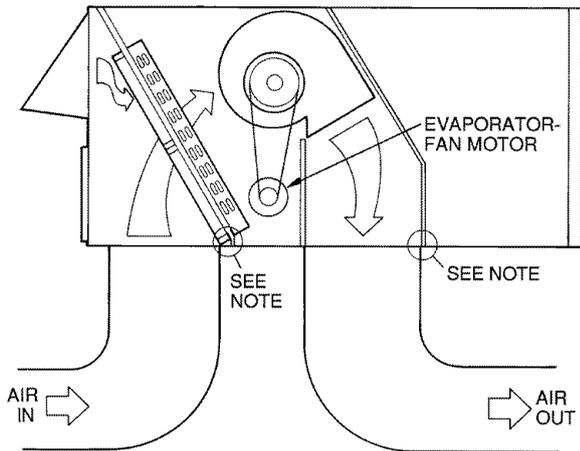


NOTE: Do not drill in this area, as damage to basepan may result in water leak.

Fig. 5 — Air Distribution — Thru-the-Bottom (50HJ017 Shown)

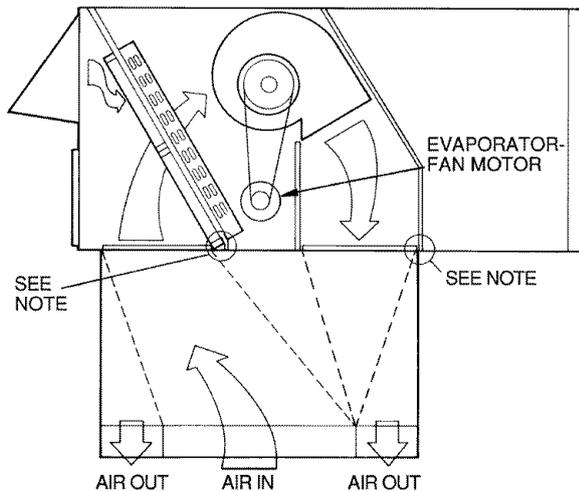

NOTE: Do not drill in this area, as damage to basepan may result in water leak.

Fig. 6 — Concentric Duct Air Distribution (50HJ017 Shown)

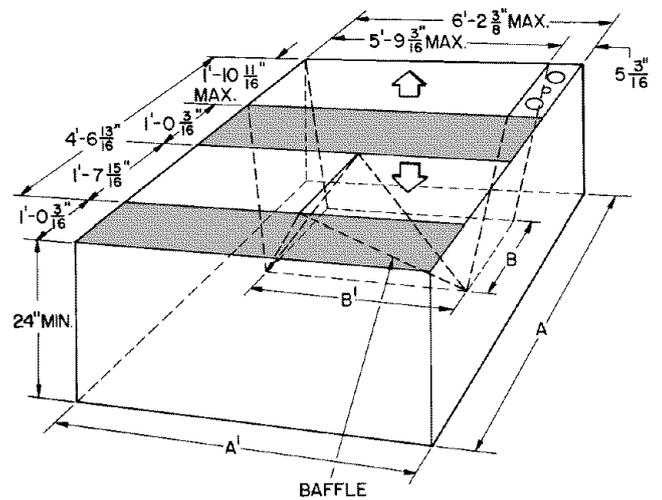

Shaded area indicates block-off panels.

NOTE: Dimensions A, A' and B, B' are obtained from field-supplied ceiling diffuser.

CAUTION
Concentric ducts may only be installed on units without electric heat. Personal injury or unit damage may result.

Fig. 7 — Concentric Duct Details

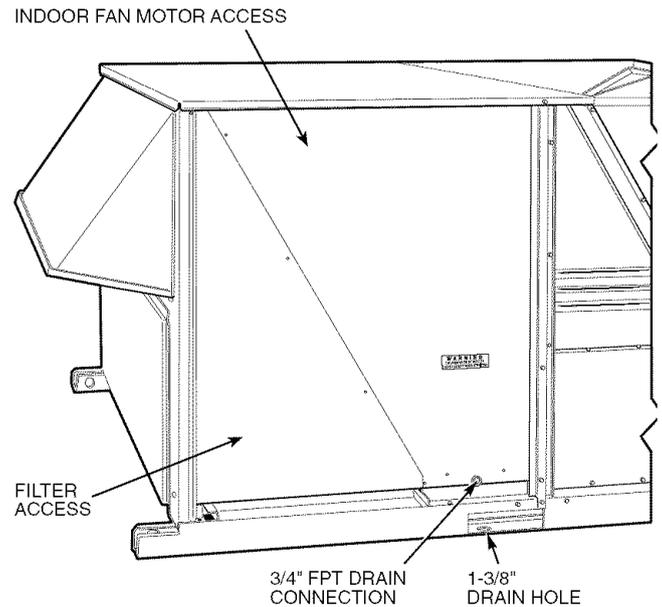


Fig. 8 — Condensate Drain Details (50HJ015 Shown)

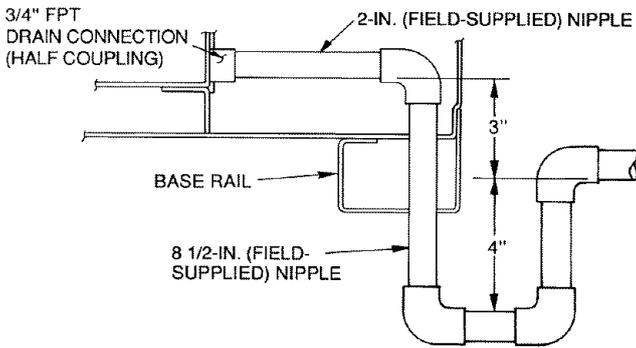


Fig. 9 — Condensate Drain Piping Details

Step 6 — Make Electrical Connections

FIELD POWER SUPPLY — Unit is factory wired for voltage shown on nameplate.

When installing units, provide a disconnect, per NEC (National Electrical Code) requirements, of adequate size (Table 2). Electrical heater data is shown in Table 3.

All field wiring must comply with NEC and local requirements.

Route power lines through control box access panel or unit basepan (Fig. 4) to connections as shown on unit wiring diagram and Fig. 10.

Operating voltage to compressor must be within voltage range indicated on unit nameplate. On 3-phase units, voltages between phases must be balanced within 2% and the current must be balanced within 10%.

⚠ CAUTION

The correct power phasing is critical in the operation of the scroll compressors. An incorrect phasing will cause the compressor to rotate in the wrong direction. This may lead to premature compressor failure.

Unit failure as a result of operation on improper line voltage or excessive phase imbalance constitutes abuse and may cause damage to electrical components.

FIELD CONTROL WIRING — Install a Carrier-approved accessory thermostat assembly according to the installation instructions included with the accessory. Locate thermostat assembly on a solid wall in the conditioned space to sense average temperature.


Route thermostat cable or equivalent single leads of colored wire from subbase terminals through conduit in unit to low-voltage connections as shown on unit label wiring diagram and in Fig. 11.

NOTE: For wire runs up to 50 ft, use no. 18 AWG (American Wire Gage) insulated wire (35 C minimum). For 50 to 75 ft,

use no. 16 AWG insulated wire (35 C minimum). For over 75 ft, use no. 14 AWG insulated wire (35 C minimum). All wire larger than no. 18 AWG cannot be directly connected to the thermostat and will require a junction box and splice at the thermostat.

Set heat anticipator settings as indicated in Table 4. Settings may be changed slightly to provide a greater degree of comfort for a particular installation.

Refer to accessory remote control instructions as required.

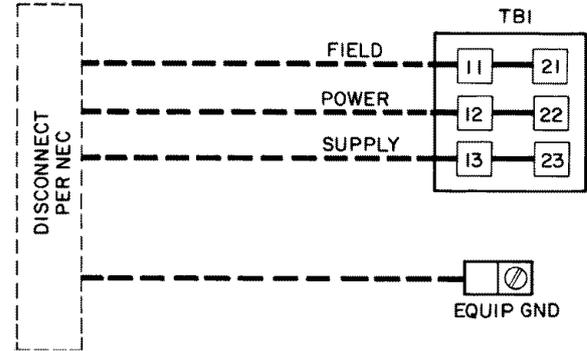

TB1 MAXIMUM WIRE SIZE

UNIT 50HJ	VOLTAGE		
	208/230	460	575
All	350 kcmil	2/0	2/0

- LEGEND**
- EQUIP** — Equipment
 - GND** — Ground
 - kcmil** — Thousand Circular Mills
 - NEC** — National Electrical Code
 - TB** — Terminal Block

Fig. 10 — Field Power Wiring Connections

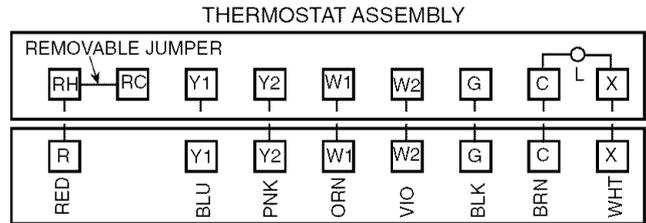


Fig. 11 — Field Control Thermostat Wiring

Table 2 — Electrical Data

UNIT 50HJ	NOMINAL VOLTAGE (3 Ph, 60 Hz)	VOLTAGE RANGE		COMPRESSOR				OFM			IFM		POWER EXHAUST		ELECTRIC HEAT*		POWER SUPPLY	
				No. 1		No. 2		Qty	Hp	FLA (ea)	Hp	FLA	FLA	LRA	kW	FLA	MCA	MOCP†
		Min	Max	RLA	LRA	RLA	LRA											
015 (Standard IFM)	208/230	187	253	20.7	156	20.7	156	3	0.5	1.7	2.9	8.8/ 8.4	—	—	—	—	60/ 60	80/ 80
													4.6	18.8	—	—	65/ 65	80/ 80
													—	—	14/19	39/ 45	60/ 67	70/ 70
													4.6	18.8	14/19	39/ 45	66/ 73	80/ 80
													—	—	26/34	71/ 82	100/113	100/125
													4.6	18.8	26/34	71/ 82	106/119	110/125
	460	414	506	10	75	10	75	3	0.5	0.8	2.9	4.2	—	—	—	—	29	35
													2.3	6.0	—	—	31	40
													—	—	15	18	29	35
													2.3	6.0	15	18	31	40
													—	—	32	39	54	60
													2.3	6.0	32	39	57	60
575	518	633	8.2	54	8.2	54	3	0.5	0.75	3.0	3.9	—	—	—	—	25	30	
												2.1	4.8	—	—	27	30	
												—	—	37**	37	51	60	
												2.1	4.8	37**	37	54	60	
												—	—	—	—	—	—	
												—	—	—	—	—	—	
015 (Optional IFM)	208/230	187	253	20.7	156	20.7	156	3	0.5	1.7	3.7	10.5/ 11.0	—	—	—	—	62/ 63	80/ 80
													4.6	18.8	—	—	67/ 67	80/ 80
													—	—	14/19	39/ 45	62/ 70	80/ 80
													4.6	18.8	14/19	39/ 45	68/ 76	80/ 80
													—	—	26/34	71/ 82	102/116	110/125
													4.6	18.8	26/34	71/ 82	108/122	110/125
	460	414	506	10	75	10	75	3	0.5	0.8	3.7	4.8	—	—	—	—	30	35
													2.3	6.0	—	—	32	40
													—	—	15	18	30	35
													2.3	6.0	15	18	32	40
													—	—	32	39	55	60
													2.3	6.0	32	39	58	60
575	518	633	8.2	54	8.2	54	3	0.5	0.75	3.0	3.9	—	—	—	—	25	30	
												2.1	4.8	—	—	27	30	
												—	—	37**	37	51	60	
												2.1	4.8	37**	37	54	60	
												—	—	—	—	—	—	
												—	—	—	—	—	—	
017	208/230	187	253	32.1	195	20.7	156	3	0.5	1.7	5.0	15.8/ 15.8	—	—	—	—	82/ 82	110/110
													4.6	18.8	—	—	86/ 86	110/110
													—	—	26/34	71/ 82	109/122	110/125
													4.6	18.8	26/34	71/ 82	114/128	125/150
													—	—	42/56	117/135	166/155	175/175
													4.6	18.8	42/56	117/135	172/161	175/175
	460	414	508	16.4	95	10	70	3	0.5	0.8	5.0	7.9	—	—	—	—	41	50
													2.3	6.0	—	—	43	50
													—	—	32	39	59	60
													2.3	6.0	32	39	62	70
													—	—	55	66	76	90
													2.3	6.0	55	66	79	90
575	518	633	12	80	8.2	54	3	0.5	0.75	5.0	6.0	—	—	—	—	31	40	
												2.1	4.8	—	—	34	40	
												—	—	—	—	—	—	
												—	—	—	—	—	—	
												—	—	—	—	—	—	
												—	—	—	—	—	—	


LEGEND

- FLA — Full Load Amps
- HACR — Heating, Air Conditioning and Refrigeration
- IFM — Indoor (Evaporator) Fan Motor
- LRA — Locked Rotor Amps
- MCA — Minimum Circuit Amps
- MOCP — Maximum Overcurrent Protection
- NEC — National Electrical Code
- OFM — Outdoor (Condenser) Fan Motor
- RLA — Rated Load Amps



EXAMPLE: Supply voltage is 460-3-60.

- AB = 452 v
- BC = 464 v
- AC = 455 v



$$\text{Average Voltage} = \frac{452 + 464 + 455}{3}$$

$$= \frac{1371}{3}$$

$$= 457$$

Determine maximum deviation from average voltage.

- (AB) 457 - 452 = 5 v
- (BC) 464 - 457 = 7 v
- (AC) 457 - 455 = 2 v

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457}$$

$$= 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.

3. MCA calculation for units with electric heaters over 50 kW = (1.25 x IFM amps) + (1.00 x heater FLA).

*Heater capacity (kW) is based on heater voltage of 208 v, 240 v, 480 v, and 575 v. Heaters are rated at 240 v, 480 v, or 575 v. If power distribution voltage to unit varies from rated heater voltage, heater kW will vary accordingly.

†Fuse or HACR circuit breaker.
**Heaters are field installed only.

NOTES:

1. In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. Canadian units may be fuse or circuit breaker.

2. Unbalanced 3-Phase Supply Voltage

Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Table 3 — Electric Resistance Heater Data

UNIT 50HJ	HEATER kW							HEATER STAGES	% HEAT PER STAGE	MAXIMUM STAGES*	MINIMUM		HEATER AMPS						
	Unit Voltages										Heating Cfm		208	230	240	460	480	575	600
	208	230	240	460	480	575	600				Cfm	L/s							
015	14	17	19	14	15	—	—	1	100	1	3750	1770	39.3	43.4	45.3	17.2	17.9	—	—
	26	31	34	30	32	—	—	2	50/50	2			71.3	78.9	82.3	37.3	39.0	—	—
	42	52	56	50	55	37	40	2	33/67	3			117.0	129.4	135.0	63.3	66.1	37.0	38.6
017	26	31	34	30	32	—	—	2	50/50	2	3750	1770	71.3	78.8	82.3	37.3	39.0	—	—
	42	52	56	50	55	—	—	2	33/67	3			117.0	129.4	135.0	63.3	66.1	—	—
	56	69	75	73	80	—	—	2	50/50	4			155.9	172.4	179.9	92.0	96.0	—	—

*Maximum number of stages using accessory low-ambient kit or head pressure control device and low-ambient kit.

NOTE: Heaters are rated at 240, 480, and 575 v.

Table 4 — Heat Anticipator Settings


UNIT 50HJ	UNIT VOLTAGES	kW*	STAGE 1	STAGE 2
015, 017	208/230-3-60	14/19	.40	—
		26/34	.40	.66
		42/56	.66	.40
		56/75	.66	.66
	460-3-60	15	.40	—
32		.40	.40	
55		.40	.66	
575-3-60	80	.66	.66	
	37	.66	.66	

*Heater kW is based on heater voltage of 208 v, 240 v, 480 v, and 575 v.

OPTIONAL NON-FUSED DISCONNECT — On units with the optional non-fused disconnect, incoming power will be wired into the disconnect switch. Refer to Fig. 12 for wiring for 100 and 200 amp disconnect switches. Units with an MOCP (maximum overcurrent protection) under 100 will use the 100 amp disconnect switch. Units with an MOCP over 100 will use the 200 amp disconnect switch. Refer to the applicable disconnect wiring diagram.

To prevent breakage during shipping, the disconnect handle and shaft are shipped and packaged inside the unit control box. Install the disconnect handle before unit operation. To install the handle and shaft, perform the following procedure:

1. Open the control box door and remove the handle and shaft from shipping location.
2. Loosen the Allen bolt located on the disconnect switch. The bolt is located on the square hole and is used to hold the shaft in place. The shaft cannot be inserted until the Allen bolt is moved.
3. Insert the disconnect shaft into the square hole on the disconnect switch. The end of the shaft is specially cut and the shaft can only be inserted in the correct orientation.

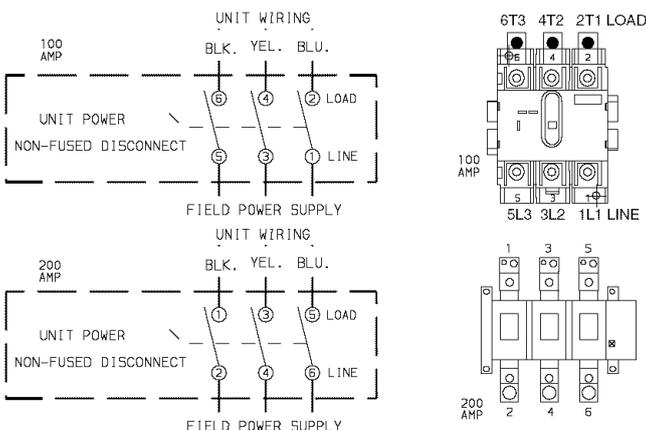

NOTE: The disconnect takes the place of TB-1 as shown on the unit wiring diagram label and the component arrangement label.

Fig. 12 — Optional Non-Fused Disconnect Wiring

4. Tighten the Allen bolt to lock the shaft into position.
5. Close the control box door.
6. Attach the handle to the external access door with the two screws provided. When the handle is in the ON position, the handle will be vertical. When the handle is in the OFF position, the handle will be horizontal.
7. Turn the handle to the OFF position and close the door. The handle should fit over the end of the shaft when the door is closed.
8. The handle must be in the OFF position to open the control box door.

OPTIONAL CONVENIENCE OUTLET — On units with optional convenience outlet, a 115-v GFI (ground fault interrupt) convenience outlet receptacle is provided for field wiring. Field wiring should be run through the 7/8-in. knockout provided in the basepan near the return air opening.

Step 7 — Make Outdoor-Air Inlet Adjustments

MANUAL OUTDOOR-AIR DAMPER — All units (except those equipped with a factory-installed economizer) have a manual outdoor-air damper to provide ventilation air. Damper can be preset to admit up to 25% outdoor air into return-air compartment. To adjust, loosen securing screws and move damper to desired setting. Then retighten screws to secure damper (Fig. 13).

Step 8 — Install Outdoor-Air Hood

IMPORTANT: If the unit is equipped with the optional EconoMiSerIV component, move the outdoor-air temperature sensor prior to installing the outdoor-air hood. See the Optional EconoMiSerIV and EconoMiSer2 section for more information.

The same type of factory-installed hood is used on units with 25% air ventilation and units with an EconoMiSer.

NOTE: The hood top panel, upper and lower filter retainers, hood drain pan, baffle (size 017 units), and filter support bracket are secured opposite the condenser end of the unit. The

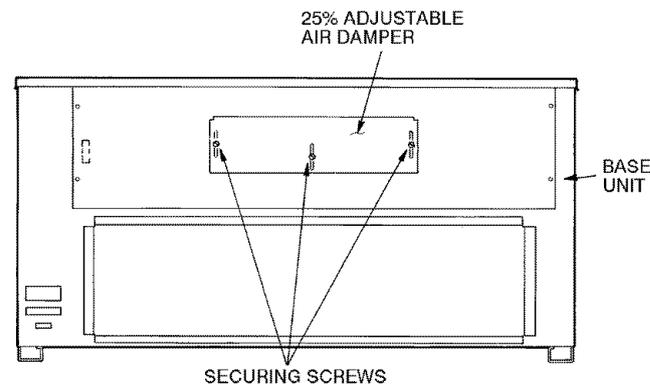


Fig. 13 — 25% Outdoor-Air Section Details

screens, hood side panels, remaining section of filter support bracket, seal strip, and all other hardware are in a package located inside the return-air filter access panel (Fig. 14).

1. Attach seal strip to upper filter retainer. See Fig. 15.
2. Assemble hood top panel and side panels, upper filter retainer, and hood drain pan (Fig. 16).
3. Secure lower filter retainer and long section of filter support bracket to unit. See Fig. 16. Leave screws loose on size 017 units.
4. Slide baffle (size 017 units) behind lower filter retainer and tighten screws.
5. Loosen sheet metal screws for base unit top panel located above outdoor-air inlet opening, and remove screws for hood side panels located on the sides of the outdoor-air inlet opening.
6. Match notches in hood top panel to unit top panel screws. Insert hood flange between unit top panel flange and unit. Tighten screws.
7. Hold hood side panel flanges flat against unit, and install screws removed in Step 5.
8. Insert outdoor-air inlet screens and spacer in channel created by lower filter retainer and filter support bracket.
9. Attach remaining short section of filter support bracket.

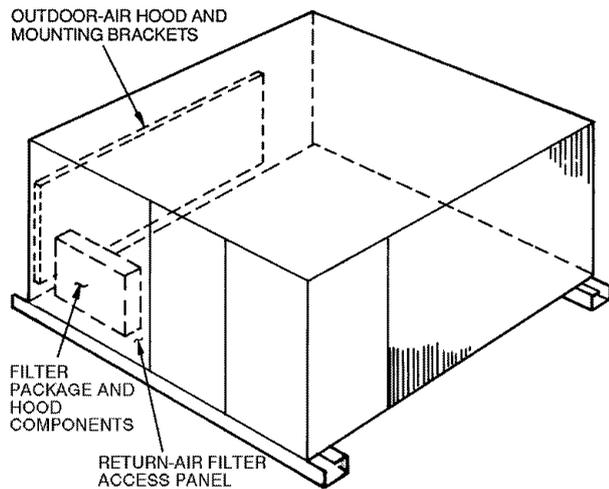


Fig. 14 — Outdoor-Air Hood Component Location

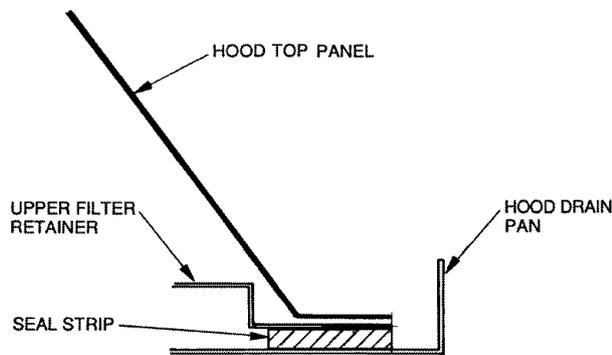



Fig. 15 — Seal Strip Location (Air Hood Cross-Sectional View)

Step 9 — Install All Accessories — After all the factory-installed options have been adjusted, install all field-installed accessories. Refer to the accessory installation instructions included with each accessory.

MOTORMASTER® I CONTROL INSTALLATION


Install Field-Fabricated Wind Baffles — Wind baffles must be field-fabricated for all units to ensure proper cooling cycle operation at low ambient temperatures. See Fig. 17 for baffle

details. Use 20-gage, galvanized sheet metal, or similar corrosion-resistant metal for baffles. Use field-supplied screws to attach baffles to unit. Screws should be 1/4-in. diameter and 5/8-in. long. Drill required screw holes for mounting baffles.

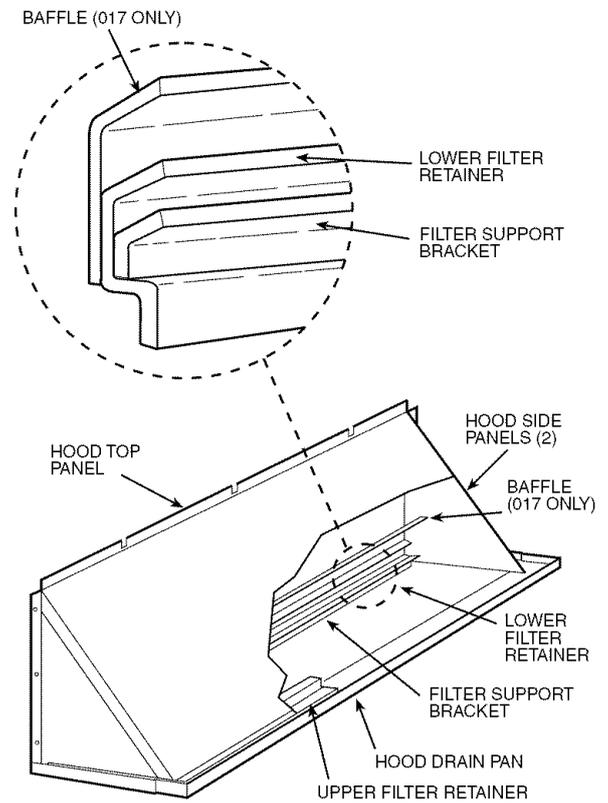

NOTE: The outdoor-air hood comes with a baffle which is used on 017 units only; discard baffle for 015 units.

Fig. 16 — Outdoor-Air Hood Details

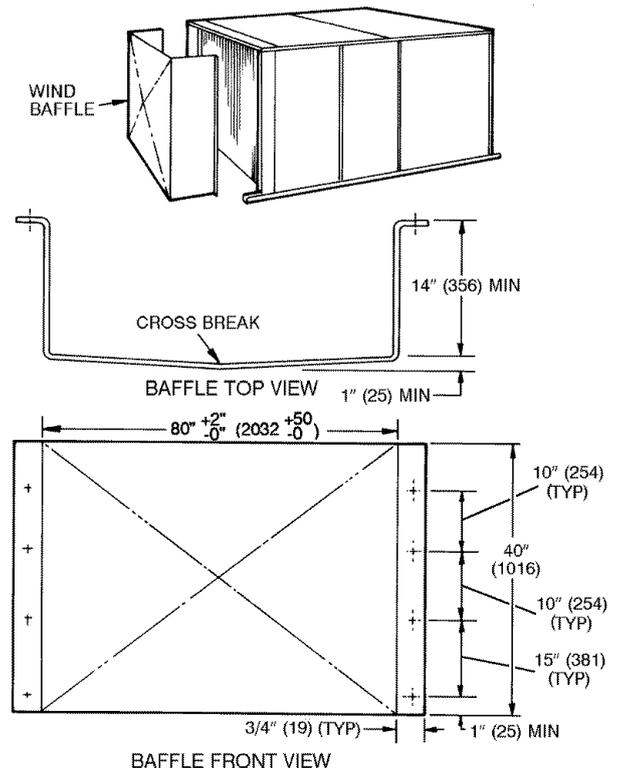

NOTE: Dimensions in () are in mm.

Fig. 17 — Wind Baffle Details

▲ CAUTION

To avoid damage to the refrigerant coils and electrical components, use recommended screw sizes only. Use care when drilling holes.

Install Motormaster I Controls — Only one Motormaster I control is required per unit. The Motormaster I control must be used in conjunction with the accessory 0° F low ambient kit (purchased separately). The Motormaster I device controls outdoor fan no. 1 while outdoor fans no. 2 and 3 are sequenced off by the accessory 0° F low ambient kit.


Accessory 0° F Low Ambient Kit — Install the accessory 0° F low ambient kit per instruction supplied with accessory.

Sensor Assembly — Install the sensor assembly in the location shown in Fig. 18.

Motor Mount — To ensure proper fan height, replace the existing motor mount with the new motor mount provided with accessory.

Transformer (460 and 575-v Units Only) — On 460 and 575-volt units a transformer is required. The transformer is provided with the accessory and must be field-installed.

Motormaster I Control — Recommended mounting location is on the inside of the panel to the left of the control box. The control should be mounted on the inside of the panel, vertically, with leads protruding from bottom of extrusion.

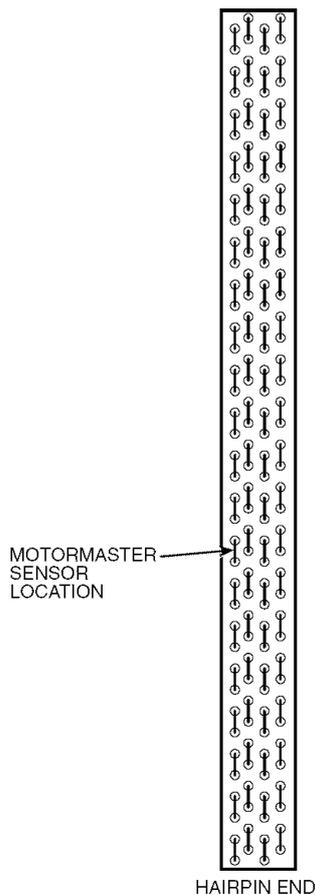

NOTES:

1. All sensors are located on the eighth hairpin up from the bottom.
2. Field-installed tubing insulation is required to be installed over the TXV (thermostatic expansion valve) bulb and capillary tube for proper operation at low ambients. Tubing insulation is only required on the portion of suction line located between indoor and outdoor section.

Fig. 18 — Motormaster® I Sensor Locations

Step 10 — Adjust Factory-Installed Options

PREMIERLINK™ CONTROL — The PremierLink controller is available as a special order from the factory and is compatible with the Carrier Comfort Network® (CCN) system. This control is designed to allow users the access and ability to change factory-defined settings, thus expanding the function of the standard unit control board. Carrier's diagnostic standard tier display tools such as Navigator™ device or Scrolling Marquee can be used with the PremierLink controller.

The PremierLink controller (see Fig. 19) requires the use of a Carrier electronic thermostat or a CCN connection for time broadcast to initiate its internal timeclock. This is necessary for broadcast of time of day functions (occupied/unoccupied). No sensors are supplied with the field-mounted PremierLink control. The factory-installed PremierLink control includes only the supply-air temperature (SAT) sensor and the outdoor air temperature (OAT) sensor as standard. An indoor air quality (CO₂) sensor can be added as an option. Refer to Table 5 for sensor usage. Refer to Fig. 20 for PremierLink controller wiring. The PremierLink control may be mounted in the control panel or an area below the control panel.

NOTE: PremierLink controller version 1.3 and later is shipped in Sensor mode. If used with a thermostat, the PremierLink controller must be configured to Thermostat mode.

Install the Supply Air Temperature (SAT) Sensor — When the unit is supplied with a factory-mounted PremierLink control, the supply-air temperature (SAT) sensor (33ZCSENSAT) is factory-supplied and wired. The wiring is routed from the PremierLink control over the control box, through a grommet, into the fan section, down along the back side of the fan, and along the fan deck over to the supply-air opening.

The SAT probe is wire-tied to the supply-air opening (on the horizontal opening end) in its shipping position. Remove the sensor for installation. Re-position the sensor in the flange of the supply-air opening or in the supply air duct (as required by local codes). Drill or punch a 1/2-in. hole in the flange or duct. Use two field-supplied, self-drilling screws to secure the sensor probe in a horizontal orientation.

NOTE: The sensor must be mounted in the discharge airstream downstream of the cooling coil and any heating devices. Be sure the probe tip does not come in contact with any of the unit or heat surfaces.

Outdoor Air Temperature (OAT) Sensor — When the unit is supplied with a factory-mounted PremierLink control, the outdoor-air temperature sensor (OAT) is factory-supplied and wired.

Install the Indoor Air Quality (CO₂) Sensor — Mount the optional indoor air quality (CO₂) sensor according to manufacturer specifications. A separate field-supplied transformer must be used to power the CO₂ sensor.

Wire the CO₂ sensor to the COM and IAQI terminals of J5 on the PremierLink controller. Refer to the PremierLink Installation, Start-up, and Configuration Instructions for detailed wiring and configuration information.

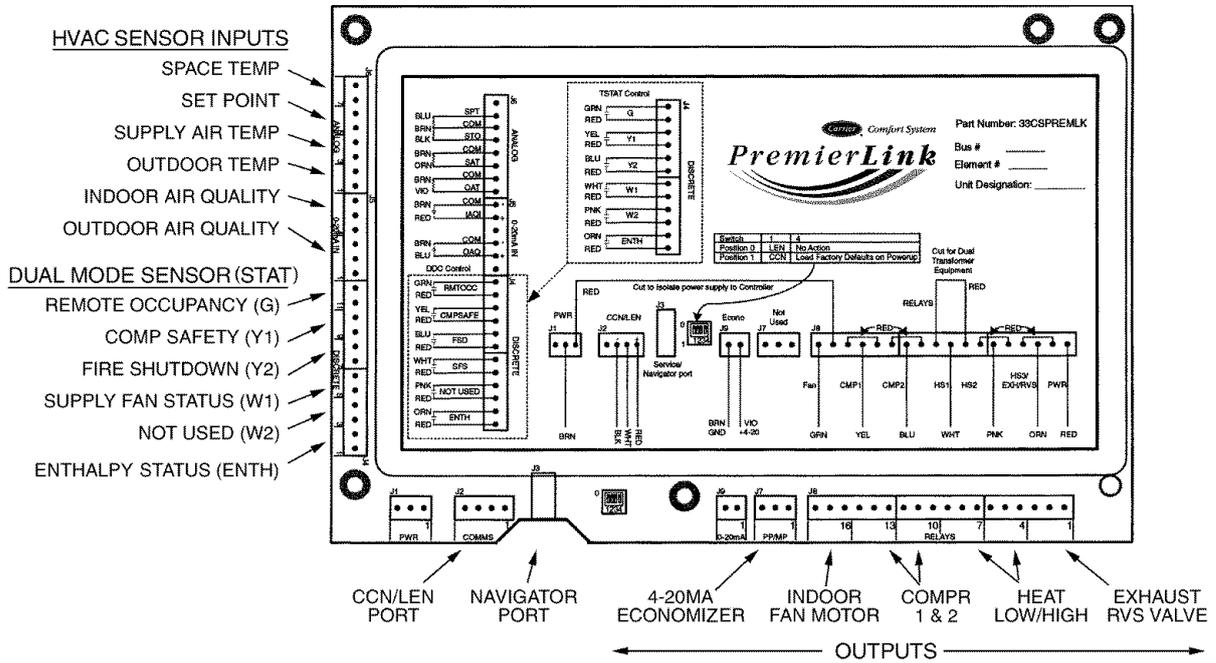


Fig. 19 — PremierLink™ Controller


Table 5 — PremierLink Sensor Usage

APPLICATION	OUTDOOR AIR TEMPERATURE SENSOR	RETURN AIR TEMPERATURE SENSOR	OUTDOOR AIR ENTHALPY SENSOR	RETURN AIR ENTHALPY SENSOR
Differential Dry Bulb Temperature with PremierLink* (PremierLink requires 4-20 mA Actuator)	Included — HH79NZ039	Required — 33ZCT55SPT or Equivalent	—	—
Single Enthalpy with PremierLink* (PremierLink requires 4-20 mA Actuator)	Included — Not Used	—	Required — 33CSENTHSW or HH57AC077	—
Differential Enthalpy with PremierLink* (PremierLink requires 4-20 mA Actuator)	Included — Not Used	—	Required — 33CSENTHSW (HH57ZC003) or HH57AC077	Required — 33CSENTSEN or HH57AC078

*PremierLink control requires supply air temperature sensor 33ZCSENSAT and outdoor air temperature sensor HH79NZ039 — Included with factory-installed PremierLink control; field-supplied and field-installed with field-installed PremierLink control.

NOTES:

- CO₂ Sensors (Optional):
 - 33ZCSENCO2 — Room sensor (adjustable). Aspirator box is required for duct mounting of the sensor.
 - 33ZCASPCO2 — Aspirator box used for duct-mounted CO₂ room sensor.
 - 33ZCT55CO2 — Space temperature and CO₂ room sensor with override.
 - 33ZCT56CO2 — Space temperature and CO₂ room sensor with override and setpoint.
- All units include the following Standard Sensors:
 - Outdoor-air sensor — 50HJ540569 — Opens at 67 F, closes at 52 F, not adjustable.
 - Mixed-air sensor — HH97AZ001 — (PremierLink control requires supply air temperature sensor 33ZCSENSAT and outdoor air temperature sensor HH79NZ039)
 - Compressor lockout sensor — 50HJ540570 — Opens at 35 F, closes at 50 F.

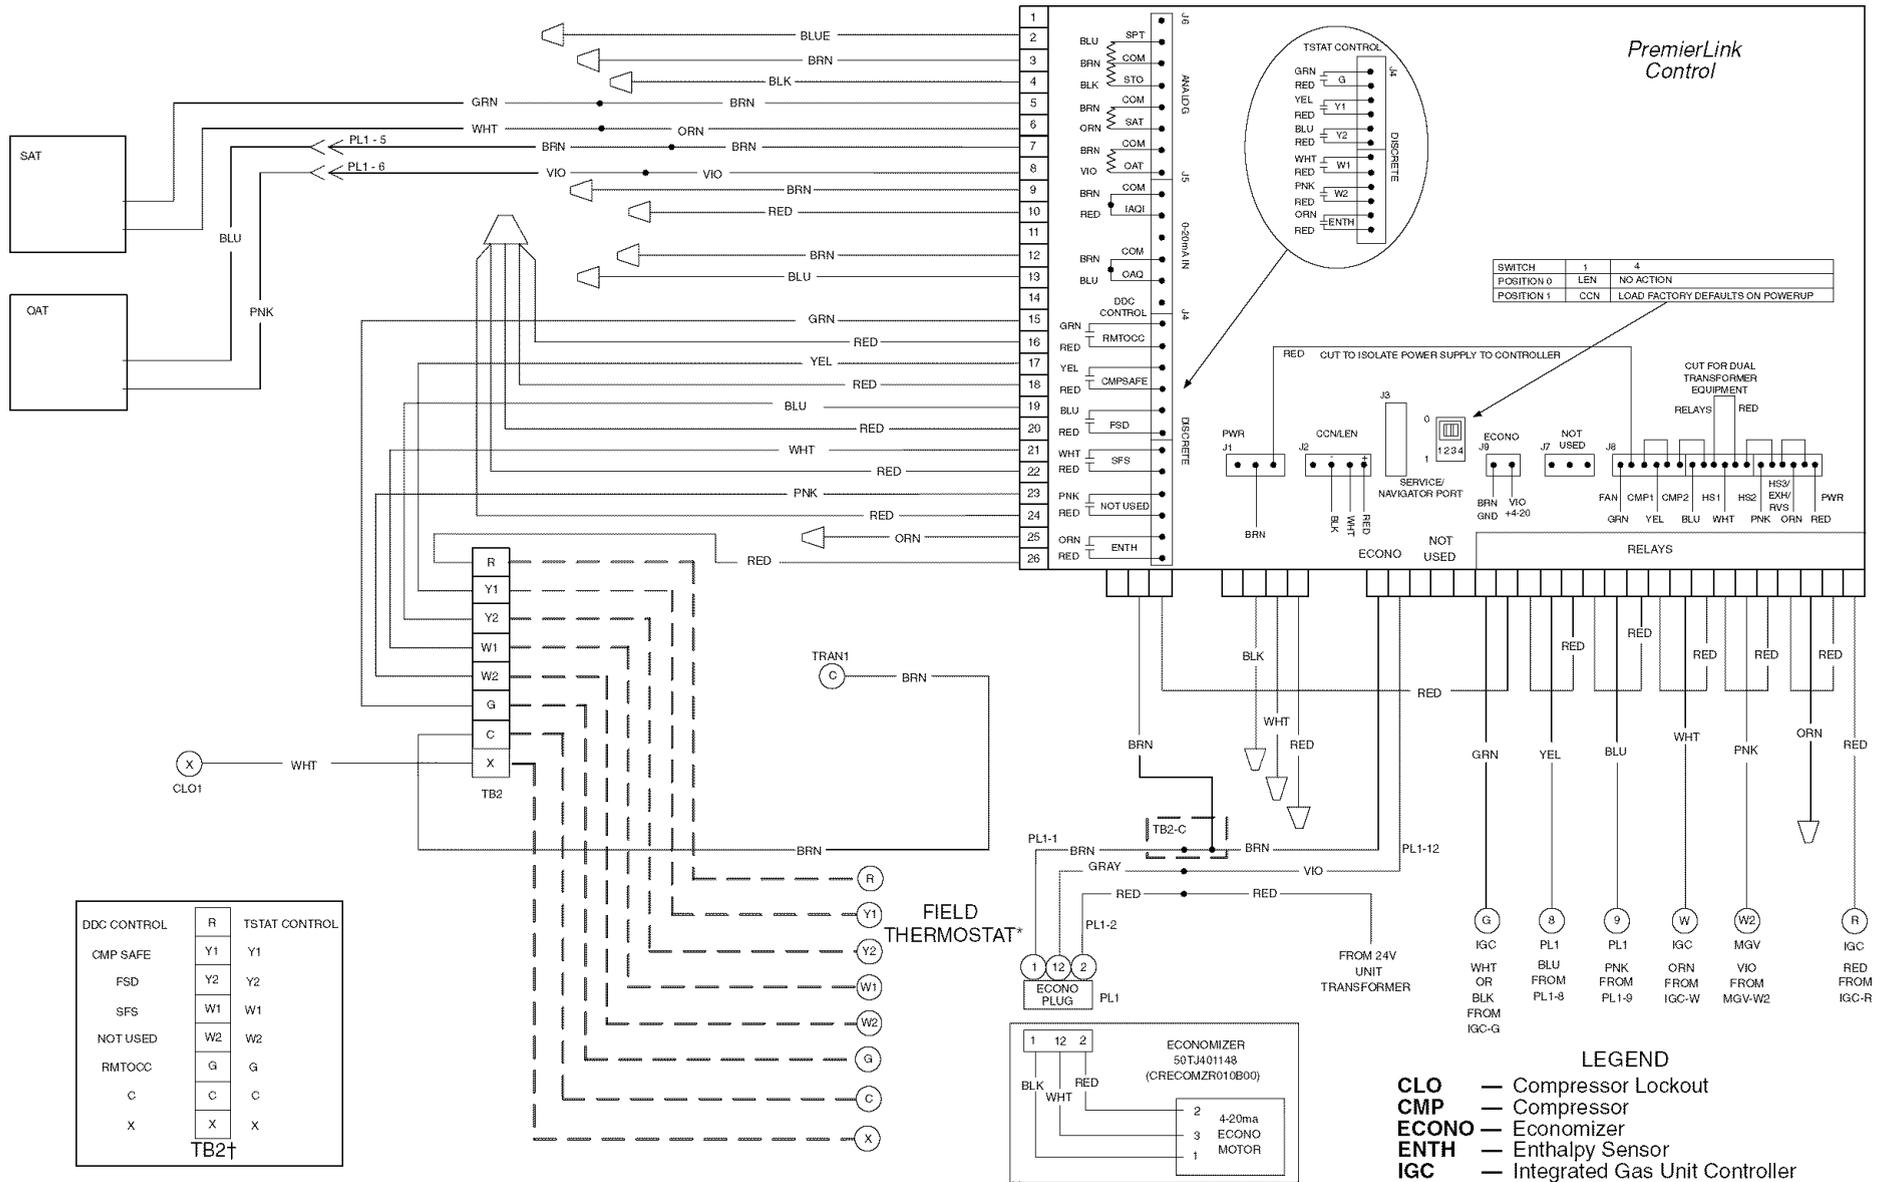

*If PremierLink control is in thermostat mode.
 †TB2 terminal designations for 24 vac discrete inputs. Default is for DDC control.

- LEGEND**
- CLO** — Compressor Lockout
 - CMP** — Compressor
 - ECONO** — Economizer
 - ENTH** — Enthalpy Sensor
 - IGC** — Integrated Gas Unit Controller
 - MGV** — Main Gas Valve
 - OAT** — Outdoor Air Temperature Sensor
 - PL** — Plug
 - SAT** — Supply Air Temperature Sensor
 - SPT** — Space Temperature Sensor
 - TB** — Terminal Block
 - TRAN** — Transformer

Fig. 20 — PremierLink™ Controls Wiring

ENTHALPY SWITCH/RECEIVER — The accessory enthalpy switch/receiver (33CENTHSW) senses temperature and humidity of the air surrounding the device and calculates the enthalpy when used without an enthalpy sensor. The relay is energized when enthalpy is high and deenergized when enthalpy is low (based on ASHRAE [American Society of Heating, Refrigeration and Air Conditioning Engineers] 90.1 criteria). If an accessory enthalpy sensor (33CENTSEN) is attached to the return air sensor input, then differential enthalpy is calculated. The relay is energized when the enthalpy detected by the return air enthalpy sensor is less than the enthalpy at the enthalpy switch/receiver. The relay is deenergized when the enthalpy detected by the return air enthalpy sensor is greater than the enthalpy at the enthalpy switch/receiver (differential enthalpy control). See Fig. 21 and 22.

OUTDOOR ENTHALPY CONTROL (Fig. 23) — Outdoor enthalpy control requires only an enthalpy switch/receiver (33CENTHSW). The enthalpy switch/receiver is mounted in the outdoor air inlet and calculates outdoor air enthalpy. The enthalpy switch/receiver energizes the relay output when the outdoor enthalpy is above 28 Btu/lb **OR** dry bulb temperature is above 75 F and is deenergized when the outdoor enthalpy is below 27 Btu/lb **AND** dry bulb temperature is below 74.5 F. The relay output is wired to the unit economizer which will open or close depending on the output of the switch.

NOTE: The enthalpy calculation is done using an average altitude of 1000 ft above sea level.

Mounting — Mount the enthalpy switch/receiver in a location where the outdoor air can be sampled (such as the outdoor air intake). The enthalpy switch/receiver is not a NEMA 4 (National Electrical Manufacturers Association) enclosure and should be mounted in a location that is not exposed to outdoor elements such as rain or snow. Use two field-supplied no. 8 x 3/4-in. TEK screws. Insert the screws through the holes in the sides of the enthalpy switch/receiver.

Wiring — Carrier recommends the use of 18 to 22 AWG (American Wire Gage) twisted pair or shielded cable for all wiring. All connections must be made with 1/4-in. female spade connectors.

A 24-vac transformer is required to power the enthalpy switch/receiver; as shown in Fig. 23, the PremierLink™ board provides 24 vac. Connect the GND and 24 VAC terminals on the enthalpy switch/receiver to the terminals on the transformer. On some applications, the power from the economizer harness can be used to power the enthalpy switch/receiver. To power the enthalpy switch/receiver from the economizer harness, connect power of the enthalpy switch/receiver to the red and brown wires (1 and 4) on the economizer harness.

For connection to rooftop units with PremierLink control, connect the LOW Enthalpy terminal on the enthalpy switch/receiver to J4 — pin 2 of the PremierLink control on the HVAC unit. The switch can be powered through the PremierLink control board if desired. Wire the 24 VAC terminal on the enthalpy switch/receiver to J4 — pin 1 on the PremierLink control. Wire the GND terminal on the enthalpy switch/receiver to J1 — pin 2 on the PremierLink control. The HI Enthalpy terminal is not used. See Fig. 23.

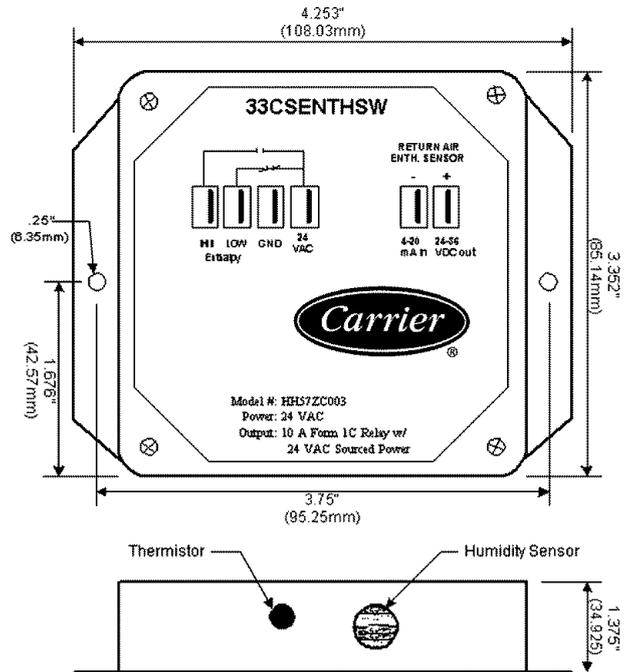


Fig. 21 — Enthalpy Switch/Receiver Dimensions (33CENTHSW)

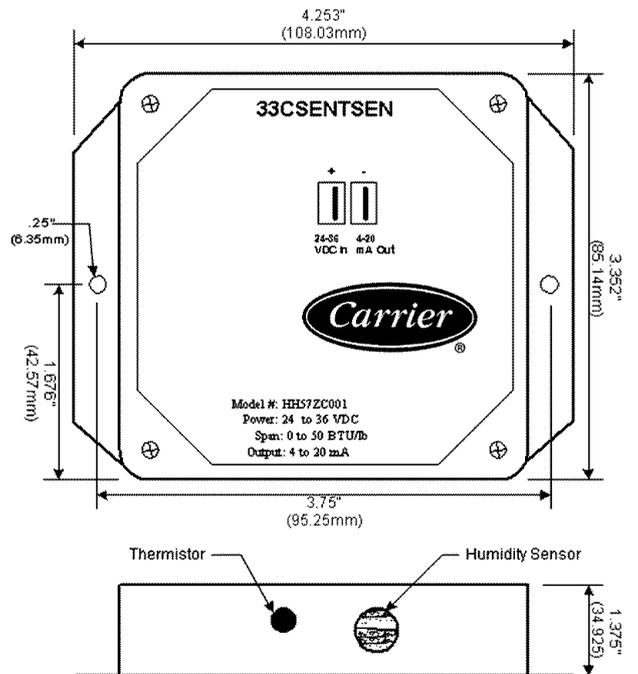


Fig. 22 — Enthalpy Sensor Dimensions (33CENTSEN)

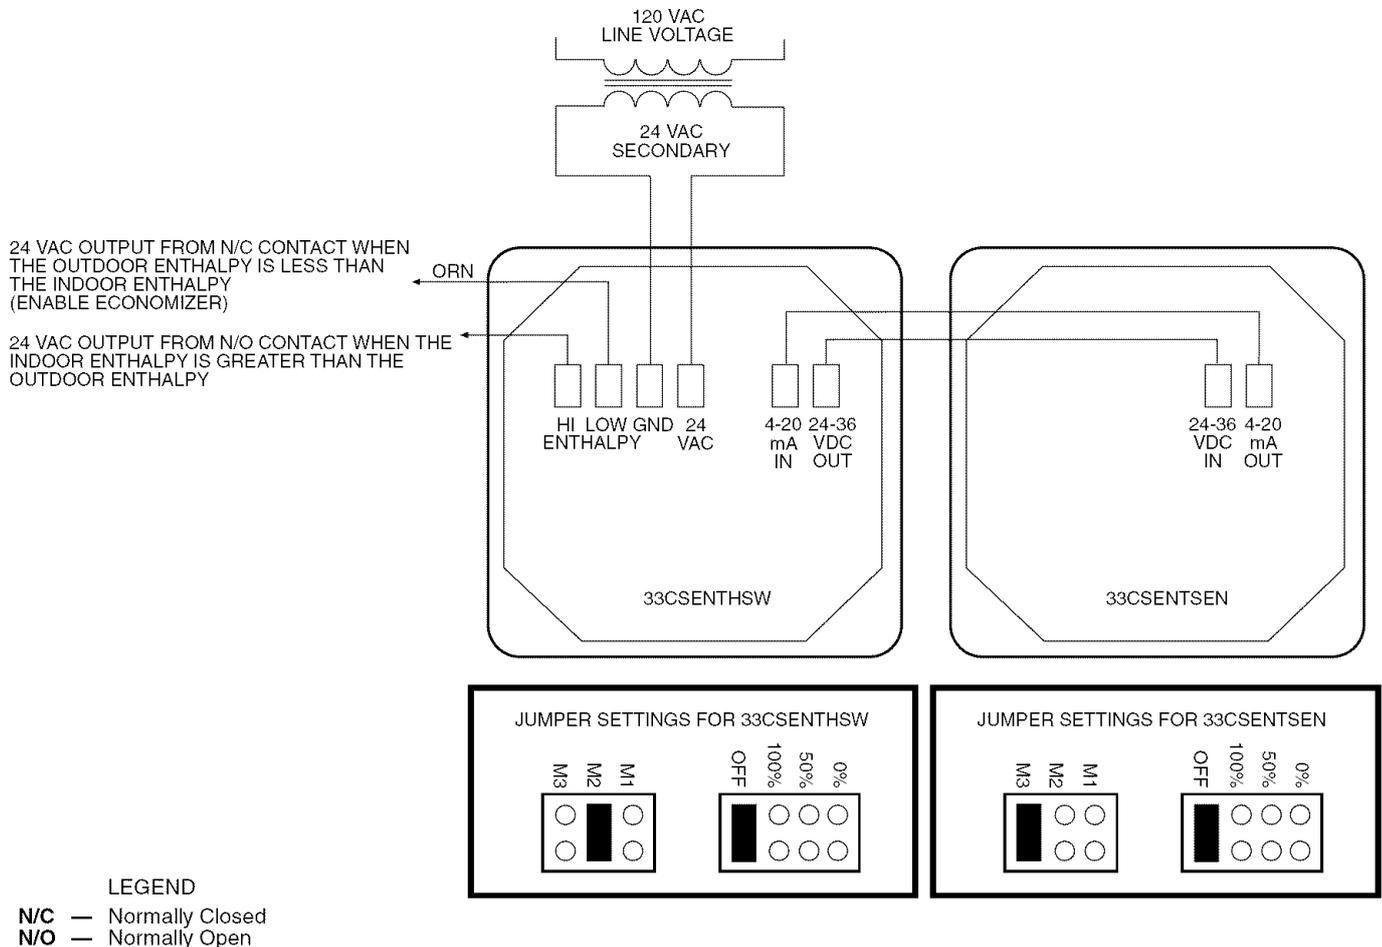


Fig. 24 — Differential Enthalpy Control Wiring

Enthalpy Switch/Receiver Jumper Settings — There are two jumpers. One jumper determines the mode of the enthalpy switch/receiver. The other jumper is not used. To access the jumpers, remove the 4 screws holding the cover on the enthalpy switch/receiver and then remove the cover. The factory settings for the jumpers are M1 and OFF.

The mode jumper should be set to M2 for differential enthalpy control. The factory test jumper should remain on OFF or the enthalpy switch/receiver will not calculate enthalpy.

Enthalpy Sensor Jumper Settings — There are two jumpers. One jumper determines the mode of the enthalpy sensor. The other jumper is not used. To access the jumpers, remove the 4 screws holding the cover on the enthalpy sensor and then remove the cover. The factory settings for the jumpers are M3 and OFF.

The mode jumper should be set to M3 for 4 to 20 mA output. The factory test jumper should remain on OFF or the enthalpy sensor will not calculate enthalpy.

ENTHALPY SENSORS AND CONTROL — The enthalpy control (HH57AC077) is supplied as a field-installed accessory to be used with the EconoMi\$er2 damper control option. The outdoor air enthalpy sensor is part of the enthalpy control. The separate field-installed accessory return air enthalpy sensor (HH57AC078) is required for differential enthalpy control.

NOTE: The enthalpy control must be set to the “D” setting for differential enthalpy control to work properly.

The enthalpy control receives the indoor and return enthalpy from the outdoor and return air enthalpy sensors and provides a dry contact switch input to the PremierLink™ controller. Locate the controller in place of an existing

economizer controller or near the actuator. The mounting plate may not be needed if existing bracket is used.

A closed contact indicates that outside air is preferred to the return air. An open contact indicates that the economizer should remain at minimum position.

Outdoor Air Enthalpy Sensor/Enthalpy Controller (HH57AC077) — To wire the outdoor air enthalpy sensor, perform the following (see Fig. 25 and 26):

NOTE: The outdoor air sensor can be removed from the back of the enthalpy controller and mounted remotely.


1. Use a 4-conductor, 18 or 20 AWG cable to connect the enthalpy control to the PremierLink controller and power transformer.
2. Connect the following 4 wires from the wire harness located in rooftop unit to the enthalpy controller:
 - a. Connect the BRN wire to the 24 vac terminal (TR1) on enthalpy control and to pin 1 on 12-pin harness.
 - b. Connect the RED wire to the 24 vac GND terminal (TR) on enthalpy sensor and to pin 4 on 12-pin harness.
 - c. Connect the GRAY/ORN wire to J4-2 on PremierLink controller and to terminal (3) on enthalpy sensor.
 - d. Connect the GRAY/RED wire to J4-1 on PremierLink controller and to terminal (2) on enthalpy sensor.

NOTE: If installing in a Carrier rooftop, use the two gray wires provided from the control section to the economizer to connect PremierLink controller to terminals 2 and 3 on enthalpy sensor.

Return Air Enthalpy Sensor — Mount the return-air enthalpy sensor (HH57AC078) in the return-air duct. The return air sensor is wired to the enthalpy controller (HH57AC077). The outdoor enthalpy changeover set point is set at the controller.

To wire the return air enthalpy sensor, perform the following (see Fig. 25):

1. Use a 2-conductor, 18 or 20 AWG, twisted pair cable to connect the return air enthalpy sensor to the enthalpy controller.
2. At the enthalpy control remove the factory-installed resistor from the (SR) and (+) terminals.
3. Connect the field-supplied RED wire to (+) spade connector on the return air enthalpy sensor and the (SR+) terminal on the enthalpy controller. Connect the BLK wire to (S) spade connector on the return air enthalpy sensor and the (SR) terminal on the enthalpy controller.

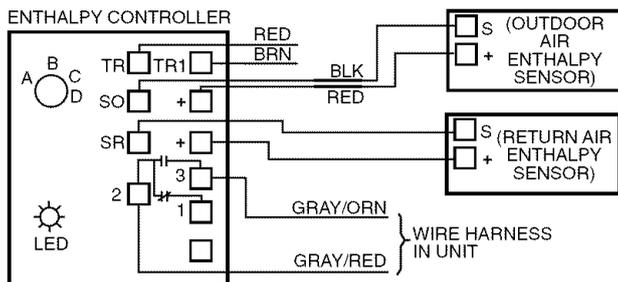

NOTES:

1. Remove factory-installed jumper across SR and + before connecting wires from return air sensor.
2. Switches shown in high outdoor air enthalpy state. Terminals 2 and 3 close on low outdoor air enthalpy relative to indoor air enthalpy.
3. Remove sensor mounted on back of control and locate in outside airstream.

Fig. 25 — Outdoor and Return Air Sensor Wiring Connections for Differential Enthalpy Control

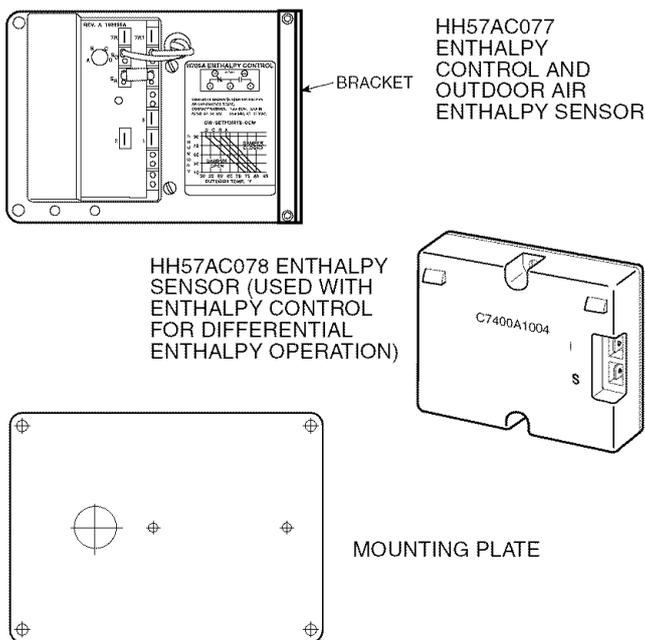


Fig. 26 — Differential Enthalpy Control, Sensor and Mounting Plate (33AMKITENT006)

OPTIONAL ECONOMISERIV AND ECONOMISER2 — See Fig. 27 and 28 for EconoMiSerIV component locations. See Fig. 29 for EconoMiSer2 component locations.

NOTE: These instructions are for installing the optional EconoMiSerIV and EconoMiSer2 only. Refer to the accessory EconoMiSerIV or EconoMiSer2 installation instructions when field installing an EconoMiSerIV or EconoMiSer2 accessory.

To complete installation of the optional EconoMiSerIV, perform the following procedure.

1. Remove the EconoMiSerIV hood. Refer to Step 8 — Install Outdoor-Air Hood on page 10 for information on removing and installing the outdoor-air hood.
2. Relocate outdoor air temperature sensor from shipping position to operation position on EconoMiSerIV. See Fig. 27.

IMPORTANT: Failure to relocate the sensor will result in the EconoMiSerIV not operating properly.

3. Reinstall economizer hood.
4. Install all EconoMiSerIV accessories. EconoMiSerIV wiring is shown in Fig. 30. EconoMiSer2 wiring is shown in Fig. 31.

Outdoor air leakage is shown in Table 6. Return air pressure drop is shown in Table 7.

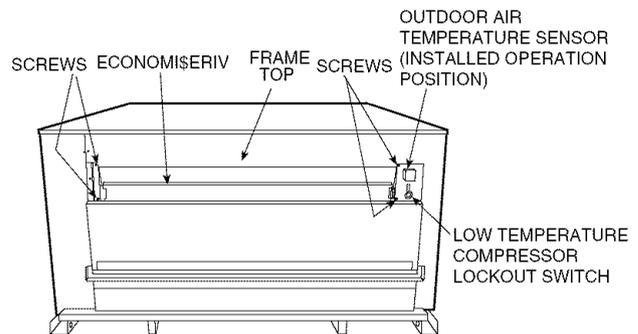


Fig. 27 — EconoMiSerIV Component Locations — End View

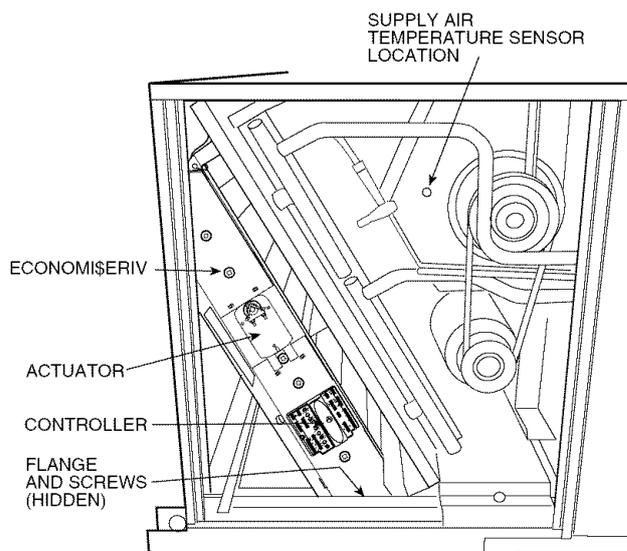


Fig. 28 — EconoMiSerIV Component Locations — Side View


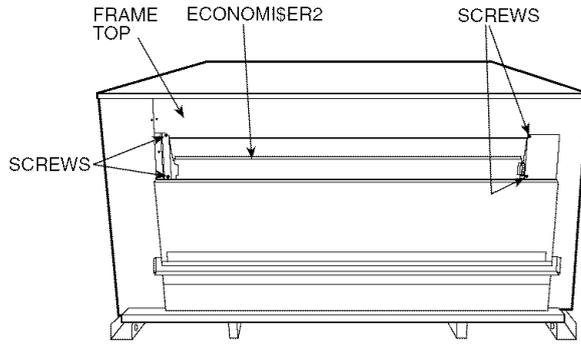


Fig. 29 — EconoMiSer2 Component Locations

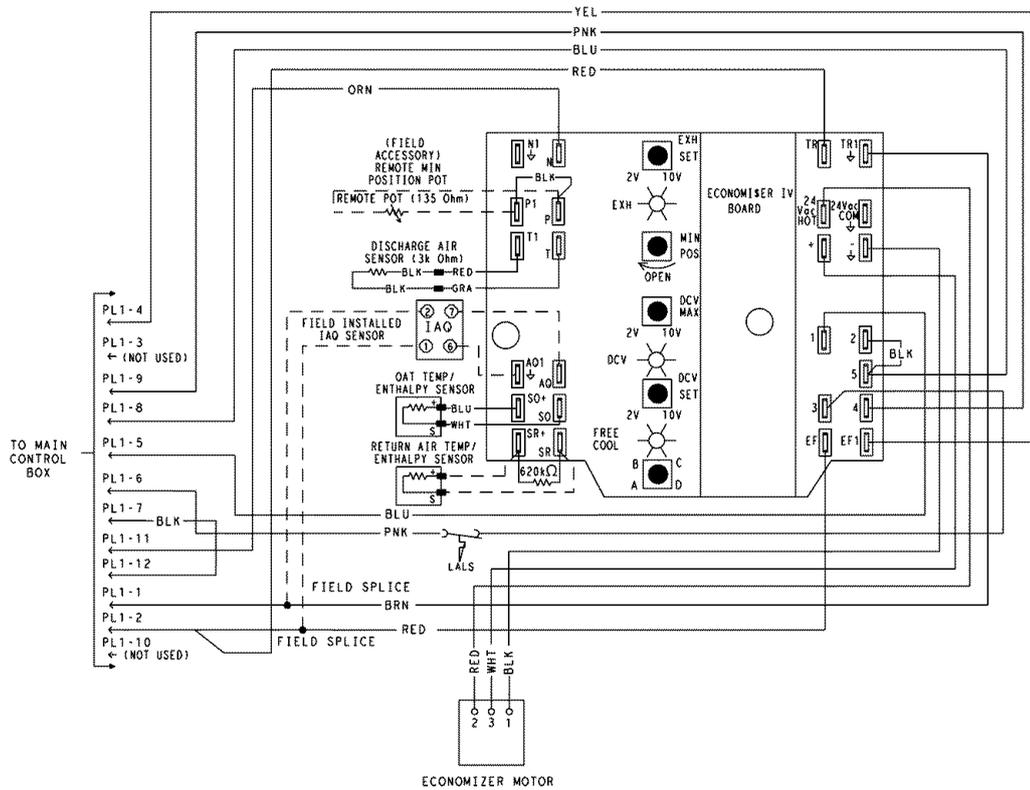

LEGEND


- DCV — Demand Controlled Ventilation
- IAQ — Indoor Air Quality
- LALS — Low Temperature Compressor Lockout Switch
- OAT — Outdoor-Air Temperature
- POT — Potentiometer

- Potentiometer Default Settings:
- Power Exhaust Middle
 - Minimum Pos. Fully Closed
 - DCV Max. Middle
 - DCV Set Middle
 - Enthalpy C Setting

NOTES:

1. 620 ohm, 1 watt 5% resistor should be removed only when using differential enthalpy or dry bulb.
2. If a separate field-supplied 24 v transformer is used for the IAQ sensor power supply, it cannot have the secondary of the transformer grounded.
3. For field-installed remote minimum position POT, remove black wire jumper between P and P1 and set control minimum position POT to the minimum position.

Fig. 30 — EconoMiSerIV Wiring

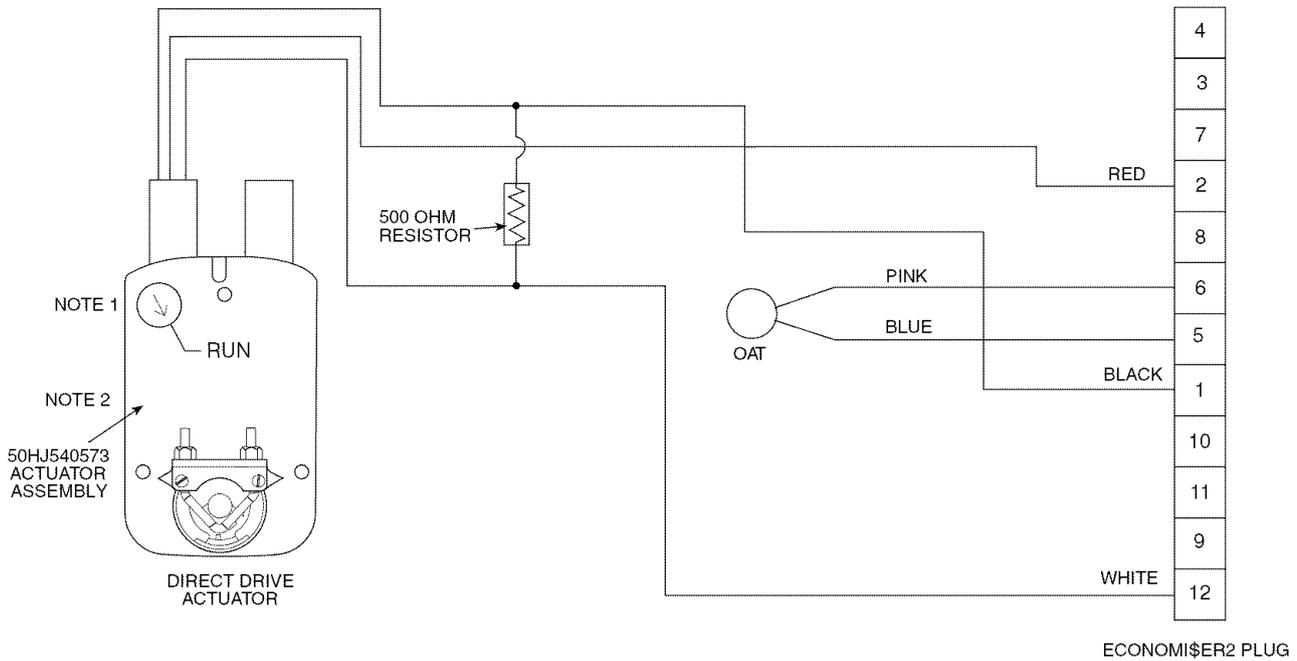

LEGEND
OAT — Outdoor Air Temperature Sensor

- NOTES:**
 1. Switch on actuator must be in run position for economizer to operate.
 2. 50HJ540573 actuator consists of the 50HJ540567 actuator and a harness with 500-ohm resistor.

Fig. 31 — EconoMiSer2 Wiring

Table 6 — Outdoor Air Damper Leakage

LEAKAGE (cfm)	DAMPER STATIC PRESSURE (in. wg)					
	0.2	0.4	0.6	0.8	1.0	1.2
	35	53	65	75	90	102

Table 7 — Return Air Pressure Drop (in. wg)

CFM					
4500	5000	5400	6000	7200	7500
0.040	0.050	0.060	0.070	0.090	0.100

ECONOMISERIV STANDARD SENSORS

Outdoor Air Temperature (OAT) Sensor — The outdoor air temperature sensor (HH57AC074) is a 10 to 20 mA device used to measure the outdoor-air temperature. The outdoor-air temperature is used to determine when the EconoMiSerIV can be used for free cooling. The sensor must be field-relocated. See Fig. 27. The operating range of temperature measurement is 40 to 100 F.

Supply Air Temperature (SAT) Sensor — The supply air temperature sensor is a 3 K thermistor located at the inlet of the indoor fan. See Fig. 28. This sensor is factory installed. The operating range of temperature measurement is 0° to 158 F. See Table 8 for sensor temperature/resistance values.

The temperature sensor looks like an eyelet terminal with wires running to it. The sensor is located in the “crimp end” and is sealed from moisture.

Low Temperature Compressor Lockout Switch — The EconoMiSerIV is equipped with an ambient temperature lockout switch located in the outdoor airstream which is used to lockout the compressors below a 42 F ambient temperature. See Fig. 27.

Table 8 — Supply Air Sensor Temperature/Resistance Values

TEMPERATURE (F)	RESISTANCE (ohms)
-58	200,250
-40	100,680
-22	53,010
-4	29,091
14	16,590
32	9,795
50	5,970
68	3,747
77	3,000
86	2,416
104	1,597
122	1,080
140	746
158	525
176	376
185	321
194	274
212	203
230	153
248	116
257	102
266	89
284	70
302	55

ECONOMISERIV CONTROL MODES

IMPORTANT: The optional EconoMiSer2 does not include a controller. The EconoMiSer2 is operated by a 4 to 20 mA signal from an existing field-supplied controller (such as PremierLink™ control). See Fig. 31 for wiring information.

Determine the EconoMiSerIV control mode before set up of the control. Some modes of operation may require different sensors. Refer to Table 9. The EconoMiSerIV is supplied from the factory with a supply air temperature sensor, a low temperature compressor lockout switch, and an outdoor air temperature sensor. This allows for operation of the EconoMiSerIV with outdoor air dry bulb changeover control. Additional accessories can be added to allow for different types of changeover control and operation of the EconoMiSerIV and unit.

Table 9 — EconoMiSerIV Sensor Usage

APPLICATION	ECONOMISERIV WITH OUTDOOR AIR DRY BULB SENSOR	
	Accessories Required	
Outdoor Air Dry Bulb	None. The outdoor air dry bulb sensor is factory installed.	
Differential Dry Bulb	CRTEMPSN002A00*	
Single Enthalpy	HH57AC078	
Differential Enthalpy	HH57AC078 and CRENTDIF004A00*	
CO ₂ for DCV Control using a Wall-Mounted CO ₂ Sensor	33ZCSENCO2	
CO ₂ for DCV Control using a Duct-Mounted CO ₂ Sensor	33ZCSENCO2† and 33ZCASPCO2**	CRCBDIOX005A00††

*CRENTDIF004A00 and CRTEMPSN002A00 accessories are used on many different base units. As such, these kits may contain parts that will not be needed for installation.
 †33ZCSENCO2 is an accessory CO₂ sensor.
 **33ZCASPCO2 is an accessory aspirator box required for duct-mounted applications.
 ††CRCBDIOX005A00 is an accessory that contains both 33ZCSENCO2 and 33ZCASPCO2 accessories.

Outdoor Dry Bulb Changeover — The standard controller is shipped from the factory configured for outdoor dry bulb changeover control. The outdoor air and supply air temperature sensors are included as standard. For this control mode, the outdoor temperature is compared to an adjustable set point selected on the control. If the outdoor-air temperature is above the set point, the EconoMiSerIV will adjust the outdoor-air dampers to minimum position. If the outdoor-air temperature is below the set point, the position of the outdoor air dampers will be controlled to provide free cooling using outdoor air. When in this mode, the LED next to the free cooling set point potentiometer will be on. The changeover temperature set point is controlled by the free cooling set point potentiometer located on the control. See Fig. 32. The scale on the potentiometer is A, B, C, and D. See Fig. 33 for the corresponding temperature changeover values.

Differential Dry Bulb Control — For differential dry bulb control the standard outdoor dry bulb sensor is used in conjunction with an additional accessory return air sensor (part number CRTEMPSN002A00). The accessory sensor must be mounted in the return airstream. See Fig. 34.

In this mode of operation, the outdoor-air temperature is compared to the return-air temperature and the lower temperature airstream is used for cooling. When using this mode of changeover control, turn the free cooling/enthalpy set point potentiometer fully clockwise to the D setting. See Fig. 32.

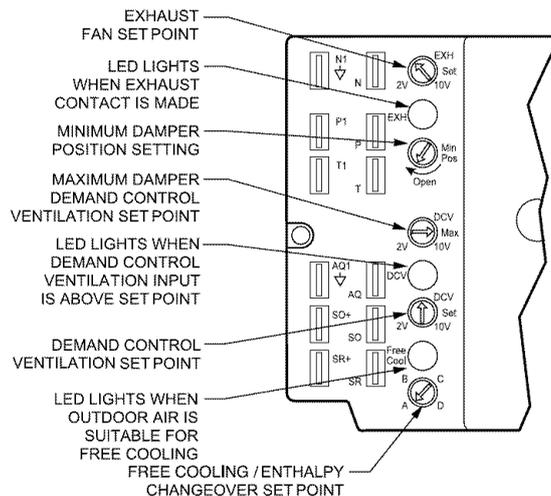


Fig. 32 — EconoMiSer IV Controller Potentiometer and LED Locations

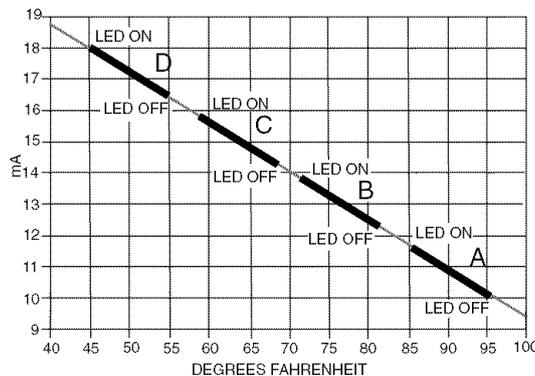


Fig. 33 — Outside Air Temperature Changeover Set Points

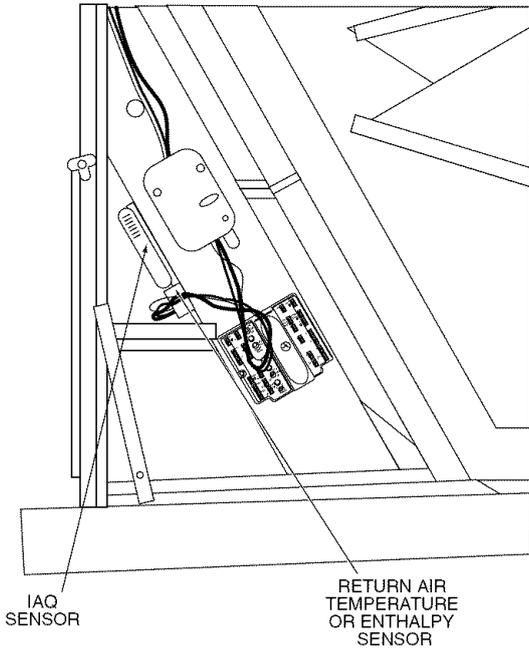


Fig. 34 — Return Air Temperature or Enthalpy Sensor Mounting Location

Outdoor Enthalpy Changeover — For enthalpy control, accessory enthalpy sensor (part number HH57AC078) is required. Replace the standard outdoor dry bulb temperature sensor with the accessory enthalpy sensor in the same mounting location. See Fig. 27. When the outdoor air enthalpy rises above the outdoor enthalpy changeover set point, the outdoor-air damper moves to its minimum position. The outdoor enthalpy changeover set point is set with the outdoor enthalpy set point potentiometer on the EconoMiSerIV controller. The set points are A, B, C, and D. See Fig. 35. The factory-installed 620-ohm jumper must be in place across terminals SR and SR+ on the EconoMiSerIV controller. See Fig. 30 and 36.

Differential Enthalpy Control — For differential enthalpy control, the EconoMiSerIV controller uses two enthalpy sensors (HH57AC078 and CRENTDIF004A00), one in the outside air and one in the return airstream or the EconoMiSerIV frame. The EconoMiSerIV controller compares the outdoor air enthalpy to the return air enthalpy to determine EconoMiSerIV use. The controller selects the lower enthalpy air (return or outdoor) for cooling. For example, when the outdoor air has a lower enthalpy than the return air and is below the set point, the EconoMiSerIV opens to bring in outdoor air for free cooling.

Replace the standard outside air dry bulb temperature sensor with the accessory enthalpy sensor in the same mounting location. See Fig. 27. Mount the return air enthalpy sensor in the return airstream. See Fig. 34. The outdoor enthalpy changeover set point is set with the outdoor enthalpy set point potentiometer on the EconoMiSerIV controller. When using this mode of changeover control, turn the enthalpy setpoint potentiometer fully clockwise to the D setting.

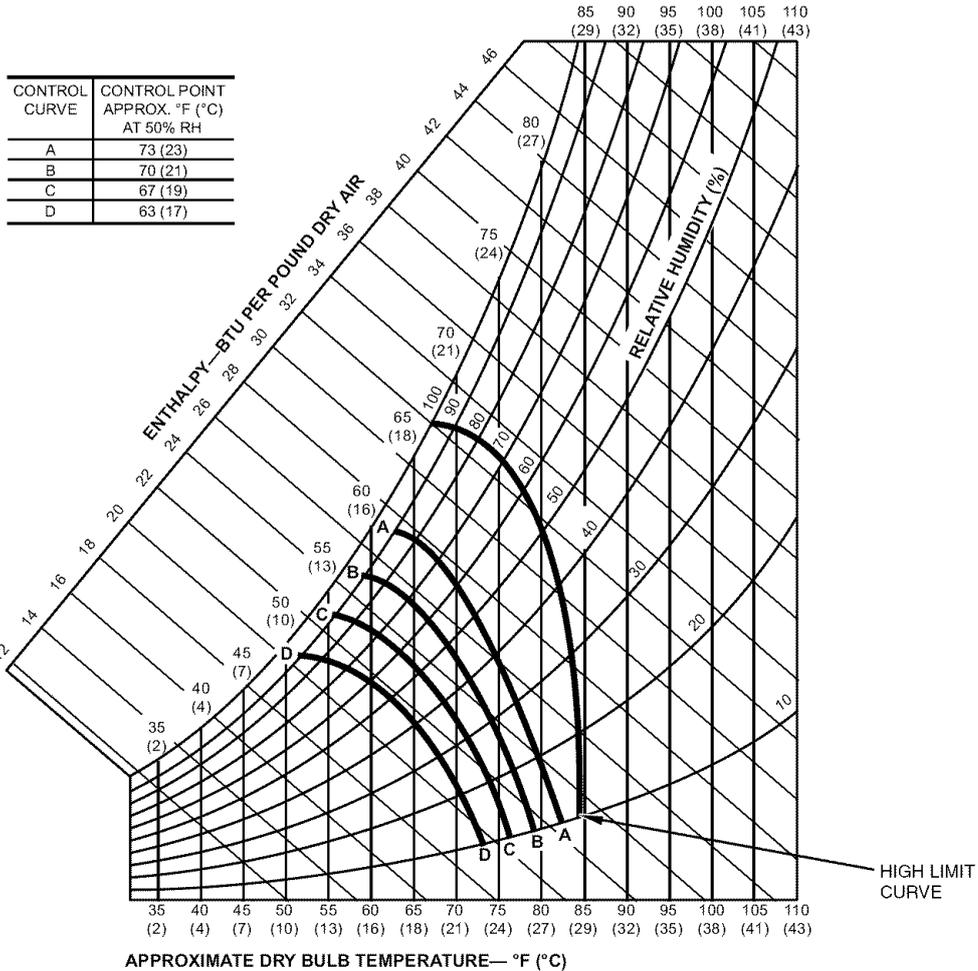


Fig. 35 — Enthalpy Changeover Set Points

NOTE: Remove 620-ohm resistor if differential enthalpy sensor is installed.

Indoor Air Quality (IAQ) Sensor Input — The IAQ input can be used for demand control ventilation control based on the level of CO₂ measured in the space or return air duct.

Mount the accessory IAQ sensor according to manufacturer specifications. The IAQ sensor should be wired to the AQ and AQ1 terminals of the controller. Adjust the DCV potentiometers to correspond to the DCV voltage output of the indoor air quality sensor at the user-determined set point. See Fig. 37.

If a separate field-supplied transformer is used to power the IAQ sensor, the sensor must not be grounded or the EconoMiSerIV control board will be damaged.

Exhaust Set Point Adjustment — The exhaust set point will determine when the exhaust fan runs based on damper position (if accessory power exhaust is installed). The set point is modified with the Exhaust Fan Set Point (EXH SET) potentiometer. See Fig. 32. The set point represents the damper position above which the exhaust fan will be turned on. When there is a call for exhaust, the EconoMiSerIV controller provides a 45 ± 15 second delay before exhaust fan activation to allow the dampers to open. This delay allows the damper to reach the appropriate position to avoid unnecessary fan overload.

Minimum Position Control — There is a minimum damper position potentiometer on the EconoMiSerIV controller. See Fig. 32. The minimum damper position maintains the minimum airflow into the building during the occupied period.

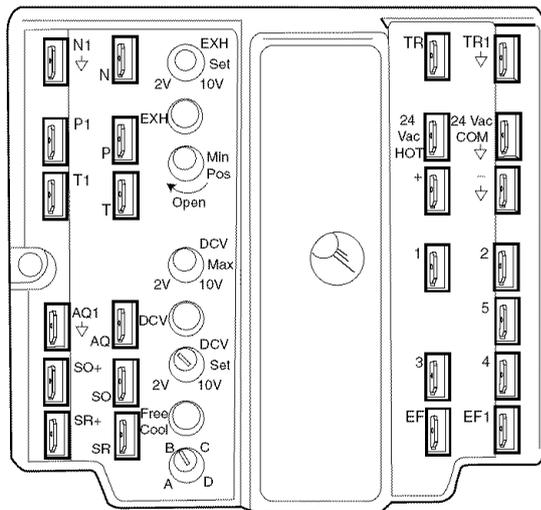


Fig. 36 — EconoMiSerIV Controller

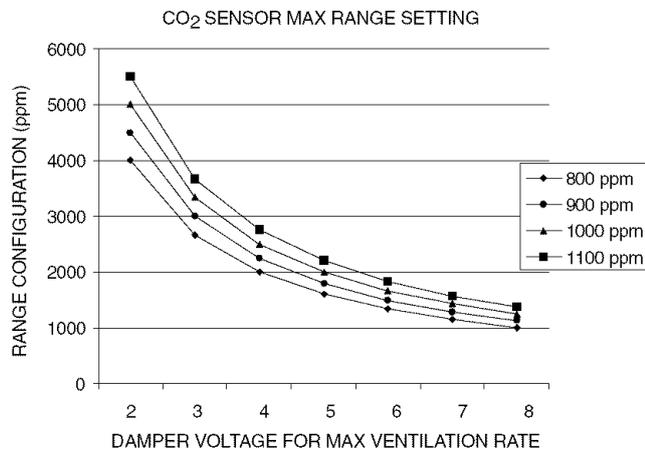


Fig. 37 — CO₂ Sensor Maximum Range Setting

When using demand ventilation, the minimum damper position represents the minimum ventilation position for VOC (volatile organic compound) ventilation requirements. The maximum demand ventilation position is used for fully occupied ventilation.

When demand ventilation control is not being used, the minimum position potentiometer should be used to set the occupied ventilation position. The maximum demand ventilation position should be turned fully clockwise.

Adjust the minimum position potentiometer to allow the minimum amount of outdoor air, as required by local codes, to enter the building. Make minimum position adjustments with at least 10° F temperature difference between the outdoor and return-air temperatures.

To determine the minimum position setting, perform the following procedure:

1. Calculate the appropriate mixed-air temperature using the following formula:

$$(T_O \times \frac{OA}{100}) + (T_R \times \frac{RA}{100}) = T_M$$

T_O = Outdoor-Air Temperature

OA = Percent of Outdoor Air

T_R = Return-Air Temperature

RA = Percent of Return Air

T_M = Mixed-Air Temperature

As an example, if local codes require 10% outdoor air during occupied conditions, outdoor-air temperature is 60 F, and return-air temperature is 75 F.

$$(60 \times .10) + (75 \times .90) = 73.5 \text{ F}$$

2. Disconnect the supply-air sensor from terminals T and T1.
3. Ensure that the factory-installed jumper is in place across terminals P and P1. If remote damper positioning is being used, make sure that the terminals are wired according to Fig. 30 and that the minimum position potentiometer is turned fully clockwise.
4. Connect 24 vac across terminals TR and TR1.
5. Carefully adjust the minimum position potentiometer until the measured mixed-air temperature matches the calculated value.
6. Reconnect the supply air sensor to terminals T and T1.

Remote control of the EconoMiSerIV damper is desirable when requiring additional temporary ventilation. If a field-supplied remote potentiometer (Honeywell part number S963B1128) is wired to the EconoMiSerIV controller, the minimum position of the damper can be controlled from a remote location.

To control the minimum damper position remotely, remove the factory-installed jumper on the P and P1 terminals on the EconoMiSerIV controller. Wire the field-supplied potentiometer to the P and P1 terminals on the EconoMiSerIV controller. See Fig. 36.

Damper Movement — Damper movement from full open to full closed (or vice versa) takes 2½ minutes.

Thermostats — The EconoMiSerIV control works with conventional thermostats that have a Y1 (cool stage 1), Y2 (cool stage 2), W1 (heat stage 1), W2 (heat stage 2), and G (fan). The EconoMiSerIV control does not support space temperature sensors. Connections are made at the thermostat terminal connection board located in the main control box.

Occupancy Control — The factory default configuration for the EconoMiSerIV control is occupied mode. Occupied status is provided by the red jumper from terminal 9 to terminal 10 on TB2. When unoccupied mode is desired, install a field-supplied timeclock function in place of the jumper between

terminals 9 and 10 on TB2. See Fig. 30. When the timeclock contacts are closed, the EconoMi\$erIV control will be in occupied mode. When the timeclock contacts are open (removing the 24-v signal from terminal N), the EconoMi\$erIV will be in unoccupied mode.

Demand Controlled Ventilation (DCV) — When using the EconoMi\$erIV for demand controlled ventilation, there are some equipment selection criteria which should be considered. When selecting the heat capacity and cool capacity of the equipment, the maximum ventilation rate must be evaluated for design conditions. The maximum damper position must be calculated to provide the desired fresh air.

Typically the maximum ventilation rate will be about 5 to 10% more than the typical cfm required per person, using normal outside air design criteria.

A proportional anticipatory strategy should be taken with the following conditions: a zone with a large area, varied occupancy, and equipment that cannot exceed the required ventilation rate at design conditions. Exceeding the required ventilation rate means the equipment can condition air at a maximum ventilation rate that is greater than the required ventilation rate for maximum occupancy. A proportional-anticipatory strategy will cause the fresh air supplied to increase as the room CO₂ level increases even though the CO₂ set point has not been reached. By the time the CO₂ level reaches the set point, the damper will be at maximum ventilation and should maintain the set point.

In order to have the CO₂ sensor control the economizer damper in this manner, first determine the damper voltage output for minimum or base ventilation. Base ventilation is the ventilation required to remove contaminants during unoccupied periods. The following equation may be used to determine the percent of outside-air entering the building for a given damper position. For best results there should be at least a 10 degree difference in outside and return-air temperatures.

$$(T_O \times \frac{OA}{100}) + (T_R \times \frac{RA}{100}) = T_M$$

T_O = Outdoor-Air Temperature

OA = Percent of Outdoor Air

T_R = Return-Air Temperature

RA = Percent of Return Air

T_M = Mixed-Air Temperature

Once base ventilation has been determined, set the minimum damper position potentiometer to the correct position.

The same equation can be used to determine the occupied or maximum ventilation rate to the building. For example, an output of 3.6 volts to the actuator provides a base ventilation rate of 5% and an output of 6.7 volts provides the maximum ventilation rate of 20% (or base plus 15 cfm per person). Use Fig. 37 to determine the maximum setting of the CO₂ sensor. For example, a 1100 ppm set point relates to a 15 cfm per person design. Use the 1100 ppm curve on Fig. 37 to find the point when

the CO₂ sensor output will be 6.7 volts. Line up the point on the graph with the left side of the chart to determine that the range configuration for the CO₂ sensor should be 1800 ppm. The EconoMi\$erIV controller will output the 6.7 volts from the CO₂ sensor to the actuator when the CO₂ concentration in the space is at 1100 ppm. The DCV set point may be left at 2 volts since the CO₂ sensor voltage will be ignored by the EconoMi\$erIV controller until it rises above the 3.6 volt setting of the minimum position potentiometer.

Once the fully occupied damper position has been determined, set the maximum damper demand control ventilation potentiometer to this position. Do not set to the maximum position as this can result in over-ventilation to the space and potential high-humidity levels.

CO₂ Sensor Configuration — The CO₂ sensor has preset standard voltage settings that can be selected anytime after the sensor is powered up. See Table 10.

Use setting 1 or 2 for Carrier equipment. See Table 10.

1. Press Clear and Mode buttons. Hold at least 5 seconds until the sensor enters the Edit mode.
2. Press Mode twice. The STDSET Menu will appear.
3. Use the Up/Down button to select the preset number. See Table 10.
4. Press Enter to lock in the selection.
5. Press Mode to exit and resume normal operation.

The custom settings of the CO₂ sensor can be changed anytime after the sensor is energized. Follow the steps below to change the non-standard settings:

1. Press Clear and Mode buttons. Hold at least 5 seconds until the sensor enters the Edit mode.
2. Press Mode twice. The STDSET Menu will appear.
3. Use the Up/Down button to toggle to the NONSTD menu and press Enter.
4. Use the Up/Down button to toggle through each of the nine variables, starting with Altitude, until the desired setting is reached.
5. Press Mode to move through the variables.
6. Press Enter to lock in the selection, then press Mode to continue to the next variable.

Dehumidification of Fresh Air with DCV Control — Information from ASHRAE indicates that the largest humidity load on any zone is the fresh air introduced. For some applications, a field-supplied energy recovery unit can be added to reduce the moisture content of the fresh air being brought into the building when the enthalpy is high. In most cases, the normal heating and cooling processes are more than adequate to remove the humidity loads for most commercial applications.

If normal rooftop heating and cooling operation is not adequate for the outdoor humidity level, an energy recovery unit and/or a dehumidification option should be considered.

Table 10 — CO₂ Sensor Standard Settings

SETTING	EQUIPMENT	OUTPUT	VENTILATION RATE (cfm/Person)	ANALOG OUTPUT	CO ₂ CONTROL RANGE (ppm)	OPTIONAL RELAY SETPOINT (ppm)	RELAY HYSTERESIS (ppm)
1	Interface with Standard Building Control System	Proportional	Any	0-10V 4-20 mA	0-2000	1000	50
2		Proportional	Any	2-10V 7-20 mA	0-2000	1000	50
3		Exponential	Any	0-10V 4-20 mA	0-2000	1100	50
4	Economizer	Proportional	15	0-10V 4-20 mA	0-1100	1100	50
5		Proportional	20	0-10V 4-20 mA	0- 900	900	50
6		Exponential	15	0-10V 4-20 mA	0-1100	1100	50
7		Exponential	20	0-10V 4-20 mA	0- 900	900	50
8	Health & Safety	Proportional	—	0-10V 4-20 mA	0-9999	5000	500
9	Parking/Air Intakes/ Loading Docks	Proportional	—	0-10V 4-20 mA	0-2000	700	50

LEGEND

ppm — Parts Per Million

Step 11 — Install Humidistat for Optional MoistureMiser™ Package — MoistureMiser dehumidification package operation can be controlled by field installation of a Carrier-approved humidistat. To install the humidistat perform the following procedure:

1. Locate humidistat on a solid interior wall in the conditioned space. Location should be a well ventilated area to sense average humidity.

2. Route thermostat cable or equivalent single leads of colored wire from Humidistat terminals through conduit in unit to the low voltage connection on the 2-pole terminal strip (TB3) as shown in Fig. 38 and Fig. 39. See Fig. 40 for operational diagram.

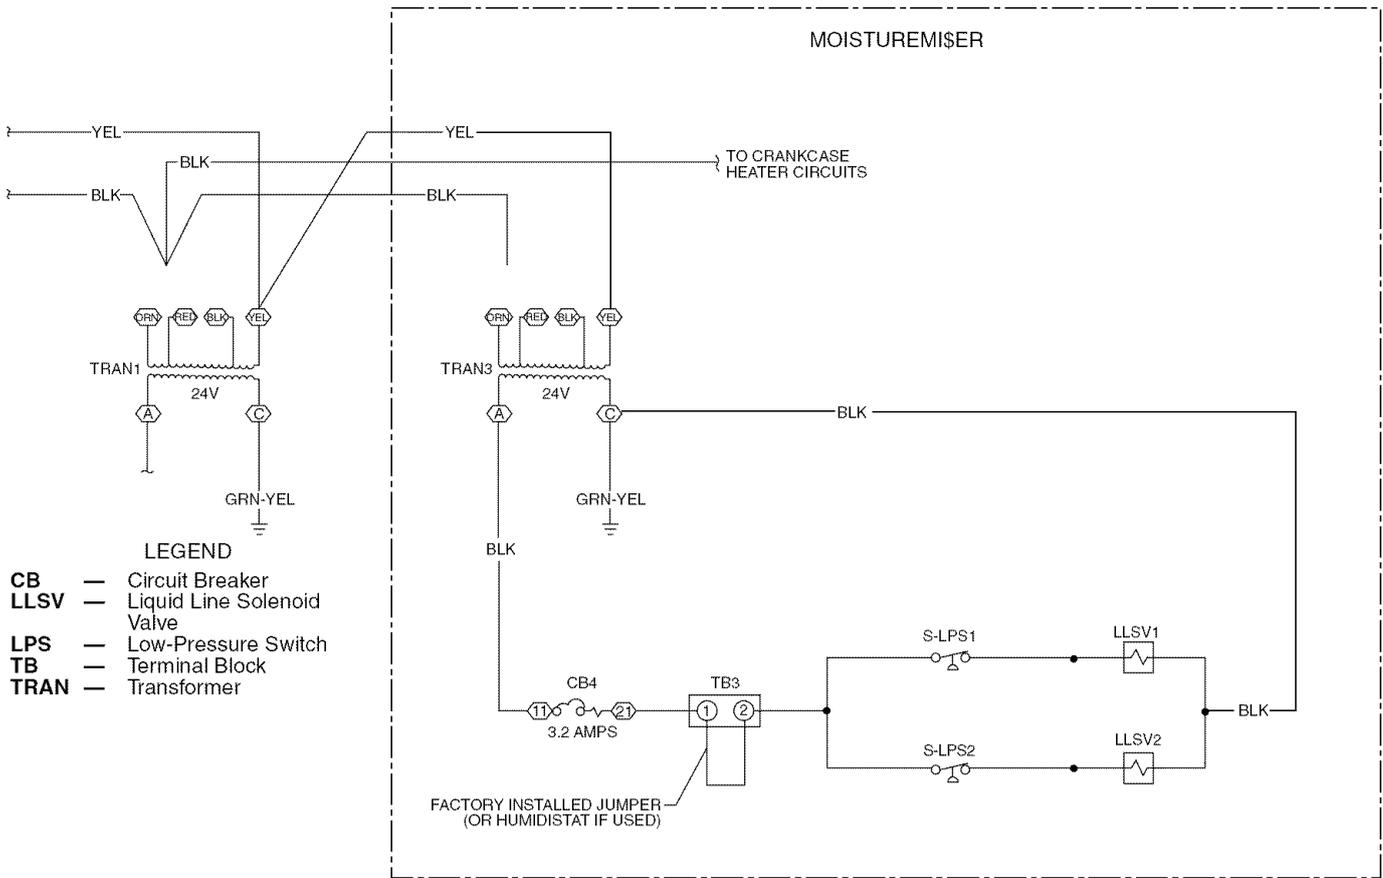


Fig. 38 — Typical MoistureMiSer™ Dehumidification Package Humidistat Wiring Schematic (460 V Unit Shown)

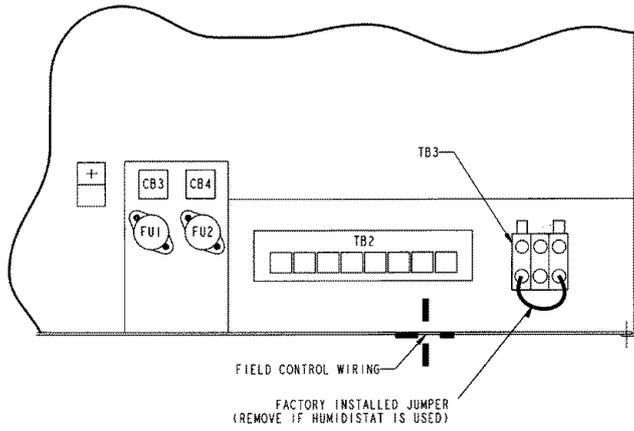


Fig. 39 — Typical MoistureMiSer Dehumidification Package Control Box

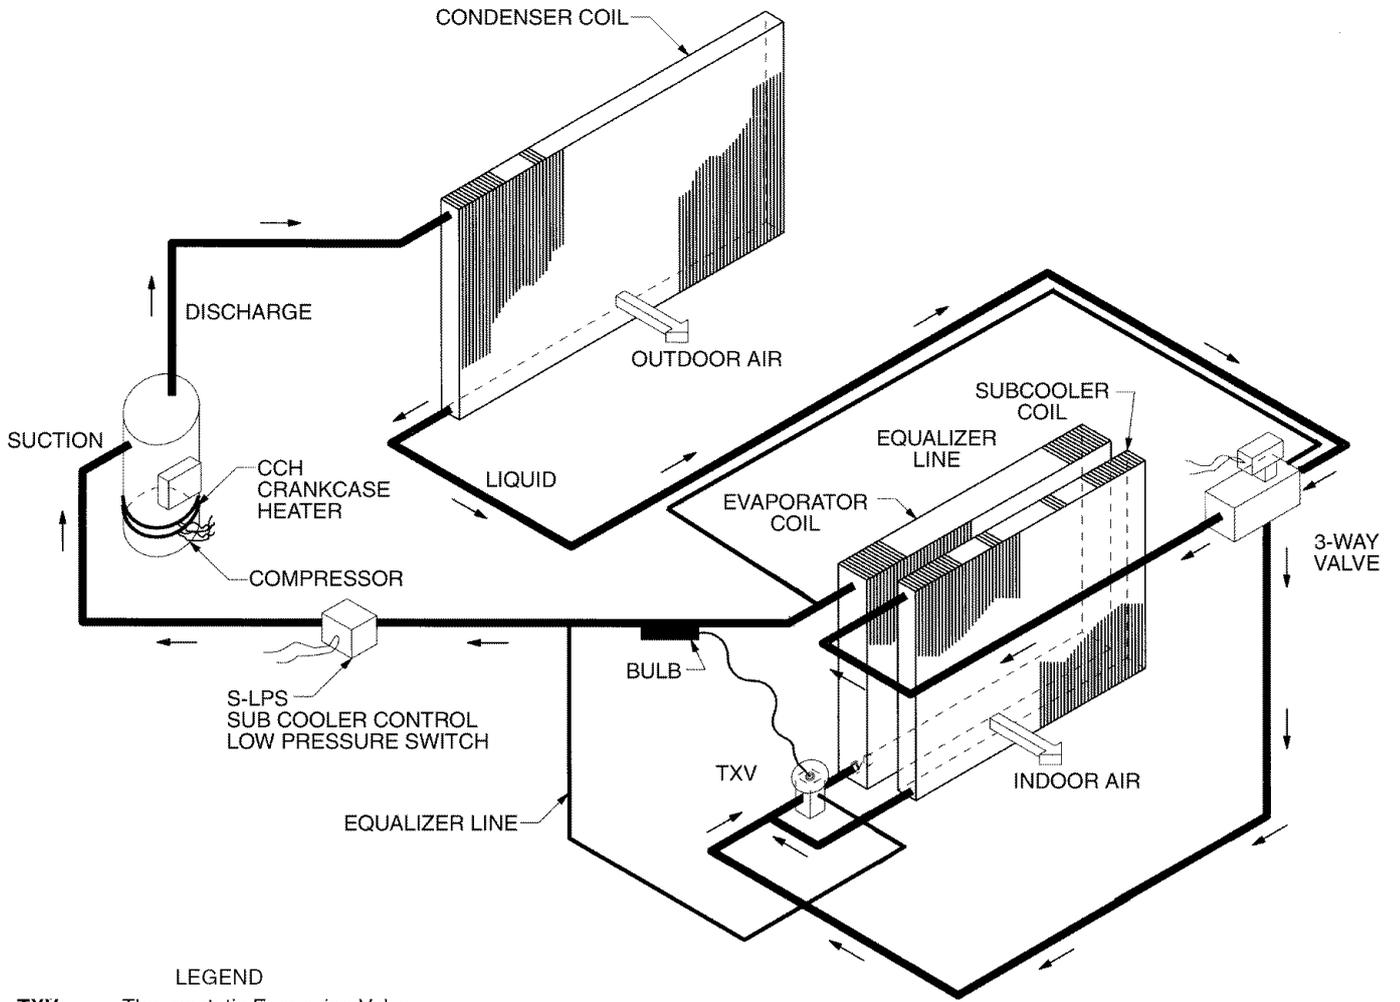


Fig. 40 — MoistureMiSer™ Dehumidification Package Operation Diagram

START-UP

Use the following information and Start-Up Checklist on page CL-1 to check out unit PRIOR to start-up.

Unit Preparation — Check that unit has been installed in accordance with these installation instructions and all applicable codes.

COMPRESSOR MOUNTING — Compressors are internally spring mounted. Do not loosen or remove compressor hold-down bolts.

REFRIGERANT SERVICE PORTS — Each refrigerant system has a total of 3 Schrader-type service gage ports. One port is located on the suction line, one on the compressor discharge line, and one on the liquid line. In addition Schrader-type valves are located underneath the low-pressure switches. Be sure that caps on the ports are tight.

COMPRESSOR ROTATION — It is important to be certain the compressors are rotating in the proper direction. To determine whether or not compressors are rotating in the proper direction:

1. Connect service gages to suction and discharge pressure fittings.
2. Energize the compressor.
3. The suction pressure should drop and the discharge pressure should rise, as is normal on any start-up.

If the suction pressure does not drop and the discharge pressure does not rise to normal levels:

1. Note that the evaporator fan is probably also rotating in the wrong direction.
2. Turn off power to the unit.
3. Reverse any two of the incoming power leads.
4. Turn on power to the compressor.

The suction and discharge pressure levels should now move to their normal start-up levels.

NOTE: When compressors are rotating in the wrong direction, the unit will have increased noise levels and will not provide heating and cooling.

After a few minutes of reverse operation, the scroll compressor internal overload protection will open, which will activate the unit's lockout and requires a manual reset. Reset is accomplished by turning the thermostat on and off.

INTERNAL WIRING — Check all electrical connections in unit control boxes; tighten as required.

CRANKCASE HEATER(S) — Heater(s) is energized as long as there is power to unit and compressor is not operating.

IMPORTANT: Unit power must be on for 24 hours prior to start-up. Otherwise, damage to compressor may result.

EVAPORATOR FAN — Fan belt and variable pulleys are factory installed. Remove tape from the fan pulley. See Tables 11-13 for fan performance data. Be sure that fans rotate in the proper direction. See Table 14 for air quantity limits. See Tables 15 and 16 for static pressure information for accessories and options. See Table 17 for fan rpm at various fan motor pulley settings. See Table 18 for evaporator-fan motor specifications. To alter fan performance, see Evaporator Fan Performance Adjustment section, page 35.

CONDENSER FANS AND MOTORS — Condenser fans and motors are factory set. Refer to Condenser-Fan Adjustment section (page 36) as required. Be sure that fans rotate in the correct direction.

RETURN-AIR FILTERS — Check that correct filters are installed in filter tracks. See Table 1. Do not operate unit without return-air filters.

Table 11 — Fan Performance — 50HJ015 (With Standard Indoor Fan Motor)*

AIRFLOW (cfm)	AVAILABLE EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp
3750	522	687	0.70	608	841	0.88	704	1045	1.12	781	1229	1.35	853	1419	1.58
4000	549	792	0.82	635	956	1.02	729	1170	1.27	805	1364	1.51	876	1565	1.77
4250	577	903	0.95	661	1078	1.16	753	1302	1.44	828	1506	1.69	898	1716	1.96
4500	604	1021	1.09	687	1207	1.32	776	1440	1.61	850	1653	1.88	919	1873	2.16
4750	631	1147	1.25	713	1343	1.49	800	1584	1.79	872	1807	2.07	940	2037	2.36
5000	658	1281	1.41	738	1486	1.67	822	1735	1.98	893	1968	2.27	959	2207	2.58
5250	684	1423	1.59	763	1637	1.86	844	1894	2.18	913	2135	2.49	979	2385	2.80
5500	710	1572	1.77	787	1796	2.06	865	2060	2.39	933	2311	2.71	997	2571	3.03
5750	736	1732	1.98	811	1965	2.27	887	2235	2.61	953	2496	2.93	1015	2765	3.26
6000	762	1900	2.19	835	2143	2.50	907	2419	2.84	972	2689	3.17	—	—	—
6250	787	2080	2.42	858	2332	2.73	927	2612	3.08	—	—	—	—	—	—

AIRFLOW (cfm)	AVAILABLE EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp
3750	921	1617	1.83	987	1823	2.09	1051	2051	2.38	1114	2301	2.69	1174	2563	3.02
4000	943	1773	2.03	1007	1989	2.30	1070	2227	2.60	1132	2486	2.92	1190	2756	3.25
4250	964	1934	2.23	1027	2161	2.52	1089	2408	2.83	1148	2676	3.16	—	—	—
4500	984	2102	2.44	1046	2339	2.74	1106	2596	3.06	—	—	—	—	—	—
4750	1003	2276	2.66	1064	2524	2.97	1123	2790	3.29	—	—	—	—	—	—
5000	1022	2457	2.89	1082	2717	3.21	—	—	—	—	—	—	—	—	—
5250	1040	2646	3.12	—	—	—	—	—	—	—	—	—	—	—	—
5500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
5750	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
6000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
6250	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

- Bhp** — Brake Horsepower
- FIOP** — Factory-Installed Option
- Watts** — Input Watts to Motor

*Standard low-medium static drive range is 895 to 1147 rpm. Alternate high-static drive range is 1040 to 1315 (for 208/230 and 460-v units). The alternate high-static drive range is not available for 575-v units. Other rpms require a field-supplied drive.

NOTES:

1. Maximum continuous bhp for the standard motor is 3.13 (for 208/230 and 460-v units) or 3.38 (for 575-v units). The maximum continuous watts is 2700 (for 208/230 and 460-v units) or 3065 (for 575-v units). Do not adjust motor rpm such that motor maximum bhp and/or watts is exceeded at the maximum operating cfm.

2. Static pressure losses (i.e., economizer) must be added to external static pressure before entering Fan Performance table.
3. Interpolation is permissible. Do not extrapolate.
4. Fan performance is based on wet coils, clean filters, and casing losses. See Table 15 and 16 for accessory/FIOP static pressure information.
5. Extensive motor and drive testing on these units ensures that the full bhp and watts range of the motor can be utilized with confidence. Using fan motors up to the watts or bhp rating shown will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.
6. Use of a field-supplied motor may affect wiring size. Contact your Carrier representative for details.

Table 12 — Fan Performance — 50HJ015 (With Optional Indoor Fan Motor)*

AIRFLOW (cfm)	AVAILABLE EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp
3750	522	687	0.70	608	841	0.88	704	1045	1.12	781	1229	1.35	853	1419	1.58
4000	549	792	0.82	635	956	1.02	729	1170	1.27	805	1364	1.51	876	1565	1.77
4250	577	903	0.95	661	1078	1.16	753	1302	1.44	828	1506	1.69	898	1716	1.96
4500	604	1021	1.09	687	1207	1.32	776	1440	1.61	850	1653	1.88	919	1873	2.16
4750	631	1147	1.25	713	1343	1.49	800	1584	1.79	872	1807	2.07	940	2037	2.36
5000	658	1281	1.41	738	1486	1.67	822	1735	1.98	893	1968	2.27	959	2207	2.58
5250	684	1423	1.59	763	1637	1.86	844	1894	2.18	913	2135	2.49	979	2385	2.80
5500	710	1572	1.77	787	1796	2.06	865	2060	2.39	933	2311	2.71	997	2571	3.03
5750	736	1732	1.98	811	1965	2.27	887	2235	2.61	953	2496	2.93	1015	2765	3.26
6000	762	1900	2.19	835	2143	2.50	907	2419	2.84	972	2689	3.17	1033	2968	3.51
6250	787	2080	2.42	858	2332	2.73	927	2612	3.08	991	2892	3.42	1050	3181	3.76

AIRFLOW (cfm)	AVAILABLE EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp
3750	921	1617	1.83	987	1823	2.09	1051	2051	2.38	1114	2301	2.69	1174	2563	3.02
4000	943	1773	2.03	1007	1989	2.30	1070	2227	2.60	1132	2486	2.92	1190	2756	3.25
4250	964	1934	2.23	1027	2161	2.52	1089	2408	2.83	1148	2676	3.16	1205	2954	3.49
4500	984	2102	2.44	1046	2339	2.74	1106	2596	3.06	1164	2872	3.39	1219	3158	3.73
4750	1003	2276	2.66	1064	2524	2.97	1123	2790	3.29	1179	3073	3.63	1233	3366	3.98
5000	1022	2457	2.89	1082	2717	3.21	1139	2990	3.53	1194	3280	3.88	1247	3579	4.22
5250	1040	2646	3.12	1099	2916	3.45	1154	3198	3.78	1208	3493	4.12	1259	3797	4.47
5500	1057	2843	3.36	1115	3124	3.69	1169	3412	4.03	1222	3712	4.37	1272	4019	4.72
5750	1074	3048	3.60	1131	3339	3.94	1184	3634	4.28	1235	3936	4.63	1283	4244	4.97
6000	1091	3261	3.85	1147	3562	4.20	1198	3861	4.54	1247	4165	4.88	1295	4472	5.22
6250	1107	3483	4.11	1162	3793	4.46	1212	4095	4.80	1260	4398	5.14	1306	4701	5.48

LEGEND

- Bhp** — Brake Horsepower
- FIOP** — Factory-Installed Option
- Watts** — Input Watts to Motor

*Standard low-medium static drive range is 895 to 1147 rpm. Alternate high-static drive range is 1040 to 1315. Other rpms require a field-supplied drive.

NOTES:

1.  Field-supplied motor.
2. Maximum continuous bhp for the optional motor is 4.26. The maximum continuous watts is 3610. Do not adjust motor rpm such that motor maximum bhp and/or watts is exceeded at the maximum operating cfm.

3. Static pressure losses (i.e., economizer) must be added to external static pressure before entering Fan Performance table.
4. Interpolation is permissible. Do not extrapolate.
5. Fan performance is based on wet coils, clean filters, and casing losses. See Table 15 and 16 for accessory/FIOP static pressure information.
6. Extensive motor and drive testing on these units ensures that the full bhp and watts range of the motor can be utilized with confidence. Using fan motors up to the watts or bhp rating shown will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.
7. Use of a field-supplied motor may affect wiring size. Contact your Carrier representative for details.

Table 13 — Fan Performance — 50HJ017*

AIRFLOW (cfm)	AVAILABLE EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp
4500	753	1307	1.53	753	1307	1.53	784	1397	1.64	859	1635	1.92	928	1880	2.20
4800	747	1384	1.62	747	1384	1.62	806	1563	1.83	878	1808	2.12	946	2060	2.42
5100	741	1465	1.72	752	1500	1.76	828	1745	2.05	898	1996	2.34	964	2255	2.65
5700	735	1659	1.95	805	1895	2.22	876	2156	2.53	942	2423	2.84	1004	2696	3.16
6000	759	1854	2.18	832	2118	2.48	901	2388	2.80	965	2663	3.12	1026	2943	3.45
6300	790	2088	2.45	860	2360	2.77	926	2638	3.09	988	2920	3.43	1048	3208	3.76
6600	821	2340	2.74	888	2621	3.07	952	2906	3.41	1013	3196	3.75	1070	3491	4.10
6900	852	2611	3.06	917	2900	3.40	979	3194	3.75	1038	3492	4.10	1094	3794	4.45
7200	883	2903	3.40	946	3200	3.75	1006	3501	4.11	1063	3807	4.47	1118	4117	4.83
7500	914	3215	3.77	975	3521	4.13	1033	3830	4.49	1089	4143	4.86	1142	4461	5.23

AIRFLOW (cfm)	AVAILABLE EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp
4500	993	2133	2.50	1055	2394	2.81	1114	2662	3.12	1170	2938	3.45	1224	3220	3.78
4800	1009	2319	2.72	1070	2585	3.03	1127	2859	3.35	1183	3139	3.68	1236	3427	4.02
5100	1026	2521	2.96	1086	2794	3.28	1142	3073	3.60	1196	3359	3.94	1248	3650	4.28
5700	1064	2975	3.49	1120	3260	3.82	1174	3551	4.17	1226	3848	4.51	1277	4151	4.87
6000	1083	3228	3.79	1139	3520	4.13	1192	3817	4.48	1243	4119	4.83	1292	4427	5.19
6300	1104	3501	4.11	1158	3799	4.46	1210	4102	4.81	1260	4410	5.17	1309	4724	5.54
6600	1125	3791	4.45	1178	4095	4.80	1229	4405	5.17	1278	4720	5.54	1326	5039	5.91
6900	1147	4101	4.81	1199	4412	5.18	1249	4728	5.55	1297	5050	5.92	—	—	—
7200	1170	4431	5.20	1221	4749	5.57	1270	5072	5.95	—	—	—	—	—	—
7500	1193	4781	5.61	1243	5107	5.99	—	—	—	—	—	—	—	—	—

AIRFLOW (cfm)	AVAILABLE EXTERNAL STATIC PRESSURE (in. wg)														
	2.2			2.4			2.6			2.8			3.0		
	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp	Rpm	Watts	Bhp
4500	1276	3509	4.12	1326	3805	4.46	1375	4107	4.82	1421	4414	5.18	1467	4728	5.55
4800	1287	3721	4.36	1336	4020	4.72	1384	4326	5.07	1430	4638	5.44	1475	4955	5.81
5100	1299	3949	4.63	1347	4253	4.99	1395	4563	5.35	1440	4879	5.72	—	—	—
5700	1325	4458	5.23	1373	4772	5.60	1418	5091	5.97	—	—	—	—	—	—
6000	1340	4741	5.56	1387	5060	5.93	—	—	—	—	—	—	—	—	—
6300	1356	5043	5.91	—	—	—	—	—	—	—	—	—	—	—	—
6600	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
6900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
7200	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
7500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

- Bhp** — Brake Horsepower
- FIOF** — Factory-Installed Option
- Watts** — Input Watts to Motor

*Standard low-medium static drive range is 873 to 1021 rpm. Alternate high-static drive range is 1025 to 1200. Other rpms require a field-supplied drive.

NOTES:

1. Maximum continuous bhp for the standard motor is 6.13. The maximum continuous watts is 5180. Do not adjust motor rpm such that motor maximum bhp and/or watts is exceeded at the maximum operating cfm.

2. Static pressure losses (i.e., economizer) must be added to external static pressure before entering Fan Performance table.
3. Interpolation is permissible. Do not extrapolate.
4. Fan performance is based on wet coils, clean filters, and casing losses. See Table 15 and 16 for accessory/FIOF static pressure information.
5. Extensive motor and drive testing on these units ensures that the full bhp and watts range of the motor can be utilized with confidence. Using fan motors up to the watts or bhp rating shown will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.
6. Use of a field-supplied motor may affect wiring size. Contact your Carrier representative for details.

Table 14 — Air Quantity Limits

UNIT 50HJ	MINIMUM CFM	MAXIMUM CFM
015	3600	6,000
017	4500	7,500

Table 15 — Accessory/FIOP Static Pressure (in. wg)

UNIT 50HJ	HEATER RATED VOLTAGE*	CFM	ELECTRIC HEATERS PRESSURE DROP (kW)			ECONOMIZER PRESSURE DROP
015, 017	208/240-3-60	3,750	0.05 (14/19, 26/34)	0.06 (42/56)	0.07 (56/75)	0.03
		4,000	0.05 (14/19, 26/34)	0.06 (42/56)	0.07 (56/75)	0.04
		5,000	0.07 (14/19, 26/34)	0.08 (42/56)	0.10 (56/75)	0.05
		6,000	0.09 (14/19, 26/34)	0.12 (42/56)	0.15 (56/75)	0.07
		7,200	0.11 (14/19, 26/34)	0.16 (42/56)	0.20 (56/75)	0.09
		7,500	0.12 (14/19, 26/34)	0.17 (42/56)	0.21 (56/75)	0.10
	480-3-60	3,750	0.05 (15, 32)	0.06 (55)	0.07 (80)	0.03
		4,000	0.05 (15, 32)	0.06 (55)	0.07 (80)	0.04
		5,000	0.07 (15, 32)	0.08 (55)	0.10 (80)	0.05
		6,000	0.09 (15, 32)	0.12 (55)	0.15 (80)	0.07
		7,200	0.11 (15, 32)	0.15 (55)	0.20 (80)	0.09
		7,500	0.12 (15, 32)	0.17 (55)	0.21 (80)	0.10
	575-3-60	3,750		0.06 (37)		0.03
		4,000		0.06 (37)		0.03
		5,000		0.08 (37)		0.05
		6,000		0.12 (37)		0.07
		7,200		0.15 (37)		0.09
		7,500		0.17 (37)		0.10

LEGEND

FIOP — Factory-Installed Option

*There are no electric heaters available for 017 575-v units.

NOTES:

1. Heaters are rated at 240 v, 480 v, and 575 v.

2. The factory assembled horizontal adapter substantially improves fan performance.
3. The static pressure must be added to external static pressure. The sum and the evaporator entering-air cfm should then be used in conjunction with the Fan Performance table to determine blower rpm, bhp, and watts.

Table 16 — MoistureMiSer™ Dehumidification Package Static Pressure Drop (in. wg)

UNIT SIZE 50HJ	UNIT NOMINAL TONS	CFM PER TON		
		300	400	500
015	12	.026	.045	.071
017	15	.040	.071	.111

Table 17 — Fan Rpm at Motor Pulley Settings*

50HJ (No. Turns Open)	0	1/2	1	1 1/2	2	2 1/2	3	3 1/2	4	4 1/2	5	5 1/2	6
015 (208/230, 460, 575 v)†	1147	1124	1101	1078	1055	1032	1010	987	964	941	918	895	††
015 (208/230, 460 v)**	1315	1292	1269	1246	1223	1200	1178	1155	1132	1109	1086	1063	1040
017†	††	††	††	††	1021	1002	984	965	947	928	910	891	873
017**	††	††	††	††	1200	1178	1156	1134	1112	1091	1069	1047	1025

*Approximate fan rpm shown.

†Indicates standard drive package.

**Indicates alternate drive package.

††Due to belt and pulley style, pulley cannot be set to this number of turns open.

Table 18 — Evaporator Fan Motor Specifications

UNIT 50HJ	NOMINAL HP	VOLTAGE	MAX WATTS	EFF. %	MAX BHP	MAX BkW	MAX AMPS
015 (Standard Motor)	2.9	208	2700	85.8	3.13	2.34	9.46
	2.9	230	2700	85.8	3.13	2.34	8.6
	2.9	460	2700	85.8	3.13	2.34	4.3
	3	575	3065	81.7	3.38	2.53	3.9
015 (Optional Motor)	3.7	208	3610	85.8	4.26	3.18	10.5
	3.7	230	3610	85.8	4.26	3.18	10.5
	3.7	460	3610	85.8	4.26	3.18	4.8
017	5	208	5180	87.5	6.13	4.57	15.8
	5	230	5180	87.5	6.13	4.57	15.8
	5	460	5180	87.5	6.13	4.57	7.9
	5	575	5180	87.5	6.13	4.57	6.0

LEGEND

BHP — Brake Horsepower

Operating Sequence

COOLING, UNITS WITHOUT ECONOMIZER — When thermostat calls for cooling, terminals G and Y1 are energized. The indoor (evaporator) fan contactor (IFC), outdoor fan contactor (OFC), and compressor contactor no. 1 (C1) are energized and evaporator-fan motor, condenser fans and compressor no. 1 start. The condenser-fan motors run continuously while unit is cooling. If the thermostat calls for a second stage of cooling by energizing Y2, compressor contactor no. 2 (C2) is energized and compressor no. 2 starts.

HEATING, UNITS WITHOUT ECONOMIZER (If Optional or Accessory Heater is Installed) — Upon a call for heating through terminal W1, IFC and heater contactor no. 1 (HC1) are energized. On units equipped for 2 stages of heat, when additional heat is needed HC2 is energized through W2.

COOLING, UNITS WITH ECONOMIZER IV — When free cooling is not available, the compressors will be controlled by the zone thermostat. When free cooling is available, the outdoor-air damper is modulated by the EconoMi\$erIV control to provide a 50 to 55 F supply-air temperature into the zone. As the supply-air temperature fluctuates above 55 or below 50 F, the dampers will be modulated (open or close) to bring the supply-air temperature back within set point limits.

For EconoMi\$erIV operation, there must be a thermostat call for the fan (G). This will move the damper to its minimum position during the occupied mode.

Above 50 F supply-air temperature, the dampers will modulate from 100% open to the minimum open position. From 50 F to 45 F supply-air temperature, the dampers will maintain at the minimum open position. Below 45 F the dampers will be completely shut. As the supply-air temperature rises, the dampers will come back open to the minimum open position once the supply-air temperature rises to 48 F.

If optional power exhaust is installed, as the outdoor-air damper opens and closes, the power exhaust fans will be energized and deenergized.

If field-installed accessory CO₂ sensors are connected to the EconoMi\$er IV control, a demand controlled ventilation strategy will begin to operate. As the CO₂ level in the zone increases above the CO₂ set point, the minimum position of the damper will be increased proportionally. As the CO₂ level decreases because of the increase in fresh air, the outdoor-air damper will be proportionally closed. Damper position will follow the higher demand condition from DCV mode or free cooling mode.

Damper movement from full closed to full open (or vice versa) will take between 1½ and 2½ minutes.

If free cooling can be used as determined from the appropriate changeover command (switch, dry bulb, enthalpy curve, differential dry bulb, or differential enthalpy), a call for cooling (Y1 closes at the thermostat) will cause the control to modulate the dampers open to maintain the supply air temperature set point at 50 to 55 F.

As the supply-air temperature drops below the set point range of 50 to 55 F, the control will modulate the outdoor-air dampers closed to maintain the proper supply-air temperature.

HEATING, UNITS WITH ECONOMIZER IV — When the room temperature calls for heat, the heating controls are energized as described in the Heating, Units Without Economizer section. When the indoor fan is energized, the economizer damper moves to the minimum position. When the indoor fan is off, the economizer damper is fully closed.

COOLING, UNITS WITH ECONOMIZER2, PREMIER-LINK™ CONTROL AND A THERMOSTAT — When free cooling is not available, the compressors will be controlled by the PremierLink control in response to the Y1 and Y2 inputs from the thermostat.

The PremierLink control will use the following information to determine if free cooling is available:

- Indoor fan has been on for at least 30 seconds.
- The SPT, SAT, and OAT inputs must have valid readings.
- OAT must be less than 75 F.
- OAT must be less than SPT.
- Enthalpy must be LOW (may be jumpered if an enthalpy sensor not available).
- Economizer position is NOT forced.

Pre-cooling occurs when there is no call from the thermostat except G. Pre-cooling is defined as the economizer modulates to provide 70 F supply air.

When free cooling is available the PremierLink control will control the compressors, energize the reversing valve(s) and economizer to provide a supply-air temperature determined to meet the Y1 and Y2 calls from the thermostat using the following three routines. The three control routines are based on OAT.

The 3 routines are based on OAT where:

SASP = Supply Air Set Point

DXCTLO = Direct Expansion Cooling Lockout Set Point

PID = Proportional Integral

Routine 1 (OAT < DXCTLO)

- Y1 energized – economizer maintains a SASP = (SATLO1 + 3).
- Y2 energized – economizer maintains a SASP = (SATLO2 + 3).

Routine 2 (DXCTLO < OAT < 68 F)

- If only Y1 energized, the economizer maintains a SASP = (SATLO1 + 3).
- If SAT > SASP + 5 and economizer position > 80%, economizer will go to minimum position for 3 minutes or until SAT > 68 F.
- First stage of mechanical cooling will be energized.
- Integrator resets.
- Economizer opens again and controls to current SASP after stage one on for 90 seconds.
- With Y1 and Y2 energized economizer maintains an SASP = SATLO2 + 3.
- If SAT > SASP + 5 and economizer position > 80%, economizer will go to minimum position for 3 minutes or until SAT > 68 F.
- If compressor one is on then second stage of mechanical cooling will be energized. Otherwise the first stage will be energized.
- Integrator resets.
- Economizer opens again and controls to SASP after stage one on for 90 seconds.

Routine 3 (OAT > 68)

- Economizer is opened 100%.
- Compressors 1 and 2 are cycled based on Y1 and Y2 using minimum on and off times and watching the supply air temperature as compared to SATLO1 and SATLO2 set points.

If optional power exhaust is installed, as the outdoor-air damper opens and closes, the power exhaust fans will be energized and deenergized.

If field-installed accessory CO₂ sensors are connected to the PremierLink™ control, a PID-controlled demand ventilation strategy will begin to operate. As the CO₂ level in the zone increases above the CO₂ set point, the minimum position of the damper will be increased proportionally. As the CO₂ level decreases because of the increase in fresh air, the outdoor-air damper will be proportionally closed.

HEATING, UNITS WITH ECONOMIZER2, PREMIERLINK CONTROL AND A THERMOSTAT — When the thermostat calls for heating, terminal W1 is energized. The PremierLink control will move the economizer damper to the minimum position if there is a call for G and closed if there is a call for W1 without G. In order to prevent thermostat from short cycling, the unit is locked into the heating mode for at least 10 minutes when W1 is energized.

On units equipped for two stages of heat, when additional heat is needed, W2 is energized and the electric heat (if used) comes on. When the thermostat is satisfied and W1 is deenergized, the IFM stops.

COOLING, UNITS WITH ECONOMIZER2, PREMIERLINK CONTROL AND A ROOM SENSOR — When free cooling is not available, the compressors will be controlled by the PremierLink controller using a PID Error reduction calculation as indicated by Fig 41.

The PremierLink controller will use the following information to determine if free cooling is available:

- Indoor fan has been on for at least 30 seconds.
- The SPT, SAT, and OAT inputs must have valid readings.
- OAT must be less than 75 F.
- OAT must be less than SPT.
- Enthalpy must be LOW (may be jumpered if and enthalpy sensor is not available).
- Economizer position is NOT forced.

When free cooling is available, the outdoor-air damper is positioned through the use of a Proportional Integral (PID) control process to provide a calculated supply-air temperature into the zone. The supply air will maintain the space temperature between the heating and cooling set points as indicated in Fig. 42.

The PremierLink control will integrate the compressors stages with the economizer based on similar logic as the three routines listed in the previous section. The SASP will float up and down based on the error reduction calculations that compare space temperature and space set point. The reversing valves will be energized.

When outdoor-air temperature conditions require the economizer to close for a compressor stage-up sequence, the economizer control integrator is reset to zero after the stage-up sequence is completed. This prevents the supply-air temperature from dropping too quickly and creating a freeze condition that would make the compressor turn off prematurely.

The high space set point is used for DX (direct expansion) cooling control, while the economizer space set point is a calculated value between the heating and cooling set points. The economizer set point will always be at least one degree below the cooling set point, allowing for a smooth transition from mechanical cooling with economizer assist, back to economizer cooling as the cooling set point is achieved. The compressors may be used for initial cooling then the PremierLink controller will modulate the economizer using an error reduction calculation to hold the space temperature between the heating and cooling set points. See Fig. 42.

The controller uses the following conditions to determine economizer cooling:

- Enthalpy is Low.
- SAT reading is available.
- OAT reading is available.
- SPT reading is available.
- $OAT \leq SPT$
- Economizer Position is NOT forced.

If any of the above conditions are **not** met, the economizer submaster reference (ECSR) is set to maximum limit and the damper moves to minimum position. The operating sequence is complete. The ECSR is recalculated every 30 seconds.

If an optional power exhaust is installed, as the outdoor-air damper opens and closes, the power exhaust fans will be energized and deenergized.

If field-installed accessory CO₂ sensors are connected to the PremierLink control, a PID-controlled demand ventilation strategy will begin to operate. As the CO₂ level in the zone increases above the CO₂ set point, the minimum position of the damper will be increased proportionally. As the CO₂ level decreases because of the increase in fresh air, the outdoor-air damper will be proportionally closed.

HEATING, UNIT WITH ECONOMIZER2, PREMIERLINK CONTROL AND A ROOM SENSOR — Every 40 seconds the controller will calculate the required heat stages (maximum of 3) to maintain supply-air temperature (SAT) if the following qualifying conditions are met:

- Indoor fan has been on for at least 30 seconds.
- COOL mode is not active.
- OCCUPIED, TEMP.COMPENSATED START or HEAT mode is active.
- SAT reading is available.
- Fire shutdown mode is not active.

If all of the above conditions are met, the number of heat stages is calculated; otherwise the required number of heat stages will be set to 0.


If the PremierLink controller determines that heat stages are required, the economizer damper will be moved to minimum position if occupied and closed if unoccupied.

Staging should be as follows:

If Heating PID STAGES=2

- HEAT STAGES=1 (75% capacity) will energize HS1
- HEAT STAGES=2 (100% capacity) will energize HS2

In order to prevent short cycling, the unit is locked into the Heating mode for at least 10 minutes when HS1 is deenergized. On units equipped for two stages of heat, when additional heat is needed, it may be provided by electric heat (if supplied). When the space condition is satisfied and HS1 is deenergized the IFM stops. The fan will run continuously in the occupied mode as required by national energy and fresh air standards.

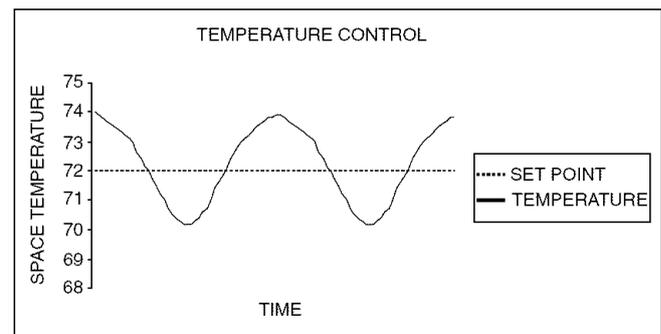

NOTE: PremierLink™ control performs smart staging of 2 stages of DX cooling and up to 3 stages of heat.

Fig. 41 — DX Cooling Temperature Control Example

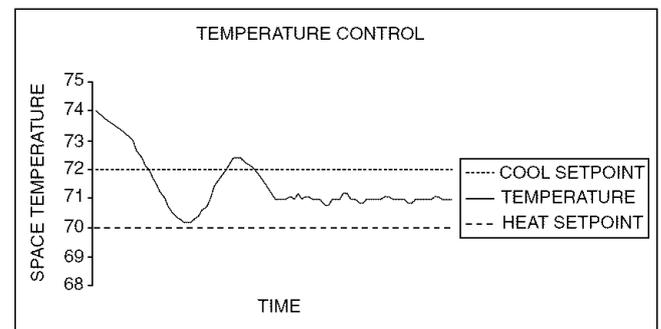


Fig. 42 — Economizer Temperature Control Example

SERVICE

▲ WARNING

Before performing service or maintenance operations on unit, turn off main power switch to unit. Turn off accessory heater power switch if applicable. Electrical shock could cause personal injury.

Cleaning — Inspect unit interior at beginning of each heating and cooling season and as operating conditions require. Remove unit top panel and/or side panels for access to unit interior.

EVAPORATOR COIL — Clean as required with a commercial coil cleaner.

CONDENSER COIL — Clean condenser coil annually and as required by location and outdoor-air conditions. Inspect coil monthly — clean as required.

CONDENSATE DRAIN — Check and clean each year at start of cooling season. In winter, keep drains and trap dry.

FILTERS — Clean or replace at start of each heating and cooling season, or more often if operating conditions require. Refer to Table 1 for type and size.

OUTDOOR-AIR INLET SCREENS — Clean screens with steam or hot water and a mild detergent. Do not use throwaway filters in place of screens.

Lubrication

COMPRESSORS — Each compressor is charged with the correct amount of oil at the factory. Conventional white oil (Sontext 200LT) is used. White oil is compatible with 3GS oil, and 3GS oil may be used if the addition of oil is required. See compressor nameplate for original oil charge. A complete recharge should be four ounces less than the original oil charge. When a compressor is exchanged in the field it is possible that a major portion of the oil from the replaced compressor may still be in the system. While this will not affect the reliability of the replacement compressor, the extra oil will add rotor drag and increase power usage. To remove this excess oil, an access valve may be added to the lower portion of the suction line at the inlet of the compressor. The compressor should then be run for 10 minutes, shut down, and the access valve opened until no oil flows. This should be repeated twice to make sure the proper oil level has been achieved.

FAN SHAFT BEARINGS — For size 015 units, bearings are permanently lubricated. No field lubrication is required. For size 017 units, the bearings are of the pillow block type and have grease fittings. The bearing opposite the motor end has an extended tube line so it can be lubricated from the motor side. Lubricate the bearings twice annually.

Typical lubricants are given below:

MANUFACTURER	LUBRICANT
Texaco	Regal AFB-2*
Mobil	Mobilplex EP No. 1
Sunoco	Prestige 42
Texaco	Multifak 2

*Preferred lubricant because it contains rust and oxidation inhibitors.

CONDENSER AND EVAPORATOR-FAN MOTOR BEARINGS — The condenser-fan and evaporator-fan motors have permanently sealed bearings, so no field lubrication is necessary.

Evaporator Fan Performance Adjustment (Fig. 43-45) — Fan motor pulleys are factory set for speed shown in Table 1.

To change fan speeds:

1. Shut off unit power supply.

2. a. Size 015 Only: Loosen belt by loosening fan motor mounting plate nuts.
b. Size 017 Only: Loosen nuts on the 2 carriage bolts in the motor mounting base. Install jacking bolt and plate under motor base (bolt and plate are shipped in installer's packet). See Fig. 45. Using bolt and plate, raise motor to top of slide and remove belt. Secure motor in this position by tightening the nuts on the carriage bolts.
3. Loosen movable-pulley flange setscrew (see Fig. 43).
4. Screw movable flange toward fixed flange to increase speed and away from fixed flange to decrease speed. Increasing fan speed increases load on motor. Do not exceed maximum speed specified in Table 1. See Table 14 for air quantity limits.
5. Set movable flange at nearest keyway of pulley hub and tighten setscrew. (See Table 1 for speed change for each full turn of pulley flange.)
6. Replace and tighten belts. See Belt Tension Adjustment section on page 36.

To align fan and motor pulleys:

1. Loosen fan pulley setscrews.
2. Slide fan pulley along fan shaft.
3. Make angular alignment by loosening motor from mounting plate.

Evaporator Fan Service and Replacement

50HJ015 UNITS (See Fig. 44)

NOTE: To remove belts only, follow Steps 1-6.

1. Remove filter and supply-air section panels.
2. Remove unit top panel.
3. Loosen carriage nuts A and B holding motor mount assembly to fan scroll side plates.
4. Loosen screw C.
5. Rotate motor mount assembly (with motor attached) as far as possible away from evaporator coil.
6. Remove belt.

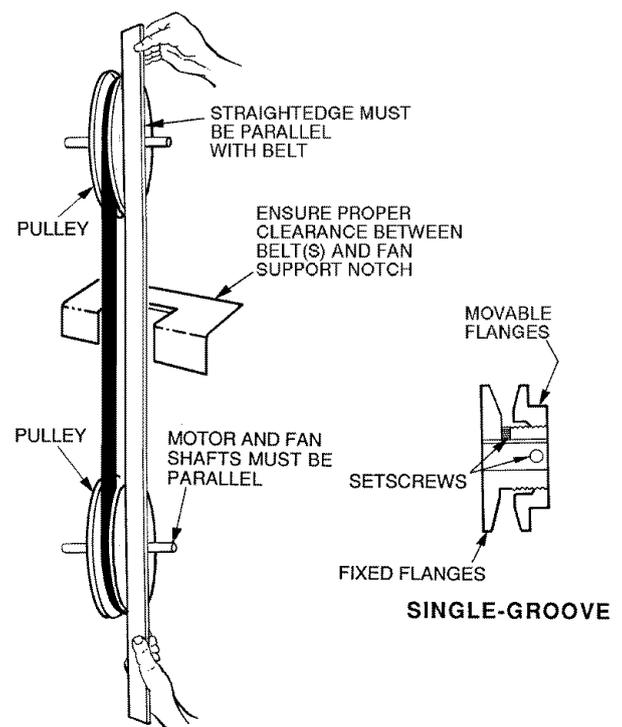


Fig. 43 — Evaporator-Fan Pulley Alignment and Adjustment

7. Rotate motor mount assembly back past original position toward evaporator coil.
8. Remove motor mounting nuts D and E (both sides).
9. Lift motor up through top of unit.
10. Reverse above procedure to reinstall motor.
11. Check and adjust belt tension as necessary.

50HJ017 UNITS (See Fig. 45) — The 50HJ017 units use a fan motor mounting system that features a slide-out motor mounting plate. To replace or service the motor, slide out the bracket.

1. Remove the evaporator-fan access panel and the heating control access panel.
2. Remove the center post (located between the evaporator fan and heating control access panels) and all screws securing it.
3. Loosen nuts on the two carriage bolts in the motor mounting base.
4. Using jacking bolt under motor base, raise motor to top of slide and remove belt. Secure motor in this position by tightening the nuts on the carriage bolts.
5. Remove the belt drive.
6. Remove jacking bolt and tapped jacking bolt plate.
7. Remove the 2 screws that secure the motor mounting plate to the motor support channel.
8. Remove the 3 screws from the end of the motor support channel that interfere with the motor slide path.
9. Slide out the motor and motor mounting plate.
10. Disconnect wiring connections and remove the 4 mounting bolts.
11. Remove the motor.
12. To install the new motor, reverse Steps 1-11.


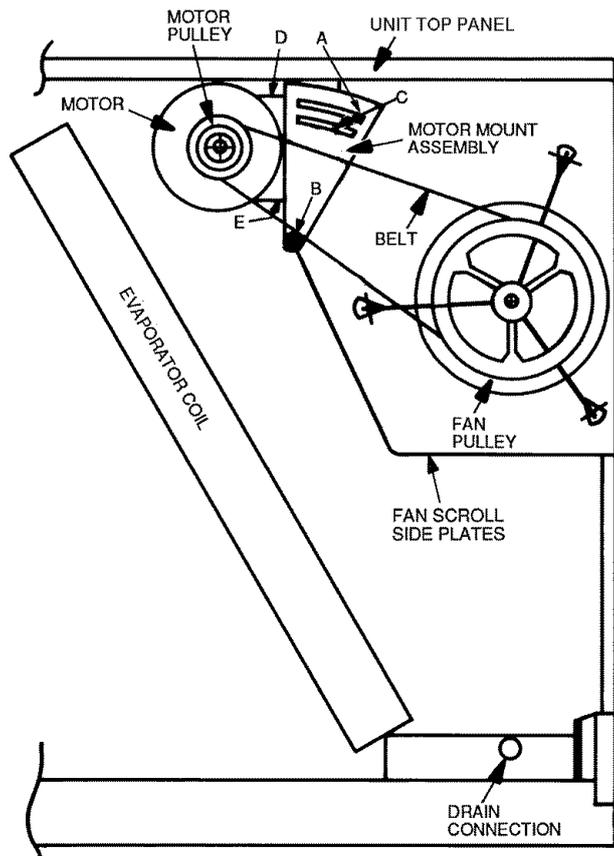


Fig. 44 — 50HJ015 Evaporator-Fan Motor Section

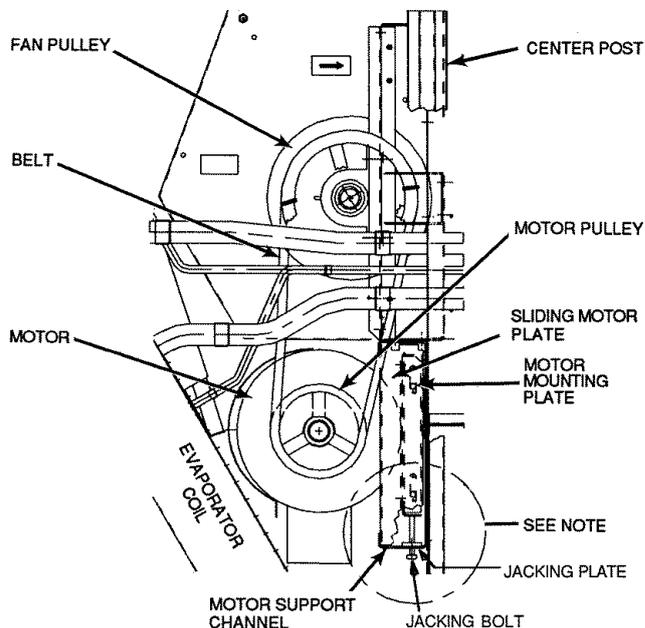

NOTE: A 3 $\frac{1}{2}$ -in. bolt and threaded plate are included in the installer's packet. They should be added to the motor support channel below the motor mounting plate to aid in raising the motor. The plate part number is 50DP503842. The adjustment bolt is $\frac{3}{8}$ - 16 x 1 $\frac{3}{4}$ LG.

Fig. 45 — 50HJ017 Evaporator-Fan Motor Section


Belt Tension Adjustment — To adjust belt tension:

1. Loosen fan motor bolts.
2. Adjust belt tension:
 - a. Size 015 Units: Move motor mounting plate up or down for proper belt tension ($\frac{1}{2}$ in. deflection with one finger).
 - b. Size 017 Units: Turn motor jacking bolt to move motor mounting plate up or down for proper belt tension ($\frac{3}{8}$ in. deflection at midspan with one finger [9 lb force]).
3. Tighten nuts.
4. Adjust bolts and nut on mounting plate to secure motor in fixed position.

Condenser-Fan Adjustment

50HJ015 AND 017 UNITS (Fig. 46)

1. Shut off unit power supply.
2. Remove access panel(s) closest to the fan to be adjusted.
3. Loosen fan hub setscrews.
4. Adjust fan height on shaft using a straightedge placed across the fan orifice.
5. Tighten setscrews and replace panel(s).
6. Turn on unit power.

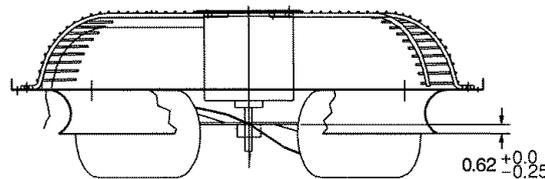

NOTE: Dimensions are in inches.

Fig. 46 — Condenser-Fan Adjustment, 50HJ015,017

Power Failure — Dampers have a spring return. In event of power failure, dampers will return to fully closed position until power is restored. *Do not manually operate damper motor.*

Refrigerant Charge — Amount of refrigerant charge is listed on unit nameplate and in Table 1. Refer to Carrier GTAC II; Module 5; Charging, Recovery, Recycling, and Reclamation section for charging methods and procedures. Unit panels must be in place when unit is operating during charging procedure.

NOTE: Do not use recycled refrigerant as it may contain contaminants.

NO CHARGE — Use standard evacuating techniques. After evacuating system, weigh in the specified amount of refrigerant (refer to Table 1).

LOW CHARGE COOLING — Using cooling charging chart (see Fig. 47), add or remove refrigerant until conditions of the chart are met. Note that charging chart is different from those normally used. An accurate pressure gage and temperature-sensing device is required. Charging is accomplished by ensuring the proper amount of liquid subcooling. Measure liquid line pressure at the liquid line service valve using pressure gage. Connect temperature sensing device to the liquid line near the liquid line service valve and insulate it so that outdoor ambient temperature does not affect reading.

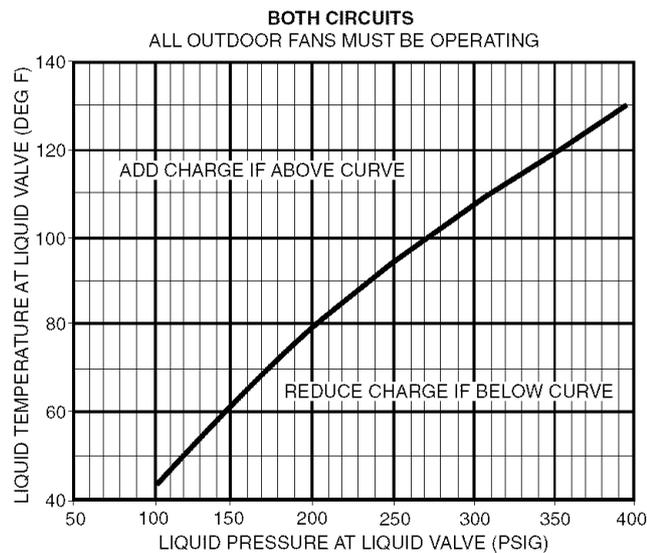


Fig. 47 — Cooling Charging Chart

TO USE THE COOLING CHARGING CHART — Use the above temperature and pressure readings, and find the intersection point on the cooling charging chart. If intersection point on chart is above line, add refrigerant. If intersection point on chart is below line, carefully recover some of the charge. Re-check suction pressure as charge is adjusted.

NOTE: Indoor-air cfm must be within normal operating range of unit. All outdoor fans must be operating.

The TXV (thermostatic expansion valve) is set to maintain between 15 and 20 degrees of superheat at the compressors. The valves are factory set and should not require re-adjustment.

MOISTUREMISER™ SYSTEM CHARGING — The system charge for units with the MoistureMiSer option is greater than that of the standard unit alone. The charge for units with this option is indicated on the unit nameplate drawing. To charge systems using the MoistureMiSer dehumidification package, fully evacuate, recover, and re-charge the system to the nameplate specified charge level. To check or adjust

refrigerant charge on systems using the MoistureMiSer dehumidification package, charge per the standard subcooling charts. The subcooler **MUST** be deenergized to use the charging charts. The charts reference a liquid pressure (psig) and temperature at a point between the condenser coil and the subcooler coil. A tap is provided on the unit to measure liquid pressure entering the subcooler (leaving the condenser).

Filter Drier — Replace whenever refrigerant system is exposed to atmosphere.

Protective Devices

COMPRESSOR PROTECTION

Overtemperature — Each compressor has an internal protector to protect it against excessively high discharge gas temperatures.

Overcurrent — Each compressor has internal line break motor protection.

Crankcase Heater — All units are equipped with a 70-watt crankcase heater to prevent absorption of liquid refrigerant by oil in the crankcase when the compressor is idle. The crankcase heater is energized whenever there is a main power to the unit and the compressor is not energized.

IMPORTANT: After prolonged shutdown or servicing, energize the crankcase heaters for 24 hours before starting the compressors.

Compressor Lockout — If any of the safeties (high-pressure, low-pressure, freeze protection thermostat, compressor internal thermostat) trip, or if there is loss of power to the compressors, the CLO (compressor lockout) will lock the compressors off. To reset, manually move the thermostat setting.

EVAPORATOR FAN MOTOR PROTECTION — A manual reset, calibrated trip, magnetic circuit breaker protects against overcurrent. Do not bypass connections or increase the size of the breaker to correct trouble. Determine the cause and correct it before resetting the breaker.

CONDENSER-FAN MOTOR PROTECTION — Each condenser-fan motor is internally protected against overtemperature.

HIGH-PRESSURE AND LOW-PRESSURE SWITCHES — If either switch trips, or if the compressor overtemperature switch activates, that refrigerant circuit will be automatically locked out by the CLO. To reset, manually move the thermostat setting.

FREEZE PROTECTION THERMOSTAT (FPT) — An FPT is located on the top and bottom of the evaporator coil. It detects frost build-up and turns off the compressor, allowing the coil to clear. Once the frost has melted, the compressor can be reenergized.

Relief Devices — All units have relief devices to protect against damage from excessive pressures (e.g., fire). These devices protect the high and low side.

Control Circuit, 24-V — This control circuit is protected against overcurrent by a 3.2-amp circuit breaker. Breaker can be reset. If it trips, determine cause of trouble before resetting. See Fig. 48 and 49.

Replacement Parts — A complete list of replacement parts may be obtained from any Carrier distributor upon request.

Diagnostic LEDs — The unit control boards have LEDs for diagnostic purpose. Refer to Troubleshooting section on page 41.

Optional Hinged Access Doors — When the optional service package is ordered or the if the hinged access doors option is ordered, the unit will be provided with external and internal hinged access doors to facilitate service.

Four external hinged access doors are provided. All external doors are provided with 2 large $\frac{1}{4}$ turn latches with folding bail-type handles. (Compressor access doors have one latch.) A single door is provided for filter and drive access. One door is provided for control box access. The control box access door is interlocked with the non-fused disconnect which must be in the

OFF position to open the door. Two doors are provided for access to the compressor compartment.

Two internal access doors are provided inside the filter/drive access door. The filter access door (on the left) is secured by 2 small $\frac{1}{4}$ turn latches with folding bail-type handles. This door must be opened prior to opening the drive access door. The drive access door is shipped with 2 sheet metal screws holding the door closed. Upon initial opening of the door, these screws may be removed and discarded. The door is then held shut by the filter access door, which closes over it.

SCHEMATIC

ELECTRIC HEAT OPTION

SEE ELECTRIC HEAT CHART

ELECTRIC HEAT		
	208/240V AMPS	200/230V KW
A	39.3/45.3	14.1/18.8
B	71.3/82.3	25.7/34.2
C	117/135	42.2/56.1




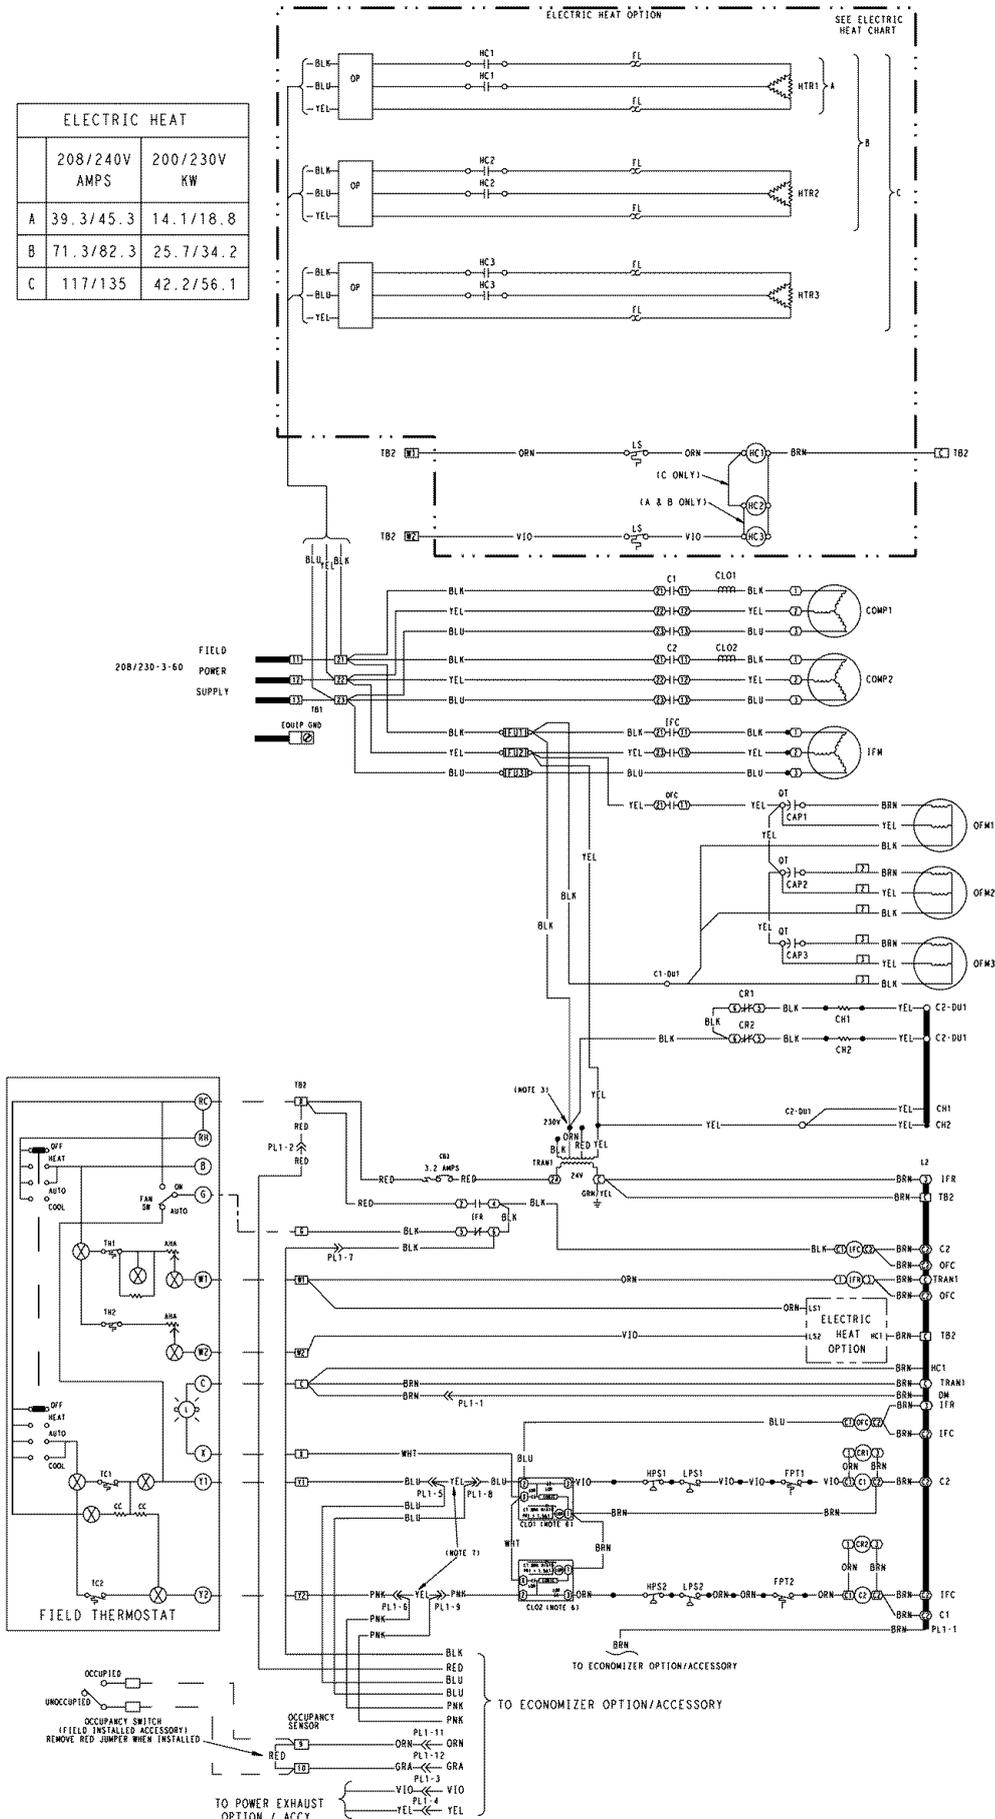


Fig. 48 — Typical Wiring Schematic (50HJ015 208/230 V Shown)

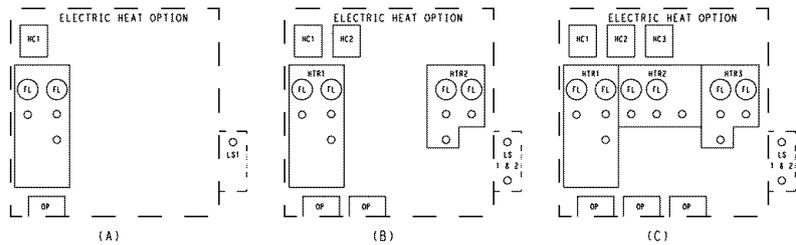
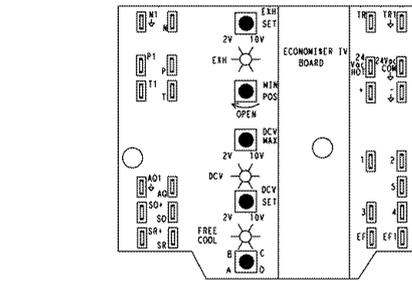


COMPONENT ARRANGEMENT

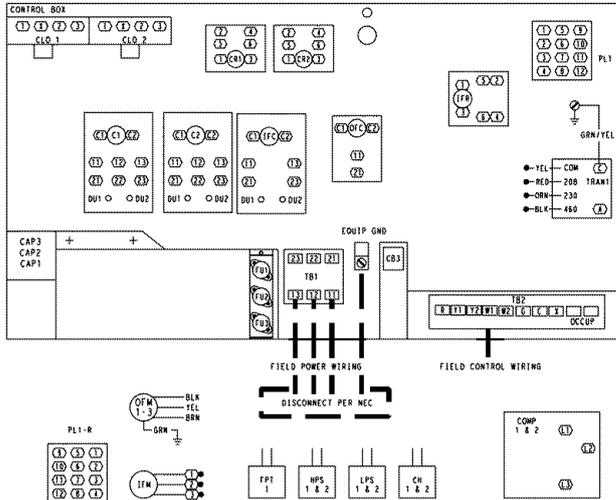

LEGEND

- AHA — Adjustable, Heat Anticipator
- C — Contactor, Compressor
- CAP — Capacitor
- CB — Circuit Breaker
- CC — Cooling Compensator
- CH — Crankcase Heater
- CLO — Compressor Lockout
- COMP — Compressor Motor
- CR — Control Relay
- DM — Damper Motor
- DU — Dummy Terminal
- EQUIP — Equipment
- FL — Filament
- FPT — Freeze Protection Thermostat
- FU — Fuse
- GND — Ground
- HC — Heater Contactor
- HPS — High-Pressure Switch
- HTR — Heater
- IAQ — Indoor Air Quality Sensor
- IFC — Indoor Fan Contactor
- IFM — Indoor Fan Motor
- IFR — Indoor Fan Relay
- L — Light
- LOR — Lockout Relay
- LPS — Low-Pressure Switch
- LS — Limit Switch
- NEC — National Electrical Code
- OAT — Outdoor Air Temperature Sensor
- OCCUP — Occupancy Sensor
- OFC — Outdoor Fan Contactor
- OFM — Outdoor Fan Motor
- PL — Plug Assembly
- PRI — Primary
- QT — Quadruple Terminal
- RAT — Return Air Temperature Sensor
- SW — Switch
- TB — Terminal Block
- TC — Thermostat Cooling
- TH — Thermostat Heating
- TRAN — Transformer
- Terminal (Marked)
- Terminal (Unmarked)

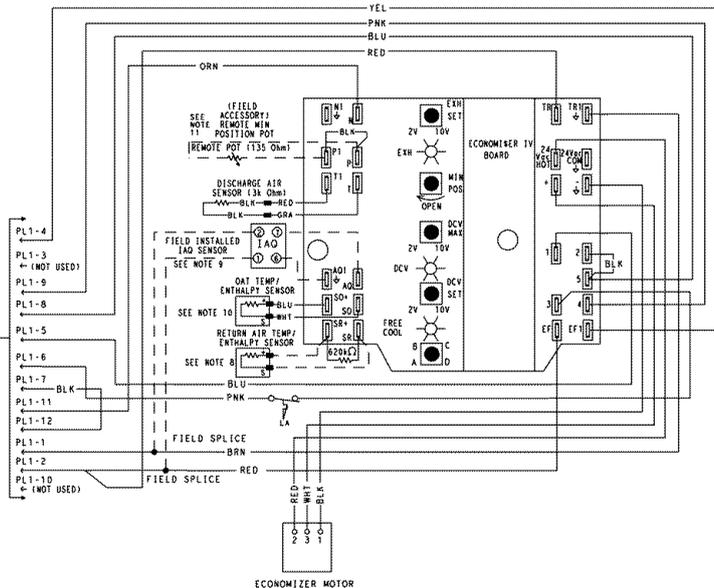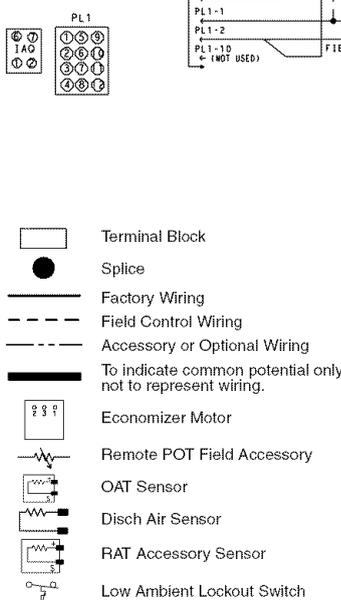

- NOTES:
1. Compressor and/or fan motor(s) thermally protected three phase motors protected against primary single phasing conditions.
 2. If any of the original wire furnished must be replaced, it must be replaced with Type 90° C or its equivalent.
 3. Jumpers are omitted when unit is equipped with economizer.
 4. IFCB must trip amps is equal to or less than 140% FLA.
 5. On TRAN1 use BLK lead for 460-v power supply and ORN lead for 575-v power supply.
 6. The CLO locks out the compressor to prevent short cycling on compressor overload and safety devices; before replacing CLO check these devices.
 7. Number(s) indicates the line location of used contacts. A bracket over (2) numbers signifies a single pole, double throw contact. An underlined number signifies a normally closed contact. Plain (no line) number signifies a normally open contact.
 8. 620 Ohm, 1 watt, 5% resistor should be removed only when using differential enthalpy or dry bulb.
 9. If a separate field-supplied 24 v transformer is used for the IAQ sensor power supply, it cannot have the secondary of the transformer grounded.
 10. OAT sensor is shipped inside unit and must be relocated in the field for proper operation.
 11. For field installed remote minimum position POT, remove black wire jumper between P and P1 and set control minimum position POT to the minimum position.

Fig. 49 — Typical Component Arrangement (50HJ015 Unit Shown)

TROUBLESHOOTING

Unit Troubleshooting — Refer to Tables 19 and 20 for troubleshooting details.

EconoMiSerIV Troubleshooting — See Table 21 for EconoMiSerIV logic.

A functional view of the EconoMiSerIV is shown in Fig. 50. Typical settings, sensor ranges, and jumper positions are also shown. An EconoMiSerIV simulator program is available from Carrier to help with EconoMiSerIV training and troubleshooting.

ECONOMISERIV PREPARATION — This procedure is used to prepare the EconoMiSerIV for troubleshooting. No troubleshooting or testing is done by performing the following procedure.

NOTE: This procedure requires a 9-v battery, 1.2 kilo-ohm resistor, and a 5.6 kilo-ohm resistor which are not supplied with the EconoMiSerIV.

IMPORTANT: Be sure to record the positions of all potentiometers before starting troubleshooting.

1. Disconnect power at TR and TR1. All LEDs should be off. Exhaust fan contacts should be open.
2. Disconnect device at P and P1.
3. Jumper P to P1.
4. Disconnect wires at T and T1. Place 5.6 kilo-ohm resistor across T and T1.
5. Jumper TR to I.
6. Jumper TR to N.
7. If connected, remove sensor from terminals S_O and +. Connect 1.2 kilo-ohm 4074EJM checkout resistor across terminals S_O and +.
8. Put 620-ohm resistor across terminals S_R and +.
9. Set minimum position, DCV set point, and exhaust potentiometers fully CCW (counterclockwise).
10. Set DCV maximum position potentiometer fully CW (clockwise).
11. Set enthalpy potentiometer to D.
12. Apply power (24 vac) to terminals TR and TR1.

DIFFERENTIAL ENTHALPY — To check differential enthalpy:

1. Make sure EconoMiSerIV preparation procedure has been performed.
2. Place 620-ohm resistor across S_O and +.
3. Place 1.2 kilo-ohm resistor across S_R and +. The Free Cool LED should be lit.
4. Remove 620-ohm resistor across S_O and +. The Free Cool LED should turn off.
5. Return EconoMiSerIV settings and wiring to normal after completing troubleshooting.

SINGLE ENTHALPY — To check single enthalpy:

1. Make sure EconoMiSerIV preparation procedure has been performed.
2. Set the enthalpy potentiometer to A (fully CCW). The Free Cool LED should be lit.
3. Set the enthalpy potentiometer to D (fully CW). The Free Cool LED should turn off.
4. Return EconoMiSerIV settings and wiring to normal after completing troubleshooting.

DCV (Demand Controlled Ventilation) AND POWER EXHAUST — To check DCV and Power Exhaust:

1. Make sure EconoMiSerIV preparation procedure has been performed.
2. Ensure terminals AQ and AQ1 are open. The LED for both DCV and Exhaust should be off. The actuator should be fully closed.
3. Connect a 9-v battery to AQ (positive node) and AQ1 (negative node). The LED for both DCV and Exhaust

should turn on. The actuator should drive to between 90 and 95% open.

4. Turn the Exhaust potentiometer CW until the Exhaust LED turns off. The LED should turn off when the potentiometer is approximately 90%. The actuator should remain in position.
5. Turn the DCV set point potentiometer CW until the DCV LED turns off. The DCV LED should turn off when the potentiometer is approximately 9-v. The actuator should drive fully closed.
6. Turn the DCV and Exhaust potentiometers CCW until the Exhaust LED turns on. The exhaust contacts will close 30 to 120 seconds after the Exhaust LED turns on.
7. Return EconoMiSerIV settings and wiring to normal after completing troubleshooting.

DCV MINIMUM AND MAXIMUM POSITION — To check the DCV minimum and maximum position:

1. Make sure EconoMiSerIV preparation procedure has been performed.
2. Connect a 9-v battery to AQ (positive node) and AQ1 (negative node). The DCV LED should turn on. The actuator should drive to between 90 and 95% open.
3. Turn the DCV Maximum Position potentiometer to midpoint. The actuator should drive to between 20 and 80% open.
4. Turn the DCV Maximum Position potentiometer to fully CCW. The actuator should drive fully closed.
5. Turn the Minimum Position potentiometer to midpoint. The actuator should drive to between 20 and 80% open.
6. Turn the Minimum Position Potentiometer fully CW. The actuator should drive fully open.
7. Remove the jumper from TR and N. The actuator should drive fully closed.
8. Return EconoMiSerIV settings and wiring to normal after completing troubleshooting.

SUPPLY-AIR INPUT — To check supply-air input:

1. Make sure EconoMiSerIV preparation procedure has been performed.
2. Set the Enthalpy potentiometer to A. The Free Cool LED turns on. The actuator should drive to between 20 and 80% open.
3. Remove the 5.6 kilo-ohm resistor and jumper T to T1. The actuator should drive fully open.
4. Remove the jumper across T and T1. The actuator should drive fully closed.
5. Return EconoMiSerIV settings and wiring to normal after completing troubleshooting.

ECONOMISER IV TROUBLESHOOTING COMPLETION — This procedure is used to return the EconoMiSerIV to operation. No troubleshooting or testing is done by performing the following procedure.

1. Disconnect power at TR and TR1.
2. Set enthalpy potentiometer to previous setting.
3. Set DCV maximum position potentiometer to previous setting.
4. Set minimum position, DCV set point, and exhaust potentiometers to previous settings.
5. Remove 620-ohm resistor from terminals S_R and +.
6. Remove 1.2 kilo-ohm checkout resistor from terminals S_O and +. If used, reconnect sensor from terminals S_O and +.
7. Remove jumper from TR to N.
8. Remove jumper from TR to I.
9. Remove 5.6 kilo-ohm resistor from T and T1. Reconnect wires at T and T1.
10. Remove jumper from P to P1. Reconnect device at P and P1.
11. Apply power (24 vac) to terminals TR and TR1.

Table 19 — MoistureMiSer™ Dehumidification Subcooler Service Analysis

PROBLEM	CAUSE	REMEDY
Subcooler Will Not Energize	No power to subcooler control transformer.	Check power source. Ensure all wire connections are tight.
	No power from subcooler control transformer to liquid line three-way valve.	<ol style="list-style-type: none"> 1. Fuse open; check fuse. Ensure continuity of wiring. 2. Subcooler control low-pressure switch open. Cycle unit off and allow low-pressure switch to reset. Replace switch if it will not close. 3. Transformer bad; check transformer.
	Liquid line three-way valve will not operate.	<ol style="list-style-type: none"> 1. Solenoid coil defective; replace. 2. Solenoid valve stuck closed; replace.
Subcooler Will Not Deenergize	Liquid Line three-way valve will not close.	Valve is stuck open; replace.
Low System Capacity	Low refrigerant charge or frosted coil.	<ol style="list-style-type: none"> 1. Check charge amount. See system charging section. 2. Evaporator coil frosted; check and replace subcooler control low-pressure switch if necessary.

Table 20— Cooling Service Analysis

PROBLEM	CAUSE	REMEDY
Compressor and Condenser Fan Will Not Start.	Power failure.	Call power company.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Defective thermostat, contactor, transformer, or control relay.	Replace component.
	Insufficient line voltage.	Determine cause and correct.
	Incorrect or faulty wiring.	Check wiring diagram and rewire correctly.
Compressor Will Not Start but Condenser Fan Runs.	Thermostat setting too high.	Lower thermostat setting below room temperature.
	Faulty wiring or loose connections in compressor circuit.	Check wiring and repair or replace.
	Compressor motor burned out, seized, or internal overload open.	Determine cause. Replace compressor.
	Defective overload.	Determine cause and replace.
	Compressor locked out	Determine cause for safety trip and reset lockout.
Compressor Cycles (other than normally satisfying thermostat).	One leg of 3-phase power dead.	Replace fuse or reset circuit breaker. Determine cause.
	Refrigerant overcharge or undercharge.	Recover refrigerant, evacuate system, and recharge to nameplate.
	Defective compressor.	Replace and determine cause.
	Insufficient line voltage.	Determine cause and correct.
	Blocked condenser.	Determine cause and correct.
	Defective overload.	Determine cause and replace.
	Defective thermostat.	Replace thermostat.
Compressor Operates Continuously.	Faulty condenser-fan motor.	Replace.
	Restriction in refrigerant system.	Locate restriction and remove.
	Dirty air filter.	Replace filter.
	Unit undersized for load.	Decrease load or increase unit size.
	Thermostat set too low.	Reset thermostat.
	Low refrigerant charge.	Locate leak, repair, and recharge.
Excessive Head Pressure.	Air in system.	Recover refrigerant, evacuate system, and recharge.
	Condenser coil dirty or restricted.	Clean coil or remove restriction.
	Dirty air filter.	Replace filter.
	Dirty condenser coil.	Clean coil.
	Refrigerant overcharged.	Recover excess refrigerant.
	Faulty TXV.	1. Check TXV bulb mounting and secure tightly to suction line. 2. Replace TXV if stuck open or closed.
Head Pressure Too Low.	Air in system.	Recover refrigerant, evacuate system, and recharge.
	Condenser air restricted or air short-cycling.	Determine cause and correct.
Excessive Suction Pressure.	Low refrigerant charge.	Check for leaks, repair, and recharge.
	Restriction in liquid tube.	Remove restriction.
Suction Pressure Too Low.	High heat load.	Check for source and eliminate.
	Faulty TXV.	1. Check TXV bulb mounting and secure tightly to suction line. 2. Replace TXV if stuck open or closed.
	Refrigerant overcharged.	Recover excess refrigerant.
Suction Pressure Too Low.	Dirty air filter.	Replace filter.
	Low refrigerant charge.	Check for leaks, repair, and recharge.
	Metering device or low side restricted.	Remove source of restriction.
	Faulty TXV.	1. Check TXV bulb mounting and secure tightly to suction line. 2. Replace TXV if stuck open or closed.
	Insufficient evaporator airflow.	Increase air quantity. Check filter and replace if necessary.
	Temperature too low in conditioned area.	Reset thermostat.
Field-installed filter drier restricted.	Replace.	

LEGEND

TXV — Thermostatic Expansion Valve

Table 21 — EconoMiSerIV Input/Output Logic

Demand Control Ventilation (DCV)	INPUTS				OUTPUTS				
	Enthalpy*		Y1	Y2	Compressor		N Terminal†		
	Outdoor	Return			Stage 1	Stage 2	Occupied	Unoccupied	
Below set (DCV LED Off)	High (Free Cooling LED Off)	Low	On	On	On	On	Minimum position		Closed
			On	Off	On	Off			
			Off	Off	Off	Off			
Above set (DCV LED On)	High (Free Cooling LED Off)	Low	On	On	On	On	Modulating†† (between min. position and DCV maximum)		Modulating†† (between closed and DCV maximum)
			On	Off	On	Off			
			Off	Off	Off	Off			
Below set (DCV LED Off)	Low (Free Cooling LED On)	High	On	On	On	Off	Modulating***		Modulating†††
			On	Off	Off	Off			
			Off	Off	Off	Off			

*For single enthalpy control, the module compares outdoor enthalpy to the ABCD set point.
 †Power at N terminal determines Occupied/Unoccupied setting: 24 Vac (Occupied), no power (Unoccupied).
 **Modulation is based on the supply air sensor signal.
 ††Modulation is based on the DCV signal.

***Modulation is based on the greater of DCV and supply air sensor signals, between minimum position and either maximum position (DCV) or fully open (supply air signal).
 †††Modulation is based on the greater of DCV and supply air sensor signals, between closed and either maximum position (DCV) or fully open (supply air signal).

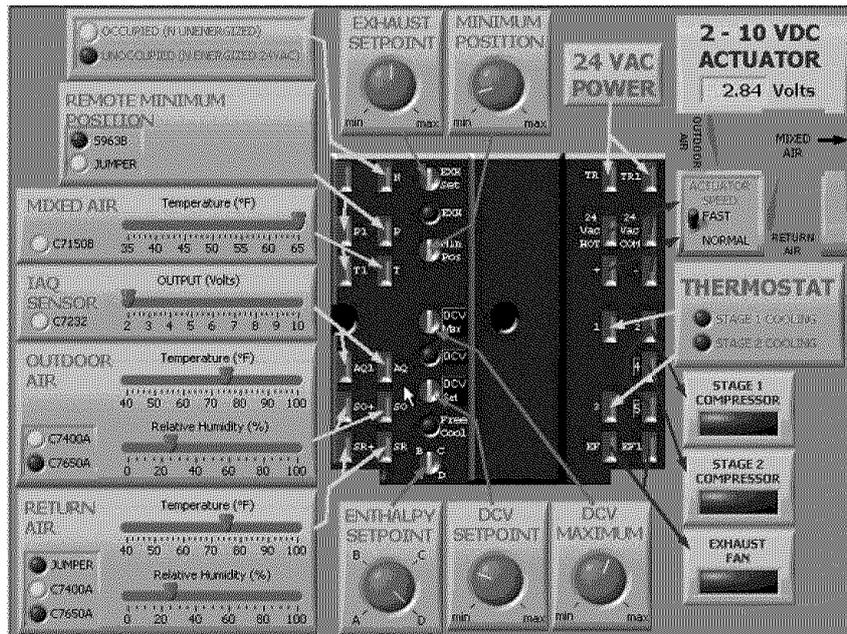


Fig. 50 — EconoMiSerIV Functional View

INDEX

- Air quantity limits 31
- Carrier Comfort Network® 12
- Changeover setpoint 21
- Charging chart, refrigerant 37
- Clearance 4, 5
- CO₂ sensor
 - Configuration 24
 - Settings 23, 25
- Compressor
 - Lockout 20
 - Lubrication 35
 - Mounting 28
 - Rotation 28
- Concentric duct 7
- Condensate drain
 - Cleaning 35
 - Location 7, 8
- Condenser coil 6
 - Cleaning 35
- Condenser fan 6
 - Adjustment 36
- Control circuit 37
 - Wiring 8
- Convenience outlet 10
- Crankcase heater 28, 37
- Demand control ventilation 24
 - Dehumidification 24
- Dimensions 2, 3, 5
- Ductwork 4
- EconoMi\$erIV 18-24
 - Control mode 21
 - Controller wiring 19
 - Damper movement 23
 - Demand ventilation control 24
 - Enthalpy sensor 22
 - Troubleshooting 41, 44
 - Usage 21
 - Wiring 19
- EconoMi\$er2 18-20
- Electrical connections 8
- Electrical data 9
- Electric heat 10
- Enthalpy changeover set points 22
- Evaporator coil 6
 - Cleaning 35
- Evaporator fan motor
 - Lubrication 35
 - Motor data 32
 - Mounting 36
 - Performance 29-31
 - Pulley adjustment 35, 36
 - Pulley setting 6, 32
 - Speed 6
- Filter
 - Cleaning 35
 - Size 6
- Filter drier 37
- Freeze protection thermostat 6, 37
- Heat anticipator settings 10
- High-pressure switch 6, 37
- Hinged access door 38
- Horizontal adapter roof curb 3
- Humidistat 26
- Indoor air quality sensor 12
- Low-pressure switch 6, 37
- Manual outdoor air damper 10
- MoistureMi\$er™ dehumidification package 25-27, 37, 42
- Motormaster® I control 11, 12
- Mounting
 - Compressor 28
 - Unit 4
- Non-fused disconnect 10
- Operating sequence 33, 34
 - Cooling 33
 - EconoMi\$erIV 33
 - EconoMi\$er2 with PremierLink control 33, 34
 - Heating 33
- Outdoor air hood 10, 11
- Outdoor air temperature sensor 12, 20
- Outdoor air inlet screens
 - Cleaning 35
 - Dimensions 6
- Physical data 6
- Power supply 8
 - Wiring 8
- PremierLink controls 12-16
- Pressure, drop
 - Electric heat 32
 - Economizer 32
 - MoistureMi\$er 32
- Pressure switches
 - High pressure 6
 - Low pressure 6
- Refrigerant
 - Charge 37
 - Type 6
- Refrigerant service ports 28
- Replacement parts 37
- Return air filter 6
- Return air temperature sensor 22
- Rigging unit 4
- Roof curb
 - Assembly 1
 - Dimensions 2
 - Leveling tolerances 2
 - Weight 6
- Safety considerations 1
- Service 35-40
- Start-up 28-34
- Start-up checklist CL-1
- Supply-air temperature sensor 12, 20
- Thermostat 8, 23
- Troubleshooting 41-44
- Weight
 - Corner 5
 - Economizer 6
 - Maximum 4
 - Unit 6
- Wind baffle 11
- Wiring
 - EconoMi\$erIV 19
 - EconoMi\$er2 20
 - Humidistat 26
 - Non-fused disconnect 10
 - Power connections 8
 - PremierLink 14
 - Thermostat 8
 - Unit 39, 40

SERVICE TRAINING

Packaged Service Training programs are an excellent way to increase your knowledge of the equipment discussed in this manual, including:

- Unit Familiarization
- Maintenance
- Installation Overview
- Operating Sequence

A large selection of product, theory, and skills programs are available, using popular video-based formats and materials. All include video and/or slides, plus companion book.

Classroom Service Training which includes “hands-on” experience with the products in our labs can mean increased confidence that really pays dividends in faster troubleshooting and fewer callbacks. Course descriptions and schedules are in our catalog.

CALL FOR FREE CATALOG 1-800-644-5544

Packaged Service Training Classroom Service Training

