

**Nokia Customer Care**

# ***Service Manual***

**RM-74 (NOKIA 6030)**  
**Mobile Terminal**  
*Part No: (9242678 (Issue 1))*

***Company Confidential***

**NOKIA**

**Amendment Record Sheet**

<b>Amendment No</b>	<b>Date</b>	<b>Inserted By</b>	<b>Comments</b>
Issue 1	06/2005	Gillis Rudh	

## Copyright

Copyright © 2005 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

## **IMPORTANT**

This document is intended for use by qualified service personnel only.

## Warnings and cautions

### Warnings

- IF THE DEVICE CAN BE INSTALLED IN A VEHICLE, CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/ MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
- THE PRODUCT MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, FOR EXAMPLE, PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
- OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.
- BEFORE MAKING ANY TEST CONNECTIONS, MAKE SURE YOU HAVE SWITCHED OFF ALL EQUIPMENT.

### Cautions

- Servicing and alignment must be undertaken by qualified personnel only.
  - Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
  - Ensure solder, wire, or foreign matter does not enter the telephone as damage may result.
  - Use only approved components as specified in the parts list.
  - Ensure all components, modules, screws and insulators are correctly re-fitted after servicing and alignment. Ensure all cables and wires are repositioned correctly.
- Use only approved components as specified in the parts list.
- Never test a mobile phone WCDMA transmitter with full Tx power, if there is no possibility to perform the measurements in a good performance RF-shielded room. Even low power WCDMA transmitters may disturb nearby WCDMA networks and cause problems to 3G cellular phone communication in a wide area.
  - During testing never activate the GSM or WCDMA transmitter without a proper antenna load, otherwise GSM or WCDMA PA may be damaged.

## **For your safety**

### **QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment.

### **ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries. Do not connect incompatible products.

### **CONNECTING TO OTHER DEVICES**

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

## Care and maintenance

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

## **ESD protection**

Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages **MUST NOT** be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

## Battery information

**Note:** A new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMh batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product). Do not attempt to discharge the battery by any other means.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.



## Company Policy

Our policy is of continuous development; details of all technical modifications will be included with service bulletins.

While every endeavour has been made to ensure the accuracy of this document, some errors may exist. If any errors are found by the reader, NOKIA MOBILE PHONES Business Group should be notified in writing/e-mail.

Please state:

- Title of the Document + Issue Number/Date of publication
- Latest Amendment Number (if applicable)
- Page(s) and/or Figure(s) in error

### **Please send to:**

NOKIA CORPORATION

Nokia Mobile Phones Business Group

Nokia Customer Care

PO Box 86

FIN-24101 SALO

Finland

E-mail: [Service.Manuals@nokia.com](mailto:Service.Manuals@nokia.com)

(This page left intentionally blank.)

## **NOKIA 6030 Service Manual Structure**

- 1 General information
- 2 Parts and layouts
- 3 Phoenix service SW
- 4 Service Tools
- 5 Disassembly and reassembly instructions
- 6 Baseband troubleshooting
- 7 RF troubleshooting
- 8 System module
- 9 Schematics

(This page left intentionally blank.)

# Nokia Customer Care

## 1 — General information

(This page left intentionally blank.)

## Table of Contents

Product selection.....	1-5
Display and keypad features.....	1-5
Features.....	1-5
Hardware features.....	1-5
Software features.....	1-5
UI features.....	1-6
Mobile enhancements.....	1-7
Technical specifications.....	1-7
General specifications.....	1-7
Battery endurance.....	1-8
Environmental conditions.....	1-8
Electrical characteristics.....	1-8

### List of Tables

Table 1 Power.....	1-7
Table 2 Car.....	1-7
Table 3 Audio.....	1-7
Table 4 Xpress-on™ covers.....	1-7
Table 5 Normal and extreme voltages.....	1-8
Table 6 Current consumption.....	1-9

### List of Figures

Figure 1 RM-74 product picture.....	1-5
-------------------------------------	-----

(This page left intentionally blank.)



## ■ Product selection

The RM-74 is the EU version of the telephone with a dual band transceiver unit designed for the GSM900 and GSM1800 networks.



Figure 1 RM-74 product picture

## ■ Display and keypad features

- High resolution CSTN display (128x128 pixels) with 65,536 colors
- 4UI-style, 5-way navigation key including selection key,
- Hardtop keymat

## ■ Features

### Hardware features

- GSM E900/1800
- AMR/HR/FR/EFR codecs
- Internal antenna
- Charger plug
- Headset connector
- Mono FM Radio
- GPRS: Class B, multislots class 6
- Internal vibrator
- User changeable front- and back covers and top cap
- SIM (1.8 and 3.0 V)

### Software features

- OS: ISA
- UI Style: S40
- MIDP 2.0 Java, with latest APIs
- Browser: XHTML over WAP stack (WAP 1.2.1 compliant)
- MMS 1.2

- 16 polyphonic ringing tones
- OTA downloading - ringing tones, wallpapers, operator logos, business cards, settings

## UI features

Messaging	<ul style="list-style-type: none"> <li>• Multimedia messaging: send and receive messages containing text, an audio clip, and an image to other compatible devices (maximum message size: up to 100kB)</li> <li>• SMS messaging</li> <li>• Predictive text input</li> <li>• Asia-Pacific: English, Chinese Simplified, Chinese Traditional, Thai, Philipino, Vietnamese, Bahasa Indonesia, Bahasa Malaysia, Hindi</li> <li>• Europe and Africa: Danish, Dutch, English, French, Finnish, German, Icelandic, Italian, Portugese, Spanish, Swedish, Norwegian, Turkish, Greek, Bulgarian, Ukranian, Hebrew, Arabic, Slovakian, Czech, Hungarian, Polish, Romanian, Serbian, Croatian, Slovenian, Russian, Estonian, Latvian, Lithuanian</li> <li>• Non-predictive text input: Urdu, Farsi, Zulu, Xhosa, Sesotho, Swahili, Merathi, Tamil, Gujarati, Bengali</li> </ul>
Memory functions	<ul style="list-style-type: none"> <li>• Phone book (up to 300 entries)</li> <li>• Calendar notes (up to 500 entries)</li> </ul>
Connectivity	<ul style="list-style-type: none"> <li>• Plug and play connector</li> </ul>
Java™ applications	<ul style="list-style-type: none"> <li>• Java™ MIDP 2.0</li> <li>• Over-the-air download of Java™-based applications and games</li> </ul>
Browsing	<ul style="list-style-type: none"> <li>• Integrated XHTML browser over WAP</li> <li>• OMA DRM for content protection</li> </ul>
Data transfer	<ul style="list-style-type: none"> <li>• GPRS, class 6 (up to 40 kbps)</li> <li>• WAP 2.0</li> </ul>
Call management	<ul style="list-style-type: none"> <li>• Speed dialing: up to 8 names (keys 2-9)</li> <li>• Last number redial from dialed calls list (dial key brings out the dialed calls list)</li> <li>• Automatic redial (max 10 attempts)</li> <li>• Automatic answer (works with headset or car kit only)</li> <li>• Call waiting, call hold, call divert, and call timer</li> <li>• Automatic and manual network selection</li> <li>• Vibrating alert</li> </ul>
Voice features	<ul style="list-style-type: none"> <li>• Integrated handsfree speaker</li> </ul>
Personalise	<ul style="list-style-type: none"> <li>• Graphics, icons, animations, logos</li> <li>• Games: possibility to download new games</li> <li>• Ringing tones: Polyphonic tones</li> <li>• Themes: possibility to download new themes</li> </ul>
Phone features	<ul style="list-style-type: none"> <li>• Phone Features</li> <li>• Alarm clock Calendar</li> </ul>

## Mobile enhancements

**Table 1 Power**

Type	Name
BL-5C	Battery 900 mAh Li-Ion
AC-1	Retractable charger
ACP-12	Travel charger
LCH-12	Mobile charger

**Table 2 Car**

Type	Name
BHF-2	Headrest hands free
CK-10	Nokia car kit
HF-8	Nokia plug-in car handsfreet
MP-2	Microphone
CR-39	Nokia universal holder

**Table 3 Audio**

Type	Name
HDB-5	Boom Headset
HDC-5	Headset
HDE-2	Headset
HS-7	Dual Headset
HDA-9	TTY Adapter

**Table 4 Xpress-on™ covers**

Type	Name
CC 232D	EMEA colors: Gray, Blue, Orange, except APAC, which only have gray and blue.

## ■ Technical specifications

### General specifications

Unit	Dimension (mm)	Weight (g)	Volume (cc)
Transceiver with BL-5C 900mAh Li-Ion battery pack	101x44x18	90	75

## Battery endurance

### Nokia measurements of operation times in GSM900/1800

Talk time	
Battery: BL-5C 900mAh	Up to 180 min

Standby time	
Battery: BL-5C 900mAh	Up to 300 min

**Note:** Variation in operation times will occur depending on SIM card, network settings and usage. Talk time is increased by up to 30% if half rate is active and reduced by 5% if enhanced full rate is active.

## Environmental conditions

Environmental condition	Ambient temperature	Notes
Normal operation	-15 °C ... +55 °C	Specifications fulfilled
Reduced performance	-30 ...15 °C and +55°C ... +70 °C	Operational only for short periods
Intermittent or no operation	-40 °C ... -30 °C and +70 °C ... +85°C	Operation not guaranteed but an attempt to operate will not damage the phone
No operation or storage	<-40 °C and >+85 °C	No storage. An attempt to operate may cause permanent damage
Charging allowed	-15 °C ... +55 °C	
Long term storage conditions	0 °C ... +85 °C	
Humidity and water resistance		Relative humidity range is 5 to 95%. Condensed or dripping water may cause intermittent malfunctions. Protection against dripping water has to be implemented in (enclosure) mechanics. Continuous dampness will cause permanent damage to the module.

## Electrical characteristics

**Table 5 Normal and extreme voltages**

Voltage	Voltage (V)	Condition
General conditions		
Nominal voltage	3.90V	a
Lower extreme voltage	3.30V	b

Voltage	Voltage (V)	Condition
Higher extreme voltage	4.30V	c
HW shutdown voltages		
Vmstr+	2.1V ± 0,1V	Off to on
Vmstr-	1.9V ± 0,1V	On to off
SW shutdown voltages		
SW shutdown	3. 1V	In call
SW shutdown	3. 2V	In idle
Min operating voltage		
Vcoff+	3. 1V ± 0,1V	Off to on
Vcoff-	2. 8V ± 0,1V	On to off
HW reset demands		
Min	1. 0V	d
Max	--	

- a. The nominal voltage is defined as being 15% higher than the lower extreme voltage. TA will test with this nominal voltage at an 85% range ( $0.85 \times 3.9V \approx 3.3V$ ).
- b. This limit is set to be above SW shutdown limit in TA.
- c. During fast charging of an empty battery, this voltage might exceed this value. Voltages between 4.20 and 4.60 might appear for a short while.
- d. The minimum battery cell voltage required for the reset circuitry to turn on. This is not confirmed by measures at pt.

**Table 6 Current consumption**

Condition	Min	Typical	Max	Unit
Call (MoU)		208		mA
(E)GSM 900		188		
GSM 1800		168		
GSM 1900				
Idle (MoU)		2.72		
Power off	150		250	mA

(This page left intentionally blank.)

## 2 — Parts and layouts

(This page left intentionally blank.)



## Table of Contents

Exploded view.....	2-5
Mechanical parts list.....	2-6
Spare parts overview.....	2-7
SWAP phones.....	2-8
Component parts list.....	2-8
Component layouts.....	2-15

### List of Tables

Table 7 Mechanical parts list.....	2-6
Table 8 SWAP phones for RM-74.....	2-8
Table 9 Component parts.....	2-8

### List of Figures

Figure 2 Exploded view.....	2-5
Figure 3 Spare parts overview.....	2-7
Figure 4 Component layout, RM-74, 1mf_51a, bottom.....	2-16
Figure 5 Component layout, RM-74, 1mf_51a, top.....	2-16

(This page left intentionally blank.)

■ Exploded view

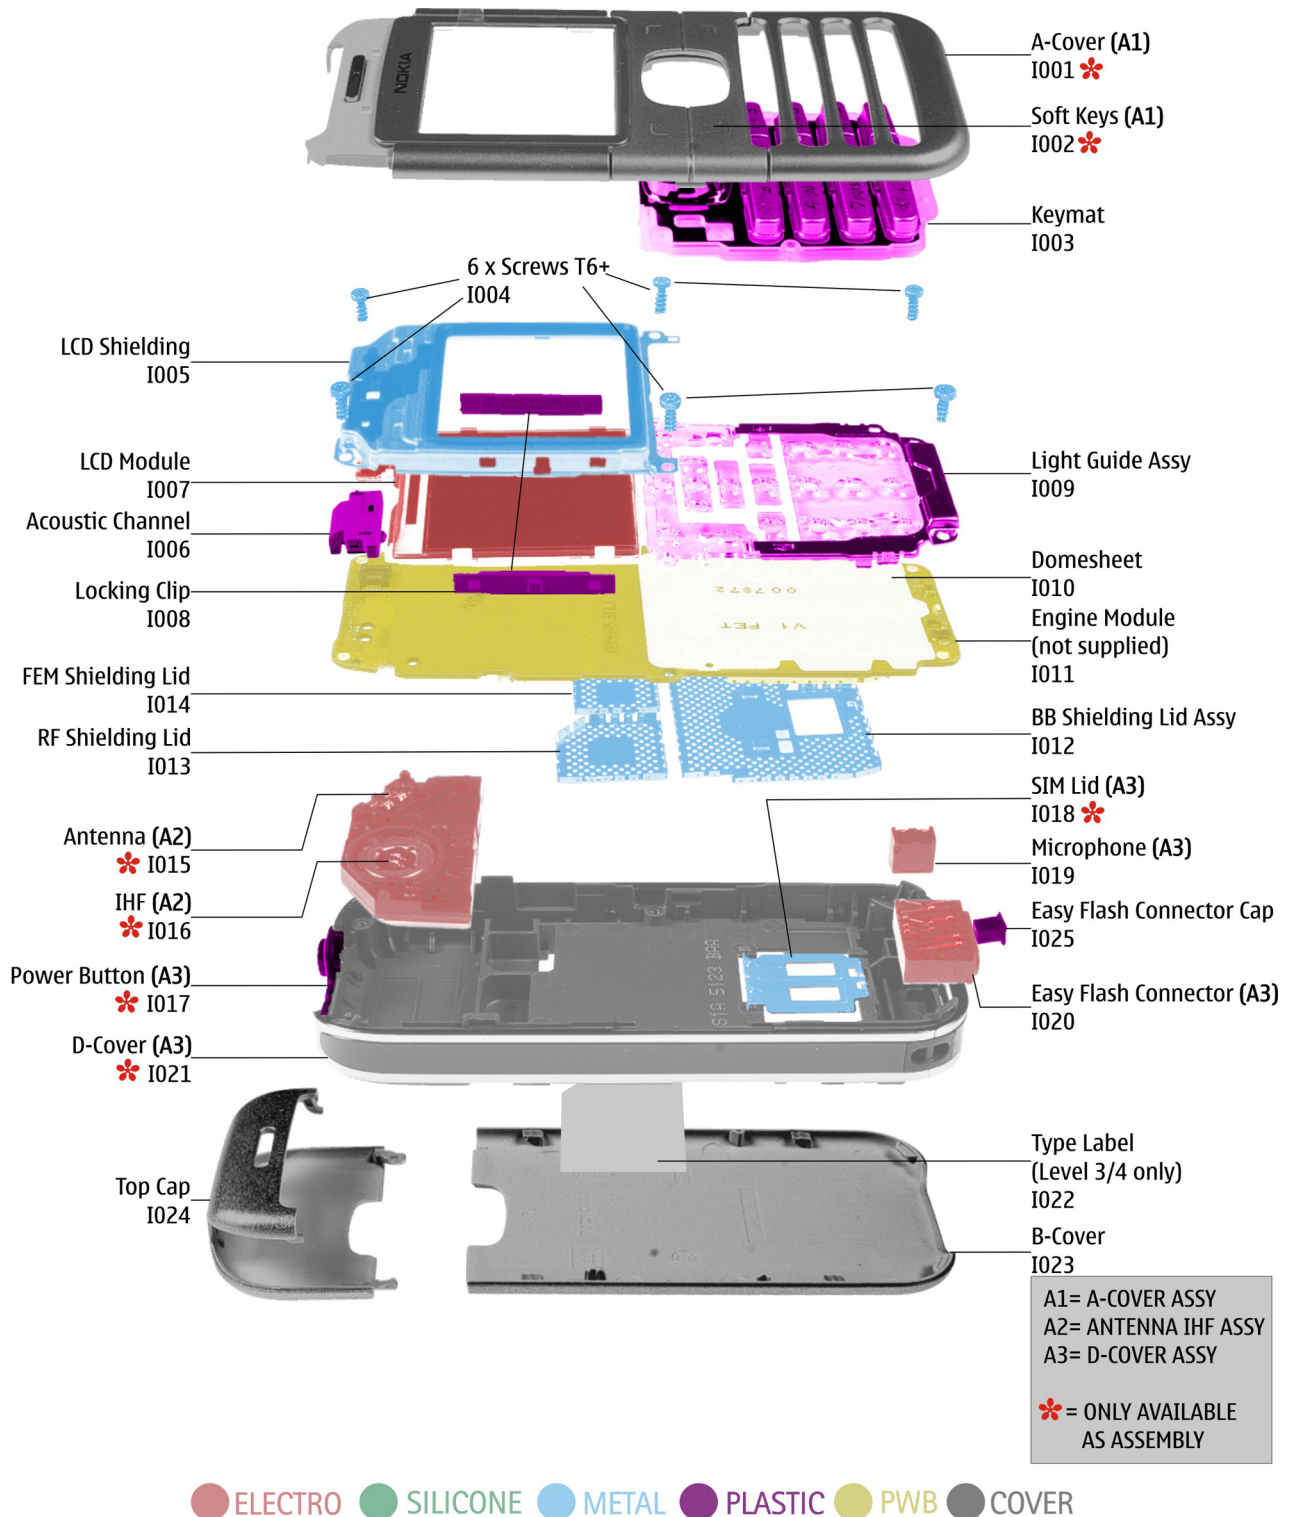


Figure 2 Exploded view

■ Mechanical parts list

**Table 7 Mechanical parts list**

ITEM/ CIRCUIT REF.	QTY	PART NAME
* = not available as spare part		
I001*	1	A-cover
I002*	1	Soft Keys
I003	1	KEYMAT
I004	6	Screws T6+
I005	1	LCD shielding
I006	1	Acoustic channel
I007	1	LCD module
I008	1	Locking clip
I009	1	Light guide assembly
I010	1	Domesheet
I011	1	Engine module (not supplied)
I012	1	BB shielding lid assembly
I013	1	RF shielding lid
I014	1	FEM shielding lid
I015*	1	Antenna (A2)
I016*	1	IHF (A2)
I017*	1	Power button (A3)
I018*	1	SIM lid (A3)
I019	4	Microphone
I020	1	Easy flash connector (A3)
I021*	1	D-cover (A3)
I022	1	Type label
I023	1	B-cover
I024	1	Top cap
I025	1	Easy flash connector cap

■ Spare parts overview

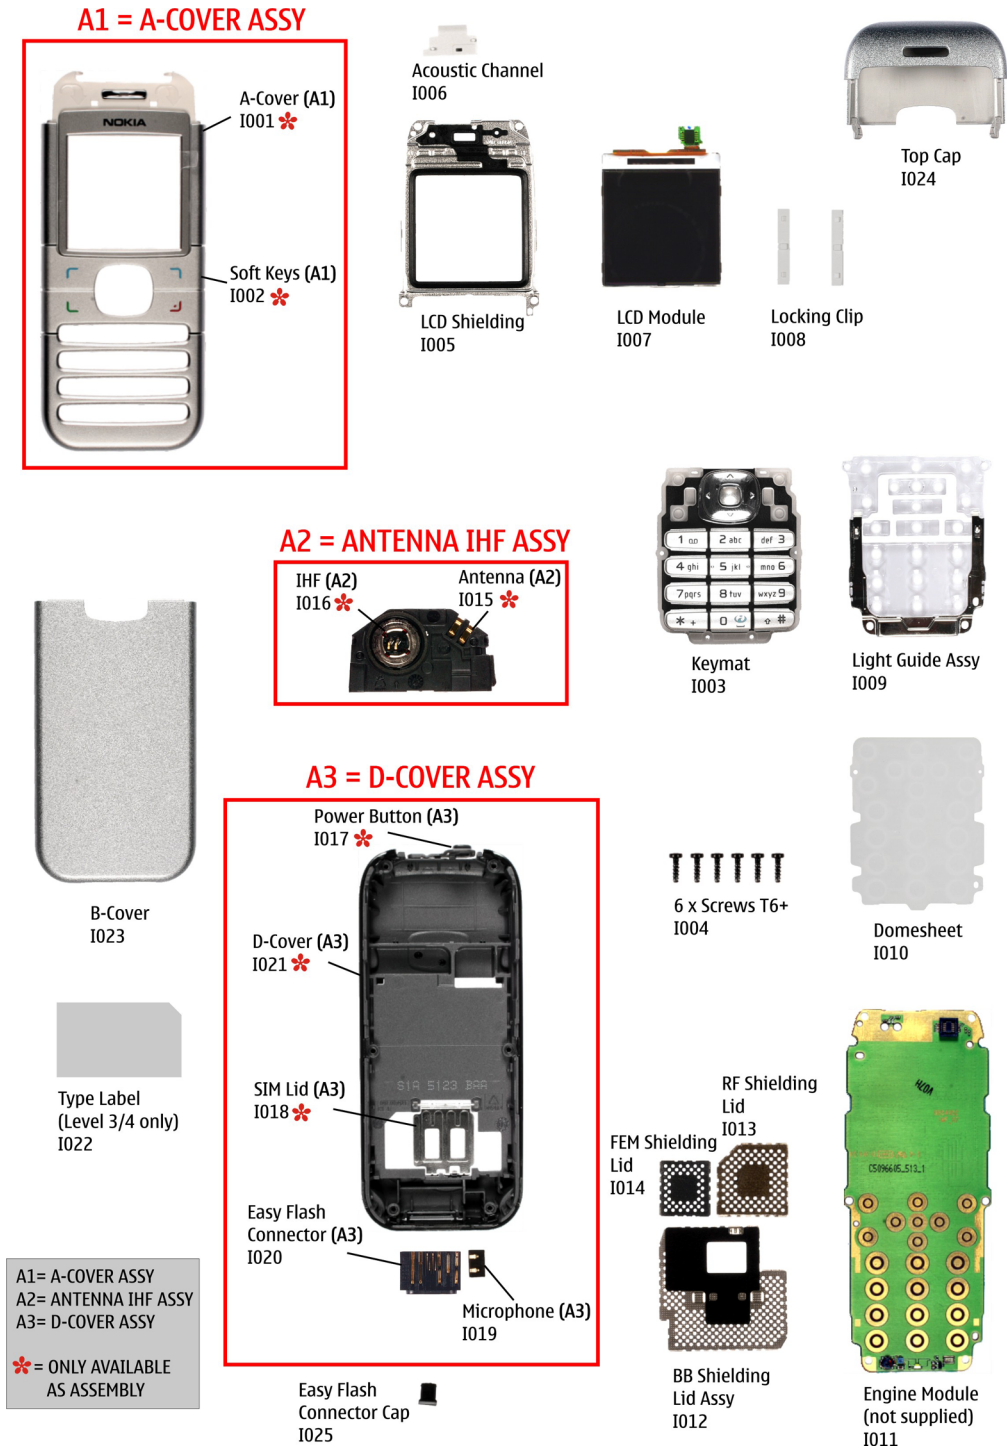


Figure 3 Spare parts overview

■ **SWAP phones**

**Table 8 SWAP phones for RM-74**

<b>SWAP phones for RM-74</b>
RM-74 SWAP ENGINE EURO-C
RM-74 SWAP ENGINE EURO-C FRANCE
RM-74 EURO-C TURKEY
RM-74 SWAP ENGINE EURO-K
RM-74 SWAP ENGINE UKR
RM-74 SWAP ENGINE EURO-L SOUTH AFRICA
RM-74 SWAP ENGINE APAC-S, Singapore
RM-74 SWAP ENGINE APAC-T, Philippines

■ **Component parts list**

**Table 9 Component parts**

<b>Item ref</b>	<b>Name</b>	<b>Side</b>	<b>X/Y</b>		<b>Value</b>
A7001	BB SHIELDING ASSY	Top	0	5	~
A7002	RF ASIC SHIELDING ASSY	Top	J	6	~
A7003	FEM SHIELDING ASSY	Top	J	3	~
B2200	CRYSTAL 32.768KHZ+-20PPM 12.5PF	Top	0	7	32.768KHz
B7600	CRYSTAL 26.0MHZ+-10PPM 15.5PF	Top	K	5	26MHz
C2000	CHIPCAP NP0 27P J 50V 0402	Top	G	3	27p
C2001	CHIPCAP NP0 10P J 50V 0402	Top	G	2	10p
C2002	CHIPTCAP 150U M 10V 6X3.2X1.5	Top	G	4	150u_10V
C2003	CHIPCAP NP0 22P J 50V 0402	Top	S	5	22p
C2004	CHIPCAP NP0 22P J 50V 0402	Top	R	5	22p
C2005	CHIPCAP NP0 22P J 50V 0402	Top	R	5	22p
C2006	CHIPCAP NP0 22P J 50V 0402	Top	R	5	22p
C2007	CHIPCAP Y5V 100N Z 25V 0603	Top	S	7	100n
C2008	CHIPCAP X7R 10N K 16V 0402	Top	S	4	10n
C2009	CHIPCAP X7R 10N K 16V 0402	Top	R	4	10n
C2010	CHIPCAP X7R 10N K 16V 0402	Top	R	5	10n
C2011	CHIPCAP X5R 1U K 6V3 0603	Top	S	3	1u0
C2012	CHIPCAP X7R 10N K 16V 0402	Top	R	4	10n
C2013	CHIPCAP X7R 1N0 K 50V 0402	Top			
C2017	CHIPCAP NP0 33P J 50V 0402	Top	G	5	33p

Item ref	Name	Side	X/Y		Value
C2151	CHIP ARRAY X5R 2X33N K 10V 0405	Top	N	7	2x33n
C2152	CHIPCAP NP0 10P J 50V 0402	Top	S	3	10p
C2153	CHIPCAP NP0 47P J 50V 0402	Bottom	B	6	47p
C2154	CHIPCAP NP0 47P J 50V 0402	Bottom	B	7	47p
C2155	CHIP ARRAY X5R 2X33N K 10V 0405	Top	N	7	2x33n
C2157	CHIPCAP NP0 100P J 50V 0402	Top	O	8	100p
C2159	CHIPCAP X7R 15N K 16V 0402	Top	N	7	8n2
C2161	CHIPCAP X5R 100N M 16V 0402	Top	N	8	100n
C2164	CHIP ARRAY NP0 2X27P K 25V 0405	Top	N	6	2x27p
C2165	CHIP ARRAY X5R 2X1N K 16V 0405	Top	N	6	2x27p
C2171	CHIPCAP X5R 2U2 K 6V3 0603	Top	N	8	2u2
C2180	CHIPCAP X7R 15N K 16V 0402	Top	N	7	8n2
C2181	CHIPCAP X5R 100N K 10V 0402	Top	M	7	100n
C2182	CHIPCAP X5R 1U K 6V3 0603	Top	M	7	1u0
C2200	CHIPCAP X5R 1U K 6V3 0603	Top	O	7	1u0
C2202	CHIPCAP X5R 1U K 6V3 0603	Top	O	7	1u0
C2203	CHIPCAP X5R 1U K 6V3 0603	Top	O	7	1u0
C2204	CHIPCAP X5R 1U K 6V3 0603	Top	P	5	1u0
C2205	CHIPCAP X5R 1U K 6V3 0603	Top	P	5	1u0
C2208	CHIPCAP X5R 1U K 6V3 0603	Top	P	4	1u0
C2220	CHIPCAP X7R 10N K 16V 0402	Top	M	7	10n
C2222	CHIPCAP X5R 1U K 6V3 0603	Top	P	7	1u0
C2223	CHIPCAP X5R 1U K 6V3 0603	Top	O	7	1u0
C2225	CHIPCAP X5R 1U K 6V3 0603	Top	M	6	1u0
C2226	CHIPCAP X5R 1U K 6V3 0603	Top	P	7	1u0
C2227	CHIPCAP X5R 1U K 6V3 0603	Top	M	6	1u0
C2230	CHIPCAP X5R 1U K 6V3 0603	Top	O	7	1u0
C2233	CHIPCAP X5R 1U K 6V3 0603	Top	O	7	1u0
C2235	CHIPCAP X5R 1U K 6V3 0603	Top	M	7	1u0
C2236	CHIPCAP X5R 100N K 10V 0402	Top	M	5	100n
C2237	CHIPCAP X5R 100N K 10V 0402	Top	M	5	100n
C2239	CHIPCAP X5R 100N K 10V 0402	Top	P	5	100n
C2240	CHIPCAP X7R 10N K 16V 0402	Top	M	6	10n
C2241	CHIPCAP X7R 1N0 K 50V 0402	Top	M	6	1n0
C2242	CHIPCAP X7R 1N0 K 50V 0402	Top	M	6	1n0

Item ref	Name	Side	X/Y		Value
C2261	CHIPCAP X5R 4U7 K 10V 0805	Top	P	6	4u7
C2262	CHIPCAP X5R 100N K 10V 0402	Top	Q	8	100n
C2263	CHIPCAP X5R 100N K 10V 0402	Top	R	8	100n
C2287	CHIPCAP X5R 100N K 10V 0402	Top	M	5	100n
C2330	CHIPCAP NP0 33P J 50V 0402	Top	G	2	33p
C2331	CHIPCAP X5R 1U K 6V3 0603	Top	P	5	1u0
C2332	CHIPCAP X5R 4U7 K 10V 0805	Top	P	5	4u7
C2400	CHIPCAP X5R 1U K 16V 0603	Bottom	U	4	1u0
C2401	CHIPCAP X5R 1U K 6V3 0603	Bottom	U	6	1u0
C2402	CHIPCAP X5R 100N K 10V 0402	Bottom	C	2	100n
C2403	CHIPCAP X5R 100N K 10V 0402	Bottom	C	2	100n
C2404	CHIPCAP NP0 22P J 50V 0402	Top	C	4	22p
C2405	CHIPCAP NP0 47P J 50V 0402	Top	P	5	47p
C2700	CHIPCAP X5R 100N K 10V 0402	Top	R	4	100n
C2880	CHIPCAP X7R 10N K 16V 0402	Top	O	4	10n
C2881	CHIPCAP X5R 100N K 10V 0402	Top	P	3	100n
C2882	CHIPCAP X7R 10N K 16V 0402	Top	P	3	10n
C2883	CHIPCAP X7R 10N K 16V 0402	Top	O	2	10n
C2884	CHIPCAP X5R 100N K 10V 0402	Top	O	2	100n
C2885	CHIPCAP X7R 10N K 16V 0402	Top	P	3	10n
C2886	CHIPCAP X5R 100N K 10V 0402	Top	P	3	100n
C2887	CHIPCAP X7R 10N K 16V 0402	Top	O	2	10n
C2900	CHIPCAP X7R 1N0 K 50V 0402	Top	K	7	1n0
C3030	CHIPCAP X7R 10N K 16V 0402	Top	N	2	10n
C3031	CHIPCAP X5R 100N K 10V 0402	Top	N	2	100n
C3032	CHIPCAP X5R 100N M 16V 0402	Top	N	2	100n
C6157	CHIPCAP X7R 10N K 16V 0402	Top	R	6	10n
C6158	CHIPCAP X5R 100N K 10V 0402	Top	R	6	100n
C6159	CHIPCAP X7R 33N K 10V 0402	Top	Q	7	33n
C6162	CHIPCAP X7R 33N K 10V 0402	Top	Q	6	33n
C6163	CHIPCAP X7R 33N K 10V 0402	Top	R	6	33n
C6165	CHIPCAP X7R 33N K 10V 0402	Top	Q	8	33n
C6170	CHIPCAP X7R 10N K 16V 0402	Top	R	7	10n
C6176	CHIPCAP NP0 100P J 50V 0402	Top	R	7	100p
C6178	CHIPCAP NP0 27P J 50V 0402	Top	R	7	27p



Item ref	Name	Side	X/Y		Value
C6179	CHIPCAP NP0 47P J 50V 0402	Top	R	7	47p
C7604	CHIPCAP NP0 1P0 C 50V 0402	Top	I	6	1p0
C7607	CHIPCAP NP0 1P2 C 50V 0402	Top	I	7	1p2
C7610	CHIPCAP NP0 10P J 50V 0402	Top	I	8	10p
C7611	CHIPCAP NP0 10P J 50V 0402	Top	I	7	10p
C7612	CHIPCAP NP0 10P J 50V 0402	Top	I	7	10p
C7613	CHIPCAP X5R 1U K 6V3 0402	Top	I	8	1u0
C7614	CHIPCAP NP0 4P7 C 50V 0402	Top	J	7	4p7
C7620	CHIPCAP X5R 2U2 K 6V3 0603	Top	K	7	2u2
C7623	CHIPCAP NP0 22P J 50V 0402	Top	J	7	22p
C7624	CHIPCAP X5R 100N K 10V 0402	Top	J	8	100n
C7625	CHIPCAP NP0 22P J 50V 0402	Top	J	6	22p
C7627	CHIPCAP NP0 56P J 50V 0402	Top	J	5	56p
C7628	CHIPCAP NP0 56P J 50V 0402	Top	J	5	56p
C7630	CHIPCAP NP0 22P J 50V 0402	Top	K	6	22p
C7631	CHIPCAP NP0 0P5 C 50V 0402	Top	D	3	0p5
C7634	CHIPCAP X5R 100N K 10V 0402	Top	I	7	100n
C7635	CHIPCAP X5R 100N K 10V 0402	Top	K	6	100n
C7636	CHIPCAP NP0 1P8 C 50V 0402	Top	K	6	1p0
C7637	CHIPCAP X7R 1N0 J 50V 0402	Top	K	2	1n0
C7638	CHIPCAP NP0 33P J 50V 0402	Top	K	2	33p
C7639	CHIPCAP NP0 270P J 50V 0402	Top	J	7	270p
C7641	CHIPCAP NP0 270P J 50V 0402	Top	J	7	270p
C7643	CHIPCAP X5R 100N K 10V 0402	Top	K	6	100n
C7644	CHIPCAP X7R 560P J 50V 0402	Top	J	7	560p
C7645	CHIPCAP X7R 560P J 50V 0402	Top	I	7	560p
C7655	CHIPCAP NP0 10P J 50V 0402	Top	I	5	10p
C7656	CHIPCAP X5R 100N K 10V 0402	Top	J	5	100n
C7657	CHIPCAP NP0 22P J 50V 0402	Top	K	7	22p
C7658	CHIPCAP NP0 22P J 50V 0402	Top	J	7	22p
C7659	CHIPCAP NP0 22P J 50V 0402	Top	I	6	22p
C7668	CHIPCAP NP0 22P J 50V 0402	Top	I	6	22p
C7669	CHIPCAP NP0 3N9 J 25V 0805	Top	K	8	3n9
C7700	CHIPCAP NP0 33P J 50V 0402	Top	K	3	33p
C7701	CHIPCAP NP0 33P J 50V 0402	Top	K	3	33p

Item ref	Name	Side	X/Y		Value
C7702	CHIPCAP NP0 33P J 50V 0402	Top	K	4	33p
C7711	CHIPCAP X5R 2U2 K 10V 0805	Top	I	2	2u2
C7712	CHIPCAP NP0 15P J 50V 0402	Top	I	4	15p
C7713	CHIPCAP NP0 27P J 50V 0402	Top	I	2	27p
C7714	CHIPCAP NP0 27P J 50V 0402	Top	K	3	27p
C7720	CHIPCAP NP0 33P J 50V 0402	Top	K	4	33p
C7725	CHIPCAP NP0 120P J 50V 0402	Top	K	3	120p
C7726	CHIPCAP NP0 22P J 50V 0402	Top	J	2	22p
C7727	CHIPCAP NP0 10P J 50V 0402	Top	K	2	10p
C7728	CHIPCAP NP0 0P5 C 50V 0402	Top	K	2	0p5
D2200	UEMCLITE V2.2 WD ENA LEADFREE TFB	Top	0	5	~
D2800	UPP4M v3 F761522 10x10 uBGA173	Top	0	3	~
D3000	COMBO 128M NOR + 16M PSRAM TFBGA4	Top	M	3	8Mx16/1Mx16
F2000	SM FUSE FF 2A 32V 0402	Top	T	7	2.0A
H2400	SM CONN 2X5F P0.5 PWB/PWB	Bottom	C	3	~
L2000	FERR.BEAD 0R03 42R/100MHZ 3A 0805	Top	T	7	42R/100MHZ
L2001	CHIP BEAD ARRAY 2X1000R 0405	Top	R	3	2x1000R/100MHZ
L2002	CHIP BEAD ARRAY 2X1000R 0405	Top	R	4	2x1000R/100MHZ
L2005	CHIP COIL 68NH J Q12/100MHZ 0603	Top	R	6	68nH
L2170	FERRITE BEAD 0R5 600R/100MHZ 0603	Top	S	3	600R/100MHZ
L2180	FERR.BEAD 220R/100M 2A 0R05 0603	Top	M	7	220R/100MHZ
L2181	FERR.BEAD 220R/100M 2A 0R05 0603	Top	M	7	220R/100MHZ
L2182	CHIP COIL 33N J Q23/800MHZ 0402	Bottom	B	6	33nH
L2183	CHIP COIL 33N J Q23/800MHZ 0402	Bottom	B	6	33nH
L2400	CHOKE 22U M 0.33A 1R5 3.3X3.3X1.3	Bottom	U	6	22uH
L6156	CHIP COIL 47N G Q38/200MHZ 0603	Top	Q	6	47nH
L6176	CHIP COIL 120N J Q32/150MHZ 0603	Top	R	7	120nH
L7602	CHIP COIL 10N J Q30/800MHZ 0402	Top	I	7	10nH
L7603	CHIP COIL 10N J Q30/800MHZ 0402	Top	I	7	10nH
L7604	CHIP COIL 2N2 +-0N3 Q30/800M 0402	Top	I	6	2n2H
L7605	CHIP COIL 2N2 +-0N3 Q30/800M 0402	Top	I	6	2n2H
M2000	SMD VIBRA MOTOR 1.3V 90MA 9000RPM	Top	G	6	~
N2150	PW AMP TPA2010D1YZF 250kHz CSP9	Top	M	7	~
N2160	TI Analog Switch TS5A3159DCKR	Top	L	7	~
N2161	TI Analog Switch TS5A3159DCKR	Top	L	7	~

Item ref	Name	Side	X/Y		Value
N2400	DC/DC CONV TK65600 USMD8	Bottom	T	6	~
N6156	FM RECEIVER TEA5761UK N3D (Ti) CS	Top	Q	7	~
N7600	HUGIN+ PMB3258V1.1 B9C PGVQFN48-4	Top	J	7	~
N7700	FEM RF3282E5.1 2B TX/RX (900/1800	Top	J	3	~
R2000	CHIP VARISTOR VWM5.6V VC15.5V 040	Top	G	3	5/50V
R2001	NTC RES 0W1 47K J B 4050+-3% 0402	Top	Q	3	47k
R2002	CHIPRES 0W06 100R J 0402	Top	R	5	100R
R2003	CHIPRES 0W06 100R J 0402	Top	R	5	100R
R2004	CHIPRES 0W06 100R J 0402	Top	R	5	100R
R2005	CHIPRES 0W06 100R J 0402	Top	S	5	100R
R2006	RES VARISTOR 14/350V 3pF 0402	Top	R	5	5/50V
R2007	CHIP VARISTOR VWM14V VC50V 0402	Top	R	4	14V/50V
R2008	CHIP VARISTOR VWM14V VC50V 0402	Top	S	4	14V/50V
R2009	CHIP VARISTOR VWM14V VC50V 0402	Top	R	4	14V/50V
R2010	CHIPRES 0W06 100K J 0402	Top	S	3	100k
R2011	RES NETWORK 0W06 2X10R J 0404	Top	R	4	2x10R
R2013	CHIP VARISTOR VWM5.6V VC15.5V 040	Top	R	5	5.6V/15V/0.05J
R2020	ASIP 4XESD *** PB-FREE *** BGA5	Top	R	5	~
R2027	CHIPRES 0W06 10K J 0402	Top	R	5	10k
R2068	RES NETWORK 0W03 4X22R J 0804	Top	S	2	4x22R
R2069	CHIPRES 0W06 1K0 J 0402	Top	S	2	1k0
R2070	CHIP VARISTOR VWM5.6V VC15.5V 040	Top	S	2	5.6V/15V/0.05J
R2150	RES NETWORK 0W06 2X1K0 J 0404	Top	N	7	2x1k0
R2151	CHIPRES 0W06 10R J 0402	Top	M	7	10R
R2152	CHIPRES 0W06 10K J 0402	Top	N	7	10k
R2153	RES NETWORK 0W06 2X2K2 J 0404	Top	N	7	2x2k2
R2154	RES NETWORK 0W06 2X2K2 J 0404	Top	N	7	2x2k2
R2155	CHIPRES 0W06 10R J 0402	Top	L	6	10R
R2156	CHIPRES 0W06 2K2 J 0402	Top	O	7	2k2
R2158	CHIPRES 0W06 18K J 0402	Top	N	7	39k
R2159	CHIPRES 0W06 18K J 0402	Top	N	7	39k
R2160	CHIPRES 0W06 100K J 0402	Top	L	6	100k
R2171	CHIPRES 0W06 220R J 0402	Top	N	8	220R
R2200	CHIPRES 0W25 0R22 J 0805	Top	P	6	0R22
R2202	CHIPRES 0W06 100K J 0402	Top	M	7	100k

Item ref	Name	Side	X/Y		Value
R2203	CHIPRES 0W06 100K J 0402	Top	M	7	100k
R2204	CHIPRES 0W06 100K J 0402	Top	M	6	100k
R2205	RES NETWORK 0W06 2X10K J 0404	Top	M	6	2x10k
R2206	CHIPRES 0W06 100K J 0402	Top	M	7	100k
R2207	CHIPRES 0W06 1K0 J 0402	Top	L	4	1k0
R2400	CHIPRES 0W06 33R J 0402	Bottom	U	5	33R
R2406	CHIPRES 0W06 220R J 0402	Top	O	2	220R
R2407	CHIPRES 0W06 220R J 0402	Top	P	2	220R
R2408	CHIPRES 0W06 220R J 0402	Top	P	2	220R
R2409	CHIPRES 0W06 10K J 0402	Bottom	T	4	10k
R2410	CHIPRES 0W06 27K J 0402	Top	C	4	27k
R2700	ASIP SIM INTERFACE **low cap** BG	Top	P	4	~
R2900	CHIPRES 0W06 330R J 0402	Top	K	7	330R
R3030	CHIPRES 0W06 4K7 J 0402	Top	O	2	4k7
R6110	CHIPRES 0W06 1K0 J 0402	Top	Q	8	1k0
R6156	CHIPRES JUMPER 0R0 0402	Top	Q	7	0R
R6159	CHIPRES 0W06 10K J 0402	Top	R	6	10k
R6160	CHIPRES 0W06 100K J 0402	Top	R	6	100k
R6161	CHIPRES JUMPER 0R0 0402	Top	R	7	0R
R6163	CHIPRES JUMPER 0R0 0402	Top	Q	6	0R
R6170	CHIPRES JUMPER 0R0 0402	Top	R	8	0R
R7605	CHIPRES 0W06 22R J 0402	Top	K	7	22R
R7606	CHIPRES JUMPER 0R0 0402	Top			
R7607	CHIPRES JUMPER 0R0 0402	Top			
R7609	CHIPRES 0W06 12K F 0402	Top	K	6	12k
R7610	RES NETWORK 0W06 2X5K6 J 0404	Top	M	5	2x5k6
R7611	RES NETWORK 0W06 2X5K6 J 0404	Top	M	5	2x5k6
R7615	CHIPRES 0W06 100R J 0402	Top	H	8	100R
R7616	CHIPRES 0W06 100R J 0402	Top	H	7	100R
R7617	CHIPRES 0W06 100R J 0402	Top	H	7	100R
R7619	CHIPRES 0W06 3K3 J 0402	Top	J	8	3k3
R7630	CHIPRES 0W06 100K J 0402	Top	K	6	100k
R7631	CHIPRES 0W06 18K J 0402	Top	K	7	18k
R7632	CHIPRES 0W06 39R J 0402	Top	K	6	39R
R7633	NTC RES 0W1 47K J B 4050+-3% 0402	Top	K	2	47k

Item ref	Name	Side	X/Y		Value
R7635	CHIPRES 0W06 1K0 J 0402	Top	K	2	1k0
R7663	CHIPRES 0W06 4K7 J 0402	Top	K	8	4k7
R7700	CHIPRES 0W06 1K0 J 0402	Top	I	5	1k0
R7701	CHIPRES 0W06 1K0 J 0402	Top	I	5	1k0
R7703	CHIPRES JUMPER 0R0 0402	Top	J	5	0R
R7704	CHIPRES 0W06 1K0 J 0402	Top	K	3	1k0
R7705	CHIPRES 0W06 1K0 J 0402	Top	K	3	1k0
R7706	CHIPRES 0W06 1K0 J 0402	Top	K	3	1k0
R7707	CHIPRES 0W06 1K0 J 0402	Top	I	5	1k0
R7709	CHIPRES JUMPER 0R0 0402	Top	I	5	0R
R7711	RES NETWORK 0W04 1DB ATT 0404	Top	J	4	870R/5R77/870R
R7714	RES NETWORK 0W04 1DB ATT 0404	Top	J	2	870R/5R77/870R
R7720	CHIPRES 0W06 1K0 J 0402	Top	K	4	1k0
R7732	CHIPRES 0W06 10K J 0402	Top	K	2	10k
R7733	CHIPRES 0W06 100R J 0402	Top	K	2	100R
S2422	SM SW TACT SPST 12V SIDE KEY 3N	Top	B	4	~
V2000	ASIP TVS BGA4	Top	S	7	~
V2160	TR PDTC114EE N50V RB RBE 10K SC75	Top	L	6	~
V2400	LED WHITE 112-355MCD 15MA 0DEG 16	Bottom	U	5	~
V2401	TR PDTA114EE RB RBE 10K 50V SC75	Bottom	U	3	~
V7600	DI CAP 40/15.8PF 1/3V SCD80	Top	K	6	~
X2005	SM LYNX BATT CONN 3POL 12V 2A H7.	Top	G	3	~
X2060	MODULE ID COMPONENT 2.8X1.8X0.3	Bottom	T	3	~
X2700	SM SIM CONN 6POL P2.54 H1.8	Top	Q	4	~
Z2400	ASIP KEYBOARD INTERFACE *PB-FREE*	Top	Q	3	~
Z7600	SAW FILT 1842.5+-37.5MHZ/2.0X1.6	Top	H	6	1842.5MHz
Z7602	SAW FILT 942.5+-17.5MHZ/2.0X1.6	Top	H	7	942.5MHz
Z7603	SILICON FILT 869.5±45.5MHZ P-TSLP	Top	J	5	824-915MHz
Z7604	SILICON FILT 1810±100MHZ P-TSLP-	Top	J	5	1710-1910MHz
	PWB M6 4/PA				

## ■ Component layouts

**Note:** See also larger size layouts in the [Schematics section \(Page 9–8\)](#).

**Component layout, bottom**

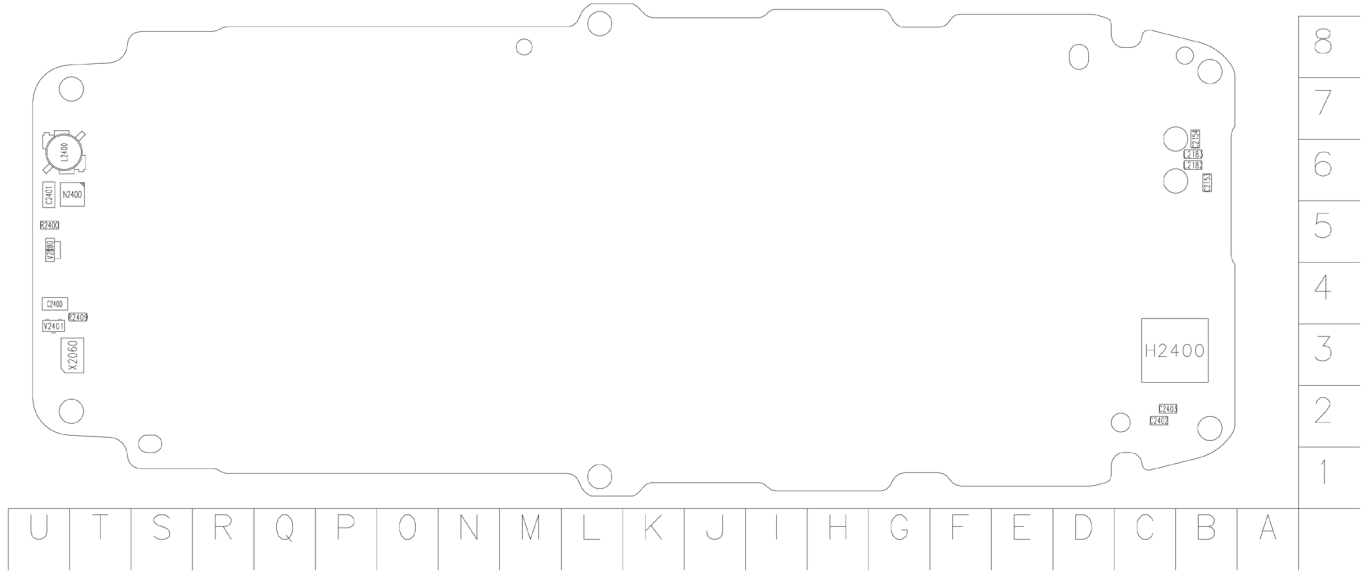


Figure 4 Component layout, RM-74, 1mf\_51a, bottom

**Component layout, top**

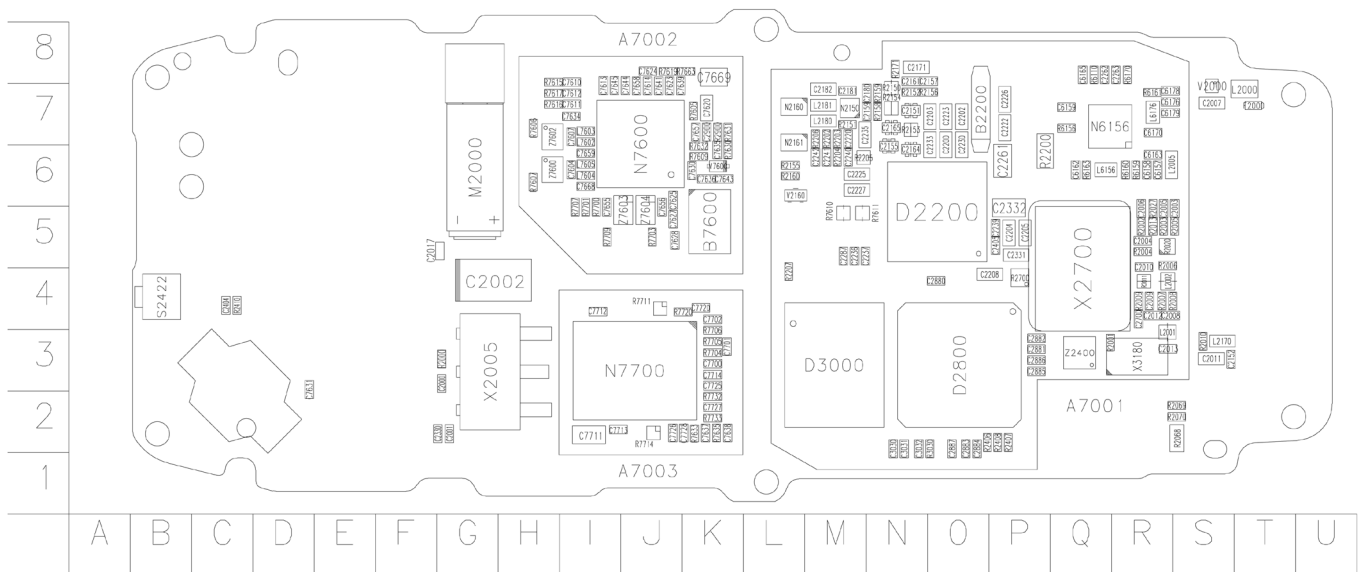


Figure 5 Component layout, RM-74, 1mf\_51a, top

# Nokia Customer Care

## 3 — Phoenix service SW

(This page left intentionally blank.)



## Table of Contents

Service software installation.....	3-5
Phoenix installation steps in brief.....	3-5
Installing Phoenix.....	3-5
Phoenix update installation.....	3-11
Uninstalling Phoenix.....	3-12
Repairing Phoenix installation.....	3-14
Phoenix service software data package overview.....	3-15
Installing Phoenix data package.....	3-16
Uninstalling Phoenix data package.....	3-20
Service software instructions.....	3-21
Configuring users in Phoenix.....	3-21
Managing connections in Phoenix.....	3-22
Installing Flash support files for FPS-8* and FLS-4*.....	3-25
Updating FPS-8 Flash prommer software.....	3-28
Activating FPS-8.....	3-30
Deactivating FPS-8.....	3-32
Updating JBV-1 docking station software.....	3-33

## List of Figures

Figure 6 Dongle not found.....	3-6
Figure 7 Preparing setup.....	3-6
Figure 8 Welcome dialog.....	3-7
Figure 9 Disclaimer text.....	3-7
Figure 10 Destination folder.....	3-8
Figure 11 Installation status 1.....	3-8
Figure 12 Installation status 2.....	3-9
Figure 13 Registering components 1.....	3-9
Figure 14 Restart computer.....	3-10
Figure 15 Registering components 2.....	3-10
Figure 16 Finish installation.....	3-11
Figure 17 Installation interrupted.....	3-12
Figure 18 Remove program.....	3-12
Figure 19 Uninstallation status.....	3-13
Figure 20 Finish uninstallation.....	3-13
Figure 21 Restart computer.....	3-14
Figure 22 Repair program.....	3-15
Figure 23 Finish repair installation.....	3-15
Figure 24 Extracting files.....	3-16
Figure 25 Continue data package installation.....	3-17
Figure 26 Data package setup information.....	3-17
Figure 27 Data package destination folder.....	3-18
Figure 28 Start copying files.....	3-18
Figure 29 Data package installation status.....	3-19
Figure 30 Finish data package installation.....	3-19
Figure 31 Uninstalling Phoenix data package.....	3-20
Figure 32 Finish data package uninstallation.....	3-20
Figure 33 Login.....	3-21
Figure 34 Add information for new user 1.....	3-21
Figure 35 Add information for new user 2.....	3-21

Figure 36 Login, user configured.....	3-22
Figure 37 Phoenix icon.....	3-22
Figure 38 Manage connections.....	3-22
Figure 39 Connections list.....	3-23
Figure 40 Select mode: Manual.....	3-23
Figure 41 FLS virtual port icon.....	3-23
Figure 42 Connections list.....	3-24
Figure 43 Connection information.....	3-24
Figure 44 Scan product.....	3-24
Figure 45 Product support module information.....	3-25
Figure 46 Flash update welcome dialog.....	3-25
Figure 47 Uninstall flash update package.....	3-26
Figure 48 Flash installation interrupted.....	3-26
Figure 49 Continue flash update.....	3-26
Figure 50 Flash destination folder.....	3-27
Figure 51 Flash installation status.....	3-27
Figure 52 Finish flash update.....	3-28
Figure 53 Phoenix icon.....	3-28
Figure 54 FPS-8 maintenance.....	3-28
Figure 55 Prommer SW update.....	3-29
Figure 56 Prommer SW update done.....	3-29
Figure 57 FPS-8 info window.....	3-30
Figure 58 Flash directory window.....	3-30
Figure 59 FPS-8 maintenance.....	3-31
Figure 60 FPS-8 info window.....	3-31
Figure 61 Box activation.....	3-32
Figure 62 Deactivation warning.....	3-32
Figure 63 Extracting JBV-1 update files.....	3-33
Figure 64 JBV-1 update information.....	3-34
Figure 65 JBV-1 update destination folder.....	3-34
Figure 66 Select installation: Full.....	3-35
Figure 67 Select program folder.....	3-35
Figure 68 Finish JBV-1 update installation.....	3-36
Figure 69 Checking JBV-1 SW version.....	3-36
Figure 70 JBV-1 update directory window.....	3-37
Figure 71 JBV-1 SW update done.....	3-37
Figure 72 JBV-1 SW status.....	3-37

## ■ Service software installation

### Phoenix installation steps in brief

Phoenix is the DCT-4 generation service software for reprogramming, testing and tuning the phone.

To install Phoenix, you need to:

- Connect a DK2 Dongle or FLS-4S POS Flash Device
- Install the Phoenix Service SW
- Install the Data Package for Phoenix
- Configure users
- Manage connection settings (depends on the tools you are using)

Phoenix is now ready for FLS-4S Point Of Sales Flash Device use.

If you use FPS-8:

- Update FPS-8 SW
- Activate FPS-8
- Update JBV-1 Docking Station SW (only when needed)

Phoenix is now ready to be used with FPS-8 flash prommer and other tools as well.

The Phoenix Service Software installation contains:

- Service software support for all phone models included in the package
- Flash update package files for FPS-8\* and FLS-4S programming devices
- All needed drivers for:
  - DK2 dongle
  - FLS-4S point of sales flash device
  - USB devices

**Note:** Separate installation packages for flash update files and drivers are also available, but it is not necessary to use them unless updates appear between Phoenix Service SW releases. If separate update packages are used, they should be used after Phoenix and data packages have been installed.

### Supported operating systems

- Windows 2000 and XP.

### Hardware requirements for using Phoenix

- Minimum: Processor 300 MHz, RAM memory 64 MB, disk space 100 MB.
- Recommended for Windows 2000: Processor 700 MHz, RAM memory 256 MB, disk space 150 MB.

### Installing Phoenix

#### Before you begin

- Check that a Dongle is attached to the parallel port of your computer.
- Download the installation package (for example, *phoenix\_service\_sw\_a15\_2004\_24\_7\_55.exe*) to your computer (in C:\TEMP, for instance).
- Close all other programs.
- Run the application file (for example, *phoenix\_service\_sw\_a15\_2004\_24\_7\_55.exe*) and follow the instructions on the screen.

**Note:** Administrator rights may be required to be able to install Phoenix depending on the operating system.

If uninstalling or rebooting is needed at any point, you will be prompted by the Install Shield program.

### Context

If at any point during installation you get this message, Dongle is not found and installation cannot continue:

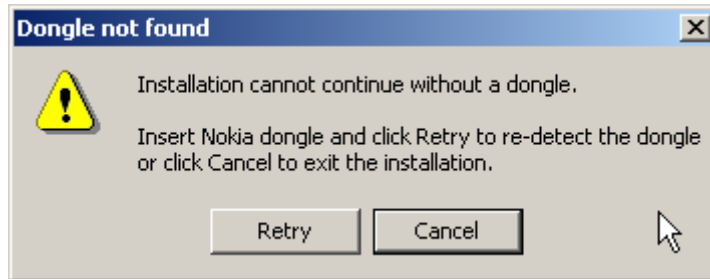


Figure 6 Dongle not found

Possible reasons may be a defective or too old PKD-1 Dongle (a new dongle has a six digit serial number).

Check the COM/parallel ports used first! After correcting the problem the installation can be restarted.

For more detailed information, please refer to Phoenix Help files. Each feature in Phoenix has its own Help function, which can be activated while running the program. Press the F1 key or the Help button to activate a Help file.

### Steps

1. Run the *phoenix\_service\_sw\_a15\_2004\_24\_7\_55.exe* to start installation. Install Shield prepared the setup.

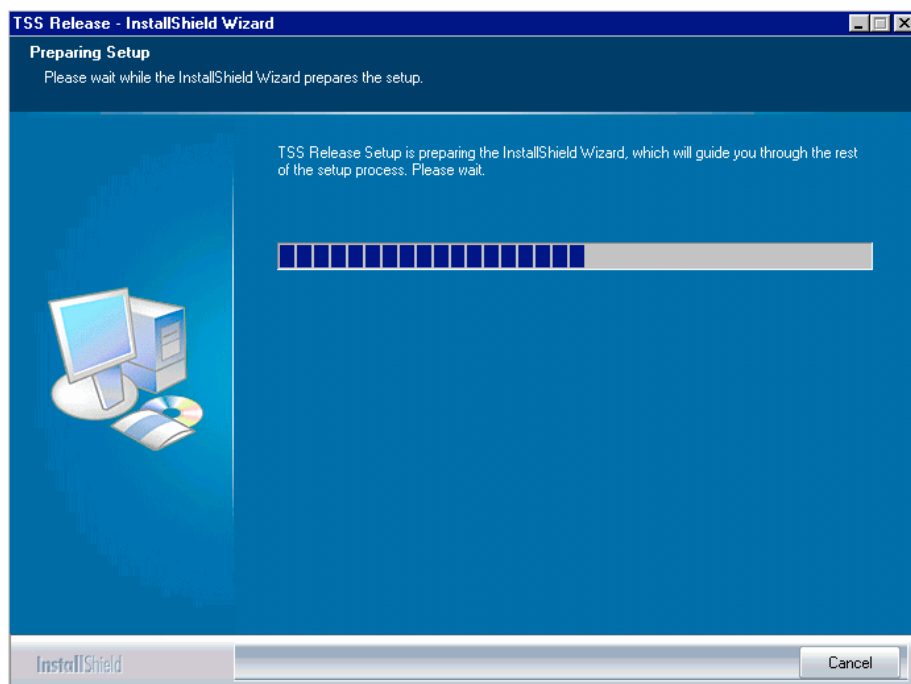


Figure 7 Preparing setup

Install Shield will prepare.

2. Click Next in Welcome dialog to continue.

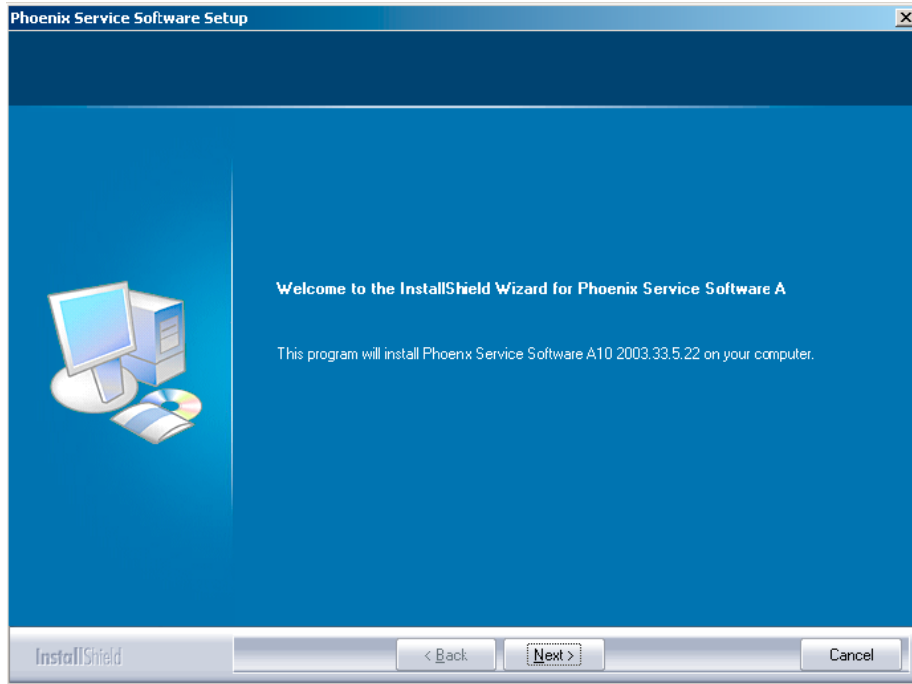


Figure 8 Welcome dialog

3. Read the disclaimer carefully.

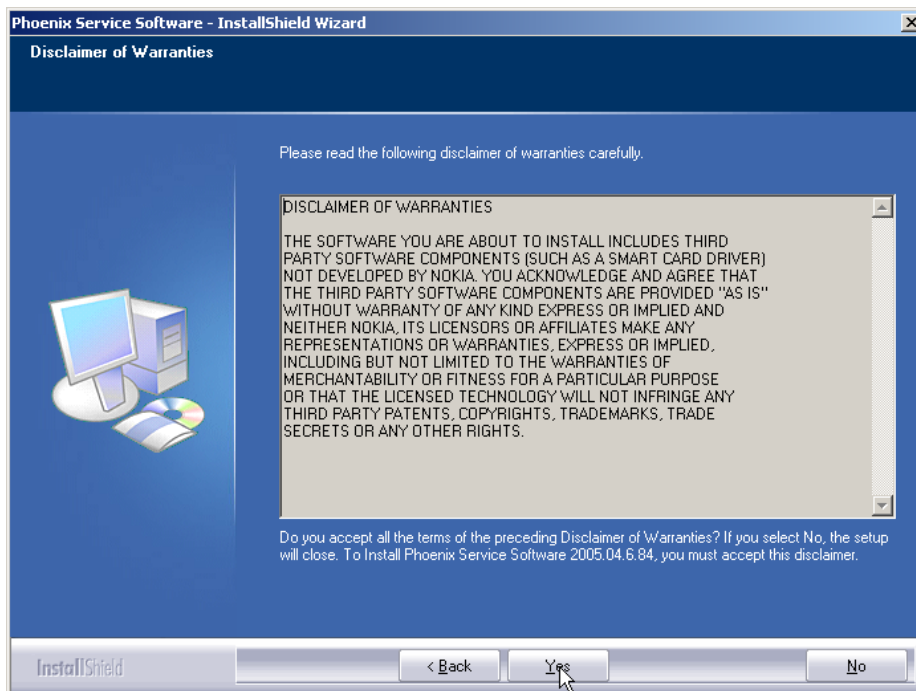


Figure 9 Disclaimer text

4. Choose destination folder. The default folder `C:\ProgramFiles\Nokia\Phoenix` is recommended. Then click Next to continue. You may choose another location by selecting Browse (not recommended).

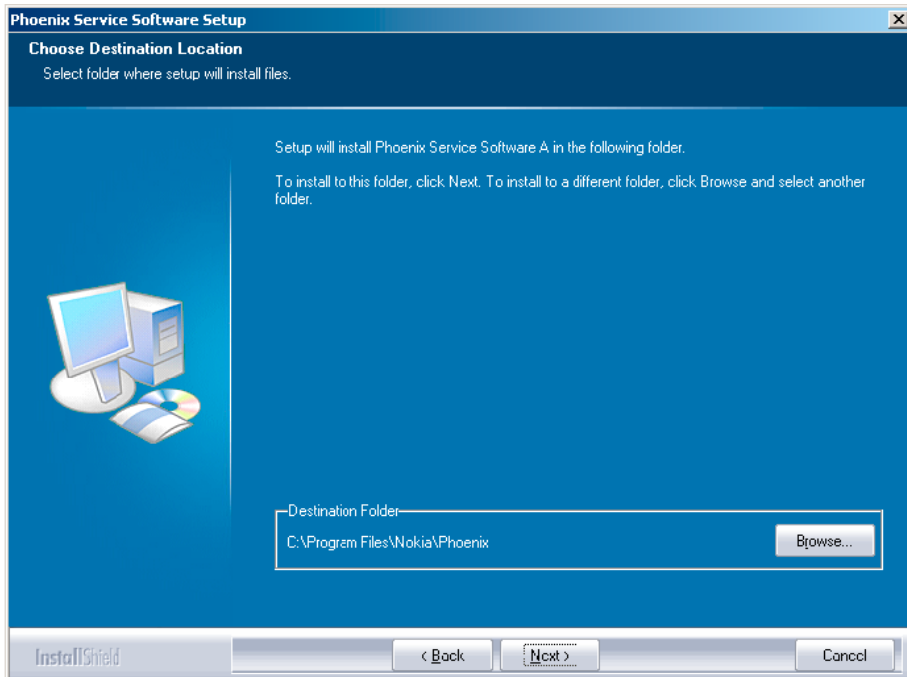


Figure 10 Destination folder

5. Wait for the components to be copied. The progress of the setup is shown in the *Setup Status* window.

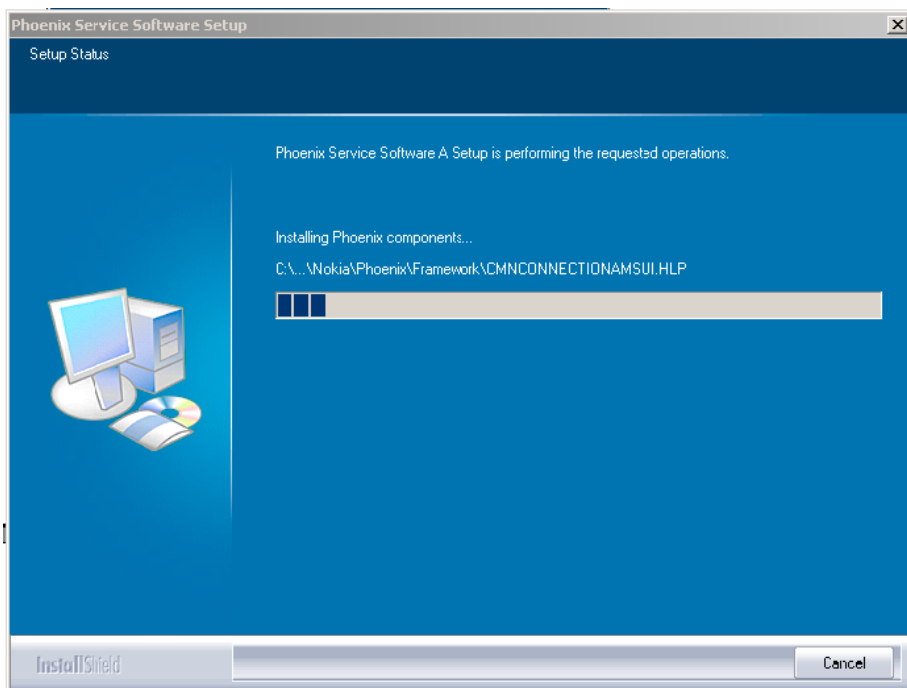


Figure 11 Installation status 1

6. Wait for the drivers to be installed and updated.  
The process may take several minutes to complete.  
If the operating system does not require rebooting (Windows 2000, XP) the PC components are registered right away.

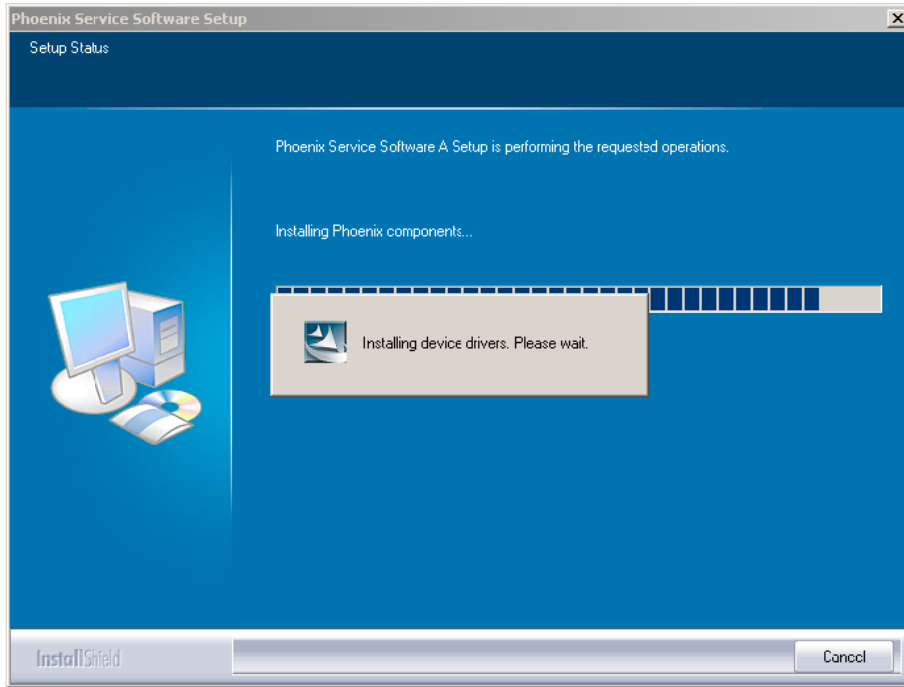


Figure 12 Installation status 2

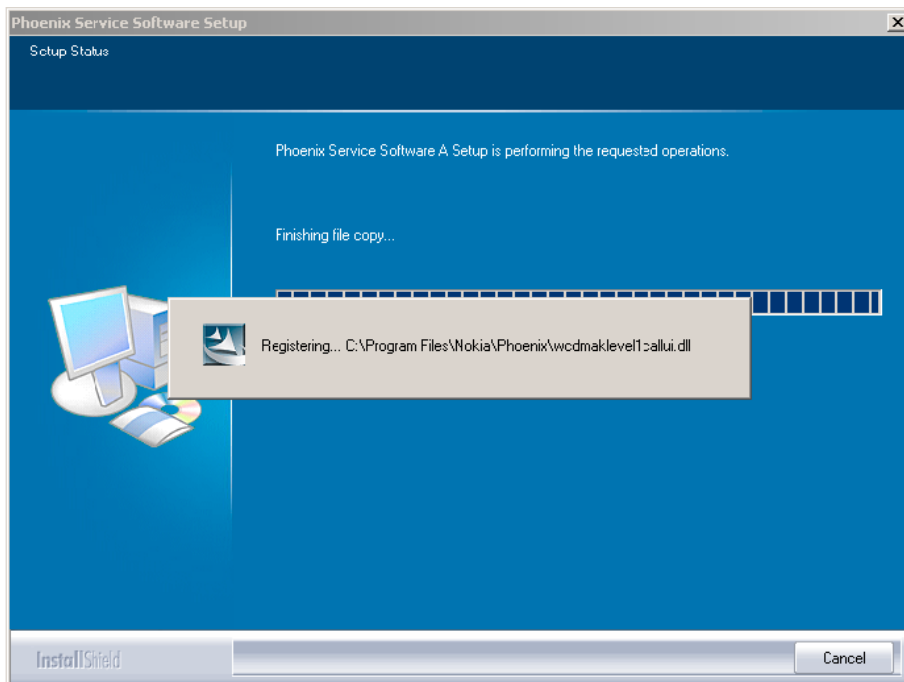


Figure 13 Registering components 1

If the operating system requires restarting your computer (Windows 98, SE, ME) the Install Shield Wizard will tell you about it. Select Yes... to reboot the PC immediately and No... to reboot the PC manually afterwards.

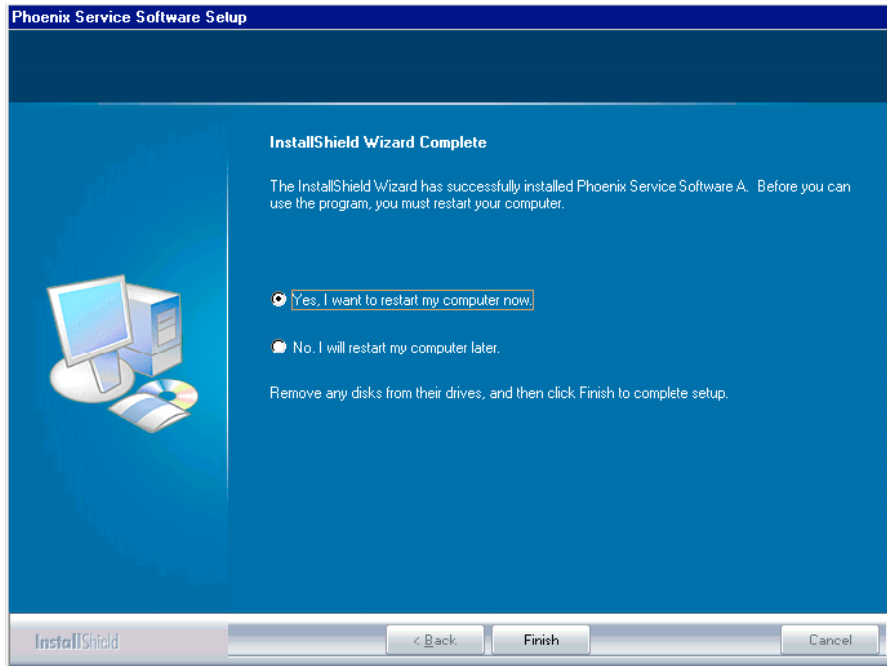


Figure 14 Restart computer

After the reboot, components are registered and Phoenix is ready for use.

**Note:** Phoenix does not work, if components have not been registered.



Figure 15 Registering components 2



7. Click Finish to end installation.

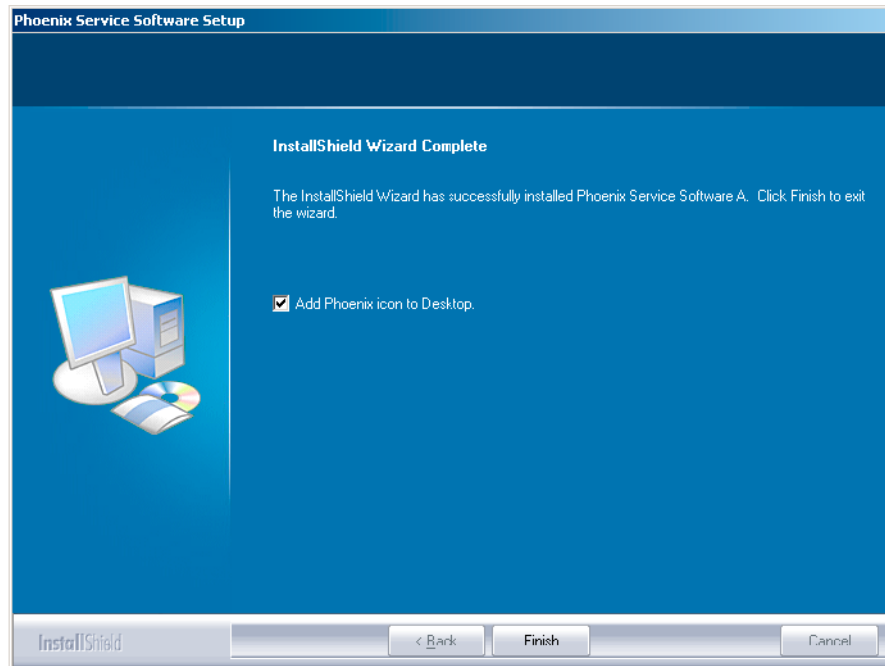


Figure 16 Finish installation

Phoenix is now ready for use.

### Next action

Before using Phoenix Service Software, you must:

- install phone model specific data package for Phoenix, and
- configure users and connections.

FPS-8\* can be used after updating its Flash Update Package files.

### Phoenix update installation

If you already have the Phoenix Service SW installed on your computer, sooner or later there will be need to update it when new versions are released.

Always use the latest available versions of both the Phoenix Service SW and the phone-specific Data Package. Instructions can be found in phone model specific Technical Bulletins and Phone Data Package readme.txt files (shown during installation).

To update the Phoenix Service Software you need to take exactly the same steps as when installing it for the first time:

- Download the installation package to your computer hard disk.
- Close all other programs.
- Run the application file (for example, phoenix\_service\_sw\_a15\_2004\_24\_7\_55.exe).
- New version of Phoenix will be installed.
- Driver versions will be checked and updated.

When you update Phoenix from old to new version (for example, a14\_2004\_16\_4\_47 to a15\_2004\_24\_7\_55), the update will take place automatically without uninstallation.

If you try to update the Phoenix Service Software with the same version that you already have (for example, a15\_2004\_24\_7\_55 to a15\_2004\_24\_7\_55) you are asked if you want to uninstall the version of Phoenix you have on your PC. In this case you can choose between total uninstallation and repair just like when you choose to uninstall Phoenix service software from the Windows Control panel.

If you try to install an older version (for example, downgrade from a15\_2004\_24\_7\_55 to a14\_2004\_16\_4\_47), installation will be interrupted.

Always follow the instructions on the screen.

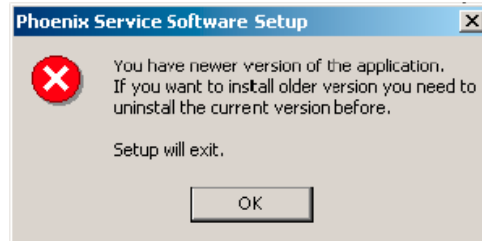


Figure 17 Installation interrupted

## Uninstalling Phoenix

### Context

Uninstallation can be done manually from *Windows Control Panel* → *Add/Remove Programs*.

### Steps

1. Choose *Phoenix Service Software* → *Add/Remove* → *Remove* to uninstall Phoenix.

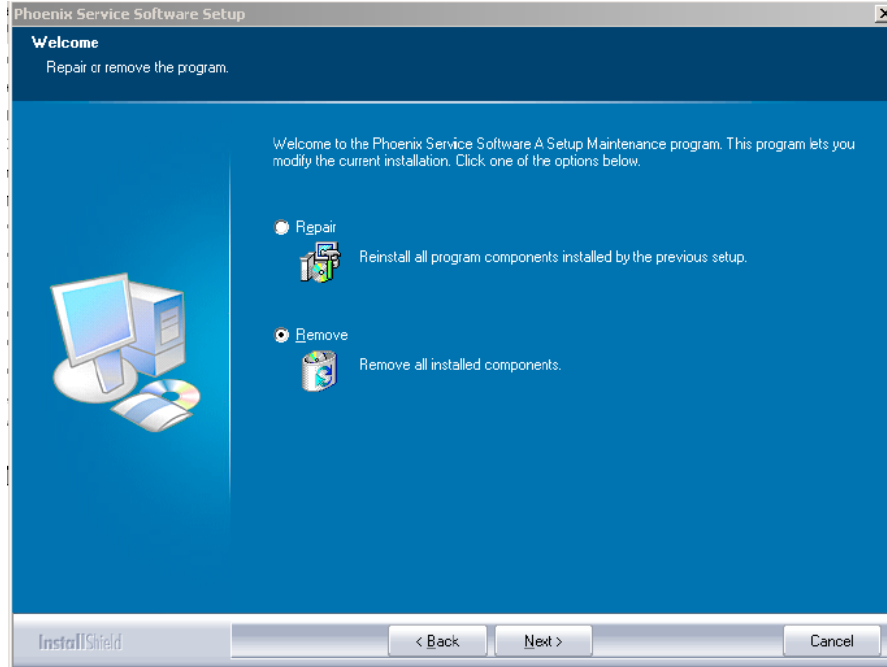


Figure 18 Remove program

The progress of the uninstallation is shown.

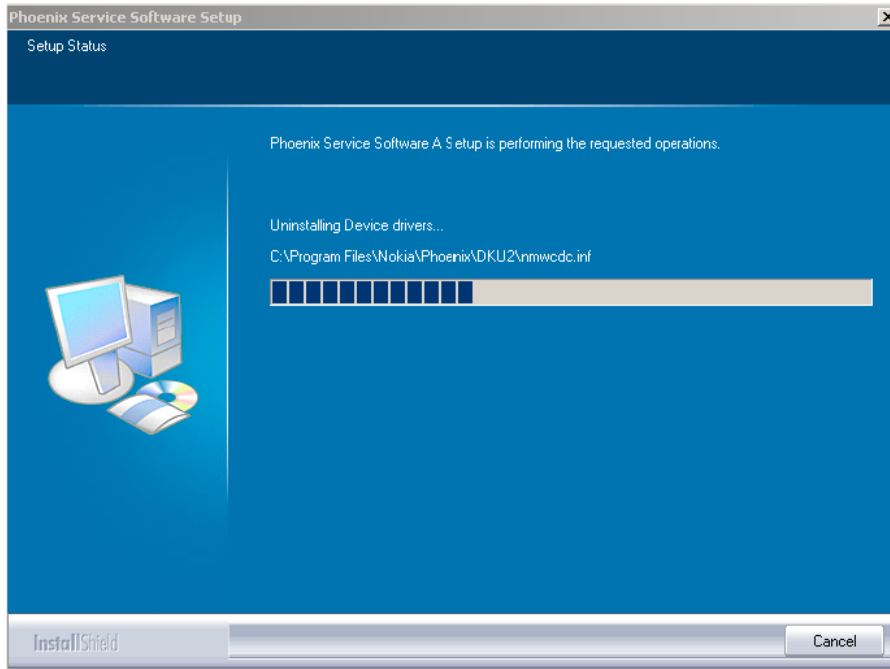


Figure 19 Uninstallation status

2. If the operating system does not require rebooting, click Finish to complete. Else, Install Shield Wizard will tell you about it. Select Yes... to reboot the PC immediately and No... to reboot the PC manually afterwards.

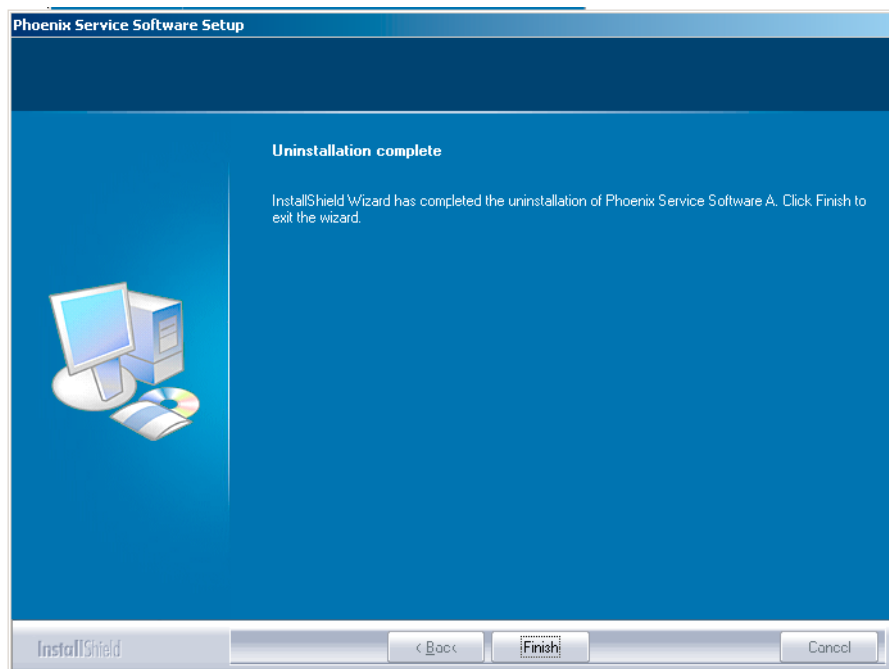


Figure 20 Finish uninstallation

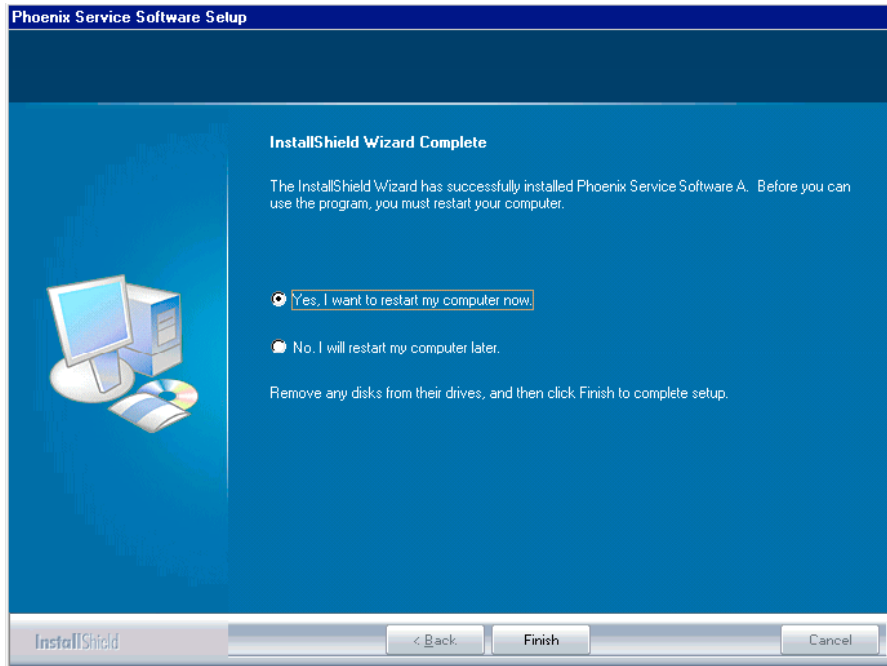


Figure 21 Restart computer

## Repairing Phoenix installation

### Context

If you experience any problems with the service software, or suspect that files have been lost, you can use the repair function before completely reinstalling Phoenix.

**Note:** The original installation package (for example, *phoenix\_service\_sw\_a15\_2004\_24\_7\_55.exe*) must be found on your PC when you run the repair setup.

### Steps

1. Open *Windows Control Panel* → *Add/Remove Programs* .
2. Select *Phoenix Service Software* → *Add/Remove* .
3. In the following view, choose *Repair*.

Phoenix will now reinstall components and register them. The procedure is the same as in the update installation.

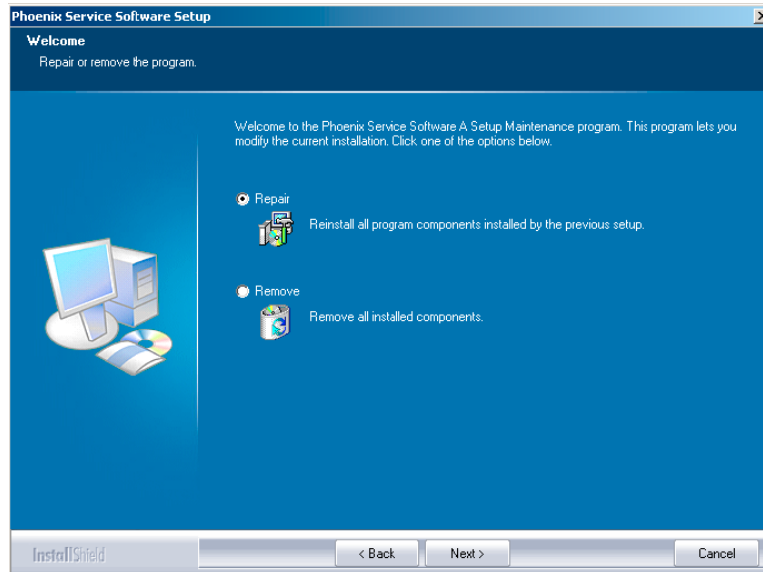


Figure 22 Repair program

4. Click Finish to complete repair.

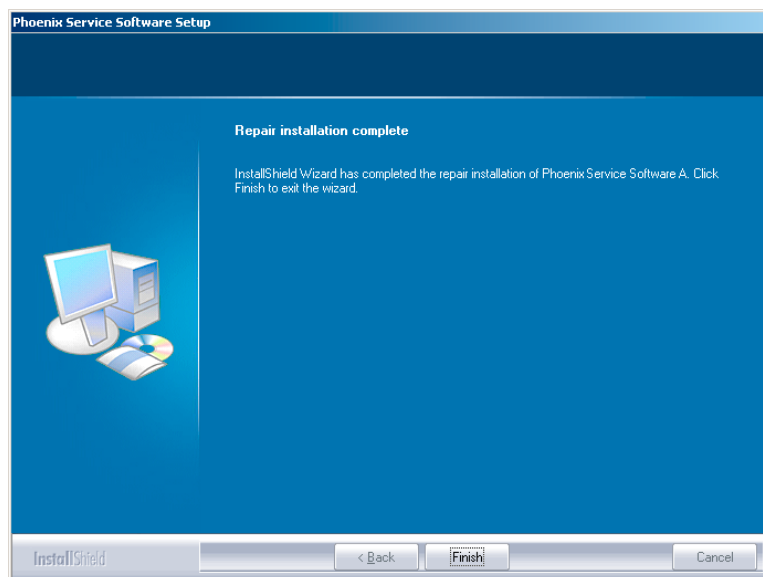


Figure 23 Finish repair installation

## Phoenix service software data package overview

Each product has its own data package (DP). This contains all product-specific data files to make the Phoenix Service Software and tools usable with a certain phone model:

- Product software binary files
- Files for type label printing
- Validation file for the faultlog repair data reporting system
- All product-specific configuration files for Phoenix Service Software components

Data files are stored under C:\Program Files\Nokia\Phoenix (default).

## Installing Phoenix data package

### Before you begin

- 1 Verify that The data package contains all product-specific data to make the Phoenix Service Software and tools usable with a certain phone model.
- 2 Check that the dongle is attached to the parallel port of your computer.
- 3 Install Phoenix Service SW.
- 4 Download the installation package (for example, *RM-51\_dp\_EA\_v\_1\_0.exe*) to your computer (for example, in *C:\TEMP*).
- 5 Close all other programs.
- 6 Run the application file (for example, *RM-51\_dp\_EA\_v\_1\_0.exe*) and follow the instructions on the screen.

If you already have the Phoenix Service SW installed on your computer, you will need to update it when a new version is released.

**Note:** Very often the Phoenix Service SW and the phone-specific data package for Phoenix come in pairs, meaning that a certain version of Phoenix can only be used with a certain version of the data package. Always use the latest available versions of both. Instructions can be found in phone model specific Technical Bulletins and *readme.txt* files of the data packages.

### Steps

1. To start installation, run the application file (for example, *RM-51\_dp\_EA\_v\_1\_0.exe*).
2. Click Next, and wait for the installation files to be extracted.

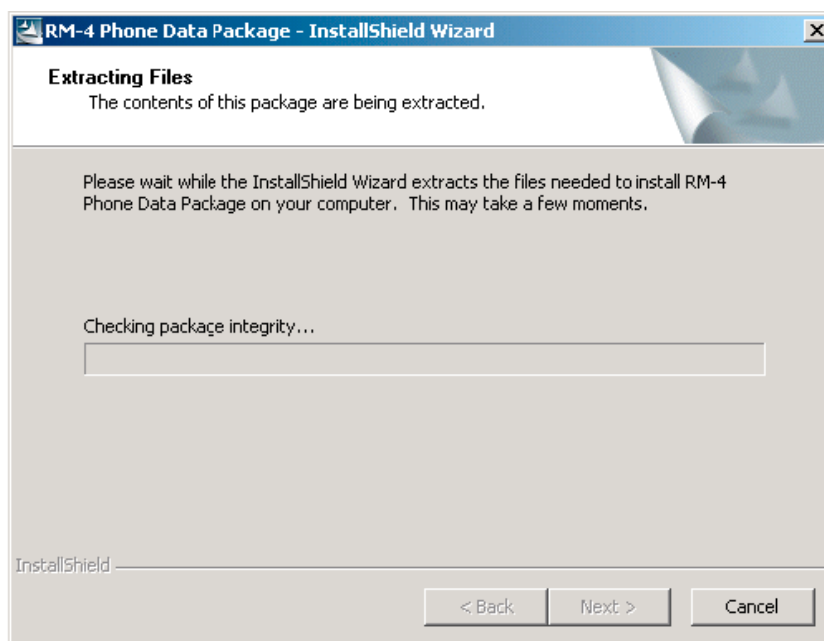


Figure 24 Extracting files

3. Click Next to continue.

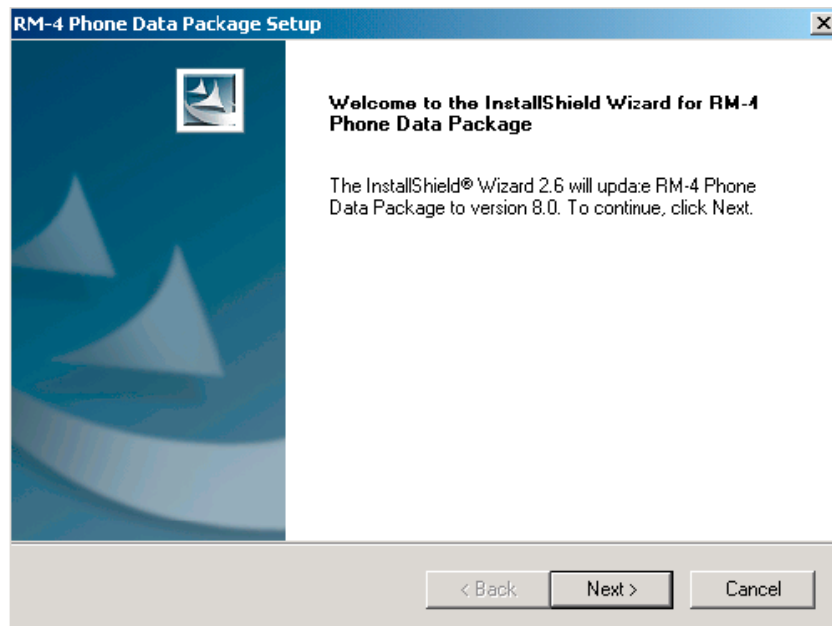


Figure 25 Continue data package installation

In this view you can see the contents of the data package. Read the text carefully. There should be information about the Phoenix version required with this data package.

Click Next to continue.

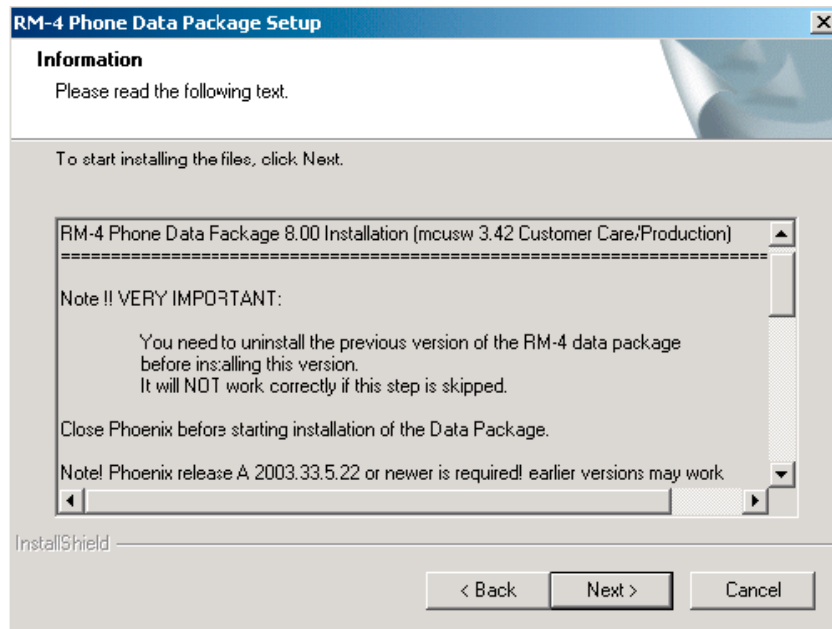


Figure 26 Data package setup information

4. Confirm location and click Next to continue.

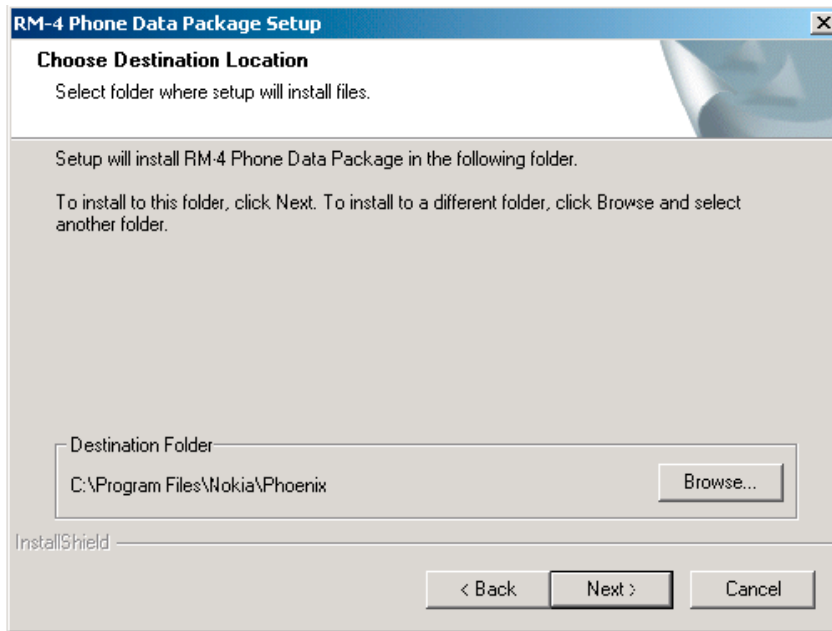


Figure 27 Data package destination folder

The install shield checks where the Phoenix application is installed and the directory is shown. Click Next to continue.

5. Click Next to start copying the files.

Phone model specific files will be installed. Please wait.

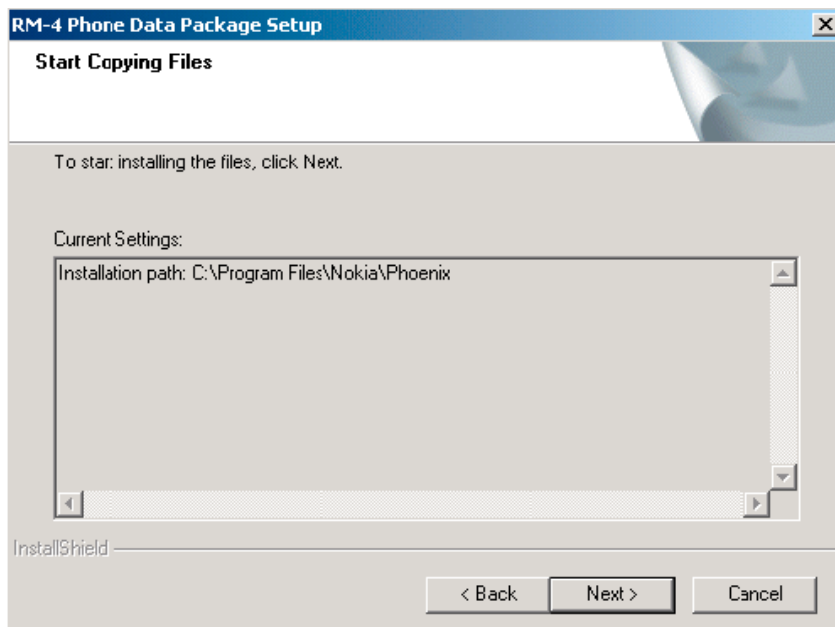


Figure 28 Start copying files



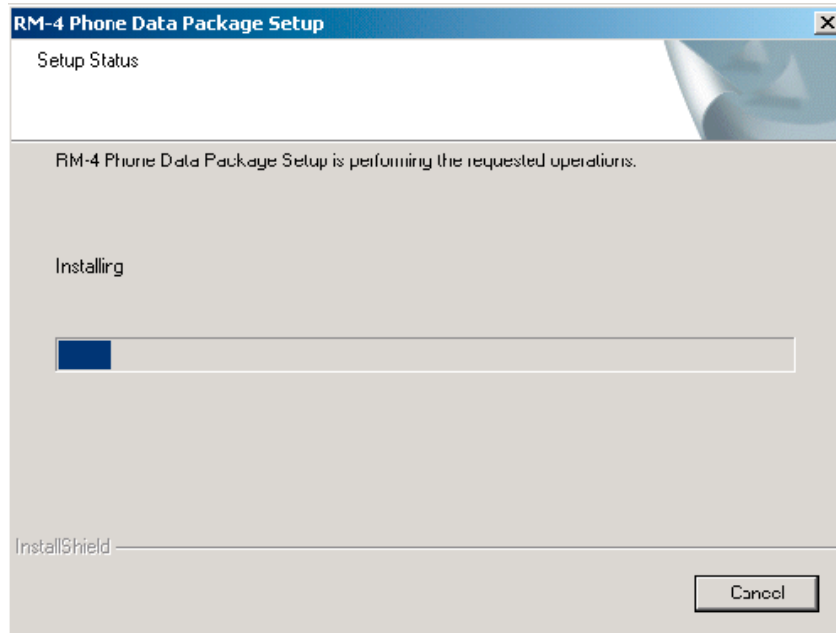


Figure 29 Data package installation status

6. Click Finish to complete the installation.

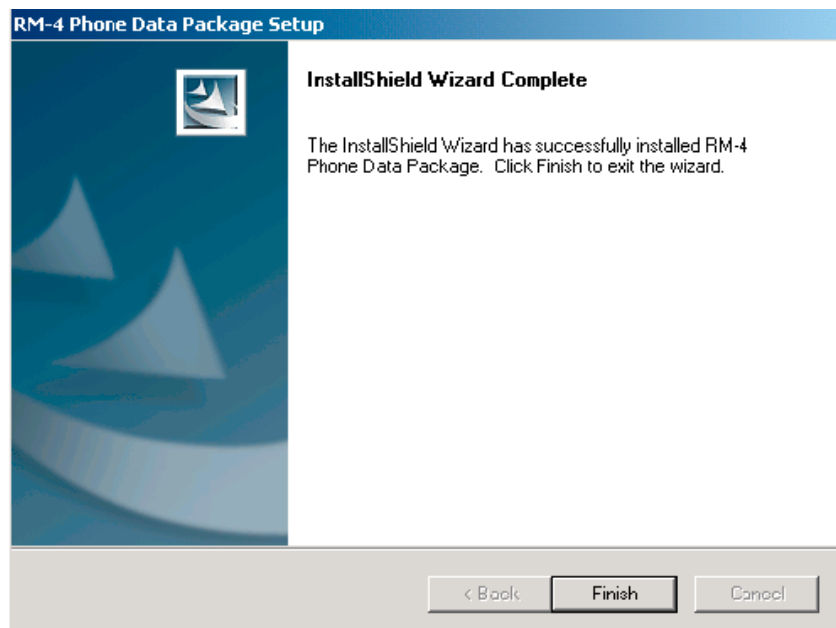


Figure 30 Finish data package installation

You now have all phone model specific files installed in your Phoenix Service SW.

### Next action

Phoenix can be used, for example, for flashing phones and printing type labels. But first you must:

- configure users, and
- manage connections.

FLS-4S can be used right away.

FPS-8\* can be used after updating Flash Update Package files.

## Uninstalling Phoenix data package

### Context

If you try to install the same version of Phoenix data package that you already have, you are asked if you want to uninstall the version you have on your PC. Older versions of data packages don't need to be uninstalled unless instructions to do so are given in the *readme.txt* file of the data package and bulletins concerning the release. Please read all related documents carefully.

### Steps

1. Click OK to uninstall, Cancel if you don't want to uninstall.

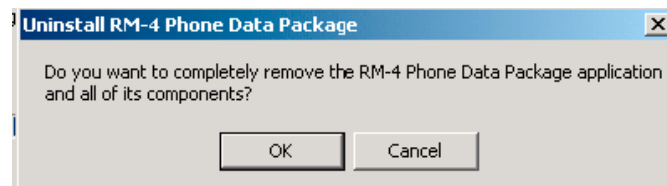


Figure 31 Uninstalling Phoenix data package

2. Once the previously installed data package is uninstalled, click Finish.

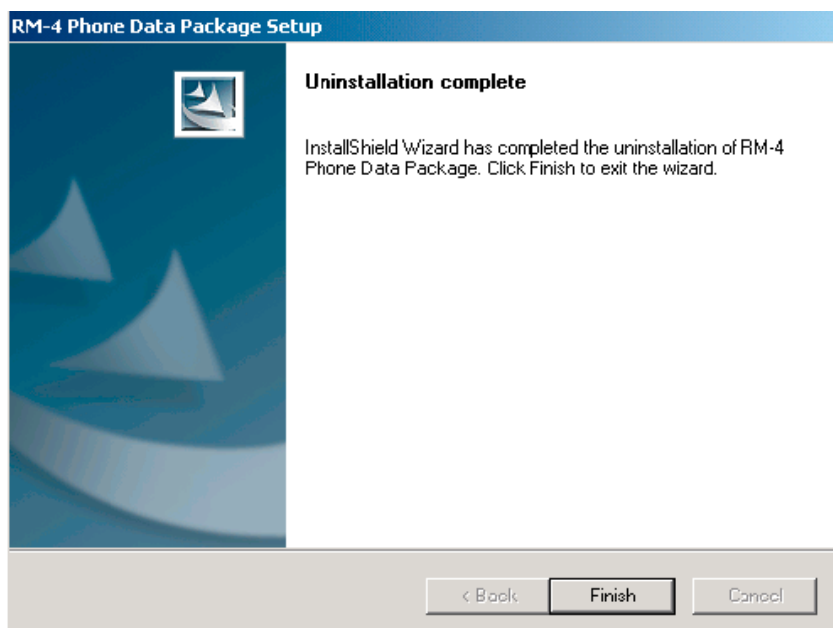


Figure 32 Finish data package uninstallation

### Alternative steps

- Uninstallation can also be done manually from *Windows Control Panel* → *Add/Remove Programs* → *xx-xx (\* Phone Data Package)*. (\*= type designator of the phone)

### Next action

Run the installation package again to continue installation from the beginning.

## ■ Service software instructions

### Configuring users in Phoenix

#### Steps

1. Start Phoenix Service SW and log in.

If your user ID is already configured, choose it from the dropdown list and click OK. To add a new user or edit existing ones click Maintain.

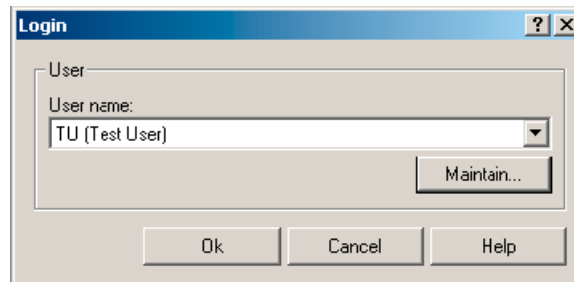


Figure 33 Login

2. Choose New to add information for a new user.

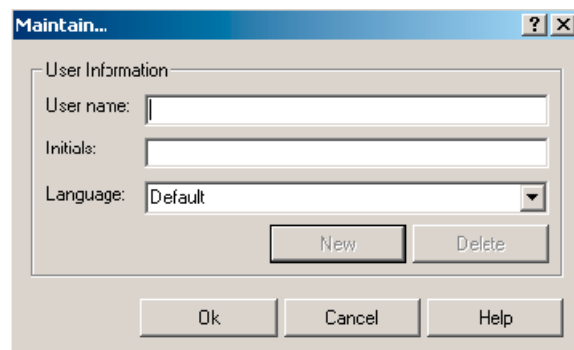


Figure 34 Add information for new user 1

3. Type in your name and initials and click OK.

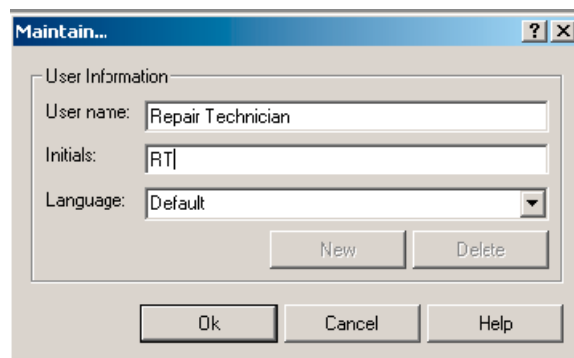


Figure 35 Add information for new user 2

A new user is now created.

4. Click OK.

You are now able to login with this user name.

5. Click OK.

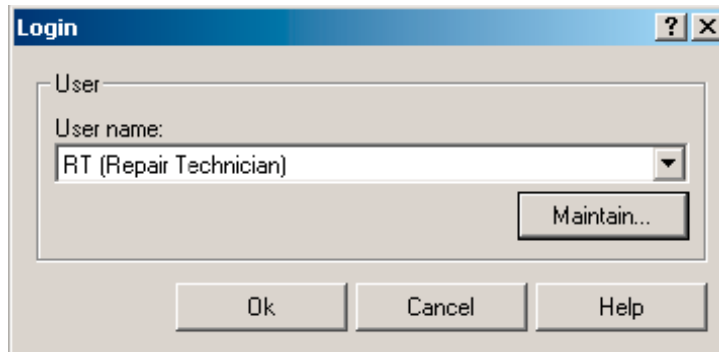


Figure 36 Login, user configured

## Managing connections in Phoenix

### Steps

1. Start *Phoenix Service SW* and log in.



Figure 37 Phoenix icon

2. Choose *File* → *Manage Connections*.

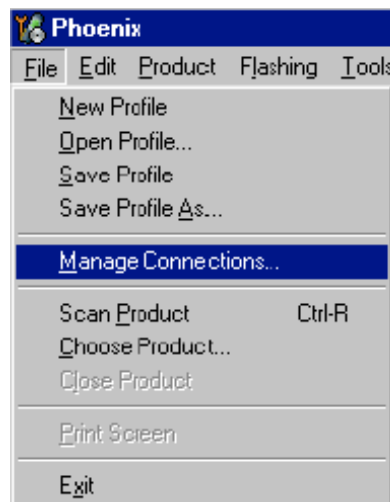


Figure 38 Manage connections

Existing connections can be selected, edited, deleted, and new ones created by using this dialog.

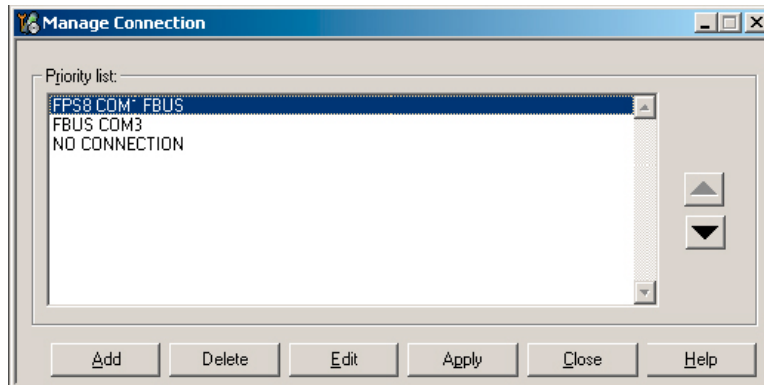


Figure 39 Connections list

3. Click Add to add a new connection, and select if you want to create it manually or by using the Connection Wizard.

In the following dialogs you will be asked to select settings for the connection. If you use the Wizard, connect the tools and a phone to your PC and the wizard will automatically try to configure the correct connection.

4. Select Manual mode, and click Next to continue.

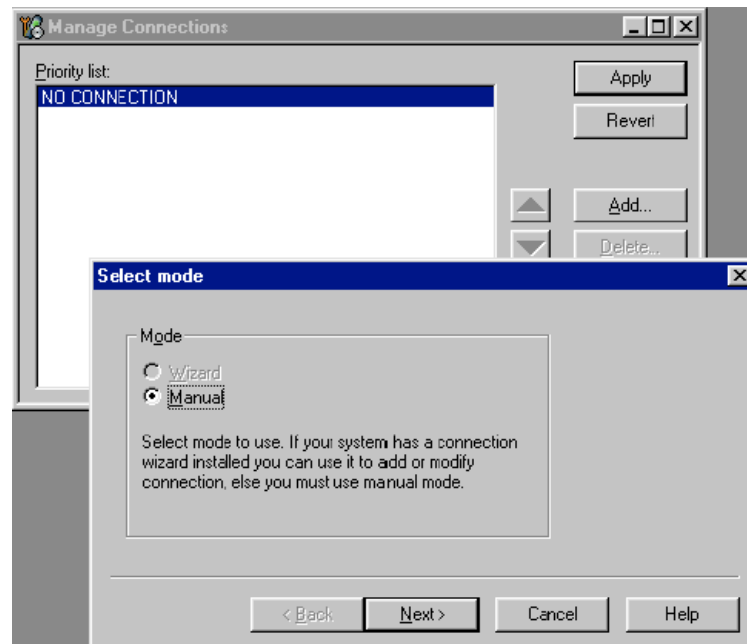


Figure 40 Select mode: Manual

- i For FLS-4S POS Flash Device, choose the following connection settings:

- Media: FBUS
- COM Port: Virtual COM Port used by FLS-4

**Note:** ALWAYS check this. Go to *Windows* → *Control Panel* → *FLS Virtual Port* → *Configuration* .



Figure 41 FLS virtual port icon

- ii For FPS-8 Flash Prommer, choose the following connection settings:
    - Media: FPS-8
    - Port Num: COM Port where FPS-8 is connected
    - COMBOX\_DEF\_MEDIA: FBUS
5. Click Finish to complete the configuration.
6. Activate the connection you want to use by clicking it, use up/down arrows to move it on top of the list, and click Apply.

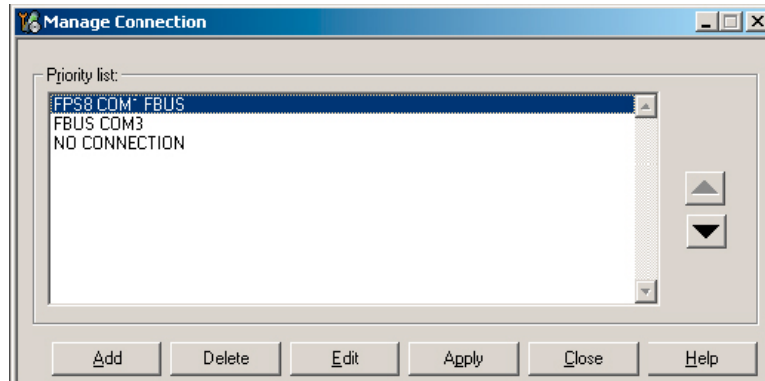


Figure 42 Connections list

The connection is now selected and can be used after closing the *Manage Connections* window. Selected connection will be shown on the right hand bottom corner of the screen.



Figure 43 Connection information

7. To use the selected connection, connect the phone to Phoenix with correct service tools, make sure that it is switched on and select Scan Product.

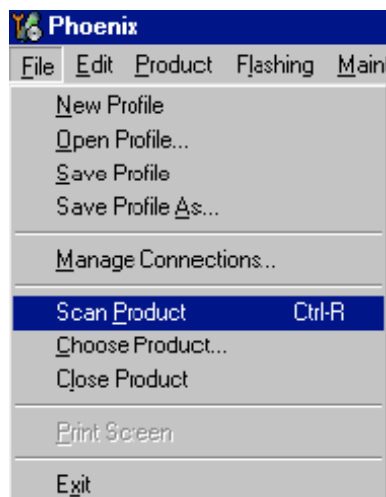


Figure 44 Scan product

When a product is found, Phoenix will load product support. Name of the loaded product support module and its version information will be shown on the bottom of the screen.

V 05.57 , 15-08-02 , NHM-7 , (c) NMP.

Figure 45 Product support module information

## Installing Flash support files for FPS-8\* and FLS-4\*

### Before you begin

**Note:** This is a separate installation package.

- Install Phoenix Service SW.
- Install phone model specific data package for Phoenix.
- The flash support files are delivered in the same installation package with Phoenix data packages or newer Phoenix packages since September 2003.
- Normally it is enough to install Phoenix and the phone-specific data package because the Phoenix installation always includes the latest flash update package files for FLS-4S/FPS-8\*.
- A separate installation package for flash support files is available, and the files can be updated according to this instruction if updates appear between Phoenix/data package releases.

### Context

If you are not using a separate installation package, you can skip this section and continue with [FPS-8 Flash prommer SW update \(Page 3–28\)](#) after installing a new phone data package.

### Steps

1. Start by double clicking *flash\_update\_03\_13\_001.exe* to begin installation.

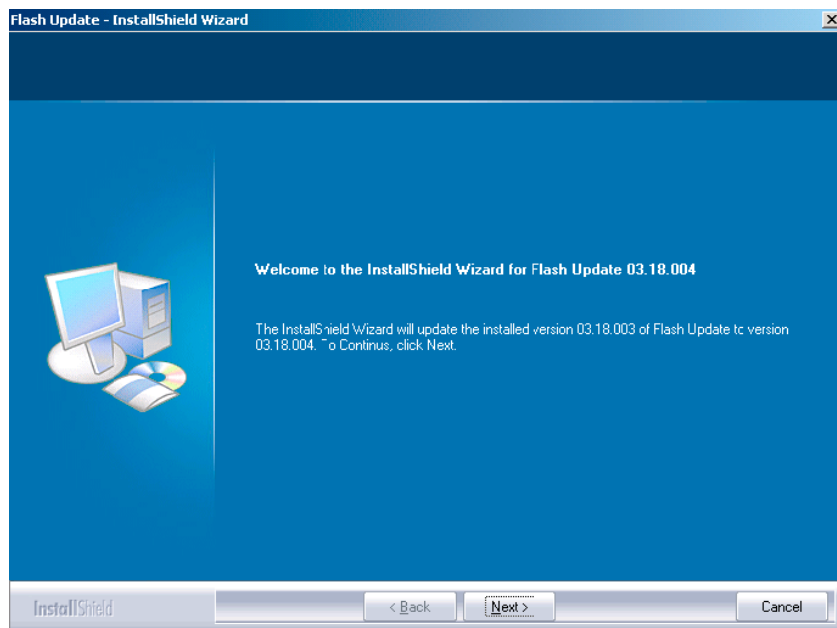


Figure 46 Flash update welcome dialog

2. If the same version of Flash Update package already exists, and you want to reinstall it, the previous package is first uninstalled. Run the installation again.

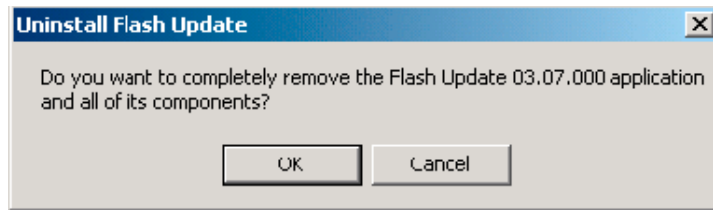


Figure 47 Uninstall flash update package

If you try to downgrade the existing version to older ones, the setup will be aborted. If you really want to downgrade, uninstall newer files manually from Control Panel and then rerun the installation again.



Figure 48 Flash installation interrupted

If an older version exists on your PC and it needs to be updated, click Next to continue installation.

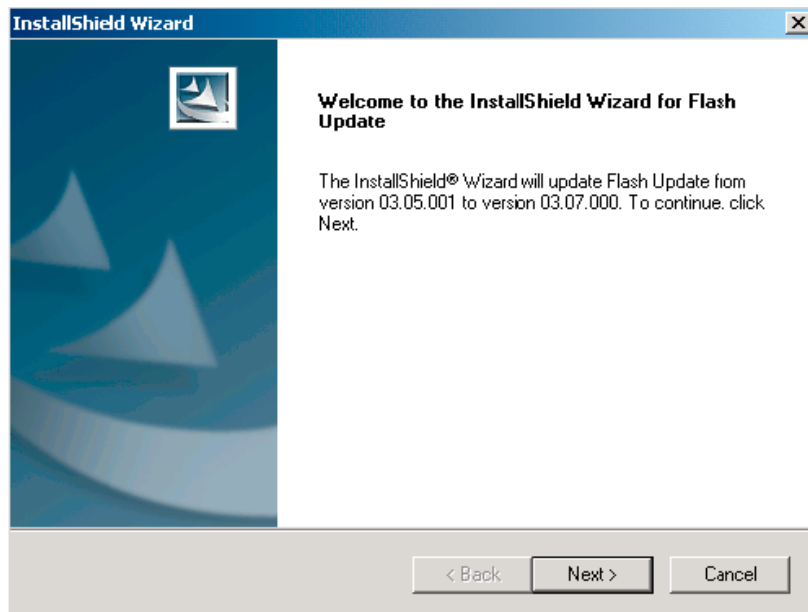


Figure 49 Continue flash update



3. It is highly recommended to install the files to the default destination folder *C:\Program Files\Nokia\Phoenix\Phoenix*. Click Next to continue.

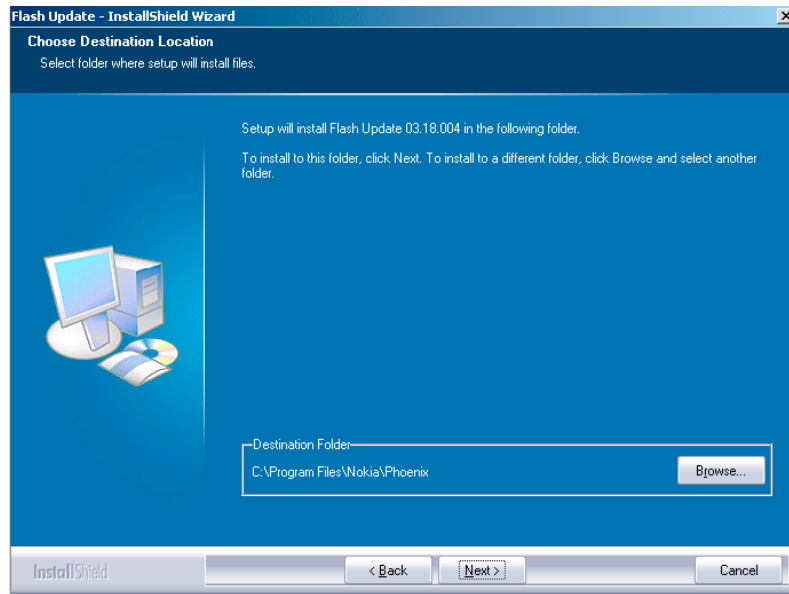


Figure 50 Flash destination folder

When installing the flash update files for the first time you may choose another location by selecting Browse. However, this is not recommended. Installation will continue.

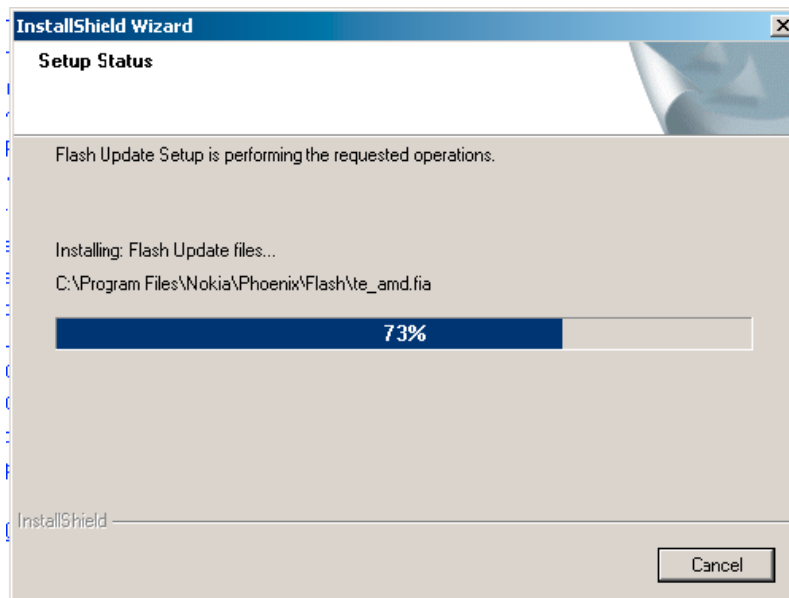


Figure 51 Flash installation status

4. Choose Finish to complete the installation procedure.

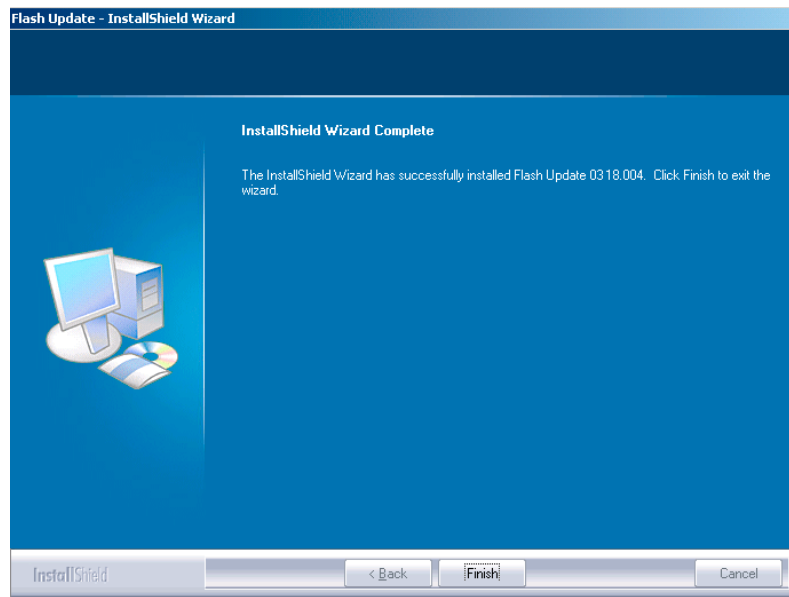


Figure 52 Finish flash update

### Next action

FLS-4 can be used right after the Flash Update Package is installed.

FPS-8\* flash prommer must be updated using Phoenix!

### Updating FPS-8 Flash prommer software

#### Steps

1. Start *Phoenix Service Software* and log in, manage connection correctly for the FPS-8\* flash prommer.



Figure 53 Phoenix icon

2. Choose *Flashing* → *FPS-8 Maintenance*.

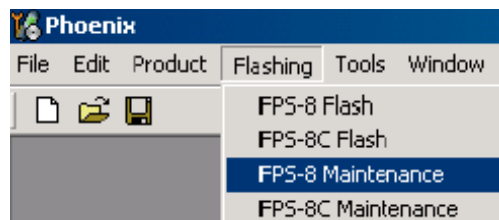


Figure 54 FPS-8 maintenance

**Note:** Screen shots may be different depending on the Phoenix version used and the connected components.

3. When the new FPS-8 flash update package is installed to computer you will be asked to update the files to your FPS-8 Prommer. Select Yes to update files.

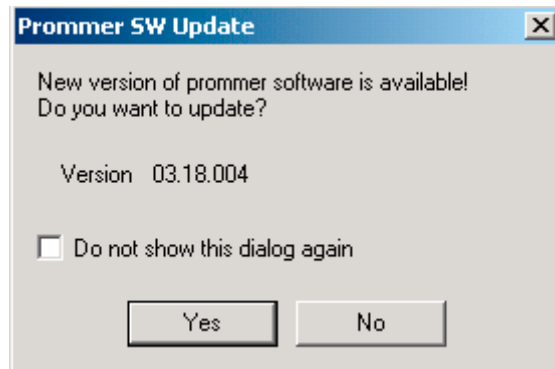


Figure 55 Prommer SW update

4. Wait until you are notified that update has been successful; the procedure will take a couple of minutes. Click OK to close the *FPS-8 Maintenance* window.

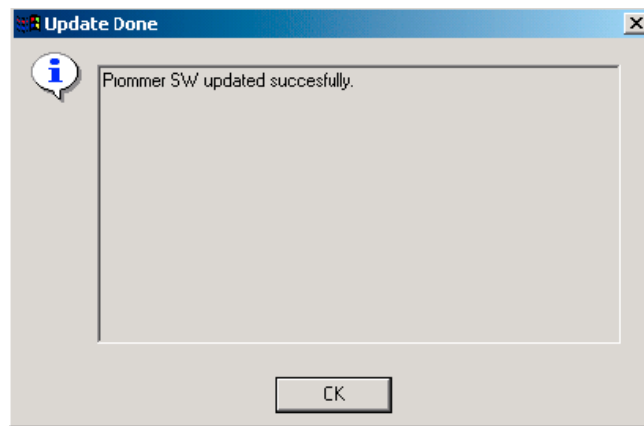


Figure 56 Prommer SW update done

View after successful prommer software update:

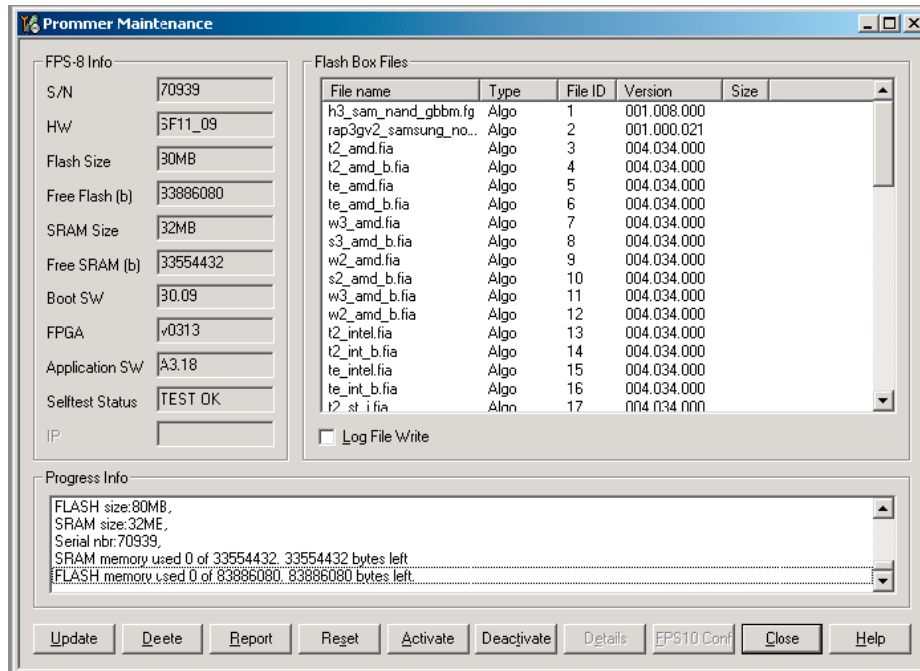


Figure 57 FPS-8 info window

### Alternative steps

- FPS-8 SW can also be updated by pressing Update button and selecting appropriate *fps8upd.ini* file in C:\Program Files\Nokia\Phoenix\Flash.

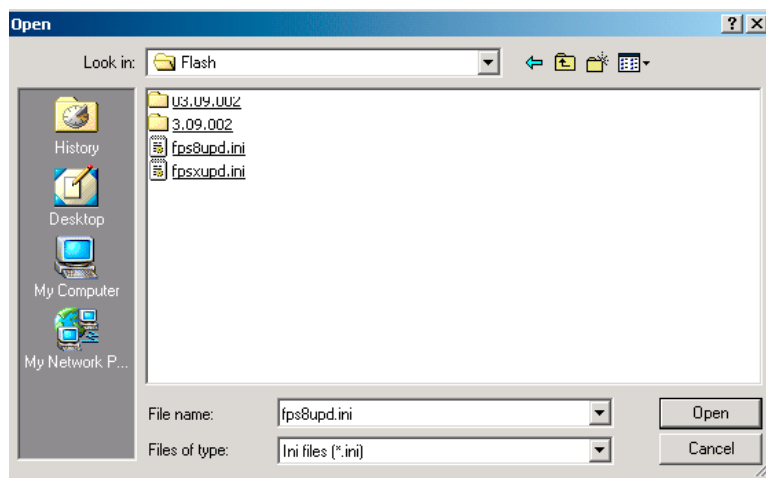


Figure 58 Flash directory window

- All files can be loaded separately to FPS-8. To do this, just press the right mouse button in the *Flash box files* window and select the file type to be loaded.  
More information can be found in Phoenix Help.

### Activating FPS-8

#### Context

Before FPS-8 can be successfully used for phone programming, it must first be activated. Fill in first the *FPS-8 activation request* sheet in the FPS-8 sales package and follow the instructions on the sheet (included in sales package CD-ROM or from partner web site).

When activation file is received (for example, *00000.in*), copy it to *C:\ProgramFiles\Nokia\Phoenix\BoxActivation* directory on your computer (this directory is created when Phoenix is installed).

### Steps

1. Start *Phoenix Service Software*.
2. Select *Flashing* → *FPS-8 maintenance*.

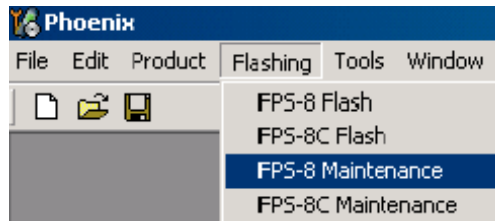


Figure 59 FPS-8 maintenance

3. Click *Activate* in the *FPS-8 Maintenance* window.

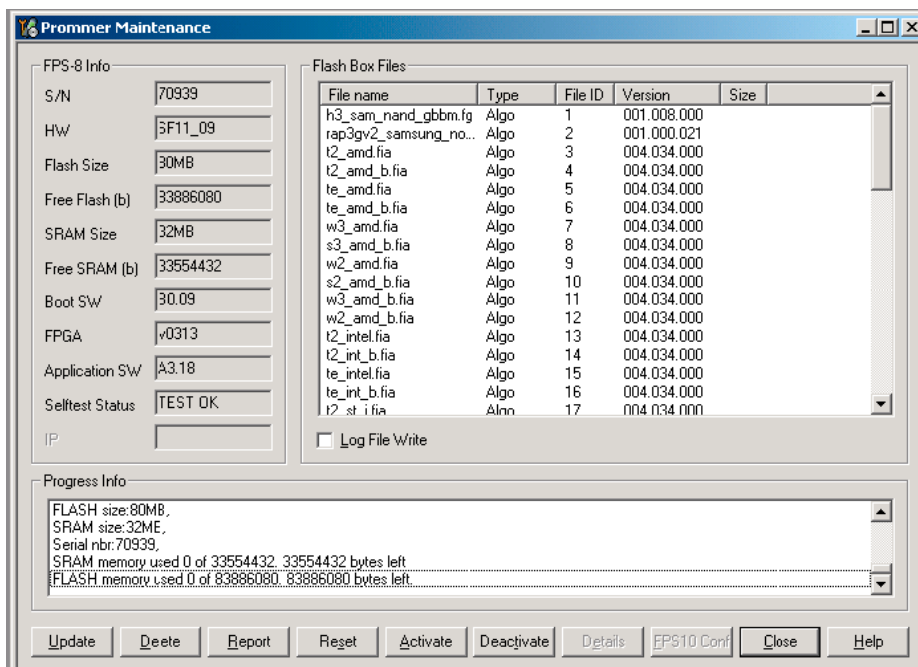


Figure 60 FPS-8 info window

If you saved the activation file to some other directory on your PC, Browse to find it

4. Click Open to activate the box.

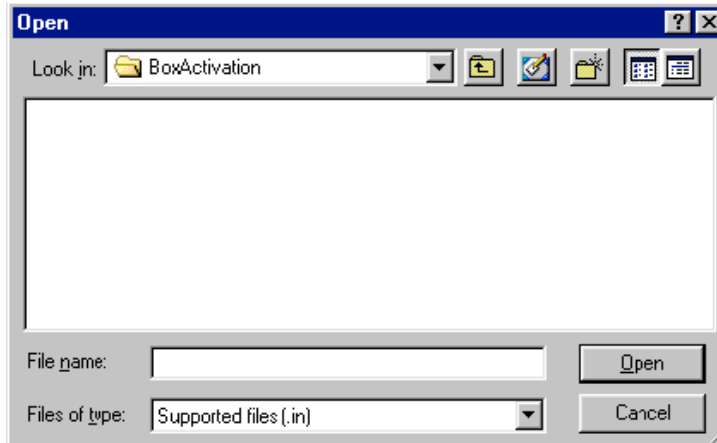


Figure 61 Box activation

5. Turn the FPS-8's power off and on to complete activation.

## Deactivating FPS-8

### Context

If there is, for example, a need to send the FPS-8 box for repair, it must be deactivated first.

### Steps

1. Start *Phoenix Service Software*.
2. Choose *Maintenance* → *Prommer Maintenance*.
3. In the *Prommer Maintenance* window, click *Deactivate*.
4. To confirm the deactivation, click *Yes*.

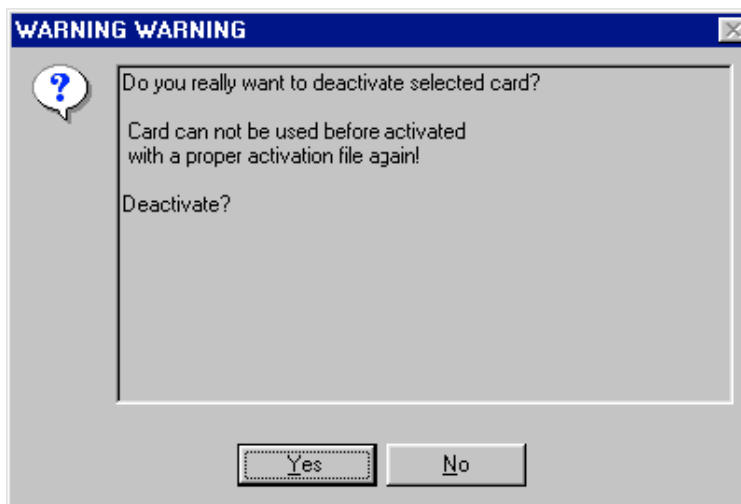


Figure 62 Deactivation warning

The box is deactivated.

5. To complete the deactivation, restart FPS-8.

## Updating JBV-1 docking station software

### Before you begin

The JBV-1 docking station contains software (firmware) which can be updated. You need the following equipment to update the software:

- PC with USB connection
- operating system supporting USB (Not Win 95 or NT)
- USB Cable (can be purchased from shops or suppliers providing PC hardware and accessories)
- JBV-1 docking station
- external power supply (11-16V)

Before installation:

- Download *Jbv1\_18\_update.zip* file to your computer (in *C:\TEMP* for example) from your download web site.
- Close all other programs.
- Follow instructions on the screen.

### Context

The JBV-1 docking station is a common tool for all DCT-4 generation products. In order to make the JBV-1 usable with different phone models, a phone-specific docking station adapter is used.

### Steps

1. Run *Jbv1\_18\_update.zip* file and start software installation by double clicking *Setup.exe*.

**Note:** DO NOT CONNECT THE USB CABLE/JBV-1 TO YOUR COMPUTER YET!

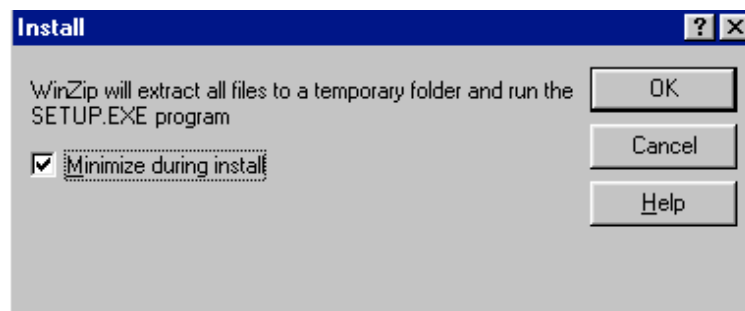


Figure 63 Extracting JBV-1 update files

Files needed for JBV-1 package setup program will be extracted.

2. Read the instructions in the dialog box and click Next to continue.



Figure 64 JBV-1 update information

3. Accept the suggested destination folder for installing the JBV-1 SW Package, and click Next to continue.

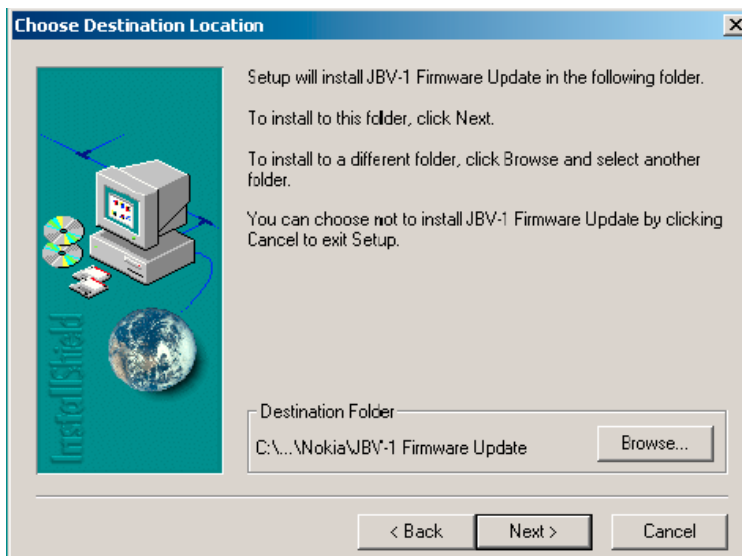


Figure 65 JBV-1 update destination folder

4. Select Full installation and click Next to continue.



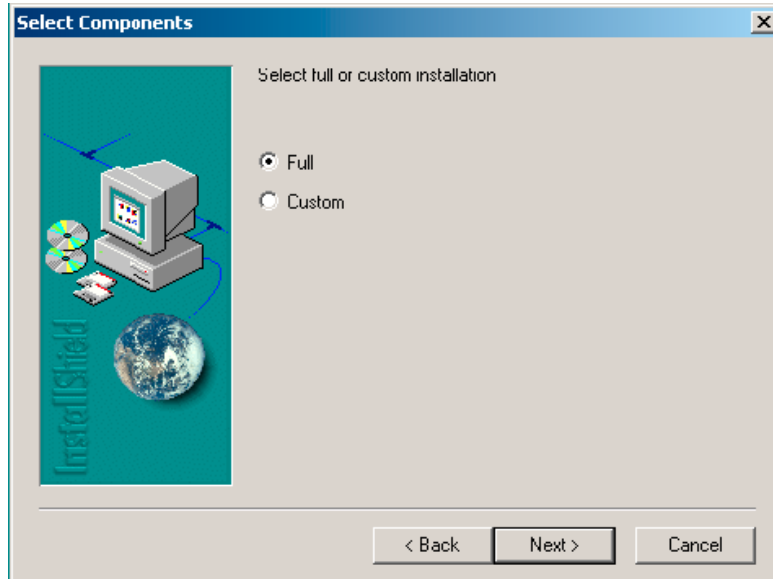


Figure 66 Select installation: Full

5. A program folder is created and the software files are installed there. Click Next to continue.

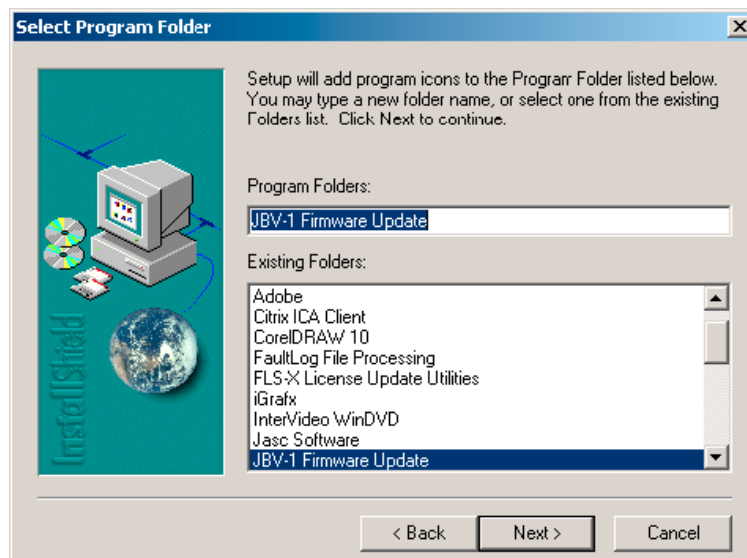


Figure 67 Select program folder

6. Click Finish to complete the installation.



Figure 68 Finish JBV-1 update installation

7. Connect the USB cable/JBV-1 to your computer. Connect power to JBV-1 (11-16V DC) from an external power supply, then connect the USB Cable between the JBV-1 USB connector and the PC.
8. Install or update the JBV-1 USB drivers which are delivered with the JBV-1 SW installation package.

The drivers can be found in *C:\Program Files\Nokia\JBV-1 Firmware Update\JBV-1USB driver*

- If there is no previously installed JBV-1 Firmware update package installed on your computer, Windows will detect connected USB cable and detect drivers for new HW. You will be prompted about this, please follow the instructions and allow Windows to search and install the best drivers available.
- If there is a previously installed JBV-1 Firmware update package (v.17 or older) on your computer, please update the JBV-1 USB driver. Please see the *readme.txt* file in *C:\Program Files\Nokia\JBV-1 Firmware Update\JBV-1USB driver* folder for instructions on how to update the JBV-1 USB Driver.

After you have installed or updated the JBV-1 USB driver, the actual JBV-1 SW update can begin.

9. Go to folder *C:\Program Files\Nokia\JBV-1 Firmware Update\JBV-1 Firmware Update* and start JBV-1 Update SW by double clicking *fwup.exe*.

JBV-1 Firmware update starts and shows current status of the connected JBV-1. If firmware version read from your JBV-1 is not the latest one available (v.17 or older), it needs to be updated to version 18 by clicking Update Firmware.

10. Choose Refresh Status to check the SW version.

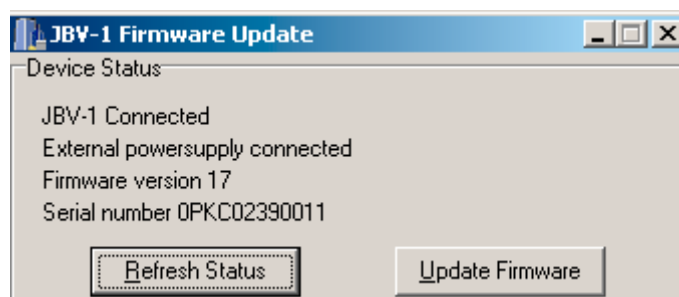


Figure 69 Checking JBV-1 SW version

11. Choose file JBV1v18.CDE and click Open to update your JBV-1 to a new version (v.18).

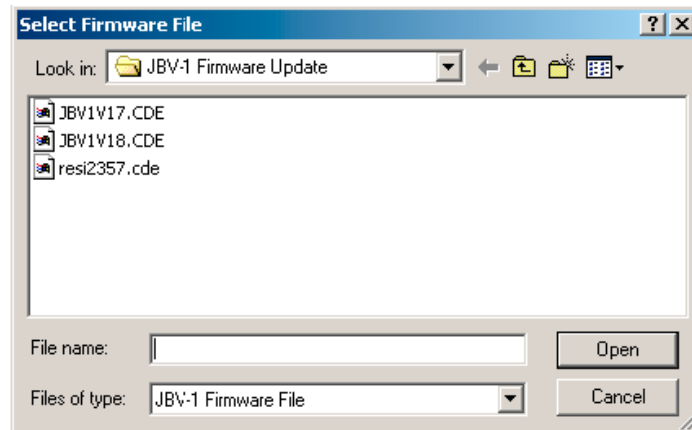


Figure 70 JBV-1 update directory window

Wait until you hear a "click" from the JBV-1.

The older SW file *JBV1v17.CDE* is visible in this view only if the previous JBV-1 SW package has been installed on your computer.

12. Click OK to see the current JBV-1 status (after a successful update).

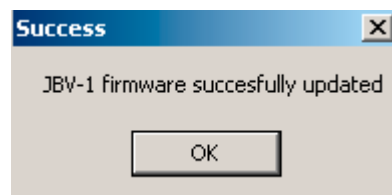


Figure 71 JBV-1 SW update done

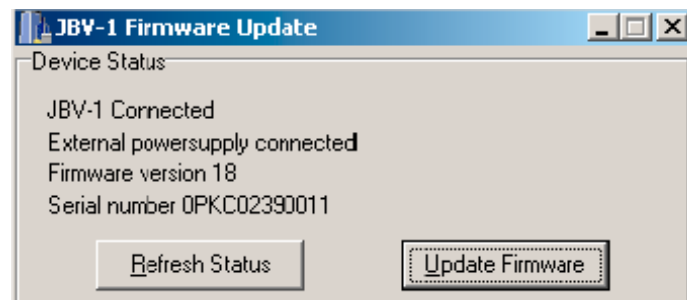


Figure 72 JBV-1 SW status

You have now updated the software of your JBV-1 docking station and it is ready for use.

### Next action

If you have several docking stations you need to update, disconnect the power and USB cables from the previous one and connect them to the next docking station. First, click Refresh Status to see the current SW version and then Update Firmware to update the software.

After you have updated all docking stations, close the *JBV-1 Firmware Update* dialog box.

(This page left intentionally blank.)

# Nokia Customer Care

## 4 — Service Tools

(This page left intentionally blank.)

## Table of Contents

Service tools.....	4-5
ACF-8.....	4-5
CA-45.....	4-0
CA-5S.....	4-5
CA-65DS.....	4-0
CA-67DS.....	4-0
DA-49.....	4-0
DAU-9S.....	4-0
FLC-2.....	4-6
FLS-4S.....	4-7
FPS-10.....	4-0
FPS-8.....	4-7
JBV-1.....	4-8
MJ-59.....	4-0
PCS-1.....	4-0
PKD-1.....	4-0
RJ-51 PA.....	4-0
RJ-79.....	4-0
SA-41.....	4-0
SF-10.....	4-0
SS-54.....	4-0
ST-30.....	4-0
SX-4.....	4-0
XCS-1.....	4-10
XCS-4.....	4-11
XRF-1.....	4-0
Service software concept.....	4-12
POS (Point of Sales) flash concept.....	4-12
FPS-8 Prommer box flash concept.....	4-13
JBV-1 flash concept.....	4-14
Module jig (MJ-59) service concept.....	4-15

### List of Figures

Figure 73 POS flash concept.....	4-12
Figure 74 FPS-8 Prommer box flash concept.....	4-13
Figure 75 JBV-1 flash concept.....	4-14
Figure 76 Module jig service concept.....	4-15





(This page left intentionally blank.)


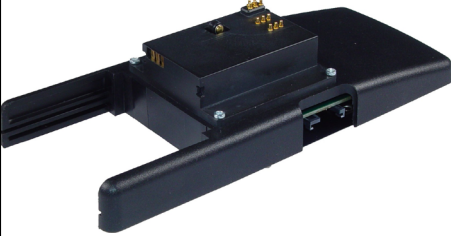




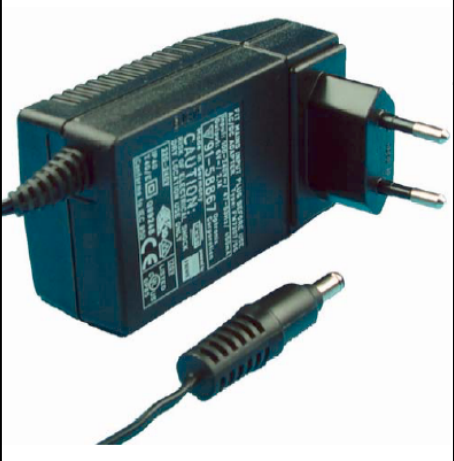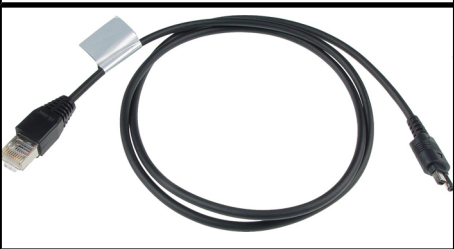


■ Service tools




List of Service Tools


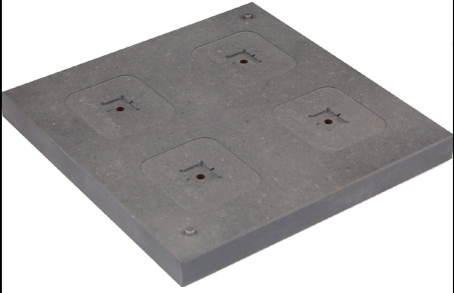
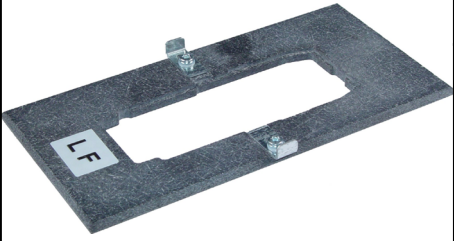
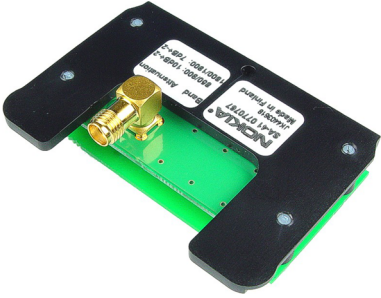

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product , refer to various concepts.

	ACF-8	Universal power supply	
<p>ACF-8 universal power supply is used to power FPS-8. ACF-8 has 6V DC and 2.1A output.</p>			
	CA-45	DS easy flash cable	
<p>The CA-45 DS easy flash cable is used to connect the phone bottom connector to either POS flashing device (FLS-4S) or to one of the PROMMER boxes (FPS-8/FPS-10).</p>			
	CA-5S	DC cable	
<p>The DC cable CA-5S is used to connect JBV-1 to the phone charger jack for ADC/VCHAR/ICHAR calibration  <b>Note:</b> Old SCB-3 can be used as well.</p>			
	CA-65DS	Easy flash cable	
<p>This cable connects the phone DC port to the FLS-4S prommer.</p>			



	CA-67DS	Easy flash cable	
<p>This cable connects the phone DC port to the FPS-10 prommer.</p>			
	DA-49	Docking station adapter	
<p>The Docking Station adaptor is used for this phone in combination with JBV-1. The adapter supports flashing and energy management calibration.</p> <p>Features include:</p> <ul style="list-style-type: none"> <li>• compatible with the JBV-1</li> <li>• easy phone attachment and detachment.</li> <li>• reliable phone locking</li> <li>• switch for detecting phone</li> <li>• replaceable SIM interface</li> </ul>			
	DAU-9S	MBUS cable	
<p>The MBUS cable DAU-9S has a modular connector and is used, for example, between the PC's serial port and module jigs, flash adapters or docking station adapters.</p> <p><b>Note:</b> Docking station adapters valid for DCT4 products.</p>			
	FLC-2	DC cable	
<p>FLC-2 is used with a flash adapter to supply a controlled operating voltage.</p>			

	<p>FLS-4S</p>	<p>Flash device</p>	
<p>FLS-4S is a dongle and flash device incorporated into one package, developed specifically for POS use.</p>			
	<p>FPS-10</p>	<p>Flash prommer</p>	
<p>FPS-10 interfaces with:</p> <ul style="list-style-type: none"> <li>• PC</li> <li>• Control unit</li> <li>• Flash adapter</li> <li>• Smart card</li> </ul> <p>FPS-10 flash prommer features:</p> <ul style="list-style-type: none"> <li>• Flash functionality for BB5 terminals</li> <li>• Smart Card reader for SX-2 or SX-4</li> <li>• USB traffic forwarding</li> <li>• USB to FBUS/Flashbus conversion</li> <li>• LAN to FBUS/Flashbus and USB conversion</li> <li>• Vusb output switchable by PC command</li> </ul> <p>FPS-10 sales package includes:</p> <ul style="list-style-type: none"> <li>• FPS-10 prommer</li> <li>• Power Supply with 5 country specific cords</li> <li>• USB cable</li> </ul>			
	<p>FPS-8</p>	<p>FLASH prommer</p>	
<p>The flash prommer FPS-8 is used for example with flash adapters, docking station adapters and flash/docking stations. Power is supplied to FPS-8 from the universal power supply, ACF-8.</p> <p>The sales pack includes:</p> <ul style="list-style-type: none"> <li>• FPS-8 flash prommer</li> <li>• FPS-8 activation sheet</li> <li>• ACF-8 universal power supply</li> <li>• AXS-4 service cable (D9-D9)</li> <li>• Printer cable</li> </ul>			

	JBV-1	Docking station	
<p>The JBV-1 docking station is a general tool that has been designed for calibration and software update use. The JBV-1 is used together with a docking station adapter as one unit</p> <p>In calibration mode the JBV-1 is powered by an external power supply: 11-16V DC. When flashing the power for the phone can be taken from the flash prommer or external power supply: 11-16 V DC.</p> <p><b>Note:</b> JBV-1 main electrical functions are:</p> <ul style="list-style-type: none"> <li>• adjustable VBATT calibration voltage, current measurement limit voltage: VCHAR, current measurement: ICHAR</li> <li>• adjustable ADC calibration voltage via BTEM and the BSI signal</li> <li>• BTEMP and BSI calibration resistor</li> <li>• signal from FBUS to the phone via the parallel jig</li> <li>• control via FBUS or USB</li> <li>• Flash OK/FAIL indication</li> </ul>			
	MJ-59	Module jig	
<p>MJ-59 is meant for component level troubleshooting.</p> <p>The jig includes an RF interface for GSM and WCDMA. In addition, it has the following features:</p> <ul style="list-style-type: none"> <li>• Provides mechanical interface with Engine module</li> <li>• Provides galvanic connection to all needed test pads in module</li> <li>• Multiplexing between USB and FBUS media, controlled by Vusb</li> <li>• UI test interface</li> <li>• MMC interface</li> <li>• Duplicated SIM connector</li> <li>• Audio components: IHF, MIC, earpiece</li> <li>• Connector for control unit</li> <li>• Access for Pop-Port™ system connector</li> </ul> <p><b>Note:</b> In the picture CU-4 is connected to MJ-59 . CU-4 is not part of the MJ-59 sales package and has to be ordered separately.</p>			
	PCS-1	Power cable	
<p>The PCS-1 power cable (DC) is used with a docking station, a module jig or a control unit to supply a controlled operating voltage.</p>			

	PKD-1	SW security device	
<p>SW security device is a piece of hardware enabling the use of the service software when connected to the parallel (LPT) port of the PC.</p> <p>Without the device, it is not possible to use the service software.</p> <p>Printer or any such device can be connected to the PC through the device if needed.</p>			
	RJ-51 PA	Rework jig	
<p>To be used with ST-30!</p>			
	RJ-79	Soldering jig	
<p>The soldering jig RJ-79 is used for soldering and as a rework jig for system module. It is made of lead-free rework compatible material.</p>			
	SA-41	RF Coupler	
<p>SA-41 RF Coupler is used for Go/No-Go test after changing components in the RF part of the phone.</p> <p>The SA-41 is mounted on the docking station adapter, after which the phone can be placed in the docking station adapter.</p> <p><b>Note:</b> For RF attenuation values, please refer to the Service bulletin.</p>			
	SF-10	POS flash adapter	
<p>The POS flash adapter SF-10 allows FBUS/MBUS connections for flashing.</p>			

	SS-54	Alignment Jig	
<p>Alignment jig is used to efficiently assemble the dome-sheet to the phone's PWB. The jig is made of EDS proof material.</p>			
	ST-30	Rework stencil	
<p>Front End Module (FEM)</p>			
	SX-4	Smart card	
<p>SX-4 is a BB5 security device used to protect critical features in tuning and testing. SX-4 is also needed together with FPS-10 when DCT-4 phones are flashed.</p>			
	XCS-1	Service cable	
<p>The XCS-1 service cable is used to connect FLS-4S to the POS flash adapter for supplying a controlled operating voltage and data connection.</p>			

	XCS-4	Modular cable	
<p>XCS-4 is a shielded (one specially shielded conductor) modular cable for flashing and service purposes.</p>			
	XRF-1	RF cable	
<p>The RF cable is used to connect, for example, a module repair jig to the RF measurement equipment. SMA to N-Connector ca. 610mm.</p> <p>Attenuation for:</p> <ul style="list-style-type: none"> <li>• GSM850/900: 0.3+-0.1 dB</li> <li>• GSM1800/1900: 0.5+-0.1 dB</li> <li>• WLAN: 0.6+-0.1dB</li> </ul>			

■ Service software concept

POS (Point of Sales) flash concept

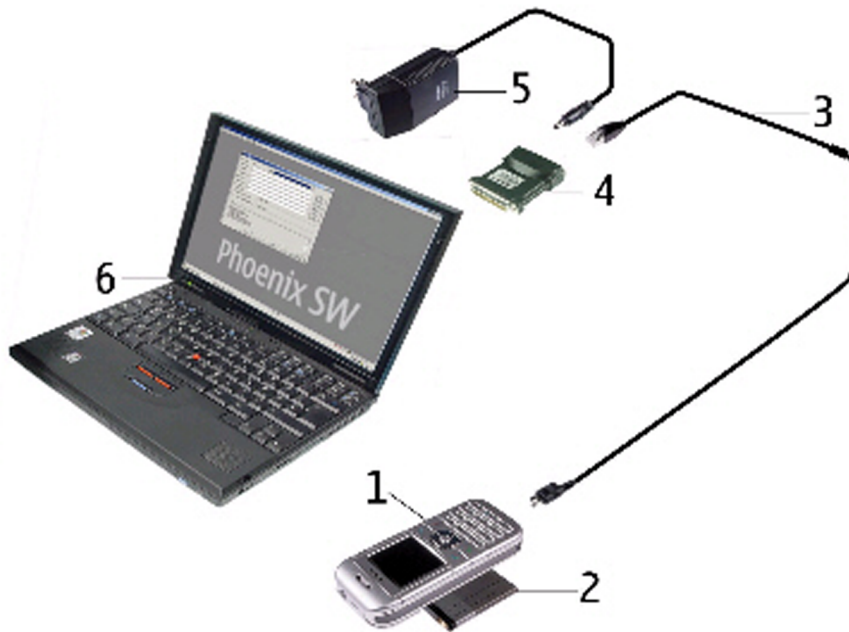


Figure 73 POS flash concept

Item	Description	Type
1	Phone	
2	Battery	
3	Easy flash cable	CA-67DS
4	FLS-4S sales pack	FLS-4S
5	AC charger	ACF-8
6	PC with Service SW CD-ROM	



**FPS-8 Prommer box flash concept**

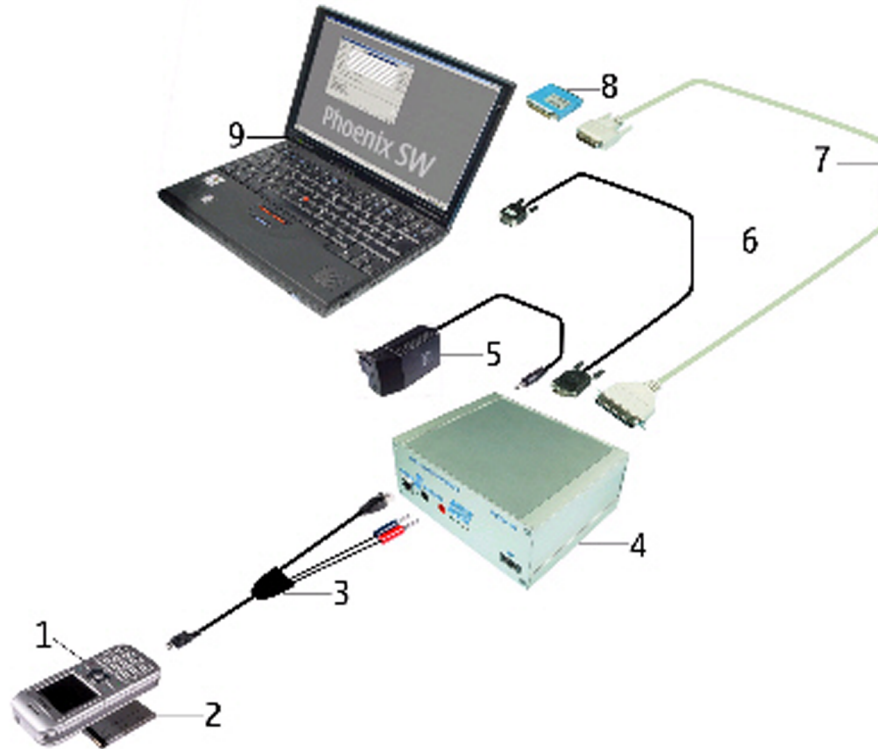


Figure 74 FPS-8 Prommer box flash concept

Item	Description	Type
1	Phone	
2	Battery	
3	Service cable	CA-65DS
4	Flash prommer box sales pack including 2 pcs SF12 SRAM	FPS-8
5	AC Charger, included in FPS-8 sales package	ACF-8
6	RS-232 (D9 – D9) cable, included in FPS-8 sales pack	AXS-4
6	Printer cable, included in FPS-8 sales package	
8	Software protection key	PKD-1
9	PC with service SW	

**Note:** More than 32MB SRAM required in FPS-8.

**JBV-1 flash concept**

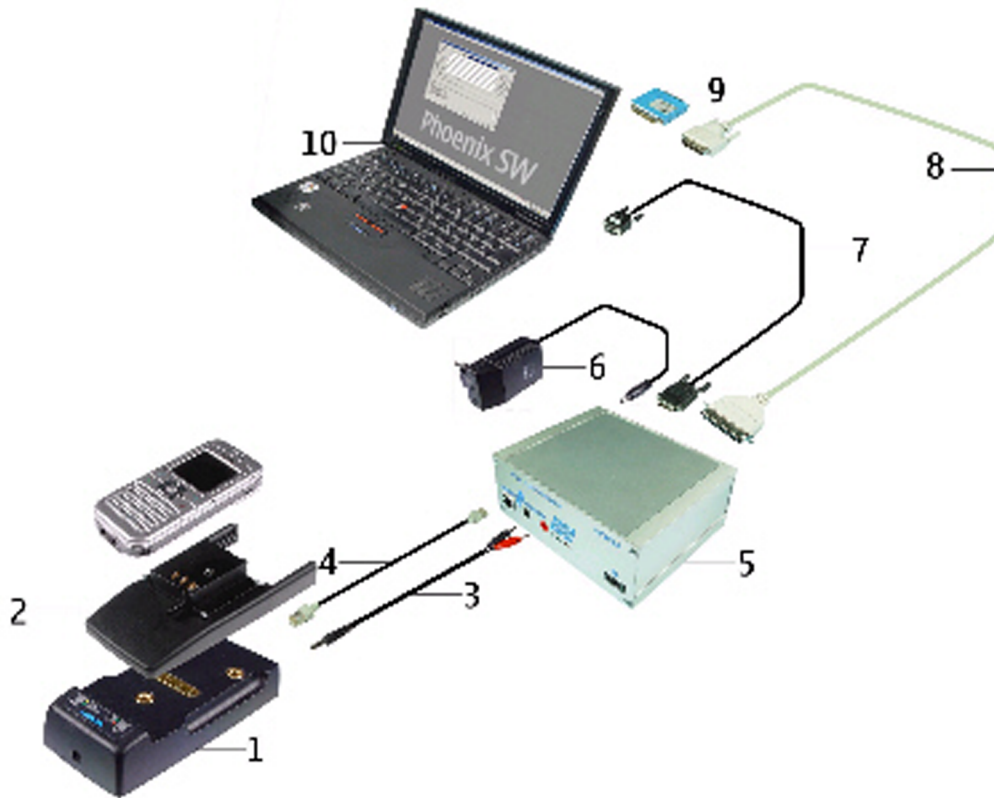


Figure 75 JBV-1 flash concept

Item	Description	Type
1	Docking station	JBV-1
2	Docking station adapter	DA-49
3	DC power cable	PCS-1
4	Modular cable	XCS-4
5	Flash prommer box sales pack	FPS-8
6	Power supply, included in FPS-8 sales package	AFC-8
7	RS-232 (D9 – D9) cable, included in FPS-8 sales package	AXS-4
8	Printer cable, included in FPS-8 sales package	
9	Software protection key	PKD-1
10	Service SW (PHOENIX)	

**Note:** More than 32MB SRAM required in FPS-8.

**Module jig (MJ-59) service concept**

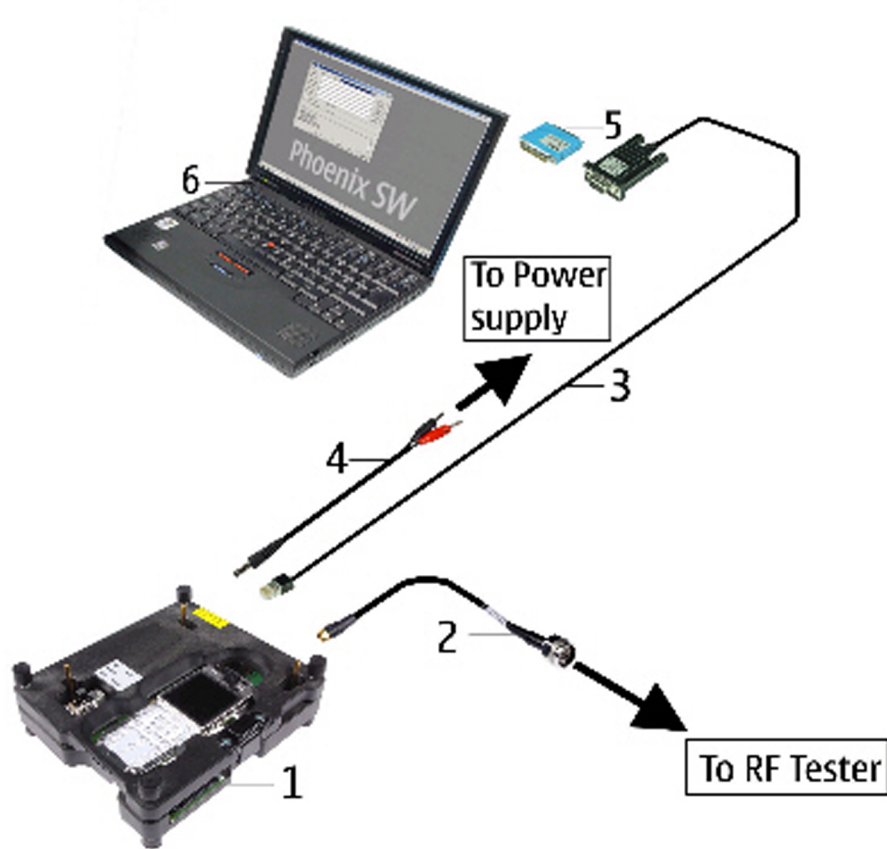


Figure 76 Module jig service concept

Item	Description	Type
1	Module jig	MJ-59
2	RF test cable	XCF-4
3	Service MBUS/FBUS cable	DAU-9S
4	DC power cable	PCS-1
5	Software protection key	PKD-1
6	PC with Service SW (PHOENIX)	

(This page left intentionally blank.)

## **5 — Disassembly and reassembly instructions**

(This page left intentionally blank.)

## Table of Contents

Disassembly instructions.....	5-5
Reassembly instructions.....	5-9


(This page left intentionally blank.)



## ■ Disassembly instructions

### Steps


1. Tools needed for disassembly and reassembly

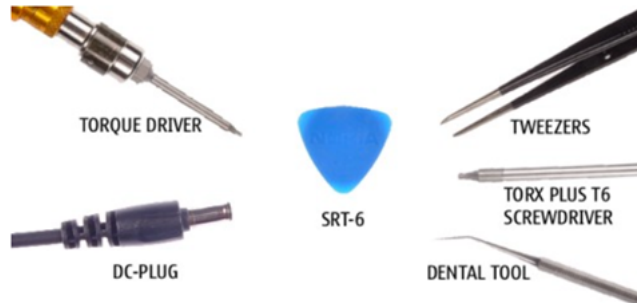

2. Protect the window with a film.




3. Unlock and remove the **B-cover**.

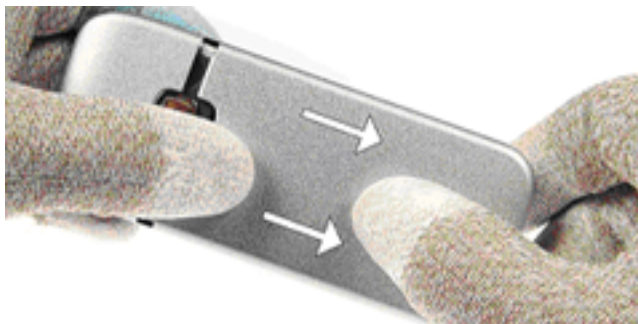

4. Place the SRT-6 between the **D-cover assy** and the **top cap** as shown in the picture.



5. First turn the **top cap** as shown in the picture and then remove it carefully.

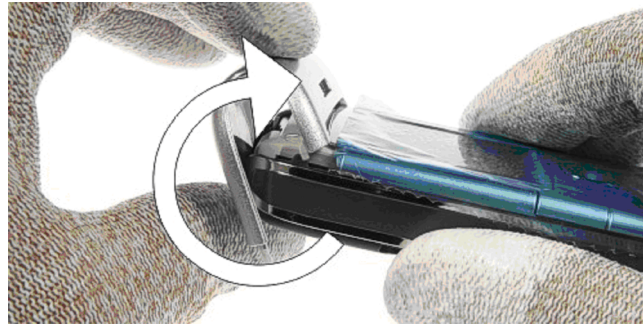

6. Use the SRT-6 as a lever to unlock the **A-cover assy**.



7. Remove the **A-cover assy**.



8. Remove the **keymat** and protect the inner side of the window with a film.




9. Unscrew the six Torx Plus size 6 screws in the shown order.

**Note:** For reassembly ALWAYS USE NEW SCREWS!


For reassembly, use the reverse order and a Torx Plus size 6 driver with a torque setting of **28 Ncm**.




10. Lift the modules a bit with SRT-6 and remove them from the **D-cover assy**.

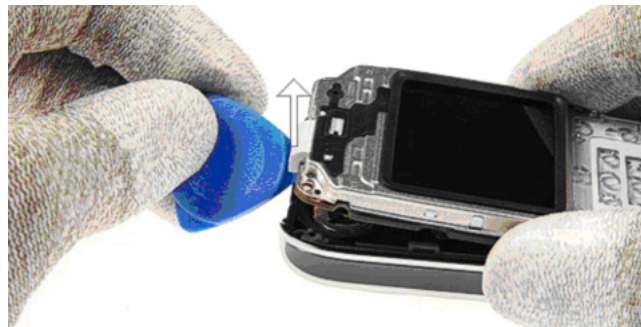


11. First, lift the **LCD shielding** with **LCD module** a little and then remove the **Light guide assy**.

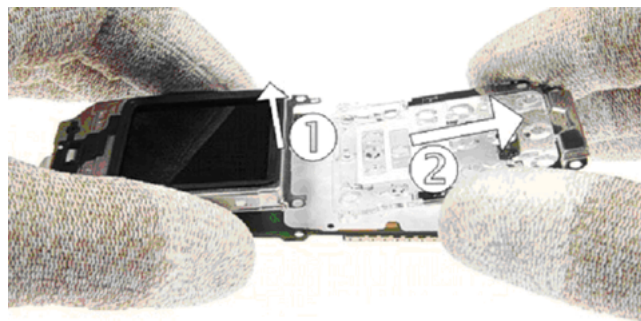


12. Separate the modules carefully to open the board-to-board connector.

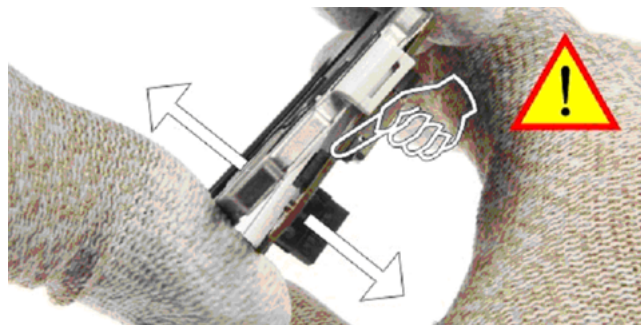


13. Unlock the **LCD module**...

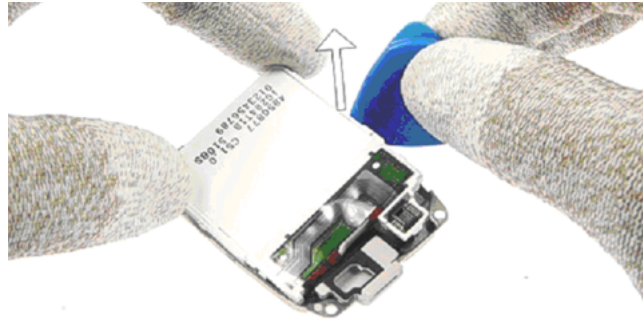

14. ...and protect it with a film.

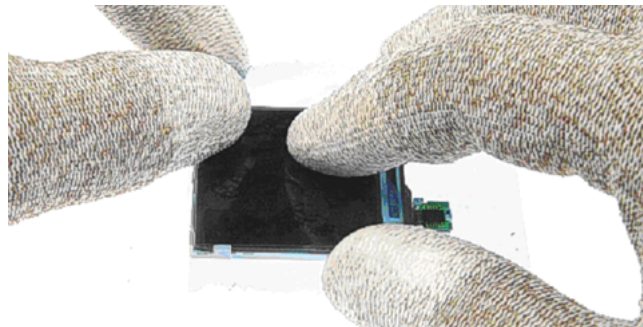


15. Remove the **Locking clips**.

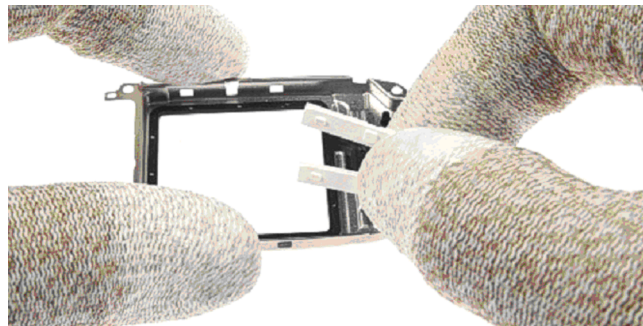


16. **Note:** For reassembly only!

First place the **LCD module** into the **LCD shielding** and then insert the **locking clips** to secure the **LCD module**. Note the correct position of the clips.

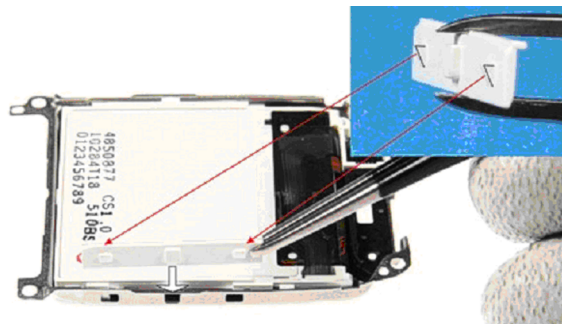

17. Remove the **acoustic channel**.

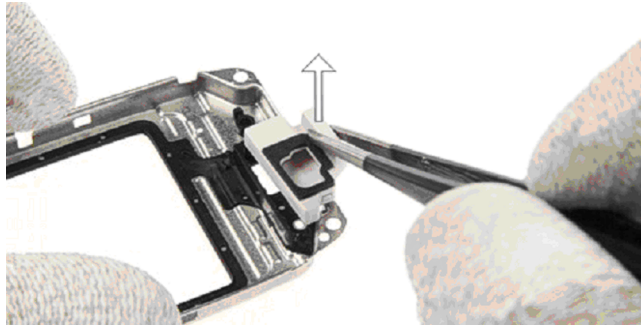


18. The **antenna IHF assy** drops out when turning the **D-cover assy**.



19. Press out the **easy flash connector** by using the DC-plug.



20. Remove the **microphone** with the dental tool.

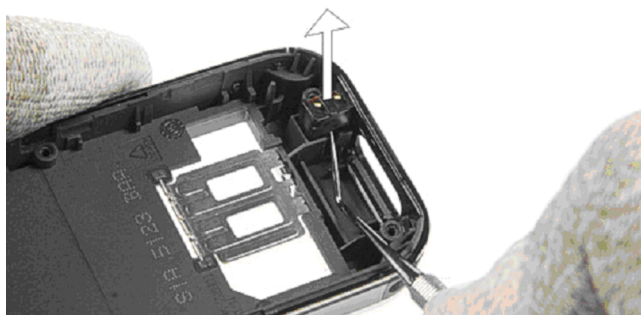

### ■ Reassembly instructions

For reassembly, follow the Disassembly instructions, but *in reversed order*

**Note:** Pay special attention to step **16** and **9**.

**Note:** For reassembly, ALWAYS USE NEW SCREWS.

(This page left intentionally blank.)

## 6 — Baseband troubleshooting

(This page left intentionally blank.)



## Table of Contents

General baseband troubleshooting.....	6-5
Phone is dead.....	6-5
Flash programming do not work.....	6-6
Easy flash programming does not work.....	6-7
Power does not stay on or the phone is jammed.....	6-9
Display shows "Contact Service".....	6-10
The phone does not register to the networks, or the phone can not make a call.....	6-11
SIM related faults.....	6-12
Insert SIM card fault.....	6-12
SIM card rejected.....	6-12
User interface.....	6-13
Blank display.....	6-13
Display is corrupt.....	6-13
Dead keys.....	6-14
No backlight for display or keys.....	6-14
Audio troubleshooting.....	6-16
Audio troubleshooting using phoenix.....	6-16
Check microphone using "Hp microphone in Ext speaker out" loop.....	6-17
Check earpiece using "Ext microphone in Hp speaker out" loop.....	6-18
Check IHF & ringing tone function using "Buzzer".....	6-18
Check vibra function using "Vibra control".....	6-19
Earpiece fault.....	6-20
IHF/ringing tone fault.....	6-21
Headset earpiece fault.....	6-22
Microphone fault.....	6-23
Headset microphone fault.....	6-24

## List of Figures

Figure 77 Phone is dead troubleshooting.....	6-6
Figure 78 Flash programming fault.....	6-7
Figure 79 Easy flash programming fault.....	6-8
Figure 80 Power does not stay on or the phone is jammed.....	6-9
Figure 81 Troubleshooting when the "Contact Service" message is seen.....	6-10
Figure 82 No registering or call.....	6-11
Figure 83 Insert SIM card fault.....	6-12
Figure 84 Signal diagram.....	6-12
Figure 85 Signal diagram.....	6-13
Figure 86 Blank display.....	6-13
Figure 87 Display is corrupt.....	6-14
Figure 88 Dead keys.....	6-14
Figure 89 No backlight for display or keys.....	6-15
Figure 90 Phoenix audio test window.....	6-16
Figure 91 PWB audio test points.....	6-17
Figure 92 Test arrangement for microphone.....	6-18
Figure 93 Test arrangement for of earpiece.....	6-18
Figure 94 Checking IHF and ring tone by using "Buzzer".....	6-19
Figure 95 Checking vibra function by using vibra control.....	6-19
Figure 96 Earpiece fault flow chart.....	6-20
Figure 97 IHF/ringing tone fault flow chart.....	6-21

Figure 98 Headset earpiece fault flow chart.....6-22  
Figure 99 Microphone fault flow chart.....6-23  
Figure 100 Headset microphone fault flow chart.....6-24

## ■ General baseband troubleshooting

### Phone is dead

This means that the phone does not use any current at all when the supply is connected and/or power key is pressed.

It is assumed that the voltage supplied is 3.6 VDC. The UEMCLite will prevent any functionality at battery/supply levels below 2.9 VDC.

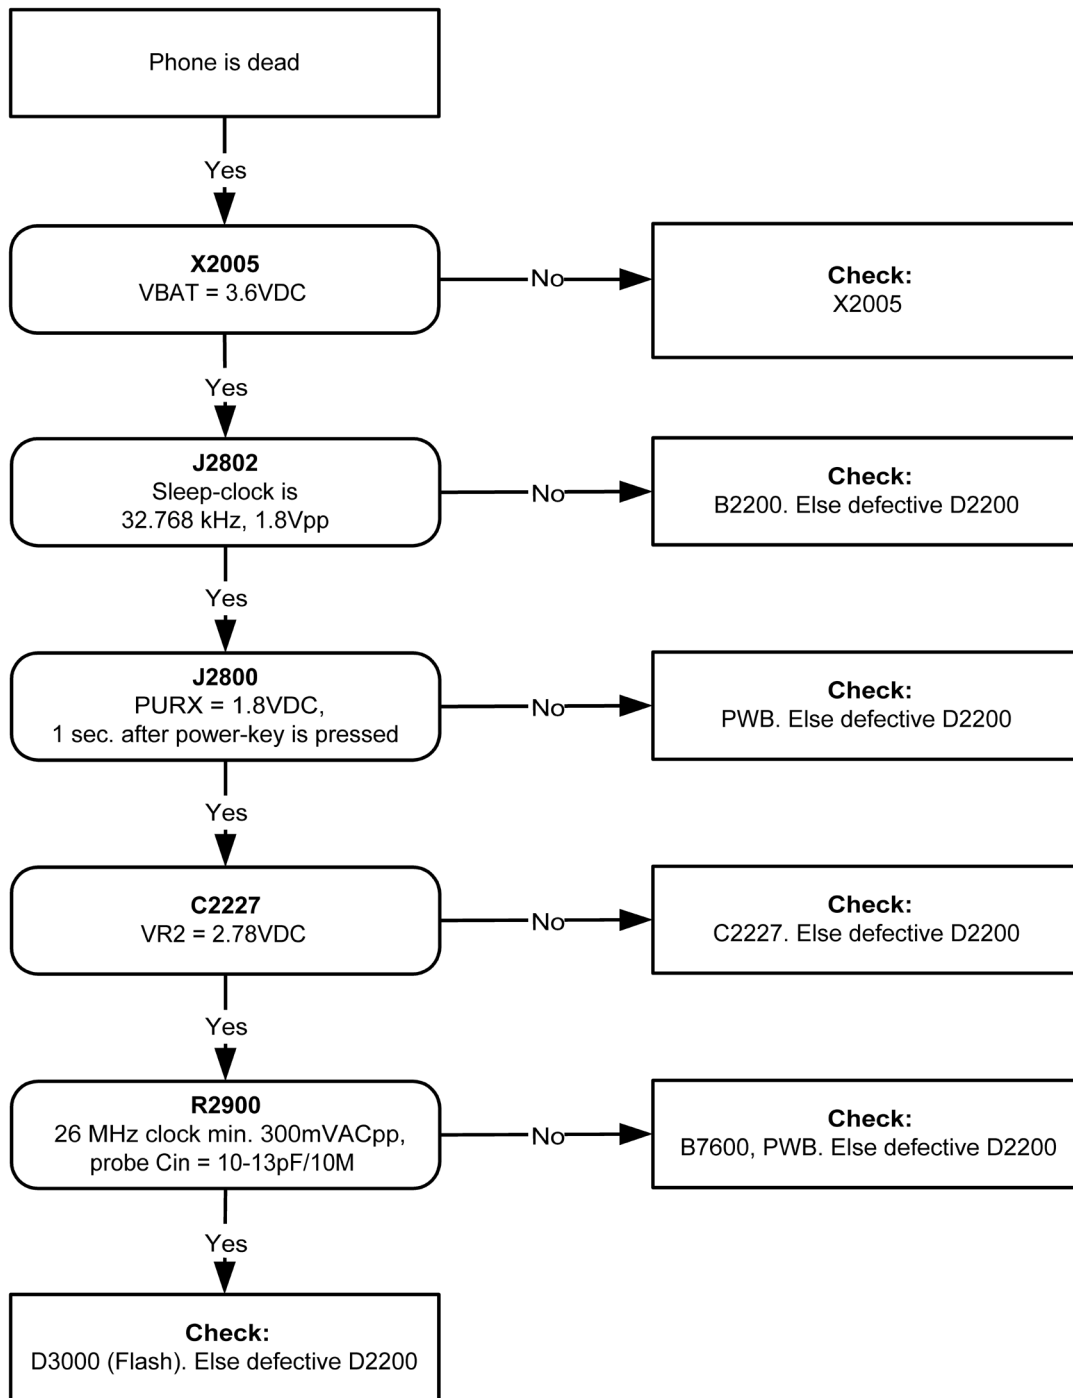


Figure 77 Phone is dead troubleshooting

### Flash programming do not work

The flash programming can be done via the pads on the PWB (J2060).

In case of Flash failure in FLALI station, swap the phone and send it back to the care program for further analysis. Possible failures could be short-circuit of balls under  $\mu$ BGAs (UEMCLite, UPP4M, FLASH). Missing or misaligned components. In flash programming error cases the flash prommer can give some information about a fault. The fault information messages could be:

*Phone doesn't set FBUS\_TX line low*

Because of the use of uBGA components it is not possible to verify if there is a short circuit in control- and address lines of MCU (UPP4M) and memory (flash).

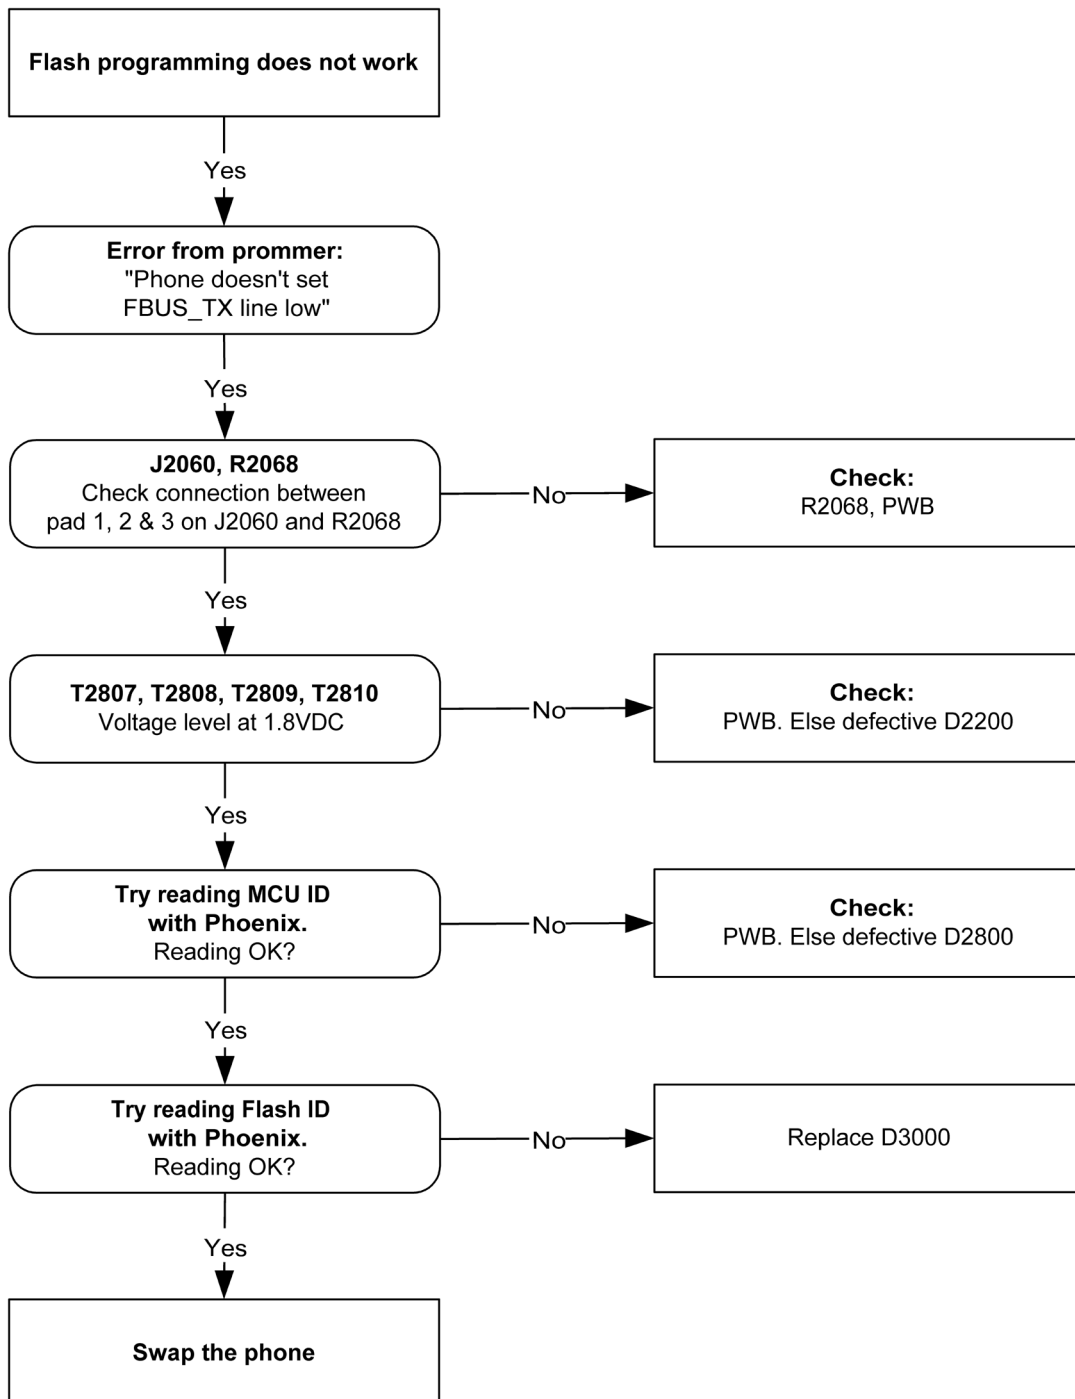


Figure 78 Flash programming fault

### Easy flash programming does not work

The flash programming can also be done via the easy flash connector.

In case of Flash failure in FLALI station, swap the phone and send it back to the care program for further analysis. Possible failures could be short-circuit of balls under  $\mu$ BGAs (UEMCLite, UPP4M, FLASH). Missing or misaligned components.

In flash programming error cases the flash prommer can give some information about a fault. The fault information messages could be:

- Phone does not set FBUS\_TX line low

Because of the use of uBGA components it is not possible to verify if there is a short circuit in control- and address lines of MCU (UPP4M) and memory (flash).

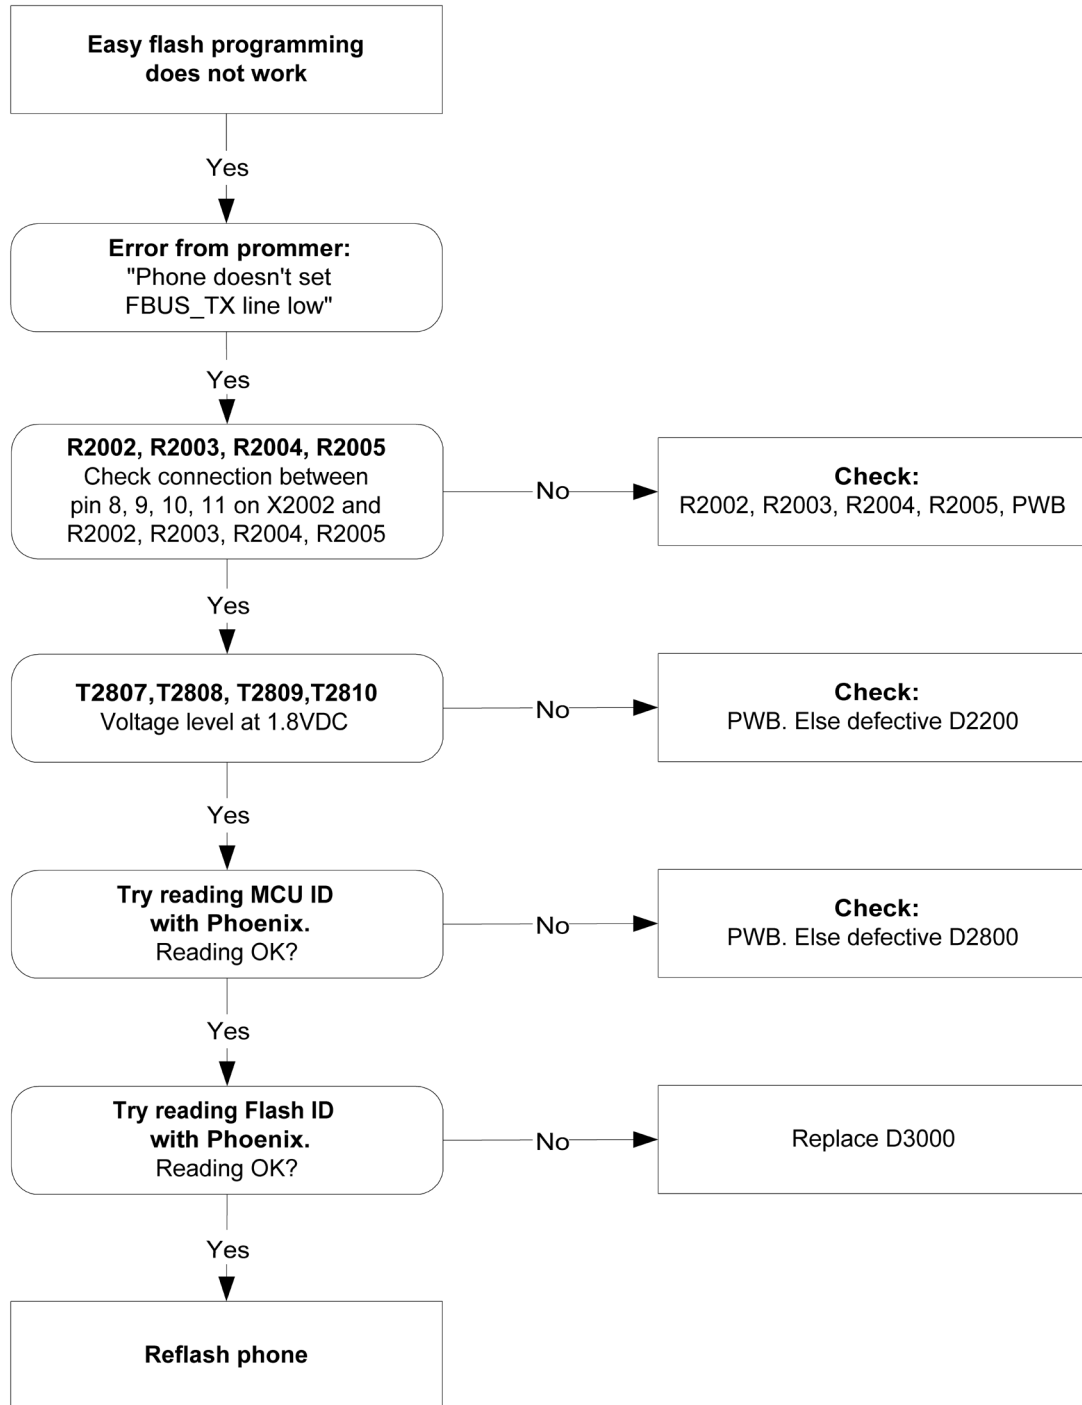


Figure 79 Easy flash programming fault

**Power does not stay on or the phone is jammed**

If this kind of a failure is presenting itself immediately after FLALI, it is most likely caused by ASIC's missing contact with PWB.

If the MCU doesn't service the watchdog register within the UEMCLite, the operations watchdog will run out after approximately 32 seconds. Unfortunately, the service routine can not be measured.

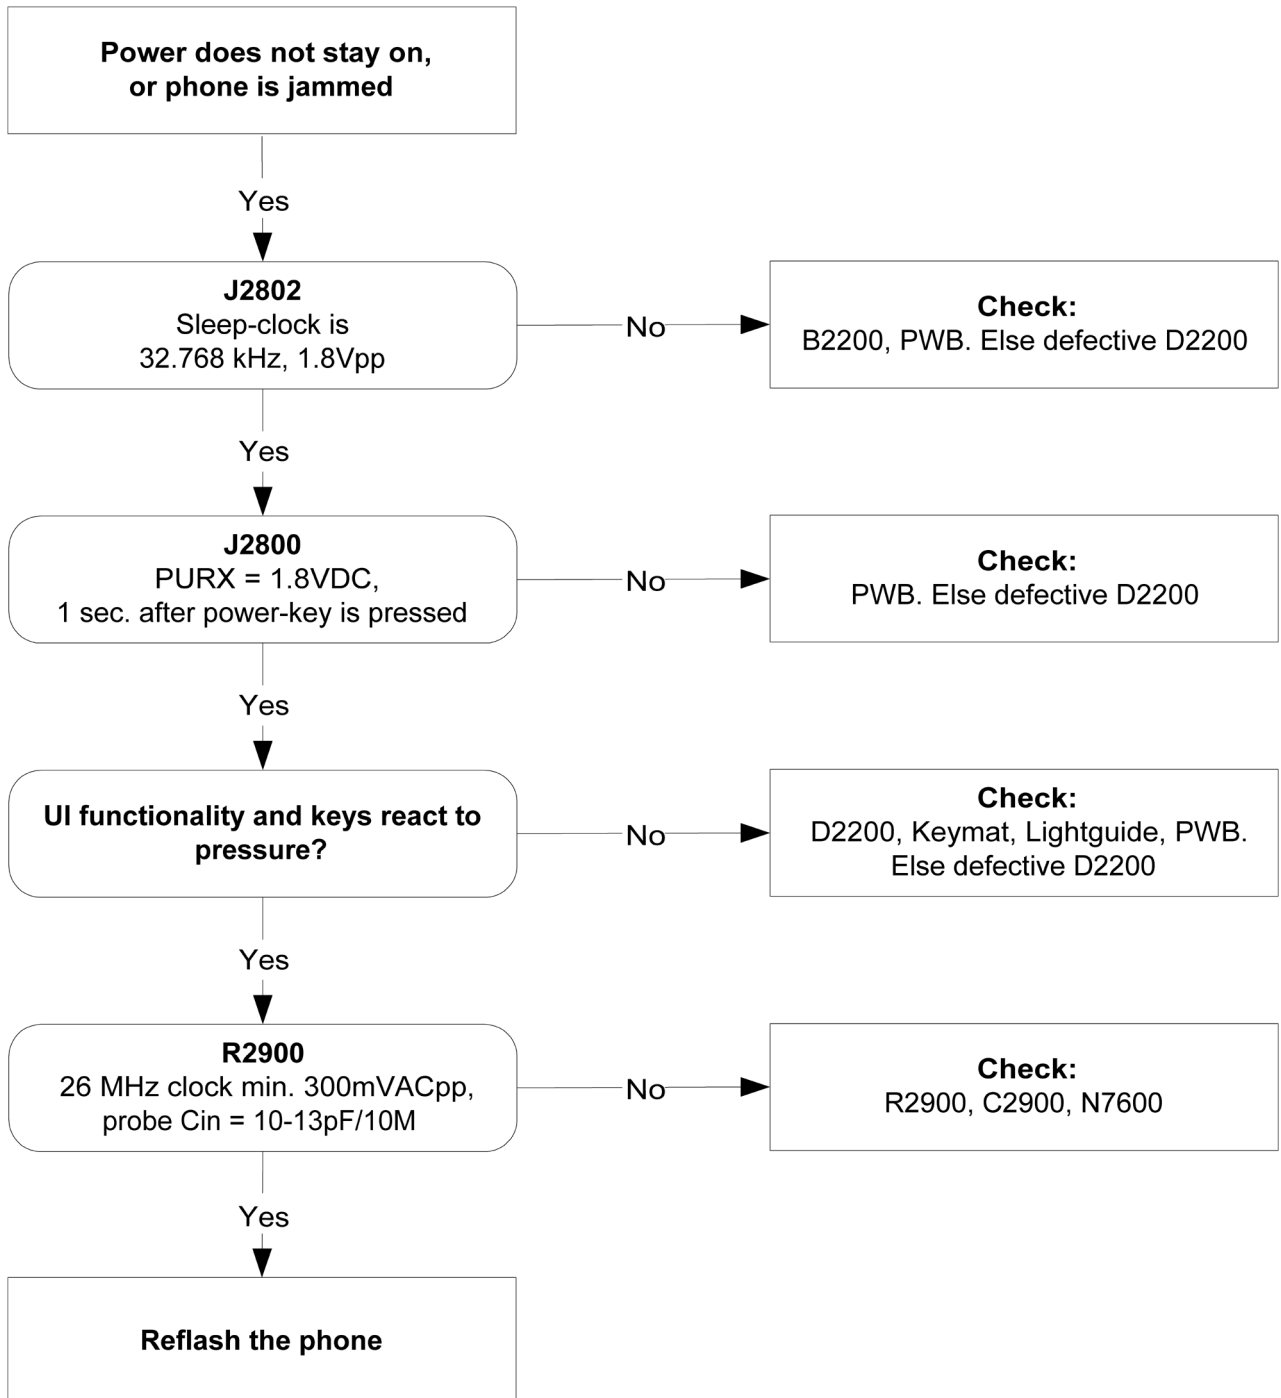


Figure 80 Power does not stay on or the phone is jammed

### Display shows "Contact Service"

This error can only happen at power up where several self-tests is run. If any of these test cases fails the display will show the message: "Contact Service".

It's individual test cases so the below lineup of error hunting's has no chronological order. Use common sense and experience to decide which test case to start error hunting at.

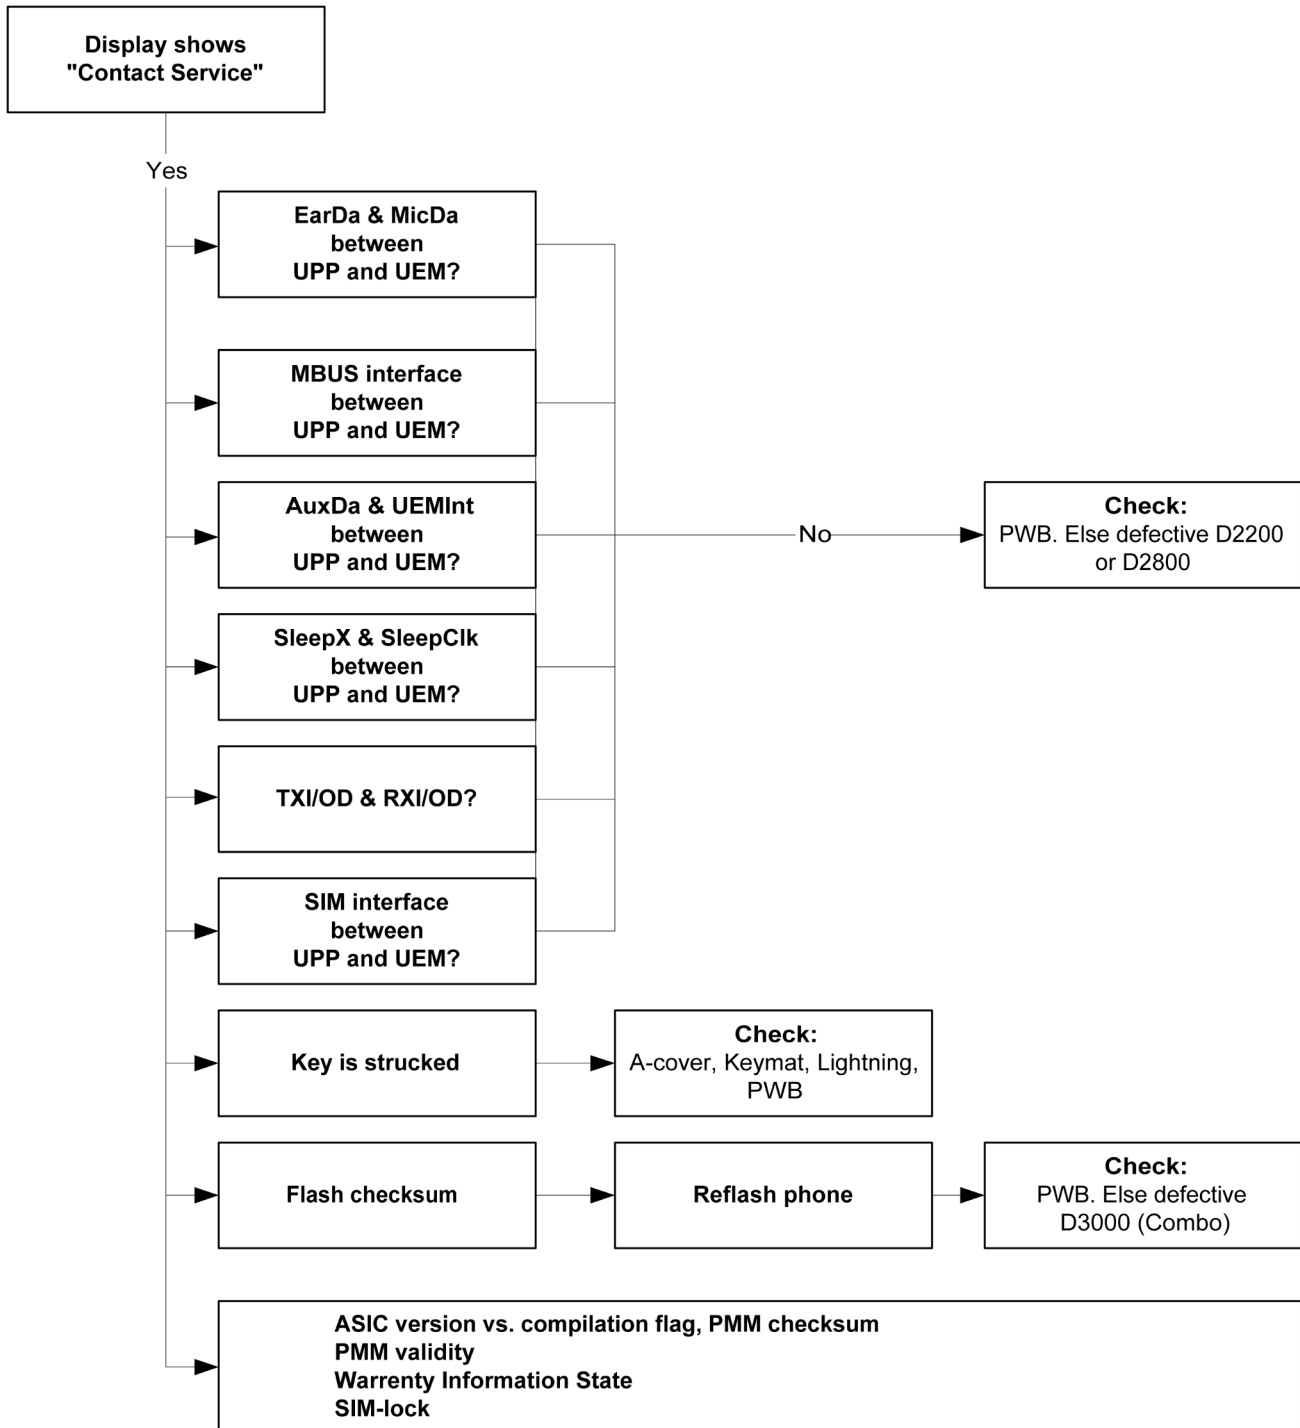


Figure 81 Troubleshooting when the "Contact Service" message is seen



## The phone does not register to the networks, or the phone can not make a call

If the phone doesn't register to the network, the fault can be in either BB or RF. Only few signals can be tested since several signals is 'buried' in one or more of the inner layers of the PWB.

First of all check that SIM LOCK is not causing the error by using a Test-SIM card and connect the phone to a tester.

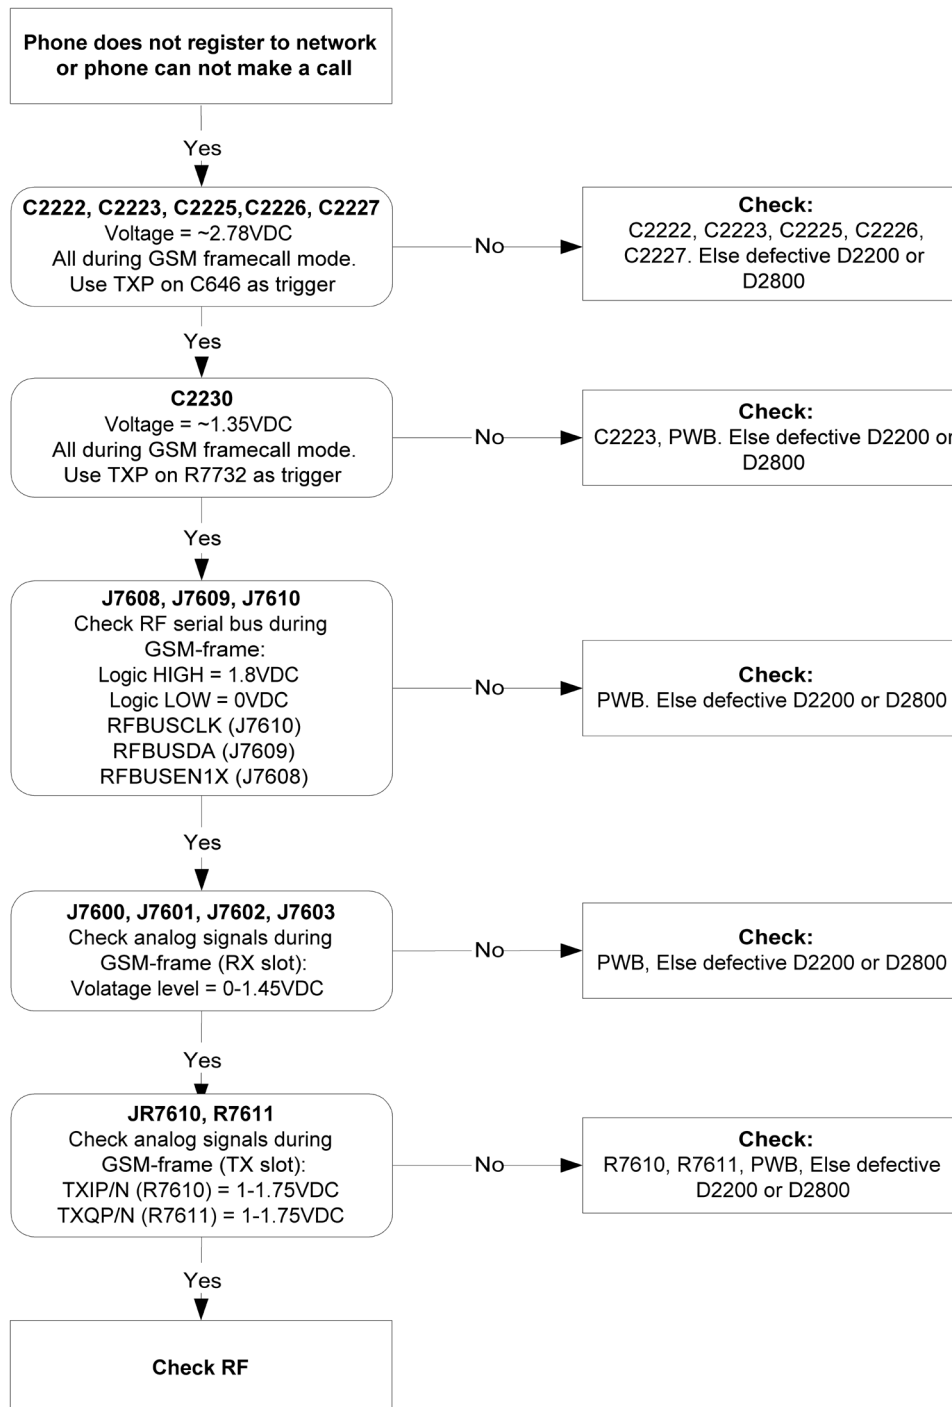


Figure 82 No registering or call

■ **SIM related faults**

**Insert SIM card fault**

The hardware of the SIM interface from UEMCLite (D2200) to the SIM connector (X2700) can be tested without a SIM card. When the power is switched on the phone first check for a 1.8 V SIM card and then a 3 V SIM card. The phone will try this four times, where after it will display "Insert SIM card".

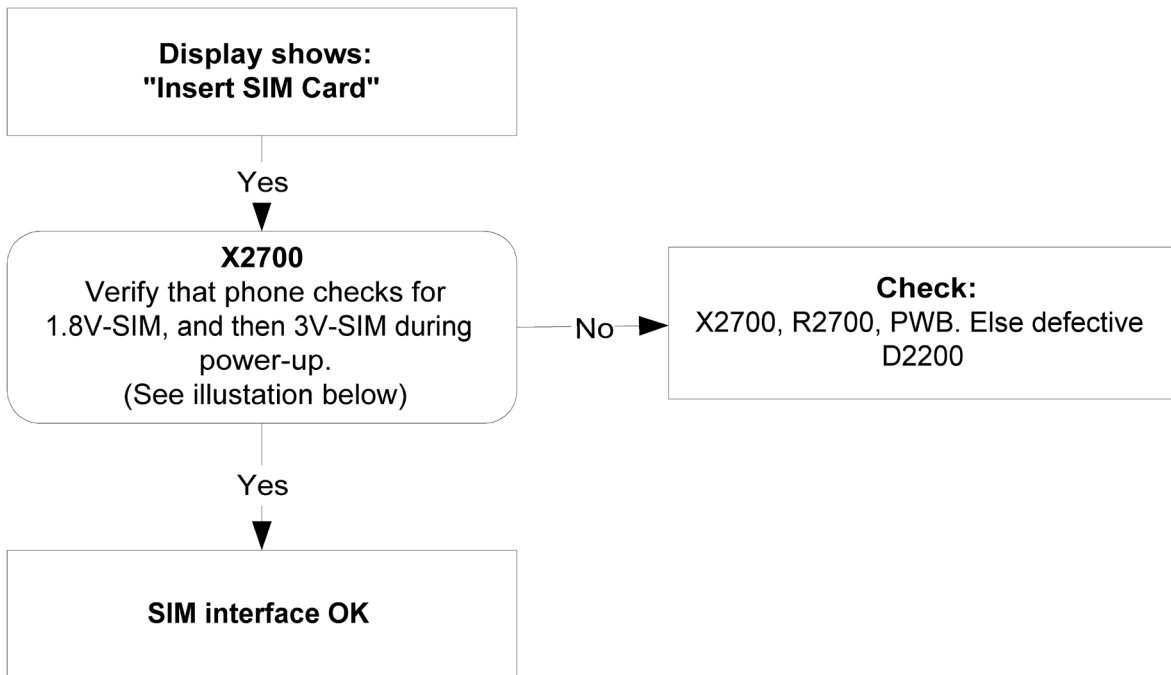


Figure 83 Insert SIM card fault

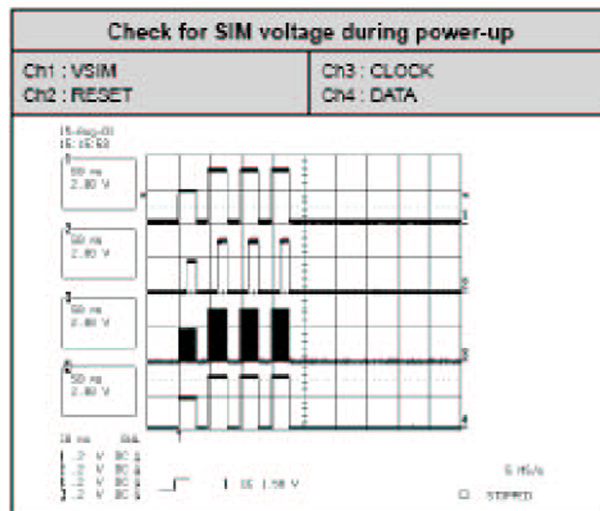


Figure 84 Signal diagram

**SIM card rejected**

The error "SIM card rejected" means that the ATR message received from SIM card is corrupted, e.g. data signal levels are wrong. The first data is always ATR and it is sent from card to phone.

For reference a picture with normal SIM power-up is shown below.

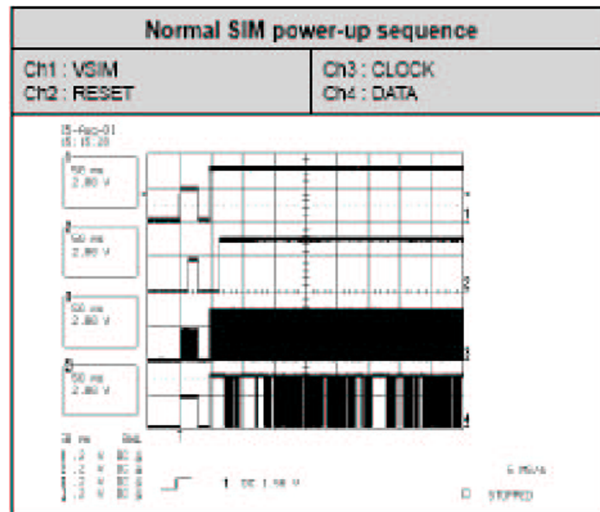


Figure 85 Signal diagram

## ■ User interface

### Blank display

The display does not show any information at all.

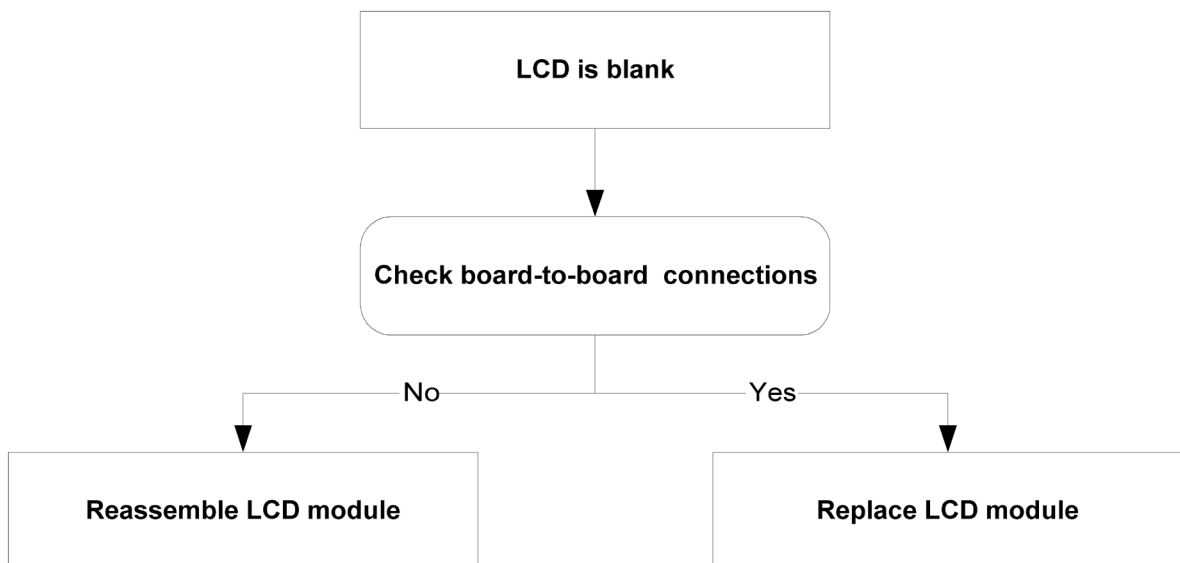


Figure 86 Blank display

### Display is corrupt

The display contains missing or fading segments or color presentation is incorrect.

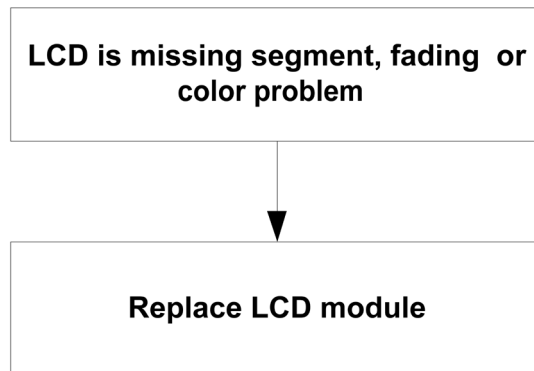


Figure 87 Display is corrupt

### Dead keys

Not a single key is responding.

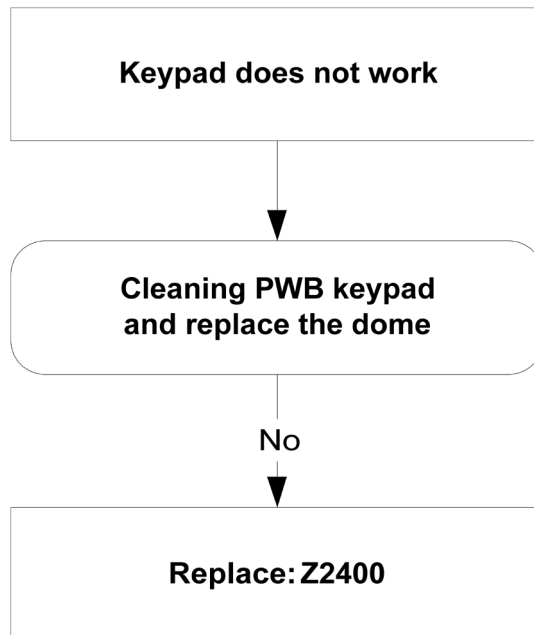


Figure 88 Dead keys

### No backlight for display or keys

There is no backlight on the display or on the keys.

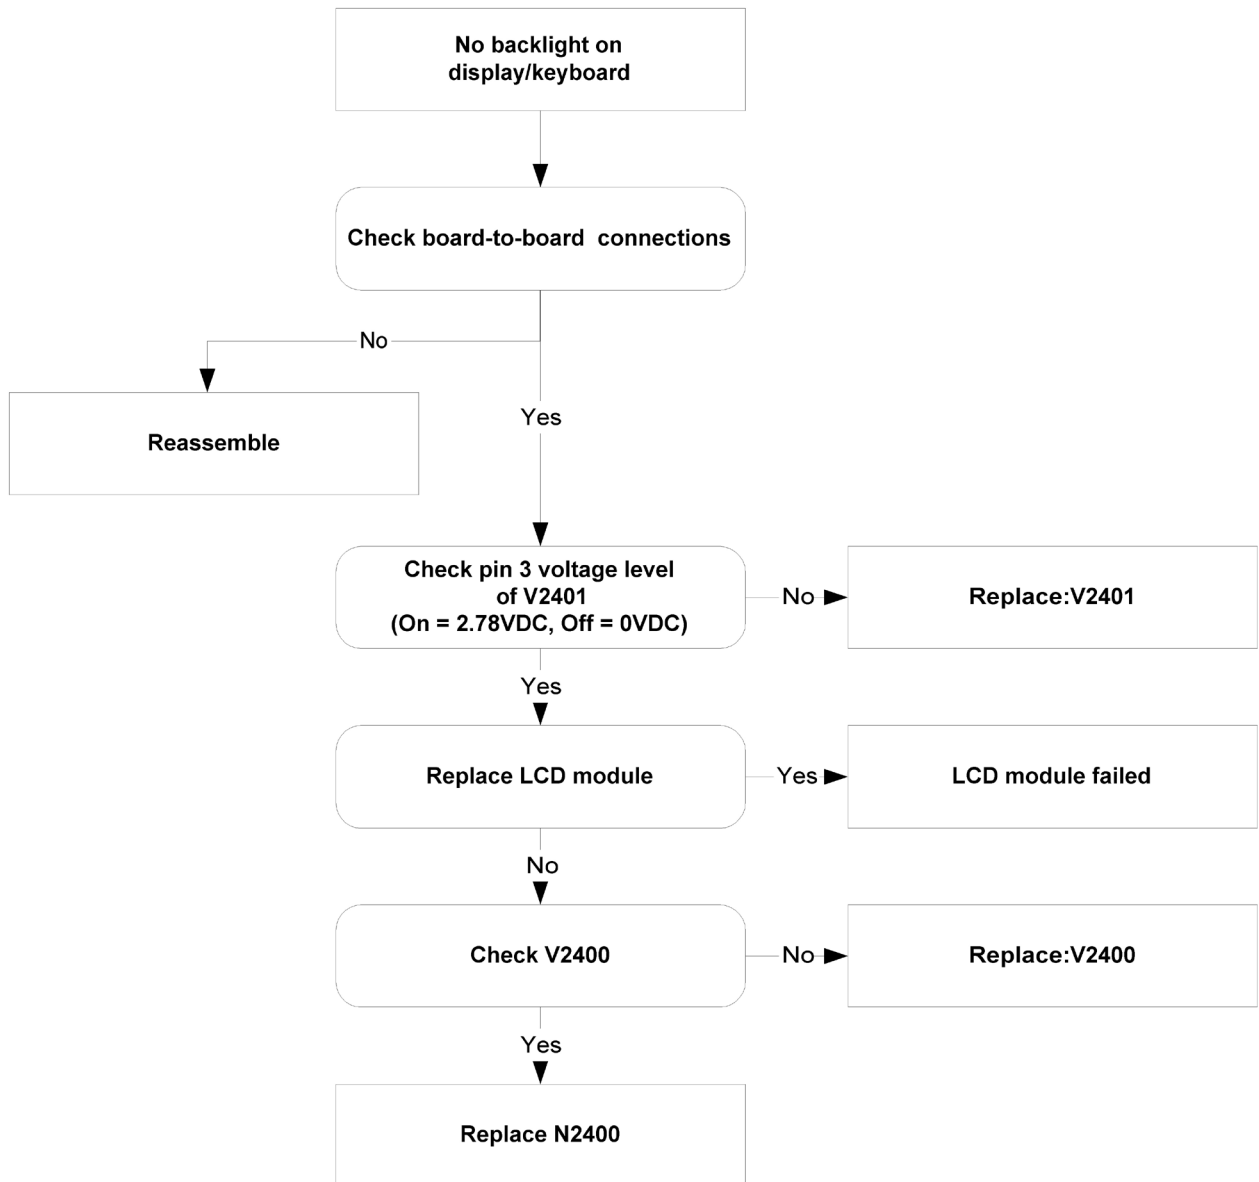


Figure 89 No backlight for display or keys

## ■ Audio troubleshooting

### Audio troubleshooting using phoenix

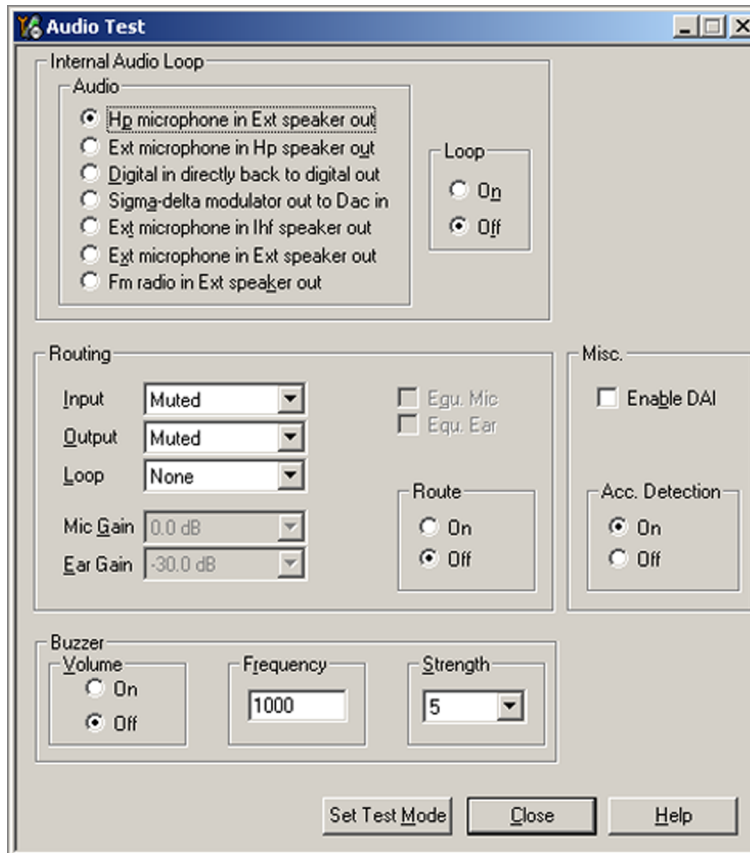


Figure 90 Phoenix audio test window

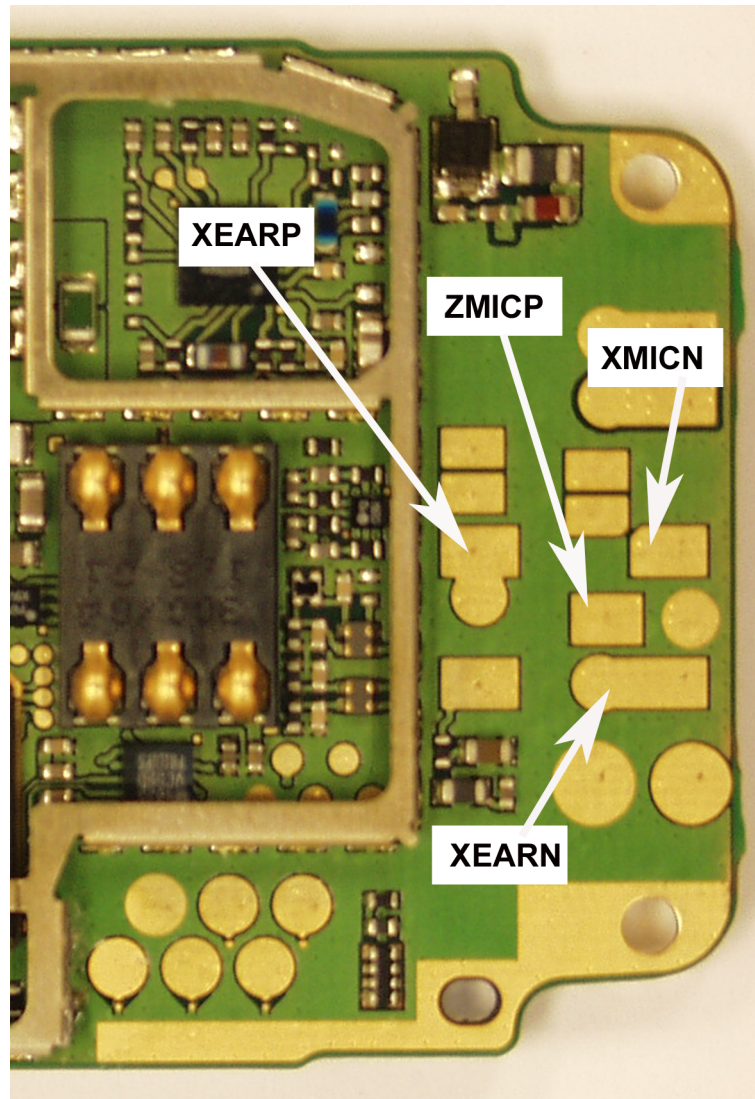


Figure 91 PWB audio test points

### Check microphone using "Hp microphone in Ext speaker out" loop

#### Steps

1. Connect phone with Phoenix.
2. Open "audio test" window from "Testing -> Audio test", as shown in *Figure Phoenix audio test window* above.
3. Select "Hp microphone in Ext speaker out"
4. Select "Loop" as "On"
5. Input sound at microphone port, for example 94 dB SPL 1 kHz.
6. Check if signal is detected at XEARP/N pads, shown in *Figure PWB audio test points* above.

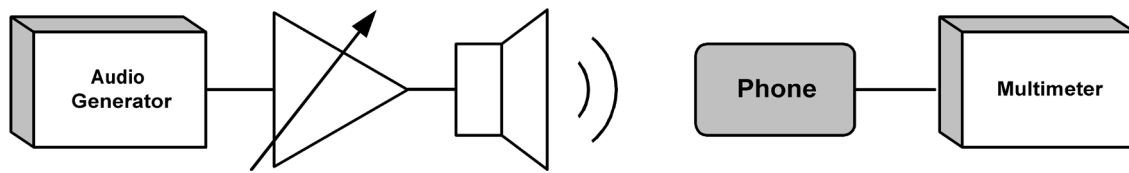


Figure 92 Test arrangement for microphone

### Check earpiece using "Ext microphone in Hp speaker out" loop

#### Steps

1. Connect phone with Phoenix.
2. Open "audio test" window from "Testing -> Audio test", as shown in *Figure Phoenix audio test window* above.
3. Select "Ext microphone in Hp speaker out"
4. Select "Loop" as "On"
5. Input signal to XMICP/N pads, as shown in *Figure PWB audio test points* above, for example 100 mVpp, 1 kHz.
6. Check if sound is heard in earpiece.

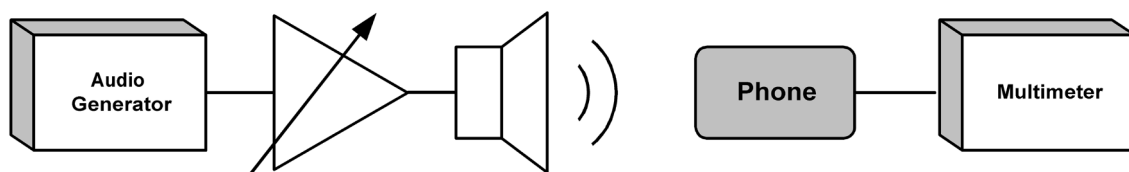


Figure 93 Test arrangement for of earpiece

### Check IHF & ringing tone function using "Buzzer"

#### Steps

1. Connect phone with Phoenix.
2. Open "audio test" window from "Testing -> Audio test", as shown in *Figure Phoenix audio test window* above.
3. In "Buzzer" area, select suitable signal to be played, for example 1 kHz, Strength 5"
4. Select "Volume" as "On"
5. Check if sound is heard in IHF.



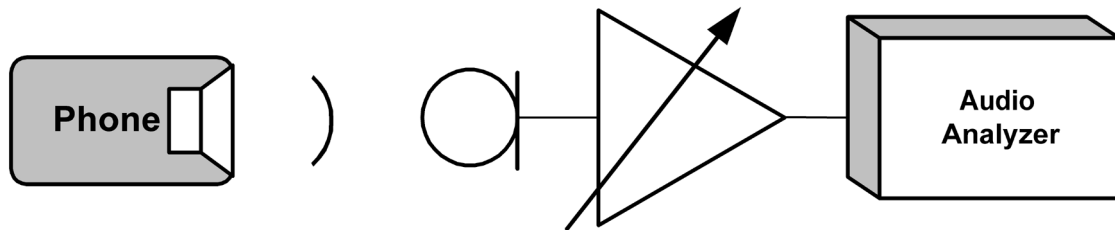


Figure 94 Checking IHF and ring tone by using "Buzzer"

### Check vibra function using "Vibra control"

#### Steps

1. Connect phone with Phoenix.
2. Open "Vibra control" window from "Testing -> Vibra control", as shown in the figure below.
3. Select suitable intensity value, for example 53 %.
4. Select "Vibra state" as "Enabled"
5. Click "Write".
6. Check if Vibra works.

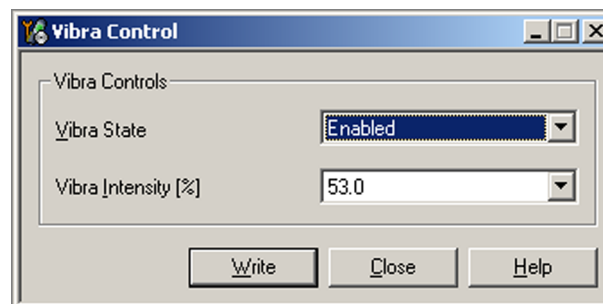


Figure 95 Checking vibra function by using vibra control

**Earpiece fault**

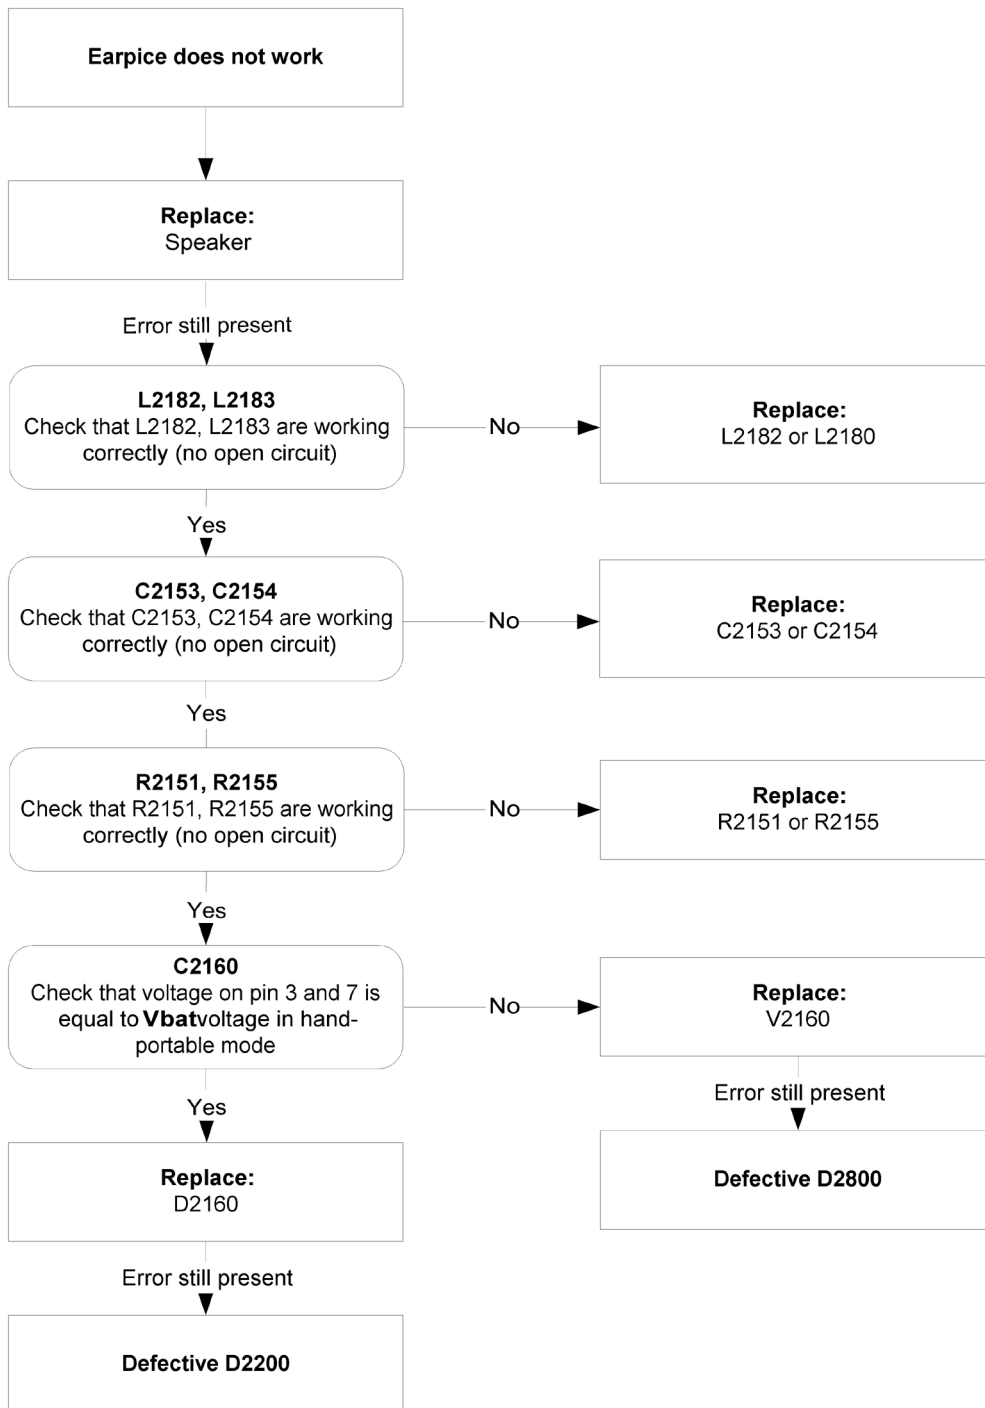


Figure 96 Earpiece fault flow chart

**IHF/ringing tone fault**

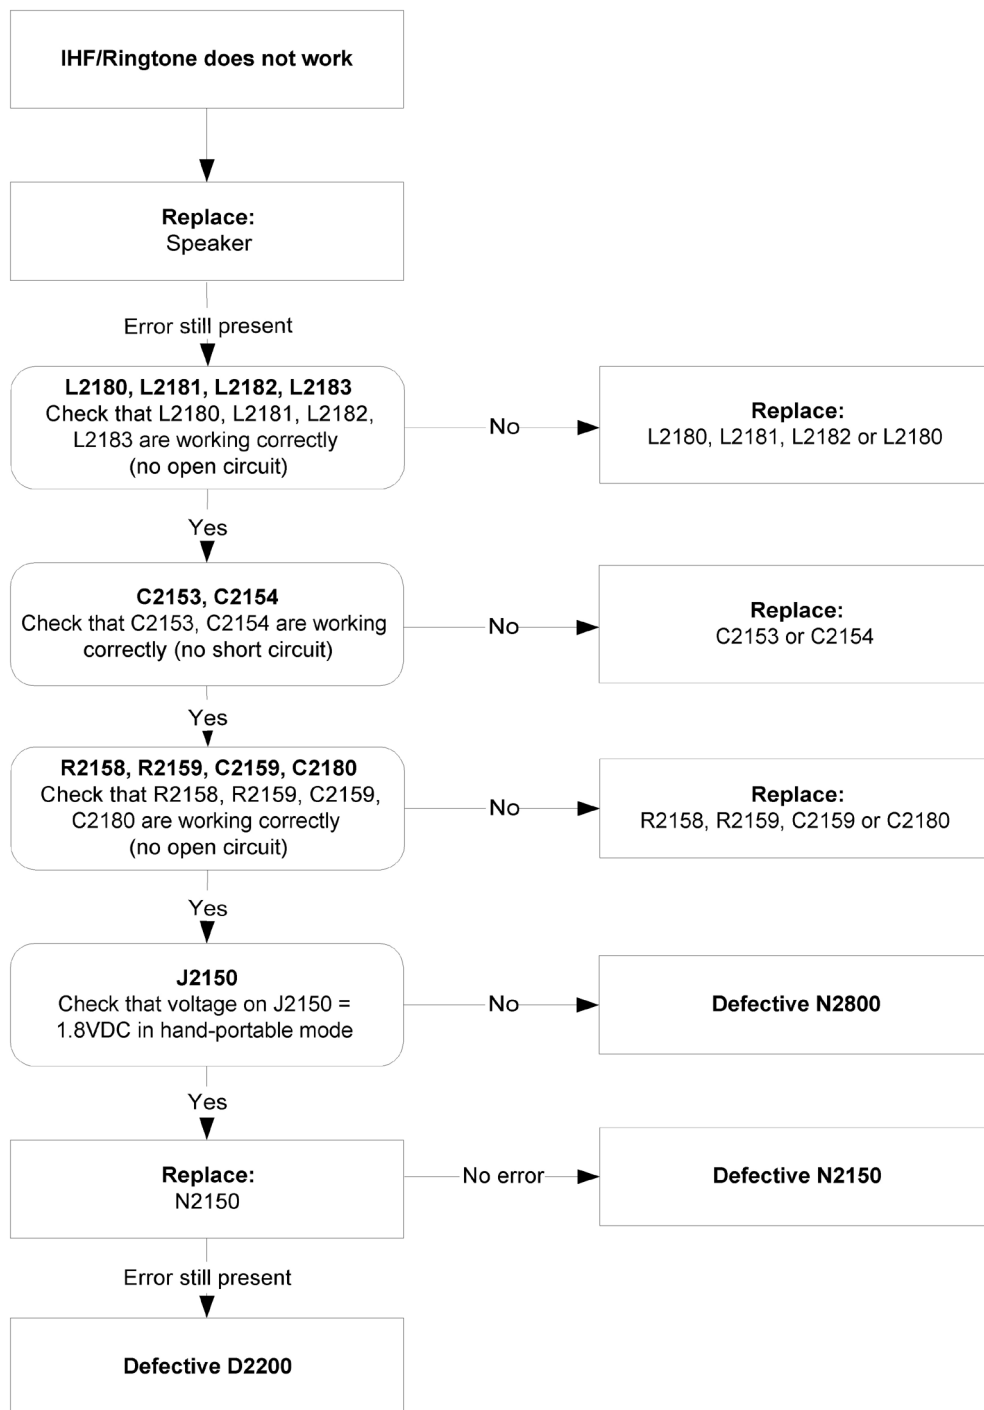


Figure 97 IHF/ringing tone fault flow chart

## Headset earpiece fault

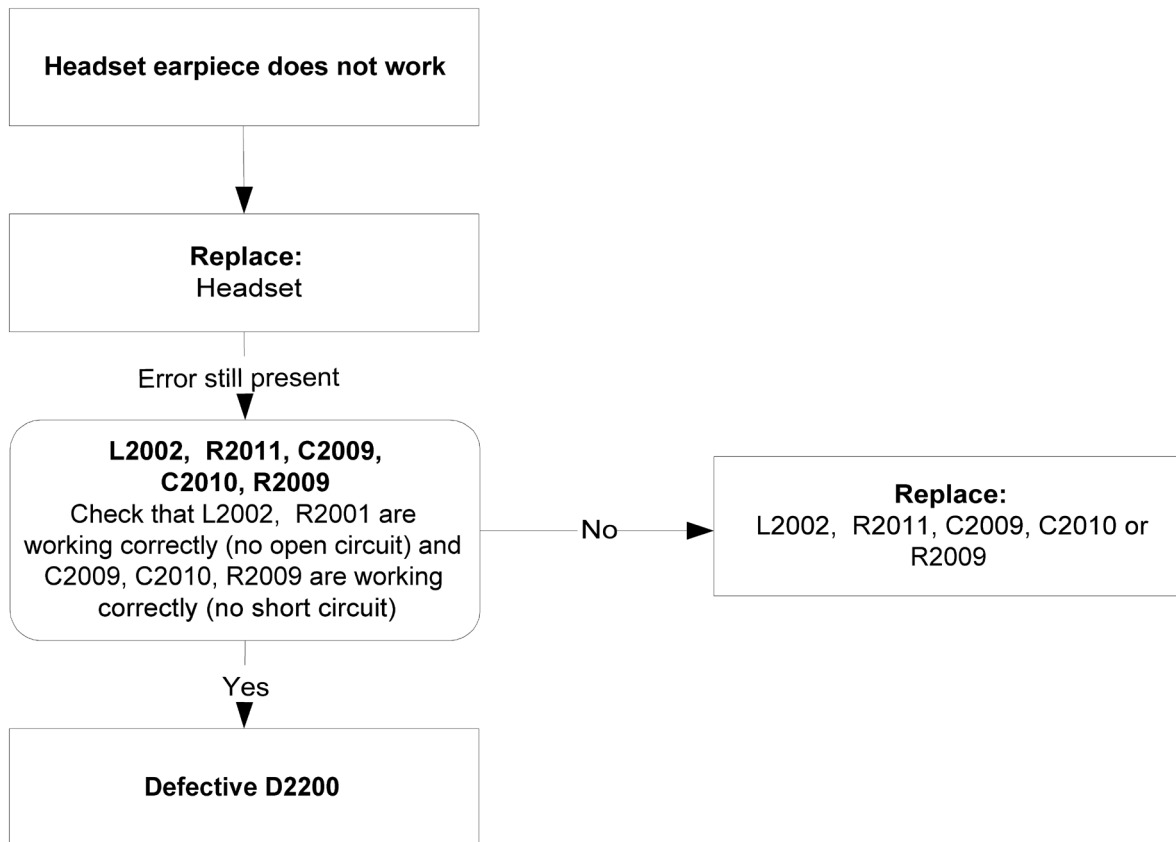


Figure 98 Headset earpiece fault flow chart

## Microphone fault

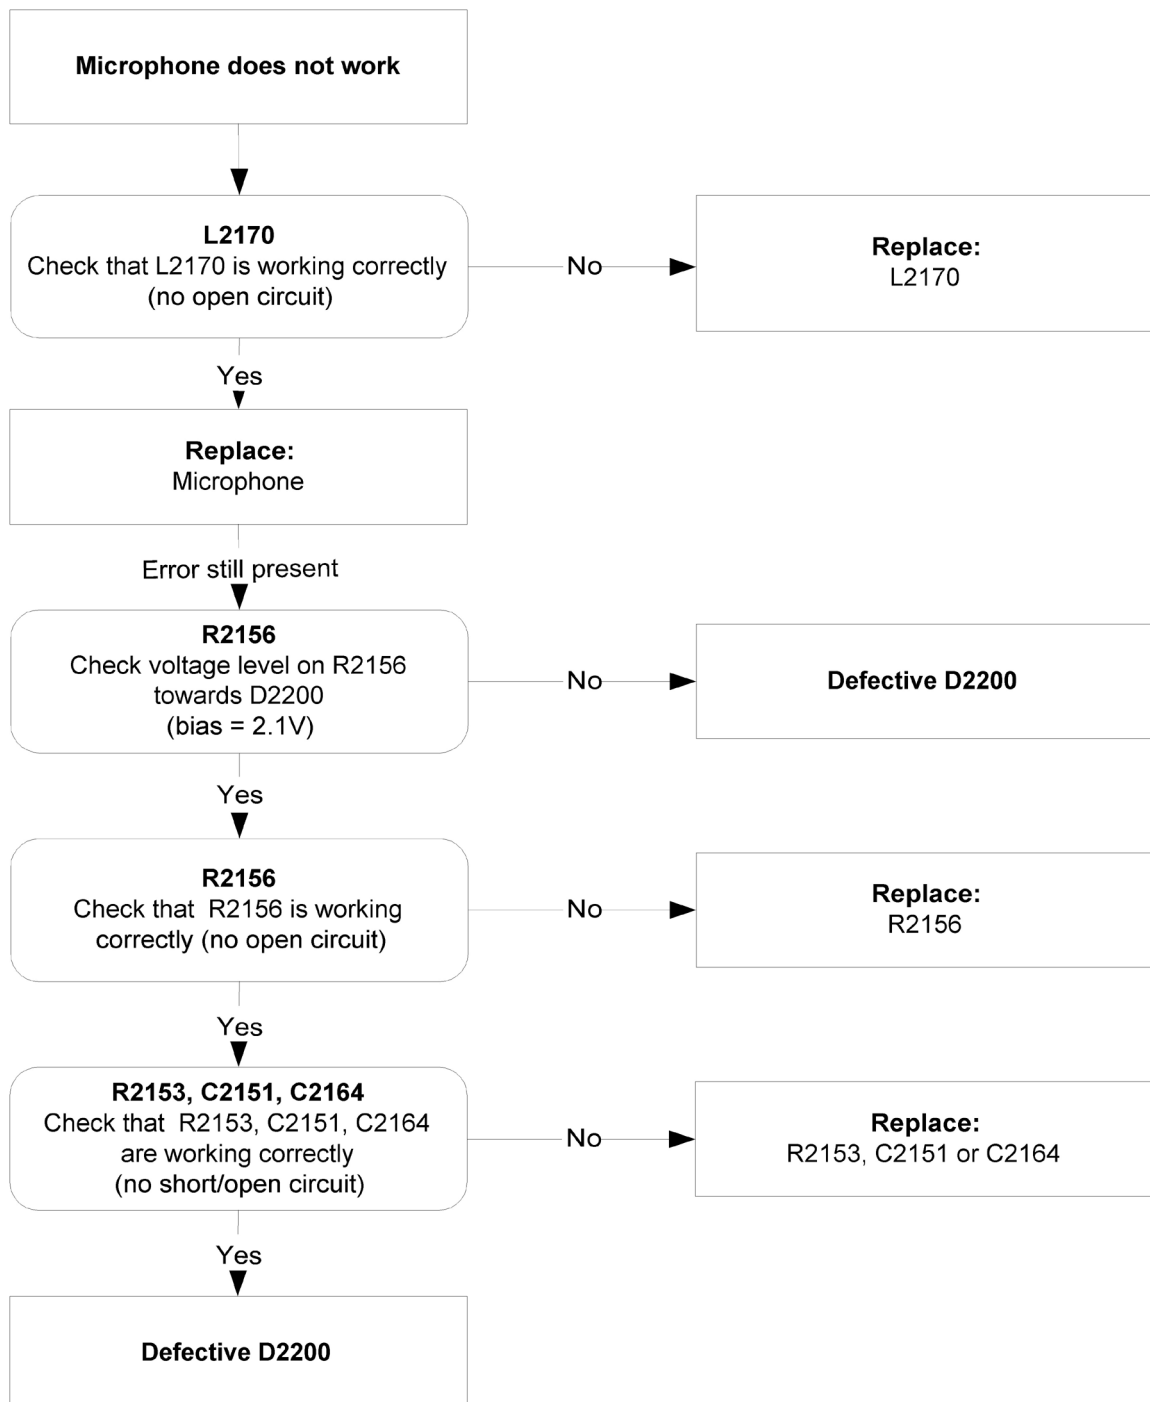


Figure 99 Microphone fault flow chart

## Headset microphone fault

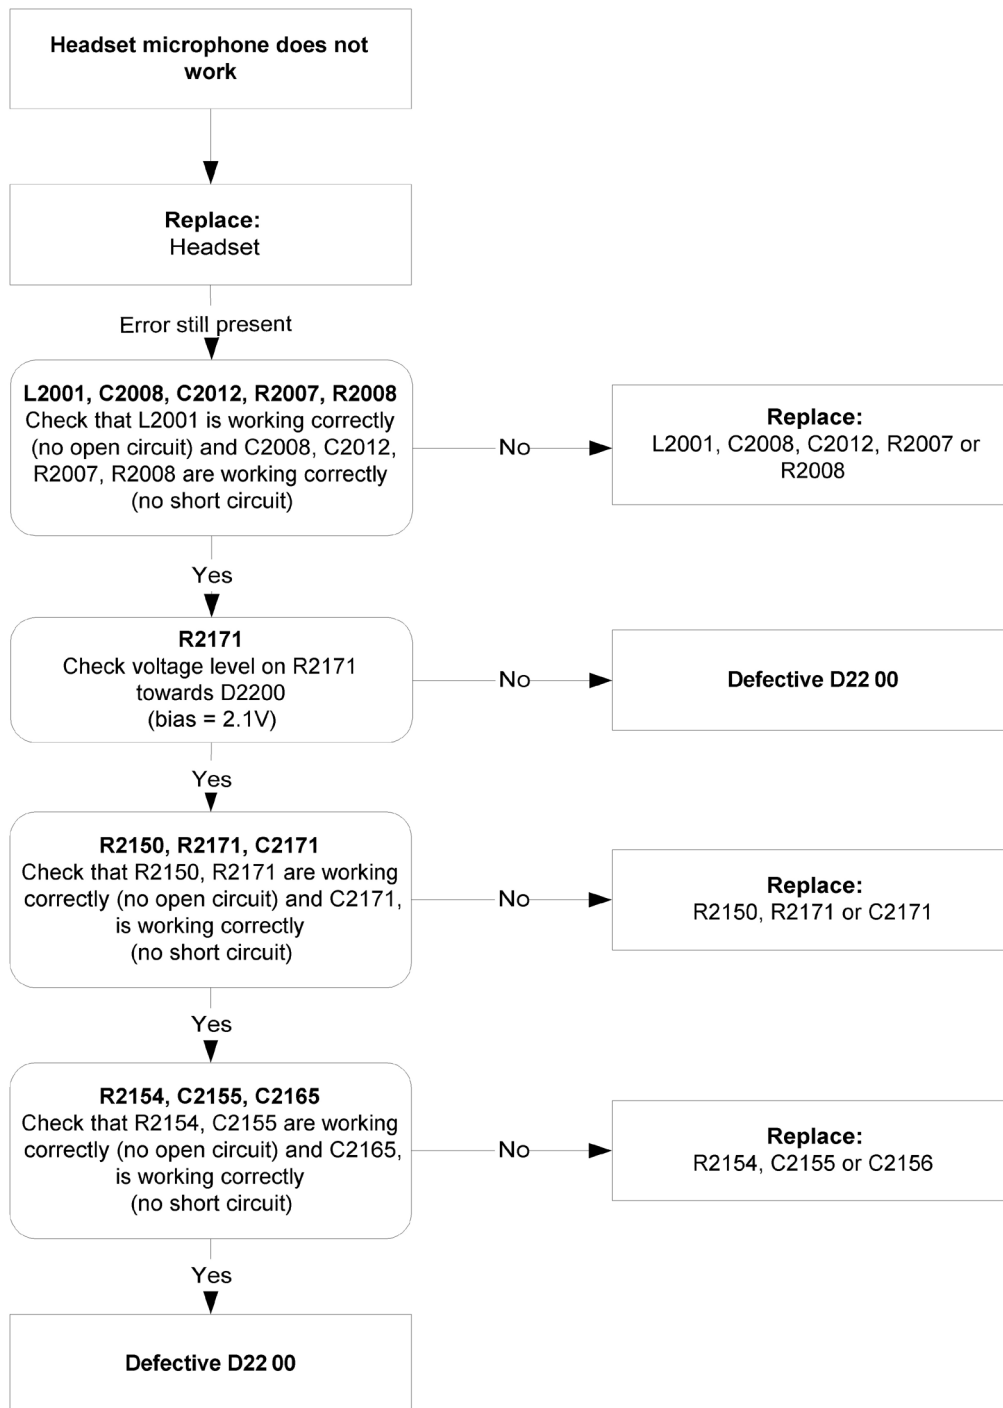


Figure 100 Headset microphone fault flow chart

## 7 — RF troubleshooting

(This page left intentionally blank.)



## Table of Contents

General RF troubleshooting.....	7-5
General RF troubleshooting.....	7-5
RF key components.....	7-6
Auto tuning.....	7-8
Auto tuning.....	7-8
Receiver.....	7-8
General instructions for GSM 900 RX troubleshooting.....	7-8
Troubleshooting diagram for GSM 900 receiver.....	7-10
General instructions for GSM 1800 RX troubleshooting.....	7-11
Troubleshooting diagram for GSM 1800 receiver.....	7-13
Measurement points in the receiver.....	7-14
Transmitter.....	7-15
General instructions for GSM 900 TX troubleshooting.....	7-15
Troubleshooting diagram for GSM 900 transmitter.....	7-17
GSM 900 TX output power.....	7-17
General instructions for GSM 1800 TX troubleshooting.....	7-20
Troubleshooting diagram for GSM 1800 transmitter.....	7-22
GSM 1800 TX output power.....	7-22
Synthesizer troubleshooting .....	7-25
Introduction.....	7-25
Troubleshooting diagram for PLL synthesizer.....	7-27
Measurement points at the VCXO.....	7-28
FM radio troubleshooting.....	7-28
Measurement settings.....	7-28
Troubleshooting diagram for FM radio.....	7-29
Measurement points in the receiver.....	7-30
Antenna troubleshooting.....	7-31
Antenna troubleshooting.....	7-31

## List of Figures

Figure 101 RF key components on PWB.....	7-6
Figure 102 Supply points at UEM (D2200).....	7-7
Figure 103 Supply point at RF IC (N7600).....	7-7
Figure 104 Supply point at FM Radio IC (N6156).....	7-7
Figure 105 GSM 900 RF controls window.....	7-9
Figure 106 GSM 900 Receiver troubleshooting.....	7-10
Figure 107 900 RX I/Q signal waveform.....	7-11
Figure 108 GSM 1800 RF controls window.....	7-12
Figure 109 GSM 1800 Receiver troubleshooting.....	7-13
Figure 110 1800 RX I/Q signal waveform.....	7-14
Figure 111 RX measurements point of the control voltages to FEM N7700.....	7-14
Figure 112 Measurement points at the RX SAW Filters – Z7600/Z7602.....	7-15
Figure 113 RX I/Q signals.....	7-15
Figure 114 GSM 900 RF controls window.....	7-16
Figure 115 GSM 900 transmitter troubleshooting.....	7-17
Figure 116 TX I/O signal.....	7-18
Figure 117 VC1, VC3 signals.....	7-18
Figure 118 TXP signal.....	7-19
Figure 119 TXC signals at PCL5.....	7-19

Figure 120 TXC signals at PCL19.....	7-20
Figure 121 GSM 1800 RF controls window.....	7-21
Figure 122 GSM 1800 transmitter troubleshooting.....	7-22
Figure 123 TX I/O signal.....	7-23
Figure 124 VC1, VC2, VC3 signals.....	7-23
Figure 125 TXP signal.....	7-24
Figure 126 TXC signals at PCL0.....	7-24
Figure 127 TXC signals at PCL15.....	7-25
Figure 128 VCXO 26 MHz waveform.....	7-26
Figure 129 PLL Troubleshooting diagram.....	7-27
Figure 130 Measurement point for VCXO.....	7-28
Figure 131 Phoenix settings.....	7-28
Figure 132 FM circuit troubleshooting diagram.....	7-29
Figure 133 RX measurements point of the control voltages to FEM N7700.....	7-30
Figure 134 Measurement points at the RX SAW Filters – Z7600/Z7602.....	7-30
Figure 135 RX I/Q signals.....	7-30
Figure 136 Antenna troubleshooting.....	7-31

## ■ General RF troubleshooting

### General RF troubleshooting

#### **Most RF semiconductors are static discharge sensitive**

Two types of measurements are used in the following. It will be specified if the measurement type is "RF" or "LF".

- RF measurements are done with a Spectrum Analyzer and a high-frequency 500 ohm passive probe, for example HP54006A. (Note that when measuring with the 500 ohm probe the signal will be around 20 dB attenuated. The values in the following will have these 20 dB subtracted and represent the real value seen on the spectrum analyzer). Note that the testing have some losses which must be taken into consideration when calibrating the test system.
- LF (Low frequency) and DC measurements should be done with a 10:1 probe and an oscilloscope. The probe used in the following is 10 Mohm/8pF passive probe. If using another probe then bear in mind that the voltages displayed may be slightly different. Always make sure the measurement set-up is calibrated when measuring RF parameters on the antenna pad. Remember to include the loss in the module repair jig when realigning the phone.

So ESD protection must be applied during repair (ground straps and ESD soldering irons). RF IC N7600 and FEM are moisture sensitive so parts must be pre-baked prior to soldering. Apart from key-components described in this document there are a lot of discrete components (resistors, inductors and capacitors) for which troubleshooting is done by checking if soldering of the component is done properly and checking if the component is missing from PWB. Capacitors can be checked for short-circuiting and resistors for value by means of an ohmmeter, but be aware in-circuit measurements should be evaluated carefully. In the following both the name EGSM and GSM 850 will be used for the lower band and both PCN and GSM 1900 will be used for the upper band.

**RF key components**


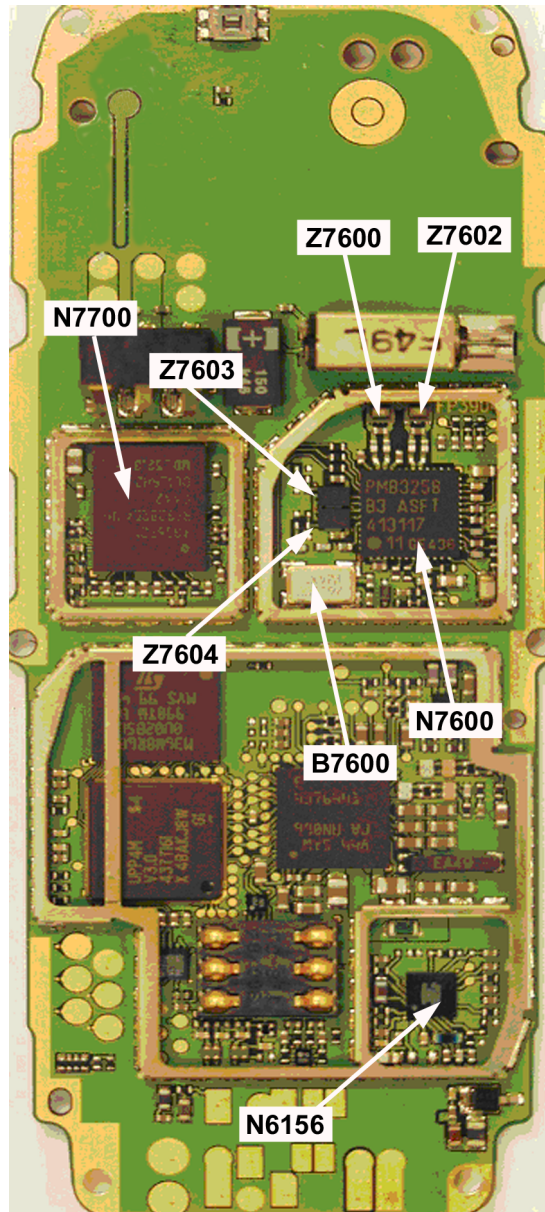


Figure 101 RF key components on PWB

N7600	RF IC
N7700	FEM (PA and antenna switch)
Z7602	EGSM 850/900 RX SAW filter
Z7600	DCS 1800/PCS1900 RX SAW filter
Z7603	EGSM 850/900 TX filter
Z7604	DCS 1800/PCS1900 TX filter
B7600	26 MHz crystal
N6156	FM radio IC

Refer to the picture below for measuring points at the UEM (D2200).

**VANA(C2203) VR1=VTX(C2223) VR4=VRX(C2226)**

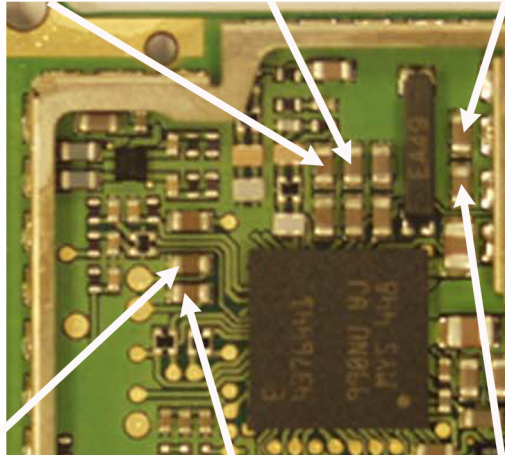

**VR5=VPLL (C2225) VR2=VXO (C2227) VR3=VTX2 (C2222)**

Figure 102 Supply points at UEM (D2200)

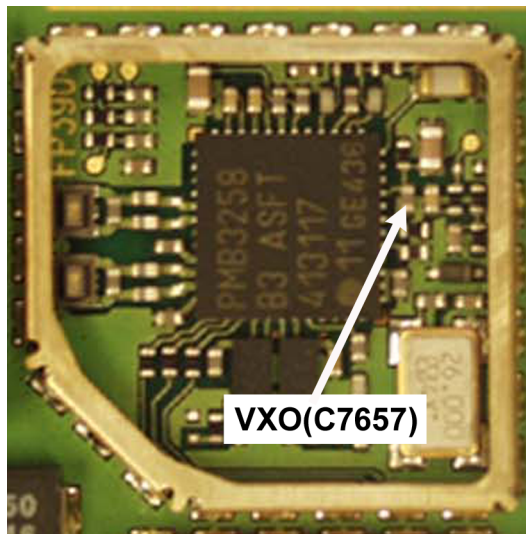


Figure 103 Supply point at RF IC (N7600)

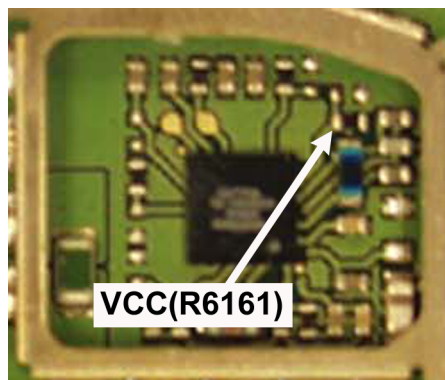


Figure 104 Supply point at FM Radio IC (N6156)

## ■ Auto tuning

### Auto tuning

This phone can be tuned automatically.

Autotune is designed to align the phone's RF part easier and faster. It performs calibrations, tunings and measurements of RX and TX. The results are displayed and logged in a result file, if initiated.

### Hardware set up

Hardware requirements for auto tuning:

- PC (Windows 2000/NT) with GPIB card
- Power supply
- Product specific module jig
- Cables: 3 (alt.1) RF cable, 1 GPIB cable and DAU-9S
- Signal analyser (TX), signal generator (RX) and RF-splitter *or* one device including all.

### Phoenix preparations

Copy the two phone specific ini-files, for example *rm\_13\_tunings.ini* and *autotune\_RM-13.ini*, to a phone specific folder, for example `\Phoenix\products\RM-13\`.

### Auto tuning procedure

- 1 Make sure the phone (in the jig) is connected to the equipment. Else, some menus will not be shown in Phoenix.
- 2 The first time you are using automatic tuning on this phone model, on this computer, you will have to *Set loss* for cables and jigs.
- 3 To go to autotune, select *Tuning (Alt-U) > Auto-Tune (Alt-A)* from the menu.
- 4 If you need more assistance, please refer to the *Phoenix Help*.

## ■ Receiver

### General instructions for GSM 900 RX troubleshooting

- 1 Connect the phone to a PC with the module repair jig.
- 2 Start Phoenix and establish a connection to the phone with the data cable e.g. FBUS.
- 3 Select File and Scan product
- 4 Wait a while for the PC to read the information from the phone
- 5 Select Testing and RF Controls
- 6 Set the parameters as follows:
  - Active Unit: RX
  - Band: GSM 900
  - Operation Mode: Continuous mode
  - RX/TX Channel 37
  - AGC: 8: FEG\_ON + DTOS\_ON+BB\_6=Vgain\_36

The setup should now look like this:

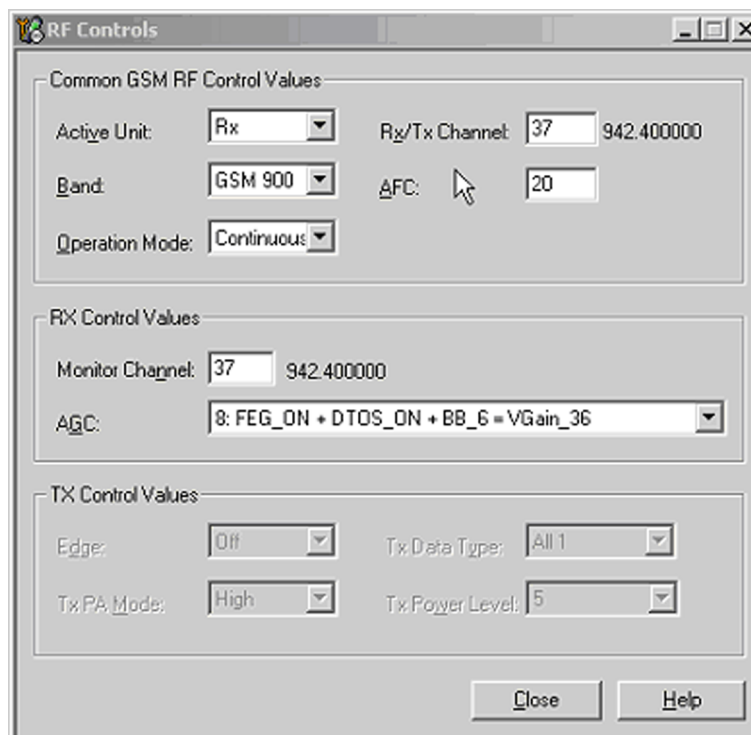


Figure 105 GSM 900 RF controls window

**Troubleshooting diagram for GSM 900 receiver**

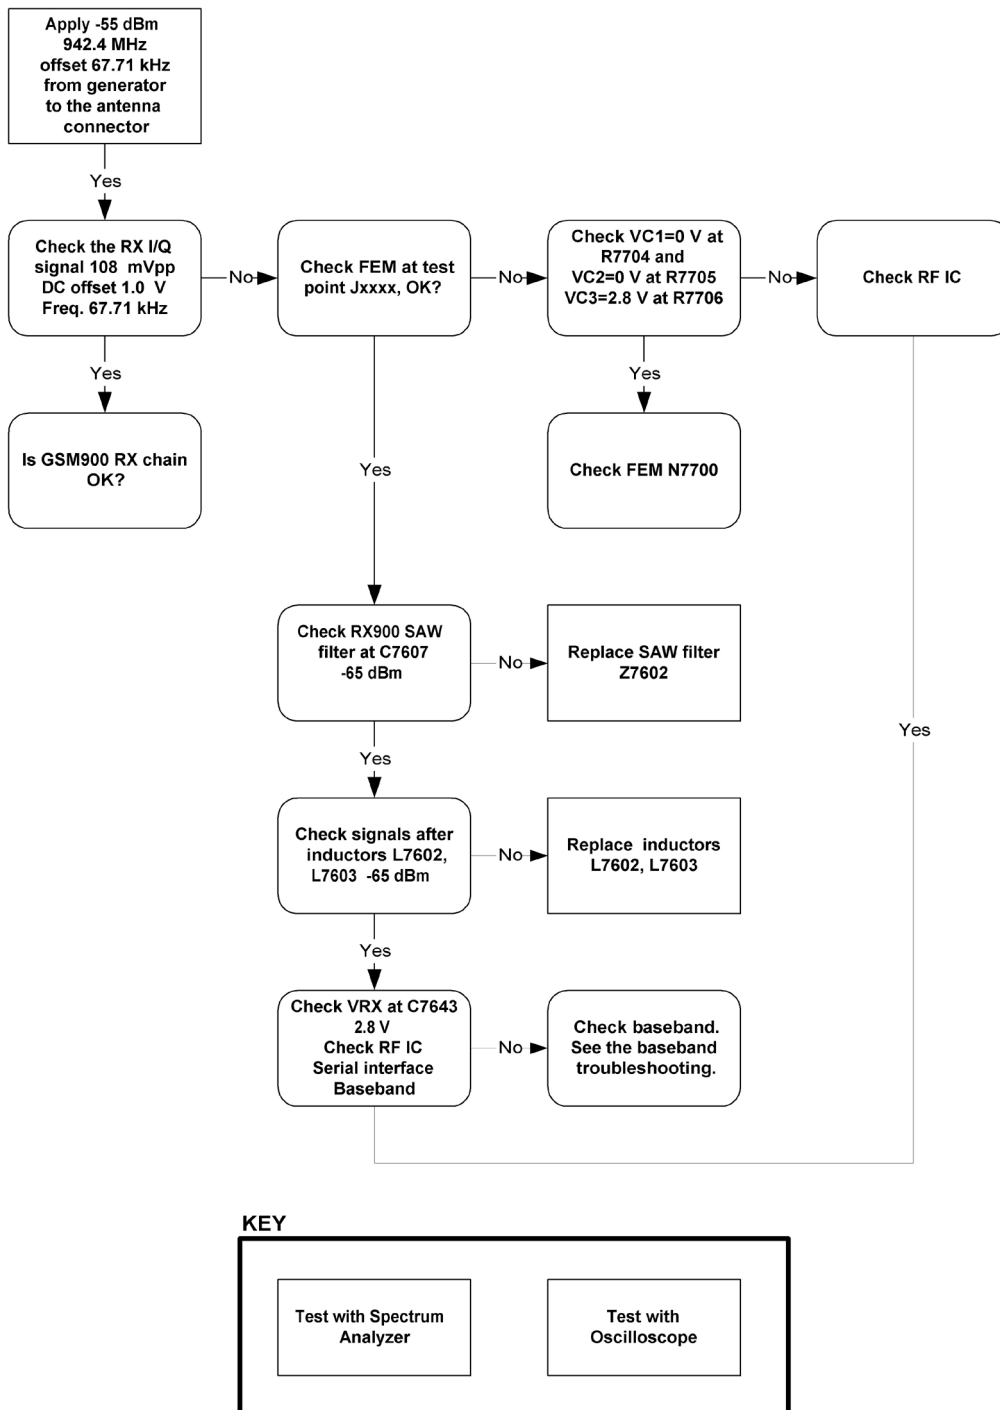


Figure 106 GSM 900 Receiver troubleshooting

By measuring with an oscilloscope at RXIP or RXQP on a working GSM 900 receiver this picture should be seen. Signal amplitude 114 mVp-p. DC offset 1.0 V.



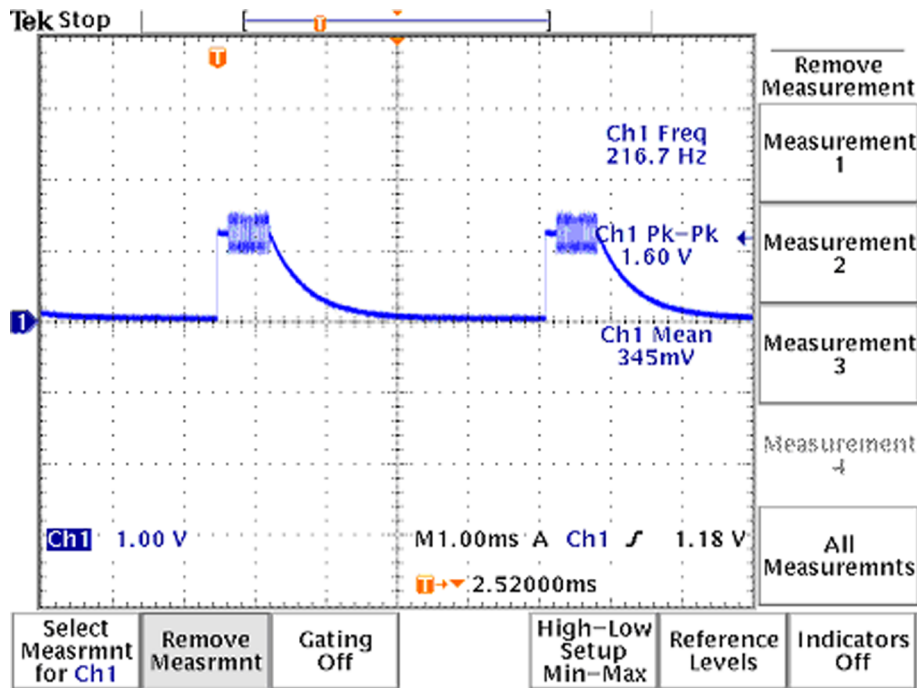


Figure 107 900 RX I/Q signal waveform

### General instructions for GSM 1800 RX troubleshooting

- 1 Connect the phone to a PC with the module repair jig.
- 2 Start Phoenix and establish a connection to the phone with the data cable e.g. FBUS.
- 3 Select File and Scan product
- 4 Wait a while for the PC to read the information from the phone
- 5 Select Testing and RF Controls
- 6 Set the parameters as follows:
  - Active Unit: RX
  - Band: GSM 1800
  - Operation Mode: Continuous mode
  - RX/TX Channel 700
  - AGC: 8: FEG\_ON + DTOS\_ON+BB\_6=Vgain\_36

The setup should now look like this:

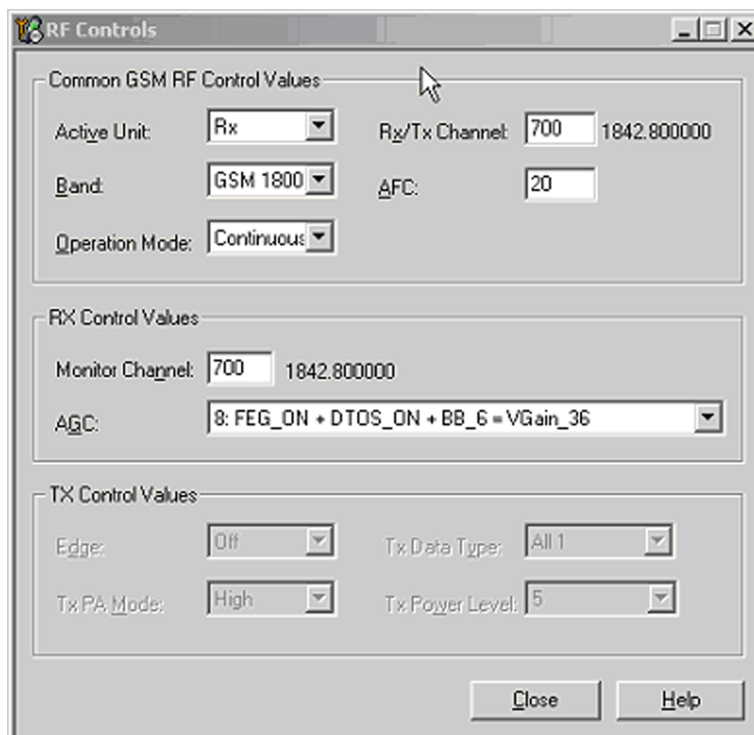


Figure 108 GSM 1800 RF controls window

**Troubleshooting diagram for GSM 1800 receiver**

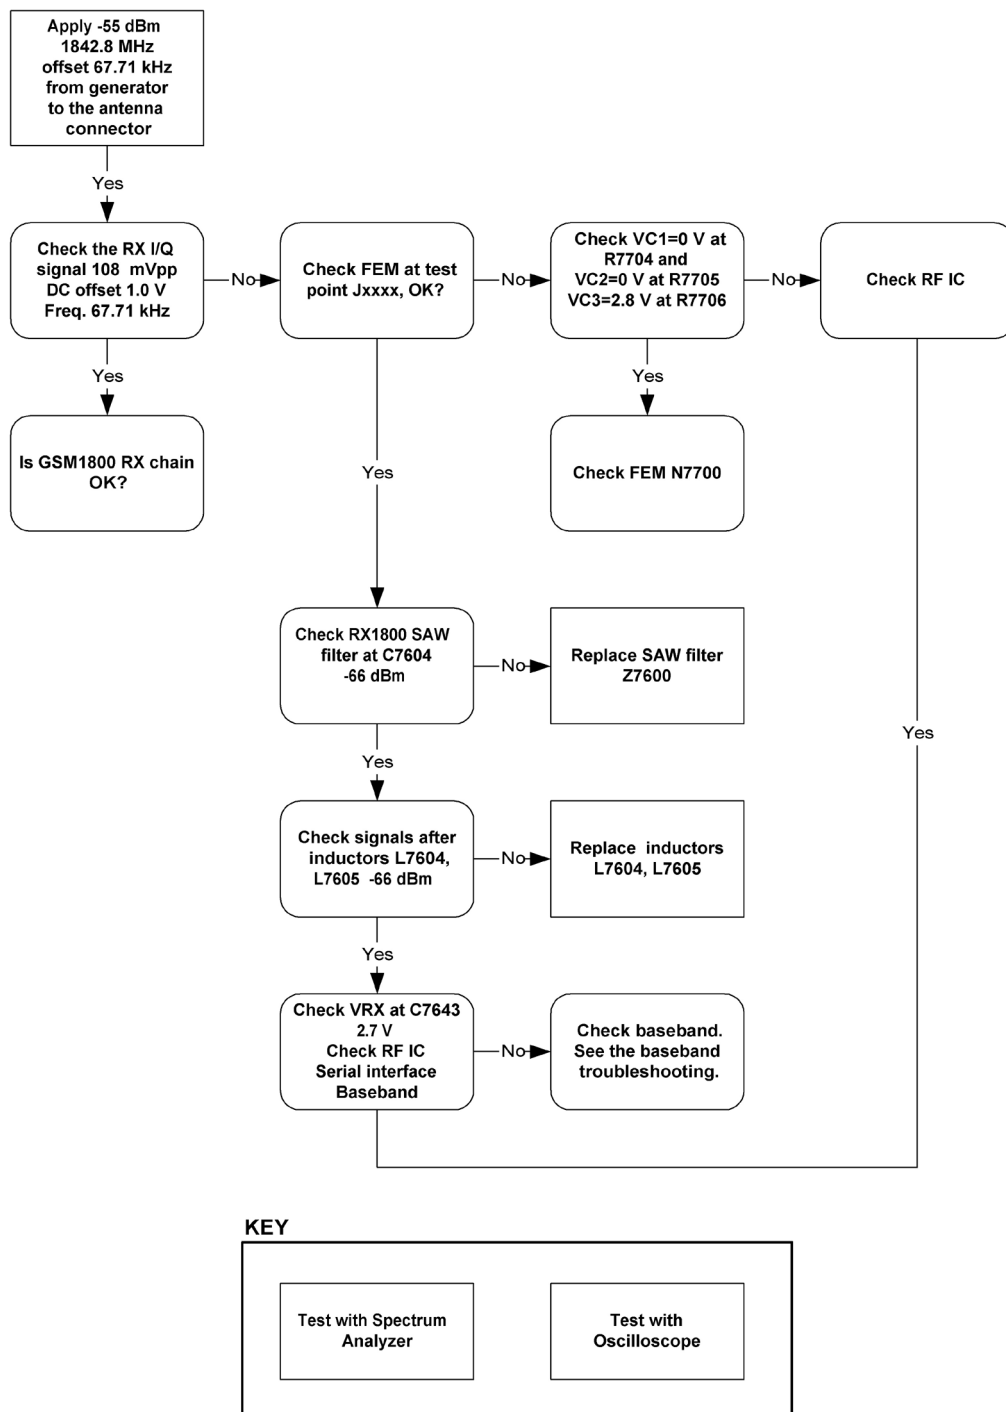


Figure 109 GSM 1800 Receiver troubleshooting

By measuring with an oscilloscope at RXIP or RXQP on a working GSM 1800 receiver this picture should be seen. Signal amplitude 114 mVp-p. DC offset 1.0 V.

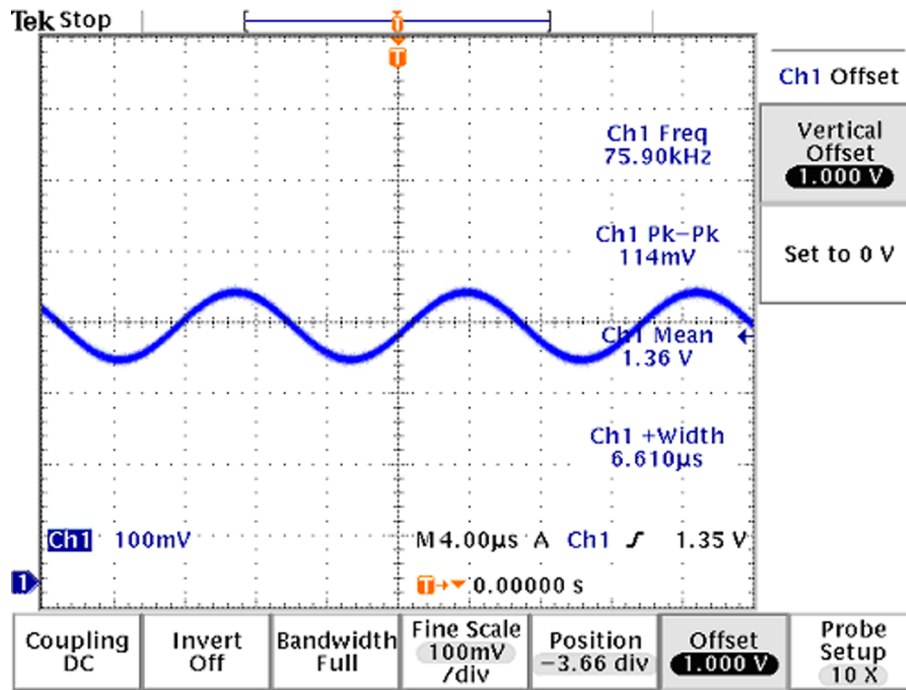


Figure 110 1800 RX I/Q signal waveform

### Measurement points in the receiver

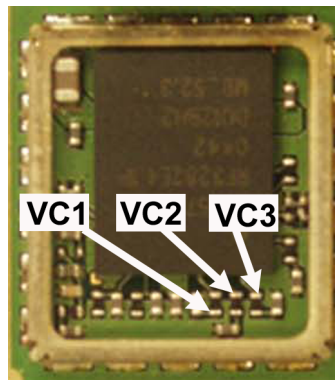


Figure 111 RX measurements point of the control voltages to FEM N7700

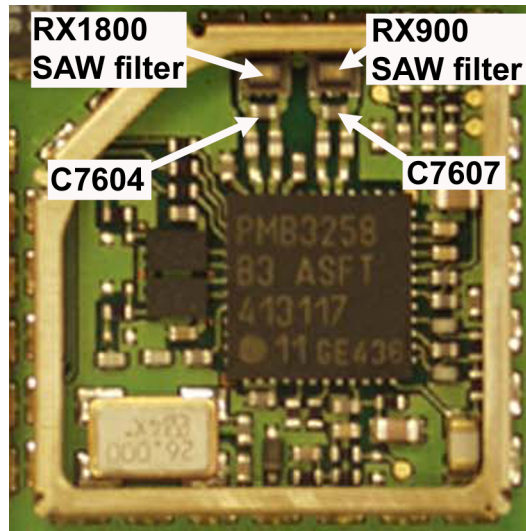


Figure 112 Measurement points at the RX SAW Filters – Z7600/Z7602

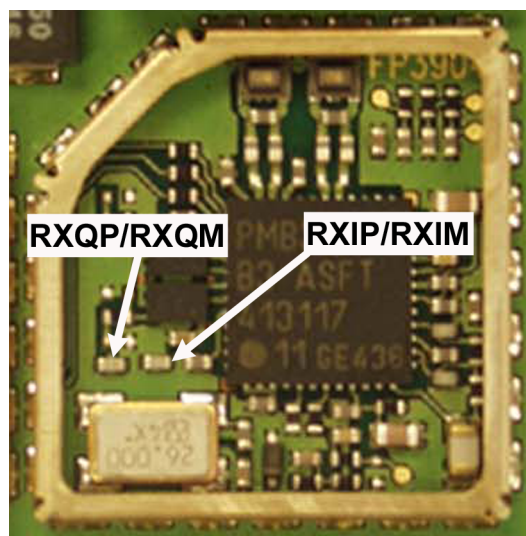


Figure 113 RX I/Q signals

## ■ Transmitter

### General instructions for GSM 900 TX troubleshooting

- 1 Apply a RF-cable to the RF-connector to allow the transmitted signal act as normal. RF-cable should be connected to an attenuator at least 10 dB before connected to the measurement equipment, otherwise the PA may be damaged.
- 2 Start Phoenix and establish a connection to the phone with the data cable e.g. FBUS.
- 3 Select File and Scan product
- 4 Wait a while for the PC to read the information from the phone
- 5 Select Testing and RF Controls
- 6 Set the parameters as follows:
  - Band: GSM 900
  - Active Unit: TX

- TX Power Level: 5
- TX Data Type: Random

The setup should now look like this:

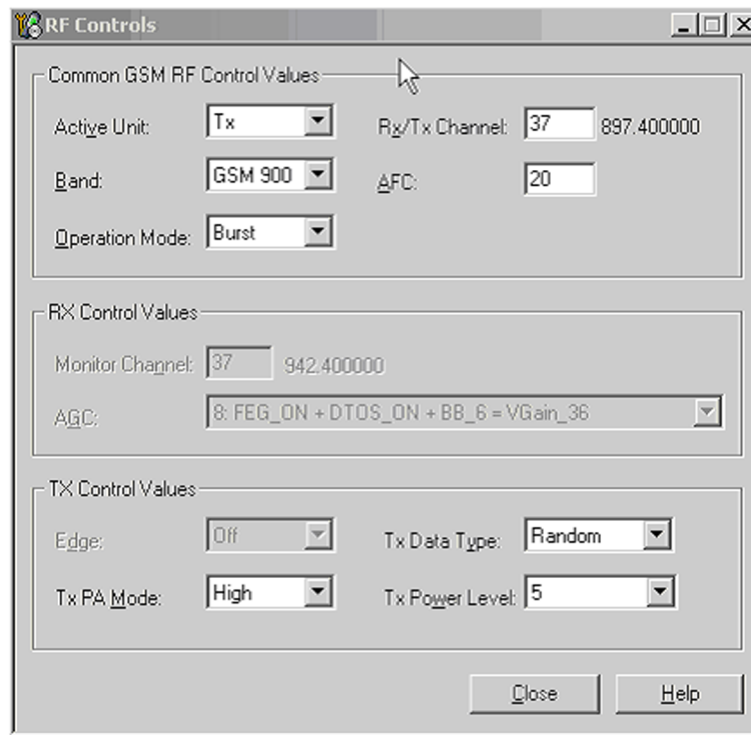


Figure 114 GSM 900 RF controls window

**Troubleshooting diagram for GSM 900 transmitter**

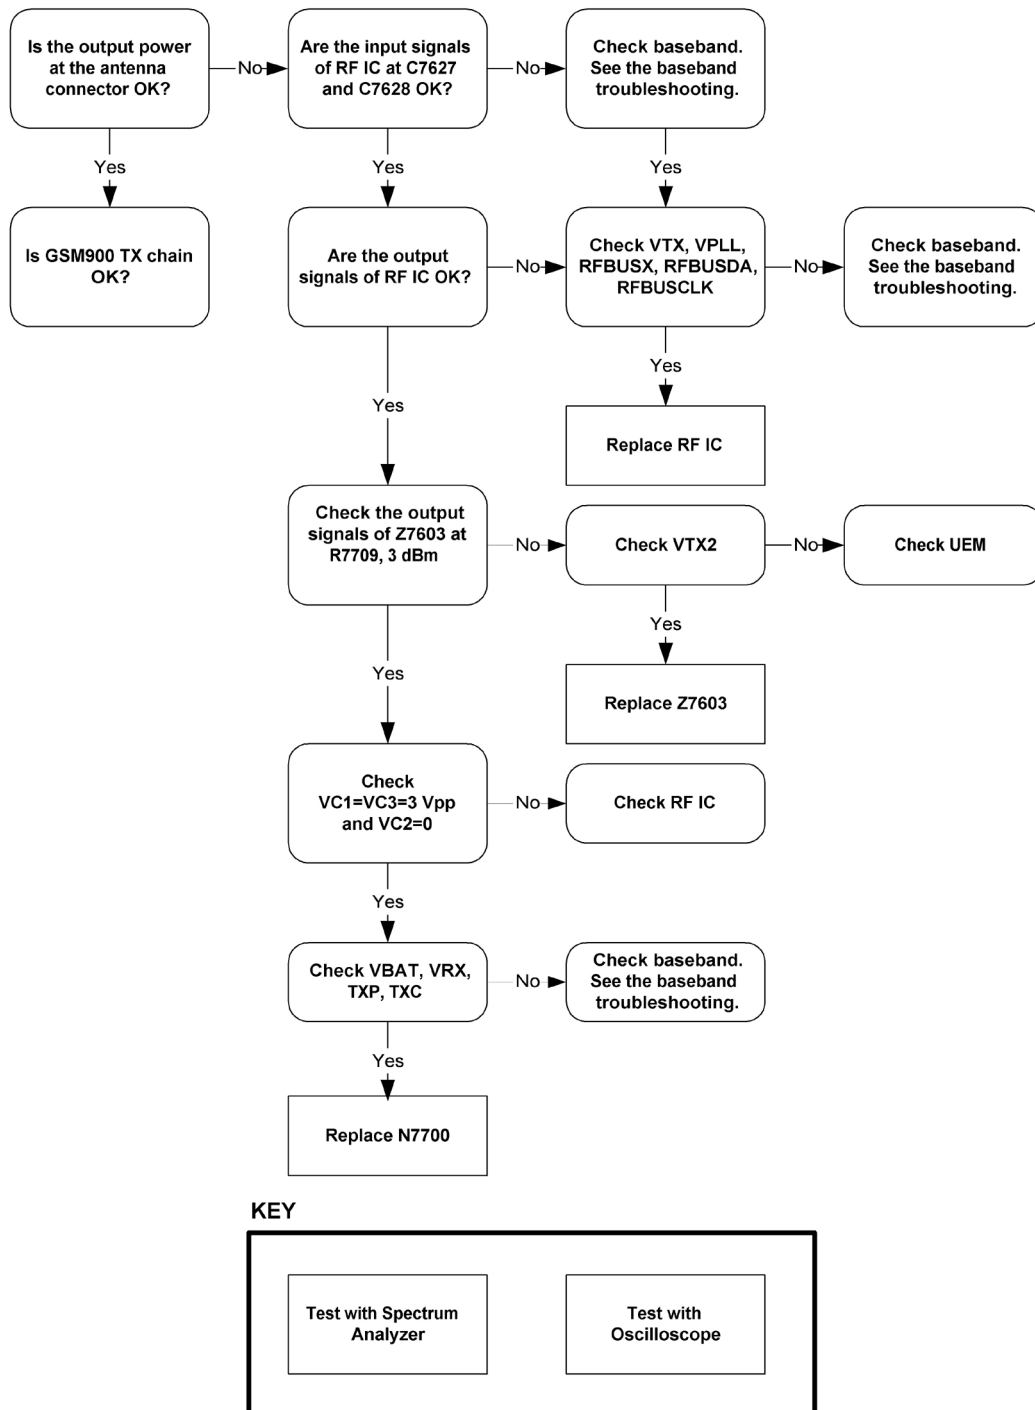


Figure 115 GSM 900 transmitter troubleshooting

**GSM 900 TX output power**

Measure the output power of the phone; it should be about 32.5 dBm. Remember the cable loss is about 0.3 dB.

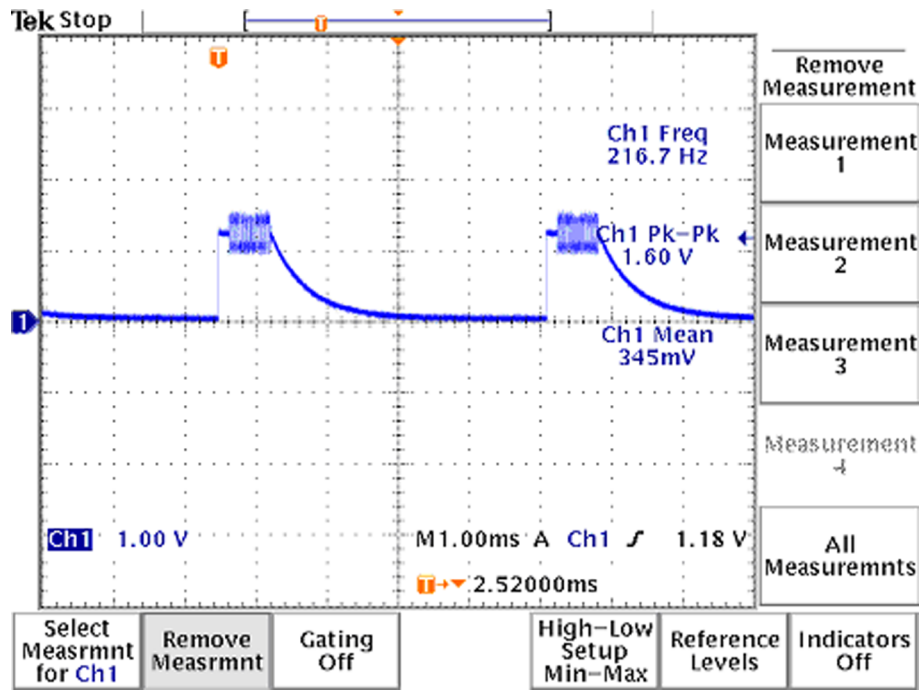


Figure 116 TX I/O signal

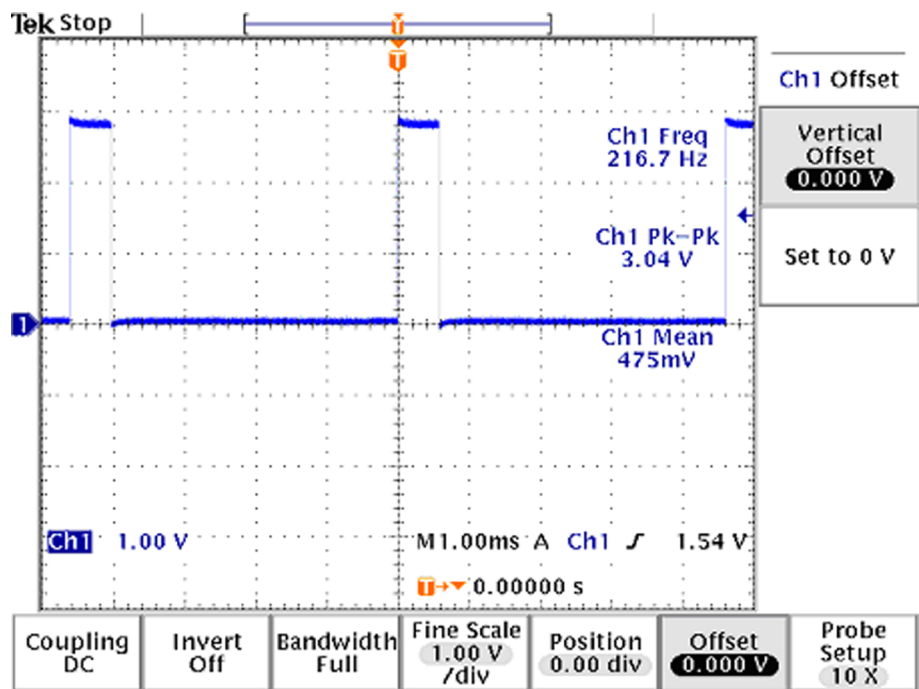


Figure 117 VC1, VC3 signals



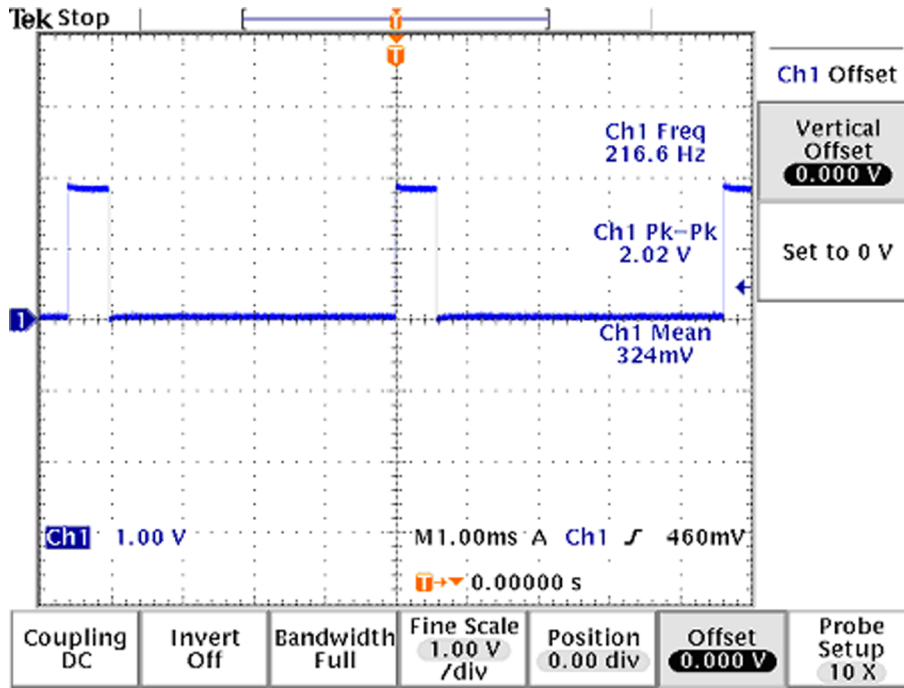


Figure 118 TXP signal

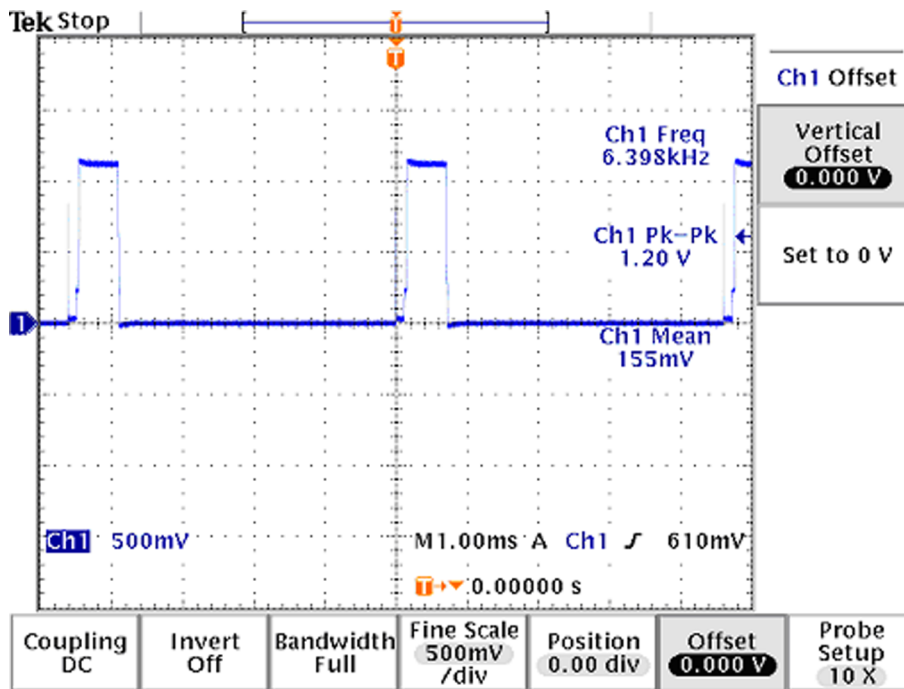


Figure 119 TXC signals at PCL5

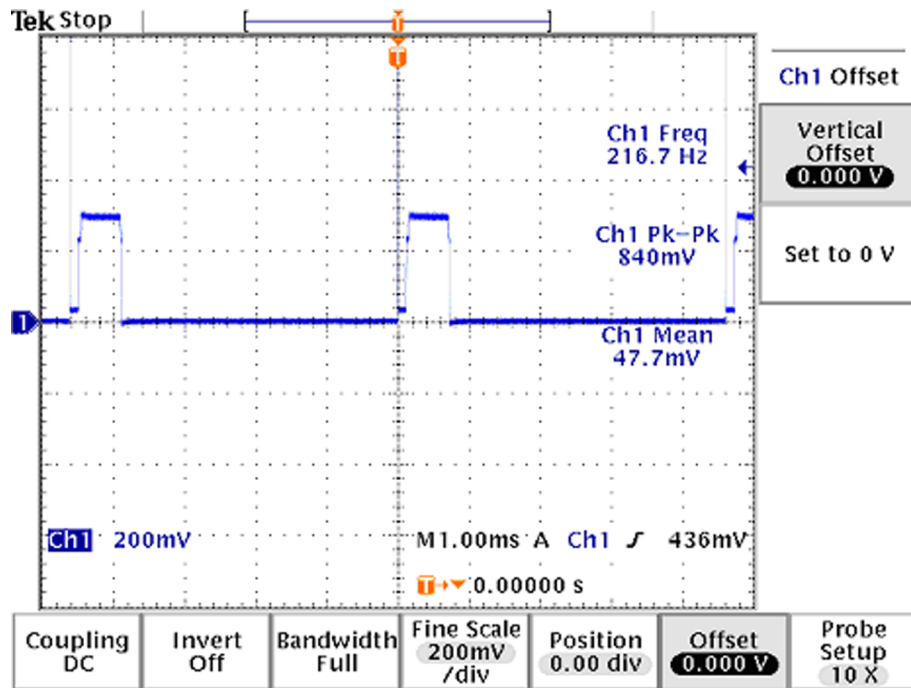


Figure 120 TXC signals at PCL19

### General instructions for GSM 1800 TX troubleshooting

- 1 Apply a RF-cable to the RF-connector to allow the transmitted signal act as normal. RF-cable should be connected to an attenuator at least 10 dB before connected to the measurement equipment, otherwise the PA may be damaged.
- 2 Start Phoenix and establish a connection to the phone with the data cable e.g. FBUS.
- 3 Select File and Scan product
- 4 Wait a while for the PC to read the information from the phone
- 5 Select Testing and RF Controls
- 6 Set the parameters as follows:
  - Band: GSM 1800
  - Active Unit: TX
  - TX Power Level: 0
  - TX Data Type: Random

The setup should now look like this:

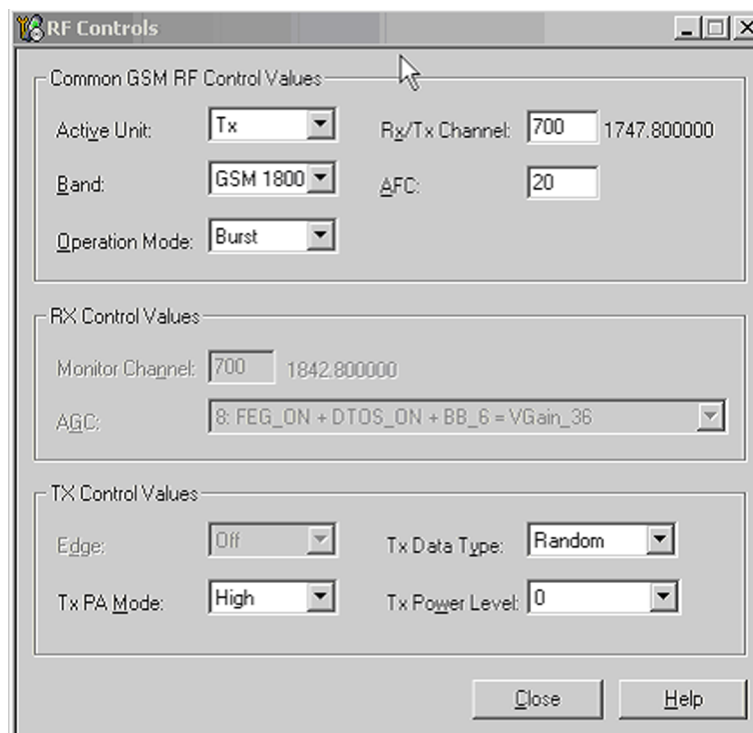


Figure 121 GSM 1800 RF controls window

**Troubleshooting diagram for GSM 1800 transmitter**

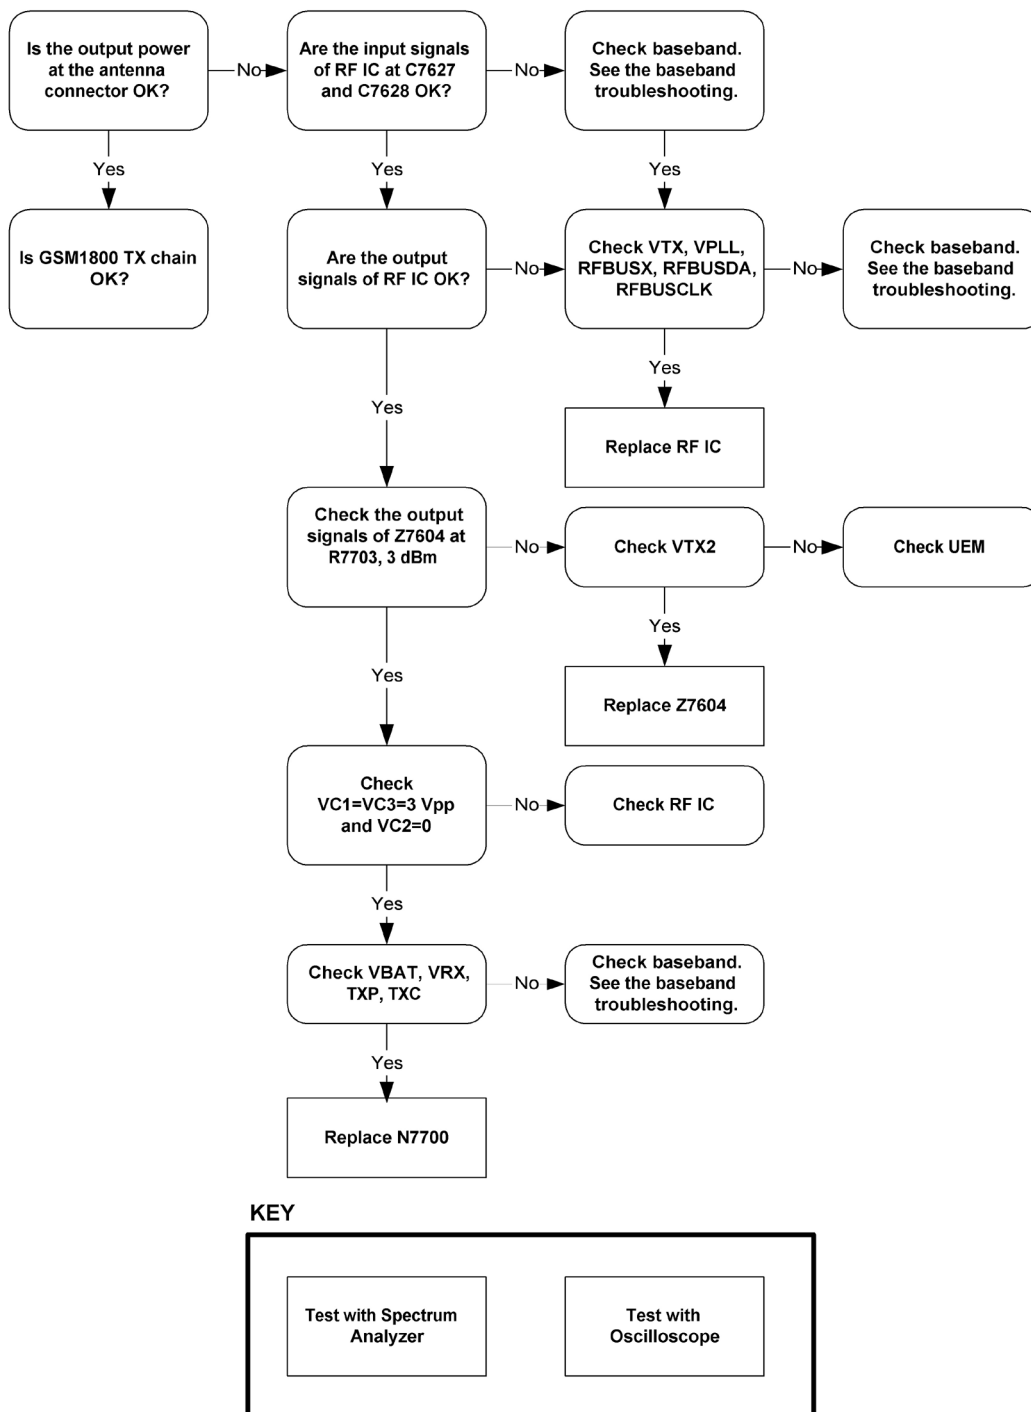


Figure 122 GSM 1800 transmitter troubleshooting

**GSM 1800 TX output power**

Measure the output power of the phone; it should be about 29.5 dBm. Remember the cable loss is about 0.5 dB.

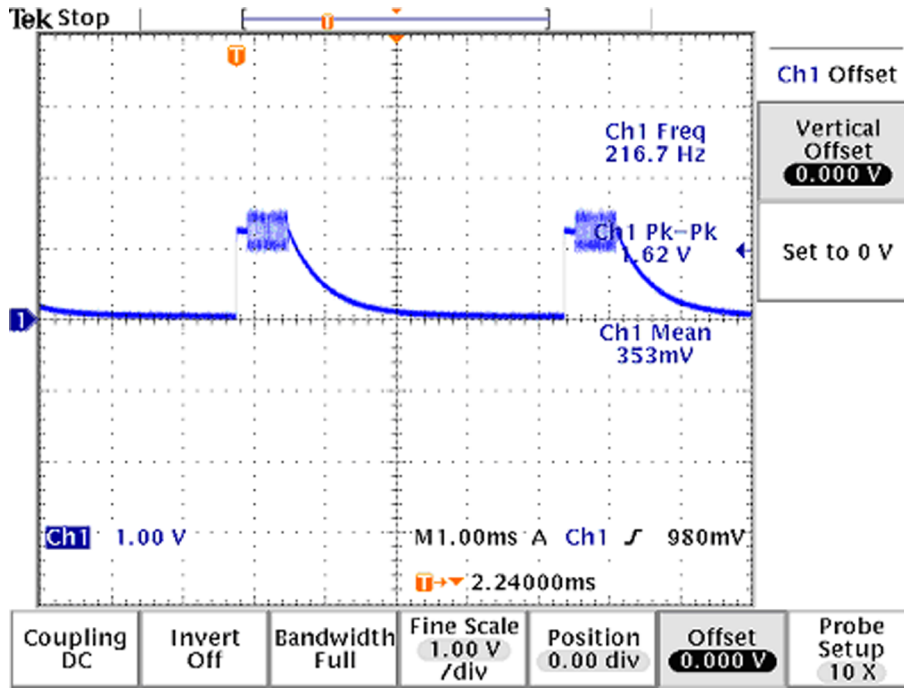


Figure 123 TX I/O signal

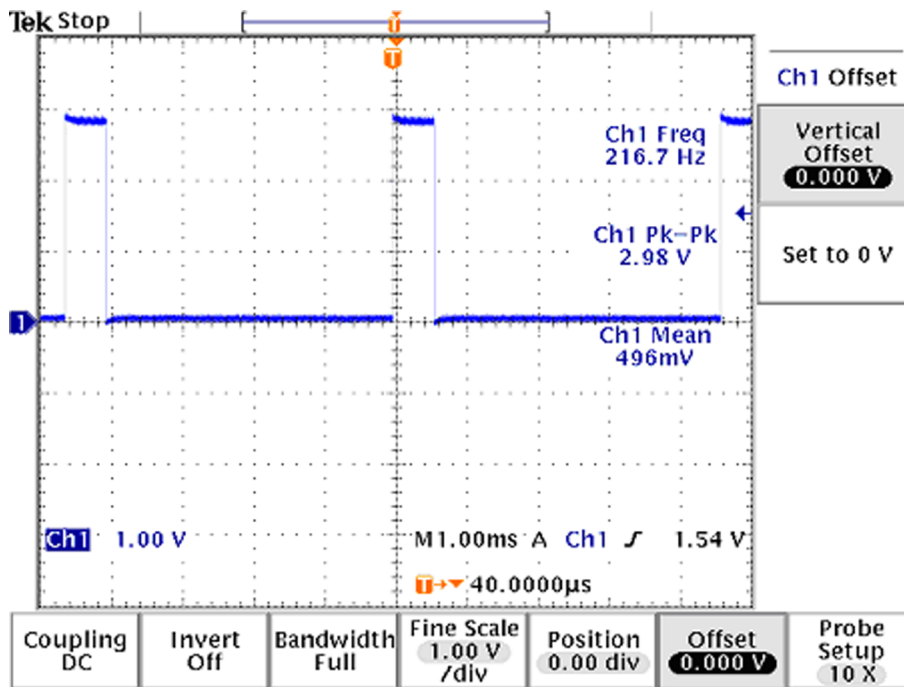


Figure 124 VC1, VC2, VC3 signals

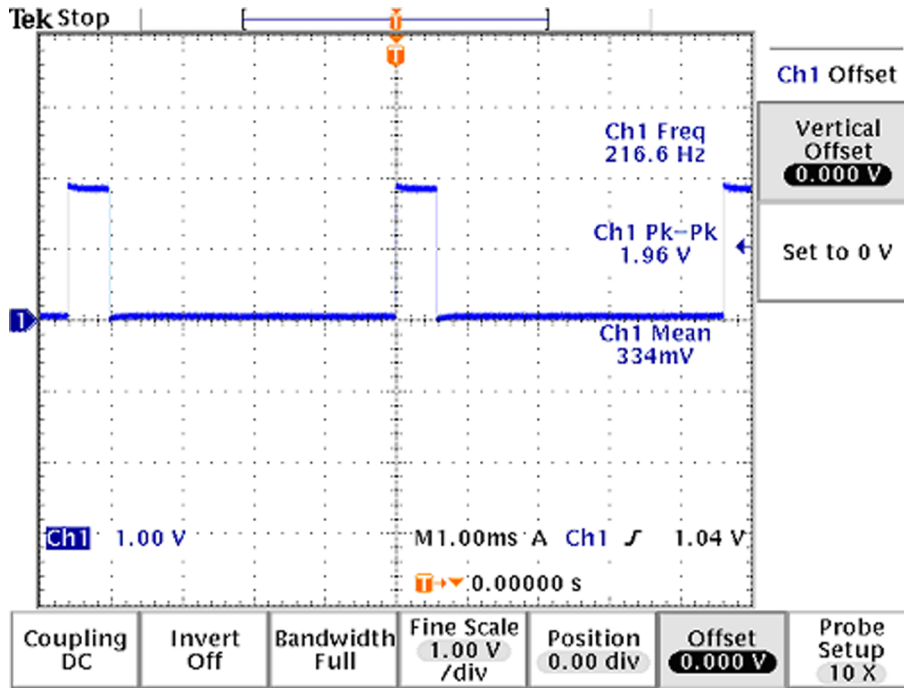


Figure 125 TXP signal

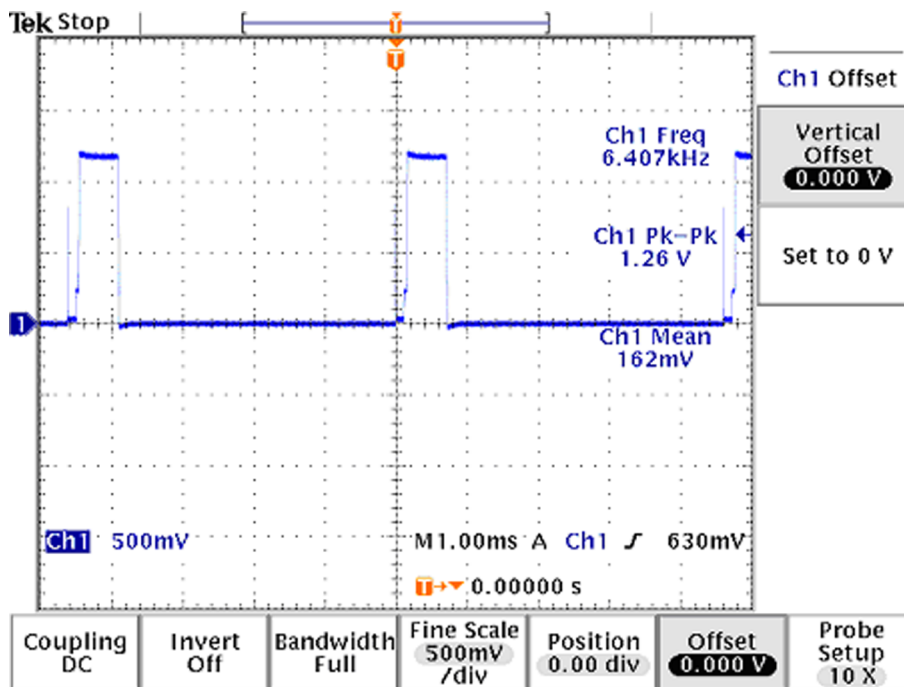


Figure 126 TXC signals at PCL0

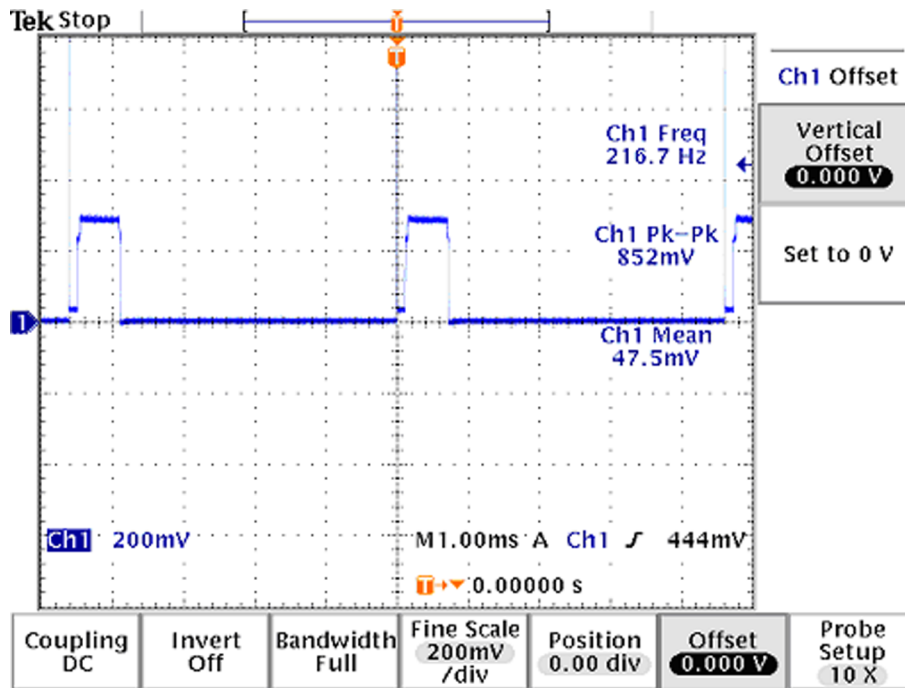


Figure 127 TXC signals at PCL15

## ■ Synthesizer troubleshooting

### Introduction

#### 26 MHz Reference Oscillator (VCX0)

There is only one PLL synthesizer generating Local Oscillator frequencies for both RX and TX in both bands (PCN and EGSM). The VCO frequency is divided by 2 for PCN operation or by 4 for EGSM operation inside the RF IC.

The 26 MHz oscillator is located near the RF IC (N7600). The coarse frequency for this oscillator is set by an external crystal (B7600). The reference oscillator is used as a reference frequency for the PLL synthesizer and as the system clock for the Baseband. The 26 MHz signal is divided by 2 to achieve 13 MHz inside the UPP IC (D2800).

The 26 MHz signal from the VCX0 can be measured by probing R2900. The level at this point is approx. 770 mVpp. Frequency of this oscillator is adjusted by changing the AFC-register inside the UEM IC. Example Signal Measured at VCX0 output (R2900).

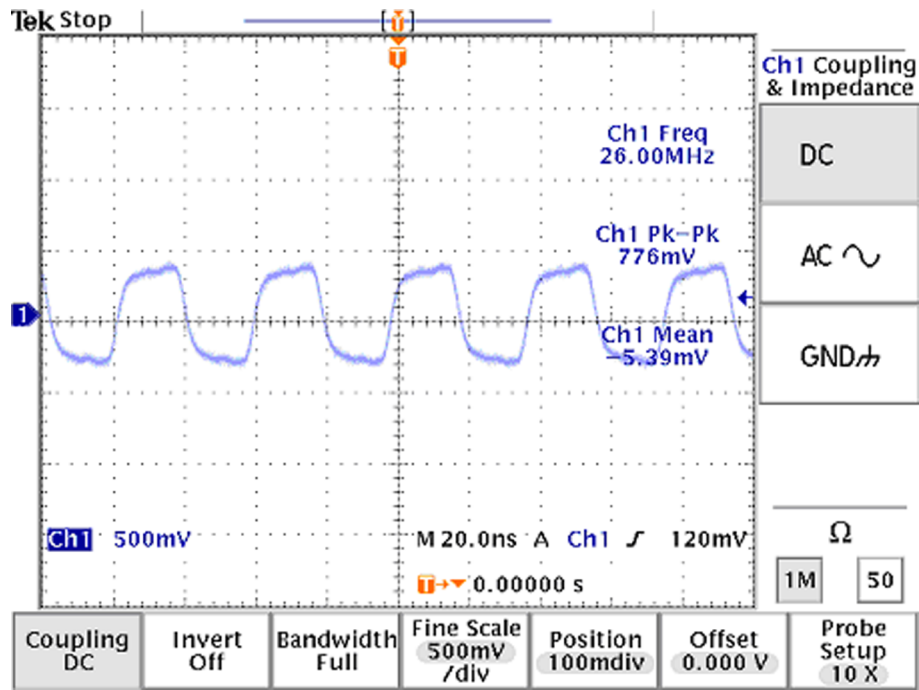


Figure 128 VCXO 26 MHz waveform



**Troubleshooting diagram for PLL synthesizer**

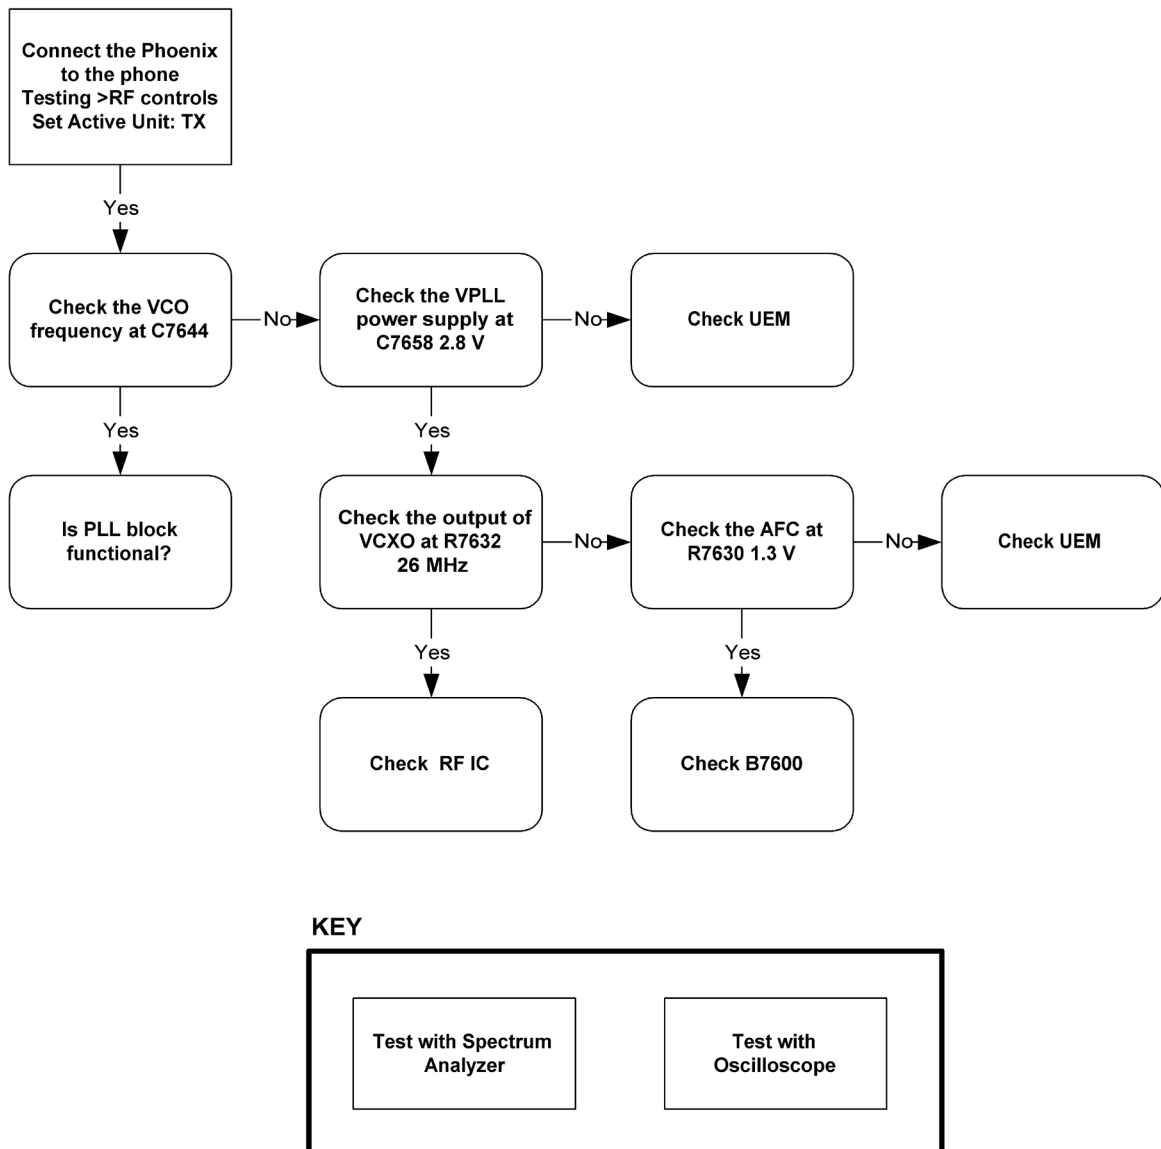


Figure 129 PLL Troubleshooting diagram

## Measurement points at the VCXO

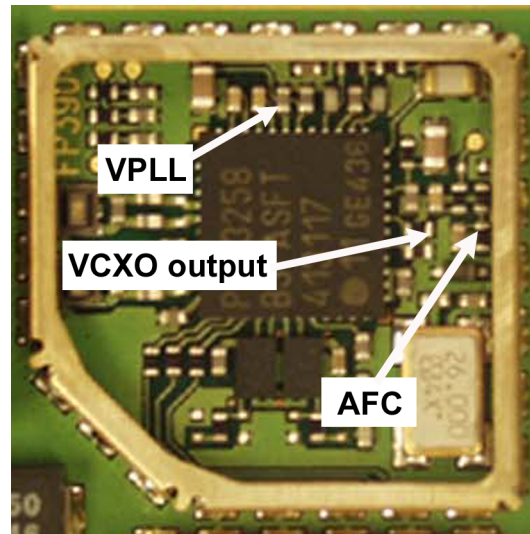


Figure 130 Measurement point for VCXO

## ■ FM radio troubleshooting

### Measurement settings

- 1 Connect the phone to a PC with the module repair jig.
- 2 Start Phoenix and establish a connection to the phone with the data cable e.g. FBUS.
- 3 Phoenix settings shall be as follows:

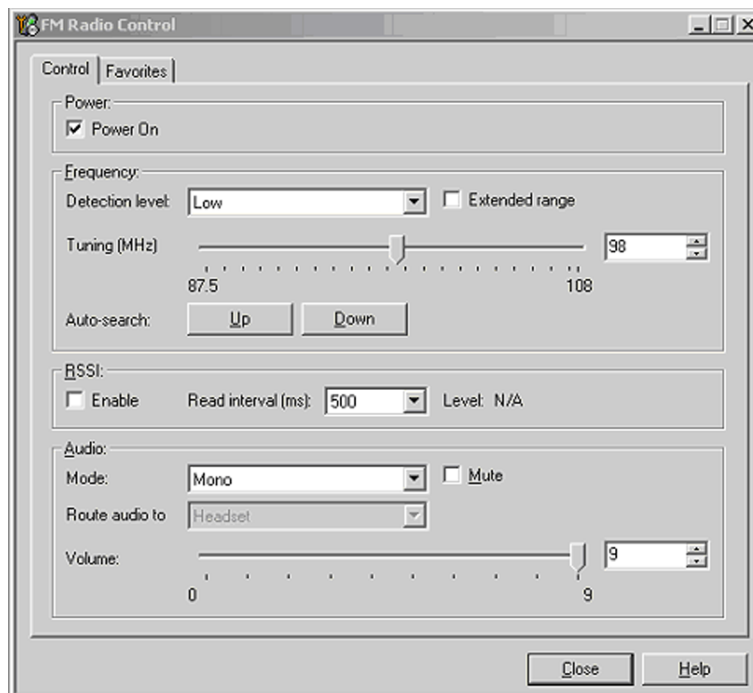


Figure 131 Phoenix settings

- 1 Establish input of a standard FM signal to the FM module.

2 Signal generator settings shall be as follows:

- Frequency: 98 MHz
- Level: 60 dBm
- FM deviation: 75 kHz
- LFGEN frequency: 1 kHz

**Troubleshooting diagram for FM radio**

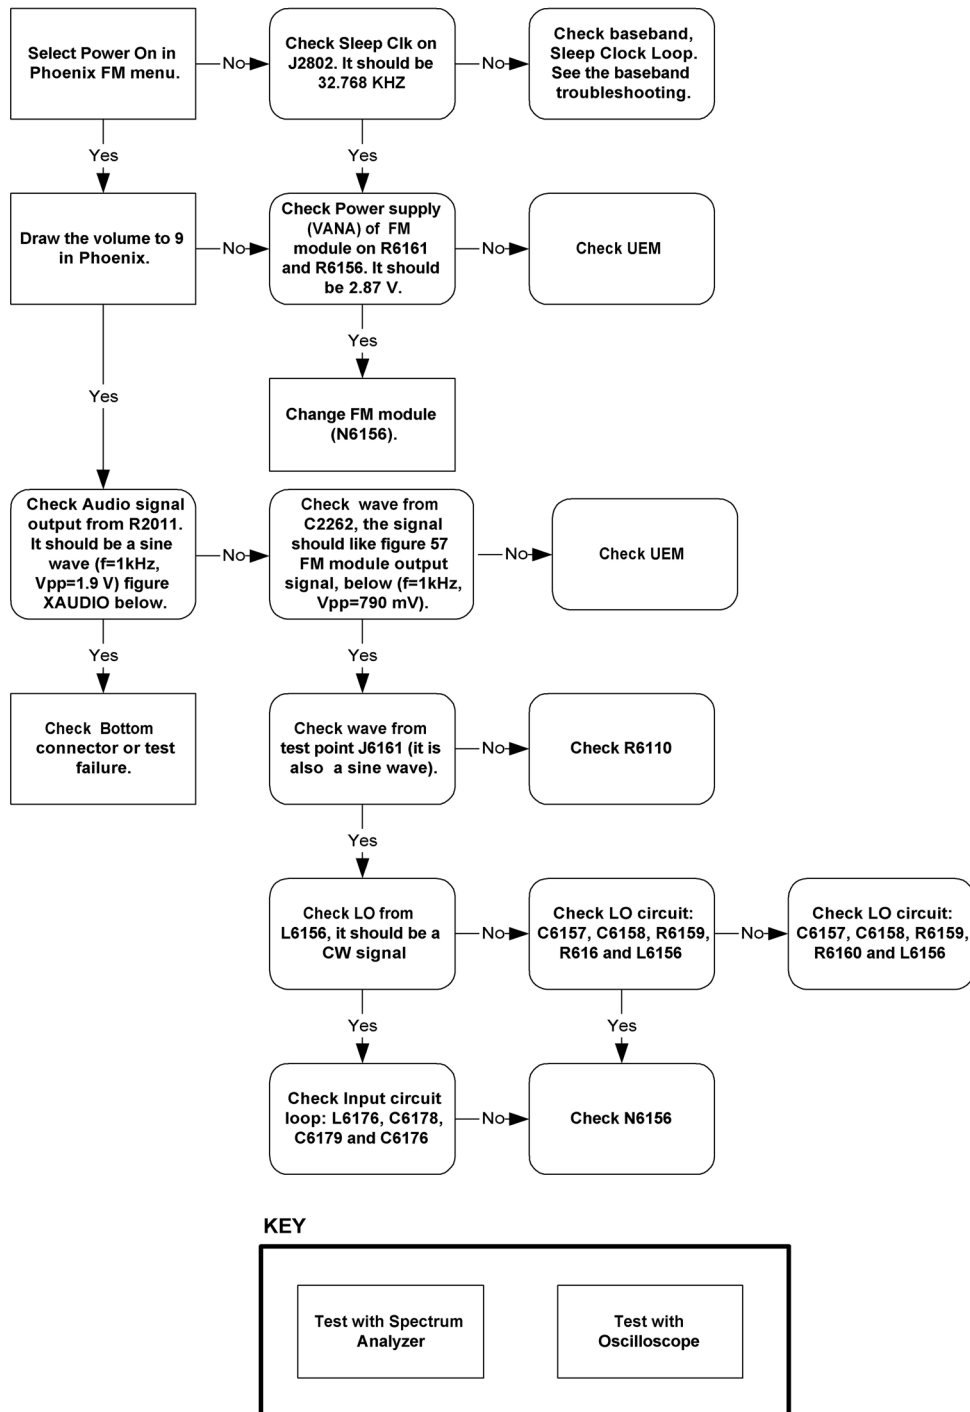


Figure 132 FM circuit troubleshooting diagram

### Measurement points in the receiver

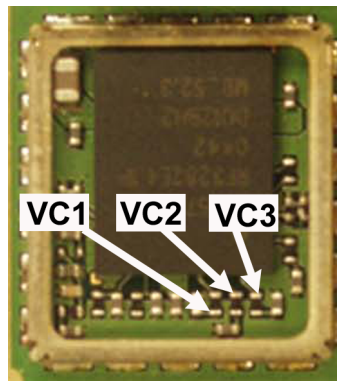


Figure 133 RX measurements point of the control voltages to FEM N7700

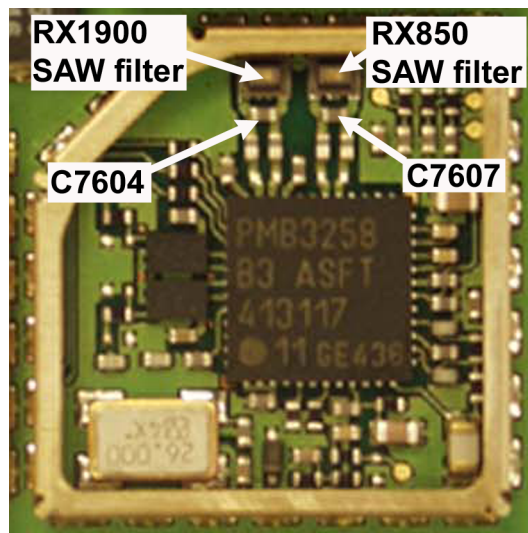


Figure 134 Measurement points at the RX SAW Filters – Z7600/Z7602

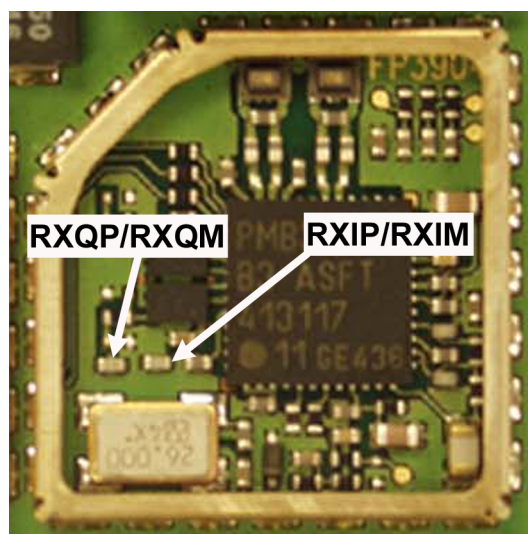


Figure 135 RX I/Q signals

■ **Antenna troubleshooting**

**Antenna troubleshooting**



Figure 136 Antenna troubleshooting

(This page left intentionally blank.)

## 8 — System module

(This page left intentionally blank.)



## Table of Contents

Block diagram.....	8-5
System module block diagram.....	8-5
Functional description.....	8-6
Baseband description.....	8-6
UPP.....	8-6
UEMCLite.....	8-6
External regulators.....	8-7
Energy management.....	8-7
Modes of operation.....	8-8
Voltage limits.....	8-9
Audio function description.....	8-9
External audio connector.....	8-11
External signals and connections.....	8-11
Interfaces.....	8-12
RF and baseband interfaces.....	8-12
Analogue Signals.....	8-15
FM radio.....	8-16
LCD interface.....	8-16
Keyboard.....	8-17
SIM interface.....	8-18
External signals and connections.....	8-11
Battery connector.....	8-19
Battery.....	8-20
PWB outline.....	8-21
RF description.....	8-21
Frequency band, power and multi-slot class.....	8-21
Transmitter - general description.....	8-22
Transmitter - signal processing.....	8-22
VCXO and PLL.....	8-22

### List of Tables

Table 10 RF power supply.....	8-7
Table 11 Baseband power supply.....	8-7
Table 12 Voltage limits.....	8-9
Table 13 Connector for External Audio Accessories.....	8-11
Table 14 System connector.....	8-11
Table 15 AC and DC Characteristics of BB4.0 LiteV2 RF-Base band Digital Signals.....	8-12
Table 16 AC and DC Characteristics of RF-Base band Analogue Signals.....	8-15
Table 17 The electrical parameters.....	8-18
Table 18 System connector.....	8-11
Table 19 Battery IF.....	8-19
Table 20 Frequency bands and TX power class.....	8-21
Table 21 Multi-slot class.....	8-22

### List of Figures

Figure 137 Module block diagram.....	8-5
Figure 138 Power connection diagram.....	8-8
Figure 139 SIM filtering.....	8-8

Figure 140 Audio block diagram.....8-10  
Figure 141 4-pole jack plug for audio accessory.....8-11  
Figure 142 Keyboard schematics.....8-17  
Figure 143 Keyboard layout in UI side.....8-17  
Figure 144 BL-5C battery connection order.....8-20  
Figure 145 BL-5C battery block.....8-20  
Figure 146 PWB top side component placement.....8-21

■ **Block diagram**

**System module block diagram**

The main board consists of a radio frequency part and a baseband part. The User Interface parts are situated at the UI side, which is on the opposite side of the engine board. The 1MF is the system module of the mobile device.

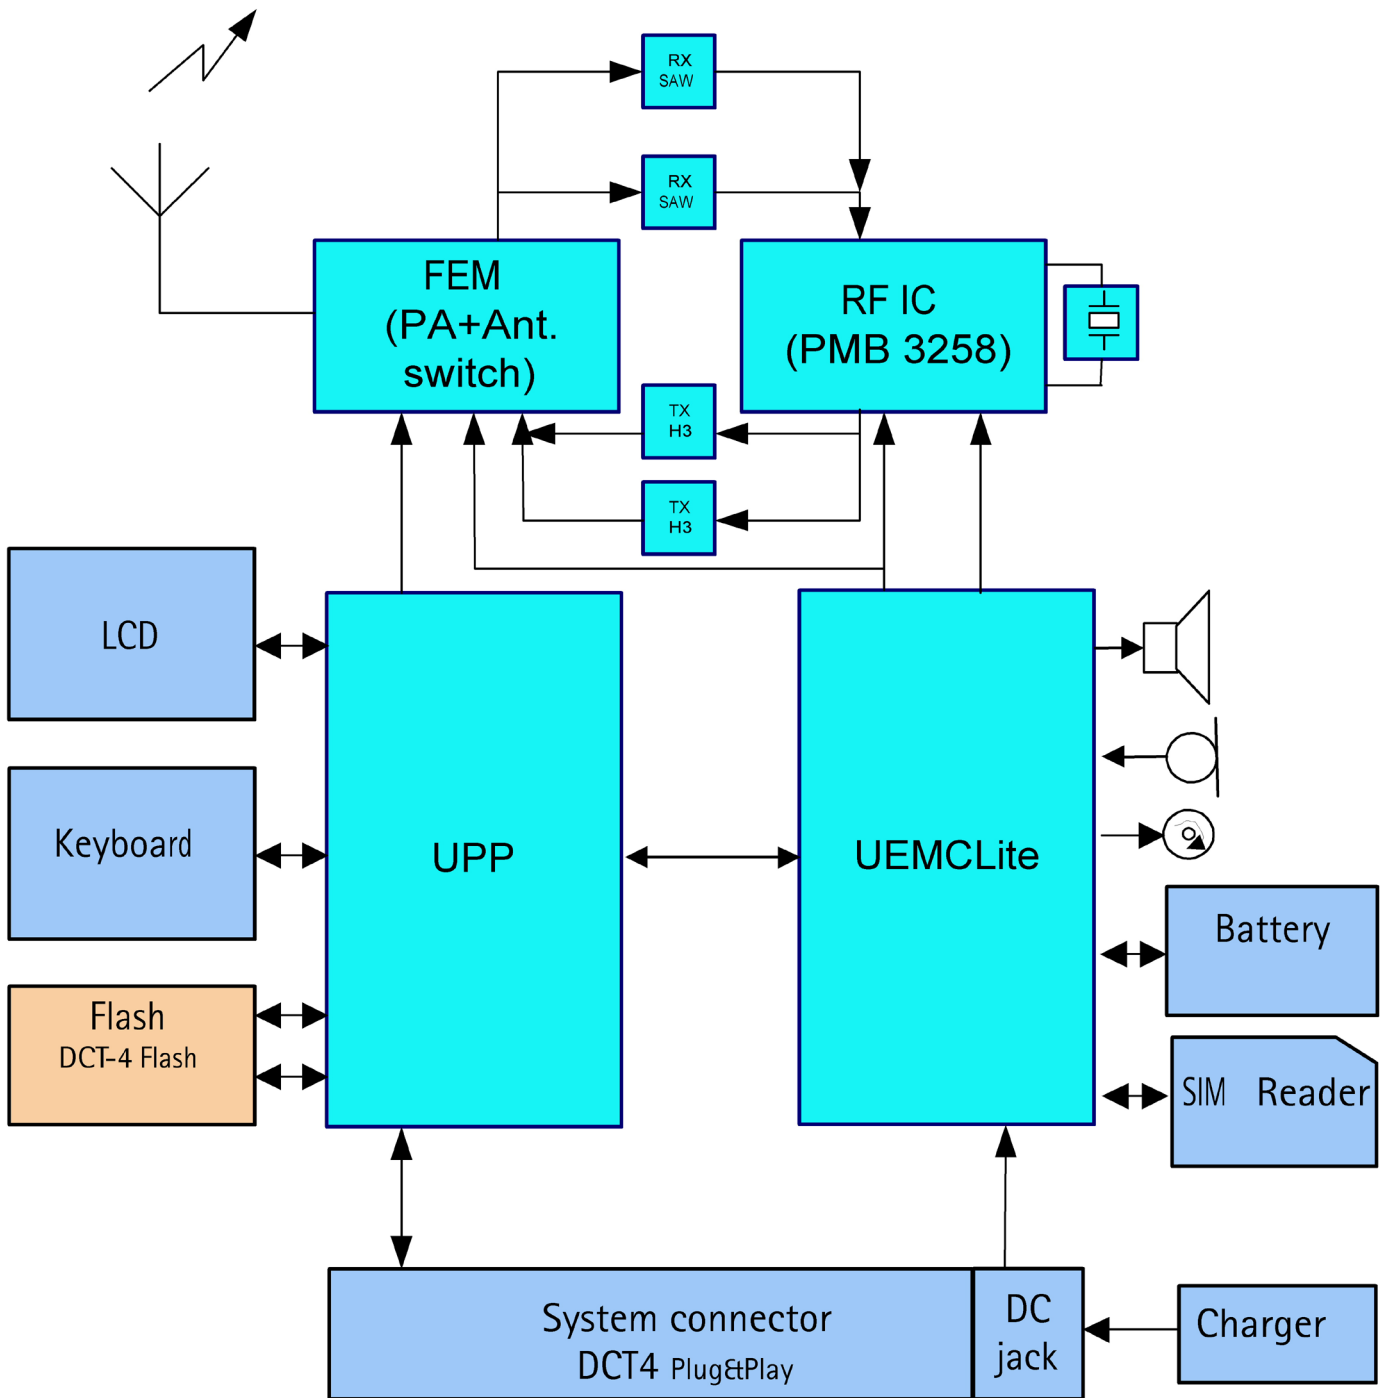


Figure 137 Module block diagram

## Functional description

The BB core is based on UPP4M CPU. UPP4M takes care of all the signal processing and operation controlling tasks of the mobile device. For power management, there is one main ASIC for controlling, charging and supplying power UEMCLite plus a discrete power supply. The UEMCLite generates the main reset for the system. Memories comprise 128 Mbit flash and 16 Mbit PsRAM. Memory devices are stacked on top of each other in a single Combo package.

The UEMCLite also handles the interface to the RF and audio sections. This ASIC provides A/D and D/A conversion of the in-phase and quadrature receive and transmit signal paths and also A/D and D/A conversions of received and transmitted audio signals. Data transmission between UEMCLite and RF and the UPP4M is implemented using different serial connections (CBUS, DBUS and RFBUS). UPP4M ASIC handles digital speech processing.

A real time clock function is integrated into UEMCLite, which utilizes the same 32 kHz-clock source as the sleep clock. The SLCK/RTC runs all time when the phone battery is connected. It is running also when the phone is switched off. In UEMCLite there is no back up battery/capacitor connection.

There are two audio transducers in the product; 13 mm speaker and a microphone. The speaker is used to generate audios for earpiece, IHF and ringing tones. A separate audio amplifier drives the speaker. There is only one microphone for both HS and IHF modes.

The display is a CSTN type color display with 65536 colors and 128 x 128 pixels with backlighting. The UI module features a function key mat with a 4-way navigation key with a center selection key.

## ■ Baseband description

### UPP

UPP (Universal Phone Processor) is the digital ASIC of the DCT4 generation base band. In LiteV2 BB the UPP4M\_v3/UPP4Mv4 and UPP2Mv2 are supported types. UPP4Mv3 includes 4.5 Mbit internal RAM, ARM7TDMI rev4 16/32-bit RISC MCU core, TI Lead3 16-bit DSP phase2+ core with DMA controller, ROM for MCU boot code and all digital control logic. UPP general purpose IO (GENIO) can be used for predefined HW purpose or but they can also be controlled with SW for product specific features.

### Memory

This mobile uses two kinds of memories, Flash and Synchronous RAM (SRAM). These memories have are sharing the same bus interface to UPP4M. SDRAM is used as the working memory. Interface is 16 bit wide data and 14 bit address. Memory clocking speed is 52 MHz. The SRAM size is 16 Mbits.

SRAM I/O is 1.8 V and core 1.8 V supplied by UEMCLite regulator VIO. All memory contents are lost if the supply voltage is switched off.

Multiplexed flash memory interface is used to store the MCU program code and user data. The memory interface is a burst type FLASH with multiplexed address/data bus, running at 52 MHz.

Configuration of flash memory is a 128 Mbit NOR flash memory. Flash I/O and core voltage are 1.8 V supplied by UEMCLite's VIO.

### UEMCLite

Power management in the RM-74/75 follows the DCT4 Core design, having anyhow less regulators than traditional architecture. The UEMCLite, that is a low cost energy management ASIC with completely new design contains for BB use two 2.78V LDO regulators, 1.8V linear regulator, programmable 1.0 - 1.5 V linear regulator and 1.8/3.0 V LDO regulator. For RF use UEMCLite has five 2.78 V LDOs. In addition, the UEMCLite contains audio codec, A/D converters, RF converters, many drivers, etc.

Below is a list of the supply voltages.

**Table 10 RF power supply**

	Vmin/V	Vtyp/V	Vmax/V	ItypmA	I <sub>max</sub> mA	Notes
VR1	2.7	2.78	2.86	65	75	VTX (Supply voltage for PMB3258 LO and RX parts
VR2	2.7	2.78	2.78	2.4	3.0	VX0 (VCX0 supply voltage)
VR3	2.7	2.78	2.86	41	47	VTX2 (Supply voltage for PMB3258 modulator output stage)
VR4	2.7	2.78	2.86	43	48	VRX (Supply for RFIC RX and TX parts)
VR5	2.7	2.78	2.86	29	35	VPLL (Supply for VCO, PLL and digital parts)
VBATTRF	3.1	3.6	4.7	1.5	3.5	Supply voltage for the front-end module (V <sub>batt</sub> , max=6.0 V)

The table below shows the typical current consumption in different operation modes.

**Table 11 Baseband power supply**

Signal, Nom Volt., Max Current	Min-Max Voltage (V)	I <sub>qmax</sub>	PSSR(dB)*	Notes
VANA, 2,78V, 80mA	2.7-2.86	200	50, 40	Disabled in sleep mode
VBB1 2,78V, sleep 2mA, norm. 50mA	2.7-2.86	15 sleep, 200	40, -	Sleep mode possibility
VSIM, 1.8/3.0, 25mA	1.745- 1.8552.910- 3.090	30 sleep, 80	40, -	Sleep mode possibility, programmable
VIO, 1.8V	1.72 - 1.88	15 sleep, 100	45, -	Sleep mode possibility
VCORE,1.055/1.25/ 1.35/1.5V	1.0 - 1.111.188 - 1.3131.285 -1.4151.425 -1.575	20 sleep, 200	40, -	Sleep, programmable, Initial voltage 1.35V from reset

### External regulators

White LED Driver solution is implemented with DC/DC converter. The driver circuit is controlled by UEM output pin DLIGHT, which add external pull up using a digital transistor and one resistor. The schematics also combined the UEMIO (5) to control DC/DC enable as another optional using two jumper.

### Energy management

#### Filter components

The master of EM control is UEMCLite and with SW it has the main control of the system voltages and operating modes. The RM-74 power distribution diagram is presented in the illustration below.

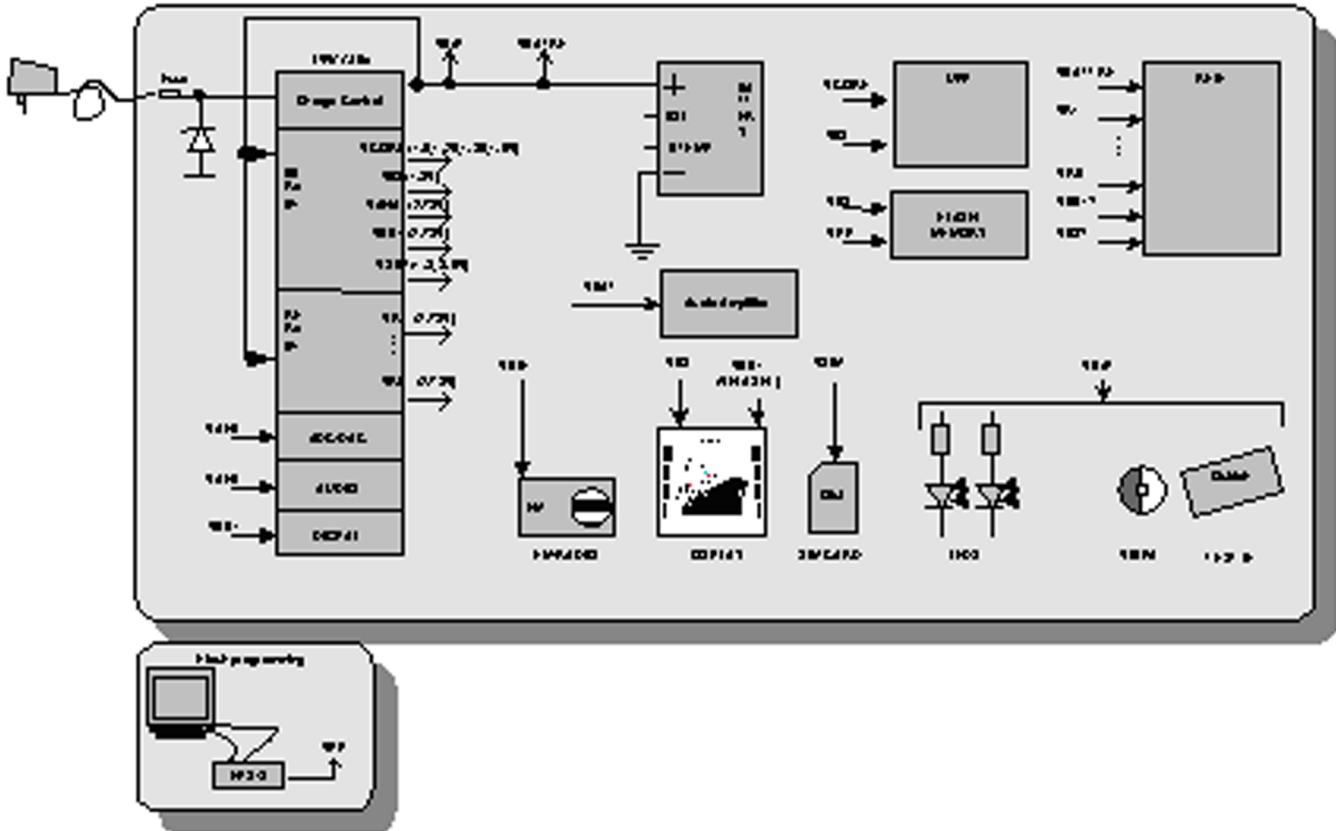


Figure 138 Power connection diagram

All connectors going to the “outside world” have filter components, ESD protection and EMC reduction. The Digital/Data lines on SIM have special dedicated filter ASIP. The below figure show the SIM filtering.

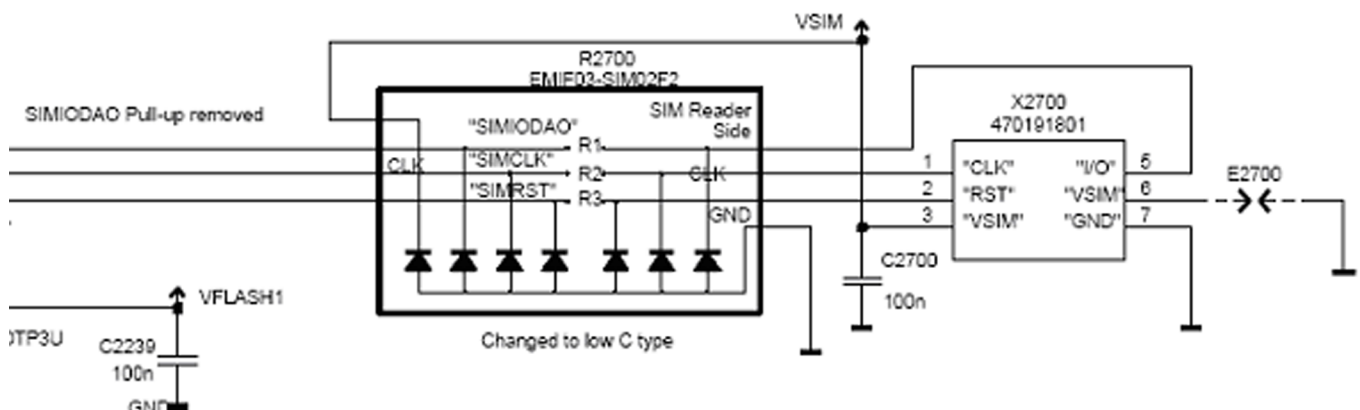


Figure 139 SIM filtering

The Audio circuit: Earpiece, IHF, internal microphone and external speaker are filtered with discrete components (common mode reduction coils, Varistors, caps and resistors), where as the external microphone uses differential mode mic. ASIP

The 16 UEMECLite BB & RF regulators are specified to have a decoupling cap of 1  $\mu\text{F} \pm 20\%$ .

### Modes of operation

BB4.0 LiteV2 base band has five different functional modes, which are defined in UEMCLite specification:

- **No supply:** In NO\_SUPPLY mode, the phone has no supply voltage. This mode is due to disconnection of main battery or low battery voltage level in battery. Phone is exiting from NO\_SUPPLY mode when sufficient battery voltage level is detected. Battery voltage can rise either by connecting a new battery with VBAT > VMSTR+ or by connecting charger and charging the battery above VMSTR+.
- **Acting Dead:** If the phone is off when the charger is connected, the phone is powered on but enters a state called "Acting Dead". To the user, the phone acts as if it was switched off. A battery charging alert is given and/or a battery charging indication on the display is shown to acknowledge the user that the battery is being charged.
- **Active:** In the Active mode the phone is in normal operation, scanning for channels, listening to a base station, transmitting and processing information. There are several sub-states in the active mode depending on if the phone is in burst reception, burst transmission, if DSP is working etc. One of the sub-states of the active mode is FM radio on state. In that case, Audio Amplifier and FM radio are powered on. FM radio circuitry is controlled by the MCU and 32kHz-reference clock is generated in the UPP. BBLite supports also the MIC3 audio path enabling also in the sleep mode allowing for example the FM radio listening during sleep mode. This requires that the FM radio work with 32kHz sleep clock frequency.

In Active mode the RF regulators are controlled by SW writing into UEMCLite's registers wanted settings: VR regulators can be disabled, enabled or forced into low quiescent current mode. VR2 is always enabled in Active mode for system clock chain supply

- **Sleep:** In sleep mode VCTCX0 is shut down and 32 kHz sleep clock oscillator is used as reference clock for the base band.
- **Charging:** Charging can be performed in any operating mode. The battery type / size is indicated by a resistor inside the battery pack. The resistor value corresponds to a specific battery capacity. This capacity value is related to the battery technology as different capacity values are achieved by using different battery technology. The battery voltage, temperature, size and current are measured by the UEMCLite and controlled by the charging software running in the UPP. The charging control circuitry (CHACON) inside the UEMCLite controls the charging current delivered from the charger to the battery. The battery voltage rise is limited by turning the UEMCLite switch off when the battery voltage has reached 4.2 V. Charging current is monitored by measuring the voltage drop across a 220 mW resistor. The PWM output doesn't exist any more from UEMCLite to the bottom connector

## Voltage limits

**Table 12 Voltage limits**

Parameter	Description	Value/V
Vmstr+	Master reset threshold (rising)	2.1 ±0.1
Vmstr-	Master reset threshold (falling)	1.9 ±0.1
Vcoff+	Hardware cutoff (rising)	3.1 ±0.1
Vcoff-	Hardware cutoff (falling)	2.8 ±0.1
SW shutdown	SW cutoff limit (> regulator drop-out limit) MIN!	3.2 V

## Audio function description

### Audio

The basic audio structure and communication between HW-audio modules and the audio ASIC's is illustrated in the block diagram below.

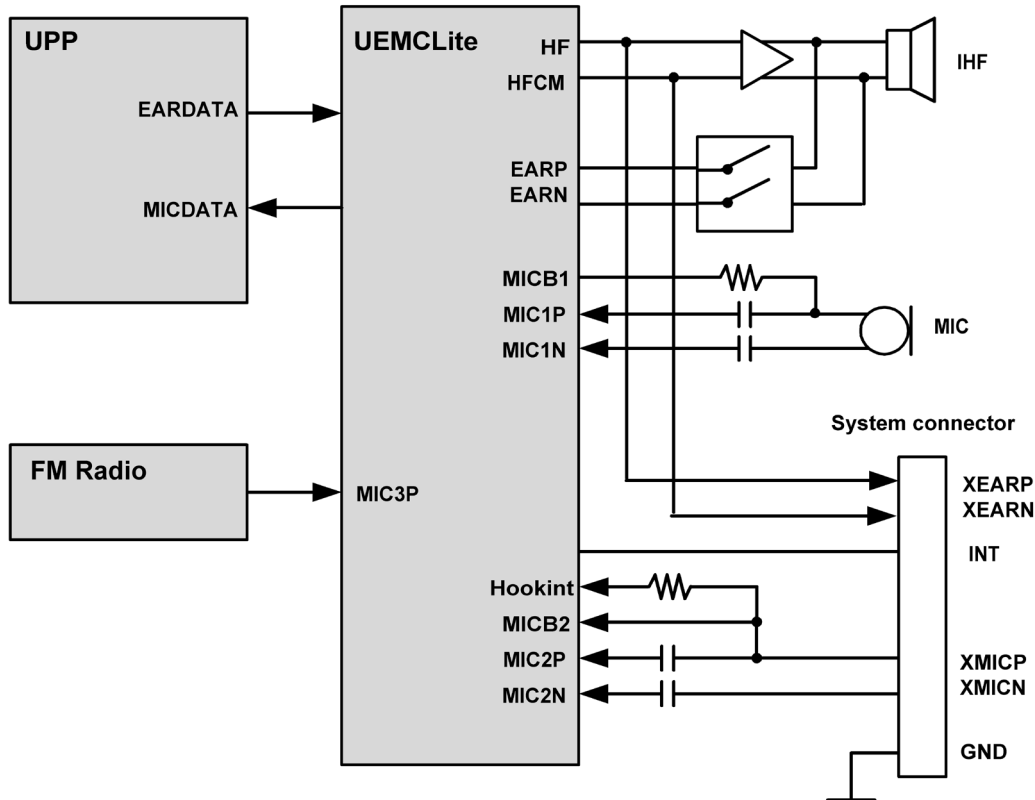


Figure 140 Audio block diagram

UEMCLite supports three microphone inputs and two earphone outputs. The microphone signals from different sources are connected to separate inputs at the UEMCLite ASIC. The inputs and outputs are all differential.

Three inputs (MIC1, MIC2, MIC3) and two outputs (EAR, HF/HFCM) are used. MIC1P/MIC1N input is used for the internal microphone, using single-ended biasing circuitry. EARP/EARN output from UEMCLite is used for hand-portable mode.

Uplink external audio (headset as well as car kit) is connected to MIC2P/MIC2N, while downlink audio is provided via the HF/HFCM output from UEMCLite. The car kit only can be used with external microphone connected.

MIC3 (positive input) connects to single ended outputs from the FM radio. The other input MIC3N is AC-coupled to GND.

The audio control is taken care of by UEMCLite, which contains the MCU and audio codec. Input and output selection, and gain control is performed inside UEMCLite. DTMF-tones and other audio tones are generated and encoded by UPP and transmitted to UEMCLite for decoding.

An external amplifier (D-class) is connected to provide sufficient power for an 8 W load. The inputs are wired to the headset connections HF and HFCM from UEMCLite.

EARP/N output is used for hand-portable speech, connected with PA output through switches.

Under normal conditions HF and HFCM is used for downlink audio to the headset/car kit. During headset/car kit usage the audio amplifier is disabled by means of the shutdown pin. Keeping the shutdown pin "low" also during sleep, secures a minimum amount of standby current to be consumed.

SMD vibra has a diameter is about 4.0-mm. Vibra is driven by PWM signal, generating vibration by rotating an un-balanced mass (counter weight) with radius of R=2.3-mm. The vibration signal is used as a silent alert call and also as a noticeable shock in gaming.



### External audio connector

The system connector, containing a 4-pole Jack plug, gains the access to the external audio interface. The Jack plug, which is integrated in the system connector, contains a mechanical switch, which is used to detect the connection of the accessories. The configuration for the 4-pole Jack-plug is shown in the following figure.

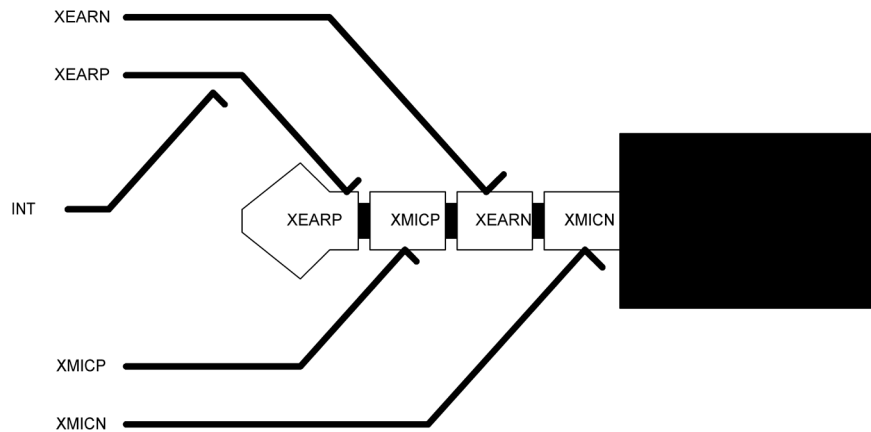


Figure 141 4-pole jack plug for audio accessory

**Table 13 Connector for External Audio Accessories**

Line symbol	Function
XMICP	External microphone signal input
XMICN	External microphone signal input
XEARP	External earphone signal output
XEARN	External earphone signal output
INT	Accessory detection
GND	Ground (Only used by PPH-1)

### External signals and connections

**Table 14 System connector**

Signal	From	To	Min	Nom	Max	Condi-tion	Note
XMICP	HS/HF Mic	UEMC Lite		2/60mV diff		Analog audio in	Headset Mic bias and audio signal 2mV nominal. HF Mic signal 60mV nominal. Differential symmetric input.
						DC bias 2V2kohm	Accessory detection by bias loading
XMICN				2/60mV diff		Ana in / 1k to GND	Hook interrupt by heavy bias loading

Signal	From	To	Min	Nom	Max	Condition	Note
XEARP	HS/HF	UEMC Lite		100 mV diff		Ana in	Quasi-differential DC-coupled earpiece/HF amplifier signal to accessory. DC biased to 0.8V
XEARN	EAR/Amp.						
INT HEADINT	Switch	UEMC Lite		0/2.7V		Dig in	HS interrupt from bottom connector switch when plug inserted.
VCHARIN	Charger	UEMC Lite		11.1Vp eak	16.9 Vpeak	Standard	Vch from Charger Connector, max 20V
					7.9 VRMS		
					1.0 Apeak		
			7.0 VRMS	8.4 VRMS	9.2 VRMS	Fast charger	
		850 mA					
GND					GND		GND from/to Charger connector

## ■ Interfaces

### RF and baseband interfaces

**Table 15 AC and DC Characteristics of BB4.0 LiteV2 RF-Base band Digital Signals**

Signal name	From	To	Para-meter	Input characteristics				Function
				Min	Typ	Max	Unit	
TXP1	UPP	RF-IC	1	1.38		1.88	V	Depends of the RF design
RFGGenOut 3	GenIO5		0	0		0.4	V	
			Load Resistance	10			kW	
			Load Capacitance			20	pF	
			Timing Accuracy			¼	symbol	

Signal name	From	To	Para-meter	Input characteristics				Function
				Min	Typ	Max	Unit	
TXP2	UPP (GenIO6)	RF-IC	1	1.38		1.88	V	Depends of the RF design
			0	0		0.4	V	
			Load Resistance	10			kW	
			Load Capacitance			20	pF	
			Timing Accuracy			¼	symbol	
RFBusEn1X	UPP	RF-IC	1	1.38		1.88	V	RFIC Chip SelX
			0	0		0.4	V	
			Internal PU Current			50	uA	
			Load resistance	10			kW	
			Load capacitance			20	pF	
RFBusDa	UPP / RF-IC	RF- IC/ UPP	1	1.38		1.88	V	Bi-directional RF Control serial bus data,
			0	0		0.4	V	
			Load resistance	10			kW	
			Load capacitance			20	pF	
			Data frequency			13	MHz	
RFBusClk	UPP	RF IC	1	1.38		1.88	V	RF Control serial bus bit clock
			0	0		0.4	V	
			Load resistance	10			kW	
			Load capacitance			20	pF	
			Data frequency			13	MHz	

Signal name	From	To	Para-meter	Input characteristics				Function
				Min	Typ	Max	Unit	
GENIO3	UEMCLite	RF IC	1		2.78		V	RF Control *
			0				V	Depends of the RF design
			Load resistance				kW	
			Output current			4	mA	
GENIO4	UEMCLite	RF IC	1		2.78		V	Audio clock input in UEMCLiteV3 and Littiv2
			0				V	
			Load resistance				kW	
			Output current			4	mA	
GENIO5	UEMCLite	RF IC	1		2.78		V	RF Control *
			0				V	Depends of the RF design
			Load resistance				kW	
			Output current			4	mA	

**Analogue Signals**

**Table 16 AC and DC Characteristics of RF-Base band Analogue Signals**

Signal name	From	To	Parameter	Min	Typ	Max	Unit	Function
RFCLK	VCTCXO	UPP	Frequency		13/26		MHz	System Clk from RF to BB,
			Signal amplitude	0.2	0.8	1.32	Vpp	13/26 MHz Depending on RF chipset
			Input Impedance	10			kW	UPP minimum recommended amplitude is 0.3Vpp.
			Input Capacitance			10	pF	
			Harmonic Content			-8	dBc	
			Clear signal window (no glitch)	200			mVpp	
			Duty Cycle	40		60	%	
RFCLKGnd	VCTCXO	UPP	DC Level		0		V	System Clock slicer Ref GND, not separated from pwb GND layer
RXIP, RXIN, RXQP, RXQN	RF-IC	UEMCLite	Voltage swing (static)		1.4	1.45	Vpp	Differential positive / negative in-phase and quadrature Rx Signals.
			DC level	1.3	1.35	1.4	V	
			I/Q amplitude mismatch			0.2	dB	
			I/Q phase mismatch	-0.5		0.5	deg	
TXIP, TXIN, TXQP, TXQN	UEMCLite	RF-IC	Differential voltage swing (static)	2.25		2.45	Vpp	Differential positive / negative in-phase and quadrature Tx Signals
								In High-Z when RX is receiving.
			DC level	1.17	1.20	1.23	V	
			Source Impedance			200	W	

Signal name	From	To	Parameter	Min	Typ	Max	Unit	Function
AFC	UEMCLite	VCTCX0	Voltage Min	0.0		0.1	V	Automatic Frequency Control signal for VCTCX0 Programmable
	(AFCOUT)		Max	2.4		2.55		
			Resolution	11			bits	
			Load resistance	1			kW	
			and capacitance			100	nF	
			Source Impedance			200	W	
			Output impedance	10			MW	Path powered down
TxC	UEMCLite	RF-IC	Voltage Min			0.1	V	Transmitter power level and ramping control, Ref UEMCLite RF converter specification
	(AUXOUT)		Max	2.4				
			Source Impedance			200	W	
			Resolution	10			bits	
VCXOTEMP	RF-IC	UEMCLite	Input voltage range	0		2.7	V	
			Input resistance	900		6000	Ohm	
			Resolution	10			bits	
PATEMP	RF-IC	UEMCLite	Voltage at -20oC		1.57		V	Usage depends of the RF design

## FM radio

Signal	From	To	Min	Nom	Max	Cond	Note
KEYB1 / MIC3P	FM radio	UEMCLite					Differential/single ended signal from internal additional audio device, Muxed with analog keyboard inputs.
KEYB2 / MIC3N							

## LCD interface

The figure below illustrates the structure of LCD module. LCD module includes UV tape, Driver IC, Prism sheet, LGP, Flex Assy, label Tape, Adhesive Tape, Protection film, LCD glass, Rim Tape, Diffuser, Reflector and Holder Frame.

LCD panel includes upper and lower polarizers, LCD transfective glass, single chip COG driver with 132x132x116bit RAM, 10-pin board-to-board connector and FPC with discrete components.

**Keyboard**

A 5 X 5 matrix keyboard consists of 21 keys, one 10-channel integrated passive filter arrays with downstream ESD protection of >8KV connect the matrix keyboard to UPP.

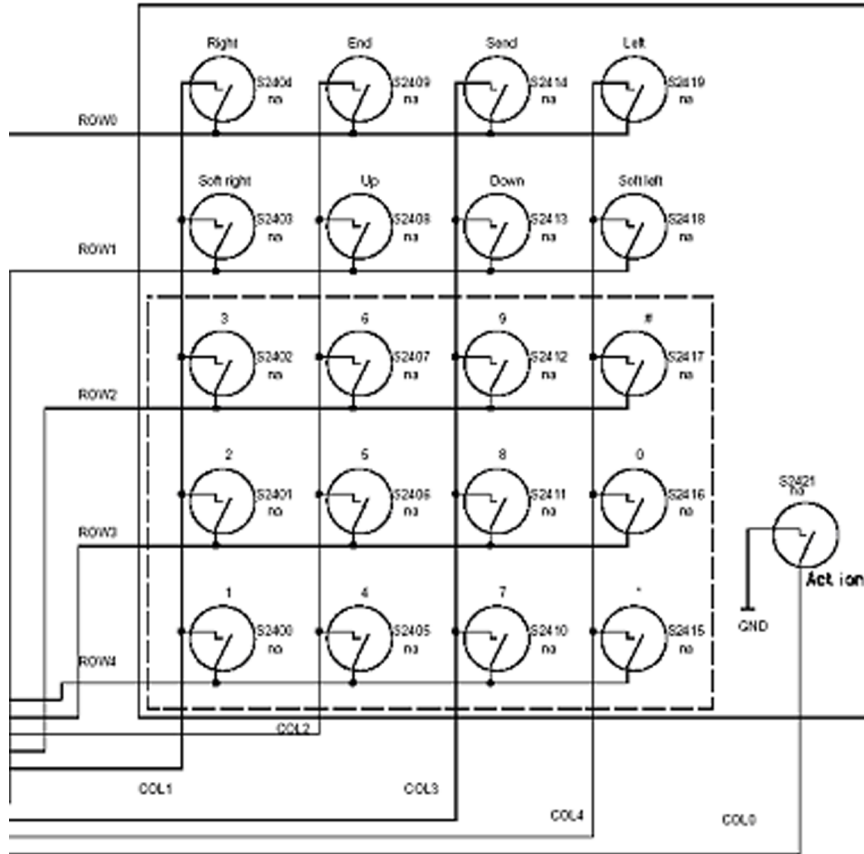


Figure 142 Keyboard schematics

The layout is shown in Keyboard layout in UI side.

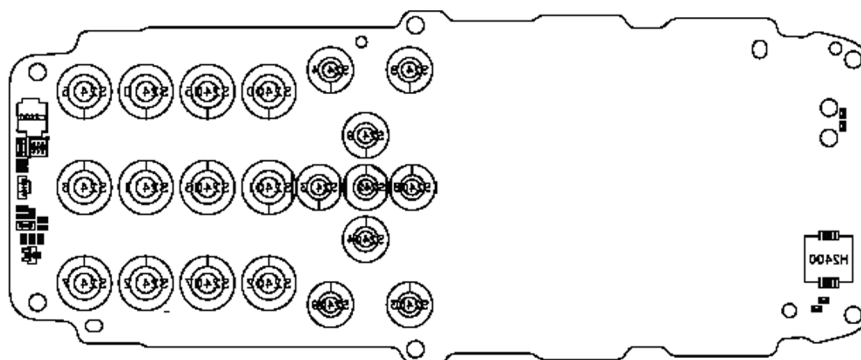


Figure 143 Keyboard layout in UI side

## SIM interface

The SIM interface is programmed to support 3V and 1.8V SIMs. SIM supply voltage is selected by with register in the UEMCLite. It is only allowed to change the SIM supply voltage when the SIM IF is powered down. The SIM power up/down sequence is generated in the UEMCLite.

The SIM interface is powered up when the SIMCardDet signal indicates "card in". This signal is derived from the BSI signal.

SIM interface is implemented in two ASICs, UPP and UEMCLite. The SIM interface is the electrical interface between the Subscriber Identity Module Card (SIM Card) and mobile phone (via UEMCLite device).

**Table 17 The electrical parameters**

Pin	Name	Parameter	Min	Typ	Max	Unit	Notes
1	VSIM	1.8V SIM Card	1.6	1.8	1.9	V	Supply voltage
		3V SIM Card	2.8	3.0	3.2	V	
2	SIMRST	1.8V SIM Card	0.9xVSIM		VSIM	V	SIM reset (output)
			0		0.15xVSIM		
		3V SIM Card	0.9xVSIM		VSIM	V	
			0		0.15xVSIM		
3	SIMCLK	Frequency		3.25		MHz	SIM clock. UPP4Mv3 and UPP4mv4 support 3GPP Release 5, SIMCLK/8 data rate. UPP2Mv2 supports SIMCLK/16 data rate.
		Trise/Tfall			50	ns	
		1.8V Voh	0.9xVSIM		VSIM	V	
		1.8V Vol	0				
		3V Voh	0.9xVSIM		VSIM	V	
		3V Vol	0				
4	DATA	1.8V Voh	0.9xVSIM		VSIM	V	SIM data (output)
		1.8V Vol	0		0.15xVSIM		
		3V Voh	0.9xVSIM		VSIM		
		3V Vol	0		0.15xVSIM		
		1.8V Vih	0.7xVSIM		VSIM	V	SIM data (input)
		1.8V Vil	0		0.15xVSIM		Trise/Tfall max 1us
		3V Vil	0.7xVSIM		VSIM		
		3V Vil	0		0.15xVSIM		
5	NC					Not connected	
6	GND	GND	0		0	V	Ground

VSIM specified in regulator section in this document



## External signals and connections

**Table 18 System connector**

Signal	From	To	Min	Nom	Max	Condi-tion	Note
XMICP	HS/HF Mic	UEMC Lite		2/60mV diff		Analog audio in	Headset Mic bias and audio signal 2mV nominal. HF Mic signal 60mV nominal. Differential symmetric input.
						DC bias 2V2kohm	
XMICN				2/60mV diff		Ana in / 1k to GND	Hook interrupt by heavy bias loading
XEARP	HS/HF	UEMC Lite		100 mV diff		Ana in	Quasi-differential DC-coupled earpiece/HF amplifier signal to accessory. DC biased to 0.8V
XEARN	EAR/ Amp.						
INT HEADINT	Switch	UEMC Lite		0/2.7V		Dig in	HS interrupt from bottom connector switch when plug inserted.
VCHARIN	Charger	UEMC Lite		11.1Vp eak	16.9 Vpeak	Standard	Vch from Charger Connector, max 20V
					7.9 VRMS		
					1.0 Apeak		
			7.0 VRMS	8.4 VRMS	9.2 VRMS	Fast charger	
		850 mA					
GND					GND		GND from/to Charger connector

## Battery connector

Internal, user-changeable batteries. Semi-fixed. Types: Li-Ion, NiMH. Interface, 4 terminals (VBATT, GND, BSI, BTEMP) Janette battery interface is used. The battery type and size are defined in the next chapter.

**Table 19 Battery IF**

Signal	From	To	Min	Nom	Max	Condi-tion	Note
GND	Global	Batt (-)					Global GND
VBAT		Batt (+)	3.1		5.1		Battery Voltage

Signal	From	To	Min	Nom	Max	Condi-tion	Note
BSI		UEMCLite	0		2.78		Analog input, Battery Size Indicator Resistor, 100 kohm pull up to 2.78V (VBB1). FDL Init, refer to flash download.
BTEMP		UEMCLite	0		2.78		Btemp NTC Resistor, 100 kohm pull up to 2.78V (VANA)

\* Note! In BL-5C battery IF the BTEMP signal doesn't exists. Temperature measurement is done on system board with NTC resistor.

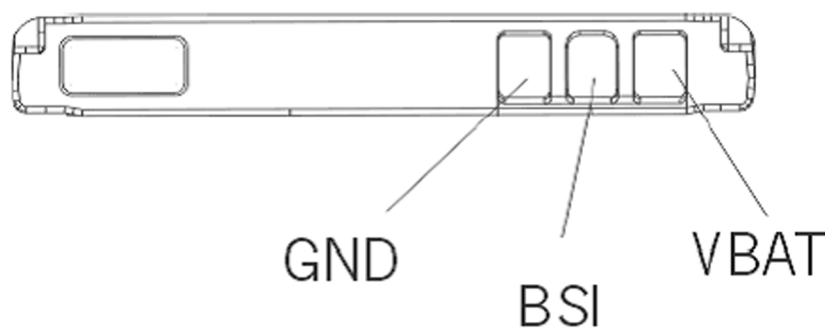


Figure 144 BL-5C battery connection order

**Battery**

- Type: BL-5C
- Technology: Li-Ion, 4.2 V charging, 3.1 V cut-off
- Capacity: 900 mAh.

The BSI resistor is placed on the main PWB as the telephone supports only one battery capacity. Further a BSI connection is added to the Flash interface. The battery temperature is measured by a NTC resistor placed on the main PWB, opposite to the Battery. Battery pack has an impedance of 130 - 150 mΩ (0 - 45 °C).

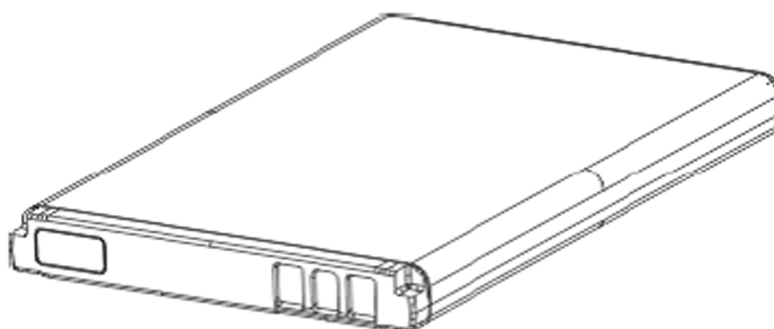


Figure 145 BL-5C battery block

**PWB outline**

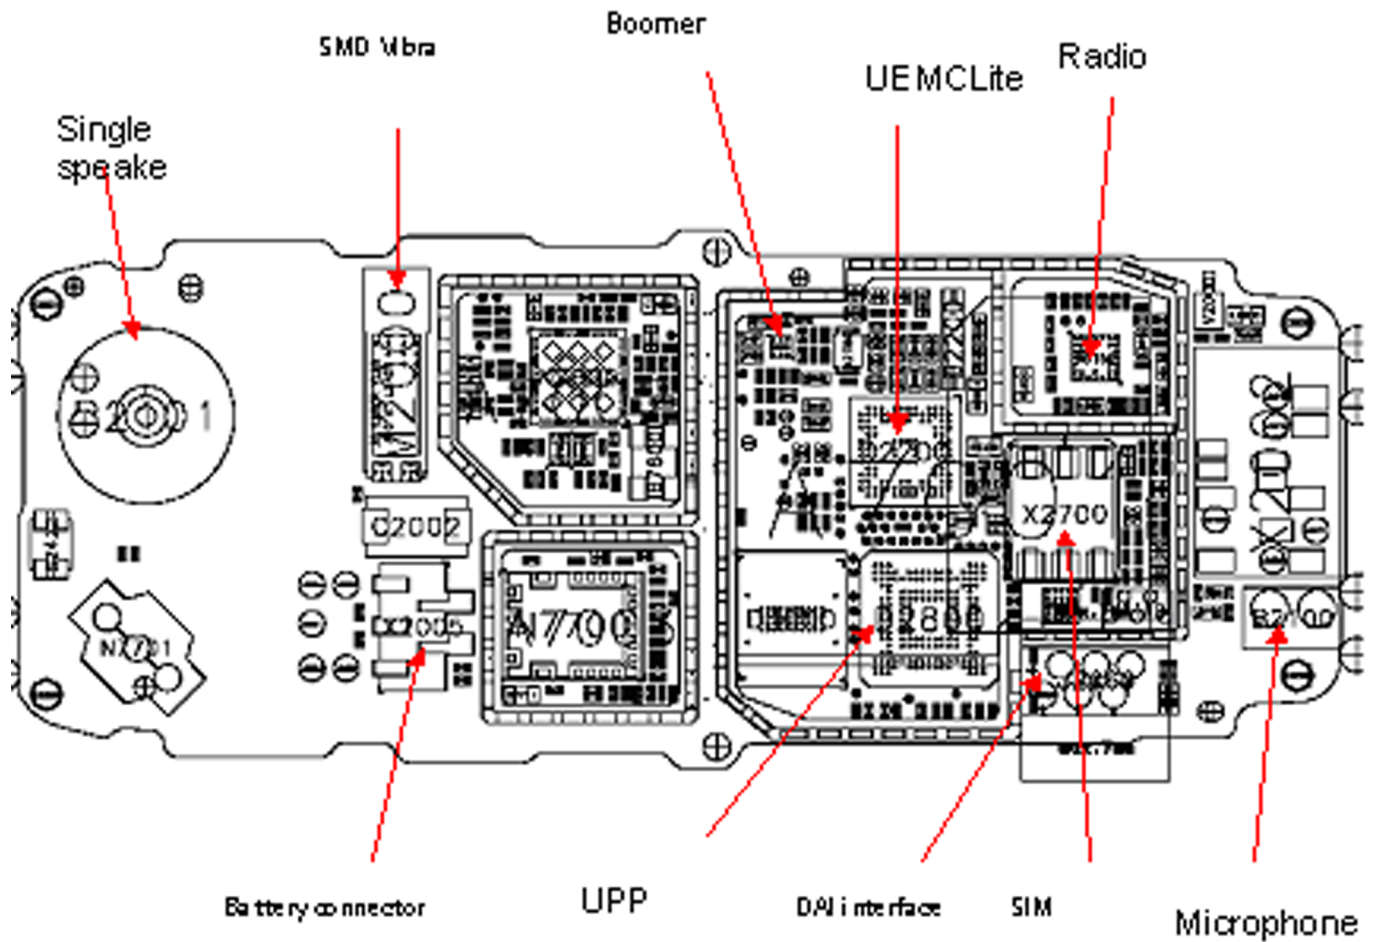


Figure 146 PWB top side component placement

**RF description**

**Frequency band, power and multi-slot class**

The requirements leads to the specification in the table below:

**Table 20 Frequency bands and TX power class**

System	Frequency band	TX power class
GSM850	Tx: 824 – 849 MHz	4 (33dBm)
GSM900	Tx: 880 – 915 MHz	4 (33dBm)
	Rx: 925 – 960 MHz	
GSM1800	Tx: 1710 – 1785 MHz	1 (30dBm)
	Rx: 1805 – 1880 MHz	

System	Frequency band	TX power class
GSM1900	Tx: 1850 – 1910 MHz	1 (30dBm)
	Rx: 1930 – 1990 MHz	

**Table 21 Multi-slot class**

Multislot Class	
GPRS	MSC 6 (up to 3+1 and 2+2)

### Transmitter - general description

The transmitter has 2 separate parallel paths one covering either the 850 or the 900 band and the other the 1800/1900 bands. The transmitter operates in GMSK mode only. The power level control circuitry is integrated in the front-end module.

Each path of the transmitter is composed of a baseband lowpass filter for the I/Q signals and a quadrature direct modulator integrated in PMB3258. At the modulator's output there is a bandpass filter for each band (so-called H3 filter) and a balun transformer to convert the differential output signal from the modulator into a single-ended 50 ohm signal. This signal is fed into the input of the PA. The two power amplifiers and the antenna switch are located in a single module with built-in power control loop.

The two control methods used are open-loop Vcc control (RFMD) and feedback control with current sensing (Renesas, Philips). The reference waveform (TXC) for the control loop comes from the baseband. The output of the PA goes into a low pass filter located inside the FEM (Front End Module). Finally the transmit signal goes through the band selection and TX/RX switches to the antenna port.

The FEM is controlled with four digital control signals (TXP, Vc1, Vc2 and Vc3) to meet the TDMA frame timing requirements.

### Transmitter - signal processing

The I/Q signals coming from the baseband section are fed into the modulator and converted up to the carrier frequency. The I/Q are post filtered by a 1st order passive RC filter (discrete components on PWB) and a 3rd order active filter (Legendre type) inside PMB3258.

The nominal output level of the modulator is +3.5 dBm in both bands. The modulator's output is an open-collector type and need an external load and a DC supply feed. The load and the DC supply feed are implemented as the part of the H3 filter. The H3 filter will attenuate mainly the 2nd and 3rd harmonics of the modulated RF signal and provide suitable termination impedance for the modulator on the fundamental and harmonic frequencies. Owing to the low noise floor of the PMB3258 modulator a narrow-band filter for the TX noise is not required on either band, although the margin to the specification limit is quite narrow in the GSM850/900 bands.

The filtered signal is fed into the input of the FEM, which amplifies it to the desired power level and provides the signal at the antenna port. There are built-in lowpass filters for the TX harmonics in the front-end module.

There is also a temperature sensor close to the FEM to enable SW temperature compensation for e.g. the power levels. The sensor is connected to one of the slow ADC channels in the baseband.

### VCXO and PLL

The VCO frequency is locked by a PLL (phase locked loop) into a stable frequency source given by a VCXO. The frequency of the VCXO is in turn locked into the frequency of the base station with the help of an AFC (automatic frequency control) voltage, which is generated in the UEM. The reference frequency is 26 MHz.

The VCXO also provides a 26 MHz system clock for the digital baseband.

The PLL is located in PMB3258 and it is controlled via the RFBUS.

## 9 — Schematics

(This page left intentionally blank.)

## Table of Contents

Schematics.....9-4

### List of Figures

Figure 147 RM-74, 1mf\_07a: UPP, UEM, Combo memory, Radio, SIM.....9-4  
Figure 148 RM-74, 1mf\_07a: UI, Keyboard, Audio.....9-5  
Figure 149 RM-74, 1mf\_07a: RF part.....9-6  
Figure 150 RM-74, 1mf\_07a: Signal overview.....9-7  
Figure 151 RM-74, 1mf\_07a: Component finder.....9-8

Schematics

UPP, UEM, Combo memory, Radio, SIM

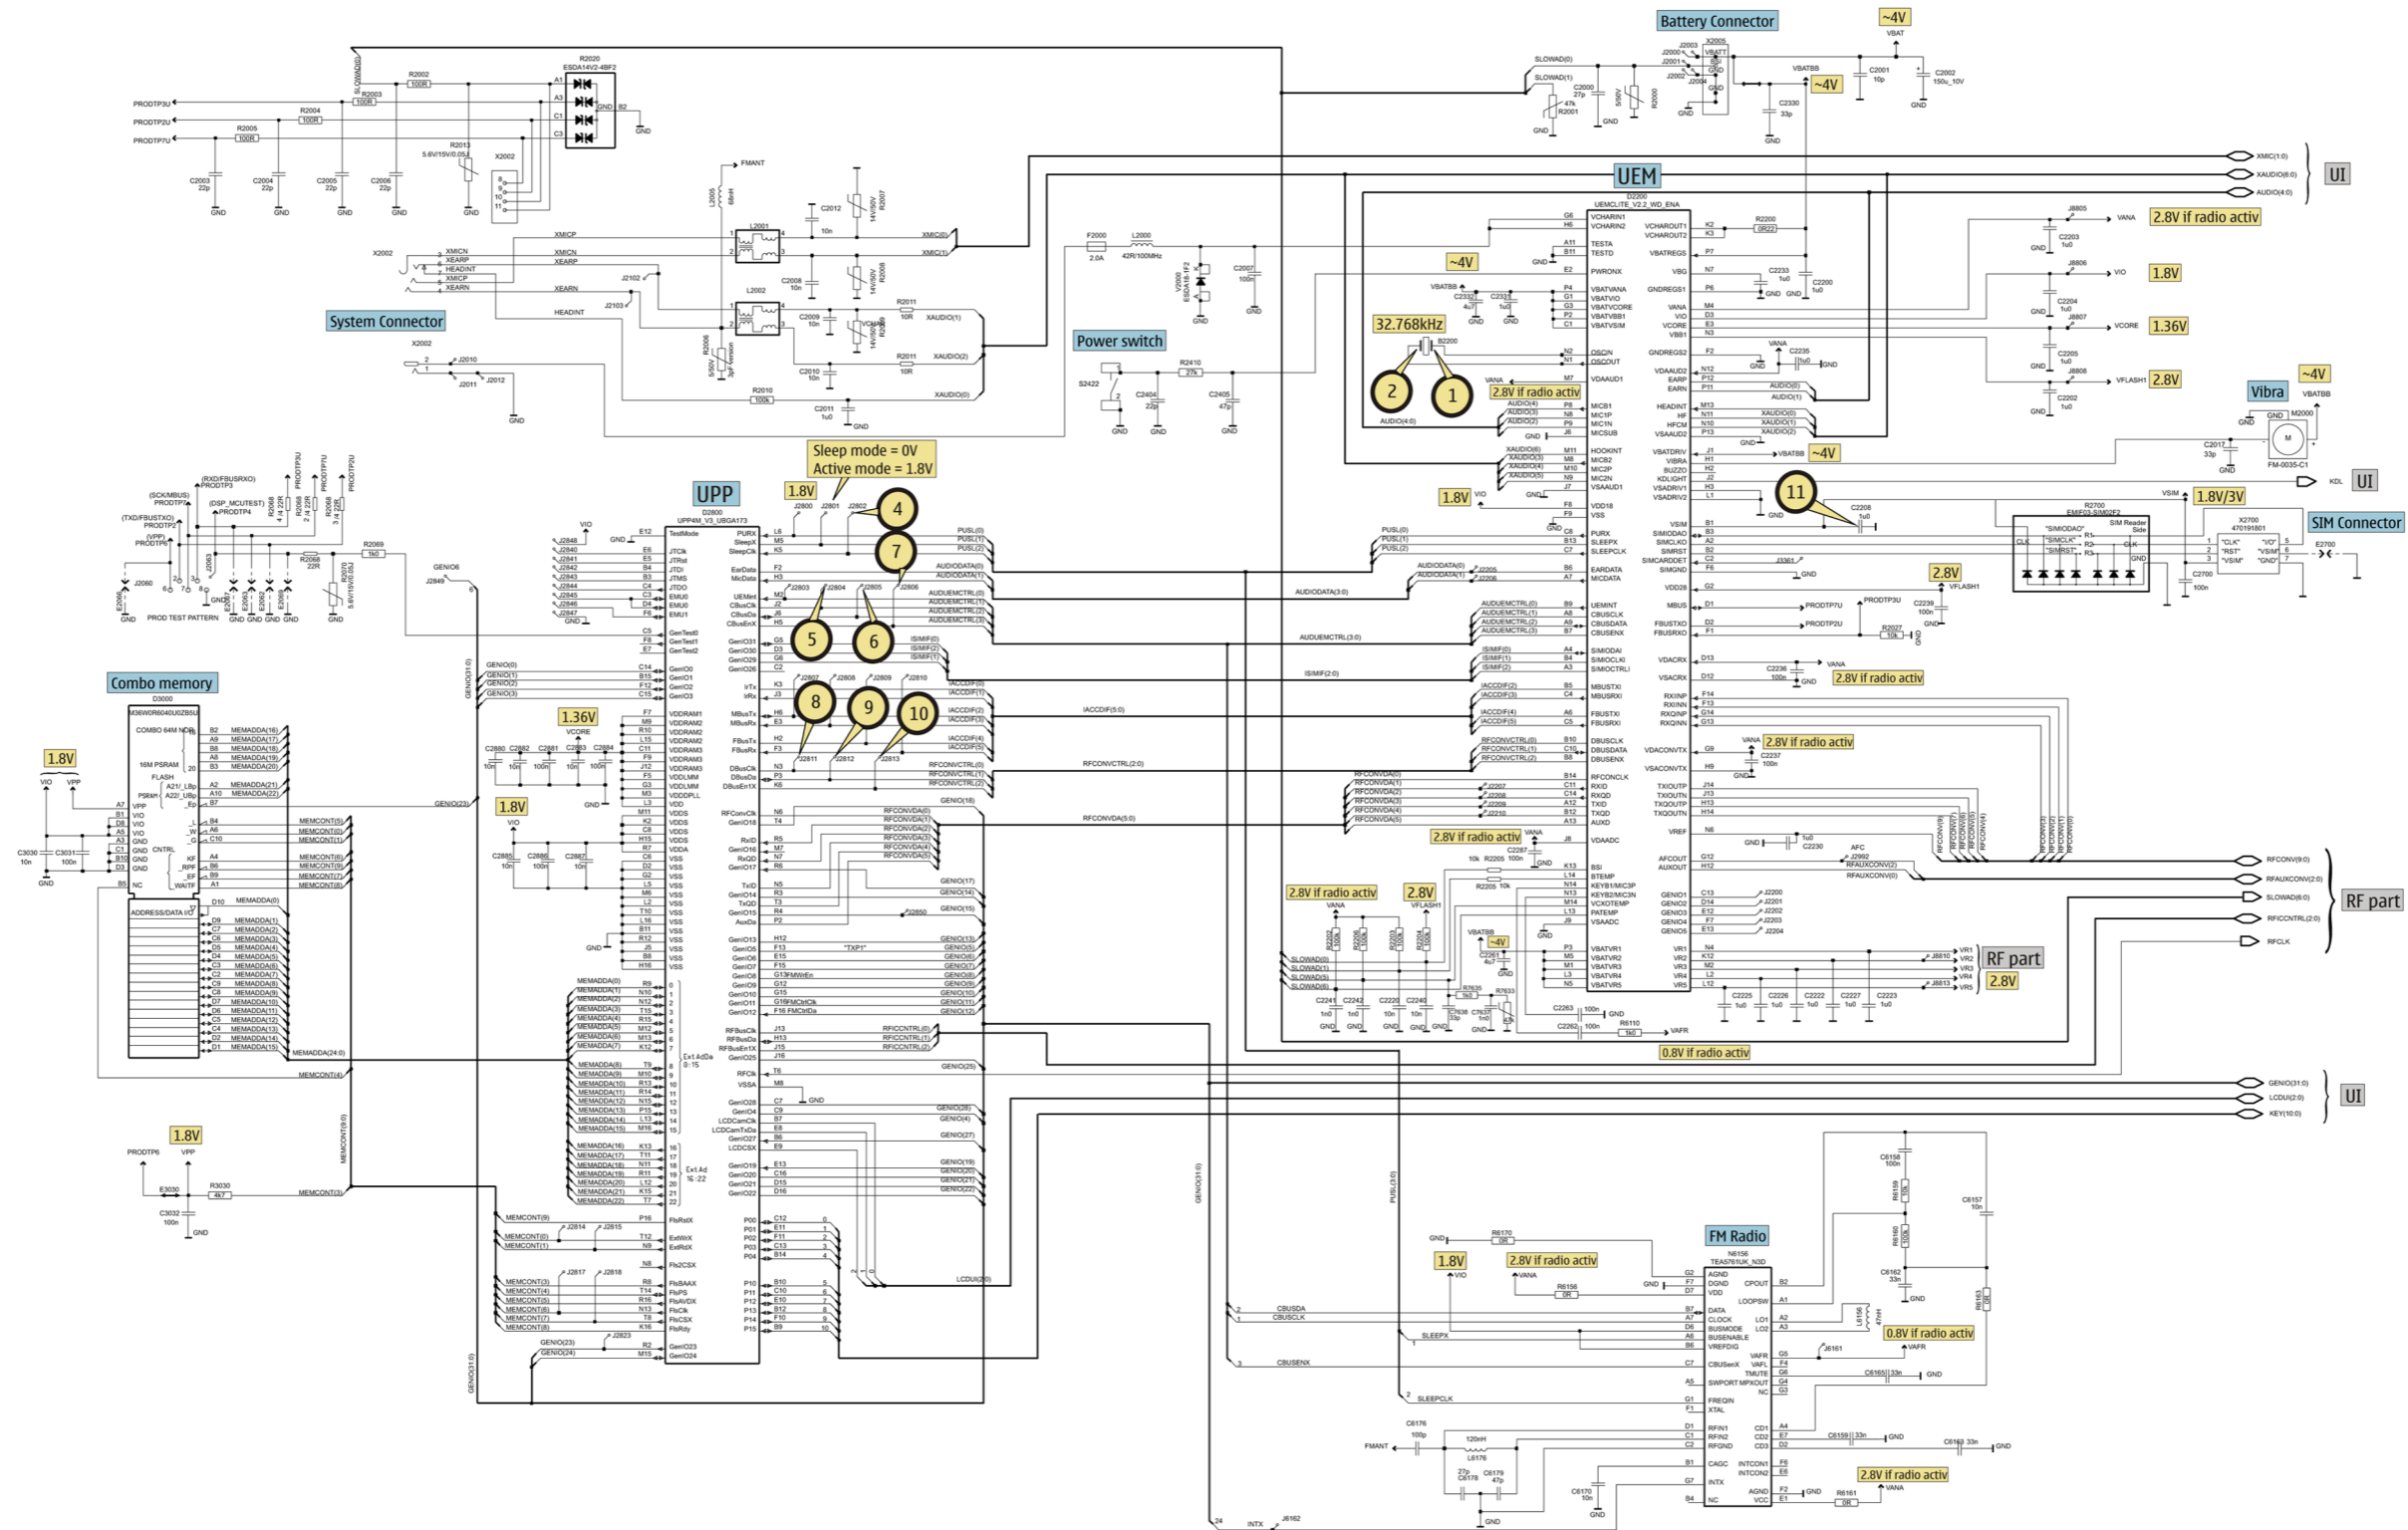


Figure 147 RM-74, 1mf\_07a: UPP, UEM, Combo memory, Radio, SIM



**UI, Keyboard, Audio**

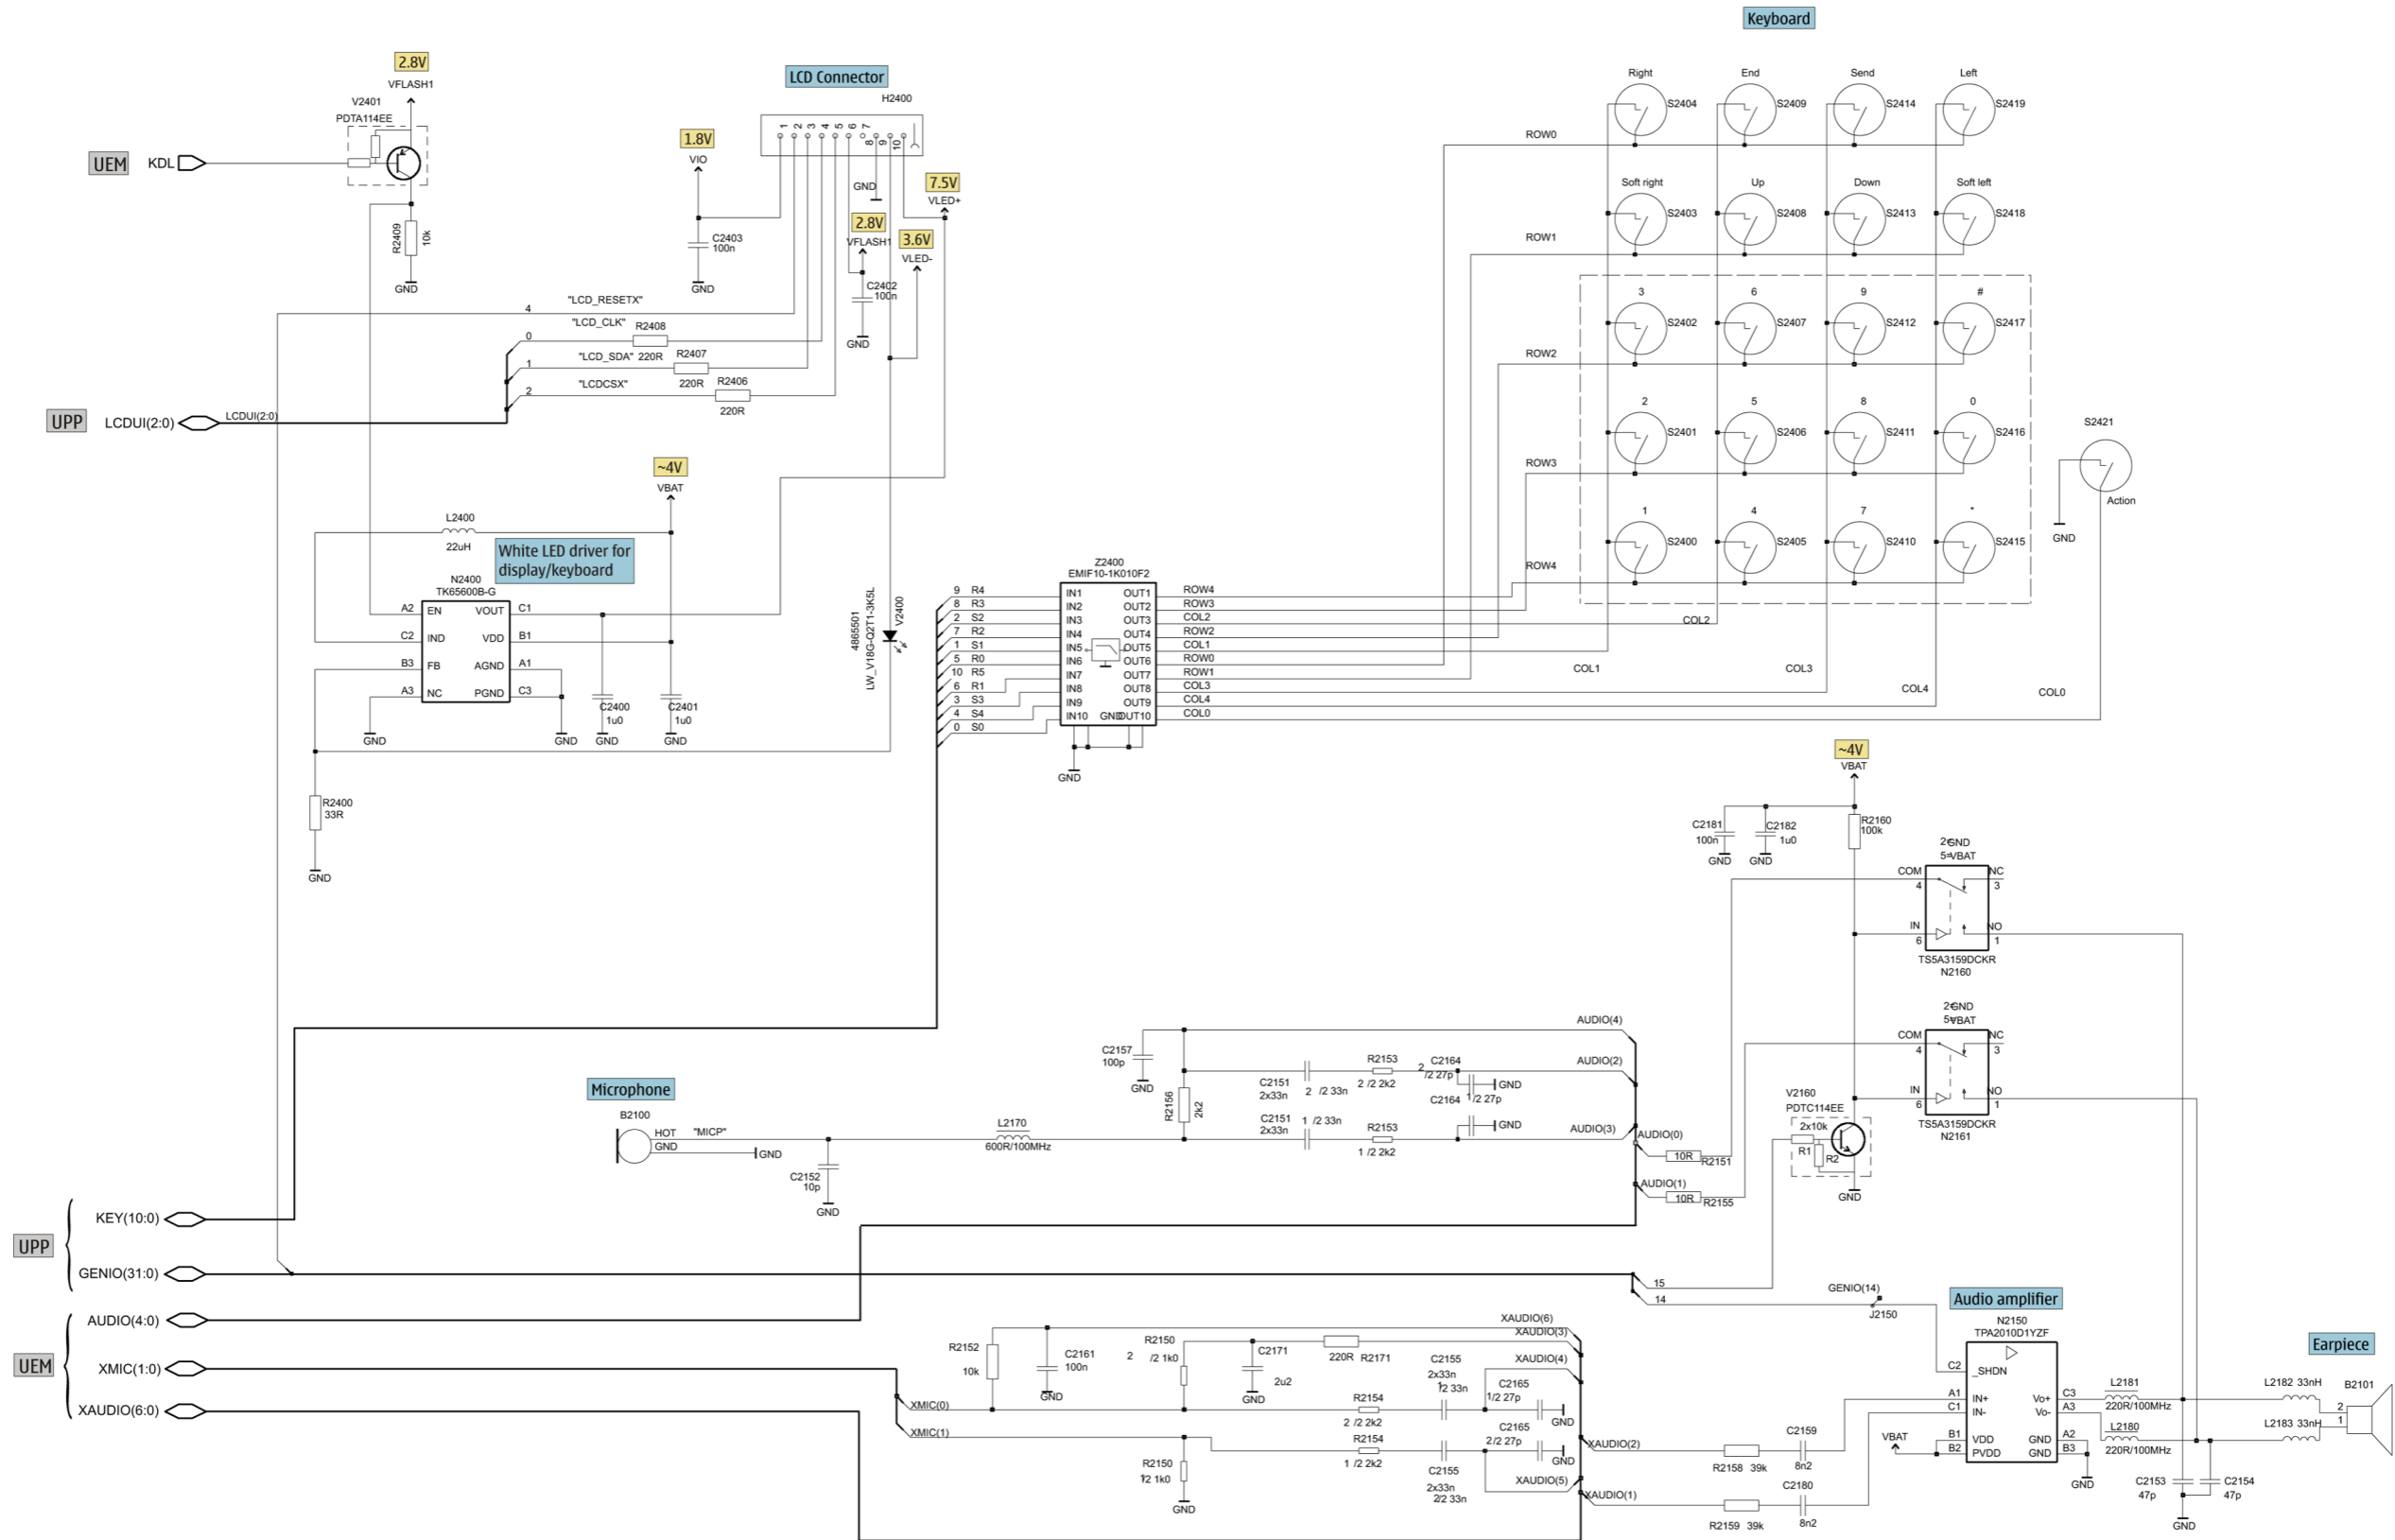


Figure 148 RM-74, 1mf\_07a: UI, Keyboard, Audio

RF part

Band	Channel	RX	VCO/RX	VC/RX	TX	VCO/TX	VC/TX
GSM 900	37	942,4MHz	3769,6MHz	~2.7V	897,4MHz	3589,6MHz	~1.98V
GSM 1800	700	1842,8MHz	3685,6MHz	~2.38V	1747,8MHz	3495,6MHz	~1.58V

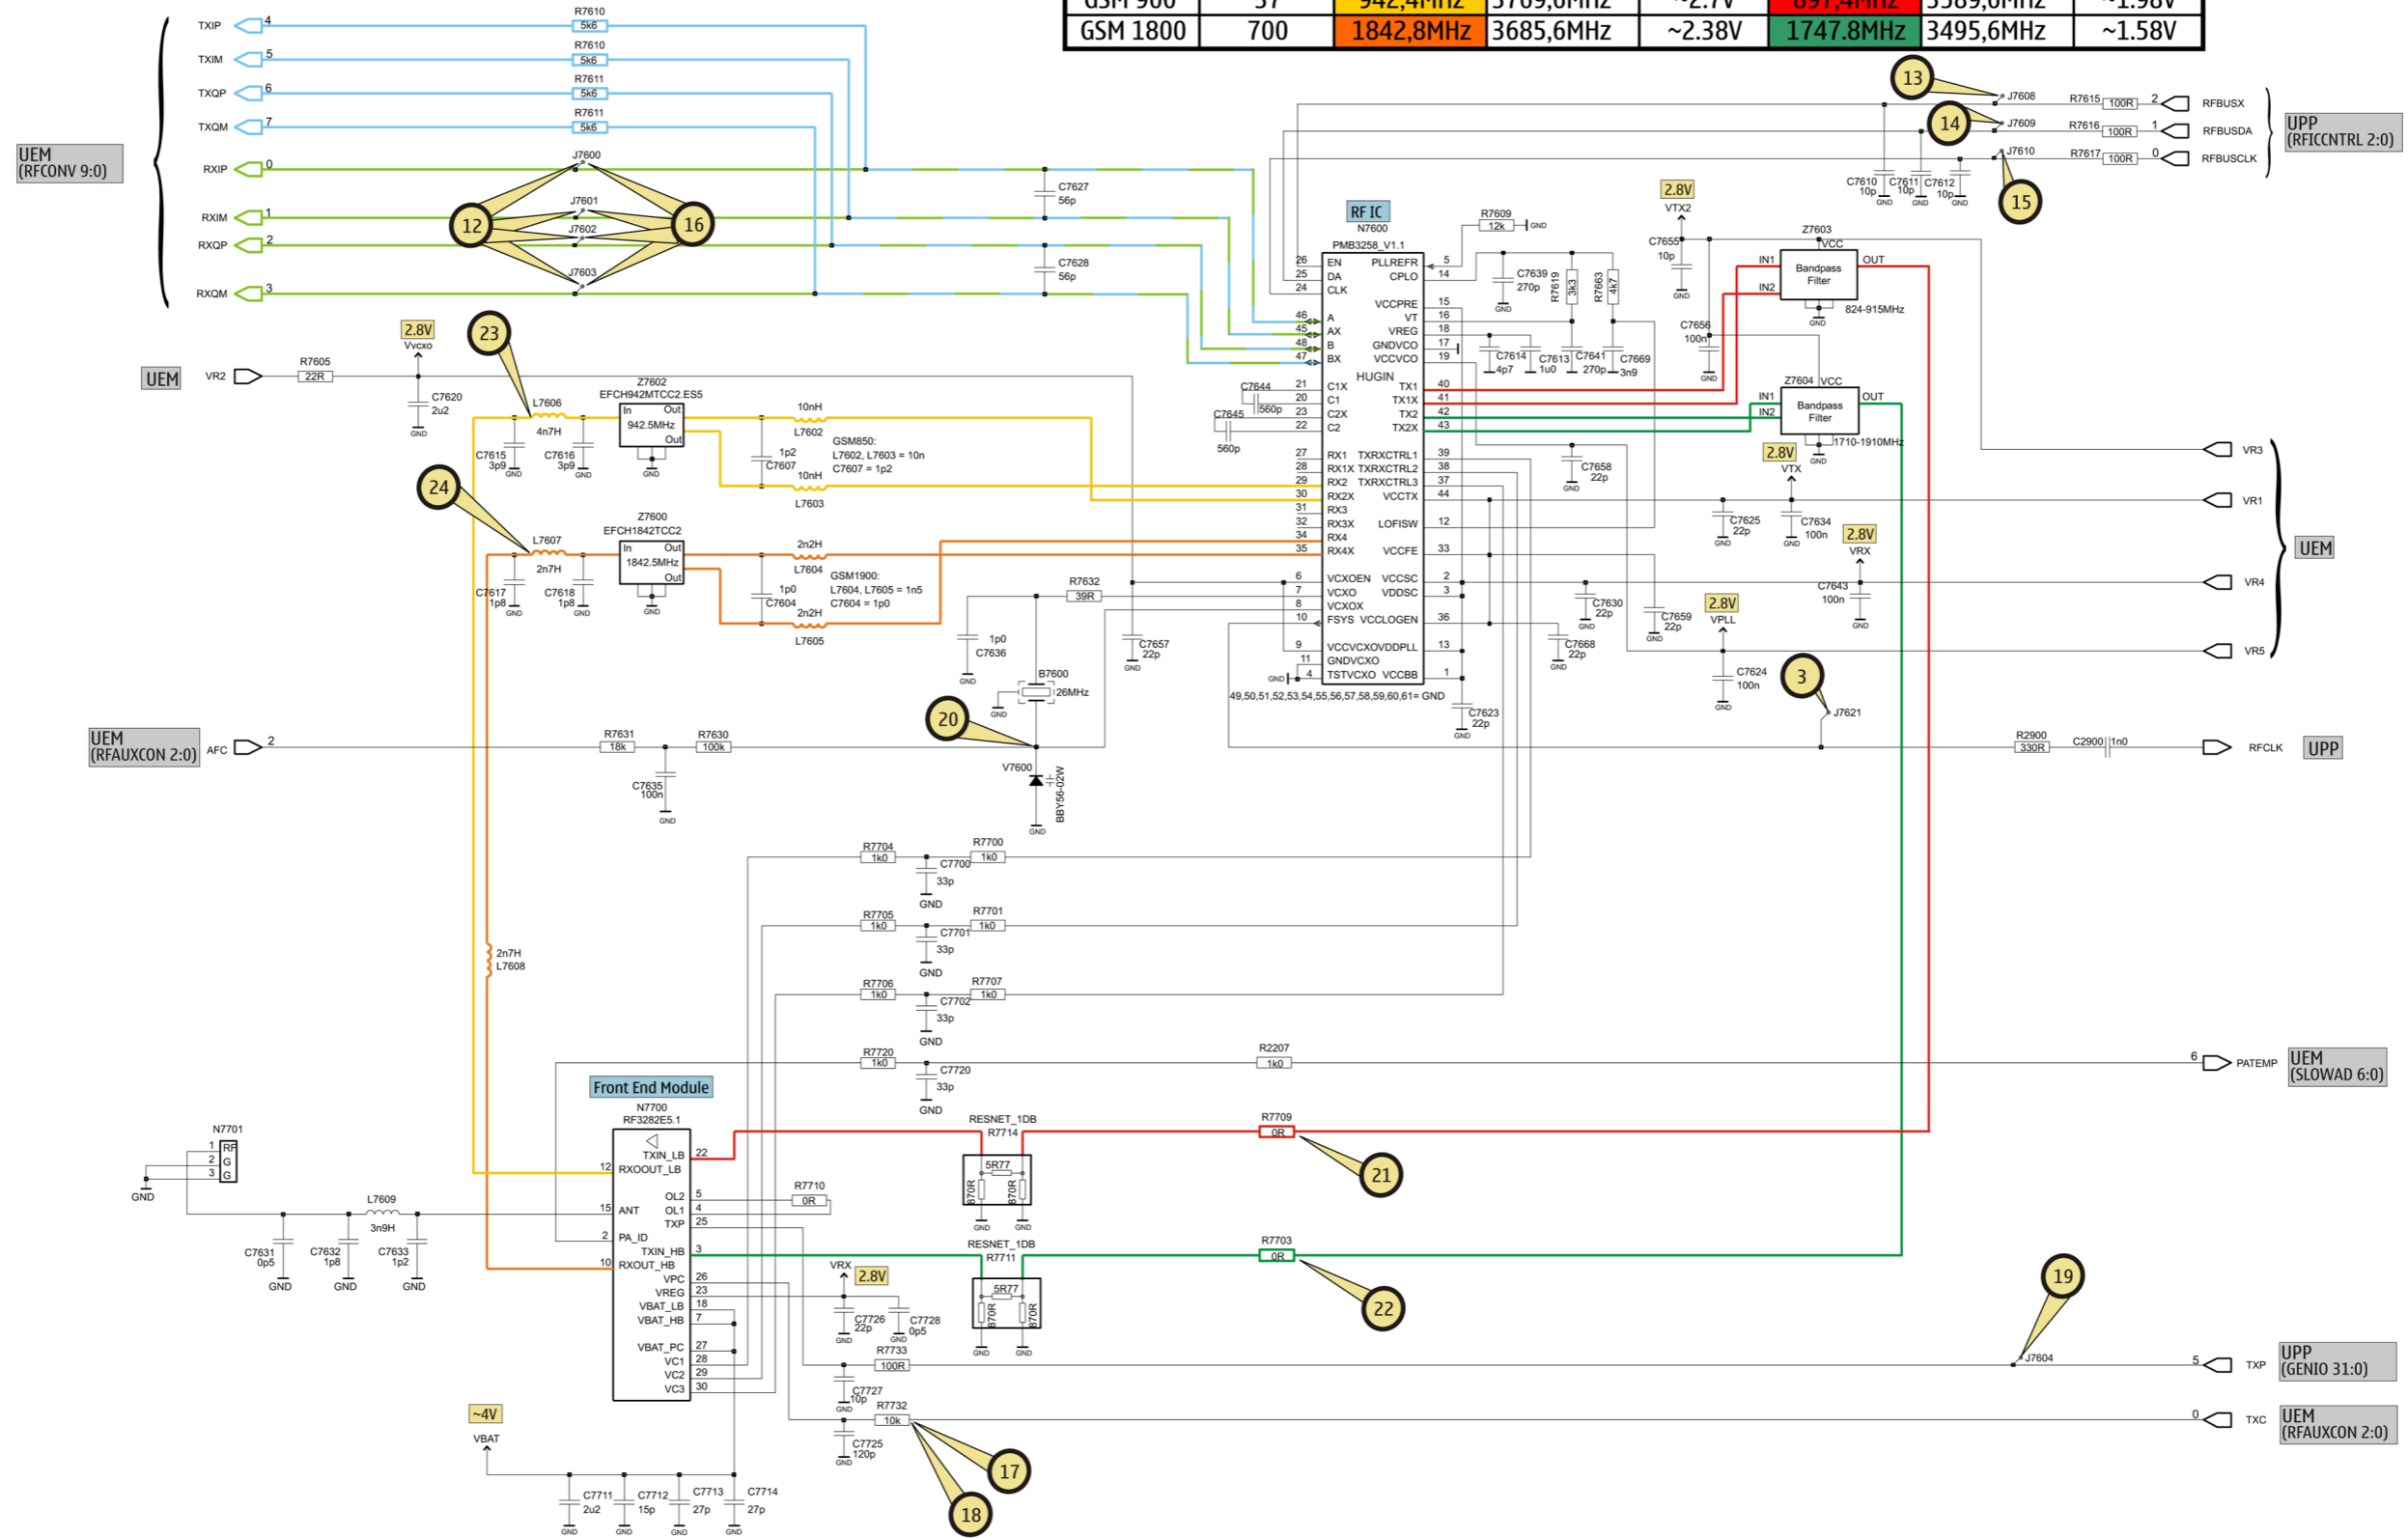


Figure 149 RM-74, 1mf\_07a: RF part

Signal overview

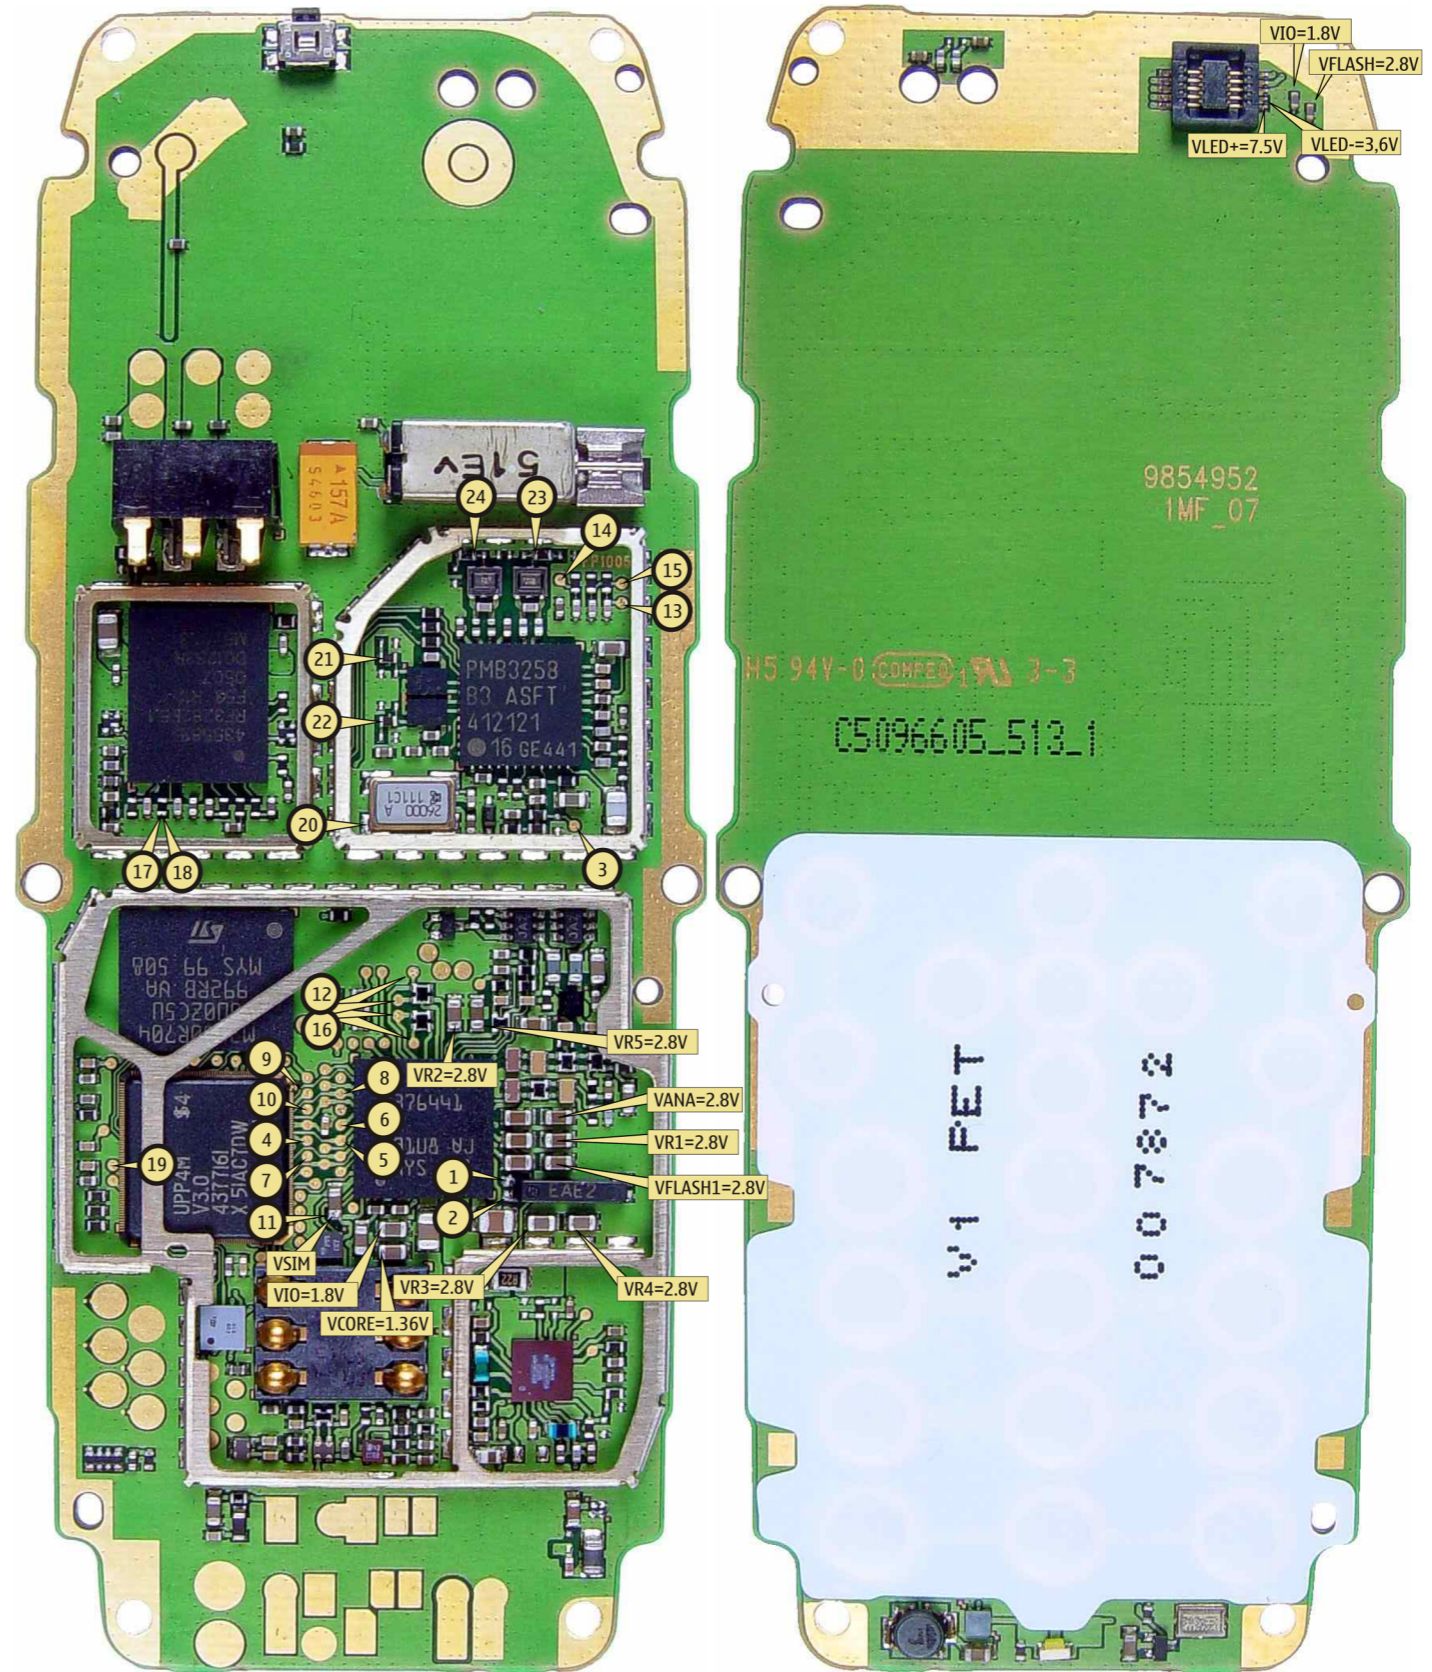
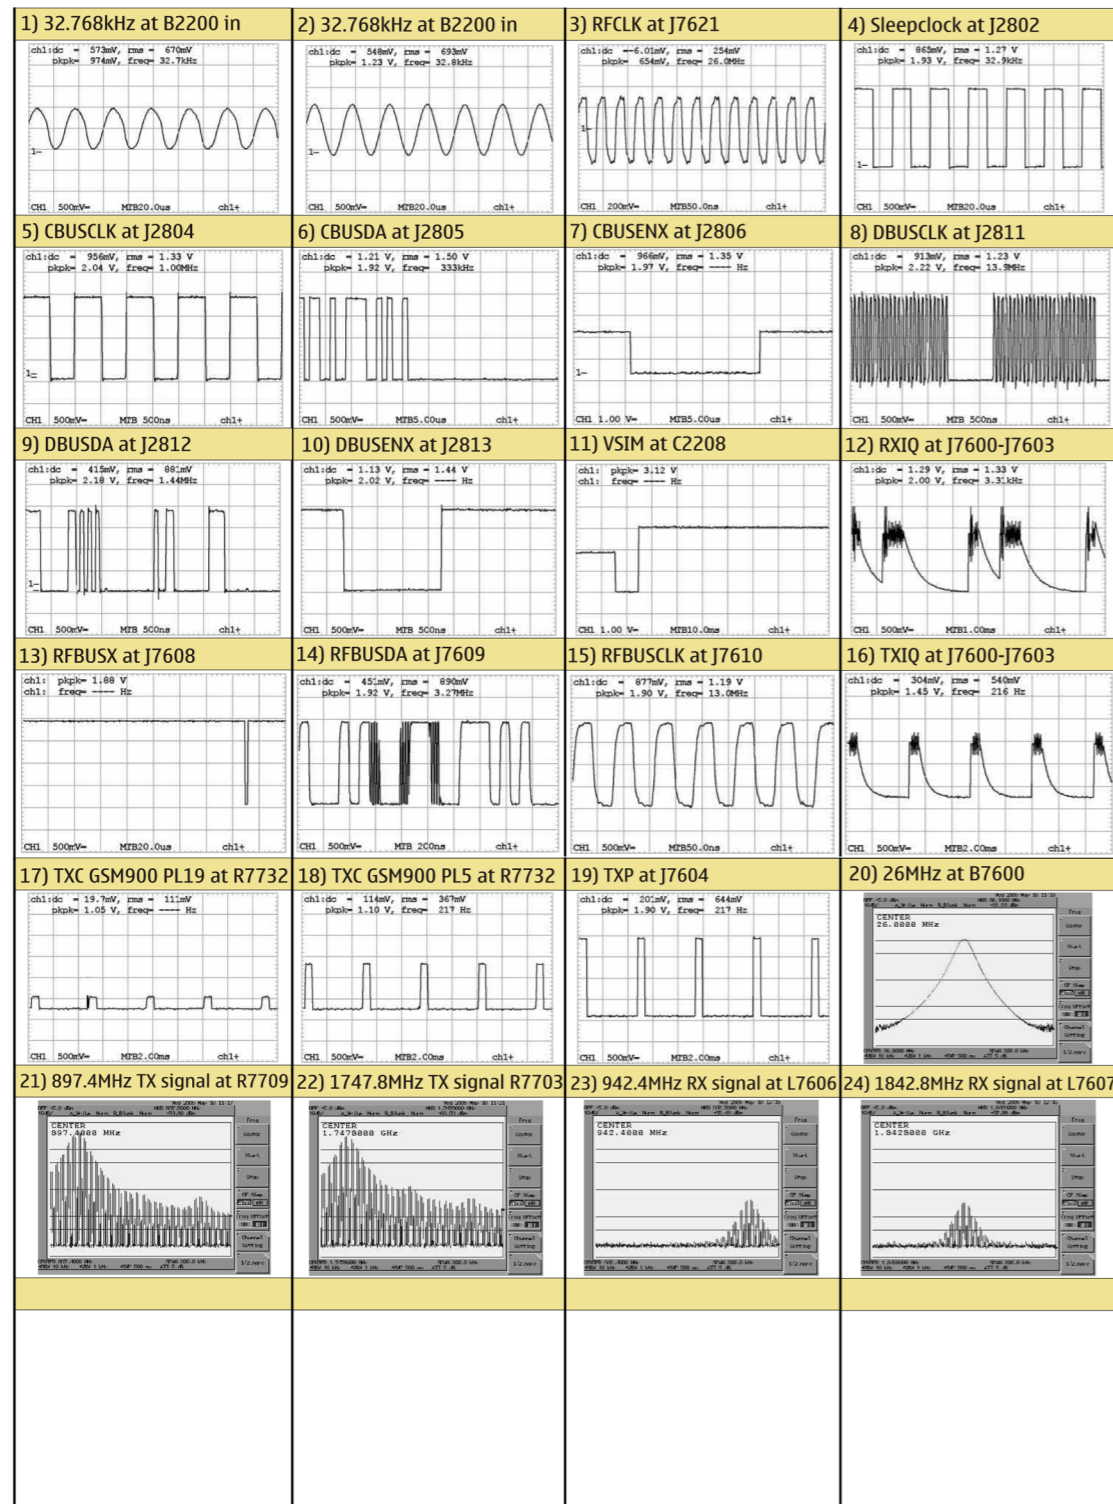


Figure 150 RM-74, 1mf\_07a: Signal overview

**Component finder**

<b>B</b>	C2241	M6	C7624	J8	J2010	T6	J6161	Q7	R2002	R5	R7609	K6	
B2200	07	C2242	M6	C7625	J6	J2011	U4	J6162	Q7	R2003	R5	R7610	M5
B7600	K5	C2261	P6	C7627	J5	J2012	T6	J7600	M5	R2004	R5	R7611	M5
<b>C</b>	C2262	Q8	C7628	J5	J2060	Q2	J7601	M5	R2005	S5	R7615	H8	
C2000	G3	C2263	R8	C7630	K6	J2063	Q2	J7602	M5	R2006	R5	R7616	H7
C2001	G2	C2287	M5	C7631	D3	J2102	T4	J7603	N5	R2007	R4	R7617	H7
C2002	G4	C2330	G2	C7632	H2	J2103	S4	J7604	O2	R2008	S4	R7619	J8
C2003	S5	C2331	P5	C7633	H2	J2150	N4	J7608	I8	R2009	R4	R7630	K6
C2004	R5	C2332	P5	C7634	I7	J2200	N5	J7609	H7	R2010	S3	R7631	K7
C2005	R5	C2400	U4	C7635	K6	J2201	N5	J7610	H8	R2011	R4	R7632	K6
C2006	R5	C2401	U6	C7636	K6	J2202	N5	J7621	K7	R2013	R5	R7633	K2
C2007	S7	C2402	C2	C7637	K2	J2203	N4	J8805	M5	R2020	R5	R7635	K2
C2008	S4	C2403	C2	C7638	K2	J2204	M5	J8806	N2	R2027	R5	R7663	K8
C2009	R4	C2404	C4	C7639	J7	J2205	O4	J8807	O4	R2068	S2	R7700	I5
C2010	R5	C2405	P5	C7641	J7	J2206	O4	J8808	M6	R2069	S2	R7701	I5
C2011	S3	C2700	R4	C7643	K6	J2207	N4	J8810	M6	R2070	S2	R7703	J5
C2012	R4	C2880	O4	C7644	J7	J2208	N4	J8813	M6	R2150	N7	R7704	K3
C2017	G5	C2881	P3	C7645	I7	J2209	N4	<b>L</b>	R2151	M7	R7705	K3	
C2151	N7	C2882	P3	C7655	I5	J2210	N4	L2000	T7	R2152	N7	R7706	K3
C2152	S3	C2883	O2	C7656	J5	J2800	N4	L2001	R3	R2153	N7	R7707	I5
C2153	B6	C2884	O2	C7657	K7	J2801	N4	L2002	R4	R2154	N7	R7709	I5
C2154	B7	C2885	P3	C7658	J7	J2802	O4	L2005	R6	R2155	L6	R7710	J4
C2155	N7	C2886	P3	C7659	I6	J2803	N4	L2170	S3	R2156	O7	R7711	J4
C2157	O8	C2887	O2	C7668	I6	J2804	O4	L2180	M7	R2158	N7	R7714	J2
C2159	N7	C2900	K7	C7669	K8	J2805	O4	L2181	M7	R2159	N7	R7720	K4
C2161	N8	C3030	N2	C7700	K3	J2806	O4	L2182	B6	R2160	L6	R7732	K2
C2164	N6	C3031	N2	C7701	K3	J2807	O4	L2183	B6	R2171	N8	R7733	K2
C2165	N6	C3032	N2	C7702	K4	J2808	O4	L2400	U6	R2200	P6	<b>S</b>	
C2171	N8	C6157	R6	C7711	I2	J2809	O4	L6156	Q6	R2202	M7	S2422	B4
C2180	N7	C6158	R6	C7712	I4	J2810	O4	L6176	R7	R2203	M7	<b>V</b>	
C2181	M7	C6159	Q7	C7713	I2	J2811	N4	L7602	I7	R2204	M6	V2000	S7
C2182	M7	C6162	Q6	C7714	K3	J2812	N4	L7603	I7	R2205	M6	V2160	L6
C2200	O7	C6163	R6	C7720	K4	J2813	N4	L7604	I6	R2206	M7	V2400	U5
C2202	O7	C6165	Q8	C7725	K3	J2814	N3	L7605	I6	R2207	L4	V2401	U3
C2203	O7	C6170	R7	C7726	J2	J2815	N3	L7606	H7	R2400	U5	V7600	K6
C2204	P5	C6176	R7	C7727	K2	J2817	N3	L7607	H6	R2406	O2	<b>X</b>	
C2205	P5	C6178	R7	C7728	K2	J2818	N3	L7608	I4	R2407	P2	X2005	G3
C2208	P4	C6179	R7	<b>D</b>	J2823	N4	L7609	H2	R2408	P2	X2060	T3	
C2220	M7	C7604	I6	D2200	O5	J2840	P4	<b>H</b>	R2409	T4	X2700	Q4	
C2222	P7	C7607	I7	D2800	O3	J2841	P4	<b>M</b>	<b>Z</b>				
<b>C2223</b>	<b>O7</b>	<b>C7610</b>	<b>I8</b>	<b>D3000</b>	<b>H5</b>	<b>J2842</b>	<b>P4</b>	<b>N</b>	<b>R2700</b>	<b>P4</b>	<b>Z2400</b>	<b>Q5</b>	
<b>C2225</b>	<b>M6</b>	<b>C7611</b>	<b>I7</b>	<b>F</b>	<b>J2843</b>	<b>P4</b>	<b>R2150</b>	<b>M7</b>	<b>R2900</b>	<b>K7</b>	<b>Z7000</b>	<b>M6</b>	
<b>C2226</b>	<b>P7</b>	<b>C7612</b>	<b>I7</b>	<b>F2000</b>	<b>T7</b>	<b>J2844</b>	<b>P4</b>	<b>R2100</b>	<b>L7</b>	<b>R3000</b>	<b>O2</b>	<b>Z7002</b>	<b>M7</b>
<b>C2227</b>	<b>M6</b>	<b>C7613</b>	<b>I8</b>	<b>H</b>	<b>J2845</b>	<b>P4</b>	<b>R2101</b>	<b>L7</b>	<b>R3100</b>	<b>Q5</b>	<b>Z7003</b>	<b>J5</b>	
<b>C2230</b>	<b>O7</b>	<b>C7614</b>	<b>J7</b>	<b>H2400</b>	<b>G3</b>	<b>J2846</b>	<b>P4</b>	<b>R2400</b>	<b>T6</b>	<b>R3150</b>	<b>Q7</b>	<b>Z7004</b>	<b>J5</b>
<b>C2233</b>	<b>O7</b>	<b>C7615</b>	<b>I7</b>	<b>J</b>	<b>J2847</b>	<b>O4</b>	<b>R3150</b>	<b>Q7</b>	<b>R3150</b>	<b>M6</b>			
<b>C2235</b>	<b>M7</b>	<b>C7616</b>	<b>M6</b>	<b>J2000</b>	<b>F2</b>	<b>J2848</b>	<b>O2</b>	<b>R7000</b>	<b>J7</b>	<b>R3100</b>	<b>M6</b>		
<b>C2236</b>	<b>M5</b>	<b>C7617</b>	<b>M6</b>	<b>J2001</b>	<b>F3</b>	<b>J2849</b>	<b>O2</b>	<b>R7700</b>	<b>J3</b>	<b>R3101</b>	<b>K7</b>		
<b>C2237</b>	<b>M5</b>	<b>C7618</b>	<b>M6</b>	<b>J2002</b>	<b>F3</b>	<b>J2850</b>	<b>M4</b>	<b>R</b>		<b>R3102</b>	<b>Q5</b>		
<b>C2239</b>	<b>P5</b>	<b>C7620</b>	<b>K7</b>	<b>J2003</b>	<b>F2</b>	<b>J2852</b>	<b>M5</b>	<b>R2000</b>	<b>G3</b>	<b>R3170</b>	<b>M6</b>		
<b>C2240</b>	<b>M6</b>	<b>C7623</b>	<b>J7</b>	<b>J2004</b>	<b>F3</b>	<b>J2851</b>	<b>P5</b>	<b>R2001</b>	<b>Q5</b>	<b>R7005</b>	<b>K7</b>		

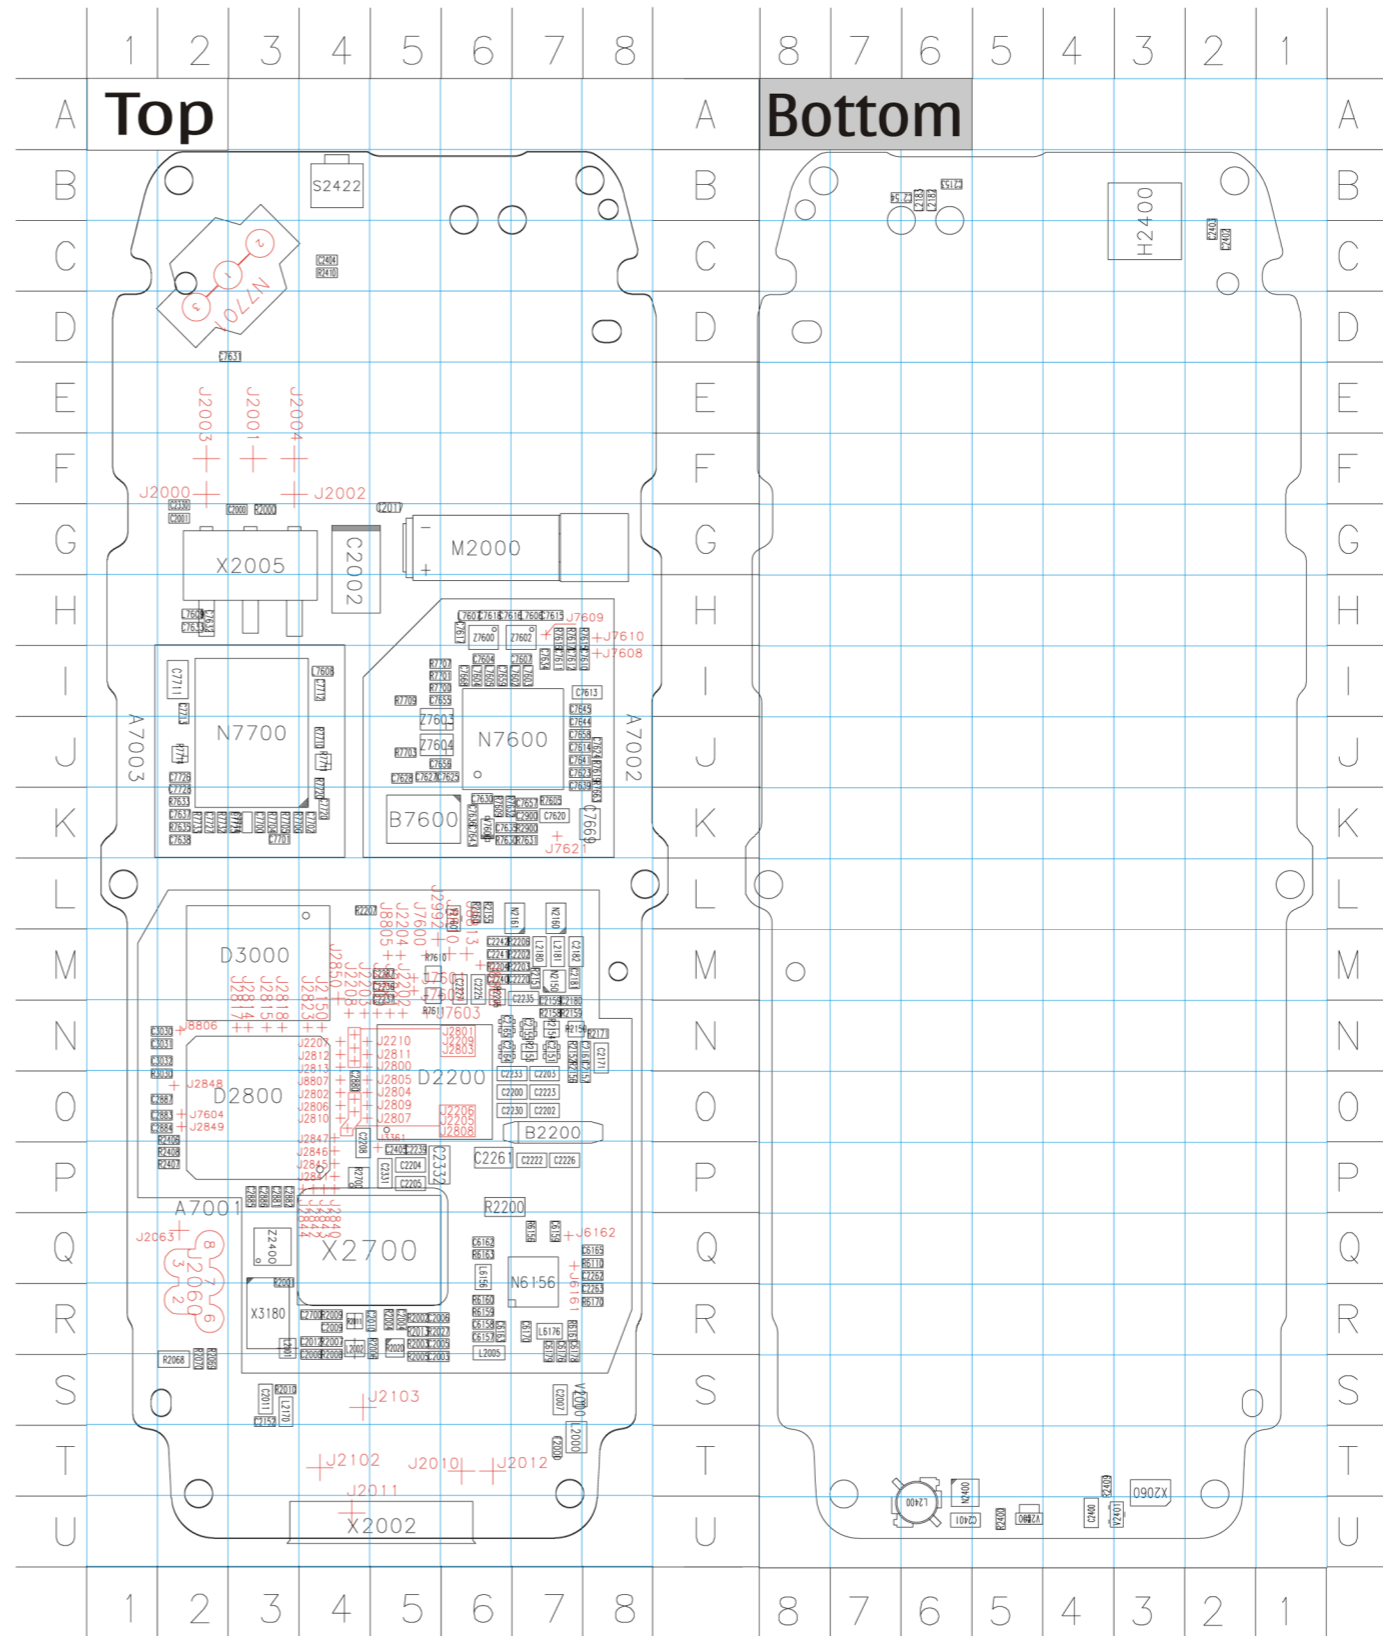


Figure 151 RM-74, 1mf\_07a: Component finder

# Nokia Customer Care

## Glossary

(This page left intentionally blank.)

A/D-converter	Analog-to-digital converter
ACI	Accessory Control Interface
ADC	Analog-to-digital converter
ADSP	Application DPS (expected to run high level tasks)
AGC	Automatic gain control (maintains volume)
ALS	Ambient light sensor
AMSL	After Market Service Leader
ARM	Advanced RISC Machines
ARPU	Average revenue per user (per month or per year)
ASIC	Application Specific Integrated Circuit
ASIP	Application Specific Interface Protector
B2B	Board to board, connector between PWB and UI board
BB	Baseband
BC02	Bluetooth module made by CSR
BIQUAD	Bi-quadratic ,type of filter function)
BSI	Battery Size Indicator
BT	Bluetooth
CBus	MCU controlled serial bus connected to UPP_WD2,UEME and Zocus
CCP	Compact Camera Port
CDSP	Cellular DSP (expected to run at low levels)
CLDC	Connected limited device configuration
CMOS	Complimentary metal-oxide semiconductor circuit (low power consumption)
COF	Chip on Foil
COG	Chip on Glass
CPU	Central Processing Unit
CSR	cambridge silicon radio
CSTN	Color Super Twisted Nematic
CTSI	Clock Timing Sleep and interrupt block of Tiku
CW	Continuous wave
D/A-converter	Digital-to-analogue converter
DAC	Digital-to-analogue converter
DBI	Digital Battery Interface
DBus	DSP controlled serial bus connected between UPP_WD2 and Helgo
DCT-4	Digital Core Technology
DMA	Direct memory access
DP	Data Package

DPLL	Digital Phase Locked Loop
DSP	Digital Signal Processor
DtoS	Differential to Single ended
EDGE	Enhanced data rates for global/GSM evaluation
EGSM	Extended GSM
EM	Energy management
EMC	Electromagnetic compability
EMI	Electromagnetic interference
ESD	Electrostatic discharge
FCI	Functional cover interface
FPS	Flash Programming Tool
FR	Full rate
FSTN	Film compensated super twisted nematic
GND	Ground, conductive mass
GPIB	General-purpose interface bus
GPRS	General Packet Radio Service
GSM	Group Special Mobile/Global System for Mobile communication
HF	Hands free
HFCM	Handsfree Common
HS	Handset
HSCSD	High speed circuit switched data (data transmission connection faster than GSM)
HW	Hardware
I/O	Input/Output
IBAT	Battery current
IC	Integrated circuit
ICHAR	Charger current
IF	Interface
IHF	Integrated hands free
IMEI	International Mobile Equipment Identity
IR	Infrared
IrDA	Infrared Data Association
ISA	Intelligent software architecture
JPEG/JPG	Joint Photographic Experts Group
LCD	Liquid Crystal Display
LDO	Low Drop Out
LED	Light-emitting diode



LPRF	Low Power Radio Frequency
MCU	Micro Controller Unit (microprocessor)
MCU	Multiport control unit
MIC, mic	Microphone
MIDP	Mobile Information Device Profile
MIN	Mobile identification number
MIPS	Million instructions per second
MMC	Multimedia card
MMS	Multimedia messaging service
NTC	Negative temperature coefficient, temperature sensitive resistor used as a temperature sensor
OMA	Object management architecture
OMAP	Operations, maintenance, and administration part
Opamp	Operational Amplifier
PA	Power amplifier
PDA	Pocket Data Application
PDA	Personal digital assistant
PDRAM	Program/Data RAM (on chip in Tiku)
Phoenix	Software tool of DCT4.x
PIM	Personal Information Management
PLL	Phase locked loop
PM	(Phone) Permanent memory
PUP	General Purpose IO (PIO), USARTS and Pulse Width Modulators
PURX	Power-up reset
PWB	Printed Wiring Board
PWM	Pulse width modulation
RC-filter	Resistance-Capacitance filter
RF	Radio Frequency
RF PopPort TM	Reduced function PopPortTM interface
RFBUS	Serial control Bus For RF
RSK	Right Soft Key
RS-MMC	Reduced size Multi Media Card
RSSI	Receiving signal strength indicator
RST	Reset Switch
RTC	Real Time Clock (provides date and time)
RX	Radio Receiver

SARAM	Single Access RAM
SAW filter	Surface Acoustic Wave filter
SDRAM	Synchronous Dynamic Random Access Memory
SID	Security ID
SIM	Subscriber Identity Module
SMPS	Switched Mode Power Supply
SNR	Signal-to-noise ratio
SPR	Standard Product requirements
SRAM	Static random access memory
STI	Serial Trace Interface
SW	Software
SWIM	Subscriber/Wallet Identification Module
TCXO	Temperature controlled Oscillator
Tiku	Finnish for Chip, Successor of the UPP, Official Tiku3G
TX	Radio Transmitter
UART	Universal asynchronous receiver/transmitter
UEME	Universal Energy Management chip (Enhanced version)
UEMEK	See UEME
UI	User Interface
UPP	Universal Phone Processor
UPP_WD2	Communicator version of DCT4 system ASIC
USB	Universal Serial Bus
VBAT	Battery voltage
VCHAR	Charger voltage
VCO	Voltage controlled oscillator
VCTCXO	Voltage Controlled Temperature Compensated Crystal Oscillator
VCXO	Voltage Controlled Crystal Oscillator
Vp-p	Peak-to-peak voltage
VSIM	SIM voltage
WAP	Wireless application protocol
WD	Watchdog
XHTML	Extensible hypertext markup language
Zocus	Current sensor, (used to monitor the current flow to and from the battery)