



POWERWARE® 9120

User's Guide

700 VA - 3000VA

EAT•N

Powerware

www.powerware.com



Powerware

POWERWARE[®] 9120

700, 1000, 1500, 2000 & 3000VA

User's Guide

Important Notice

The UPS ground (earth) conductor carries leakage current from the loads in addition to any leakage current generated by the UPS. This UPS generates no more than 1 mA of current. To limit the total leakage current to 3.5 mA, the load leakage must be limited to 2.5 mA. The three-wire receptacle that you plug the UPS into must have a good (low-impedance) ground (protective earth) connection to provide a safe path for leakage current.



Powerware

If You Have a Question

Customer Support

If you have a question or problem, Table 10, Troubleshooting, may help. If you need more help, **please have your UPS model number and serial number (on the back label) nearby, and call the Eaton Powerware office nearest you (see the offices section).** Eaton Powerwares' service technicians have in-depth knowledge of the UPS and power problems.

Eaton Powerware may tell you the UPS must be returned. If this happens, we will give you a Return Authorisation (RA) number. **When you return a Powerware 9120 to the factory for any reason, please use the original packing material in which your unit was shipped to you. You may be responsible for repair charges for damaged units which are not packed in Powerware packing material.** If you have discarded the original packing material, please call the nearest Eaton Powerware office so that we can ship new packing material to you. If you have any questions, please feel free to call or fax the nearest Eaton powerware office. Please do not return your Powerware 9120 without calling Eaton powerware first. Eaton Powerware will advise you where to ship your Powerware 9120.

Eaton Powerware reserves the right to change specifications without prior notice.

Table of Contents

	Safety Instructions	2
1.0	UPS Features	3
2.0	Quick Startup	6
3.0	Operation	7
3.1	UPS Front Panel	7
	3.2 Turning the UPS On	8
	3.3 Turning the UPS Off	8
	3.4 Standby Mode	8
	3.5 Diagnostic Tests	8
4.0	Configuration	9
5.0	Additional UPS Features	12
	5.1 Inverter Shutdown	12
	5.2 Network Transient Protector	12
	5.3 Load Segments	12
	5.4 Communication Port	13
	5.5 Communication Slot	13
	5.6 SNMP/Web Adaptor	13
	5.7 Relay Card	14
6.0	Installing Lansafe Software	14
7.0	Replacing the Batteries	15
	7.1 How to Replace Internal Batteries	16
	7.2 Recycling the Used Battery	16
8.0	Specifications	17
9.0	Troubleshooting	20
10.0	Warranty	24
	Eaton Powerware Australia/New Zealand Offices	28

Trademarks

Windows is a registered trademark of Microsoft Corporation.

All other brand and product names are trademarks or registered trademarks of their respective holders.

Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS! SAVE THESE INSTRUCTIONS!

This User Guide contains important instructions for your Powerware 9120 that must be followed during installation and maintenance of the UPS and batteries.



CAUTION!

Whenever the Powerware 9120 is “On,” there may be dangerous voltage present at the unit’s outlets. This is true because the unit’s battery supplies power even if the unit is not plugged into the wall outlet. The unit contains dangerous voltages.

To reduce the risk of electric shock, install in a temperature-controlled and humidity-controlled indoor area free of conductive contaminants.

The power supply cord is intended to serve as the disconnect device. The socket-outlet shall be near the equipment and shall be easily accessible.

With the exception of the user-replaceable batteries, all servicing of this equipment must be performed by qualified service personnel.

Before maintenance or repair, all connections must be removed. Before maintenance, repair, or shipment, the unit must be completely switched off and unplugged or disconnected.

The installation and use of this product must comply with all national, federal, state, municipal, or local codes that apply. For assistance, call Eaton Powerware Service or your local Eaton Powerware office.

If the Powerware unit has been damaged during shipment, call your vendor immediately.

If the Powerware unit is stored, the batteries should be recharged every 6 months. If stored above 25° Celsius, recharge the batteries more often.

1.0 UPS Features

The Powerware 9120 provides protection against power problems, including power outages, brownouts, and sudden increases in power. It also provides spike suppression and line noise filtering to protect your equipment. Front panel LEDs and an audible alarm keep you aware of the unit's status. Use the drawings on this and the following pages to identify features of the unit.

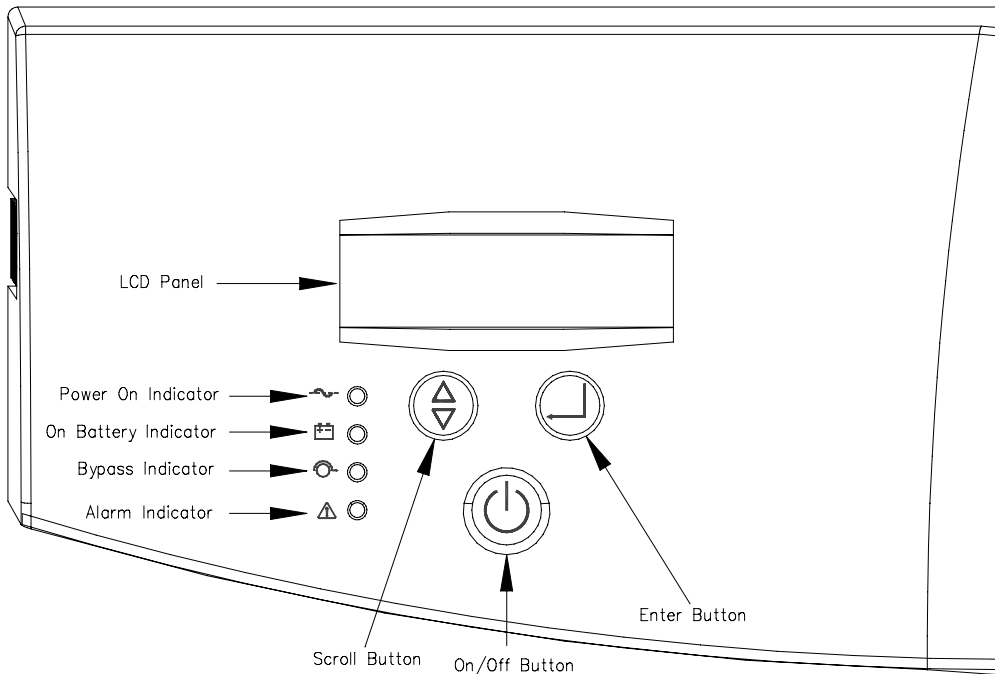


Fig 1. Powerware 9120 Controls and Indicators

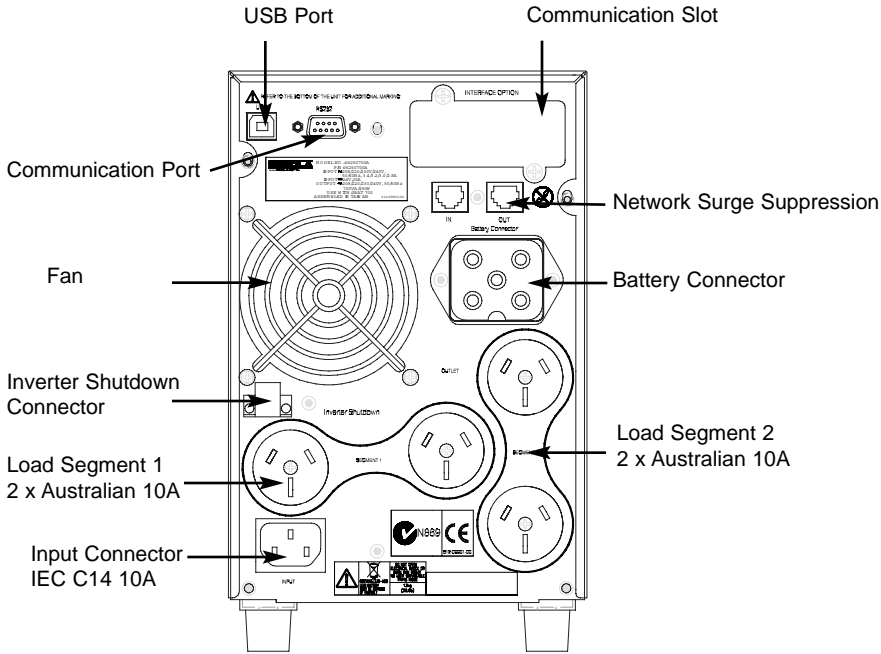


Fig 2. 700VA and 1000VA Rear Panel

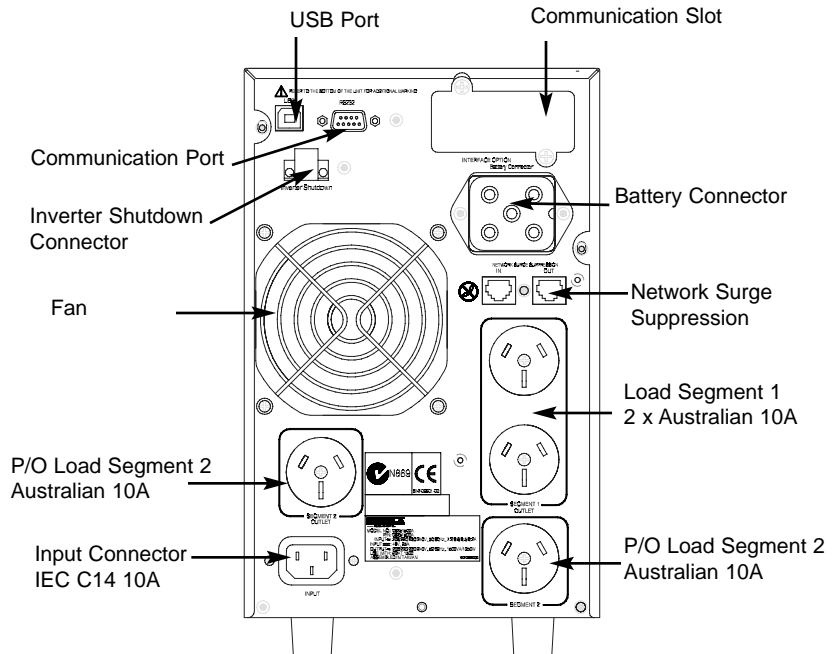


Fig 3. 1500VA Rear Panel

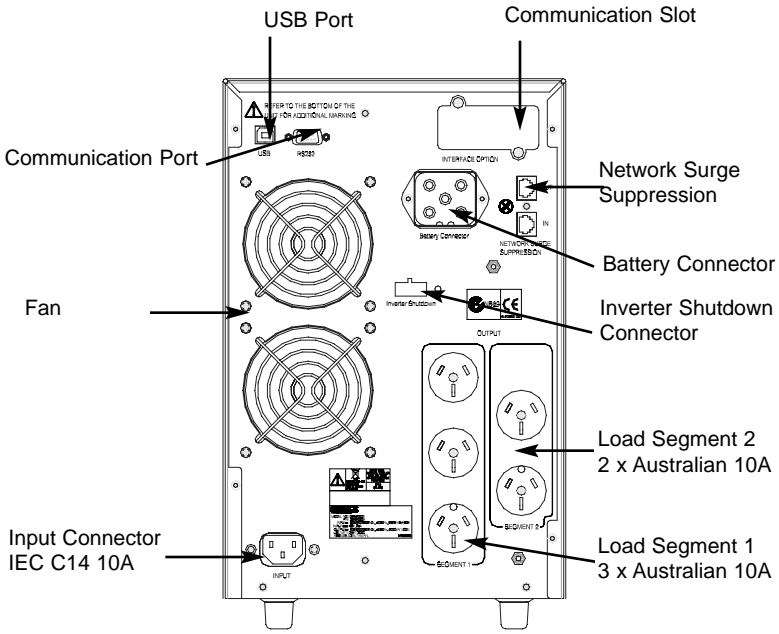


Fig 4. 2000VA Rear Panel

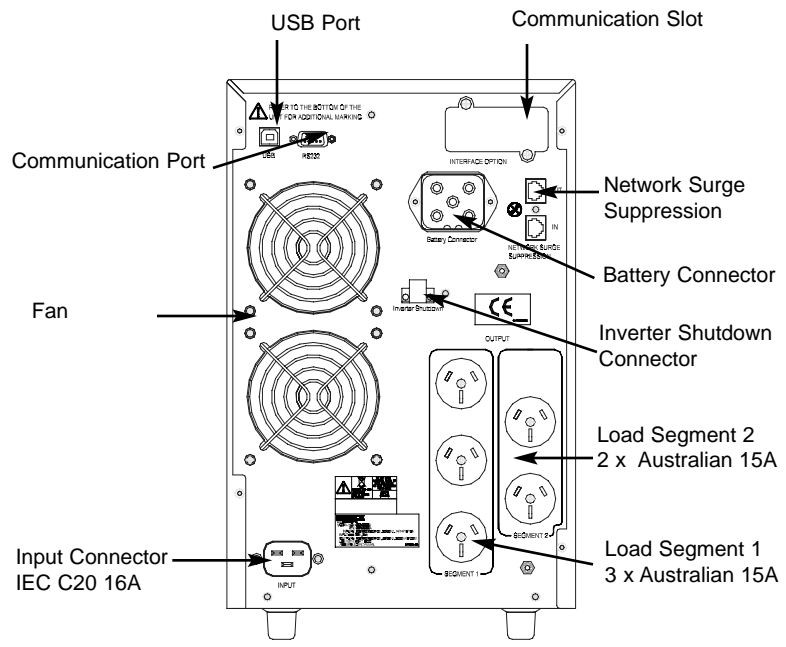



Fig 5. 3000VA Rear Panel

2.0 Quick Startup

- 1 Your Powerware 9120 UPS has a removable power cord. Connect the power cord to the back of the unit and plug the UPS into a wall outlet. The LCD backlight will illuminate and the fan will run, but no output power is available.
- 2 Let the unit charge the battery for at least 3 hours. You may use the unit while the battery charges, but the battery backup runtime will be reduced until the battery is fully charged.
- 3 Start the Powerware 9120 by pressing and holding the On/Standby button (large button in the center of the front panel) in for about one second. Note: To turn the unit on, the On/Standby button must be pressed for about one second and for about 5 seconds to turn the unit off.
 - 3.a. When it starts, the unit beeps once, then twice, and lights the “Power On” LED. The unit indicates “On Delay” on the LCD and performs an internal system and battery test. Next, the Powerware 9120 applies AC output to the back panel receptacles and indicates “On Line” on the LCD.
 - 3.b. After 10 seconds or less, the self test is complete. The green LED will come on and remain on. If the unit beeps, or if the green LED does not remain on even though input power is available from the wall outlet, go to the Troubleshooting section.
- 4 Switch off the equipment you want to protect, and plug each load into the outlets on the back of the Powerware 9120. Refer to Section 5.3 for detail on the load segment feature.
- 5 Switch on the protected equipment, one load at a time. If the UPS beeps an alarm when you start your equipment, the UPS may be overloaded. See the Troubleshooting section.

The LCD on the front of the UPS shows the % of load capacity that your equipment is using. See Section 3.0 Operation for more information on checking the load %..

- 6 The RJ-45 Surge Protection jacks will protect equipment that uses an RJ-11 or RJ-45 connection. Plug the 10BASE-T network connection into the surge protection jack labeled “IN” on the back of the Powerware 9120. Plug the protected equipment into the surge protection jack labeled “OUT.” Network cabling is not provided. *This connection is optional. It is not needed to use the Powerware 9120.*

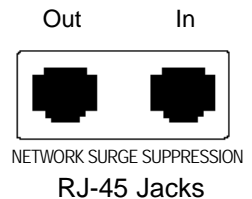

Do not use this connection for modems or telephones

- 7 Please fill out the warranty registration card in Section 10 and return it to your local Eaton Powerware office.

3.0 Operation

This section describes:

- The UPS front panel
- Turning the UPS on and off
- Starting the UPS on battery
- Standby mode
- Diagnostic tests

3.1 UPS Front Panel

The UPS front panel indicates the UPS status and also identifies potential power problems. Figure 6 shows the UPS front panel indicators and controls.







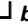
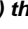
Figure 6. UPS Front Panel

NOTE If the alarm beeps or if the  indicator is on, see Table 10 in Section 9.0 to identify and correct the problem. To configure parameters through the front panel, see Section 4.0 "Configuration".


Display Mode

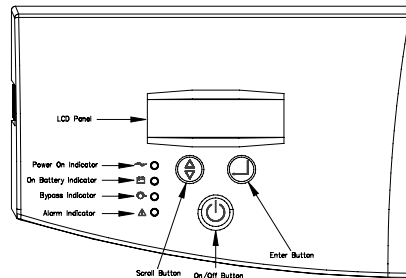To view the UPS current settings, press the  button for one second and release. Use the  button to scroll through the list of settings, which appear in the following order:

LCD Message	Description
I/P VOLT= xxx.xV	Input voltage.
I/P FREQ= xx.xHZ	Input frequency.
O/P VOLT= xxx.xV	Output voltage.
O/P FREQ= xx.xHZ	Output frequency.
O/P Load = x%	Approximate percentage of UPS load capacity being used by the protected equipment.
O/P Watt= xW	Output watts.
O/P VA= xVA	Output VA.
O/P Cur= x.xA	Output current.
BAT VOLT= xx.xV	Battery voltage.
BAT CHARGE= xxx%	Approximate percentage of battery capacity remaining.
BackUp Time= xxxM	Approximate battery time remaining in minutes. The display changes to seconds after one minute (Backup Time= xxxS).
CPU Version x.xx	Firmware revision level.

NOTE The UPS exits Display mode automatically after five seconds if the  button is not pressed. To lock the meter screen, press the  button until a beep is heard (3 seconds) then release it. To unlock the display, press the button until a beep is heard, then release it.


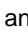
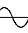
3.2 Turning the UPS On

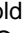After the UPS is connected to a power source, the fan turns on and the UPS enters Standby mode. To turn on the UPS, press and hold the  button until you hear the UPS beep (approximately one second). The LCD briefly displays “On Delay” and the “Power On” indicator illuminates. Then the UPS conducts a self-test, briefly displaying “On BATTERY”. If an alarm condition occurs, see Table 10 in Section 9.0 for helpful hints.


When the self-test is complete, the LCD displays “On Line” indicating that power is available from the UPS output receptacles.

Starting the UPS on Battery


NOTE Before using this feature, the UPS must have been powered by utility power at least once and the batteries must be completely charged.

To turn on the UPS without using utility power, press and hold the  button until you hear the UPS beep (approximately one second). The UPS supplies power to your equipment and goes into Battery mode. The LCD briefly displays “On Delay”, then “On Battery” and the  and  indicators illuminate. When the UPS starts on battery, it does not conduct a self-test to conserve battery power.


3.3 Turning the UPS Off

To turn off the UPS, press and hold the  button until the long beep ceases (approximately five seconds).

NOTE When you press and hold the  button, the LCD displays Shutdown Pending.

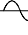The  indicator turns off and the LCD briefly displays UPS OFF before going blank. The fan continues to run and the UPS remains in Standby mode until you unplug or remove utility power from the UPS.

3.4 Standby Mode

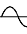When the UPS is turned off and connected to a power source, the UPS is in Standby mode. The fan continues to run and the battery recharges when necessary. The  indicator is off and the LCD panel is blank, indicating that power is not available from the UPS.

3.5 Diagnostic Tests

The UPS automatically performs a self-test when powered on and when the UPS restarts after a power outage. The self-test monitors the UPS electronics and battery and indicates any problems on the front panel.



A battery test is automatically performed every 30 days (720 hours) of continuous Normal mode operation. The test lasts approximately 15 seconds and any failure is displayed on the front panel. Both the UPS and battery tests can be performed manually (see Section 4.0 "Configuration" for more information).

4.0 Configuration



This section describes how to reconfigure options using the Configuration mode, including: input and output voltage and frequency, site wiring fault, and silencing the alarm.

NOTE *The UPS has been factory-configured with default settings appropriate for most installations. User configuration is not normally required.*




Configuration Mode


The control buttons ( and ) are used to modify the UPS configuration. Figure 7 shows the front panel and Table 1 explains the corresponding options.

NOTE The UPS can be configured while in Battery mode. If the UPS switches to battery power while in Configuration mode, the UPS exits Configuration mode and indicates Battery mode on the front panel.


1. Press the  button for one second to enter Configuration mode.
The LCD displays the first configuration parameter (see Table 1).
2. Press the  button to scroll through the parameters.

NOTE *The UPS exits Configuration mode automatically after five seconds if a selection has not been made.*

3. Press the  button to select the parameter.
4. Press the  button to scroll through the options for the selected parameter; press the  button to select the option.

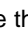You may be prompted to save the selection; press the  button to save. Other options are saved automatically. See Table 1 for more detail.

5. To exit Configuration mode at any time, do not press any buttons for five seconds.
The UPS returns to Normal mode and displays On Line.

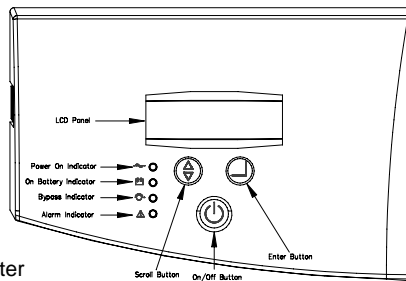

Press the Scroll button to enter Configuration mode. Also press to scroll to the next option.

Press the Enter button to select a parameter. Also press the Enter button to select an option and to save the setting.

Figure 7. Using the Configuration Mode

Table 1. Configuration Mode Parameters

Parameter	LCD Message	Description	Default Settings
Output Voltage Setting	O/P V Setting	To change the output voltage <ul style="list-style-type: none"> • Select 208, 220, 230, or 240V for 240V models. You are prompted to save this setting.	For 240V models: O/P V= 230V
Input Voltage Tolerance	I/P Bypass Set	Select the input voltage tolerance range before the UPS goes to Battery mode: $\pm 10\%$, $+10\%/-15\%$, or $+15\%/-20\%$. You are prompted to save this setting.	I/P Tol= $+10\%/-15\%$
Input Frequency	I/P F Setting	The factory-default is 50 or 60 Hz, $\pm 5\%$. Select $\pm 2\%$ for a narrower frequency range. Select $\pm 7\%$ for a wider frequency range. You are prompted to save this setting.	Freq Tol= $\pm 15\%$
High-Efficiency Mode	HE Mode Setting	Select whether High-Efficiency mode is On or Off. If enabled, you must also select the input voltage range: $\pm 10\%$ or $\pm 15\%$. While operating in High-Efficiency mode, the UPS transfers to utility power when: 1) the input voltage is outside $\pm 10\%$ or $\pm 15\%$ from nominal; 2) the input frequency is greater than $\pm 3\%$; or 3) the input line is not available. You are prompted to save this setting. If the setting is not allowed, the LCD shows "I/P out limit" which means the input voltage or frequency is not suitable.	HE Mode Off
Free Run Mode	Free Run Mode	Select whether Free Run mode is On or Off. If enabled, you must also select Bypass Disable or Bypass Enable. This selection defines how your UPS runs when the input frequency (from the utility) is outside the selected frequency tolerance (set via the I/P F Setting, above), but is inside the maximum frequency limits the UPS can accept before switching to Battery mode. For example: If your 50 Hz UPS is set to the factory default window of $\pm 5\%$ before the UPS starts regulating the frequency. <ul style="list-style-type: none"> • The output frequency tracks the input frequency exactly from 47.5 to 52.5 Hz. • If input frequency is between 45 and 65 Hz, the output frequency is regulated by the UPS to exactly 50 Hz (± 0.5 Hz). You are prompted to save this setting.	Free Run On (Bypass Disable)
Alarm Silence	Alarm Silence	Select whether Silence is On or Off. If enabled, the UPS silences the alarm for an existing fault. If the UPS status changes, the alarm beeps, overriding the previous alarm silencing. The alarm does not silence if there is a low battery condition.	Silence Off

Table 1. Configuration Mode Parameters (cont.)

Parameter	LCD Message	Description	Default Settings
Manual Battery Test	Manual Bat Test	To initiate a manual battery test, press the \downarrow button twice when "Manual Battery Test" is displayed on the LCD. During the test the LCD displays ON BATTERY. The UPS resets the automatic timer after a manual battery test. The LCD displays "Battery not charged" when UPS test is requested but the battery is not fully charged.	Battery Test
Manual UPS Test	Manual UPS Test	To initiate a manual UPS self-test, press the \downarrow button twice. During the test, the LCD displays ON BATTERY.	UPS Test
Site Wiring Fault Alarm	Site Fault Set	Select Enable or Disable. When enabled, the alarm sounds when the ground connection is missing or the line and neutral wires are reversed in the wall outlet.	Detect Enable
Modem Support	Modem Support	This parameter is reserved for future use, and should not be modified by the user.	No Modem Support
Number of Extended Battery Modules	Bat Pack Num Set	Select the number of EBMs connected to the UPS: <ul style="list-style-type: none"> • For 700-1500 VA models, select 0 through 2 • For 2000-3000 VA models, select 0 through 5. You are prompted to save this setting. Refer to the documentation that came with your battery pack for more information.	Extern Pack: 0
Communications Lock-out	COM Control Cmds	For greater levels of security, users may choose to have the UPS disregard shutdown commands that come from the power management software or other communication sources. <ul style="list-style-type: none"> • When disabled, the UPS does not accept a shut down command via the communication port, USB port, or communication slot adapter. • When enabled, the UPS operates normally in response to external commands. You are prompted to save this setting.	Enable
Load Segment Control	Load Group Set	Allows manual control of load segments (see "Load Segments" Section 5.3) By repeatedly pressing the scroll button, the individual load segments can be turned on and off. CAUTION To prevent the unintentional shutdown of specific load segments, confirm your selection before pressing the \downarrow button.	Group 1On 2On
Manual Bypass	Manual Bypass GO	This parameter is used to manually place the UPS in Bypass mode.	Bypass OFF
Configuration Mode Setting	Config Mode Set	This parameter is reserved for future use, and should not be modified by the user. The setting may be toggled between EscapeConfigMode and Enter ConfigMode. 5.0 It should always be set to EscapeConfigMode.	EscapeConfigMode

5.0 Additional UPS Features

This section describes:

- Inverter Shutdown
- Network Transient Protector
- Load segments
- Using the communication port or USB port
- Optional SOLA communication cards

5.1 Inverter Shutdown

The Powerware 9120 includes a port that allows the UPS inverter to be switched off.

This feature is designed to be used with Eaton powerware External Maintenance Bypass Switches. Refer to the instructions provided with the switch for further information.



WARNING

The Inverter Shutdown circuit is an IEC 60950 safety extra low voltage (SELV) circuit. This circuit must be separated from any hazardous voltage circuits by reinforced insulation.

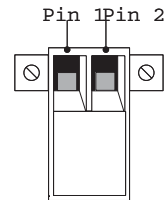


Figure 8. Inverter Shutdown Connector

5.2 Network Transient Protector

The Network Transient Protector, shown in “UPS Features” Section 1.0, is located on the rear panel and has jacks labeled IN and OUT. This feature accommodates a single RJ-45 (10BaseT) network connector.

Connect the input connector of the equipment you are protecting to the jack labeled IN. Connect the output connector to the jack labeled OUT.



This connector should not be connected to PSTN telephone lines or equipment.

5.3 Load Segments

Load segments are sets of receptacles that can be controlled by power management software (such as Software Suite CD), providing an orderly shutdown and startup of your equipment. For example, during a power outage, you can keep key pieces of equipment running while you turn off other equipment. This feature allows you to save battery power. See your Software Suite manual for details.

The individual load segments can also be turned on and off through the front panel (see Section 4.0, Table 1).

Section 1.0 “UPS Features” shows the load segments for all plug/receptacle models.

5.4 Communication Port

To establish communication between the UPS and a computer, connect your computer to the UPS communication port using the supplied communication cable.

When the communication cable is installed, power management software can exchange data with the UPS. The software polls the UPS for detailed information on the status of the power environment. If a power emergency occurs, the software initiates the saving of all data and an orderly shutdown of the equipment.

The pin functions are described in Table 1.

Table 2. Communication Port Pin Assignment

Pin Number	Signal Name	Function	Direction from the Multi-Port Module
1	Low Batt	Low Battery relay contact	Out
2	RxD	Transmit to external device	Out
3	TxD	Receive from external device	In
	RS-232 low level signal for >0.4 seconds	Conditional Power Off: In absence of AC power, output is turned off until normal AC power returns	In
4	-	No Connection	-
5	GND	Signal Ground	-
6	-	No Connection	-
7	-	No Connection	-
8	AC Fail	AC Fail relay contact	Out
9	Power Source	+V (8 to 24 volts DC power)	Out

USB Port

The UPS is also equipped with a USB communication port. Either the DB-9 communication port or the USB port may be used to monitor the UPS; however, they cannot operate simultaneously. Refer to the power management software instructions for using the USB port.

5.5 Communication Slot

The Powerware 9120 UPS has a communication slot that allows quick installation of the optional SNMP/Web adapter or future communication interfaces. These interface adapters extend the capabilities of the Powerware 9120 system to provide compatibility with network and remote monitoring/management systems.

5.6 SNMP/Web Adapter

This adapter provides the Powerware 9120 system with its own ethernet network connection, allowing it to be remotely monitored and controlled via industry-standard internet browsers. The HTML interface enables UPS monitoring and management from anywhere on the internet or within your intranet. In addition, third-party Simple Network Management Protocol (SNMP) software packages may also be used to communicate remotely with the Powerware 9120 system.

5.7 Relay Card

This interface provides true relay contact output to peripheral devices. Outputs are user-selectable as normally open or normally closed.

Table 2. Relay Card (AS/400) Pin Assignment

Pin Number	Signal Name	Definition	Direction
1	-	Isolated common to pins 2 & 3	-
2	Line OK	Relay contact; closed to pin 1	-
3	Line Failure	Relay contact; closed to pin 1	-
4	-	Isolated common to pins 5 & 6	-
5	Battery Normal	Relay contact; closed to pin 4	-
6	Battery Low	Relay contact; closed to pin 4	-
7	-	Isolated common to pins 8 & 9	-
8	UPS Alarm	Relay contact; closed to pin 7	-
9	UPS On/OK	Relay contact; closed to pin 7	-
10	-	Isolated common to pins 11 & 12	-
11	UPS Online/Inverter	Relay contact; closed to pin 10	-
12	UPS on Bypass	Relay contact; closed to pin 10	-
13	+12VDC	Signal supply +12VDC	Out
14	Signal GND	Signal ground - Common	-
15	UPS Shutdown	Minimum 5 seconds high level signal (+12VDC) to perform shutdown according to following Relay Card Jumper settings:	In

	JP1 (default)	JP2	JP3
UPS Normal	-	No response	Go to bypass mode, back online when shutdown pins opened
UPS on Battery	Output off after 120 sec. Back online on resumption of AC power	Immediate output off UPS shutdown in 12 seconds	Immediate output off UPS shutdown in 12 seconds

6.0 Installing Lansafe Software

Your UPS is supplied with a CD-ROM and communication cable to install and operate Lansafe power management software. To install Lansafe on your computer, follow the instructions enclosed with the Software Suite CD-ROM.

7.0 Replacing the Batteries

The Powerware 9120 batteries are user-replaceable and can be replaced while the Powerware 9120 has AC input applied and powers the loads. This means that, if necessary, you can replace the batteries while the UPS is running. Before you replace the batteries, make sure that you read the safety information below.

Note: If you have a power outage while you are replacing the batteries, the UPS will not be able to run on battery power and your protected equipment will shut down.



CAUTION!

The batteries used in the UPS and battery pack can produce dangerous voltage and high current. Therefore, the batteries may cause severe injury if their terminals contact a tool or the UPS cabinet. Be very careful to avoid electrical shock and burns from contacting terminals while you replace the batteries.

Batteries contain acids and toxic materials and can rupture or leak if mistreated. Remove rings and metal wristwatches or other jewelry. Do not carry metal objects in your pockets: these objects could fall into the UPS.

Never allow any tool to contact both a battery terminal and the UPS cabinet or another battery terminal. Do not lay tools or metal parts on top of batteries.

To ensure continued superior performance of your UPS and to maintain proper charger operation, you must replace the UPS batteries with the same number and type of batteries. These batteries must be the same type as the original batteries: valve-regulated, low maintenance. The replacement batteries should have the same voltage and ampere-hour rating as the original batteries.



Assume that old batteries are fully charged. Use the same precautions you would use when handling a new battery. Do not short battery terminals with a cable or tool! Batteries contain lead. Many areas have regulations about disposing of used batteries. Please dispose of old batteries properly. DO NOT dispose of batteries in a fire because the batteries could explode. Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

This equipment may produce ozone. Take precautions to ensure that the concentration of ozone is limited to a safe value (0.1 ppm {0.2 mg / m} calculated as an 8-hour time-weighted average).


7.1 How to Replace Internal Batteries

Use the following steps to replace the internal batteries:

1. Using caution not to put stress on the LCD display cable, pull the top of the front panel forward. Release the spring latches at the bottom of the front panel and remove it, placing it to the side of the UPS.
2. Unscrew the metal battery cover (2000VA model shown).

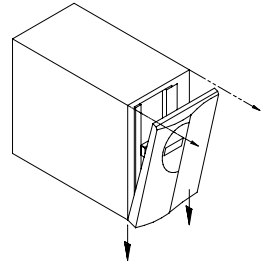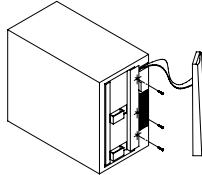

3. Pull the battery out onto a flat, stable surface (2000VA model shown)
4. Remove the old battery. See “Recycling the Used Battery” for proper disposal.
5. Install the new battery.
6. Reinstall the metal battery cover and front panel.

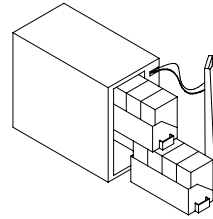

7.2 Recycling the Used Battery

Contact your local recycling or hazardous waste centre for information on proper disposal of the used battery.



WARNING

- Do not dispose of the battery or batteries in a fire. Batteries may explode. Proper disposal of batteries is required. Refer to the local codes for disposal requirements.
- Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.



CAUTION

Do not discard the UPS or the UPS batteries in the trash. This product contains sealed lead-acid batteries and must be disposed of properly. For more information, contact your local recycling or hazardous waste centre.

8.0 Specifications

Eaton Powerware reserves the right to change specifications without prior notice.

This section provides the following specifications for the Powerware 9120 models:

- Electrical input and output
- Environmental and safety
- Weights and dimensions
- Battery

Table 4. Electrical Input

	240V Models	
Nominal Voltage	240V default; 208, 220, 230, 240V selectable	
Voltage Range	160-276V for 208, 220, 230, 240V nominal	
Nominal Frequency	50/60 Hz, $\pm 5\%$ user-selectable	
Noise Filtering	MOVs and line filter for normal and common mode noise	
Connections	91200700A:	10A, IEC-C14 input connector
	91201000A:	10A, IEC-C14 input connector
	91201500A:	10A, IEC-C14 input connector
	91202000A:	10A, IEC-C14 input connector
	91203000A:	16A, IEC-C20 input connector

Table 5. Electrical Output

	240V Models	
Power Levels (rated at nominal inputs)	91200700A:	700 VA, 490W
	91201000A:	1000 VA, 700W
	91201500A:	1500 VA, 1050W
	91202000A:	2000 VA, 1400W
	91203000A:	3000 VA, 2100W
Regulation (Normal mode)	Nominal output voltage $\pm 2\%$	
Regulation (Battery mode)	Nominal output voltage $\pm 3\%$	
Voltage Waveform	Normal mode: Sine wave; $< 5\%$ THD with full PFC and nonlinear load	
Output Connections	91200700A:	(4) Australian 10A
	91201000A:	(4) Australian 10A
	91201500A:	(4) Australian 10A
	91202000A:	(5) Australian 10A
	91203000A:	(5) Australian 15A

Table 6. Environmental and Safety

240V Models	
Operating Temperature	0°C to 40°C 0-1500 metres above sea level 0°C to 35°C 1500-3000 metres above sea level Optimal battery performance: 25°C
Storage Temperature	-15°C to 50°C
Relative Humidity	0-95% noncondensing
Operating Altitude	Up to 3,000 metres above sea level
Audible Noise	700-1500 VA: Less than 48 dBA Normal mode, typical load 2000-3000 VA: Less than 54 dBA Normal mode, typical load Surge Suppression ANSI/IEEE C62.41 (1991); ANSI/IEEE C62.45 (1987) Category B
Safety Conformance	AS/NZS 3260
EMC	AS/NZS 2064, AS/NZS 3548, C-Tick Marked, AS/NZS 61000-4-2, -3, -4, -5 Compliant

Table 7. Weights and Dimensions

UPS 240V Models	
Dimensions	
(WxDxH)	700-1000 VA: 15.8 x 41.2 x 24.3 cm 1500 VA: 17.0 x 44.4 x 27.5 cm 2000-3000 VA: 21.7 x 47.2 x 36.1 cm
Weight	700 VA: 12.6 kg 1000 VA: 15.3 kg 1500 VA: 19.8 kg 2000 VA: 37 kg 3000 VA: 38.5 kg

Table 8. Battery

Configuration	700 VA: (2) 12V, 9 Ah internal batteries; 24 Vdc 1000 VA: (3) 12V, 9 Ah internal batteries; 36 Vdc 1500 VA: (4) 12V, 9 Ah internal batteries; 48 Vdc 2000-3000 VA: (8) 12V, 9 Ah internal batteries; 96 Vdc
Type	Sealed, maintenance-free, valve-regulated, lead-acid
Charging	Approximately 4 hours to 90% usable capacity at nominal line voltage after full load discharge

Table 9. Battery Run Times (in Minutes)

Number of Batteries	Run Times at Full/Half Load by UPS VA Ratings				
	700 VA	1000 VA	1500 VA	2000 VA	3000 VA
UPS Internal Batteries	8/20	8/21	7/20	14/30	8/20

NOTE Battery times are approximate and vary depending on the load configuration and battery charge.

9.0 Troubleshooting

If you have a question or problem, the troubleshooting table may help (See Table 10). If you need assistance, phone Eaton Powerware Service or your local Eaton Powerware office. Please have the model number and serial number (located on the rear of the unit) available.

If the unit must be returned, Eaton Powerware will give you a Return Authorisation (RA) number. Phone Eaton Powerware National Service & Repair Centre on 1300 303 059 for an RA number before returning the unit for any reason.

This section explains:


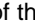

- UPS alarms and conditions
- How to silence an alarm

Audible Alarms and UPS Conditions

The UPS has an audible alarm feature to alert you of potential power problems. When the alarm is activated, the UPS beeps in different intervals according to a particular condition. Use Table 10 to determine and resolve the UPS alarms and conditions.

Silencing an Audible Alarm

There are two ways to silence the alarm for an existing fault:

- Press one of the front panel control buttons ( ,  , or ).
- Turn the Alarm Silence option on through the front panel (see Section 4.0 "Configuration").

If UPS status changes, the alarm beeps, overriding the previous alarm silencing. The alarm does not silence if there is a low battery condition.

Table 10. Troubleshooting


LCD Message or Condition	Possible Cause	Action
UPS does not turn on.	The UPS is not correctly connected to the power source.	Check connections to the power source.
	The wall outlet is faulty.	Have a qualified electrician test and repair the outlet.
	The Inverter Shutdown connector is missing or open.	Reconnect or close the Inverter Shutdown switch (see Section 5.1) Restart the UPS.
	A circuit breaker or an input fuse on the rear panel is open.	Push the circuit breaker button or replace the fuse. Restart the UPS.
LCD panel is blank.	The UPS is in Standby mode.	Press and hold the  button until you hear the UPS beep (approximately one second)
	The LCD has failed.	Contact your service representative.
UPS does not provide the expected backup time	The battery may be fully discharged because of: <ul style="list-style-type: none"> • long-term storage • frequent power outages • end of battery life 	Connect the UPS to a power source for 24 hours to charge the battery. Perform a battery test (see Section 4.0 "Configuration") If the battery test fails, see Section 7.0 "Replacing Batteries" to replace the battery. During extended power outages, save your work and turn off your equipment to conserve battery power.
The UPS operates normally, but some or	The equipment is not connected to the UPS.	Verify that the equipment is properly connected to the UPS.
all of the protected equipment is not on.	The output circuit breaker (if applicable) is open.	Reset the circuit breaker (push the circuit breaker button or reset the switch).
	One of the load segments has been turned off.	Reactivate the segment with the power management software or through the front panel (see Section 4.0 "Configuration").
On-Battery 1 beep every 5 seconds.	Utility power failure.	The UPS is powering your equipment with its internal battery. If this is an extended power outage, save your work and turn off your equipment to conserve battery power.

Table 10. Troubleshooting (cont.)

LCD Message or Condition	Possible Cause	Action
Low Battery 2 beeps every 5 seconds.	The battery is running low.	2 minutes or less of battery power remains (depending on load and battery charge). Prepare for a shutdown. Save your work and turn off your equipment. The alarm cannot be silenced.
Replace Battery 3 beeps every 5 seconds.	The battery needs replacing.	See Section 7.0 "Replacing Batteries" to replace the battery.
Low Charge 3 beeps every 5 minutes.	The battery voltage is low.	The UPS is charging the batteries and may not deliver full run time. The alarm continues until at least two minutes of run time is available.
Output Overload 2 beeps per second.	Power requirements exceed UPS capacity (110-125% for 1 minute or 126-150% for 10 seconds) or the load is defective. The UPS switches to Bypass mode.	Remove some of the equipment from the UPS. The UPS automatically switches back to Normal mode when the capacity returns to an acceptable level. You may need to obtain a larger capacity UPS.
Battery Overload 2 beeps per second.	The UPS is on battery, and the power requirements exceed UPS capacity (130% for 10 seconds or >130% for 1.5 seconds) or the load is defective.	Shutdown is imminent (30 seconds). Save your work and turn off your equipment. Turn off and unplug or remove utility power from the UPS. Remove some of the equipment from the UPS. Restart the UPS. You may need to obtain a larger capacity UPS.
Site Fault 1 beep per second.	Ground wire connection does not exist or the line and neutral wires are reversed in the wall outlet.	Have a qualified electrician correct the wiring. To disable this alarm, see Section 4.0 "Configuration"
Battery Test	The UPS is performing a battery test.	None. The UPS returns to Normal mode when it completes a successful battery test.
Over-Temperature Constant beep.	UPS internal temperature is too high.	Shutdown is imminent. Save your work and turn off your equipment. Turn off the UPS. Clear vents and remove any heat sources. Ensure the airflow around the UPS is not restricted. Wait at least 5 minutes and restart the UPS. If the condition persists, contact your service representative.

Table 10. Troubleshooting (cont.)

LCD Message or Condition	Possible Cause	Action
Over-Charge Constant beep.	Batteries are over-charged.	Save your work and turn off your equipment. Turn off the UPS. Contact your service representative.
Charger Failure	Charger has failed.	Save your work and turn off your equipment. Turn off the UPS. Contact your service representative.
Output Short Constant beep.	Output short circuit.	Save your work and turn off your equipment Turn off the UPS. Contact your service representative.
High Output Voltage Constant beep.	High output voltage.	Save your work and turn off your equipment. Turn off the UPS. Contact your service representative.
Low Output Voltage Constant beep.	Low output voltage.	Save your work and turn off your equipment. Turn off the UPS. Contact your service representative.
High DC Bus 2 beeps per second.	High internal DC bus voltage.	Save your work and turn off your equipment. Turn off the UPS. Contact your service representative.

10. Warranty

WARRANTY Information

This Warranty is subject to Eaton Power Quality Pty Ltd (EPQ) standard Conditions of Sale, which govern all sales of products by Eaton Power Quality Pty Ltd.

1. EPQ products, in general, are warranted against failure due to faulty materials and/or workmanship for a period of two years from despatch date (ex EPQ store) as per invoice. The Ferroresonant and 95 Series Power Conditioners and Dry Type Transformers have an extended warranty - 5 years from date of despatch.
The Transient Voltage Surge Suppression (TVSS) products are warranted against faulty materials and workmanship for certain periods from the date of purchase. Please refer to your equipment literature or catalogue for warranty periods. Please also note that it is possible that an excessive surge (such as from a direct lightning strike to the building or a building wiring fault) may cause damage to a unit and render it inoperable. In the case of filters/surge diverters, the units are designed to protect your equipment. However, due to the unpredictability of surge events, this is not a guarantee. A unit that has been damaged in this way is not warranted.
2. If, within the applicable Warranty period, any EPQ product does not meet the warranty specified above, and the product was installed and operated in accordance with EPQ recommended standard installation procedures, EPQ shall thereupon correct any defects due to faulty materials and/or workmanship.
3. Any modification made to the product other than those made by EPQ or its authorised representative may cause the Warranty to be void.
4. For units up to 3kVA that are installed as a portable device and TVSS products, the Warranty covers repair or replacement of defective parts at the factory, or other service locations as nominated by EPQ, provided the unit has been returned by the user packed adequately to prevent shipping damage, and approval has been obtained from EPQ before shipment. All costs associated with the return of the product to EPQ are at the customer's expense.

For hardwired products 3kVA and above (except TVSS products), the Warranty covers on site repair (Metropolitan area, Capital Cities only), during normal working hours, by EPQ technicians or appointed agents. For units installed in remote locations, EPQ may, at its discretion, request the equipment to be recovered and returned to the factory or other nominated service locations. In this case, it is the customer's responsibility to pack the equipment adequately to prevent shipping damages and pay freight charges to the location nominated by EPQ. Approval to return goods must be obtained from EPQ before the goods are despatched.

5. Units returned for in-warranty repairs, which are found not to be defective, will be subject to an inspection and handling charge, plus transportation charges.

6. High grade batteries, designed for Uninterruptible Power Supply (UPS) applications, are supplied by EPQ for use with EPQ UPS equipment. These batteries have a finite life expectancy depending on a number of variables, including rate of discharge, depth of discharge, operating temperature, etc.
7. Providing that the batteries are used within the limits as set out in the battery manufacturer's warranty statement and are provided as an integral part of new equipment, they are guaranteed for two years, from despatch date as per invoice. A copy of this warranty statement is available on request. Batteries provided as spare parts or replacements have a one year warranty. Other optional warranty terms for batteries are available on request.
8. EPQ reserves the right to charge for replacement batteries if within the one year guarantee period replacement batteries are necessary as a result of misuse or misapplication by the purchaser or end user.

AFFIX
POSTAGE
STAMP

Eaton Power Quality Pty Ltd
13 Healey Road
DANDENONG VIC 3175
AUSTRALIA

Standard Warranty Registration



UPS Model Number: UPS Serial Number: Date of Purchase:/...../.....
Contact Person:
Company/Organisation:
Address:
City: State: Country: Postcode:
Telephone: Fax: E-mail:

1. Where did you purchase this Powerware UPS from?
 Retail Store Computer Store Eaton Powerware Distributor Direct from Eaton Powerware
 Electrical Wholesaler Mail Order Catalogue Internet Other
2. Why did you purchase a Powerware UPS? (Check all that apply)
 Recommendation Reputation After Purchase Support Features
 Price Other
3. What price did you pay for this Powerware UPS?
4. What features of a UPS are important to you?
 Appearance Front Panel Display Backup Time RS232 Communications UPS Management Software Other
5. What equipment do you intend to protect with this Powerware UPS?
 Personal Computer(s) Workstation(s) Service/Network Equip.
 Midrange Computer(s) Mainframe(s) Industrial Automation
 Telecommunications Equipment Retail/Point-of-Sale Equipment Facilities/
Building wide protection Other

6. Please specify the equipment being protected by your Powerware UPS?
Brand.....Model Operating System
7. How would you classify your type of business?
 Retail Wholesale/Distribution Manufacturing Telecommunications
 Government/Education Banking/Finance Restaurant/Hotel Other
8. What is your company's annual revenue?
 Less than \$1m \$1m-\$5m \$5m-\$20m \$20m-\$100m Greater than \$100m
9. Approximately how many personal computers are there in your company?
 Less than 10 10-20 20-50 50-200 Greater than 200
10. Do you plan to purchase more UPS or Power Protection products?
 Within 1 month 1-6 months 6-12 months Unlikely
11. Would you like information about Eaton Powerware Extended Warranty ?
 Yes No
12. Would you like to be kept informed about new Eaton Powerware product developments and be added to our customer service database?
 Yes (you will receive mail from Eaton Powerware at least three (3) times per year) No

Eaton Powerware Australia/New Zealand Offices

Head Office - Sydney

Eaton Power Quality Pty Ltd ABN 82 054 056 709

10 Kent Road

Mascot NSW 2020

Phone: 61-2-9693 9366

Fax: 61-2-8338 1159

National Service and Repair Centre 1300 303 059

Web Site: www.powerware.com.au

Customer Service Offices

Adelaide

PO Box 481, Marlestone Business Centre

SA 5033

Phone: 08-8347-3622

Fax: 08-8445-6328

Brisbane

Unit 4, 11 Donkin Street

West End QLD 4101

Phone: 07-3891-1211

Fax: 07-3891-2492

Melbourne

13 Healey Road

Dandenong VIC 3175

Phone: 03-9797-9097

Fax: 03-9794-9150

Perth

1/46 Collingwood Street

Osborne Park WA 6017

Phone: 08-9446 0520

Fax: 08-9244 7466

Sydney

2-8 Kent Road

Mascot NSW 2020

Phone: 02-9693 9366

Fax: 02-8338 1159

Auckland

Phone: 09-273 3970

Fax: 09-273 3980

You have purchased a UPS that will provide you with many years of service, protecting your equipment from surges, sags, and blackouts. This product incorporates the highest quality standards in engineering, manufacturing and testing, and carries a 2 year warranty against defects in material and workmanship. This product is backed by over 60 years of pride and integrity. We are sure you will agree, there is no substitute for a Powerware product.

Did you know that Eaton Powerware also makes:

- Single Phase UPS systems up to 15kVA
- Three Phase UPS systems to 120kVA
- Parallel Three Phase UPS Systems to 1MVA
- Plug in Power Conditioners to 3kVA
- Hardwired Single Phase Power Conditioners to 22.5kVA
- Constant Voltage Transformers to 7.5kVA
- AC/DC switching and linear Power Supplies
- CVDC Constant Voltage Ferroresonant Power Supplies
- Low Voltage General Purpose Transformers
- Industrial Control Transformers
- Telecommunications DC Systems

Eaton Powerware products are available through an extensive distribution network. These distributors offer literature, technical assistance, and a wide array of off-the-shelf products for the fastest possible delivery. In addition, Eaton Powerware field sales offices are conveniently located to provide prompt attention to customer needs. Call Eaton Powerware direct to find the location of your closest authorised distributor.

Eaton Powerware: Worldwide Manufacturers of Power Protection, Conversion and Transformation Products