


Mounting and environment

The following conditions apply:

- You must perform a site survey to find an appropriate location and ensure good wireless reception around the boat.
- Do NOT install near sources of heat or vibration. (e.g. engine).
- Install in a dry area as high on the vessel as possible.
- Mount on a vertical surface.
- Install the unit well away from potential sources of ignition.
- Mount at least 1 m (3 ft) away from devices which may be affected by radio transmission (e.g. compass)


Site survey (wireless coverage)

You will need to survey the wireless coverage to ensure that wireless devices can operate around the vessel.

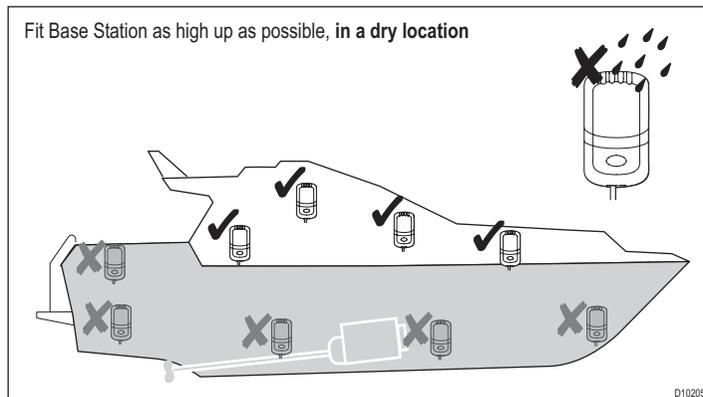

Repeat basestation

A repeat basestation may be used to optimize wireless coverage.

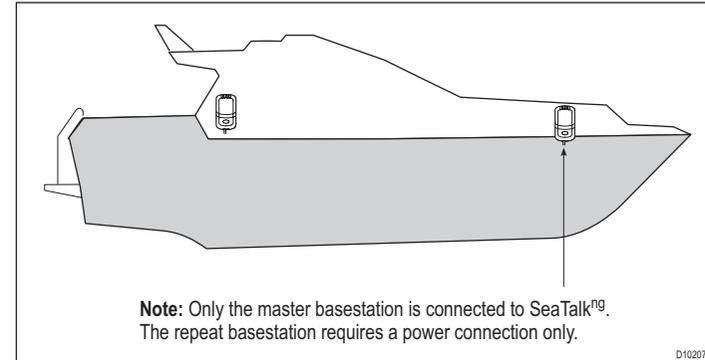

Note: Only the master basestation is connected to SeaTalk^{ng}. The repeat basestation requires a power connection only.


5.4 G-Series Monitors

To install your monitor refer to the separate instructions provided.

See also

Ensure you record your monitor details on the schematic diagram.
See [Appendix B - Nav Station schematic](#).

5.5 GVM400 Video Module

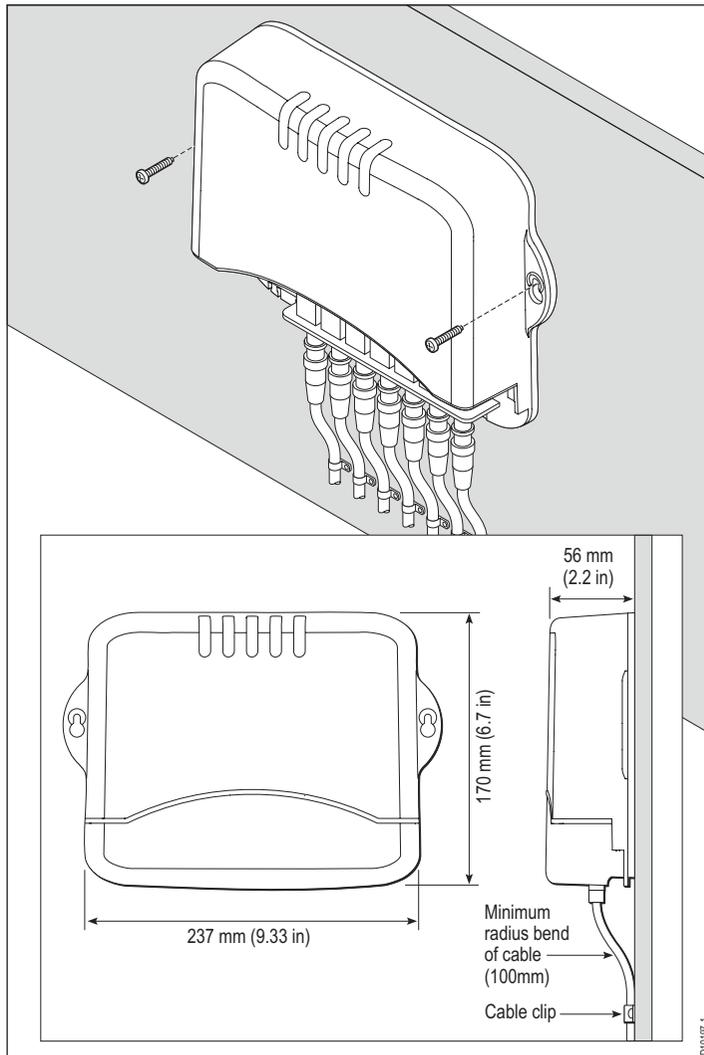

Mounting and environment


- Mount below decks in a dry area
- Install on a vertical surface.
- Do NOT mount near sources of heat or vibration. (e.g. engine)
- Install well away from potential sources of ignition.

Cables

- Minimum bend radius of 100 mm (3.94 in).
- Power cable should be fixed to the plastic case using the cable tie provided.
- All video / data cables must be secured within 150 mm (5.91 in) of the unit using a suitable cable clip. This will prevent undue strain on the connectors.

5.6 Alarm buzzer

The alarm is used to alert the operator to alarms and other audible warnings.

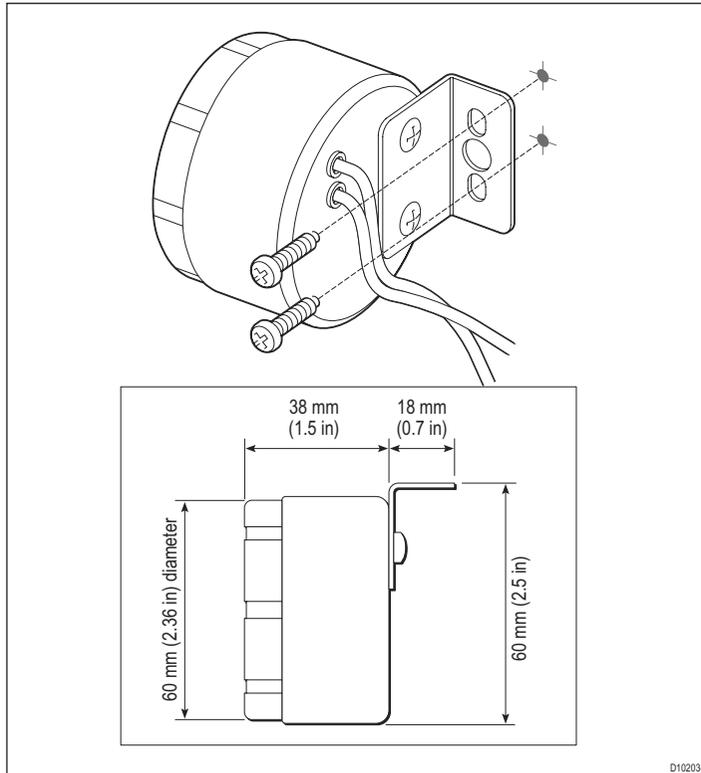

Mounting and environment

- Mount below decks in a dry area
- Install on a vertical surface.
- Do NOT mount near sources of heat or vibration. (e.g. engine)
- Install well away from potential sources of ignition.

Chapter 6: Initial test

This section gives details for the initial tests and checks to be carried out once installation is complete.

Chapter contents

- [Turn on breakers on page 70](#)
- [Marine monitor checks on page 70](#)
- [Keyboard checks on page 70](#)
- [GPM400 processor checks on page 70](#)
- [GVM400 video processor checks on page 70](#)
- [SeaTalk^{hs} switch on page 70](#)

See also

For help with diagnosing and rectifying faults, refer to [Chapter 9: Troubleshooting](#).

Before powering up

Before proceeding with the power on test of your system please ensure that:

- Radar and all ancillary equipment has been installed and connected in accordance with the manufacturers instructions.
- All G-Series equipment has been installed and connected in accordance with the G-Series installation instructions.

6.1 Power up test

It is advisable to perform an initial power-up test to help ensure that the system is wired correctly.

Perform the following initial checks before proceeding to the commissioning stage:

Turn on breakers

Turn on the power to the equipment at the distribution panel:

1. Monitors and ancillary equipment.
2. GPM400 processors.

Power up sequence

Power up the monitors first to allow the boot sequence and start-up information to be shown at master monitors.

Check system:

Wait for 2 minutes whilst the boot sequence is completed, then check each of the following:

- Monitors
- Keyboards
- GPM400 processors
- GVM400 Video Modules
- SeaTalk^{hs} Switch
- DSM sounder module. (refer to separate instructions supplied with the DSM)

Marine monitor checks

You will need to select the appropriate input on each monitor.

On a G-Series marine monitor:

- Press the power key (if required)
- Press the Left/Right arrow keys to scroll through the inputs.

On a healthy system all monitors will:

- show the G-Series set-up wizard screen on the appropriate input channel.

Note: Only the master monitors will show the initial boot sequence. The repeat monitors may not begin to operate until the system has ran through its start-up sequence (approximately 2 minutes after power on).

Keyboard checks

You can check that each keyboard is correctly connected by looking at its LCD monitor.

On a healthy system all keyboards will:

- Display the message "NOT ASSIGNED".

GPM400 processor checks

Check that each GPM is correctly connected by looking at its LED (found next to the SeaTalk/alarm output).

On a healthy GPM400:

- LED will flash Green.

For a full LED status listing see [page 99](#).

GVM400 video processor checks

Check that each GPM is correctly connected by looking at its LED (found next to the SeaTalk/alarm output).

On a healthy GVM400:

- LED will flash Green.

For a full LED status listing see [page 100](#).

SeaTalk^{hs} switch

Use this to check the status of your SeaTalk^{hs} network connections.

On a healthy SeaTalk Switch:

- Each connected channel will have one flashing and one steady green LED.

For a full LED status listing see [page 98](#).

Chapter 7: Initial Setup


This chapter provides information for the initial setup of a new system

Chapter contents

- 7.1 Power up the system on page 74
- 7.3 Select Master GPM on page 75
- 7.2 First time configuration on page 74
- 7.4 Configure Nav Stations on page 77
- 7.5 Assign Keyboards on page 78

Schematic diagram

You will need details of the equipment connections and serial numbers. You should have entered these onto the Nav Station schematic diagrams during the installation.

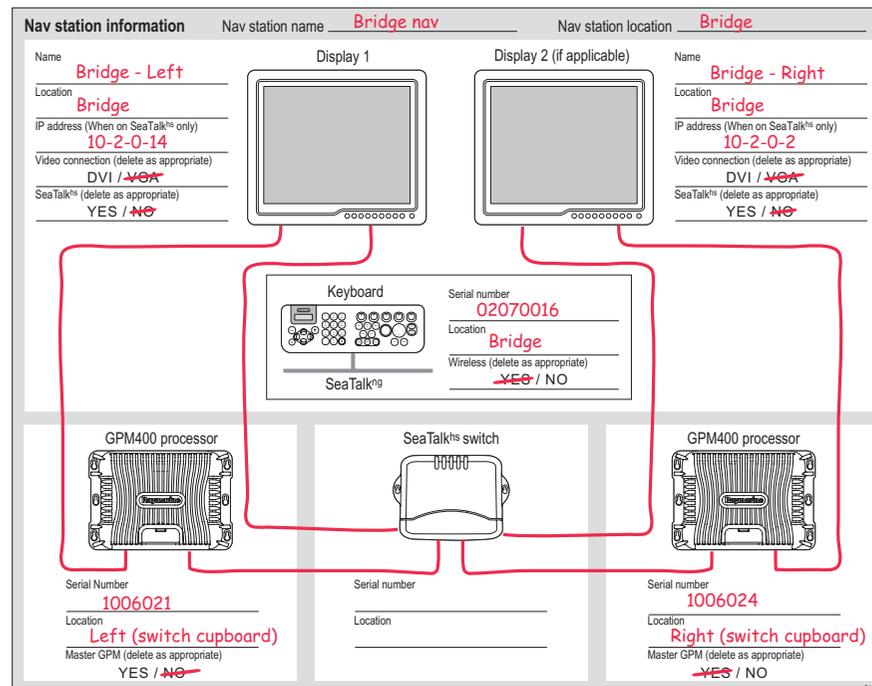

7.1 Power up the system

Before powering up

Before proceeding with the power on test of your system please ensure that:

- Radar and all ancillary equipment has been installed and connected in accordance with the manufacturers instructions.
- All G-Series equipment has been installed and connected in accordance with the G-Series installation instructions.

Turn on breakers

Turn on the power to the equipment at the distribution panel.

1. Monitors and ancillary equipment
2. GPM400 processors.

Power up sequence

Power up the monitors first to allow the boot sequence and start-up information to be shown at master monitors.

See also

For information on repeat / master monitors see [page 38](#).

7.2 First time configuration

There is an automatic menu sequence when you set up the system for the very first time (i.e. for systems which do not yet have any Nav Stations configured). This will automatically display the appropriate menus at power up, to help you to configure your Nav Stations.

First time configuration, automatic sequence

Select Master GPM

- [To set the Master GPM on page 76](#)

Create Nav Station

- [To create a new Nav Station on page 77](#)
- [To assign monitors to a Nav Station on page 77](#)

Assign Keyboards

- [Assign Keyboards on page 78](#)


Appropriate set-up menus will automatically appear on the monitor.

Note: First time configuration must be done at a monitor connected to the master GPM (see [page 75](#)).

Nav Station

A Nav Station is a group of monitors, GPM processors and Keyboards. This provides a location from where users can view and control the G-Series system.

Typical Nav station arrangement

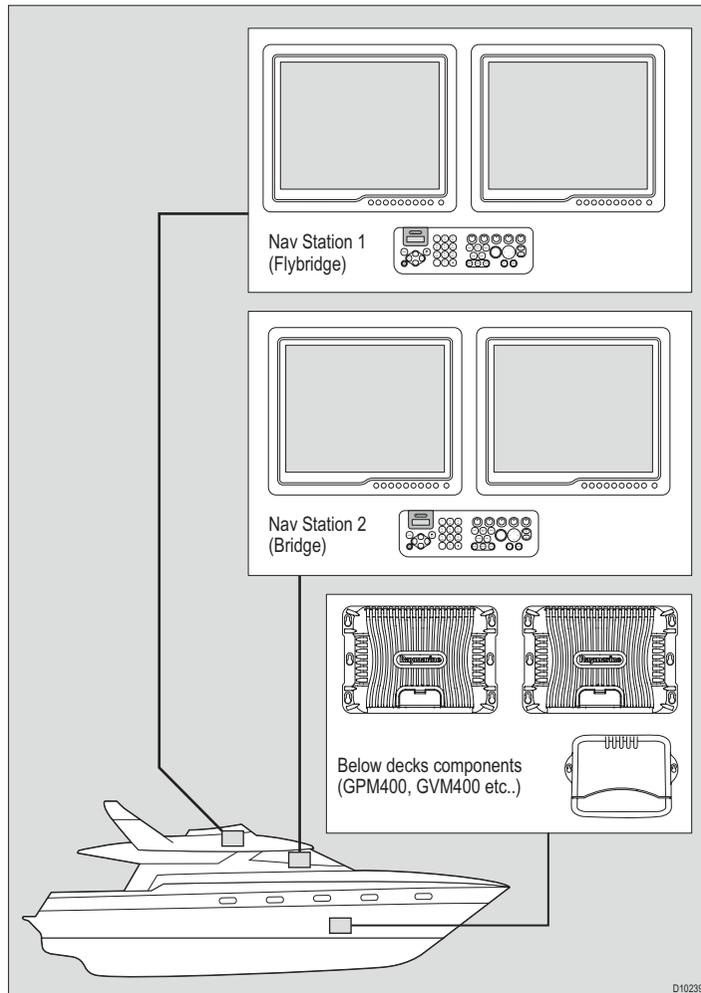

Each display within a Nav Station must be connected to a different GPM400. This is because the master and repeat displays connected to any single GPM400 will both show the same information or page.

See also


For more information on nav station connections, see [Chapter 2: Typical systems](#).

7.3 Select Master GPM


The GPM400 master handles the data from the marine electronics installed around the boat. It receives data (e.g. via SeaTalk^{ng}) and transmit this around the G-Series system via the SeaTalk^{hs} network.

Note: The initial set up should be done at a monitor connected to the master GPM. See [page 74](#).

To open the Set Master GPM menu:

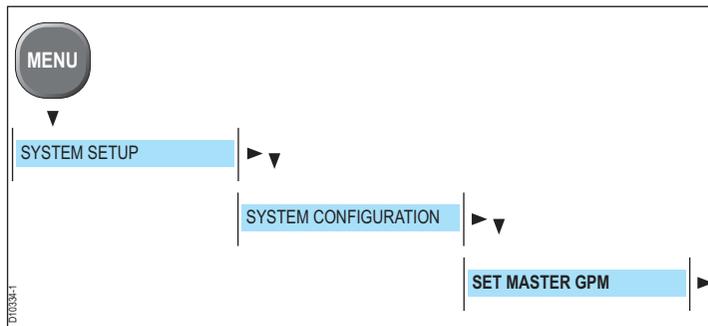

Select Master GPM - menu and soft keys

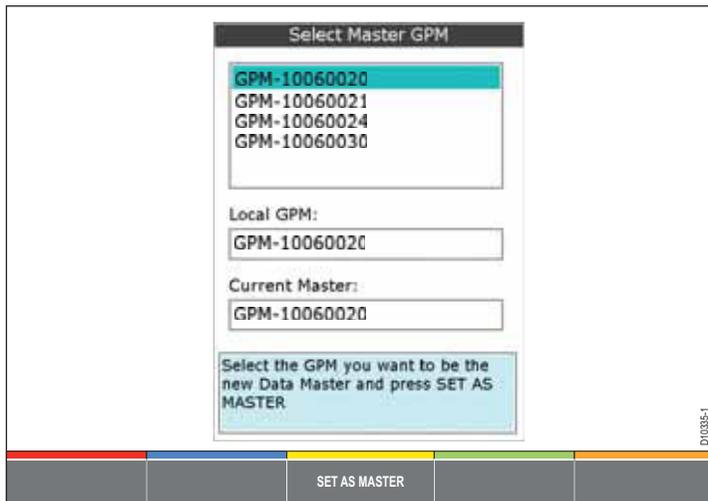

- **GPM-XXXXXXXX**
The available GPMs are listed by serial number. Cross refer these with the Serial numbers on your Nav Station schematic diagrams.
- **Local GPM**
Indicates the GPM to which the monitor is physically connected.

- **Current Master**
This is the GPM currently set at the master.

To set the Master GPM

1. Select the appropriate GPM from those displayed.
2. Press the **SET AS MASTER** softkey.


To identify the correct GPM

If you are unsure of which GPM to select, press the **DISCOVER GPM** softkey to show a message on every monitor which identifies the GPM to which it is connected.


7.4 Configure Nav Stations

For a definition of a Nav station see [First time configuration on page 74](#).

To open the Configure Nav Stations menu:

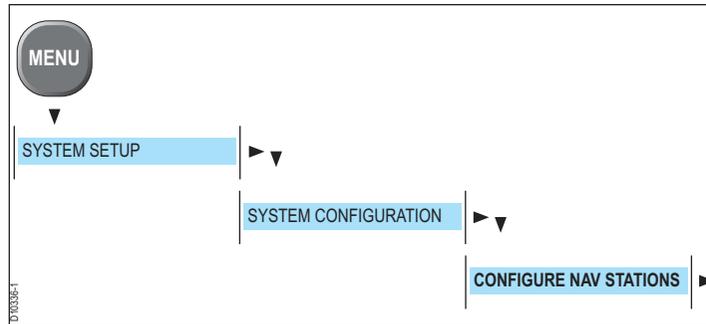

Nav Stations - menu and soft keys

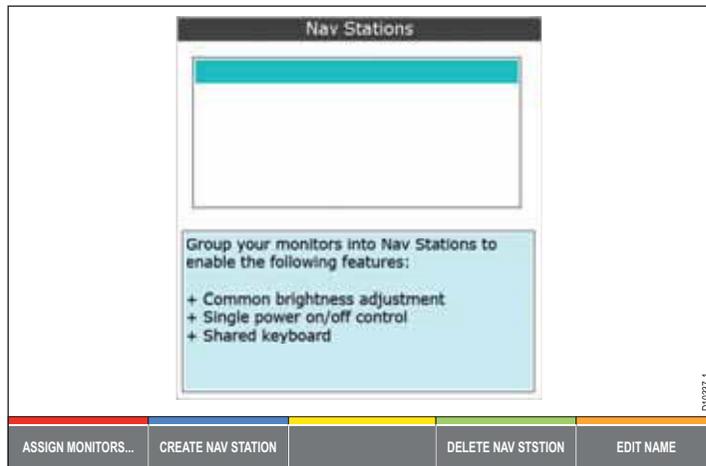

To create a new Nav Station

from the Configure Nav Stations menu:

1. Press **CREATE NAV STATION** softkey/
2. Enter the name for the Nav Station.
 - i. Press **SELECT NAME** to select from the list of pre defined names. OR
 - ii. Press **EDIT NAME** to use a custom name.
3. Press **OK** when complete.

To assign monitors to a Nav Station

from the Configure Nav Stations menu:

1. Select the appropriate Nav Station from those displayed
2. Press **ASSIGN MONITORS**.
3. Select the monitors to be added.
 - i. Press **ADD RAY** Monitor to select from the Raymarine monitors connected to the system. OR
 - ii. Press **ADD OTHER MONITOR** to select a non Raymarine monitor.
4. Enter the appropriate information for the monitor type selected.

Assign monitors Information required	Monitor type(s)
Name <ul style="list-style-type: none"> • Press SELECT NAME to select from the list of pre defined names. OR • Press EDIT NAME to use a custom name. 	ALL
GPM <p>From the list displayed, select the GPM to which the monitor is connected.</p> <ul style="list-style-type: none"> • DISCOVER GPM If you are unsure of which GPM to select, press the DISCOVER GPM softkey to show a message on every monitor which identifies the GPM to which it is connected. 	ALL

Assign monitors Information required	Monitor type(s)
<p>IP Address From the list displayed, select the IP address of the monitor being assigned.</p> <ul style="list-style-type: none"> • DISCOVER IP If you are unsure of which monitor to select, press this softkey to identify the IP address of each monitor. • IDENTIFY MONITOR You can confirm that the correct monitor has been assigned by pressing this softkey. The selected monitor will then display its OSD menus, allowing it to be identified. 	RAY monitors only
<p>Input Select the monitor input to which the G-Series cable is connected (e.g. VGA 1)</p>	RAY monitors only

To identify the correct monitor

Softkeys are provided to help you identify the correct monitor.


- **DISCOVER IP**
If you are unsure of which monitor to select, press this softkey to identify the IP address of each monitor.
- **IDENTIFY MONITOR**
You can confirm that the correct monitor has been assigned by pressing this softkey. The selected monitor will then display its OSD menus, allowing it to be identified.

7.5 Assign Keyboards


Introduction

You must assign each G-Series Keyboard to control a Nav station or an individual monitor.

To open the Assign Keyboards menu:

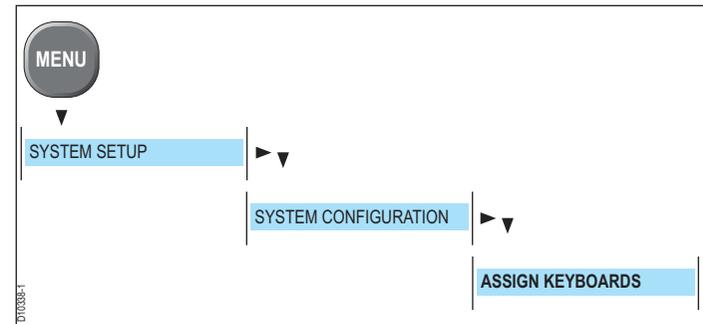

Keyboard Configuration - menu and soft keys

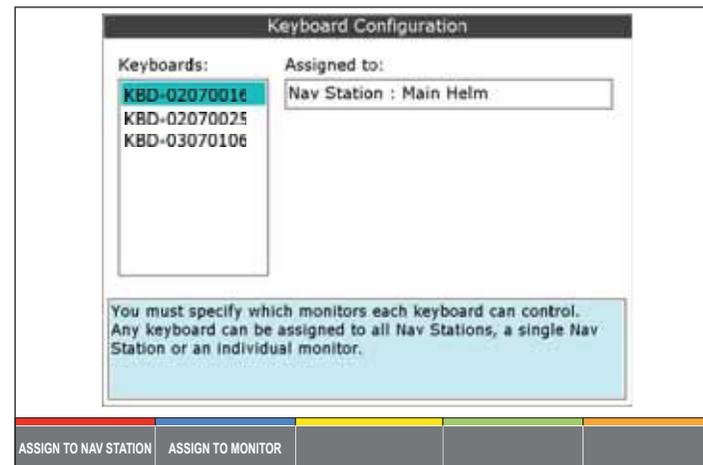

- **KBD-XXXXXXXX**
The available Keyboards are listed by serial number. Cross re-

fer these with the Serial numbers on your Nav Station schematic diagrams.

- **Assigned to**
Shows the assignment of the selected keyboard.

To assign a Keyboard to a Nav Station

from the Assign Keyboards menu:

1. Select the desired keyboard from those displayed.
2. Press **ASSIGN TO NAV STN.**
Then either:
 - i. Select from the list of available Nav Stations. OR
 - ii. Press the **ASSIGN TO ALL NAV STNS** softkey.
3. Press **OK** when complete.

To assign a Keyboard to an individual monitor

from the Assign Keyboards menu:

1. Select the desired keyboard from those displayed.
2. Press **ASSIGN TO MONITOR.**
3. Select from the list of available Monitors.
4. Press **OK** when complete

To identify the correct keyboard

If you are unsure of which keyboard to select, press the **IDENTIFY KEYBOARD** softkey to show a message on the monitor to identify the keyboard being used.

Chapter 8: Commissioning

This chapter provides information for the commissioning of a system once the initial setup is complete.

Chapter contents

- [8.1 Language setting on page 82](#)
- [8.2 Compass heading setup on page 82](#)
- [8.3 Radar setup on page 83](#)
- [8.4 GPS checks on page 85](#)
- [8.5 Fishfinder checks on page 86](#)
- [8.6 Set up video on page 87](#)
- [8.7 NMEA 0183 on page 88](#)
- [8.8 Data checks on page 89](#)

See also


For details of how to operate the G-Series system or general navigation of the menus and pages, refer to the separate user reference guide.

8.1 Language setting

The system will operate in the following languages:

English (US)	English (UK)	Chinese
Danish	Dutch	Finnish
French	German	Greek
Icelandic	Italian	Japanese
Korean	Norwegian	Portuguese
Russian	Spanish	Swedish

To select a language:

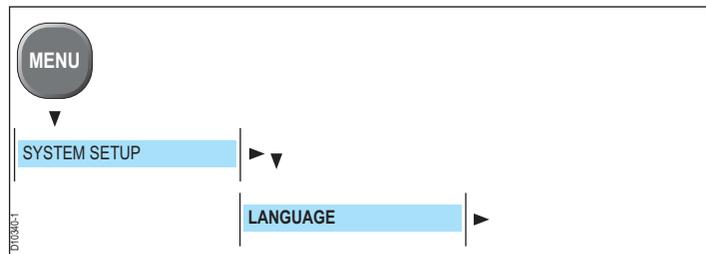

Select the required language from those displayed.


8.2 Compass heading setup

The G-Series system provides options to set up a Raymarine compass.

Note: If the compass is connected to a Raymarine autopilot, you should calibrate the compass heading using the autopilot controller, and proceed to the Radar setup ([page 83](#)).

Check heading

Provided that the system has a compass connected, the compass heading is displayed in the data bar at the top of the screen:

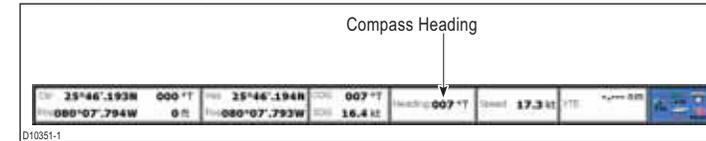


If no heading is displayed this could indicate a problem with the autopilot or compass connection. See [Chapter 9: Troubleshooting. Page 91](#) for more information.

Linearize (swing) the compass

If your system has a Raymarine compass (e.g ST80 or Fasthead-ing sensor) which is not connected to an autopilot system, then you will need to linearize (swing) the compass using the G-Series system.

To linearize your compass:

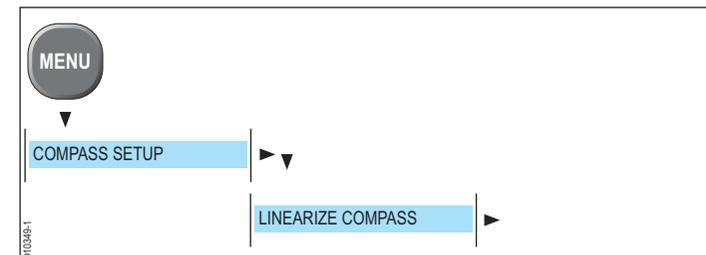

1. Once you have selected LINEARIZE COMPASS, follow the on-screen instructions.
2. When instructed to align heading, press the **ALIGN HEADING** soft key and then turn the rotary control **one click at a time** to fine tune the heading.

8.3 Radar setup




Electromagnetic energy

The radar scanner transmits electromagnetic energy. Ensure all personnel are clear of the scanner before switching to Tx (transmit mode).

2 scanner systems

The system may have 2 digital scanners connected. You can select the scanner to be used for each radar window.

For 2 scanner systems you must repeat the instructions in this (Radar setup) section, once for each scanner.

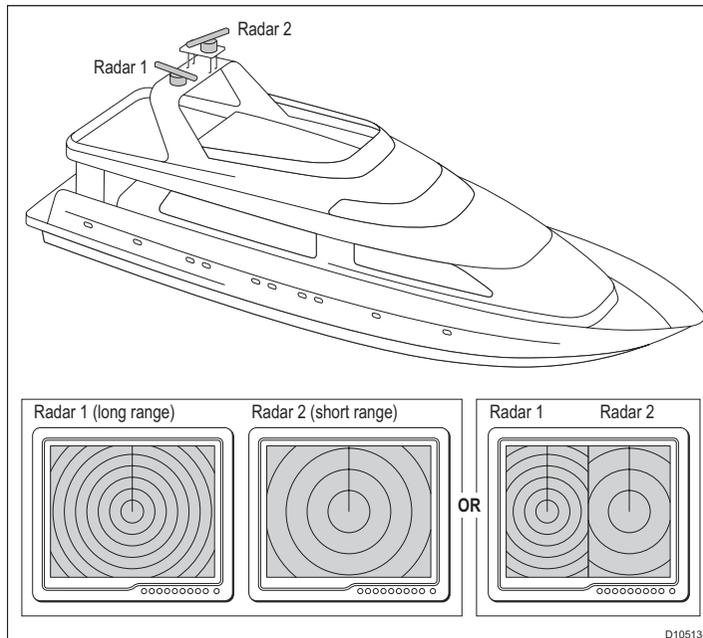

Initialize radar and set to transmit

You will need to:

- Initialize the radar
- Select a scanner (2 scanner systems only)
- Set radar to transmit

To initialize the radar

Select a Radar page by either:


- i. Press the **PAGE** key to select from the current page set.
OR
- ii. Press and hold the **PAGE** key to select from all available pages.

The Radar scanners will now initialize in standby mode, this process will take approximately 70 seconds.

If the radar fails to initialize, refer to [Chapter 9: Troubleshooting. Page 91.](#)

To assign scanners (2 scanner systems only)

For 2 scanner systems you must select which scanner is to be used for the current radar view.

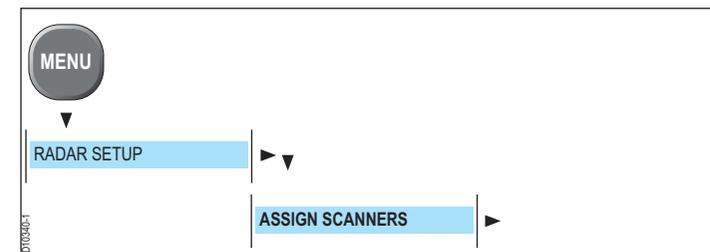

Scanners are listed by serial number (or name if assigned).

1. Select the appropriate scanner from those displayed.
2. Press **OK** when done.

Note: The **EDIT NAME** softkey allows you to assign a name to each scanner connected


To set radar to transmit

1. Press the Power button on the Keyboard.
2. Press the **RADAR TX/STDBY** softkey and set to **TX**.

Note: For 2 scanner systems there are individual **ON/OFF** and **TX/STDBY** keys for each scanner.

Check radar operation

Typical radar page

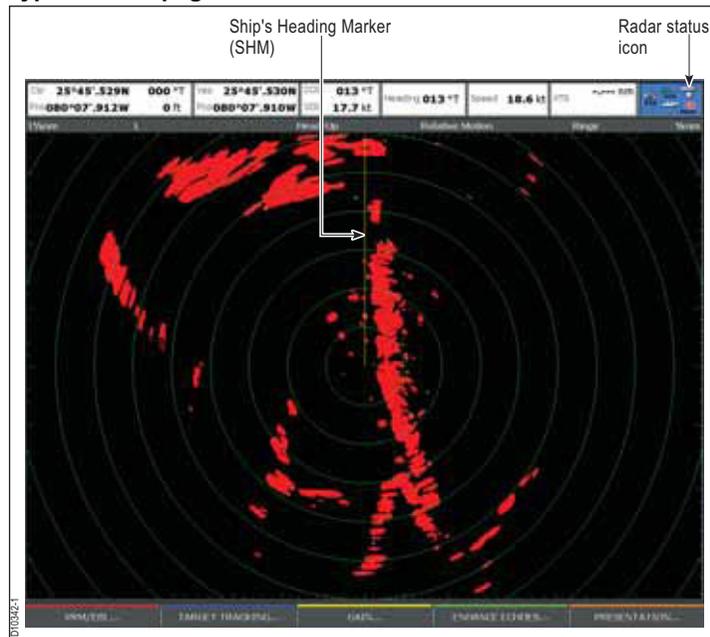


Points to check:

- Radar sweep with echo responses are shown on screen
- Radar status icon rotating in top right hand corner

If either of the above are not present this could indicate a fault. Refer to the radar troubleshooting section for information.

Check and adjust bearing alignment

Check and adjust the radar bearing alignment to ensure that radar objects appear at the correct bearing relative to your boat's bow. You will need to check the radar bearing alignment for any scanner installation that is not aligned with the boat.

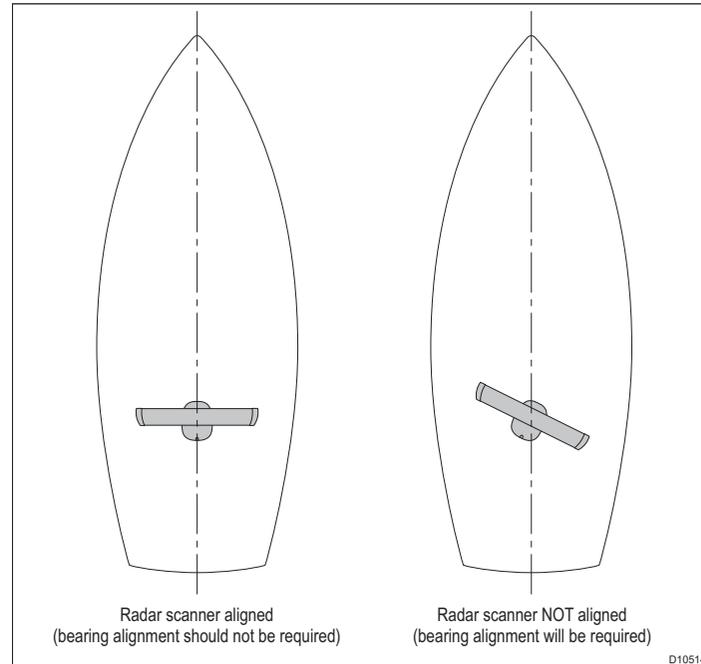

Note: Bearing alignment should only be done after the compass heading has been checked ([page 82](#)).

To check the bearing alignment


With your boat under way:

1. Align your boat's bow with a stationary object identified on the Radar display
An object between 1 & 2 NM distant is ideal.

- Note the position of the object on the radar display. If the target is not under the Ships heading marker (SHM), there is an alignment error and you will need to carry out bearing alignment adjustment.

To adjust the bearing alignment

With a radar window active select the bearing alignment menu:

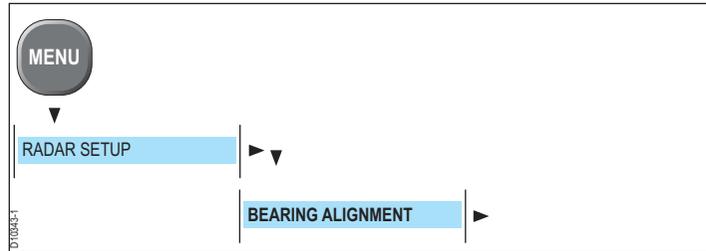

From the menu:

- Press the **BEARING ALIGNMENT** softkey.
- Use the rotary control to place the selected target under the SHM.
- Press **OK** when complete.

Parking settings (open array scanners)

To ensure the scanner parks (rests) in the correct position when rotation stops, you may need to adjust the radar offset angle.

To adjust radar parking settings

From the Radar setup menu (radar in standby mode):

- Select the **PARKING OFFSET** option, then adjust the offset angle required to park the radar so that the antenna comes to rest facing forward (you should see the Raymarine logo wording from the front of the boat) when you place it in either standby or switch it off.
- Press **OK** when complete.

8.4 GPS checks

The GPS is required to show your boat position on the chart. You can set up your GPS and check its status using the GPS status icons and the GPS Status page of the Setup menu.

Check the GPS Status icon

This is located in the top right hand corner of the screen.




If NO FIX is displayed refer to the GPS status page (below) and Troubleshooting section on [page 95](#).

GPS Status page



Typical GPS status screen

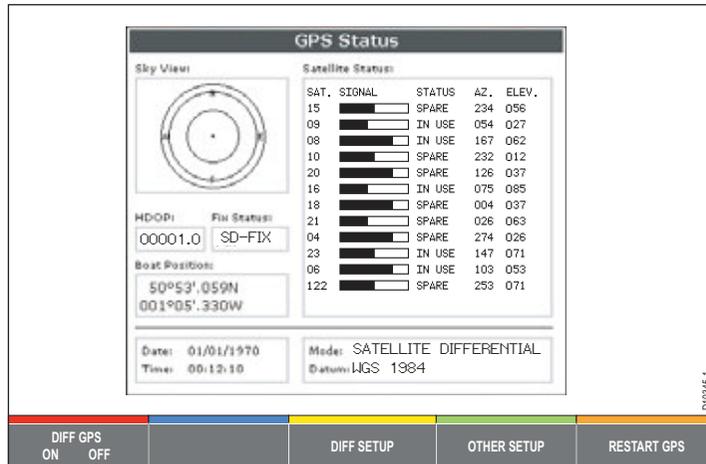

This screen may help diagnose a NO FIX status. It provides information for each for each tracked GPS satellite.

HDOP

The HDOP (Horizontal Dilution Of Position) value shown on screen provides an indication of the positional accuracy. This will vary depending upon the relative position of the GPS satellites and the prevailing conditions.

An ideal figure is 1.0, which indicates optimum accuracy.

A consistently high value (6 or above) may be associated with NO-FIX occurring frequently. Check that the GPS antennae has a clear view of the entire sky and refer to the troubleshooting section on [page 95](#).

See also

For further information and details regarding differential GPS, refer to the separate user reference manual.


8.5 Fishfinder checks

For the fishfinder window to function the system must be connected to a digital sounder (e.g. DSM400).

To select a fishfinder screen:

- Press the **PAGE** key to select from the current page set.
- Press and hold the **PAGE** key to select from all available screens.

Typical fishfinder screen

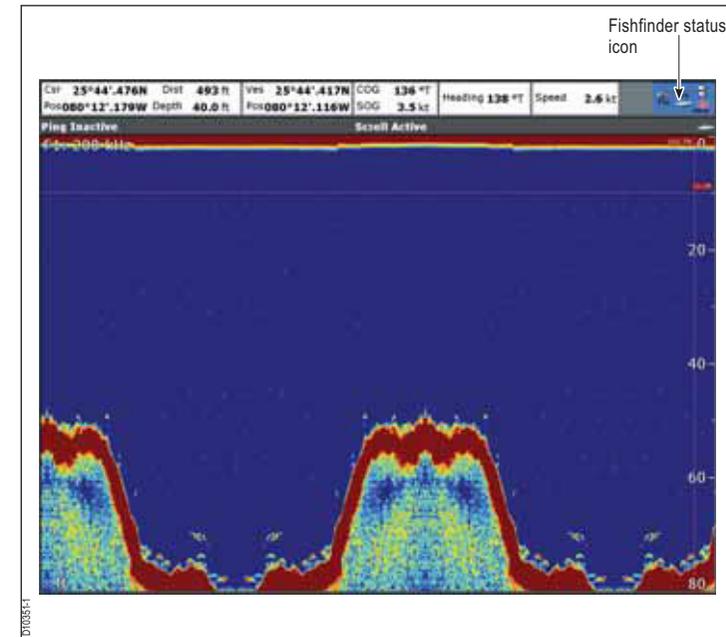

Points to check:

- Fishfinder screen is scrolling and showing graphical information.
- Fishfinder status icon animated in top right hand corner.

- Valid depth and frequency values on screen

If any of the above are not present this could indicate a fault. Refer to [Chapter 9: Troubleshooting. Page 91](#).

Fault indications:

No Data

This is displayed if the system cannot detect a compatible DSM sounder with appropriate transducer.

Invalid custom configuration

Indicates an invalid manual override of switch settings at the transducer. Refer to your DSM and Transducer documentation for further information.

8.6 Set up video

To ensure correct operation of the video and entertainment system you should setup and test all video and audio channels.

Before proceeding ensure that the video sources are operating. For audio you should ensure that the amplifier is turned on with the appropriate input selected.

Check the video and audio output

You will need to:

- Set up and select a video page
- Set up the video inputs

To set up a video page

1. Open the system **Setup** menu.
2. Open the **Select Page Set** screen.
3. Highlight the page set you want to edit.
4. Press the **EDIT PAGE SET** softkey:
5. Follow the on-screen instructions and select the video page type as appropriate.
6. Press **OK**.

To select a video page

- Press the **PAGE** key to select from the current page set.
OR
- Press and hold the **PAGE** key to select from all available page sets.

The audio (associated with input 4) will be heard through the connected amplifier or television.


To set up video inputs



This menu provides the following options:

- **Setup video cycle**
You may set up display cycles for multiple video sources.
- **Setup softkey shortcuts**
You can set up the softkeys used to view the video channels on the monitor.
- **Configure video system**
Set up S-Video and other video options (S-Video is only available on input 4). See [Configure the video system](#) .
- **Reset GVM**
Reset all options associated with the GVM400 video server(s) to the factory default settings.

Configure the video system

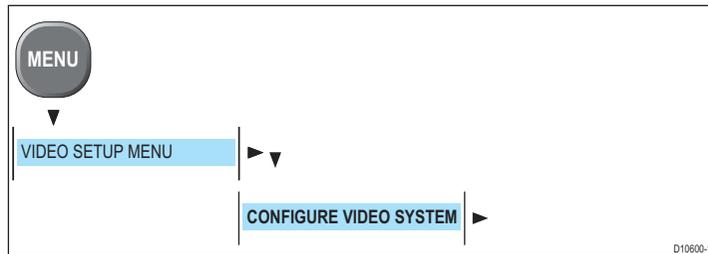

Select the required video input, then adjust the following options as required:

- Rename GVM400 video unit**
 By default, the GVM video modules are labelled by their serial number, e.g. "GVM400-0471123". You can change these labels to make them more descriptive.
- Rename video**
 By default, the video sources are labelled 'Comp1' to 'Comp3' and 'S-Video'. You can change these labels to make them more descriptive, for example: 'engine room', 'stern', or 'bow'.
- Type (Input 4 only)**
 By default input 4 is set to S-Video. If you want to use input 4 for composite video, change this setting accordingly.
- Orientation**
 Use this option to change the orientation of the video image. For example to display a mirror-image of the video feed if you have a rear-facing camera linked to a forward-facing display.
- Aspect ratio**
 The video application automatically detects the appropriate aspect ratio for each input source. If an image appears distorted (squashed or stretched), you can override the automatic setting to choose the appropriate aspect ratio manually. An aspect ratio of 4:3 is standard format, while 16:9 is wide-screen format.

See also


- Please refer to the Reference Manual for more details.

- If any channel does not display correctly check the video and SeaTalk^{hs} connections. Also refer to [Chapter 9: Troubleshooting](#)

8.7 NMEA 0183

If you have a Navtex or AIS receiver connected to a NMEA 0183 port, you will need to change the NMEA Port Setting.

Set up the NMEA port using a monitor physically connected to the correct GPM400 processor. (Refer to the details on your Nav Station schematic diagrams)

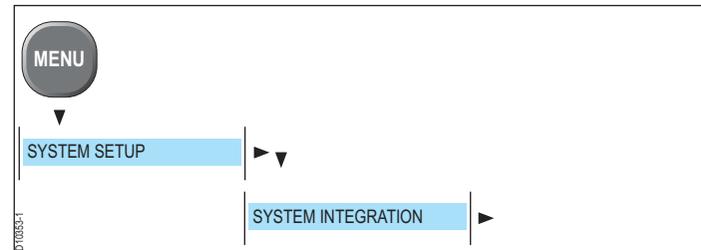


NMEA Port settings

Setting	NMEA equipment	Additional information
NMEA 4800	General	Default setting
Navtex 4800 or Navtex 9600	Navtex receiver	Please refer to your Navtex receiver manual for appropriate settings.
AIS 38400	AIS receiver	

AIS checks

1. Check the AIS Status icon

This is located in the top right hand corner of the screen.

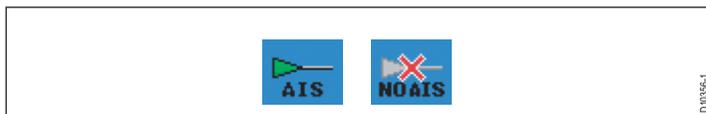


If NO AIS is displayed, please refer to the Troubleshooting section on [page 97](#).

2. Check that AIS targets are available


Use the chart window with radar overlay to check the AIS operation.

Note: For dockside or dry-dock commission, you may not see targets.

Use these softkey functions to view AIS targets

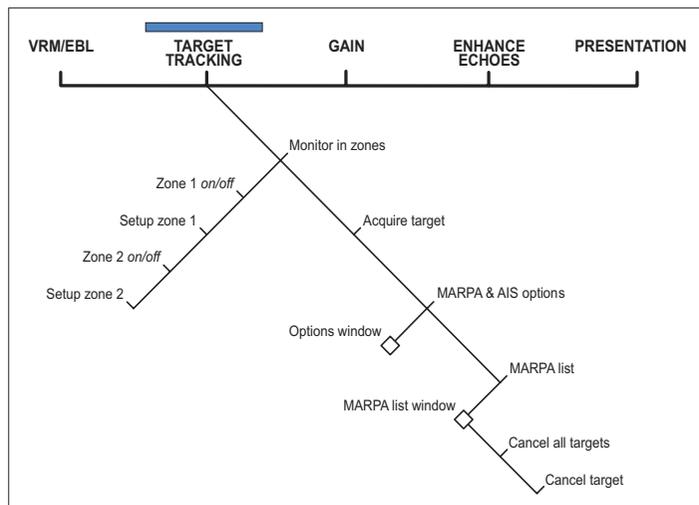

Typical AIS window

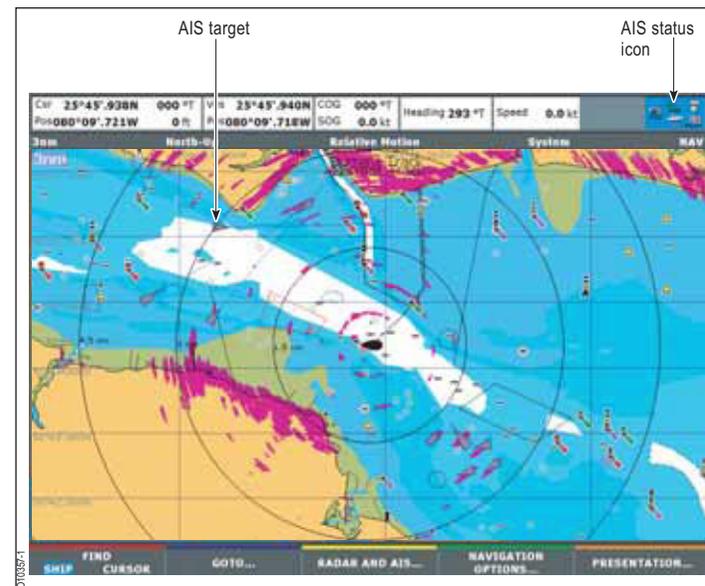

8.8 Data checks

Use the data window to check that the G-Series system is receiving all necessary information from the marine electronics system. This includes:

- Instrument and other data received via SeaTalk^{ng}.
- Engine data. Compatible engines may send information using NMEA 2000. This can be then connected into the SeaTalk^{ng} bus.
- Other data on the system (e.g. received via SeaTalk and NMEA 0183).

To select the digital data page

- Press the **PAGE** key to select from the current page set.

- Press and hold the **PAGE** key to select from all available pages.

Typical instrument data window

25°45'.923N		007°T		008°T		17.3 kt	
080°07'.822W		16.4 kt		Waypoint TTG		VMG Wpt	
NOT FOLLOWING		Set Drift		Depth		XTE	
---°T		198°T		75.4ft		-.---nm	
-.---nm		1.0 kt		Trip		Local Time	
--h--m--s				0.880nm		12:03:13AM	

To set up the digital data to be displayed

Open the Panel Setup Menu



Use this menu to add or remove types of data from the display. Refer to the user reference manual for additional information.

Chapter 9: Troubleshooting

This section gives details for the troubleshooting the system. It covers common problems that may occur during test and commissioning.

Chapter contents

- [Power up on page 92](#)
- [Marine Monitors on page 92](#)
- [Keyboards on page 93](#)
- [Radar on page 94](#)
- [GPS on page 95](#)
- [Video on page 96](#)
- [Data on page 97](#)
- [Fishfinder on page 98](#)
- [SeaTalk^{hs} Switch LED indications on page 98](#)
- [GPM400 LED indications on page 99](#)
- [GVM400 LED indications on page 100](#)
- [DSM400 LED indications on page 100](#)

9.1 Troubleshooting

Power up

Problem	Possible causes	Possible solutions
<ul style="list-style-type: none"> The system (or part of it) does not power up. 	<ul style="list-style-type: none"> Power supply problem 	<ul style="list-style-type: none"> Check relevant fuses and breakers. Check that the power supply cable is sound and that all connections are tight and free from corrosion. Check that the power source is of the correct voltage and sufficient current.

Marine Monitors

Problem	Possible causes	Possible solutions
<ul style="list-style-type: none"> Monitor is blank. 	<ul style="list-style-type: none"> The monitor is in standby mode. The monitor has no power supply. 	<ul style="list-style-type: none"> Press the standby/power key on the monitor. Refer to troubleshooting Power up on page 92.
<ul style="list-style-type: none"> Monitor shows "Searching" or "No signal" message. 	<ul style="list-style-type: none"> A repeat monitor during system start-up The monitor is set to an incorrect input channel. A faulty connection to the GPM400 processor The GPM400 processor is not operating correctly. 	<ul style="list-style-type: none"> Wait for a couple of minutes and see if the problem clears. Press the channel select keys on the monitor to check all input channels. Check the cable/connection between the monitor and the GPM400 processor. Check the GPM400 power supply. Refer to troubleshooting Power up on page 92. Check the GPM400 status LEDs. Refer to troubleshooting GVM400 LED indications on page 100.
<ul style="list-style-type: none"> Monitor picture is out of proportion Monitor resolution is incorrect (display looks pixelated or stretched/squashed) 	<ul style="list-style-type: none"> GPM has 2 monitors with different screen resolutions GPM has 2 monitors with different aspect ratio 	<ul style="list-style-type: none"> Ensure that monitors connected to a single GPM have the same screen resolution and aspect ratio.

Problem	Possible causes	Possible solutions
<ul style="list-style-type: none"> The keyboard does not operate monitor setting menus. On or more monitors are not listed when configuring the monitors or Nav Stations. 	<ul style="list-style-type: none"> SeaTalk^{hs} network problem 	<ul style="list-style-type: none"> Check the status of the SeaTalk^{hs} Switch. Refer to troubleshooting SeaTalk^{hs} Switch LED indications on page 98
		<ul style="list-style-type: none"> Check the marine monitor and ensure that the network selector switch is in the “up” position (required when connected to the SeaTalk^{hs} network).
		<ul style="list-style-type: none"> Check that the monitor and GPM400 are both connected to the SeaTalk^{hs} switch. Check that SeaTalk^{hs} cables are free from damage.
	<ul style="list-style-type: none"> The monitor is not a Raymarine G-Series unit. 	<ul style="list-style-type: none"> Only G-Series marine monitors are compatible with the SeaTalk^{hs} network required for this functionality.
	<ul style="list-style-type: none"> Software mismatch between equipment may prevent communication. 	<ul style="list-style-type: none"> Contact Raymarine technical support

Keyboards

Problem	Possible causes	Possible solutions
<ul style="list-style-type: none"> Keyboard LCD is blank. (Monitor may also show no keyboards connected message) 	<ul style="list-style-type: none"> The Keyboard is not connected to SeaTalk^{ng} or has no power. 	<ul style="list-style-type: none"> Check keyboard wiring and power to SeaTalk^{ng} bus.
	<ul style="list-style-type: none"> Wireless keyboard is not charged up. 	<ul style="list-style-type: none"> Connect wireless keyboard to charge point.
Keyboard LCD shows low battery	<ul style="list-style-type: none"> Wireless keyboard battery requires charging Degraded / old keyboard battery requires replacing 	<ul style="list-style-type: none"> Charge keyboard battery at appropriate charge point. Replace battery
<ul style="list-style-type: none"> Keyboard LCD shows sw version message. e.g 86/78 F64D V0.6A (Monitor may also show no keyboards connected message) 	<ul style="list-style-type: none"> The Keyboard cannot communicate with a GPM400 processor 	<ul style="list-style-type: none"> Ensure GPM400 processors are connected to the SeaTalk^{ng} system.
	<ul style="list-style-type: none"> Wireless basestation is not operating or is disconnected from SeaTalk^{ng}. 	<ul style="list-style-type: none"> Check power and connections to SeaTalk^{ng} wireless basestation.
	<ul style="list-style-type: none"> Wireless basestation is out of range 	<ul style="list-style-type: none"> Re-survey wireless coverage and move / add repeat basestations if necessary.

Problem	Possible causes	Possible solutions
<ul style="list-style-type: none"> • Keypresses result in improper or no action at the display. 	<ul style="list-style-type: none"> • Software mismatch between equipment may prevent communication. 	<ul style="list-style-type: none"> • Contact Raymarine technical support
<ul style="list-style-type: none"> • Keyboard does not control the expected monitor or Nav Station. 	<ul style="list-style-type: none"> • Keyboard is not assigned to the correct Nav Station(s). • Incorrect monitor is selected at Keyboard 	<ul style="list-style-type: none"> • Assign keyboard to Nav station (see Assign Keyboards on page 78). • Check the Keyboard LCD to see which monitor is currently being used. Use the left/right arrow keys to select between the available monitors.
<ul style="list-style-type: none"> • Keyboard does not operate monitor setting menus. 	<ul style="list-style-type: none"> • Refer to troubleshooting Marine Monitors on page 92 	

Radar

Problem	Possible causes	Possible solutions
<ul style="list-style-type: none"> • No Data or No scanner message. 	<ul style="list-style-type: none"> • Radar scanner power supply 	<ul style="list-style-type: none"> • Check that the scanner power supply cable is sound and that all connections are tight and free from corrosion. • Check relevant fuses and breakers. • Check power source is of the correct voltage and sufficient current (using voltage booster if appropriate).
	<ul style="list-style-type: none"> • SeaTalk^{hs} network problem 	<ul style="list-style-type: none"> • Check that all radar scanners are correctly connected to the SeaTalk^{hs} switch. • Check the status of the SeaTalk^{hs} Switch. Refer to troubleshooting Status LEDs on page 98. • Check that SeaTalk^{hs} cables are free from damage.
	<ul style="list-style-type: none"> • Radar scanner fault 	<ul style="list-style-type: none"> • Refer to the radar scanner handbook.
	<ul style="list-style-type: none"> • Software mismatch between equipment may prevent communication. 	<ul style="list-style-type: none"> • Contact Raymarine technical support

Problem	Possible causes	Possible solutions
<ul style="list-style-type: none"> • Radar will not initialize (Voltage control module (VCM) stuck in "sleep mode") 	<ul style="list-style-type: none"> • Intermittent or poor power connection. 	<ul style="list-style-type: none"> • Check power connection at VCM. (Voltage at input = 12 V, Voltage at output = 40 V)
	<ul style="list-style-type: none"> • Switch at scanner pedestal in OFF position. 	<ul style="list-style-type: none"> • Ensure scanner pedestal switch is in ON position.
<ul style="list-style-type: none"> • The bearing given on the radar window differs from the actual bearing. 	<ul style="list-style-type: none"> • The radar bearing alignment requires correcting. 	<ul style="list-style-type: none"> • Perform the bearing alignment procedures. (See Check and adjust bearing alignment on page 84).

GPS

Problem	Possible causes	Possible solutions
<ul style="list-style-type: none"> • "No Fix" GPS status icon is displayed. 	<ul style="list-style-type: none"> • GPS equipment fault 	<ul style="list-style-type: none"> • Ensure that the GPS is functioning correctly (refer to manufacturers handbook).
	<ul style="list-style-type: none"> • GPS connection fault 	<ul style="list-style-type: none"> • Ensure that GPS connections and cabling are correct.
	<ul style="list-style-type: none"> • GPS antenna in poor position • GPS installation problem 	<ul style="list-style-type: none"> • Ensure GPS antenna has a clear view of the sky. • Refer to manufacturers handbook for installation details.
	<ul style="list-style-type: none"> • Geographic location or prevailing conditions preventing satellite fix. 	<ul style="list-style-type: none"> • Check periodically to see if a fix is obtained in better conditions or another geographic location.

Video

Problem	Possible cause / solution	Possible solutions
Video picture is unavailable at some or all Nav stations.	<ul style="list-style-type: none"> Video signal is not reaching the GVM400 video module. 	<ul style="list-style-type: none"> Check the video source equipment. Check the video connections to the GVM400 unit.
	<ul style="list-style-type: none"> GVM400 video module or power supply problem. 	<ul style="list-style-type: none"> Check the GVM400 status. See troubleshooting GVM400 LED indications on page 100. Check the GVM400 power supply. Refer to troubleshooting Power up on page 92.
	<ul style="list-style-type: none"> SeaTalk^{hs} network problem 	<ul style="list-style-type: none"> Check that all GVM400 and all GPM400s are connected to the SeaTalk^{hs} switch. Check the status of the SeaTalk^{hs} Switch. Refer to troubleshooting Status LEDs on page 98 Check that SeaTalk^{hs} cables are free from damage.
	<ul style="list-style-type: none"> Software mismatch between equipment may prevent communication. 	<ul style="list-style-type: none"> Contact Raymarine technical support

Data

Problem	Possible cause / solution	Possible solutions
<ul style="list-style-type: none"> Instrument or other system data is unavailable at all Nav Stations. 	<ul style="list-style-type: none"> Data not received at Master GPM. 	<ul style="list-style-type: none"> Check the data bus (e.g. SeaTalk^{ng}) wiring and connection to the master GPM. Check the overall integrity of the data bus (e.g. SeaTalk^{ng}) wiring. If available refer to the reference guide for the data bus. (e.g. SeaTalk^{ng} reference manual)
	<ul style="list-style-type: none"> Data source (e.g. ST70 instrument) is not operating. 	<ul style="list-style-type: none"> Check the source of the missing data (e.g. ST70 instrument) Refer to the manufacturers handbook for the equipment in question.
	<ul style="list-style-type: none"> Software mismatch between equipment may prevent communication. 	<ul style="list-style-type: none"> Contact Raymarine technical support
<ul style="list-style-type: none"> Instrument or other system data is missing from some but not all Nav Stations. 	<ul style="list-style-type: none"> SeaTalk^{hs} network problem 	<ul style="list-style-type: none"> Check that all GPM400s are connected to the SeaTalk^{hs} switch. Check the status of the SeaTalk^{hs} Switch. Refer to troubleshooting Status LEDs on page 98. Check that SeaTalk^{hs} cables are free from damage.
	<ul style="list-style-type: none"> Software mismatch between equipment may prevent communication. 	<ul style="list-style-type: none"> Contact Raymarine technical support

Fishfinder

Problem	Possible cause / solution	Possible solutions
• No data source for the fishfinder.	• DSM power supply fault.	• Check the DMS power supply. Refer to troubleshooting Power up on page 92 .
	• Other DSM fault.	• Refer to the instructions supplied with the DSM unit.
	• SeaTalk ^{hs} network problem.	• Check that the DSM is correctly connected to the SeaTalk ^{hs} switch.
		• Check the status of the SeaTalk ^{hs} Switch. Refer to troubleshooting Status LEDs on page 98 .
	• Check that SeaTalk ^{hs} cables are free from damage.	
	• Software mismatch between equipment may prevent communication.	• Contact Raymarine technical support
• Invalid custom configuration message	• Indicates an invalid manual override of switch settings at the transducer	• Refer to your DSM and Transducer documentation for further information

9.2 Status LEDs

SeaTalk^{hs} Switch LED indications

LED State (Connected channels only)	Causes
• For all connected channels: 1 steady and 1 flashing green LED.	• No problem detected (Steady LED indicates network connection Flashing LED indicates network traffic)
• No LEDs are illuminated	• No power to SeaTalk ^{hs} switch
• Some LEDs are not illuminated	• Cable / connection faults on the channels with non-illuminated LEDs. • Equipment connected to non-illuminated LEDs may be faulty.

GPM400 LED indications

Color	Operation	Causes
Normal operation		
Green	Flashing 500 / 500 ms	<ul style="list-style-type: none"> • Normal operation (Heartbeat)
Green	Flashing 750 / 250ms	<ul style="list-style-type: none"> • Standby mode
Warnings and Errors		
Off	Off < 2 minutes Off for > 2 minutes	<ul style="list-style-type: none"> • Startup • No power
		•
Amber	On steady	<ul style="list-style-type: none"> • Power on • Lamp test
Amber	Flashing x 1	<ul style="list-style-type: none"> • No link between processors (network fault)
Amber	Flashing x 2	<ul style="list-style-type: none"> • No network / cable unplugged
Amber	Flashing x 3	<ul style="list-style-type: none"> • Over temperature warning
Amber/Green	Alternating 750/250 ms	<ul style="list-style-type: none"> • Bootloader awaiting to be upgraded or downloading code
Amber/Red	Alternating 750/250 ms	<ul style="list-style-type: none"> • DOBII Download. This condition remains until a valid application is available from Flash
Red	Flashing x 1	<ul style="list-style-type: none"> • Fan fault
Red	Flashing x 3	<ul style="list-style-type: none"> • Over temperature error
Red	Flashing x 4	<ul style="list-style-type: none"> • Flash write error
Red	Flashing x 5	<ul style="list-style-type: none"> • No application programmed
Red	Flashing x 8 (May be followed by Flashing amber)	<ul style="list-style-type: none"> • Hardware fault

GVM400 LED indications

Color	Operation	Causes
Normal operation		
Green	Flashing (various rates, depending upon system data)	<ul style="list-style-type: none">• Normal operation
Warnings and Errors		
Amber	On steady	<ul style="list-style-type: none">• Power on• Lamp test
Amber	Flashing x 1	<ul style="list-style-type: none">• Acquisition failure
Amber	Flashing x 2	<ul style="list-style-type: none">• No network / cable unplugged
Amber	Flashing x 3	<ul style="list-style-type: none">• Other network error
Amber/Red	Alternating 750/250 ms	<ul style="list-style-type: none">• Software upgrade. This condition remains until a valid application is available from Flash
Red	Flashing x 1	<ul style="list-style-type: none">• Unit can no longer poll input status
Red	Flashing x 4	<ul style="list-style-type: none">• Flash write error
Red	Flashing x 6	<ul style="list-style-type: none">• Video stopped
Red	Flashing x 7	<ul style="list-style-type: none">• Video error
Red	Flashing x 8 (May be followed by Flashing amber)	<ul style="list-style-type: none">• Hardware read failure

DSM400 LED indications

Color	Operation	Causes
Normal operation		
Green	Flashing 500 / 500 ms	<ul style="list-style-type: none">• Normal operation (Heartbeat)
Green	Flashing 750 / 250ms	<ul style="list-style-type: none">• Standby mode

Color	Operation	Causes
Warnings and Errors		
Off	Off < 2 minutes Off for > 2minutes	<ul style="list-style-type: none"> • Startup • No power
		•
Amber	On steady	<ul style="list-style-type: none"> • Power on • Lamp test
Amber	Flashing x 1	<ul style="list-style-type: none"> • Input transducer
Amber	Flashing x 2	<ul style="list-style-type: none"> • No network / cable unplugged
Amber	Flashing x 3	<ul style="list-style-type: none"> • Over temperature warning
Amber	Flashing x 8	<ul style="list-style-type: none"> • Watchdog restart
Amber/Red	Alternating 750/250 ms	<ul style="list-style-type: none"> • Software upgrade. This condition remains until a valid application is available from Flash
Red	Flashing x 1	<ul style="list-style-type: none"> • Voltage error
Red	Flashing x 3	<ul style="list-style-type: none"> • Over temperature error
Red	Flashing x 4	<ul style="list-style-type: none"> • Flash write error
Red	Flashing x 5	<ul style="list-style-type: none"> • No application programmed
Red	Flashing x 8 (May be followed by Flashing amber)	<ul style="list-style-type: none"> • Hardware read failure

Appendix A Technical specification

GPM400 Processor module

GPM400 Processor module	
Nominal supply voltage	12 V / 24 VDC
Operating voltage range	10.7 V to 32 V DC
Fuse / Breakers	12 V supply: 10 A fuse protection at distribution panel 10 A thermal circuit breaker protection at distribution panel 24 V supply: 4 A fuse protection at distribution panel 5 A thermal circuit breaker protection at distribution panel
Typical Power consumption	No external loads 3 A @ 12 V 1.5 A @ 24 V With external loads 5 A @ 12 V 2.5 A @ 24 V
Environmental conditions:	operating temperature: -15°C to 55°C (5°F to 131°F) non-operating temperature: -25°C to 70°C (-13°F to 158°F) relative humidity limit: 80% water protection: drip resistant when mounted vertically
Storage conditions for packaged unit:	Temperature: -25°C to 55°C (-13°F to 158°F) relative humidity: 75%

GPM400 Processor module

Dimensions:	Width = 335 mm (13.19 in) Height = 230 mm (9.06 in) Depth = 125 mm (4.92 in),
Weight	6.5 kg (14.33 lb)
Data connections	NMEA 0183 (x2) SeaTalk SeaTalk ^{ng} SeaTalk ^{hs} Compact flash USB (software upgrade only)
Video	DVI x 2 (Optional VGA adaptor available)
Audio	Stereo line out (rated 1 V rms)
SeaTalk / alarm power output	250 mA at 12 V
CE approvals - conforms to:	89/336/EEC as amended by 92/31/EEC, EN60945:2002

GVM400 Video module

GVM400 Video module	
Nominal supply voltage	12 V / 24 V DC
Operating voltage range	10.7 V to 32 V DC
Fuse / Breakers	12 V supply: 2 A fuse protection at distribution panel 1.2 A thermal circuit breaker protection at distribution panel 24 V supply: 1 A fuse protection at distribution panel 1 A thermal circuit breaker protection at distribution panel
Typical Power consumption	650 mA @ 12 V 330 mA @ 24 V
Environmental conditions:	operating temperature: -15°C to 55°C (5°F to 131°F) non-operating temperature: -25°C to 70°C (-13°F to 158°F) relative humidity limit: 80% water protection: drip resistant when mounted vertically
Storage conditions for packaged unit:	Temperature: -25°C to 55°C (-13°F to 158°F) relative humidity: 75%
Dimensions:	Width = 237 mm (9.33 in) Height = 170 mm (6.69 in) Depth = 56 mm (2.20 in)
Weight	0.8 kg (1.76 lb)
Data connections	SeaTalk ^{hs}


GVM400 Video module

Video inputs	Inputs 1-3: Composite video (PAL 626 Line, NTSC 525 Line) Input 4: S-Video or Composite video
Audio inputs	Stereo audio line in (rated 1 V rms) (associated with Input 4 (S-Video or composite))
CE approvals - conforms to:	89/336/EEC as amended by 92/31/EEC, EN60945:2002

G-Series Keyboard

G-Series Keyboard	
Nominal supply voltage	12 V DC (From SeaTalk ^{ng} bus)
Operating voltage range	9 V to 16 V DC
Power consumption (standby)	1.5 W
Environmental conditions:	operating temperature: -15°C to 55°C (5°F to 131°F) non-operating temperature: -25°C to 70°C (-13°F to 158°F) relative humidity limit: 95% water protection: waterproof to CFR-46 standard
Storage conditions when packed:	Temperature: -25°C to 55°C (-13°F to 158°F) relative humidity: 75%
Dimensions:	(width, height, depth) 297 mm (11.69 in), 98 mm (3.86 in), 46 mm (1.81 in)
Weight	0.65 kg (1.43 lb)
Data connections	SeaTalk ^{ng} SeaTalk ^{ng} RF (requires wireless upgrade kit and separate basestation)
Approvals:	CE: • EN60945, EN300-440-2 FCC: • CFR47 PART 15 Other • IC-RSS-210

G-Series marine monitors

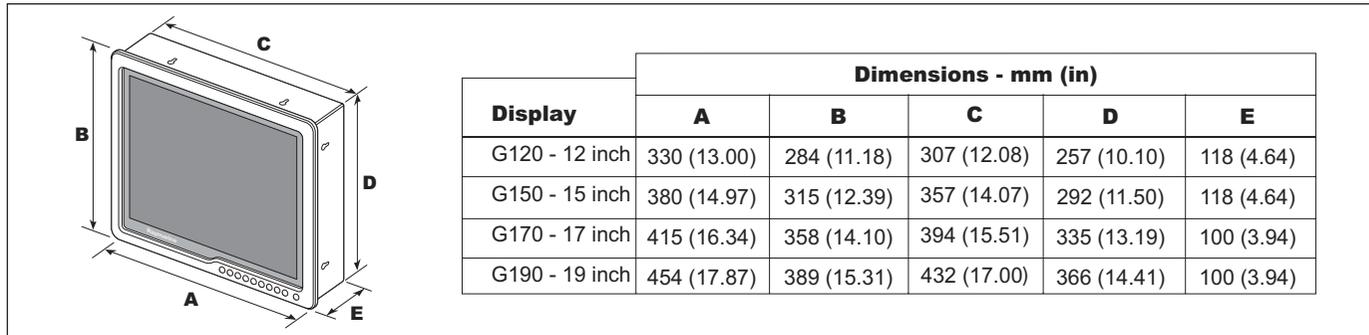

G-Series marine monitors

Nominal supply voltage	12 V / 24 V DC
Operating voltage range	10.2 V to 32 V DC
Power consumption (standby)	G170 - 7.6 amps at 12 V 3.5 amps at 24 V G190 - 7.7 amps at 12 V 3.6 amps at 24 V
Environmental conditions:	operating temperature: -10°C to 50°C (14°F to 122°F) non-operating temperature: -20°C to 70°C (-4°F to 158°F) water protection: waterproof to IP66 (from the front)
Storage conditions when packed:	Temperature: -25°C to 55°C (-13°F to 158°F) relative humidity: 75%
Dimensions:	Refer to separate operators handbook for model dimensions

G-Series marine monitors

Weight	G120 - 4.6 kg (10 lbs) G150 - 5.8 kg (12 lbs) G170 - 6.4 Kg (14 lbs) G190 - 7.3 Kg (16 lbs)
Video inputs	3 VGA 2 DVI-D 3 Composite video 1 S-Video
Data connections	SeaTalk ^{hs} /Ethernet Serial Port
Native resolution	G120 / G150: 1024 x 768 (XGA) G170 / G190: 1280 x 1024 (SXGA)

G-Series marine monitors

Resolutions and refresh rates	VGA - 60,72, 75 and 85 Hz SVGA - 56, 60, 72, 75 and 85 Hz XGA - 60, 70, 75 and 85 Hz SXGA - 60, 75 and 85 Hz UXGA - 60, 65, 70, 75 and 85 Hz All timings in accordance with VESA Monitor Timing Standards
-------------------------------	--


Approvals:	CE: <ul style="list-style-type: none">• 1999/5/EC, EN60945:2002 FCC: <ul style="list-style-type: none">• Part 80 (47CFR) and Part 2 (47CFR)
------------	---

See also


- For additional specifications, refer to the documentation supplied with the individual equipment.

Appendix B - Nav Station schematic

Plan the connections and arrangement of your core system. This information is required when commissioning.

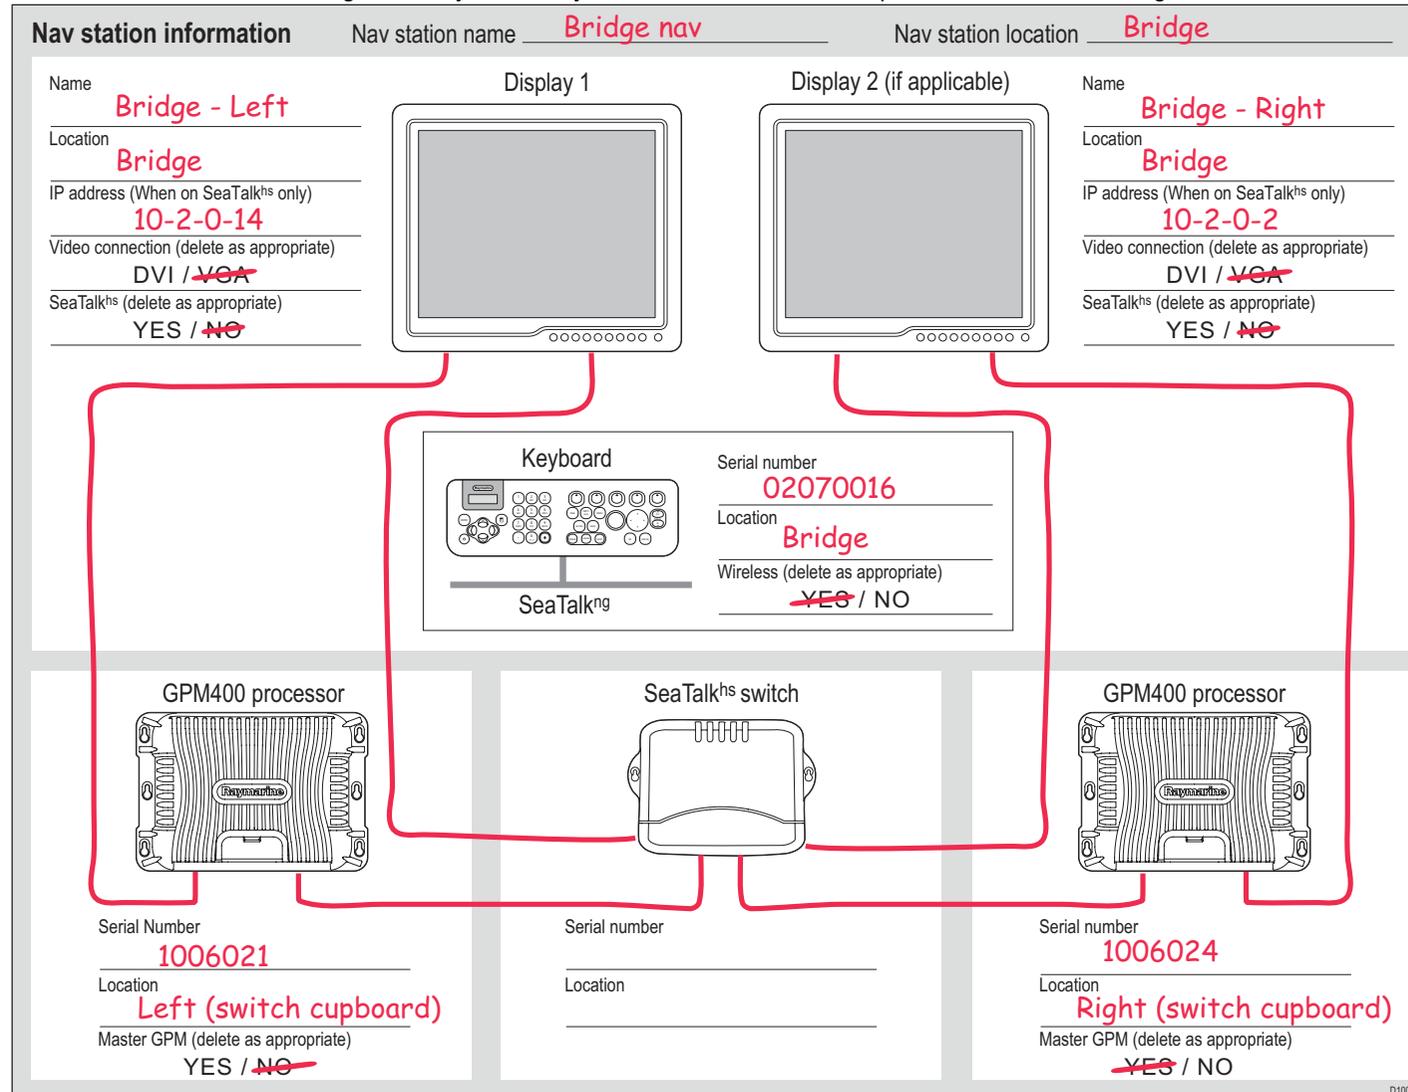

If required use multiple sheets, as shown in the example system below.

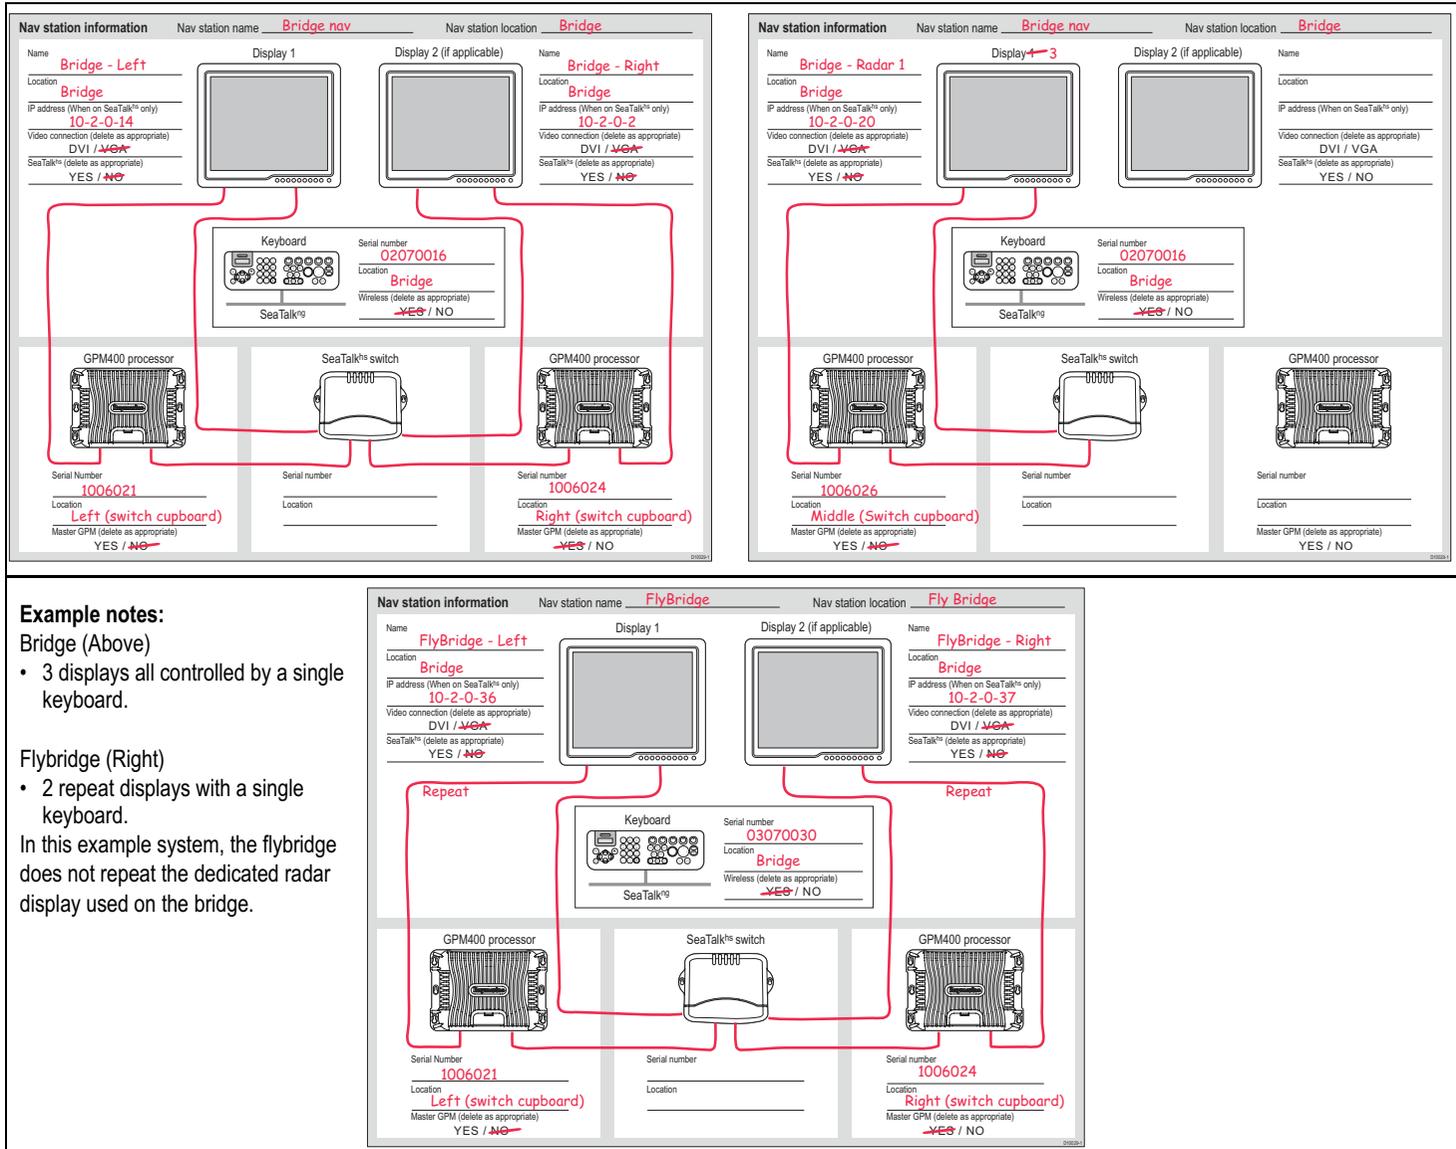

Example notes:

Bridge (Above)

- 3 displays all controlled by a single keyboard.

Flybridge (Right)



- 2 repeat displays with a single keyboard.

In this example system, the flybridge does not repeat the dedicated radar display used on the bridge.

Nav station information


Nav station name _____ Nav station location _____

Name _____
Location _____
IP address (When on SeaTalk^{hs} only) _____
Video connection (delete as appropriate)
DVI / VGA _____
SeaTalk^{hs} (delete as appropriate)
YES / NO _____

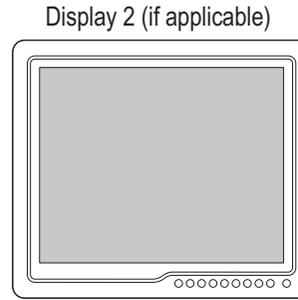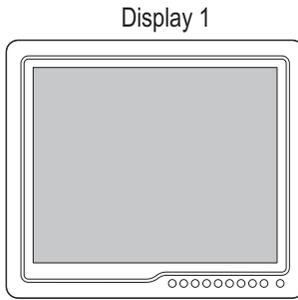


Name _____
Location _____
IP address (When on SeaTalk^{hs} only) _____
Video connection (delete as appropriate)
DVI / VGA _____
SeaTalk^{hs} (delete as appropriate)
YES / NO _____

Keyboard

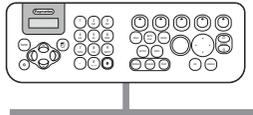


Serial number _____
Location _____
Wireless (delete as appropriate)
YES / NO _____

GPM400 processor

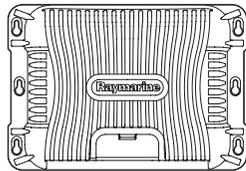


Serial Number _____
Location _____
Master GPM (delete as appropriate)
YES / NO _____

SeaTalk^{hs} switch

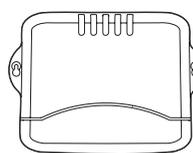









Serial number _____
Location _____

GPM400 processor

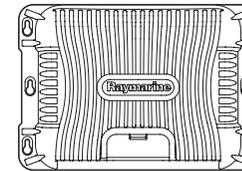

Serial number _____
Location _____
Master GPM (delete as appropriate)
YES / NO _____

D10029-1

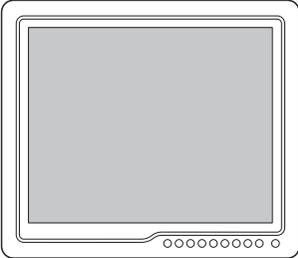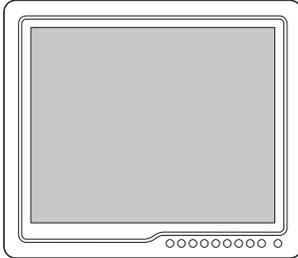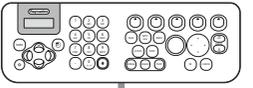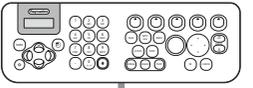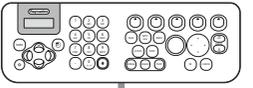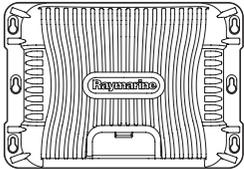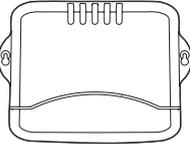
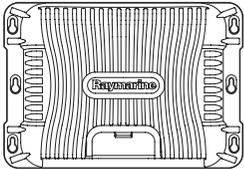
Nav station information		Nav station name _____	Nav station location _____		
Name _____ Location _____ IP address (When on SeaTalk ^{hs} only) _____ Video connection (delete as appropriate) DVI / VGA _____ SeaTalk ^{hs} (delete as appropriate) YES / NO _____	Display 1 	Display 2 (if applicable) 	Name _____ Location _____ IP address (When on SeaTalk ^{hs} only) _____ Video connection (delete as appropriate) DVI / VGA _____ SeaTalk ^{hs} (delete as appropriate) YES / NO _____		
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%; padding: 5px; text-align: center;"> Keyboard  SeaTalk^{ng} </td> <td style="padding: 5px;"> Serial number _____ Location _____ Wireless (delete as appropriate) YES / NO _____ </td> </tr> </table>				Keyboard  SeaTalk^{ng}	Serial number _____ Location _____ Wireless (delete as appropriate) YES / NO _____
Keyboard  SeaTalk^{ng}	Serial number _____ Location _____ Wireless (delete as appropriate) YES / NO _____				
GPM400 processor  Serial Number _____ Location _____ Master GPM (delete as appropriate) YES / NO _____	SeaTalk^{hs} switch  Serial number _____ Location _____	GPM400 processor  Serial number _____ Location _____ Master GPM (delete as appropriate) YES / NO _____			

D10029-1

Nav station information


Nav station name _____ Nav station location _____

Name _____
Location _____
IP address (When on SeaTalk^{hs} only) _____
Video connection (delete as appropriate)
DVI / VGA _____
SeaTalk^{hs} (delete as appropriate)
YES / NO _____

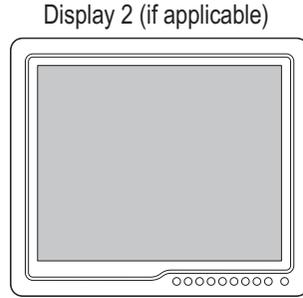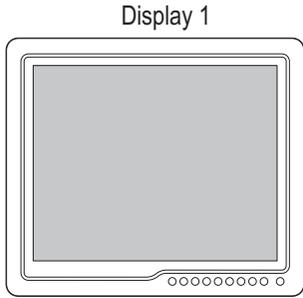


Name _____
Location _____
IP address (When on SeaTalk^{hs} only) _____
Video connection (delete as appropriate)
DVI / VGA _____
SeaTalk^{hs} (delete as appropriate)
YES / NO _____

Keyboard

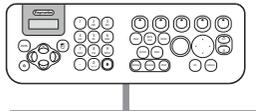


Serial number _____
Location _____
Wireless (delete as appropriate)
YES / NO _____

GPM400 processor

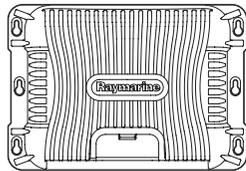


Serial Number _____
Location _____
Master GPM (delete as appropriate)
YES / NO _____

SeaTalk^{hs} switch

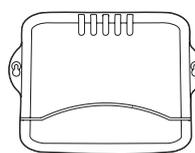







Serial number _____
Location _____

GPM400 processor

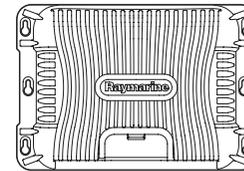

Serial number _____
Location _____
Master GPM (delete as appropriate)
YES / NO _____

D10029-1

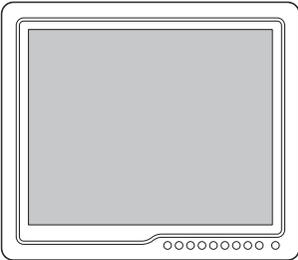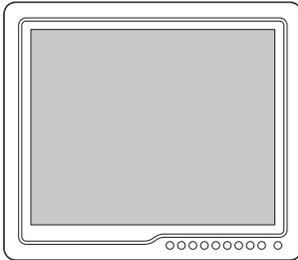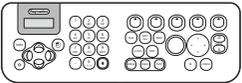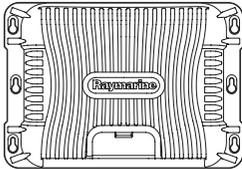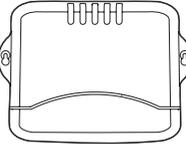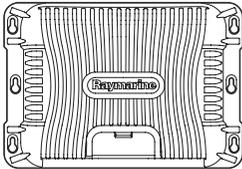Nav station information		Nav station name _____	Nav station location _____
<p>Name _____</p> <p>Location _____</p> <p>IP address (When on SeaTalk^{hs} only) _____</p> <p>Video connection (delete as appropriate) DVI / VGA _____</p> <p>SeaTalk^{hs} (delete as appropriate) YES / NO _____</p>	<p>Display 1</p> 	<p>Display 2 (if applicable)</p> 	<p>Name _____</p> <p>Location _____</p> <p>IP address (When on SeaTalk^{hs} only) _____</p> <p>Video connection (delete as appropriate) DVI / VGA _____</p> <p>SeaTalk^{hs} (delete as appropriate) YES / NO _____</p>
<div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center; margin-right: 20px;"> <p>Keyboard</p>  <p>SeaTalk^{ng}</p> </div> <div style="margin-left: 20px;"> <p>Serial number _____</p> <p>Location _____</p> <p>Wireless (delete as appropriate) YES / NO _____</p> </div> </div>			
<p>GPM400 processor</p>  <p>Serial Number _____</p> <p>Location _____</p> <p>Master GPM (delete as appropriate) YES / NO _____</p>	<p>SeaTalk^{hs} switch</p>  <p>Serial number _____</p> <p>Location _____</p>	<p>GPM400 processor</p>  <p>Serial number _____</p> <p>Location _____</p> <p>Master GPM (delete as appropriate) YES / NO _____</p>	





D10029-1

Nav station information

Nav station name _____

Nav station location _____

Name	Location	Name	Location	Name	Location	Name	Location
IP address (when on SeaTalk ^{hs} only)	_____	IP address (when on SeaTalk ^{hs} only)	_____	IP address (when on SeaTalk ^{hs} only)	_____	IP address (when on SeaTalk ^{hs} only)	_____
Video (delete as appropriate)	DVI / VGA	Video (delete as appropriate)	DVI / VGA	Video (delete as appropriate)	DVI / VGA	Video (delete as appropriate)	DVI / VGA
SeaTalk ^{hs} (delete as appropriate)	YES / NO	SeaTalk ^{hs} (delete as appropriate)	YES / NO	SeaTalk ^{hs} (delete as appropriate)	YES / NO	SeaTalk ^{hs} (delete as appropriate)	YES / NO

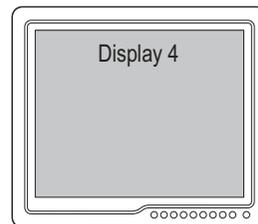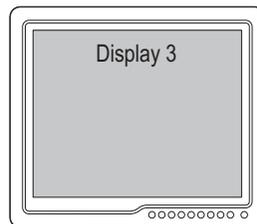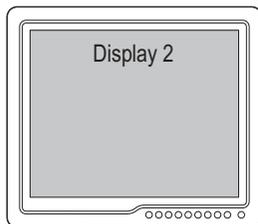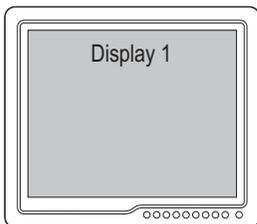

Keyboard Serial Number _____

Location _____

Wireless (delete as appropriate) YES / NO _____


SeaTalk^{ng}

Keyboard Serial Number _____

Location _____

Wireless (delete as appropriate) YES / NO _____


SeaTalk^{ng}

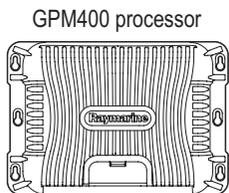

Serial Number _____

Location _____


Master GPM (delete as appropriate) YES / NO _____

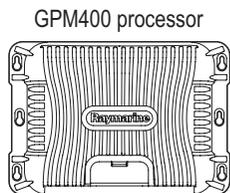

Serial Number _____


Location _____

Master GPM (delete as appropriate) YES / NO _____

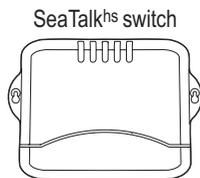

Serial Number _____


Location _____

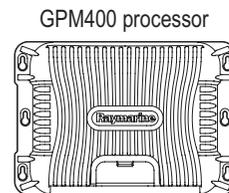

Serial Number _____

Location _____

Master GPM (delete as appropriate) YES / NO _____











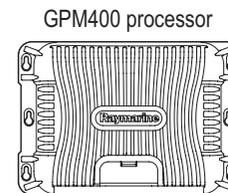


Serial Number _____

Location _____

Master GPM (delete as appropriate) YES / NO _____

D10575-1

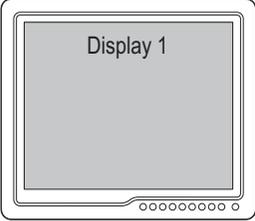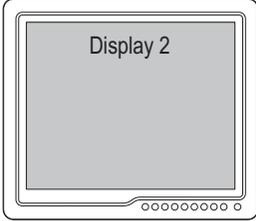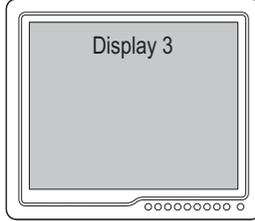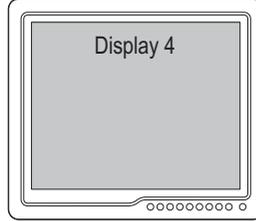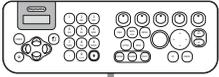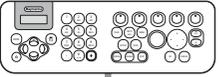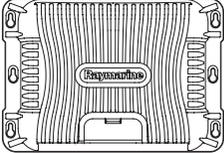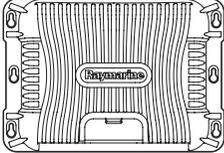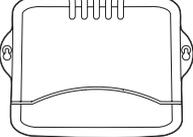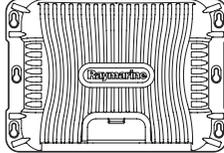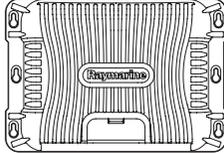Nav station information		Nav station name _____		Nav station location _____	
Name _____	Location _____	Name _____	Location _____	Name _____	Location _____
IP address (when on SeaTalk ^{hs} only) _____		IP address (when on SeaTalk ^{hs} only) _____		IP address (when on SeaTalk ^{hs} only) _____	
Video (delete as appropriate) _____	DVI / VGA _____	Video (delete as appropriate) _____	DVI / VGA _____	Video (delete as appropriate) _____	DVI / VGA _____
SeaTalk ^{hs} (delete as appropriate) _____	YES / NO _____	SeaTalk ^{hs} (delete as appropriate) _____	YES / NO _____	SeaTalk ^{hs} (delete as appropriate) _____	YES / NO _____
					
 Keyboard Serial Number _____ Location _____ Wireless (delete as appropriate) _____ YES / NO _____ SeaTalk ^{ng}		 Keyboard Serial Number _____ Location _____ Wireless (delete as appropriate) _____ YES / NO _____ SeaTalk ^{ng}			
					
Serial Number _____	Serial Number _____	Serial Number _____	Serial Number _____	Serial Number _____	
Location _____	Location _____	Location _____	Location _____	Location _____	
Master GPM (delete as appropriate) _____	Master GPM (delete as appropriate) _____		Master GPM (delete as appropriate) _____	Master GPM (delete as appropriate) _____	
YES / NO _____	YES / NO _____		YES / NO _____	YES / NO _____	

D10575-1

Appendix C - Spares and accessories

Note: Parts marked with an asterisk * are supplied as standard with certain G-Series equipment. See [Chapter 3: Packs and contents](#). [Page 23](#) for details.

Cables

The following cables are available as accessories:

Description	Part No.
Marine monitor cables	
5 m (16.4 ft) DVI to DVI (digital) cable	E06021
10 m (32.8 ft) DVI to DVI (digital) cable	E06022
500 mm (19.69 in) DVI to VGA (analogue) cable	E06053
1.5 m (4.9 ft) VGA to VGA cable	R08130
5 m (16.4 ft) VGA to VGA cable*	R08174*
10 m (32.8 ft) VGA to VGA cable	R08296
20 m VGA to VGA cable	R08297
SeaTalk	
1.5 m (4.9 ft) SeaTalk/Alarm Out cable*	E55054*
SeaTalk^{hs} cables	
1.5 m (4.9 ft) SeaTalk ^{hs} network cable	E55049
5 m (16.4 ft) SeaTalk ^{hs} network cable	E55050
10 m (32.8 ft) SeaTalk ^{hs} network cable	E55051
15 m (49.2 ft) SeaTalk ^{hs} network cable	A62135
20 m (65.6 ft) SeaTalk ^{hs} network cable	E55052

Description	Part No.
1.5 m (4.9 ft) SeaTalk ^{hs} patch cable	E06054
5 m (16.4 ft) SeaTalk ^{hs} patch cable	E06055
10 m (32.8 ft) SeaTalk ^{hs} patch cable	E06056
15 m (49.2 ft) SeaTalk ^{hs} patch cable	A62136
20 m (65.6 ft) SeaTalk ^{hs} patch cable	E06057
SeaTalk^{ng} cables / connectors	
400 mm (15.75 in) SeaTalk ^{ng} backbone cable	A06033
400 mm (15.75 in) SeaTalk ^{ng} spur cable	A06038
1 m (3.3 ft) SeaTalk ^{ng} spur cable*	A06039*
3 m (9.8 ft) SeaTalk ^{ng} spur cable	A06040
5 m (16.4 ft) SeaTalk ^{ng} spur cable	A06041
1 m (3.3 ft) SeaTalk ^{ng} spur cable (bare ends)	A06043
3 m (9.8 ft) SeaTalk ^{ng} spur cable (bare ends)	A06044
SeaTalk ^{ng} T-Piece connector*	A06028*
NMEA 2000 cables	
1.5 m (4.9 ft) SeaTalk ^{ng} to DeviceNet male	A06046
NMEA 0183 cables	
1.5 m (4.9 ft) NMEA 0183 cable*	R08004*
Power cables	
1.5 m (4.9 ft) Power cable*	R08003*

Description	Part No.
Audio/Entertainment	
1.5 m (4.9 ft) GVM400 Audio cable*	R08275*
1.5 m (4.9 ft) GVM400 S-Video cable*	R08274*
3 m (9.8 ft) G-Series Audio out cable*	R08266*
15 m (49.2 ft) G-Series Audio out cable	R08298

Spare parts



Service and Maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized Raymarine dealers. Unauthorized repair may affect your warranty.

GPM400 processor module spares

Description	Part No.
US Cartography Hard Drive	R08267
EU Cartography Hard Drive	R08268
ROW Cartography Hard Drive	R08269
Hard Drive Cable	R08270
COM Express CPU Module Assembly	R08271
GPM400 Baseboard	R08272
GPM400 Connector Panel Assembly	R08273
Chart Door (encl. seal)	R08002

GPM400 internal Fan Assembly	R08299
GPM400 Main Fan Assembly	R08300
SeaTalk NG Locking Collar (white)	A06051
GPM400 Install Pack	R08295

Keyboard spares

Description	Part No.
Keyboard	
Sun cover	R08307
Rear cover / mounting bracket	R08308
Screw pack	R08309

Wireless upgrade kit

Keyboard Charge Cable 2.5m	R08310
STNG Bulkhead Mounting Cable	R08311
Battery pack	R08312
Allen Head M3 Screws (4x)	R08313
Mounting Plate	R08314
Connector Cover	R08315
Mounting Screws (self tapping) 3x	R08316
Dust Cap	R08317
Allen key	R08338

GVM400 video module spares

Description	Part No.
--------------------	-----------------

GVM Connector Cover	R08276
---------------------	--------

GVM install pack	R08318
------------------	--------

SeaTalk^{hs} Switch module spares

Description	Part No.
--------------------	-----------------

SeaTalk ^{hs} Swtich	E55058
------------------------------	--------

Index

Numerics

3rd party monitors 39

A

Accessories 117

AIS

- checks 88
- connection 53

Alarm

- cables 51
- connection 50

Alarm buzzer 29, 67

- installation 67

Alarm output 50

Audio

- cables 46

Audio output connection 46

Autopilot

- SeaTalk connection 50

AWG 36

B

Bearing alignment 84

Breaker

- rating 35
- sharing 34

Breakers

- turn on 70, 74

C

Cable

- audio 46
- charging 43
- digital radar 49
- gauge 36

general instructions 32

keyboard 42

NMEA 0183 52

power 35

routing 32

SeaTalk / alarm 51

SeaTalkhs 47

shielding 32

strain relief 32

types and length 32

Cable entry 58

Cables 31

spares 117

video/entertainment 46

Cables and connections 31

Cautions 7

Charging

cable 43

keyboard 64

Check system 70

Chinese 82

Circuit

isolation 32

protection 35

Cleaning 7

Clearances

GPM400 60

Command Center Keyboard - see Keyboard

Commissioning 81

introduction 13

Compass

swing 82

Compass heading 82

Configuration 74

Connection

digital radar 49

DSM 48

- keyboard 40
- monitor 38
- NMEA 2000 55
- SeaTalkng 54
- Connections 31, 37
- Contents
 - pack 23
- Current Master 76

D

- Danish 82
- Dashboard
 - cable 43
- Data
 - digital data 89
 - troubleshooting 97
- Digital radar
 - cables 49
 - connection 49
- Digital sounder
 - connection 48
- Disclaimer 9
- Displays - See monitors
- DSM400
 - connection 48
 - LED indications 100
- Dutch 82
- DVI 39, 46

E

- EMC installation guidelines 7, 32
- English (UK) 82
- English (US) 82
- Entertainment
 - cables 46
 - connections 43
- Entertainment system 21
- Environment
 - GPM400 60

- keyboard 61
- keyboard - wireless upgrade 62

F

- Fastheading
 - connection 52
- ferrites 8
- Finnish 82
- Fishfinder
 - checks 86
 - troubleshooting 98
- French 82
- Fuse 35
 - in-line 34

G

- Gauge
 - cable 36
- German 82
- GPM400
 - checks 70
 - connections 37
 - installation 59
 - LED indications 99
 - master 37
 - pack items 24
 - power cable 36
 - Spares 118
 - specification 103
- GPM400 processor 37
- GPS
 - checks 85
 - connection 49
 - SeaTalk connection 50
 - status icon 85
 - troubleshooting 95
- Greek 82
- Grounding 34
- GVM400

- checks 70
- installation 66
- LED indications 100
- Pack items 25
- power cable 36
- spares 119
- specification 104
- GVM400 Video Module 66

H

- Handbook information 12
- HDOP 86
- High voltage
 - warning 7

I

- Icelandic 82
- Ignition hazards 58
- Initial Setup 73
- Initialize radar 83
- In-line fuse 34
- Install
 - introduction 12
- Installation
 - warning 7
- Installation and mounting 57
- Instruments
 - SeaTalk connection 50
- IP Address
 - monitor 39
- Isolation 32
- Italian 82

J

- Japanese 82

K

- Keyboard
 - assign 78
 - cables 42
 - checks 70
 - connections 40
 - dimensions 61
 - installation 60
 - pack items 26
 - spares 118
 - specification 105, 106
 - troubleshooting 93
 - wired 40, 41
 - wireless 41
 - wireless upgrade kit 27
- Keyboard Configuration 78
- Korean 82

L

- Language setting 82
- LEDs 98
- Linearize the compass 82
- Loads
 - circuit 35
- Local GPM 76
- Location
 - equipment 58
- Loops
 - ground 34

M

- Master GPM 37, 50
 - select 75
- Monitor
 - 3rd party 39
 - cables 39
 - checks 70
 - connections 38

- power cable 36
- repeat 38
- Monitor connections 38
- Monitors
 - assign to a nav station 77
 - installation 65
 - pack items 28
 - troubleshooting 92
- Mounting 57
 - alarm buzzer 67
 - GPM400 60
 - GVM400 66
 - keyboard 61
 - surface 58

N

- Nav Station 74
 - configure 77
 - typical arrangement 75
- Navtex 88
- Network
 - SeaTalkhs 47
- Network system 19
- NMEA 0183
 - cables 52
 - connections 51
 - GPS 49
 - set up 88
- NMEA 2000 connections 55
- Norwegian 82

P

- Packs and contents 23
- Parking
 - radar 85
- Patch
 - cable 48
- Plan your installation 12
- Portuguese 82

- Positive ground 7, 34
- Power
 - cables 35
 - distribution 33
- Power supply
 - SeaTalk / alarm output 50
- Power up
 - test 70
- Powering up 74
 - precautions 69, 74
 - sequence 70
- Power-up
 - troubleshooting 92

R

- Radar
 - cables 49
 - checks 84
 - connection 49
 - initialize 83
 - setup 83
 - troubleshooting 94
 - warning 7
- Repeat monitors 38
- Routing cables 32
- Russian 82

S

- Schematic diagram 12, 32, 73
 - example 109
- SeaTalk
 - cables 51, 55
 - connection 50
 - GPS 49
- SeaTalkhs
 - cables 47
 - compatible devices 47
 - connections 47
 - devices 47

- LED indications 98
- Switch 47
 - switch checks 70
 - video connection 43
- SeaTalkhs network 47
- SeaTalkhs Network cables 47
- SeaTalkng
 - connections 54
 - keyboard connection 42
 - typical system 54
 - Wireless basestation 28
- Select Master GPM 76
- Setup
 - initial 73
- Shielding 32
- Site survey 65
- Spanish 82
- Spares 117
- Specification 103
 - monitors 106
- Status icon
 - GPS 85
- Status LEDs 98
- Status page
 - GPS 85
- Strain relief 32
- Sun covers 7
- Suppression ferrites 8
- S-Video
 - cable 46
- Swedish 82
- System
 - checks 70
- System overview 16

T

- Technical specification 103
- Thermal breaker 35
- Transmit

- radar 83
- Troubleshooting 91, 92
- Typical systems 15

V

- Ventilation 58
- VGA 39, 46
- Video
 - cables 46
 - connections 43
 - set up 87
 - troubleshooting 96
- Video output connection 46

W

- Warnings and cautions 5, 7
- Warranty 8
- WEEE 8
- Wired keyboard 40
- Wireless
 - keyboard 41
- Wireless basestation 43, 64
 - installation 64
 - pack items 28
- Wireless coverage 65
- Wireless upgrade
 - installation 62
- Wireless upgrade kit 62
 - pack items 27

Raymarine®

Raymarine plc

Anchorage Park, Portsmouth,
Hampshire, PO3 5TD, UK
Tel: +44 (0) 23 9269 3611
Fax: +44 (0) 23 9269 4642
www.raymarine.com

Raymarine Inc.

21 Manchester Street, Merrimack,
New Hampshire 03054 USA,
Tel: +1 603 881 5200
Fax: +1 603 864 4756
www.raymarine.com