


● **Power saving "ON"** (default setting)

Power consumption is kept to a minimum to prevent battery depletion. You should select the "ON" setting when you are using alkaline batteries.

- If the camera is not used for approximately 30 seconds, the LCD switches off temporarily to reduce power consumption (Sleep mode).
- Once the camera is in sleep mode, the camera automatically switches off if it is not used for approximately 90 seconds.
- The charging time for the flash increases slightly because the flash charging power is reduced.

● **Power saving "OFF"**

Batteries are more likely to run flat since no power reduction measures (sleep mode, etc.) are used. However, this function automatically switches the camera off if the camera is not used for approximately 2 minutes.

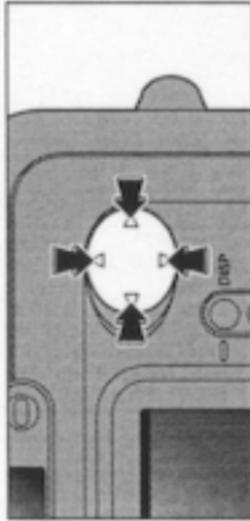

To bring the camera out of sleep mode so that it is ready to shoot, press ◀, ▶, ▲ or ▼. This is useful since the camera is ready to shoot more quickly than when it is switched off and then on again. You can also take pictures when the camera is in sleep mode simply by pressing the shutter button.

- The camera does not automatically switch off when a USB connection is being used.
- You can also bring the camera out of sleep mode by pressing buttons other than ◀, ▶, ▲ or ▼.

Sleep mode does not operate when the LCD monitor is switched off, during playback mode or during SET-UP, but the camera does automatically switch off if it is not used for approximately 2 minutes.

PC Connection describes how to set up a USB connection and provides an overview of the functions available using a USB connection. Refer also to the Software Quick Start Guide booklet.

DSC Mode

This mode provides a simple way to read images from a SmartMedia and store images on to a SmartMedia (→P.58).

PC-CAM (camera) Mode

This function allows you to conduct videoconferencing sessions between PCs connected to the Internet. This function can also be used to record video on a PC (→P.60).

- Videoconferencing is not supported on Macintosh computers.

◆ **The First Time You Connect Your Camera to a Computer** ◆

You must set up your computer as described below. Refer also to the Software Quick Start Guide booklet.


Windows

- ① Load the enclosed CD-ROM into your PC's CD-ROM drive and install the application software.
- ② With the CD-ROM loaded into your PC, select DCS connection mode and install the driver software.
- ③ With the CD-ROM loaded into your PC, select PC CAMERA connection mode and install the driver software.


Macintosh

Load the enclosed CD-ROM into the CD-ROM drive and install all the software.

CONNECTING AT DSC MODE

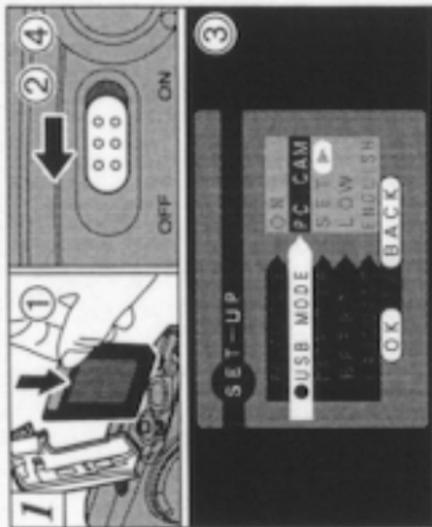

- 1 Load a SmartMedia containing photographed images into your camera.
- 2 Slide the Power switch sideways to switch the camera on.
- 3 Set the "USB MODE" setting in the "SET-UP" menu to "DSC" (P.52, 53).
- 4 Slide the Power switch sideways to switch the camera off.

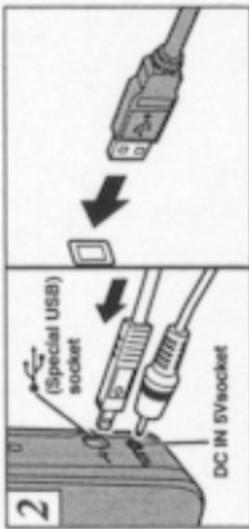


- 1 Switch your computer on.
- 2 Use the special USB cable to connect the camera to your computer.
- 3 Switch the camera on.

If you are connecting your camera to a Windows PC for the first time, the "Add New Hardware Wizard" window opens and driver software installation begins (Software Quick Start Guide booklet).

Always use the prescribed procedure when disconnecting or switching off the camera (P.52).

- 4 You should use the AC power adapter when the camera is connected to your computer (P.18). Loss of power during data transmission can prevent successful data downloading.
- 5 Ensure that you insert the USB cable plugs into the correct sockets.
- 6 Push the cable plugs firmly into the connector sockets.

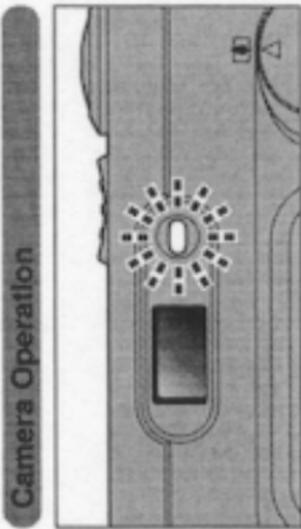

Camera Operation

- The viewfinder lamp alternately blinks green and orange while the camera is communicating with your computer.
- "DSC" appears on the LCD monitor.
- The camera automatically switches off when a USB connection is made.




Computer Operation

- FinePixViewer automatically starts up.
- Screen for Windows 98 SE
- A removable disk icon appears and you can use your computer to transfer files to and from the camera.
- Removable Disk (F:)
- Macintosh
- untitled


If the above operations do not occur, you do not have the required software programs or drivers installed on your computer. Refer to the Software Quick Start Guide booklet and complete the required computer setup procedures. Then reconnect the camera to your computer.

- 7 Switch the camera off when you change the SmartMedia (P.4).
- 8 Do not disconnect the USB cable when the camera is communicating with the computer. See P.4 for information on the disconnection procedure.

CONNECTING AT PC-CAMERA MODE

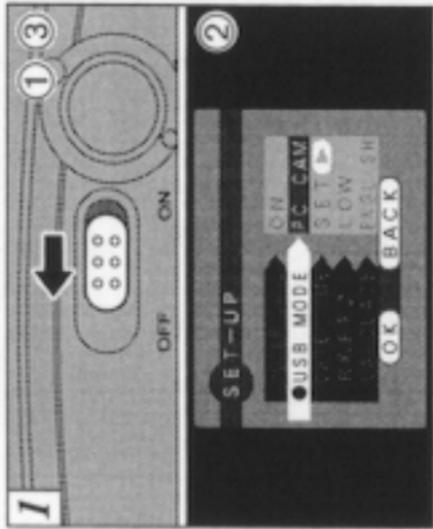

- Slide the Power switch sideways to switch the camera on.
- Set the "USB MODE" setting in the "SET-UP" menu to "PC CAM" (→P.52, 53).
- Slide the Power switch sideways to switch the camera off.

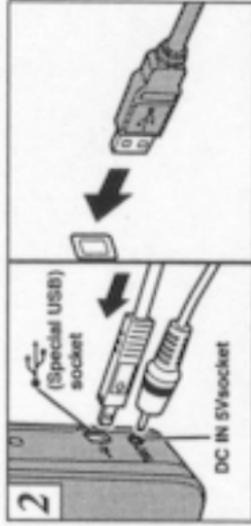


- Switch your computer on.
- Use the special USB cable to connect the camera to your computer.
- Switch the camera on.

If you are connecting your camera to a Windows PC for the first time, the "Add New Hardware Wizard" window opens, and driver software installation begins (→Software Quick Start Guide booklet).

Always use the prescribed procedure when disconnecting or switching off the camera (→P.62).

- You should use the AC power adapter when the camera is connected to your computer (→P.18). Loss of power during data transmission can prevent successful data downloading.
- Ensure that you insert the USB cable plugs into the correct sockets.
- Push the cable plugs firmly into the connector sockets.


Camera Operation

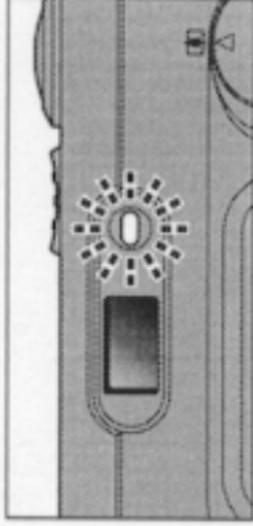

- The viewfinder lamp alternately blinks green and orange while the camera is communicating with your computer.
- "PC CAMERA" appears on the LCD monitor.
- The camera automatically switches off when a USB connection is made.

Computer Operation

- FinePixViewer automatically starts up and the Picture Hello window opens (Windows only).

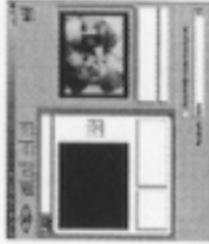

* Screen for Windows 98 SE

- You can use software such as VideoImpression to view live images.



* Macintosh screen


If the above operations do not occur, you do not have the required software programs or drivers installed on your computer. Refer to the Software Quick Start Guide booklet and complete the required computer setup procedures. Then reconnect the camera to your computer.

1

2

DISCONNECTING FROM THE PC

Always follow the procedure below before disconnecting the camera from your PC.

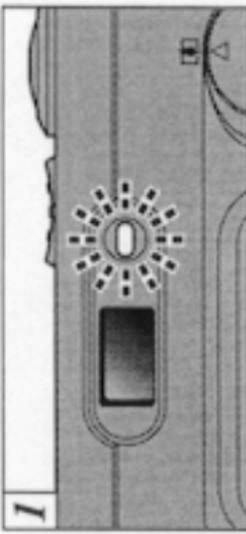

1

① Quit all applications (FinePixViewer, VideoImpression, etc.) that are using the camera.

② Check that the viewfinder lamp is glowing green (that the camera is not communicating with the computer).

For a PC CAMERA connection, proceed to step **3**.

③ Even after the "Copying..." message is no longer displayed on your computer, communication with the camera may still be in progress. Always check that the viewfinder lamp on the camera is glowing green and is no longer flashing.


2 Perform the steps shown below before you switch the camera off. This procedure differs depending on the operating system software (or PC) you are using.

Windows 98 or 98 SE

No PC operation is needed.

Windows Me

Left-click the Eject icon in the taskbar and eject "USB disk".

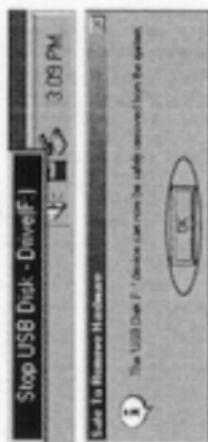


Windows 2000 Professional

Left-click the Eject icon in the taskbar and eject "USB Mass Storage".



Macintosh

Drag the "Removable drive" icon on the desktop to the Trash.

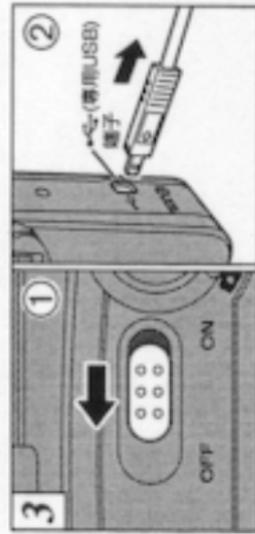


- ① Switch the camera off.
- ② Unplug the special USB cable from the camera.

④ If you are using Windows, you cannot disconnect the camera by right-clicking the removable disk icon (the camera) and selecting "Eject". Always follow the proper procedure as given above before disconnecting the camera from your PC.

System Expansion Options

- ▶ By using the FinePix A101 together with other optional FUJIFILM products, your system can be expanded to fill a wide range of uses.

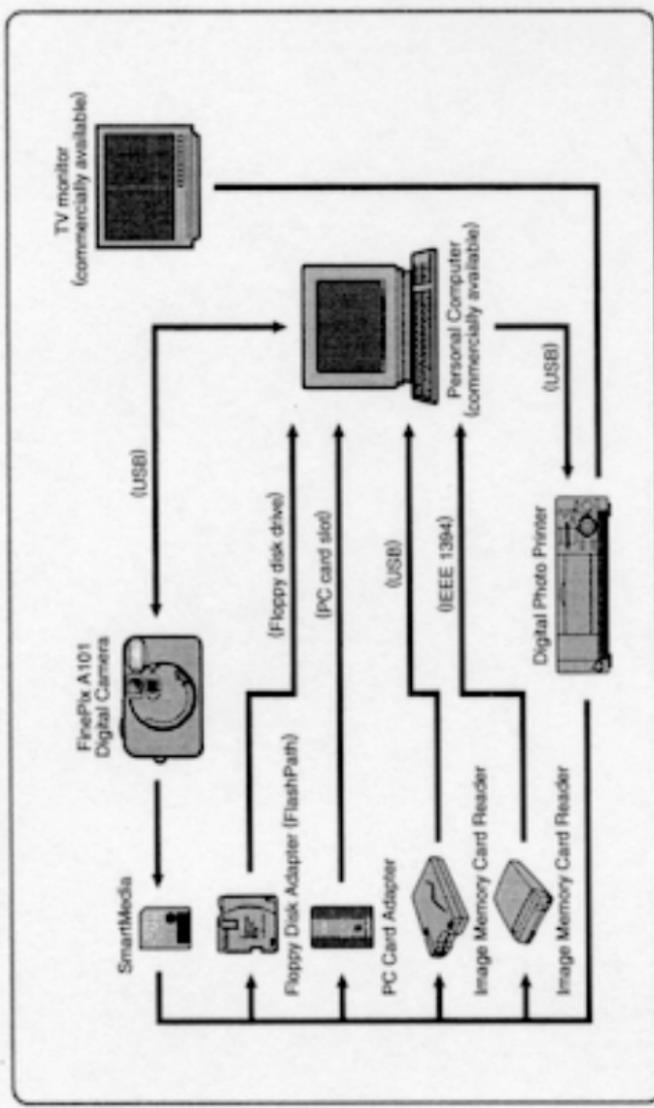

Accessories Guide

- ▶ The optional accessories (sold separately) can make taking pictures with the FinePix A101 even easier. For information on how to attach and use the accessories, refer to the instructions provided with the accessory used.

- **SmartMedia™**

These are separately available SmartMedia cards.

Use the following SmartMedia:

- MG-4S: 4MB, 3.3V
- MG-8S: 8MB, 3.3V
- MG-16S/SW: 16MB, 3.3V
- MG-32S/SW: 32MB, 3.3V
- MG-64/SW: 64MB, 3.3V
- MG-128SW: 128MB, 3.3V
- ※ Some 3.3V SmartMedia are labelled as "3V" or "1D" cards.



- **AC Power Adapter AC-3V**

Use the AC-3V when taking pictures for a long period of time or when the FinePix A101 is connected to a personal computer.

- ※ The Shapes of the AC power adapter, the plug and socket outlet depend on the country.



- **Fujifilm Rechargeable Battery 2HR-3UF**

The 2HR-3UF includes 2 pieces of high-capacity AA-size Nickel Metal Hydride batteries.



- **Fujifilm Battery charger with Battery BK-NH (Not Available in U.S.A. / Canada)**

The BK-NH includes the quick battery charger BCH-NH and 2 Ni-MH batteries.

The BCH-NH can charge 2 Ni-MH batteries in approximately 110 minutes.

Up to 4 Ni-MH or Ni-Cd batteries can be charged simultaneously.



- **SC-**

This is a special deerskin case that protects the camera against soiling, dust and minor impacts when it is being carried.

Accessories Guide

● FD-A2 Floppy Disk Adapter (FlashPath)

This adapter is the same size and shape as a 3.5-inch floppy disk. You can copy the images on a SmartMedia to your PC simply by loading the SmartMedia into the floppy disk adapter and then inserting the adapter into your floppy disk drive.

	Compatible OS	Compatible SmartMedia
FD-A2	Windows 95/98/98SE/Me/NT4.0 Mac OS 7.6.1 to 9.1	5V/3.3V, 2MB to 128MB



● SM-R2 Image Memory Card Reader

The SM-R2 provides a quick and easy way to transfer images back and forth between your PC and an image memory card (SmartMedia). The SM-R2 uses the USB interface for high-speed file transfer.

- Compatible with Windows 98/98SE, Windows Me, Windows 2000 Professional or iMac and models that support USB as standard.



● DM-R1 Image Memory Card Reader

This device provides a simple way to transfer image data in either direction between your PC and an image memory card (SmartMedia or CompactFlash Type II (Microdrive-compatible)).

- The IEEE 1394 interface provides high-speed data transfer.
- Compatible with Windows 98SE, Windows 2000 Professional (read-only), iMacDV and Power Macintosh PCs with FireWire as a standard feature. Mac OS 8.5.1 to 9.0



● PC-AD3 PC Card Adapter

The PC Card Adapter allows the SmartMedia to be used as a PC Card Standard ATA-compliant (PCMCIA 2.1) PC card (Type II).

- Compatible with SmartMedia of 5V/3.3V, 2MB to 128MB.



Notes on Using Your Camera Correctly

▶ Be sure to read this information in conjunction with "Safety Notes" (→P.79), to ensure that you use your camera correctly.

■ Places to Avoid

Do not store or use the camera in the following types of locations:

- Very humid, dirty or dusty places
- In direct sunlight or in places subject to extreme temperature rises, such as in a closed car in summer. Extremely cold places

- Places subject to strong vibrations

- Places affected by smoke or steam

- Places subject to strong magnetic fields (such as places near motors, transformers or magnets)

- In contact with chemicals such as pesticides or next to rubber or vinyl products for long periods of time

■ Do not expose the camera to sand.

The FinePix A101 is particularly and adversely affected by sand. In sandy locations such as beaches or deserts, or in locations where there is wind borne sand, ensure that the camera is not exposed to sand. This can cause faults that may be irreparable.

■ Notes on Condensation

If the camera is carried suddenly from a cold location into a warm place, water droplets (condensation) may form on the inside of the camera or on the lens. When this occurs, switch the camera off and wait an hour before using the camera. Condensation may also form on the SmartMedia

card. In this event, remove the SmartMedia and wait a short time before using it again.

■ When the Camera is Unused for Long Periods

If you do not intend to use the camera for a long period, of time remove the batteries and the SmartMedia card before storing the camera.

■ Cleaning Your Camera

- Use a blower brush to remove dust from the lens and LCD surface and then wipe lightly with a soft, dry cloth. If any soiling remains, apply a small amount of lens cleaning liquid to a piece of FUJIFILM lens cleaning paper and wipe gently.
- Do not scratch hard objects against the lens, LCD monitor screen or viewfinder as these surfaces are easily damaged.

- Clean the body of the camera with a soft dry cloth. Do not use volatile substances such as thinners, benzine or insecticide, as these may react with camera body and cause deformation or remove the coating.

■ Using the Camera Overseas

When travelling overseas, do not place your camera in the check-in baggage. Baggage handling at airports may subject baggage to violent shocks, and the camera may be damaged internally even when no external damage is visible.

Notes on the Power Supply

Applicable Batteries

- AA-size alkaline, Ni-MH (nickel metal hydride) can be used with this camera.
- Do not use AA-size manganese or lithium batteries in your FinePix A101 because the heat generated by the batteries could damage the camera or cause malfunctions.
- Because different brands of alkaline batteries have different capacities, the life of some batteries (the length of time for which they can be used) may be considerably shorter than that of the alkaline batteries supplied with this camera.

Notes on the Batteries

- Incorrect use of the batteries could cause them to leak, become hot, ignite or burst. Always observe the precautions given below.
- Do not heat the batteries or throw them into a fire.
 - Do not carry or store a battery with metal objects such as necklaces or hairpins that could come into contact with the metal positive (+) and negative (-) poles of the battery.
 - Do not expose the batteries to fresh or sea water, and take particular care to keep the terminals dry.
 - Do not attempt to deform, disassemble or modify the batteries.
 - Do not attempt to peel off or cut the battery casing.
 - Do not drop, strike or otherwise subject the batteries to strong impacts.

- Soiling such as fingerprints on the battery terminals can markedly reduce the number of available shots. Carefully wipe the battery terminals clean with a soft dry cloth before loading the batteries.

⚠ If any liquid at all leaks from the batteries, wipe the battery compartment thoroughly and then load new batteries.
⚠ If any battery fluid comes into contact with your hands or clothing, flush the area thoroughly with water. Note that battery fluid can cause loss of eyesight if it gets in your eyes. If this occurs, do not rub your eyes. Flush the fluid out with clean water and contact your physician for treatment.

Disposing of Batteries

When disposing of batteries, do so in accordance with your local waste disposal regulations.

Notes on Small Rechargeable Batteries (Ni-MH batteries)

- Always use the special battery charger to charge AA-size Ni-MH batteries. Charge the batteries as described in the instructions provided with the battery charger.
- Do not use the battery charger to charge batteries other than those specified for use with the charger.
- Note that the batteries may feel warm immediately after being charged.
- Ni-MH batteries are not charged at shipment. Be sure to charge the batteries before using them.
- The camera mechanism is such that it draws a minute amount of current even when the camera is switched off. Take particular care not to leave Ni-MH batteries in the

camera for a long period of time as they can become excessively discharged and no longer be usable even when charged.

- Ni-MH batteries self-discharge even when not used. Always charge Ni-MH batteries before using them. If the time for which a battery provides power shortens markedly when it has been correctly charged, this indicates that the battery has reached the end of its effective life and should be replaced.

Notes on Using the AC Power Adapter

Always use the AC-3V AC Power Adapter AC-3V (sold separately) with the FinePix A101 Digital Camera.

- The use of an AC power adapter other than the AC-3V could result in damage to your camera.
- Ensure that you do not touch the contact areas on the AC power adapter against any other metal object as this could cause a short circuit.
 - Do not plug the AC power adapter into the DIGITAL socket as this could damage your camera.
 - Do not plug in the AC power adapter while you are operating the camera using batteries. Switch the camera off first.
 - Do not load the batteries while you are operating the camera using the AC power adapter. Switch the camera off first.
 - If you disconnect the AC power adapter when there are no batteries in the camera, the date may be cleared. If this occurs, reset the date.

Notes on the SmartMedia™

■ SmartMedia

The SmartMedia card supplied with your FinePix A101 camera is a new image recording medium developed especially for use in digital cameras. Each SmartMedia card contains a built-in semiconductor memory chip (NAND flash memory) which is used for storing digital image data.

Because the data is stored electronically, the stored image data can be erased from the card and new data recorded.

■ SmartMedia with IDs

The SmartMedia ID is a SmartMedia that has an individually assigned identification number. SmartMedia ID cards can be used with devices that use ID numbers for copyright protection or other purposes. This camera accepts SmartMedia ID cards in the same way as conventional SmartMedia cards.

■ Storing Data

In the situations listed below, recorded data may be erased (destroyed). Please note that Fuji Photo Film Co., Ltd. accepts no responsibility whatsoever for the loss (destruction) of recorded data.

- * When the SmartMedia is used incorrectly by the owner or a third party
- * When the SmartMedia is exposed to static electricity or electrical noise

- * When the SmartMedia cover is opened or the SmartMedia removed and the camera is then switched off during data recording, during data erasing (SmartMedia formatting) or during frame advance when images are being played back.

Back up important data onto another medium. (MO disk, floppy disk, hard disk, etc.)

■ Notes on Handling SmartMedia

- Take care to hold the SmartMedia straight when you load it into your camera.
- Never remove the SmartMedia or switch the camera off during data recording, during data erasing (SmartMedia formatting) or during frame advance when images are being played back. These actions could result in damage to the SmartMedia.
- Use only the SmartMedia specified for use with the FinePix A101. The use of other SmartMedia could damage the camera.
- SmartMedia are precision electronic devices. Do not bend, drop, or subject SmartMedia to excessive shocks.
- Do not use or store SmartMedia in environments likely to be affected by strong static electricity or electrical noise.

- Do not use or store SmartMedia in very hot, humid or corrosive environments.
- Take care not to touch the SmartMedia's contact area or allow the area to become soiled. Use a dry lint-free cloth to wipe away any soiling that does occur.

- To avoid damage caused by static electricity, always use the special static-free case provided during transportation or storage, or keep the SmartMedia in a storage case if available.

- Do not carry SmartMedia in locations such as a trouser pocket. This could subject the SmartMedia to excessive force when you sit down, thereby damaging the SmartMedia.

- The SmartMedia may feel warm when it is removed from the camera after extended periods of picture taking or image viewing. This is normal and does not indicate a fault.

- Inserting a SmartMedia that is charged with static electricity into your camera may result in a camera malfunction. If this occurs, switch the camera off and then on again.

- Affix the label onto the designated area of the card. Do not use third-party labels as this can lead to problems when the card is inserted or removed.
- When you attach the label, take care that it does not cover any of the write-protect area.

■ Notes on Using SmartMedia with a PC

- If you intend to take photos using a SmartMedia that has been used on a PC, format the SmartMedia on your camera.

- When you format a SmartMedia in the camera and then shoot and record images, a directory (folder) is automatically created. Image data is then recorded in this directory.

- Do not change or delete the directory (folder) names or file names on the SmartMedia from your PC as this will make it impossible to use the SmartMedia in your camera.

- Always use the camera to erase image data on a SmartMedia.


- To edit image data, copy the image data to the PC's hard disk and then edit the copied data.



■ Specifications

Type	Image memory card for digital cameras (SmartMedia)
Operating voltage	3.3V
Operating conditions	Temperature: 0°C to +40°C (+32°F to +104°F) Humidity: 80% or less (condensation free)
Dimensions	37 mm x 45 mm x 0.76 mm (1.45 in. x 1.77 in. x 0.03 in.) (W x H x D)

Warning Displays

► The table below lists the warnings that are displayed on the LCD monitor

Warning Displayed	Explanation	Remedy
 (Lit red)	The camera battery is low on charge.	Replace the batteries.
	No SmartMedia is loaded, or it is loaded incorrectly.	Load the SmartMedia (3.3V) in the correct direction.
	<ul style="list-style-type: none"> •The SmartMedia is not formatted. •The SmartMedia contact area is soiled. •Camera fault. 	<ul style="list-style-type: none"> •Format the SmartMedia. •Wipe the contact area on the SmartMedia with a soft dry cloth. •Contact your FUJIFILM dealer.
	<ul style="list-style-type: none"> •The SmartMedia contact area is soiled. •The SmartMedia is damaged. •The SmartMedia format is incorrect. •Camera fault. 	<ul style="list-style-type: none"> •Wipe the contact area on the SmartMedia with a soft dry cloth. It may be necessary to format the SmartMedia. If the error message is still displayed, replace the SmartMedia. •Contact your FUJIFILM dealer.
	The SmartMedia is fully recorded.	Erase some images or use a SmartMedia that has ample free space.
	The SmartMedia is write-protected.	Use a SmartMedia that is not write-protected.

Warning Displayed	Explanation	Remedy
	<ul style="list-style-type: none"> •An attempt was made to playback a frame not recorded on this camera. •The SmartMedia contact area is soiled. •Camera fault. 	<ul style="list-style-type: none"> •Images cannot be played back. •Wipe the contact surface on the SmartMedia thoroughly with a soft, dry cloth. In some cases, you may have to format the SmartMedia. •Contact your FUJIFILM dealer.
	The frame number has reached 999-9999.	Take the shot using a formatted SmartMedia.
	<ul style="list-style-type: none"> •The data could not be recorded due to a SmartMedia error or a connection error between the SmartMedia and camera. •The photographed image cannot be recorded as it is too large to fit in the available space on the SmartMedia. 	<ul style="list-style-type: none"> •Re-insert the SmartMedia or switch the camera off and then on again. •Use a new SmartMedia.
	There is a strong likelihood of camera shake because the shutter speed is slow.	Use flash photography. However, a tripod should be used for some scenes and modes.
	A protected frame was erased.	Unprotect the frame using the camera on which the protection was first applied.

Warning Displays

Warning Displayed	Explanation	Remedy
	There is a print order specified for the image you attempted to erase.	To delete the image, cancel the DPOF settings and then try again.

Troubleshooting

▶ If you think the camera is faulty, check the following once more

Problem	Cause	Remedy
No power.	<ul style="list-style-type: none"> •The battery is exhausted. •The AC power adapter plug has come out of the power outlet. 	<ul style="list-style-type: none"> •Replace the batteries. •Plug the adapter back in.
Power cuts out during operation.	<ul style="list-style-type: none"> •The battery is exhausted. 	<ul style="list-style-type: none"> •Replace the batteries.
Battery runs out quickly.	<ul style="list-style-type: none"> •You are using the camera in extremely cold conditions. •The terminals are soiled. •The battery is flat. 	<ul style="list-style-type: none"> •Put the battery in your pocket or another warm place to heat it and then load it into the camera just before you take a picture. •Wipe the battery terminals with a clean, dry cloth. •Purchase new batteries.
No photograph is taken when the shutter button is pressed.	<ul style="list-style-type: none"> •No SmartMedia is loaded. •The SmartMedia is fully recorded. •The SmartMedia is write-protected. •The SmartMedia is not formatted. •The SmartMedia contact area is soiled. •The SmartMedia is damaged. •The Power Save function has switched the camera off. •The battery is exhausted. 	<ul style="list-style-type: none"> •Load a SmartMedia. •Insert a new SmartMedia or erase some unwanted frames. •Remove the write-protection. •Format the SmartMedia. •Wipe the SmartMedia contact area with a clean dry cloth. •Load a new SmartMedia. •Switch the camera on. •Purchase new batteries.

Troubleshooting

► If you think the camera is faulty, check the following once more

Problem	Cause	Remedy
I can't use the flash to take pictures.	<ul style="list-style-type: none"> •The flash is set to Suppressed Flash mode. •You pressed the shutter button while the flash was charging. •The battery is exhausted. 	<ul style="list-style-type: none"> •Set the flash to Auto, Red-Eye Reduction or Forced Flash mode. •Wait until charging is completed before pressing the shutter button. •Load a new battery.
The playback image is too dark, even though I used the flash.	<ul style="list-style-type: none"> •The subject is too far away. •Your finger was covering the flash. 	<ul style="list-style-type: none"> •Move closer to the subject. •Hold the camera correctly.
The image is blurred.	<ul style="list-style-type: none"> •The lens is dirty. •The lens is zoomed to telephoto in Macro mode. •The photographed subject was too dark. 	<ul style="list-style-type: none"> •Clean the lens. •Cancel Macro mode. •Try standing about 2 m (6.6 ft.) from your subject to take the picture.
There is speckling on the image.	<ul style="list-style-type: none"> •The shot was taken with a slow shutter speed (long exposure) in a high-temperature environment. 	<p>This is a characteristic of CCDs and does not indicate a camera fault.</p>
I can't format the SmartMedia.	<ul style="list-style-type: none"> •The SmartMedia is write-protected. 	<ul style="list-style-type: none"> •Remove the write-protection. Peel off the write-protect sticker.)
The ERASE ALL function does not erase all the frames.	<ul style="list-style-type: none"> •The frame is protected. •DPOF settings are specified for some frames. 	<ul style="list-style-type: none"> •Unprotect the frame using the camera on which the protection was first applied.

Problem	Cause	Remedy
Nothing happens when I use the Mode switch.	<ul style="list-style-type: none"> •Camera malfunction. •The Mode switch has been moved to another setting. •The battery exhausted. 	<ul style="list-style-type: none"> •Remove the battery, re-insert them and try again. •Set the Mode switch to the correct setting. •Purchase new batteries.
Frame erase does not erase the frame.	<ul style="list-style-type: none"> •The frame is protected. •DPOF settings are specified for some frames. 	<ul style="list-style-type: none"> •Cancel the DPOF settings for the frame and try again. •Unprotect the frame using the camera on which the protection was first applied.
When the camera is connected to a personal computer (PC), the shot image appears on the camera's LCD monitor.	<ul style="list-style-type: none"> •The special USB cable is not connected correctly to the PC or camera. •The PC is not switched on. 	<ul style="list-style-type: none"> •Set up the camera and USB cable correctly. •Switch the PC on.
The camera no longer works correctly.	<ul style="list-style-type: none"> •The camera has suffered an unforeseen problem. 	<ul style="list-style-type: none"> •Remove the battery briefly and then reload the battery and try again.

Specifications

System

- **Model**
Digital Camera
- **Pickup Elements**
1/2.7-inch square pixel CCD Effective pixels:
Approx. 1.25 million; Total pixels: Approx. 1.31 million
- **Resolution**
1280 x 960 pixels/640 x 480 pixels
- **File format**
JPEG (Exif Ver. 2.1),
* Design for Camera File system compliant, DPOF-compatible
- **Viewfinder**
Inverted Galileon finder; Frame coverage: 80%
- **Lens**
Fujinon optical fixed-focus lens F4.6/F9.5
- **Storage media**
SmartMedia (3.3V)
- **Number of frames recorded**

File Size Capacity	LCD 1280 x 960		LCD 640 x 480	
	FINE	NORMAL	BASIC	NORMAL
Image ¹ Data Size	Approx. 620KB	Approx. 320KB	Approx. 160KB	Approx. 125KB
4MB (MG-4S)	6	12	23	30
8MB (MG-8S)	12	25	46	61
16MB (MG-16S/SW)	25	49	89	122
32MB (MG-32S/SW)	50	99	180	247
64MB (MG-64S/SW)	101	198	361	497
128MB (MG-128S/SW)	204	398	725	997

- **LCD monitor**
1.6-inch, 55,000-pixel D-TFD
- **Self-Timer**
10 sec. timer clock

Input/Output Terminals

- **Digital**
USB (1) for image data output with a personal computer
- **DC Input**
Socket for specified AC power adapter

Power Supply and Others

- **Power supply**
Use one of the following:
 - 2AA-size alkaline batteries
 - 2AA-size Ni-MH (nickel metal hydride) batteries (sold separately)
 - AC Power Adapter AC-3V (sold separately)
- **No. of available shots using battery (battery life)**

Battery type	With LCD monitor ON	With LCD monitor OFF
Alkaline batteries	Approx. 80 frames	Approx. 150 frames
Ni-MH batteries HR-3UR	Approx. 150 frames*	Approx. 250 frames*

* With fully charged battery
This indicates the number of available frames shot consecutively at room temperature with a flash use rate of 50%. Note that these figures may vary depending on the ambient temperature and the amount of charge in the battery.

- **Conditions for use**
Temperature: 0°C to +40°C (+32°F to +104°F); 80% humidity or less (no condensation)
- **Camera dimensions (W/H/D)**
96.5 mm x 64.5 mm x 40.5 mm/3.9 in. x 2.5 in. x 1.6in. (not including accessories and attachments)
- **Camera mass (weight)**
Approx. 145 g/5.1 oz.
(not including accessories, batteries or SmartMedia)
- **Weight for photography**
(including batteries and SmartMedia)
Approx. 200 g/7.1 oz.
- **Accessories**
See P. 7
- **Optional Accessories**
See P. 63, 64

* These specifications are subject to change without notice.
FUJIFILM shall not be held liable for damages resulting from errors in this Owner's Manual.
* The LCD monitor on your digital camera is manufactured using advanced high-precision technology. Even so, small bright points and anomalous colors (particularly around text) may appear on the monitor. These are normal display characteristics and do not indicate a fault with the monitor. This phenomenon will not appear on the recorded image.
* The operation error may be caused in a digital camera by the strong radio interference (i. e. electric fields, static electricity, line noise, etc.).

Explanation of Terms

DPOF: Digital Print Order Format

DPOF is a format used for recording information on a storage media (image memory card, etc.) that allows you to specify which of the frames shot using a digital camera are printed and how many prints are made of each image.

EV:

A number that denotes exposure. The EV is determined by the brightness of the subject and sensitivity (speed) of the film or CCD. The number is larger for bright subjects and smaller for dark subjects. As the brightness of the subject changes, a digital camera maintains the amount of light hitting the CCD at a constant level by adjusting the aperture and shutter speed. When the amount of light striking the CCD doubles, the EV increases by 1. Likewise, when the light is halved, the EV decreases by 1.

JPEG:

Joint Photographics Experts Group

A file format used for compressing and saving color images. The compression ratio can be selected, but the higher the compression ratio, the poorer the quality of the expanded image.

Motion JPEG:

A type of AVI (Audio Video Interleave) file format that handles images and sound as a single file. Images in the file are recorded in JPEG format. Motion JPEG can be played back by QuickTime 3.0 or later.

PC Card:

A generic term for cards that meet the PC Card Standard.

PC Card Standard:

A standard for PC cards determined by the PCMCIA.

PCMCIA:

Personal Computer Memory Card International Association (US).

White Balance:


Whatever the kind of the light, the human eye adapts to it so that a white object still looks white. On the other hand, devices such as digital cameras see a white subject as white by first adjusting the color balance to suit the color of the ambient light around the subject. This adjustment is called matching the white balance. A function that automatically matches the white balance is called an **Automatic White Balance function**.

Safety Notes


- To ensure that you use your FinePix A101 camera correctly, read these Safety Notes and your Owner's Manual carefully beforehand.
- After reading these Safety Notes, store them in a safe place.

About the icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



WARNING
This icon indicates that death or serious injury can result if the information is ignored.



CAUTION
This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the information which is to be observed.




Triangular icons notify the user of information requiring attention ("important").



Circular icons with a diagonal bar notify the user that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark notify the user of an action that must be performed ("Required").



WARNING

When a fault arises, switch the camera off and then remove the batteries and disconnect the AC power adapter.

Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



Unplug from power socket.

Do not allow water or foreign objects to enter the camera.

If water or a foreign object has entered the camera, switch the camera off and then remove the batteries and disconnect the AC power adapter.

- Continued use of the camera can cause a fire or electric shock.
- Contact your FUJIFILM dealer.



Do not place the camera on an unstable surface.

This can cause the camera to fall or tip over and cause injury.



Do not use the camera in the bathroom or shower.

This can cause a fire or electric shock.



Do not use in the bathroom or shower.

Safety Notes

<p>⚠ WARNING</p> <p>Never attempt to modify or disassemble the camera. (Never open the casing.) Do not use the camera when it has been dropped or the casing is damaged.</p> <p>This can cause a fire or electric shock.</p> <ul style="list-style-type: none"> Contact your FUJIFILM dealer. 	<p> Do not disassemble.</p>
<p>Never attempt to take pictures whilst in motion.</p> <p>Do not use the camera while you are walking or operating a moving car or other vehicle.</p> <p>This can result in you falling down or being involved in a traffic accident.</p>	<p></p>
<p>Do not heat, modify or attempt to disassemble the batteries.</p> <p>Do not drop or subject the batteries to impacts.</p> <p>Do not attempt to recharge lithium or alkaline batteries.</p> <p>Do not store the batteries with metallic products.</p> <p>Any of these actions can cause the batteries to burst or leak and cause fire or injury as a result</p>	<p></p>
<p>⚠ WARNING</p> <p>Do not touch any metal parts of the camera during a thunderstorm. This can cause an electric shock due to induced current from the lightning discharge.</p>	<p></p>
<p>Do not use the batteries except as specified.</p> <p>Load the batteries with the poles positioned as indicated by the ⊕ and ⊖ marks.</p>	<p></p>
<p>Use only the batteries or AC power adapter specified for use with this camera.</p> <p>The use of other power sources can cause a fire.</p>	<p></p>
<p>If the battery leaks and fluid gets into your eyes or comes into contact with your skin or clothing, this can cause injury or loss of eyesight. Immediately flush the affected area thoroughly with clean water and seek medical treatment.</p> <p>When discarding or storing batteries, cover the battery terminals with insulation tape.</p> <ul style="list-style-type: none"> Contact with other metallic objects or batteries could cause the batteries to ignite or burst. 	<p></p>

<p>⚠ CAUTION</p> <p>Do not use this camera in locations severely affected by oil fumes, steam, humidity or dust.</p> <p>This can cause a fire or electric shock.</p>	<p></p>
<p>Do not leave this camera in places subject to extremely high temperatures.</p> <p>Do not leave the camera in locations such as a sealed vehicle or in direct sunlight.</p> <p>This can cause a fire.</p>	<p></p>
<p>Do not place heavy objects on the camera.</p> <p>This can cause the heavy object to tip over or fall and cause injury.</p>	<p></p>
<p>Do not move the camera while the AC power adapter is still connected.</p> <p>This can damage the power cord or cables and cause a fire or electric shock.</p>	<p></p>
<p>Do not cover or wrap the camera or the AC power adapter in a cloth or quilt.</p> <p>This can cause heat to build up and distort the casing or cause a fire.</p>	<p></p>

<p>⚠ CAUTION</p> <p>Remove the batteries and disconnect the AC power adapter when you are cleaning the camera or if you intend to leave the camera unused for a long period.</p> <p>Failure to do so can cause a fire or electric shock.</p>	<p></p>
<p>Do not use the flash close to anyone's eyes.</p> <p>This can cause temporary damage to the person's eyesight.</p>	<p></p>
<p>Request regular internal testing and cleaning for your camera.</p> <p>Build-ups of dust in your camera can cause a fire or electric shock.</p> <ul style="list-style-type: none"> Contact your FUJIFILM dealer to request internal cleaning every 2 years. 	<p></p>

EC Declaration of Conformity

We

Name : Fuji Photo Film (Europe) G.m.b.H.
Address : Heesenstrasse 31
40549 Dusseldorf, Germany

declare that the product

Product Name : FUJIFILM DIGITAL CAMERA FinePix A101
Manufacturer's Name : Fuji Photo Film Co., Ltd.
Manufacturer's Address : 26-30, Nishiazabu 2-chome, Minato-ku,
Tokyo 106-8620, Japan

is in conformity with the following Standards

Safety : EN60065
EMC : EN5022 : 1998 Classe B
EN5024 : 1998
EN61000-3-2 : 1995 + A1:1998 + A2:1998

following the provision of the EMC Directive (89/336/EEC, 92/31/EEC and 93/68/EEC) and Low Voltage Directive (73/23/EEC).

CE


Dusseldorf, Germany

June 1, 2001

Place


Date

Signature/Managing Director



Bij dit product zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA

Memo



FUJI PHOTO FILM CO., LTD.

26-30, Nishiazabu 2-chome, Minato-ku, Tokyo 106-8520, Japan

Printed in Japan

Printed on recycled paper.

FCS-103106-FG