


DIGITAL CAMERA

Owner's Manual

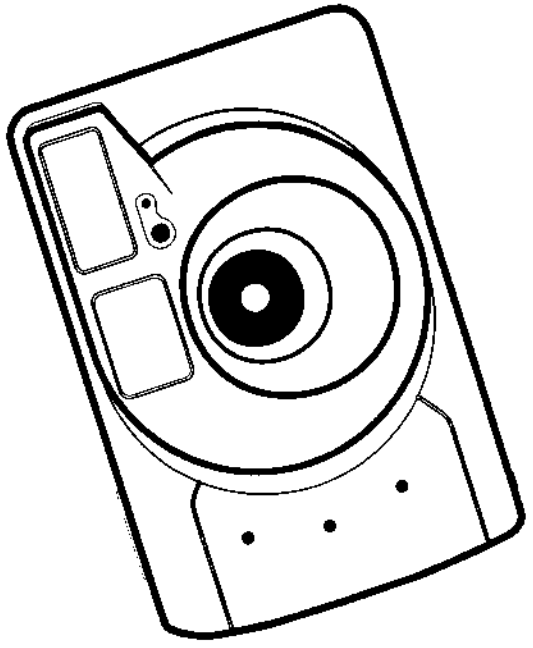

Warranty Policy

This camera is under warranty for one full year from the date of purchase by the original purchaser. In case of defects in materials or workmanship, we will replace or repair the camera free of charge. This warranty applies to the camera only. This warranty does not include batteries, or other accessories which have not been manufactured by our company. This warranty will not be honored if the camera has been mishandled or tampered with, or altered by anyone other than the manufacturer. Other than for the warranty herein, we are not responsible for loss, damage, or inconvenience of any kind.

A defective camera being returned under warranty must be accompanied by a brief description of the difficulties encountered and also by a proof of purchase with the date of purchase clearly indicated. All related transportation costs and insurances are at the owner's expense. Any alteration of this warranty cannot be made without the written approval from our company.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in commercial installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, detectable by turning the equipment in question off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna; Increase the distance between the equipment and the receiver; Connect the equipment to an outlet on a different circuit than that which the receiver is connected to; Or consult the dealer or an experienced radio/TV technician for help.

Note

A shielded-type DC power cable incorporated with a ferrite core is required in order to meet the FCC emission limits and also to prevent interference to the nearby radio and television reception.

Use only shielded I/O cable incorporated with a ferrite core to connect this equipment to host computer and TV set. Shielded AC power cord and shielded I/O cables are required in order to meet the FCC emission limits. It is essential that only the supplied power cord and I/O cable(s) be used.

CAUTION

Do not place this camera in damp or dusty location. This may cause a fire or electric shock.



Do not place this camera in a location affected by oil fumes or steam, such as near a cooking stove or humidifier. This may cause a fire or electric shock.



Do not leave this camera in places subject to extremely high temperatures, such as in a sealed vehicle or in direct sunlight. Exposure to high temperatures may adversely affect the camera case and internal components and cause a fire.



Do not cover or wrap the camera or the AC power adapter with a cloth or quilt. This may cause heat to build up and distort the case or cause a fire. Always use the camera and its accessories in well-ventilated locations.



Take care that the camera is not bumped when it is being moved. This may cause the camera to malfunction.



Do not move the camera while it is switched on. (If you are using the AC power adapter, unplug the adapter from the AC power outlet after you have switched off the camera.) Then ensure that any connector cords or cables to other devices are disconnected before moving the camera. Failure to do so may damage the cords or cables and cause a fire or electric shock.



When handling the camera, always unplug it from the power source (batteries or AC power adapter) for safety. (If you are using the AC power adapter, unplug the adapter from the AC power outlet after you have disconnected the camera.) Failure to do so could result in an electric shock.



CAUTION

When leaving the camera unused for a long period, such as during a vacation, always unplug the camera from the AC power source for safety. Unplug the adapter from the AC power source after you've disconnected the camera. Failure to do so could result in a fire.



Contact your dealer or local authorized service facility to request cleaning of the interior of the camera every two years. Allowing dust to accumulate in the camera for long periods without cleaning the camera interior may cause a fire or electric shock. Cleaning is best performed prior to seasonal periods of high humidity. Consult with your dealer or local authorized service facility for information on the cost of cleaning your camera.



Do not use batteries other than those specified for use with your camera. The use of unsuitable batteries may result in the batteries splitting or leaking and causing a fire, injury, or soiling of the battery compartment.



When fitting a battery into the camera, check the polarity markings on the battery (⊕ and ⊖) to ensure that you insert the battery correctly. Incorrect battery polarity may result in the batteries splitting or leaking and causing a fire, injury, or soiling of the battery compartment.



Remove the batteries if the camera will not be used for an extended period of time. The batteries may leak and cause a fire, injury or soiling of the battery compartment. If the batteries leak, clean and wipe the battery compartment carefully and install new batteries. Wash your hands carefully if you touch the battery fluid.



WARNING

Do not use this camera when it is emitting smoke, is unusually hot to the touch, is emitting any unusual odor or noise, or is in any other abnormal state. Use of the camera in any of these situations may cause a fire or electric shock. Stop using the camera immediately, turn the camera off, and then disconnect the power source (batteries or AC power adapter). (If you are using the AC power adapter, unplug the adapter from the AC power outlet after you have disconnected the camera.) After checking that smoke is no longer being emitted, contact your dealer or your local authorized service facility and request repairs. **Never attempt to repair this camera yourself as this is dangerous.**

Do not use the camera if any water has entered the camera. Switch the camera off, and then disconnect the power source (batteries or AC power adapter). (If you are using the AC power adapter, unplug the adapter from the AC power outlet after you have disconnected the camera.) Then contact your dealer or your local authorized service facility. Do not continue to use the camera as this may cause a fire or electric shock.

Do not use the camera if any foreign objects have entered the camera. Turn the camera off, and then disconnect the power source (batteries or AC power adapter). (If you are using the AC power adapter, unplug the adapter from the AC power outlet after you have disconnected the camera.) Then contact your dealer or your local authorized service facility. Do not continue to use the camera as this may cause a fire or electric shock.

If the camera has been dropped or the camera case has been damaged, switch the camera off, and then disconnect the power source (batteries or AC power adapter). (If you are using the AC power adapter, unplug the adapter from the AC power outlet after you have disconnected the camera.) Then contact your dealer or your local authorized service facility. Do not continue to use the camera as this may cause a fire or electric shock.

WARNING

Do not place the camera in unstable locations such as on a wobbly table or sloping surface where the camera may fall or tip over and cause injury.

Take care that the camera is not exposed to moisture and that water does not get into the camera. Take particular care when it is raining or snowing or when you are using the camera at the beach or near water. Water in the camera may cause a fire or electric shock.

Do not insert or drop metallic or inflammable foreign objects into the camera through access points such as the Compact Flash card slot. This may cause a fire or electric shock.

Do not attempt to modify this camera. This may cause a fire or electric shock.

Do not remove the camera casing. This may cause an electric shock. Internal inspection, maintenance and repairs should be carried out by your dealer or local authorized service facility.

Do not use this camera in the bathroom. This may cause a fire or electric shock.

Do not touch the power plug during a thunderstorm if you are using the AC power adapter. This may cause an electric shock.



Do not disassemble




Do not use in wet areas





Do not touch





WARNING


 Never use this camera, look through the viewfinder, or watch the LCD (liquid crystal display) while you are operating a moving car, motorcycle or bicycle.
This may cause a traffic accident.

 Do not attempt to charge the alkaline battery.
This may cause the battery to split or leak, causing fire or injury.

 Do not carry or store a battery with objects such as metal pens, necklaces, coins or hairpins. This could short circuit the positive and negative poles of the battery.
This may cause the battery to split or leak, resulting in fire or injury.

 Do not heat or attempt to disassemble a battery, and do not place a battery in water or in a fire.
Any of these may cause the battery to split or leak, cause fire or injury.

 Do not subject a battery to strong impacts, such as hitting it with a hammer, stepping on it or dropping it. Any of these may cause the battery to split or leak, cause fire or injury.

 Use only the specified batteries or AC power adapter specified for use with this camera.
The use of other power sources may cause a fire.

CONTENTS

Fun Things You Can Do	8
Camera Features	8
What's Inside	8
System Requirements	8
Getting to Know the Camera	9
Getting Started	10
Inserting Batteries	10
Attaching the Strap	11
Taking Pictures	11
Status Light Indicator	12
Auto Power Off	12
Camera Operating Modes	12
Changing Modes	12
Camera Options	12
Camera Options in Record Mode	13
Camera Options in Erase Mode	13
Adjusting the Settings in Record Mode	14
Setting Picture Quality	14
Setting the Self-Timer	15
Setting the Flash Mode	15
Setting the Exposure Value	15
Erasing Pictures from Memory	16
To delete a picture from Memory	16
To delete all pictures from Memory	16
Downloading Pictures into your PC	16
Connecting to your Computer	17
Camera Driver and Software Installation	17
Downloading and Saving Images to your Hard Disk	18
Using your Camera as a USB PC Camera	19
Appendix 1: LCD Icons	20
Appendix 2: Camera Specifications	21

Congratulations on purchasing your new digital & PC camera. This camera is an all-in-one pocket size digital and USB PC camera. You can take digital pictures in an instant. You can also hook the camera to a computer and use it as a PC camera for videoconferencing.

Fun Things You Can Do

- **Take digital pictures.** Easily capture digital images and download them to your computer.
- **Videoconference on the Internet.** Keep in touch with distant family and friends. See and talk with people on the Internet face-to-face.
- **Send Image with e-mail.** Send your captured images with your e-mail messages.

Camera Features

- **Automatic Power Off** to reduce energy consumption.
- **TWAIN Acquire Module** - Lets you download pictures from all TWAIN-compliant devices like your camera to your computer (included in the software CD-ROM).
- **Image Editing Software** - Allows you to quickly and easily touch-up any photo captured with your camera. Helps enhance your pictures before emailing or printing them (included in the software CD-ROM).
- **A built-in, non-expiring flash** and an auto-flash sensor, automatically detects whether the flash should be engaged. It helps ensure that your pictures turn out right.
- **Built-in digital memory** gives a generous and flexible image storage capacity.


What's Inside

- Digital Camera
- Software CD-ROM
- Quick Start Guide
- Owner's Manual
- USB Cable
- Camera Pouch
- 2 x AA Alkaline Batteries
- Strap

System Requirements (PC)

- Personal Computer with min. Pentium 166MHz
- Microsoft Windows 98/2000/Me
- 32MB or more of RAM
- 80MB of Hard Disk Space
- CD-ROM Drive
- Available USB Port
- Color Display (640x480 24-bit or Higher Recommended)

Getting to Know the Camera

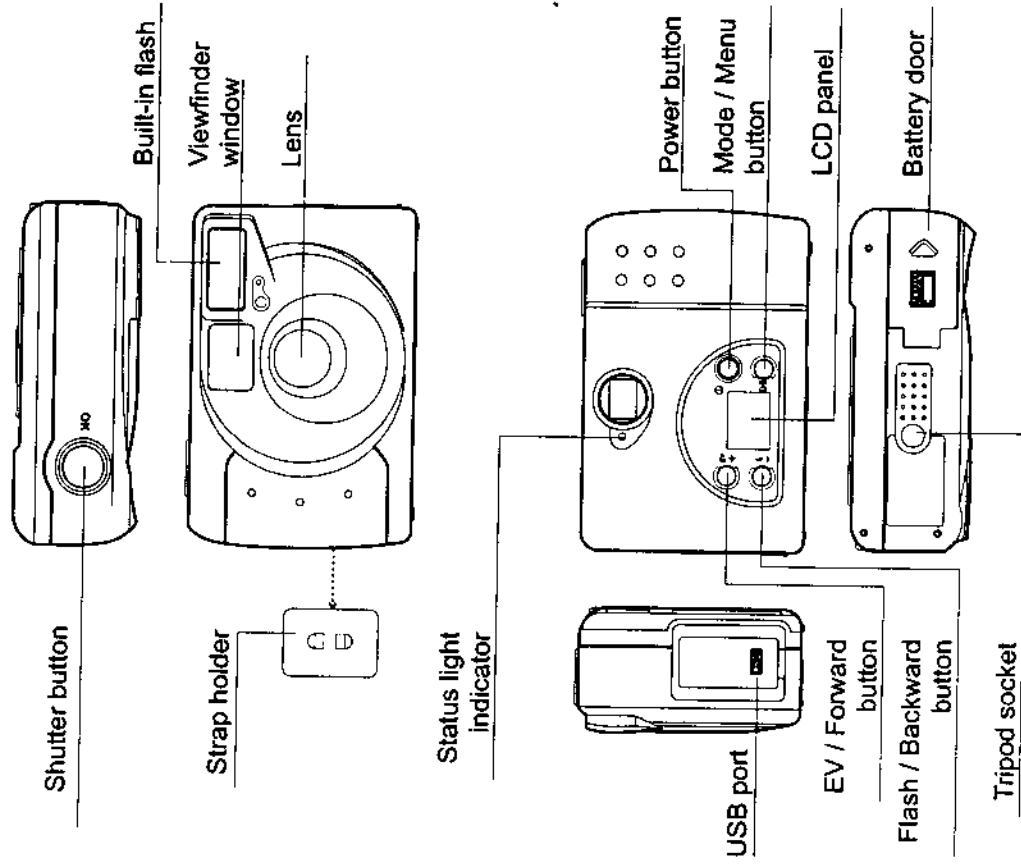


Getting Started

Before you start taking digital pictures with your camera, insert the (AA-size Alkaline) batteries. When you use your camera as a video camera for your PC, you won't need batteries. The camera absorbs power from your computer through the USB port.


Inserting Batteries

1. On the bottom of the camera, slide the battery door in the direction indicated by the arrow to open it.
2. Insert two (2) AA-size batteries as indicated on the inner side of the battery door.
3. Close the battery door and turn on the camera.

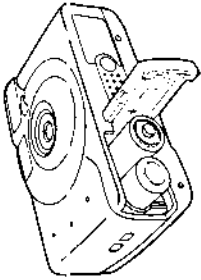

If you are using new batteries with your camera, the Battery Power icon on the LCD panel will be fully shaded.

After using the camera for some time and the battery power becomes low, only the lower portion of the Battery Power icon will appear shaded. This indicates that the batteries are weak and need to be replaced.

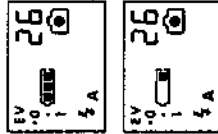

Note


- Remove the batteries if the camera is not used for an extended period of time to prevent leaks or corrosion.
- Never use manganese batteries.
- Never mix old and new batteries.
- Low temperatures (under 0°C or 32°F) reduce the output efficiency of batteries, thereby shortening the operation time of the camera.
- The recommended battery is AA size alkaline battery.

Attaching the Strap

Use the included strap every time to carry the camera and when taking pictures outdoors. This prevents accidental dropping or banging of the camera. Dropping the camera may cause external and internal damage.


To attach the strap to your camera:



1. Insert the small loop at the end of the strap into one of the holes of the camera's strap holder.
2. Push inward until the loop comes out of the other hole of the camera's strap holder.
3. Insert the other end of the strap through the loop and pull it all the way until the strap is securely attached to the camera.

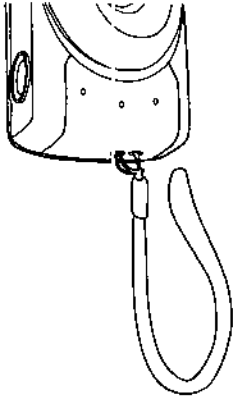


Taking Pictures

To start taking pictures:

1. Turn the camera on by pressing the POWER button.
2. As the camera warms up, the Status light indicator at the back of the camera lights on.
3. Since this is the first time your camera is powered on, it automatically defaults to Record mode. You will see the  icon on the LCD panel.

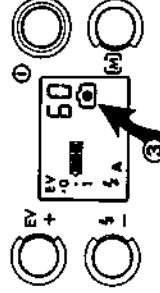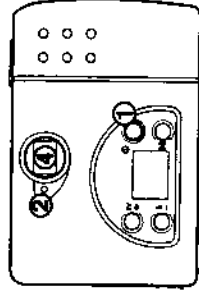

Note

If you have switched to other modes, you can change back to Record mode by pressing the  Mode/Menu button. You have to press and then quickly release this button.

4. Using the Viewfinder, focus on the object you want to capture.
5. Press the Shutter button to take the picture.



If you want to take more pictures, first look at the number shown on the LCD panel. This is the number of image shots left. As more pictures are taken, the number decreases. When it reaches zero, that means your digital camera is already full of images. If this happens, download the images into your computer and save them for later use. Then, erase all images from the camera's memory so that you can take more pictures. (See also "Downloading Pictures into Your PC".)

Status Light Indicator

The status light indicator is located next to viewfinder window on the back of camera body. The indicator light can be seen as on, off or blinking. The indicator goes on and off to indicate the on/off status of camera. The indicator blinks when flash is being charged as auto flash feature been activated.

Note

Always wait for the light to stop blinking before you proceed.

Auto Power Off

The camera is equipped with an automatic power off function. It switches off automatically when there are no operations performed for over 120 seconds. To restore full power, press the POWER button on the back.


Camera Operating Modes

Your digital camera has three operational modes:

- **Record mode** : Switch to this mode when taking digital pictures.
- **PC mode** : Switch to this mode to connect with PC.
- **Erase mode** : Switch to this mode to erase pictures.

Changing Modes

Press the **[M]** Mode/Menu button located at the lower right corner of the LCD panel. Upon pressing, quickly release the button to change mode.

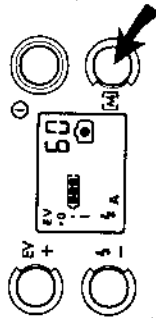

Camera Options

Different sets of camera options are available under the Record, PC and Erase modes. Switch to either one with **[M]** Mode/Menu button.

Camera Options in Record Mode

When you have set your camera to Record mode, you can control and change the following settings:

Image quality settings

- You can set the image quality setting to either Normal or Fine quality.
- N Normal Quality** - This is the acceptable image quality for digital pictures. At Normal quality, you can take a maximum of 120 pictures with the camera.
- F Fine Quality** - Captures images at the best possible quality. If you select this option, you can take 60 pictures at the most.

Self-timer mode

- ☺ **Turn off the Self-Timer** if you want to take pictures manually.
- ☺ **Turn on the Self-Timer** if you want to set a 10-second delay when taking pictures. This is quite helpful especially if you want to take a picture of yourself and there is no one to help you. With the Self timer on, you can give yourself enough time to make your favorite pose before taking your own picture.

Flash

- ☺ **No Flash** $\frac{1}{2}$ **Auto Flash**

You can set the flash off or auto, depending on the lighting conditions of your environment.

Exposure Value (EV)

Allows your pictures with exposure increased or decreased. For more information on this camera setting, refer to the section, Setting the Exposure Value, in this manual.

Camera Options in Erase Mode

While the camera is in Erase mode, you can control and change the following settings:

- ☺ **Erase Current Picture** - Select this option to remove the current picture from the camera's memory.

- ☺ **Erase All Pictures** - Select this option only if you are certain that you want to remove all pictures from the camera's memory. Do not select this option if you have not yet downloaded the pictures to your computer.

Adjusting the Settings in Record Mode

The camera options listed in the previous section allow you to control how you want pictures to be taken and how to manage the pictures in the camera's memory.

To change one or more camera options, here's what you should do:

1. Press the **[M]** Mode/Menu button for over 2 seconds before releasing it.
2. Each option appears (shown by a continuous blinking) on the LCD panel one at a time. To go to the next option, press the **[M]** Mode/Menu button and release it instantly.
3. To select the option currently shown on the LCD panel, press the Shutter button.
4. Repeat steps 1, 2 and 3 to view more options and make your desired selections.
5. After you have finished changing the camera settings, press the **[M]** Mode/Menu button to return to either Record mode.

Setting Picture Quality

Different elements combine to determine the quality of the pictures that you take.

- **Resolution:** The camera stores images at 640 X 480 resolution.
- **Compression:** The camera saves pictures using two levels of image compression: Normal (high compression) or Fine (low compression). Low compression produces higher quality images but less number of pictures can be taken. Higher compression produces acceptable quality images and allows more pictures to be taken.

N - Normal Quality

F - Fine Quality

To select the picture quality:

1. Make sure that the camera is in Record mode. Then, press the **[M]** Mode/Menu button for over 2 seconds to enter the camera options in Record mode.
2. Press the Shutter button to select normal quality when **N** blinks on the LCD panel.
3. To select fine quality, press the **[M]** Mode/Menu button and release it instantly. When **F** blinks on the LCD panel, then press the Shutter button to select the option.

Setting the Self-Timer

The Self-Timer creates a 10-second delay between the time you press the Shutter button and the time the picture is taken. You can activate the Self-Timer by selecting the Self-Timer

option in Record mode. The 10-second delay is indicated by the Status light indicator flashing once per second for seven seconds, then twice per second for the last three seconds. After a picture has been taken, the Self-Timer sets off automatically. You will need to enter the camera options in Record mode and turn on the Self-Timer every time you want to use it.

☺ - Self-Timer Off

☺ - Self-Timer On

To set the Self-Timer:

1. Make sure that the camera is in Record mode. Then, press the **[M]** Mode/Menu button for over 2 seconds to enter the camera options in Record mode.
2. Keep pressing the **[M]** Mode/Menu button and release it instantly until **☺** blinks on the LCD panel.
3. Press the shutter button to select the option.

Setting the Flash Mode

The camera has two different flash modes:

- **Off (default) ☺ :** The flash is disabled no matter what the ambient brightness of the surroundings is.
- **Auto $\frac{1}{2}$ A :** The camera automatically fires the flash when the brightness of the subject or scene is too low.

To set the Flash mode:

1. Make sure that the camera is in Record mode.
2. Use the **$\frac{1}{2}$ / -** button to choose the desired Flash mode. The currently selected Flash mode will be indicated on the LCD Panel.

Note

- Auto Flash will be disabled automatically when connected on USB because the large charge current will cause damage to your USB interface.
- Do not use the Auto-Flash feature while battery power is low. (It will cause the camera to be kept in charging status always.)

Setting the Exposure Value

The Exposure Value (EV) system is a method of stating exposure settings by means of a single number instead of the traditional f-stops and shutter speeds. All combinations of lens openings and shutter speeds given the same exposure represents a single number. This camera automatically chooses the most appropriate EV value for a given situation. However, the EV value can also be manually compensated as follows:

1. Make sure the camera is in Record mode.

2. The LCD panel shows the EV Compensation scale. Press the EV / + button (located at the left side of the LCD panel on the back of the camera) to select a higher or lower value.



Note

- The effective EV Compensation range of this camera is from -1EV to +1EV in 0.5 EV steps.
- Increasing the EV Compensation value results in a brighter picture.
- Decreasing the EV Compensation value results in a darker picture.




Erasing Pictures from Memory

There are times when you don't want the pictures you've taken because they're not what you wanted. In such case, you can simply delete them from memory.

To delete a picture from memory

1. Make sure that you are in Erase mode. To enter Erase mode, press the **[M]** Mode/Menu button twice instantly and release the button. The Erase Current Picture icon  appears on the LCD panel.
2. To delete a picture, scroll to that picture using the EV / + or the **1** / - button located at the back of the camera.
3. Press the Shutter button to select the current picture.
4. A blinking  icon appears on the LCD Panel, press the Shutter button to confirm, or press any other button to cancel.
5. Press the **[M]** Mode/Menu button to switch back to Record mode.

To delete all pictures from memory

1. Make sure that you are in Erase mode. To enter Erase mode, press the **[M]** Mode/Menu button twice instantly and release the button. The Erase Current Picture icon  appears on the LCD panel.
2. To Erase all the pictures in memory, press EV / + or the **1** / - button until  and "ALL" appears on the LCD panel.
3. Press the Shutter button to select Erase All.
4. A blinking  icon appears on the LCD Panel, press the Shutter button to confirm, or press any other button to cancel.

Downloading Pictures into your PC


Once you have your camera connected to your computer, the next step is to transfer the pictures contained in the camera memory to your computer's hard disk. Before you start download the pictures, you need to install first the appropriate camera driver and image editing software.

Connecting to Your Computer

Before you can start downloading images, you need to connect your digital camera to a computer.

For USB Interface:

1. Plug one end of the USB cable into the USB port on a PC located at the back of your computer.
2. Connect the other end of the USB cable to the camera.
3. Turn on your camera.
4. Set the camera to PC mode.

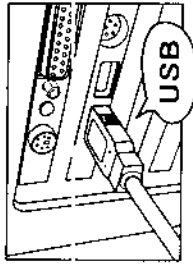

Note

- When the camera is attached to your computer, all the functional buttons are disable.
- Use the dedicated USB cable comes with the package to connect the camera to your PC. Do not use this cable for other devices connection.

Camera Driver and Software Installation

The appropriate TWAIN driver and software are required in order to download images from the digital camera to your computer. You need to install the TWAIN driver and software which comes with the included CD-ROM. It is implemented with auto-setup program. Once you insert CD-ROM disk into the CD-ROM drive, the installation menu will pop-up. Otherwise, you still can run "setup.exe" file in the root directory of CD-ROM driver. To install camera driver and application software:

1. Insert the software CD-ROM disc into your CD-ROM drive.
2. The setup program will begin simply follow the on-screen instructions to complete both the TWAIN driver and the image application software installation.
3. Restart the computer.


Note

The TWAIN driver will only become effective after the system is rebooted.

Downloading and Saving Images to your Hard Disk

Once you have TWAIN driver and image application software installed on your PC, use the following procedures to transfer pictures from the camera to your computer's hard drive and save them.

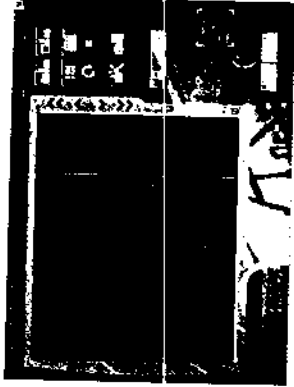

1. Make sure your camera is set to PC Mode.
2. Launch the image application
3. Select **Dual Mode USB Camera** for the TWAIN device.
4. Invoke the TWAIN interface.
5. Start downloading pictures from your camera to your hard disk automatically.
6. Select the pictures you wish to save by clicking on them (hold Ctrl key for multiple selections). Selected pictures will be surrounded by a red border.



Note

The way to select the TWAIN device and invoke the TWAIN driver interface may differ from each other, please refer to its respective software on-line help for more information.

Now you have two options as to what to do with the downloaded images:


- Save selected pictures directly to your hard drive.
1. Click the **Save Photos to Disk Directory**  to bring up the **Save Files to Directory** windows.
 2. Under **Save In**, select the directory in which you wish to save the pictures.
 3. Type in a three-letter prefix followed by a number. This will be the filename for the first image. Filenames for all subsequent images in this batch will be consecutive. For example, if you choose "pic001" as the filename for the first image, the second image will be named "pic002", the third "pic003" etc.
- Open the pictures in **Image Application Software**.
1. Click the **Transfer Pictures to Application**  to open the selected pictures in image application software. These images can now be manipulated or enhanced before saving.
 2. When you are ready to save an image, select **Save As** from the **File** menu.
 3. Select which directory in which you wish to store the pictures.
 4. Type in the name for the picture to be saved.
 5. Select the **JPEG** option under **Save as Type**.
 6. Click **Save**.

Using your Camera as a USB PC Camera

Aside from taking pictures, you can also use your camera as a video camera for you PC.

Using your camera as a USB PC camera with Microsoft Netmeeting:

1. Make sure you have installed the Dual Mode USB camera driver (refer to page 17).
2. Connect a USB cable to the camera and to your PC's USB port.
3. Put the camera on a desktop or on top of your computer monitor.
4. Press the **Power** button to turn on the camera.
5. Set the camera to **PC** mode.
6. Launch Microsoft Netmeeting.
7. Click **Play** button to view live video.
8. Click **Call** button.
9. Type the e-mail address or computer name or the network address of the computer that you are calling.
10. Click **Call**.

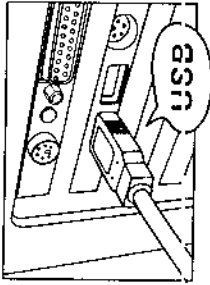

The person you are calling must have Microsoft Netmeeting running and also **Accept** your call to start the video conference.

Note













- When the camera is attached to your computer and remains inactive for a period of time greater than the Auto Power Off interval, it shuts down automatically.
- When the camera is attached to your computer, all the functional buttons are disabled except the power I/O button.
- For more information about the operation of video conference application software, please refer to its respective software help.

Appendix 1: LCD Icons





Here is a list of all the icons that appear on the LCD panel and what they mean.

LCD panel Icons








Record Mode:

-  Record Mode
-  Full Battery Power
-  Medium Battery Power
-  Low Battery Power
-  No Flash
-  Auto Flash
-  Self-Timer Off
-  Self-Timer On
-  F Fine Quality Mode
-  N Normal Quality Mode
-  EV EV Compensation
-  888 Picture Remaining

PC Mode:

-  PC PC Mode
-  Full Battery Power
-  Medium Battery Power
-  Low Battery Power

Erase Mode:

-  Erase Current Picture
-  Erase All Pictures
-  Full Battery Power
-  Medium Battery Power
-  Low Battery Power
-  888 Current Picture
-  OK OK Confirmation

Appendix 2: Camera Specifications

Image Sensor	: CMOS Image Sensor
Image Size (HXV)	: 640 x 480 Pixels
Internal Memory	: 2/4/8MB Flash Memory
Image Storage (3 optional models)	: 8MB Approx. 60 Images (Fine), 120 Images (Economy) 4MB Approx. 30 Images (Fine), 60 Images (Economy) 2MB Approx. 15 Images (Fine), 30 Images (Economy)
Lens	: Fixed Lens
Optical Viewfinder	: Built-in
Exposure	: Auto
White Balance	: Auto
Shutter	: Electronic Shutter (Auto)
Flash Mode	: Auto, Off
Self-Timer	: 10 sec Delay
Compression Method	: JPEG Base
LCD Indicator	: Flash (Auto/Off), Self-Timer, Erase, Picture No., Battery, Record/PC Mode, Quality
LED Indicator	: Self-Timer LED (Red, in Front), Ready LED (Green, in Rear)
USB Frame Rate	: 15fps (VGA Mode); 30fps (CIF, QCIF) (Note: The performance of USB frame rate is relevant to the configuration of your PC.)
Auto Power Off	: 120 sec after no operation (Disable when using USB)
Communication	: USB
Power Supply	: 2 AA-Size Alkaline Battery; DC 5V from USB Port
Weight	: Approx. 120g without Battery
Dimensions	: 95 x 65 x 35 mm

* Design and specifications are subject to change without notice.

DC526 EMI Component List

(1) Core : for Battery wire

Vender P/N: PX0406IA

SPEC: 40 ohm/ 100MHz

Vender name: King Core Electronics Inc.

(2) Core : for USB Cable

Vender P/N:K5A-RH

SPEC: 280 ohm/100MHz

Vender name: COPE-TECH Corp.

(3) Bead : for USB signal

Vender P/N: FBM-10-201209-102

SPEC: 1000 ohm/100MHz

Vender name: King Core Electronics Inc.