

To: AOA
b7712, M.S. DWKBT
From: DDPH156

From: Horace

9/22/98

63-1027.fm 1 Tue Sep 22 15:30:51 1998

Cat. No. 63-1027

OWNER'S MANUAL

Please read before using this equipment.

Wireless Remote Thermometer Sensor



RadioShack®

CC: Horace chu - pm6T

James - pm6T

ok
approved -
Daphne
9/22/98

63-1027.fm 2 Tue Sep 22 15:30:51 1998

INTRODUCTION

Your RadioShack Wireless Remote Thermometer Sensor is designed for use with the RadioShack Indoor/Outdoor Thermometer system (Cat. No. 63-1026). Installation is easy, with no wires to connect. You can mount the remote sensor outdoors or in another room (away from the system's main unit), or use its supplied wire stand for easy viewing on a table or desktop.

© 1998 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

TABLE OF CONTENTS

Introduction	2
Installing Batteries	4
Mounting	6
Selecting a Location	6
Using the Stand	7
On a Wall	8
Operation	9
Changing the Display Channel	10
Changing the Degree Format	11
Resetting the System	11
Care	12
FCC Information	13
Specifications	14

63-1027.fm 4 Tue Sep 22 15:49:50 1998

INSTALLING BATTERIES

You need two AA batteries (not supplied) to power the remote sensor. For the longest life, we recommend alkaline batteries (available at your local RadioShack store).


Note: If you expect to use the remote sensor in temperatures below -4°F (-20°C), we recommend you use lithium batteries (such as RadioShack Cat. No. 23-664).

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

1. Use a Phillips screwdriver to remove the screws in the battery compartment cover, then lift the cover to remove it.
2. Set CHANNEL and °C/°F inside the compartment to the desired settings. (See "Changing the Display Channel" on Page 10 and "Changing the Degree Format" on Page 11.)
3. Place two AA batteries in the compartment according to the polarity symbols (+ and -) marked inside.
4. Use a pointed object (such as a straightened paper clip) to press RESET and initialize the sensor's transmitter.
5. Replace the cover and reinsert and tighten the screws.

If  appears on the main unit's display when you select this remote sensor's channel, replace the batteries.

Cautions:

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Always remove old or weak batteries. Batteries can leak chemicals that can destroy electronic parts.

MOUNTING

You can place the remote sensor on a flat surface, or mount it on the wall using screws (not supplied) and the supplied bracket.

Selecting a Location

Choose a location for the remote sensor that is within 60-90 feet (20-30 meters) of the main unit. The remote sensor can be placed either indoors or out.


The construction of your home or office might affect the transmission range between the main unit and the remote sensor. If you have a choice of several locations, try each to see which provides the best performance.

Caution: Do not place the remote sensor:

- where it will be in direct sunlight
- in water (it is weather-resistant, not water-proof)
- near electrical appliances or heating or air conditioning vents


Using the Stand

To set the remote sensor on a flat surface, insert the ends of the supplied wire stand into the holes on the back of the remote sensor.

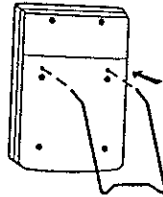


On a Wall


1. Drill two holes $1\frac{3}{4}$ inches apart. Then thread a screw into each hole, letting the heads extend about $\frac{1}{4}$ inch from the mounting surface.



2. Align the keyhole slots on the mounting bracket with the screws and slide the bracket downward to secure it.

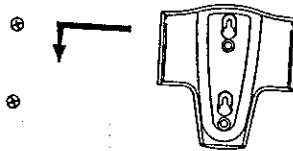


3. Slide the remote sensor into the mounting bracket.

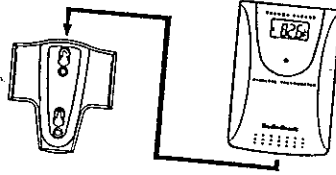

OPERATION


Once you install batteries in the remote sensor, it displays the current temperature and the channel number it is set to, and starts transmitting signals (to your Cat. No. 63-1026 system's main unit) about every 30-seconds.

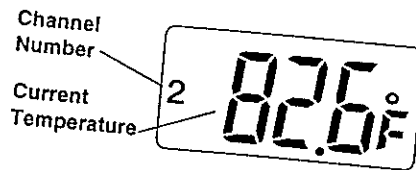

Changing the Display Channel

The Cat. No. 63-1026 system's main unit can display information for up to three different remote sensors.


Set CHANNEL 1/2/3 inside this remote sensor's battery compartment to a different setting than all other remote sensors you are using. Then press RESET using a pointed object (such as a straightened paper clip).

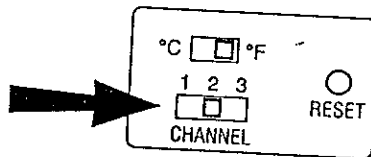

Note: If you set two or more remote sensors to use the same channel, the main unit displays temperature information for the remote sensor's signal it received first.


Changing the Degree Format

To change the degree format displayed on the remote sensor, set °C / °F inside the remote sensor's battery compartment to the desired setting.

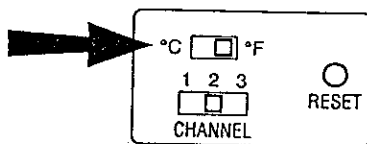

Resetting the System

If the remote sensor stops operating properly, use a pointed object (such as a straightened paper clip) to press **RESET**. This resets the displayed temperature and reinitializes the sensor's transmitter.

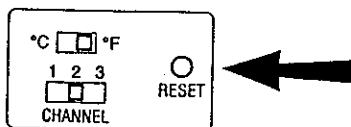

CARE

To enjoy your Wireless Remote Thermometer Sensor for a long time:

- Use and store the remote sensor only in normal temperature environments.
- Handle the remote sensor gently and carefully. Don't drop it.
- Keep the remote sensor away from dust and dirt.
- Wipe the remote sensor with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the remote sensor's internal components can cause a malfunction and invalidate its warranty. If your remote sensor is not performing as it should, take it to your local RadioShack store for assistance.

FCC INFORMATION

This equipment complies with the limits for a Class B digital device as specified in Part 15 of *FCC Rules*. These limits provide reasonable protection against radio and TV interference in a residential area. However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference, you can try one or more of the following corrective measures:

- Reorient or relocate the remote sensor.
- Increase the distance between the remote sensor and the radio or TV.

Consult your local RadioShack store if the problem still exists.

SPECIFICATIONS

Power 3V with Two AA Batteries
Note: At temperatures below -4° F (-20° C), use
lithium batteries (Cat. No. 23-664).

Range Using alkaline batteries: -4° to 140° F
(-20° to 60° C)
Using lithium batteries: -50° to 140° F
(-45° to 60° C)

Resolution 0.2° F (0.1° C)

Sampling Cycle About 30 Seconds

Accuracy $\pm 4^{\circ}$ at -4° to 32° F (-20° to 0° C)
 $\pm 2^{\circ}$ at 32° to 104° F (0° to 40° C)
 $\pm 4^{\circ}$ at 104° to 122° F (40° to 50° C)
 $\pm 6^{\circ}$ at 122° to 140° F (50° to 60° C)

Weight (without batteries) 3.5 oz
(100 g)

Dimensions $4\frac{1}{16} \times 2\frac{11}{16} \times \frac{13}{16}$ Inches
(103 \times 68 \times 21mm)

Specifications are typical; individual units might vary.
Specifications are subject to change and improvement
without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

(Continued)

63-1027.fm 16 Tue Sep 22 15:30:51 1998

(Continued)

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St.,
Suite 600, Fort Worth, TX 76102

We Service What We Sell

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

09A98N

Printed in Hong Kong