

SAMSUNG

5G AU Installation Manual

Describes product installation and requirement procedure.

Document Version 2.0
December 2017

Document Number: 2600-00LJ3ZGAA

© 2017 SAMSUNG Electronics Co., Ltd.

All Rights Reserved. The contents of this document/presentation contain proprietary information that must be kept confidential. No part of this document shall be photocopied, reproduced, stored in a retrieval system, or transmitted, in any form or by any means whether, electronic, mechanical, or otherwise without the prior written permission of SAMSUNG Electronics Co., Ltd.

No warranty of accuracy is given concerning the contents of the information contained in this publication. To the extent permitted by law no liability (including liability to any person by reason of negligence) will be accepted by SAMSUNG Electronics Co., Ltd., its subsidiaries or employees for any direct or indirect loss or damage caused by omissions from or inaccuracies in this document. SAMSUNG Electronics Co., Ltd. reserves the right to change details in this publication without notice.

SNMTC-v3-0312

This manual should be read and used as a guideline for properly installing and/or operating the product. Owing to product variations across the range, any illustrations and photographs used in this manual may not be a wholly accurate depiction of the actual products you are using.

This manual may be changed for system improvement, standardization and other technical reasons without prior notice.

Samsung Networks documentation is available at <http://www.samsungdocs.com>

Contents

Preface	viii
Conventions in this Document	viii
New and Changed Information	ix
Revision History.....	ix
Organization of This Document	ix
Related Documentation	ix
Personal and Product Safety	x
Equipment Markings	xiv
Chapter 1 Before Installation	1
System View and External Interface	1
<i>AU View</i>	1
<i>AU External Interface</i>	2
Specifications	3
Cautions for Installation.....	4
<i>Before Installing</i>	4
<i>While Installing</i>	4
<i>After Installing</i>	4
Installation Tools	6
Chapter 2 Installing System	9
Installation Procedure.....	9
System Arrangement	10
Transporting and Unpacking	12
<i>Bringing in Items</i>	12
<i>Unpacking Items</i>	12
Fixing System.....	13
<i>Pole Type</i>	15
<i>Wall Type</i>	39
Chapter 3 Connecting Cables	47
Cabling Procedure.....	47
Guidelines for Cable Connections	48
<i>Cable Path Inspection</i>	48
<i>Cable Cutting</i>	49
<i>Cable Installation</i>	49
<i>Cable Binding</i>	50
<i>Connector Attachment</i>	50
<i>Identification Tag Attachment</i>	51
Cabling Diagram	52
<i>For AC Type</i>	52
<i>For DC Type</i>	53
<i>Cascade Cabling (optional)</i>	54
Grounding	56
<i>Connecting Ground Cable</i>	56
Power Cabling	59
<i>Connecting AC Power Cable</i>	60
<i>Connecting DC Power Cable</i>	63

Interface Cable Connection.....	67
<i>Remove/Insert Optical Module.....</i>	<i>67</i>
<i>Connecting UDA Cable.....</i>	<i>68</i>
<i>Connecting Backhaul Cable.....</i>	<i>72</i>
<i>Connecting Clock Sync Cable.....</i>	<i>79</i>
Fixing Cable Cover.....	84
Chapter 4 Inspect the Installation	85
Appendix A Acronyms	89
Appendix B Clean the Optical Connectors	90
<i>Measuring the Optical Output and Connecting the Optical Connector.....</i>	<i>90</i>
Appendix C Standard Torque	92

List of Figures

Figure 1.	AU View.....	1
Figure 2.	AU External Interface	2
Figure 3.	Procedure to Install the AU	9
Figure 4.	AU Arrangement Pole type Installation (Using Mounting Bracket)	10
Figure 5.	AU Arrangement Pole Type Installation (Using Chain Bracket Assembly)	11
Figure 6.	AU Arrangement Wall type Installation (Using Mounting Bracket)	11
Figure 7.	Fixing GPS Antenna	13
Figure 8.	Fixing Unit Bracket	14
Figure 9.	Fixing Clip-on Unit Bracket	15
Figure 10.	Fixing Mounting bracket on the Pole (1).....	16
Figure 11.	Fixing Mounting bracket on the Pole (2).....	17
Figure 12.	Fixing Mounting bracket on the Pole (3).....	18
Figure 13.	Fixing AU on the Pole Mounting Bracket (1).....	19
Figure 14.	Fixing AU on the Pole Mounting Bracket (2).....	20
Figure 15.	Fixing AU on the Pole Mounting Bracket (3).....	21
Figure 16.	Fixing Chain Bracket Assembly for 350 A pole (3 sector) (1).....	23
Figure 17.	Fixing Chain Bracket Assembly for 350 A pole (3 sector) (2).....	24
Figure 18.	Fixing Chain Bracket Assembly for 350 A pole (3 sector) (3).....	25
Figure 19.	Fixing Chain Bracket Assembly for 350 A pole (3 sector) (4).....	26
Figure 20.	Fixing Chain Bracket Assembly for 350 A pole (3 sector) (5).....	27
Figure 21.	Fixing Chain Bracket Assembly on the Pole (1)	29
Figure 22.	Fixing Chain Bracket Assembly on the Pole (2)	30
Figure 23.	Fixing Chain Bracket Assembly on the Pole (3)	31
Figure 24.	Fixing Chain Bracket Assembly on the Pole (4)	32
Figure 25.	Fixing Chain Bracket Assembly on the Pole (5)	33
Figure 26.	Fixing Chain Bracket Assembly on the Pole (6)	34
Figure 27.	Fixing Chain Bracket Assembly on the Pole (7)	35
Figure 28.	Fixing AU on the Pole Chain Bracket Assembly (1)	37
Figure 29.	Fixing AU on the Pole Chain Bracket Assembly (2)	38
Figure 30.	AU Marking Dimensions for Wall Type	40
Figure 31.	Marking Wall Type	40
Figure 32.	Drilling and Anchoring.....	41
Figure 33.	Fixing Mounting Bracket on the Wall	42
Figure 34.	Fixing AU on the Wall (1).....	44
Figure 35.	Fixing AU on the Wall (2).....	45
Figure 36.	Fixing AU on the Wall (3).....	46
Figure 37.	Procedure to Connect System Cable.....	47
Figure 38.	Cable Connection Procedure.....	48
Figure 39.	Cable Diagram-AC Type.....	52
Figure 40.	Cable Diagram-DC Type.....	53
Figure 41.	Cable Diagram (Optional, 2 sector cascade)	54
Figure 42.	Connecting Ground Cable (1)	57
Figure 43.	Connecting Ground Cable (2)	58
Figure 44.	Power Equipment Elements.....	59
Figure 45.	Connecting AC Power Cable (1)	61
Figure 46.	Connecting AC Power Cable (2)	61
Figure 47.	Connecting AC Power Cable (3)	62

Figure 48.	Connecting DC Power Cable (1)	64
Figure 49.	Connecting DC Power Cable (2)	64
Figure 50.	Connecting DC Power Cable (3)	65
Figure 51.	Optical Module Removal (1)	67
Figure 52.	Optical Module Removal (2)	67
Figure 53.	Optical Module Removal (3)	67
Figure 54.	Optical Module Inset	68
Figure 55.	Connecting UDA Cable (1)	69
Figure 56.	Connecting UDA Cable (2)	70
Figure 57.	Connecting UDA Cable (3)	70
Figure 58.	Connecting UDA Cable (4)	71
Figure 59.	Connecting UDA Cable (5)	71
Figure 60.	Connecting Backhaul (Optical) Cable (1)	73
Figure 61.	Connecting Backhaul (Optical) Cable (2)	73
Figure 62.	Connecting Backhaul (Optical) Cable (3)	74
Figure 63.	Connecting Backhaul (Optical) Cable (4)	74
Figure 64.	Connecting Backhaul (Optical) Cable (5)	75
Figure 65.	Connecting Backhaul (Copper) Cable (1)	77
Figure 66.	Connecting Backhaul (Copper) Cable (2)	77
Figure 67.	Connecting Backhaul (Copper) Cable (3)	77
Figure 68.	Connecting Backhaul (Copper) Cable (4)	78
Figure 69.	Connecting Backhaul (Copper) Cable (5)	78
Figure 70.	Connecting Clock Sync Cable (1)	80
Figure 71.	Connecting Clock Sync Cable (2)	81
Figure 72.	Connecting Clock Sync Cable (3)	81
Figure 73.	Connecting Clock Sync Cable (4)	82
Figure 74.	Connecting Clock Sync Cable (5)	82
Figure 75.	Fixing Cable Cover on AU	84
Figure 76.	Installation Inspection Procedure	85

List of Tables

Table 1.	Specifications	3
Table 2.	Basic Installation Tools	6
Table 3.	Parts and Tools for Fixing GPS Antenna on AU	13
Table 4.	Parts and Tools for Fixing Unit Bracket on AU	14
Table 5.	Parts and Tools for Fixing Unit Bracket on AU	15
Table 6.	Parts and Tools for Fixing Mounting bracket on the Pole	16
Table 7.	Parts and Tools for Fixing AU on the Pole	19
Table 8.	Parts and Tools for Assembling Chain Bracket Assembly for 350 A pole (3 sector).....	23
Table 9.	Parts and Tools for Fixing Chain Bracket Assembly on the Pole	28
Table 10.	Parts and Tools for Fixing Chain Bracket Assembly on the Pole	33
Table 11.	Tools for Marking	39
Table 12.	Parts and Tools for Drilling and Anchoring.....	41
Table 13.	Anchor Bolt Drill Bits and Hole Depth	41
Table 14.	Parts and Tools for Fixing Mounting Bracket on the Wall.....	42
Table 15.	Parts and Tools for Fixing AU on the Wall.....	43
Table 16.	Recommended Minimum Allowed Cable Bend Radius.....	50
Table 17.	AU Connection Cable_AC Type	52
Table 18.	AU Connection Cable_DC Type	53
Table 19.	AU Connection Cable (Optional, 2 sector cascade).....	54
Table 20.	Parts and Tools for Connecting Ground Cable	56
Table 21.	Parts and Tools for Connecting Power Cable	60
Table 22.	AC Power Cable/Connector Pin Map	60
Table 23.	Parts and Tools for Connecting Power Cable	63
Table 24.	DC Power Cable/Connector Pin Map	63
Table 25.	Parts and Tools for Connecting UDA Cable	68
Table 26.	UDA Cable Pin Map	69
Table 27.	Parts and Tools for Connecting Backhaul (Optical) Cable	72
Table 28.	Parts and Tools for Connecting Backhaul (Copper) Cable.....	76
Table 29.	Backhaul (Copper) Cable Pin Map.....	76
Table 30.	Parts and Tools for Connecting Clock Sync Cable	79
Table 31.	Clock Sync Cable Pin Map	80
Table 32.	Parts and Tools for Fixing Cable Cover on AU	84
Table 33.	Construction Situation Checklist	86
Table 34.	Standard Torque Value for Fastening Bolts	92
Table 35.	Brass Bolts Torque Value.....	92
Table 36.	Connector Connection Torque Value	92

Preface

This manual describes how to install a 5G Access Unit (AU) and how to connect its cables. This manual includes the following 5G AU:

- NAU100
- NAU110

Conventions in this Document

Samsung Networks product documentation uses the following conventions.

Symbols

Symbol	Description
	Indicates a task.
	Indicates a shortcut or an alternative method.
	Provides additional information.
	Provides information or instructions that you should follow to avoid service failure or damage to equipment.
	Provides information or instructions that you should follow to avoid personal injury or fatality.
	Provides antistatic precautions that you should observe.

Menu Commands

menu | command

This indicates that you must select a command on a menu, where **menu** is the name of the menu, and **command** is the name of the command on that menu.

File Names and Paths

These are indicated by a bold typeface. For example:

Copy **filename.txt** into the **/home/folder1/folder2/bin/** folder.

User Input and Console Screen Output Text

Input and output text is presented in the Courier font. For example,

```
context <designated epc-context-name>
```

CLI commands are presented in bold small caps. For example,

Type the **RTRV-NE-STs** command in the input field.

New and Changed Information

The following table describes information that has been added/changed since the previous publication of this manual.

Change Type	Change Description
Deleted	Deleted the figure of Table 3. (The number of GPS antennas for each 1~3 sector type)

Revision History

The following table lists all versions of this document.

Document Version	Publication Date	Remarks
1.0	November 2017	First version
2.0	December 2017	-

Organization of This Document

Section	Title	Description
Chapter 1	Before Installation	This chapter introduces AU and describes items should be understood before installation.
Chapter 2	Installing System	This chapter describes the procedures to install the AU.
Chapter 3	Connecting Cables	This chapter describes the procedures to connect the cables to the AU installed.
Chapter 4	Inspect the Installation	This chapter describes the procedures of inspecting installation status after AU installation and cabling is completed.
Appendix A	Acronyms	This annex describes the acronyms used in this manual.
Appendix B	Clean the Optical Connectors	This annex describes the procedure of cleaning the optical connector and cleaning tool.
Appendix C	Standard Torque	This annex describes the standard torque when fastening the bolt.

Related Documentation

- 5G RAN System Description

Personal and Product Safety

This product safety information includes European directives, which you must follow. If these do not apply in your country, please follow similar directives that do apply in your country.

Proposition 65 Warning (US Only)

State of California Proposition 65 Warning (US only)

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Electrical

The product is designed to operate from a -48 V DC supply and is therefore classified as Safe Extra Low Voltage (SELV) equipment.

All structural parts are grounded and all input and outputs have built-in isolation from the network. All input and output ports that connect to external power sources are designed to meet relevant national safety requirements.

The product contains hazardous energy levels as defined by EN 60950. Care must be taken when maintaining this equipment as injury to personnel or damage to the equipment could result from mistakes. Maintenance should only be carried out by trained and competent engineers who are familiar with the relevant procedures and instructions.

Lasers

The product is fitted with optic modules rated as Class 1 radiation-emitting devices under EN 60825-1. During installation, operation, and maintenance, never look into the end of an optical fiber directly or by reflection either with the naked eye or through an optical instrument. Do not operate equipment with exposed fiber connectors—cover these with fiber cables or blanking caps. Do not remove equipment covers during operation unless requested to do so in the documentation. Carry out normal safety precautions when trimming fibers during installation.

Manual Handling

Care should be taken when handling equipment. Give due consideration to the weight of the equipment, the physical capability of the individual(s) handling the equipment, and movements such as twisting, bending and stooping, which could lead to skeletal and muscular injuries.

Installation

Installation must be carried out by trained and competent engineers only. All relevant safety measures should be taken to ensure equipment is not connected to

live power and transmission sources during installation. Equipment must be correctly installed in order to meet the relevant safety standards and approval conditions.

Each power feed to the unit requires a separate fused feed from the provided power supply. The cable between the power distribution point and the installed equipment must have a minimum cross-sectional area of 2.5 mm².

Rack-mountable equipment must be placed in a standard 19-inch rack and secured with the appropriate fixings as detailed in the installation manual.

Maintenance

Maintenance must only be carried out by a suitably trained and competent technician. All safety instructions must be carefully observed at all times. Equipment covers should not be removed while live power and transmission is connected unless in a controlled environment by trained technicians.

Fire

The product is powered from a -48 V DC supply. To protect against fire, the equipment is fused.

Environment

The product must be operated in an environment with the specified relative humidity and ambient temperature ranges.

Keep all liquids away from the equipment as accidental spillage can cause severe damage.

Cooling

The product cools down by its own set of cooling fans housed in a fan module. Each fan module detects a fan that is not operating normally. LEDs on the front panel of the fan module provide an alarm indication in the event of fan failure.

In the event of fan failure, take urgent remedial action to restore full cooling capacity.

Take appropriate measures to ensure that fan modules do not start spinning during repair and maintenance procedures.

Anti-Static Precautions

The circuit boards and other modules in the product are sensitive to and easily damaged by static electricity. If any card or sub-assembly is removed from the unit, the following anti-static precautions must be observed at all times:

- Service personnel must wear anti-static wrist straps.
- Circuit boards and sub-assemblies must be placed on ground conductive mats

or in conductive bags.

- All tools must be discharged to ground before use.
- The anti-static wrist strap and cord must be checked at regular intervals for their suitability for use.

Grounding

To comply with EN 60950, the equipment must be connected to a safety grounding point via a permanent link. Grounding points are located on the product for this purpose. Always connect the ground cable before fitting other cables. The product must remain grounded continuously unless all connections to the power supply and data network are all removed.

If equipment is grounded through a cabinet or rack, make sure it is done so properly according to the installation instructions.

Power Supply Connection

The equipment is designed to be powered from a -48 V DC supply. Power connections and installation of associated wiring must be carried out by a suitably qualified technician.

Only devices that comply with all relevant national safety requirements should be connected to the unit's power supply inlets. Other usage will invalidate any approval given to this equipment.

Connection of this equipment to devices that are not marked with all relevant national safety requirements may produce hazardous conditions on the network.

When the power supply is obtained by a rectifier/safety isolation transformer, the supply must meet the requirements of EN 60950 providing double/reinforced insulation between hazardous voltages and SELV/TNV circuits. Any battery must be separated from hazardous voltages by reinforced insulation.

Indirect Connection

Before indirectly connecting any equipment to another device through a shared power supply, ALWAYS seek advice from a competent engineer.

Devices that are not marked according to the relevant national safety standards may produce hazardous conditions on the network.

Product Disposal

To reduce the environmental impact of products, Samsung has joined WEEE compliance activities.

The WEEE symbol on the product indicates that the product is covered by the European Directive 2002/96/CE for the disposal of Waste Electrical and Electronic Equipment (WEEE). This means that the product should be disposed of separately from the municipal waste stream via designated collection facilities appointed by

the government or the local authorities. This will help prevent potential negative consequences for the environment and human health. Please check the terms and conditions of the purchase contract for information about correct disposal.

Battery Disposal

The product contains a battery on the processor card. The battery should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery.

End of life recycling materials information is available from Samsung.

California USA Only

This Perchlorate warning applies only to primary CR (Manganese Dioxide) Lithium coin cells in the product sold or distributed ONLY in California USA

Perchlorate Material-special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Equipment Markings



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Correct disposal of batteries in this product (Applicable in countries with separate collection systems.)

The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.



Protective earth

AU should be grounded.

Chapter 1 Before Installation

This chapter introduces Access Unit (AU) and describes the items that you should know before installation.


System View and External Interface

This section provides the pictorial view of the AU and its interfaces.

AU View

Figure below depicts the physical structure of the AU.


Figure 1. AU View

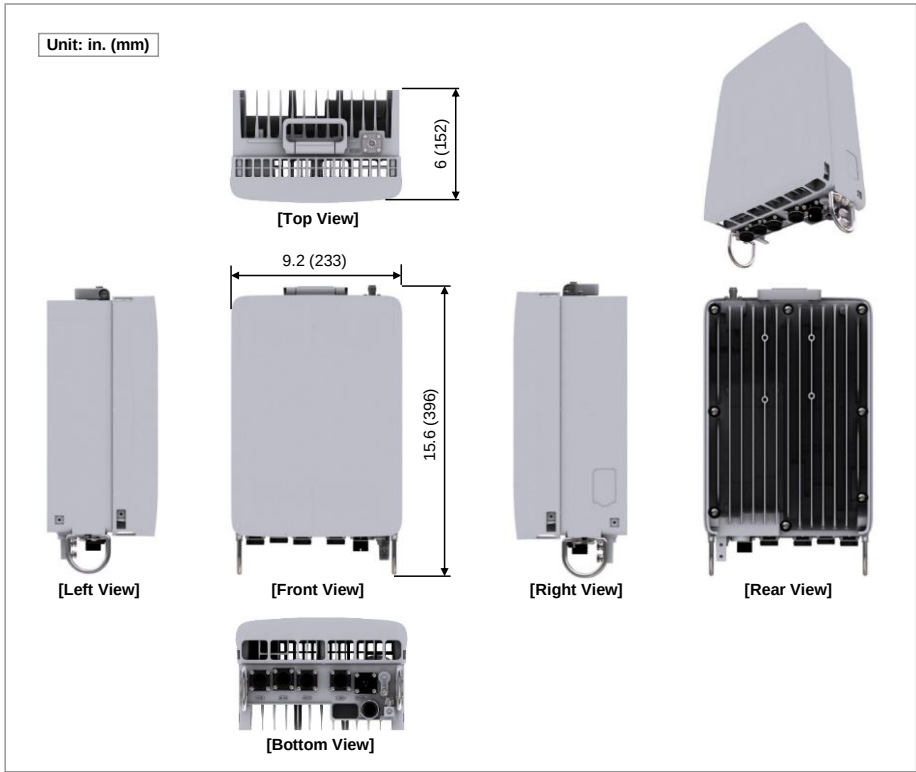

AU External Interface

Figure below depicts the external interface structure of the AU.

Figure 2. AU External Interface

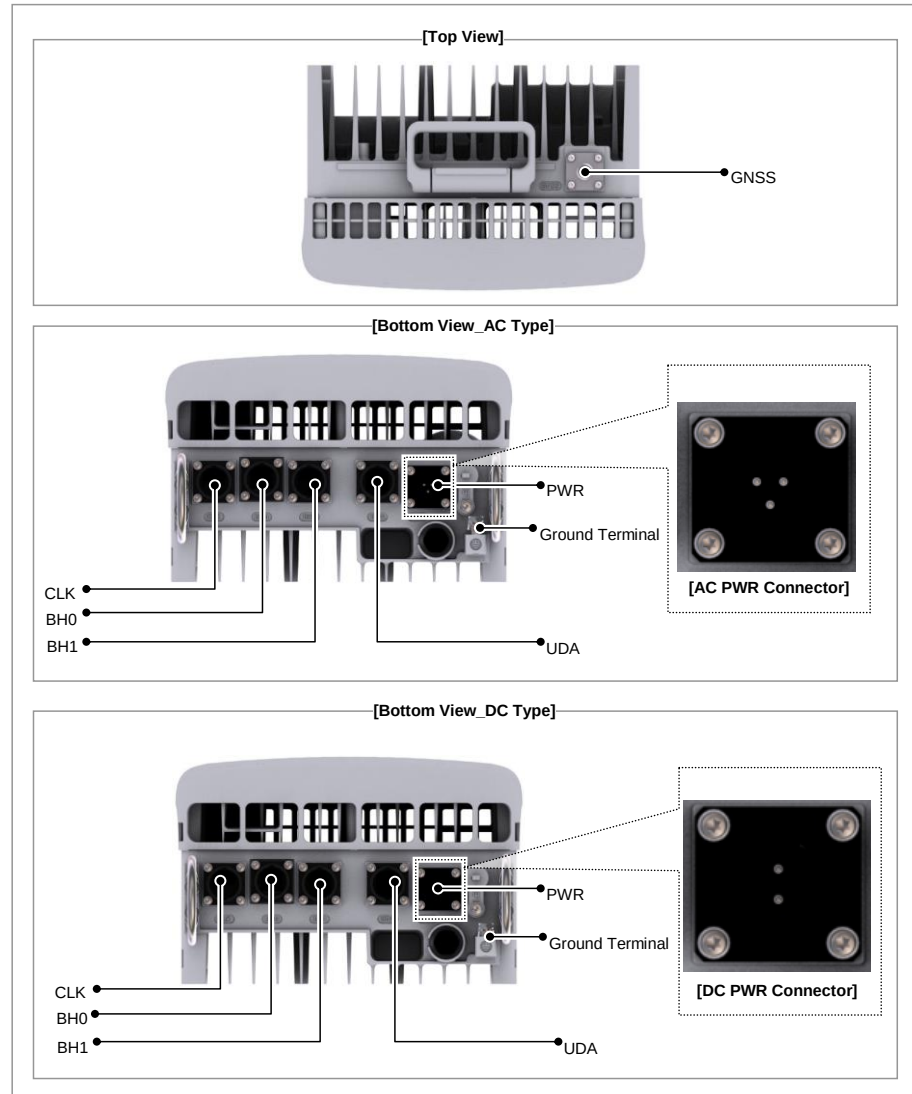

Specifications

Table below lists the main specifications of the AU.

Table 1. Specifications

Item	NAU100	NAU110
Input power	100-240 V AC	-48 V DC
Power Consumption	(w/PoE + PSE): Typ. 260 W Max. 270 W	
Features	ASIC, RFIC Applied	
Size	< 11.8 L	
Carrier Frequency	27.5-28.35 GHz	
Channel Bandwidth	100 MHz × 8CC	
Duplexing	TDD	
Antenna Path	4T4R	
RF Chain	256 × 4	
Output Power per path	54 dBm (EIRP)	
Antenna Gain per path	27.5 dBi	
Beam Scan Range	H ±60°, V ±20°	
HPBW	H 6°, V 6°	
Backhaul	10 GbE × 2 (SFP+ × 1 ea, RJ45 × 1 ea)	
Cooling	Natural Convection	
Operation Temperature	-40-50°C	

Cautions for Installation

Observe the safety instructions described in this section when installing the system. Installation must be done in accordance with the applicable local electric codes.

Before Installing

- Post warning signs in areas where high-voltage cables are installed.
- Post ‘off limit’ signs in areas where accidents are most expected.
- Use guardrails or fences to block open areas such as ditches, open roof areas, and scaffolds.



Install the system in the restricted access area.

While Installing

The system power must be cut off before installing.



Ensure the power switch of power supply is off when installing the system. Installing the system with power switch on may cause system damage or fatal human injury when connecting or disconnecting cables.



Ensure that workers wear protection gloves and goggles to prevent injury from debris while drilling holes in a wall or ceiling.



Do not wear accessories such as watches and rings to prevent electrical shock.



Cover unused ports with a cap. This prevents foreign substances from entering into the unused ports.



To prevent foreign substances, outdoor air, and moisture from entering the cable inlet (including cable gland and conduit), finish the inlet as follows:
Unused inlet: Use the hole finishing materials including cap and rubber packing.
Cable-installed inlet: After cable installation, block any space in the inlet with tape, compressed sponge, rubber packing, and silicone.



Keep a safe distance between the base station antenna and people.

AU	Safe Distance
SFG-AA100AC (NAU100)	300 cm
SFG-AA100DC (NAU110)	

Do not co-locate nor operate in conjunction with any other antenna or transmitter for the protection of general public from exposure to radio frequency electromagnetic field.

After Installing

Remove any debris produced during the work and clean up the installation site.



In the system, the laser beam light runs through the optical cable. The workers must handle the optical cables with care as the laser beam can seriously damage the eyes.



Ensure that the workers do not damage installed cables while cleaning the system.




While cleaning the power supply device, take precaution that the device does not come in contact with foreign objects that may cause power failure.


Installation Tools

Table below lists the basic tools needed for installation. The additional tools required for each site need to be identified and arranged during a site survey before starting the installation.

Table 2. Basic Installation Tools

Number	Name	Specification	Purpose of use
1		Apply a torque range : 6-22 lbf-in	For fastening M4 Screw
		Apply a torque range : 20-90 lbf-in	For fastening M6 SEMS (Hexagon+)
2		+, Number 2	For fastening M4 SEMS (Hexagon+)
		+, Number 3	For fastening M6 SEMS (Hexagon+)
3		+, Number 3	For loosening M6 SEMS (Hexagon+)
4		T15H	For fastening Torx Screw (T15H)
5		Apply a torque range : 6-30 lbf-in	TNC Connector
		Apply a torque range : 10-50 lbf-in	For tightening M6 Hexagon Bolt
		Apply a torque range : 100-400 lbf-in	For tightening M8 Hexagon Bolt and M10 Hexagon Bolt
6		Apply Hexagon Head: 10 mm (for 10-50 lbf-in)	For tightening M6 Hexagon Bolt
		Apply Hexagon Head: 13 mm (for 100-400 lbf-in)	For tightening M8 Hexagon Bolt
		Apply Hexagon Head: 17 mm (for 100-400 lbf-in)	For tightening M10 Hexagon Bolt and M10 Hexagon Nut
		Apply Hexagon Head: 14 mm (for 6-30 lbf-in)	For tightening TNC connector
7		17 mm	For tightening M10 Hexagon Nut For loosening M10 Hexagon Bolt
8		16 ft./150 ft.	Tape measure for length measurement
9		100 ft.	Basic tool
10	Level	Normal	For horizontality and verticality

Number	Name	Specification	Purpose of use
			
11	Hammer Drill 	Normal	Wall type drilling
12	Concrete Drill Bit 	0.5 in. (12 mm)	For M8 Set Anchor
13	Cable Cutter 	0.24-1.26 in. (6-32 mm)	Cable cutting
14	Crimping Tool 	14 AWG-4 AWG (1.5-16 mm ²)	Pressure terminal for crimping
15	Wire Stripper 	Apply cable thickness: 1.5-6.2 in. (4-16 mm)	Cable sheath for removal
16	Nipper 	Basic Tool	For cutting cable
17	LAN Tool 	Basic Tool	RJ45 crimper
18	Industrial Scissor 	Basic Tool	Cutting
19	Knife 	Basic Tool	Cutting
20	Optical Connector Cleaner 	For LC Connector	For cleaning optical connector
21	Optical Transceiver Removal Tool 	Normal	To separate the optical module
22	Multi tester 	Digital Pocket Tester	To measure voltage and current to detect cable disconnection
23	Fiber Optical Test Set	Wave length: 1310 nm, 1550 nm (single mode) 850 nm, 1310 nm (multi-mode)	Optical level check

Number	Name	Specification	Purpose of use
			
24	Compass 	Normal	Check azimuth during installation
25	Heating Gun 	50-300°C	Shrinking Heat Shrink Tube
26	Anchor Punch 	M8	For M8 Set Anchor
27	Hammer 	Normal	Anchor fixing



The required installation tools may vary depending on the site conditions. In addition to the basic tools, protractor, ladder, safety equipment, and cleaning tools must also be arranged, considering the site conditions.


Chapter 2 Installing System

This chapter describes installation procedure of the AU.

Installation Procedure

Figure below depicts the procedure to install the AU.

Figure 3. Procedure to Install the AU

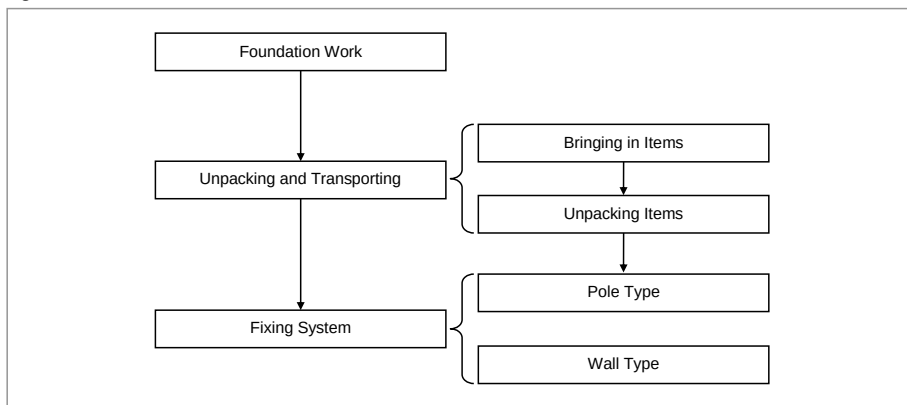

System Arrangement

A minimum distance must be secured around the AU, in each direction for installation and maintenance.

Figure below depicts the minimum distance that must be secured for pole type installation of the AU using mounting bracket.

Figure 4. AU Arrangement Pole type Installation (Using Mounting Bracket)

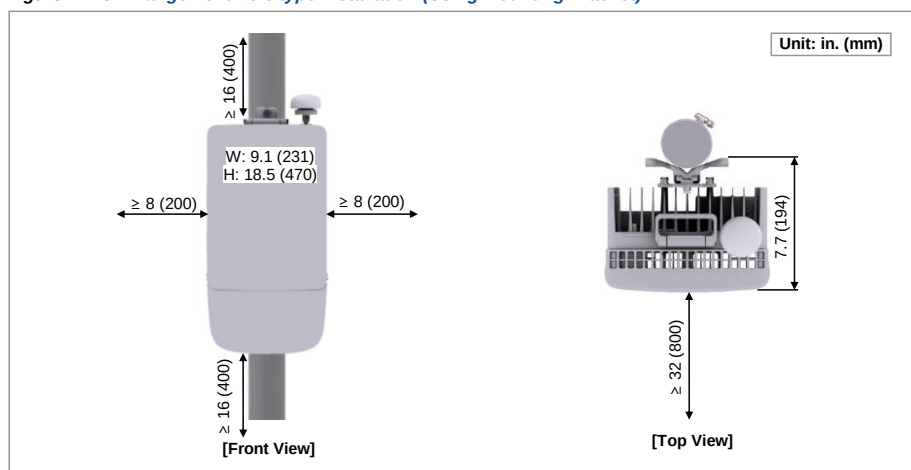


Figure below depicts the minimum distance that must be secured for pole type installation of the AU using chain bracket assembly.

Figure 5. AU Arrangement Pole Type Installation (Using Chain Bracket Assembly)


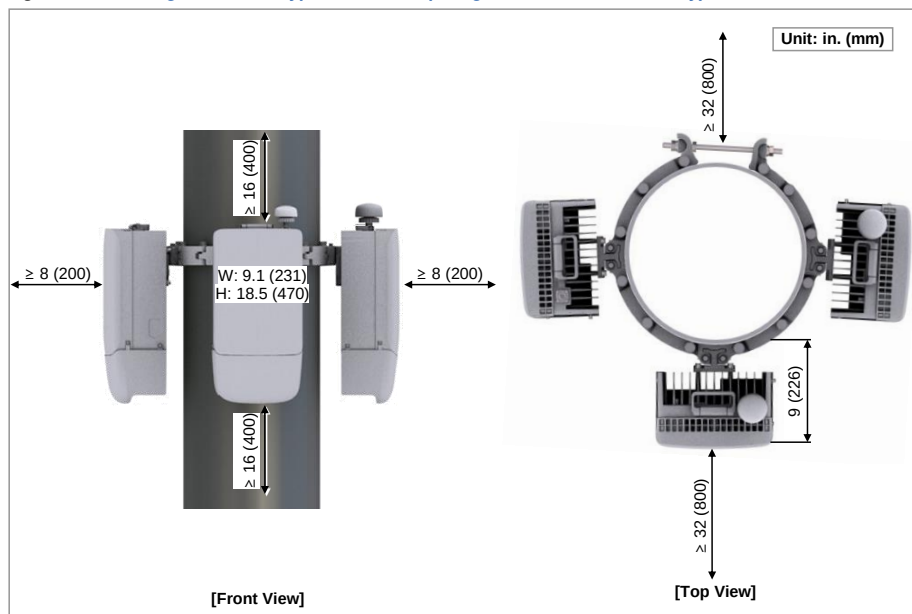


Figure below depicts the minimum distance that must be secured for wall type installation of the AU using mounting bracket.

Figure 6. AU Arrangement Wall type Installation (Using Mounting Bracket)

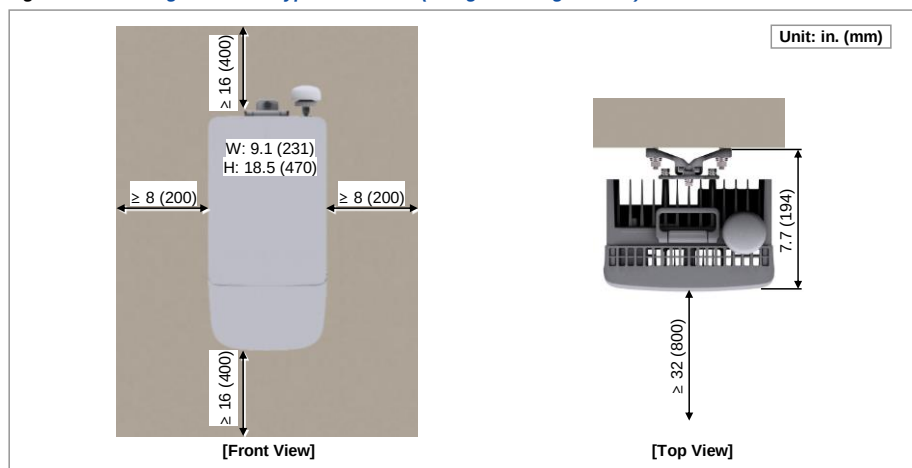

Transporting and Unpacking

This section details how to transport the items to the installation place and describes the procedure to unpack cabinets and other components.

Bringing in Items

Take care of the following at each stage of transportation of the items:

- Before moving a system, check storage place for the system and remove obstacles in advance.
- When carrying the system:
- Fasten the system firmly to the transport vehicle or carrier to prevent damage to the system from a vibration or shock.
- Use an elevator to prevent accidents. However, if the system must be carried by people, ensure there are enough people to carry the system.
- The system must not be shocked physically.
- Care must be taken to protect the system from dust, moisture, and static electricity.

Unpacking Items

To unpack the items, ensure the following:

- The items must be packed until they reach the installation place.
- The items are classified in accordance with each job specification and stored at a place that does not interfere with working.
- Unpacked systems must be installed immediately. If immediate installation of the systems is not planned, the systems must be stored in the installation place temporarily.
- Unpack only external packing, leaving the internal packing in unpacked status.
- Unpack the inner packaging after each system is placed on its installation location.
- Dispose by-products (packaging waste) in accordance with waste management rules. Do not recycle the by-products.

Fixing System

This section details the procedure to fix the AU.

Fixing GPS Antenna

▶ To fix GPS Antenna


- 1 Ensure that the items mentioned in below table are available.

Table 3. Parts and Tools for Fixing GPS Antenna on AU

Category	Description	
Parts	GPS Antenna	1 EA
Recommended Torque Value	GPS Antenna (TNC-Male)	7.8 lbf-in (9 kgf-cm)
Working Tools	• Torque Wrench (6-30 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 14 mm)	

- 2 Connect the GPS antenna to the AU GNSS port as shown in figure below.

Figure 7. Fixing GPS Antenna

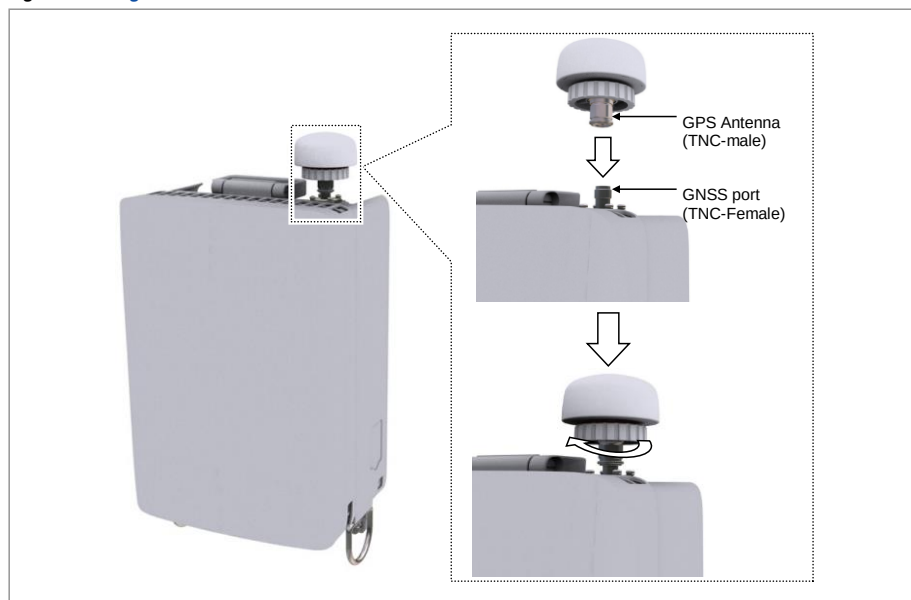

Fixing Unit Bracket

► To fix a unit bracket on the AU (for mounting bracket)


- 1 Ensure that the items mentioned in below table are available.

Table 4. Parts and Tools for Fixing Unit Bracket on AU

Category	Description	
Parts	Unit Bracket	1 EA
	Fasteners	M6 × L20 Hexagon Bolt (Washer assembly) 4 EA
Recommended Torque Value	M6 Hexagon Bolt	43 lbf-in (50 kgf-cm)
Working Tools	• Torque Wrench (10-50 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 10 mm)	

- 2 Fix the unit bracket to the fixing hole of the AU rear using fasteners as shown in figure below.

Figure 8. Fixing Unit Bracket

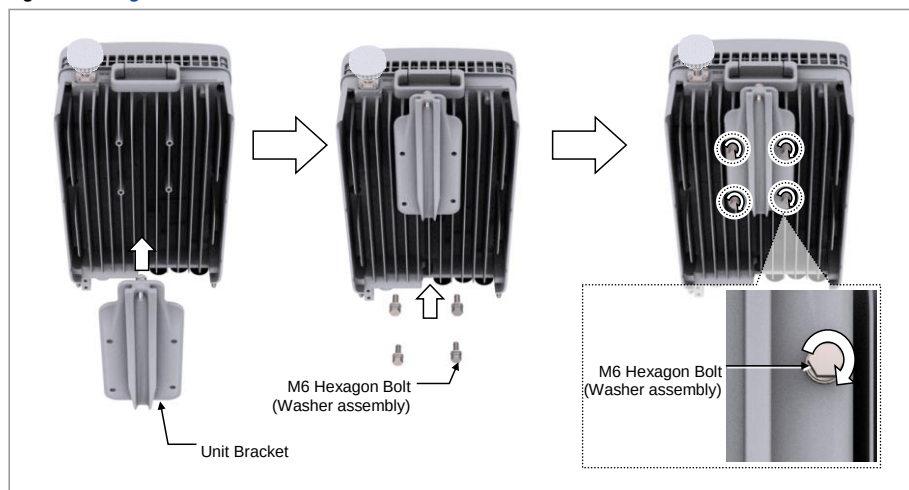

Fixing Clip on Unit Bracket


► To fix a clip-on unit bracket on the AU (for chain bracket assembly)

- 1 Ensure that the items mentioned in below table are available.

Table 5. Parts and Tools for Fixing Unit Bracket on AU

Category	Description	
Parts	Clip-on Unit Bracket	1 EA
	Fasteners	M6 × L20 Hex Bolt (Washer assembly) 4 EA
Recommended Torque Value	M6 Hexagon Bolt	43 lbf-in (50 kgf·cm)
Working Tools	• Torque Wrench (10~50 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 10 mm)	

- 2 Fix the clip-on unit bracket to the fixing hole of the AU rear using fasteners as shown in figure below.

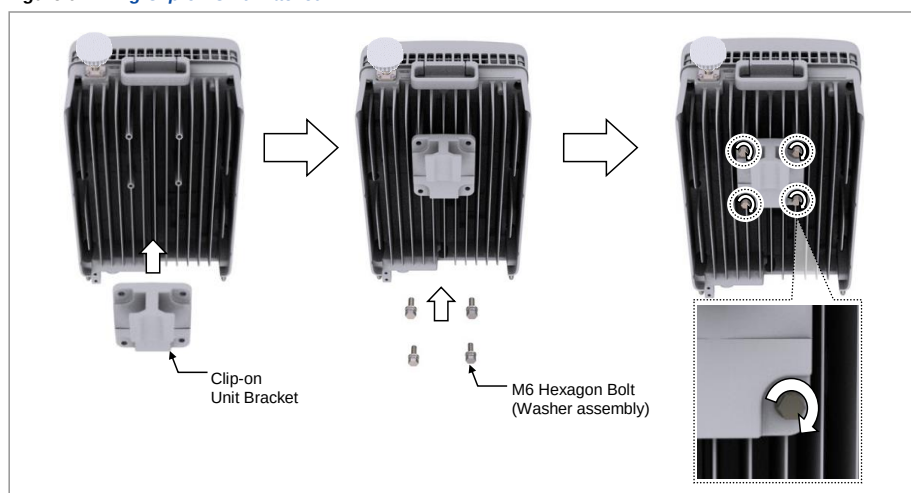Figure 9. Fixing Clip-on Unit Bracket

Pole Type

The AU can be fixed on pole using mounting bracket or chain bracket assembly. This section details both procedures.

Using Mounting Bracket

Fixing Mounting Bracket on the Pole

- ▶ To fix a mounting bracket on the pole

- 1 Ensure that the items mentioned in below table are available.

Table 6. Parts and Tools for Fixing Mounting bracket on the Pole


Category	Description		
Parts	Mounting bracket		1 EA
	Fastener	Steel Band	2 EA
Recommended Torque Value	Steel Band Fixing Screw		48.5 lbf-in (56.1 kgf-cm)
Working Tools	• Torque Driver (20-90 lbf-in) • Screw Driver Bit ('+', Number 3)		



The standard of the pole on which the mounting bracket can be attached using steel bands is 50 A to 125 A.


Pole Size (Diameter)	Length of Steel Band
50 A (2.4 in./60.5 mm)	502 mm
65 A (3 in./76.3 mm)	
80 A (3.5 in./89.2 mm)	
90 A (4 in./101.6 mm)	
100 A (4.5 in./114.3 mm)	
125 A (5.5 in./139.8 mm)	

- 2 Pass the steel band through the fixing hole of the mounting bracket, as shown in figure below.

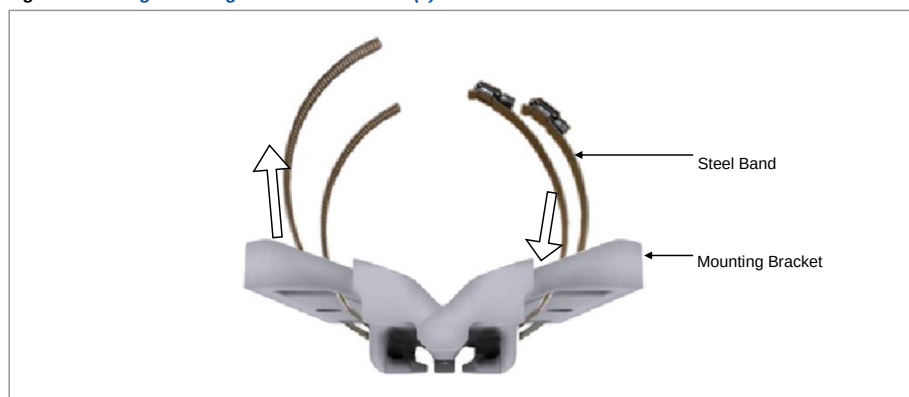
Figure 10. Fixing Mounting bracket on the Pole (1)

- 3 Place a mounting bracket to the pole and fix the steel band, as shown in figure below.

Figure 11. Fixing Mounting bracket on the Pole (2)

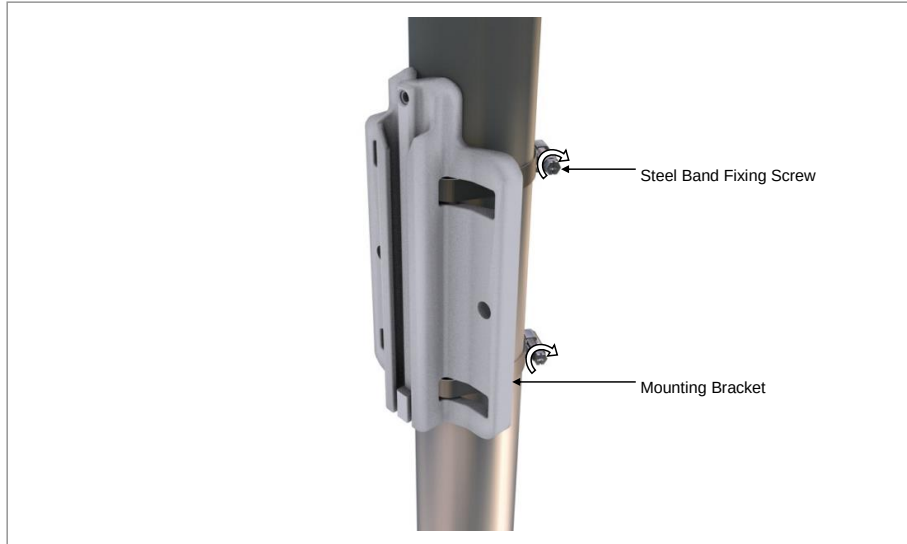


Ensure the fixing hole is upward.

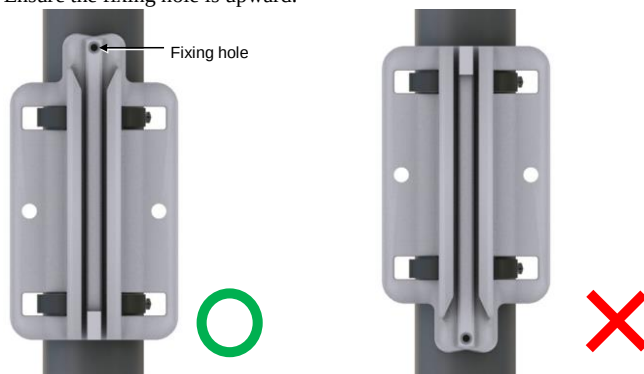

- 4** Check the level of mounting bracket on the pole and adjust the level, as detailed in figure below.

Figure 12. Fixing Mounting bracket on the Pole (3)

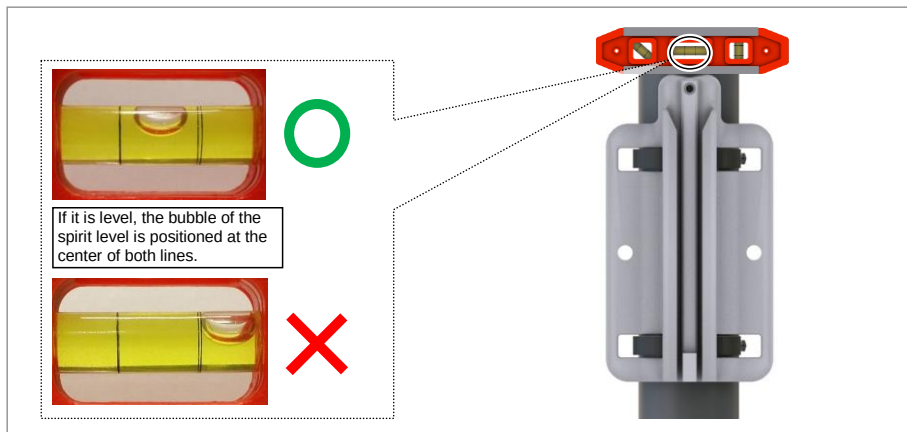

-  When fixing the mounting bracket on the pole, be sure to check the level of bracket. After finishing the installation, adjust the level minutely.
-  When poor leveling happens, adjust the position of fasteners used to fix the mounting bracket.
-  After fixing the steel band, push the remainder of band inside the mounting bracket, as shown in figure below.



Fixing AU on the Mounting Bracket

► To fix the AU on the pole mounting bracket


- 1 Ensure that the items mentioned in below table are available.

Table 7. Parts and Tools for Fixing AU on the Pole

Category	Description		
Parts	Fasteners	M6 × L23 SEMS (Hexagon +) (Fastened to the unit bracket)	1 EA
Recommended Torque Value	M6 SEMS		43 lbf-in (50 kgf-cm)
Working Tools	• Screw Driver Bit ('+', Number 3) • Torque Driver (20-90 lbf-in) • Torque Wrench (10-50 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 10 mm)		


- 2 Pull out the fastening materials so that they do not jut out from the fixing groove of the unit bracket. (Do not pull out completely.) This is depicted in figure below.

Figure 13. Fixing AU on the Pole Mounting Bracket (1)

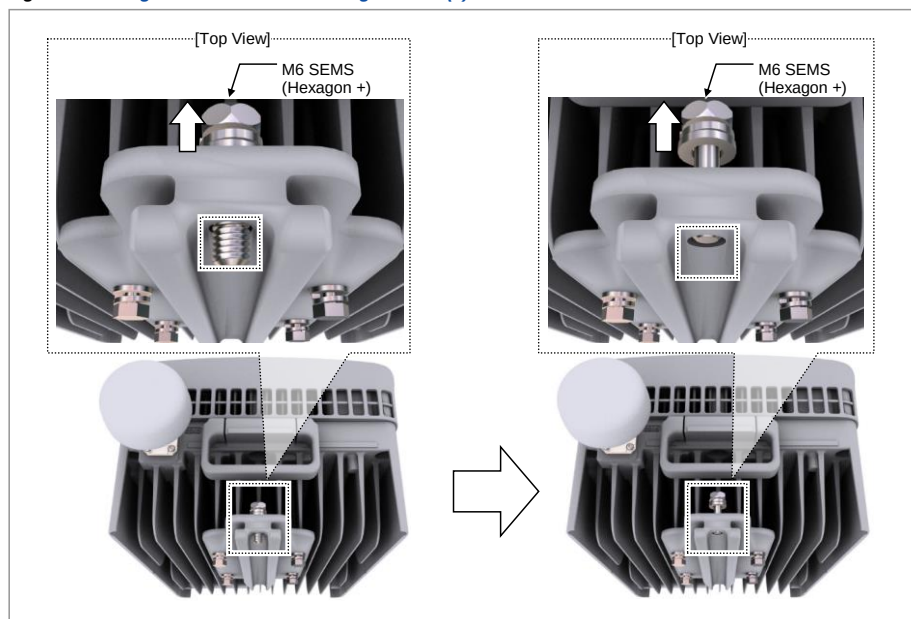


- 3 Place the unit bracket on the fixing grooves of the mounting bracket and push the unit bracket down to fix the AU in place. Figure below depicts this.


Figure 14. Fixing AU on the Pole Mounting Bracket (2)

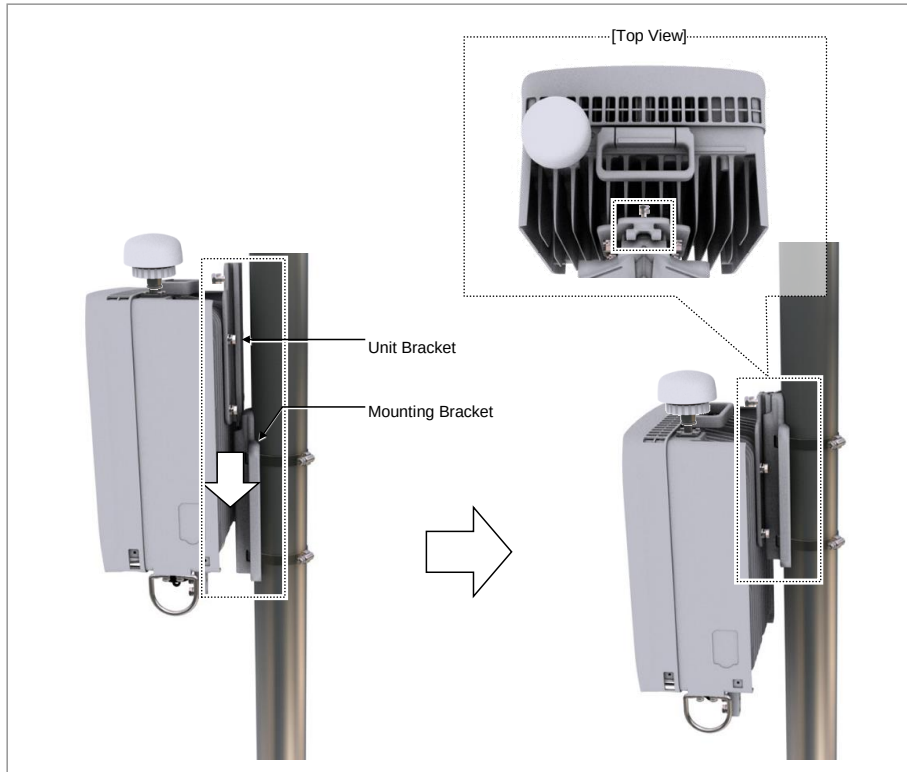

- 4** Fix the unit bracket to the mounting bracket using fasteners as shown in figure below.

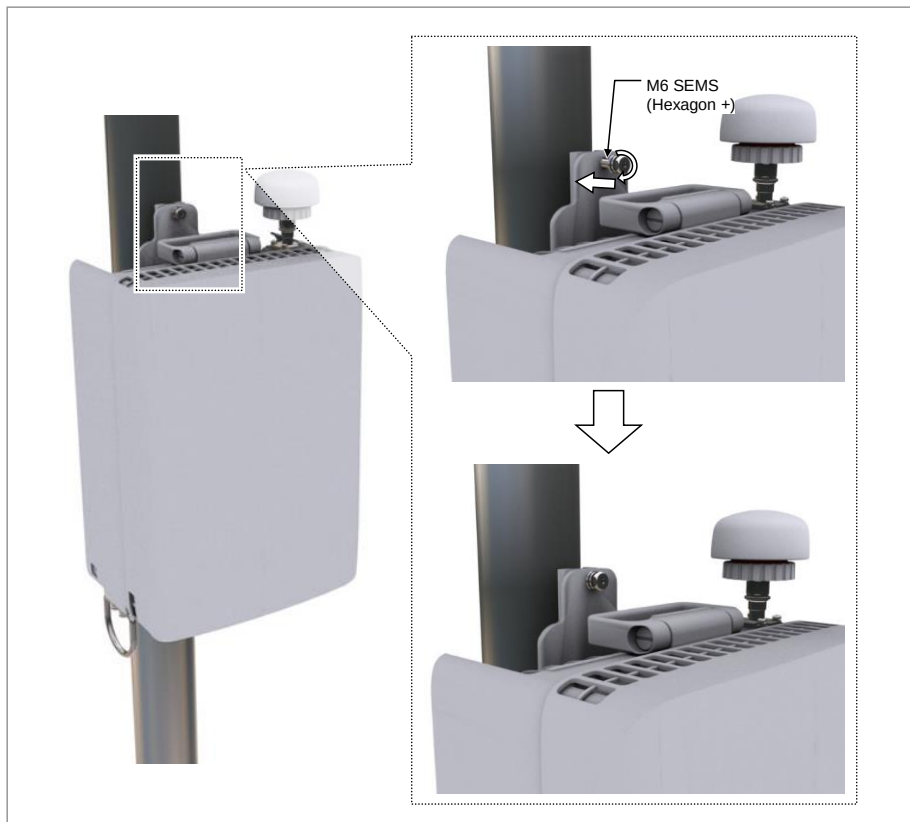Figure 15. Fixing AU on the Pole Mounting Bracket (3)**Using Chain Bracket Assembly****▶ To fix Chain Bracket Assembly on the Pole**

The standard of the pole on which an AU can be attached using a chain bracket assembly is 100 A [Outer Diameter (OD): 4.5 in./114.5 mm]-350 A (OD: 14 in./355.6 mm). The number of AUs (1-3 sector) and the chain bracket assemblies that can be installed depends on the diameter of the pole. (See table below)

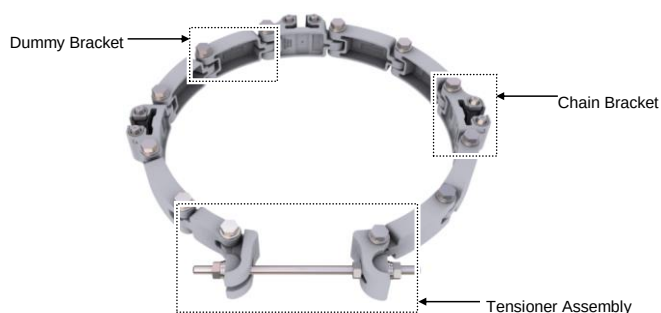

Unit: EA

POLE SIZE (in/mm)	Dummy Bracket	Chain Bracket	Clip on Link Bracket	Tensioner Assembly	M10 L50 Hex (Washer assembly)	M6 L20 Hex. Bolt (Washer assembly × 4 EA)	AU
350 A (14/355.6)	7	3	1~3	1	11	1~3	1~3
300 A (12.5/318.5)	6	3	1~3	1	10	1~3	1~3
250 A (10.5/267.4)	5	3	1~3	1	9	1~3	1~3
200 A (8.5/216.3)	3	3	1~3	1	7	1~3	1~3
150 A (6.5/165.2)	2	2	1~2	1	5	1~2	1~2
125 A (5.5/139.8)	2	2	1~2	1	5	1~2	1~2
100 A (4.5/114.5)	2	1	1	1	4	1	1



Table below shows the configuration of the tensioner assembly.

Parts	EA
Cork	2
M10 × L240 Stud bolt	1
M10 Hexagon nut	3
M10 Sprint washer	2
M10 Plain washer	2
M10 × L50 Hexagon bolt	1
Clamp nut	1
Clamp nut-2	1
Link bracket	1

► To assemble the chain bracket assembly for 350 A pole (3 sector)


- 1 Ensure that the items mentioned in below table are available.

Table 8. Parts and Tools for Assembling Chain Bracket Assembly for 350 A pole (3 sector)


Category	Description	
Parts	Chain bracket	3 EA
	Link bracket	1 EA
	Clamp nut	1 EA
	Clamp nut-2	1 EA
	Dummy bracket	7 EA
	Fasteners	
	M10 × L50 Hexagon bolt (washer assembly)	12 EA
	M10 × L240 Stud bolt	1 EA
	M10 Hexagon nut	3 EA
	M10 Plain washer	2 EA
	M10 Spring washer	2 EA
	Cork	2 EA
Recommended Torque Value	M10 Hexagon bolt	217 lbf-in (250 kgf-cm)
	M10 Hexagon Nut	217 lbf-in (250 kgf-cm)
Working Tools	• Torque Wrench (100-400 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 17 mm) • Spanner (17 mm)	

- 2 Place a clamp nut to the link bracket fixing hole and fix it using fasteners, as shown in figure below.

Figure 16. Fixing Chain Bracket Assembly for 350 A pole (3 sector) (1)

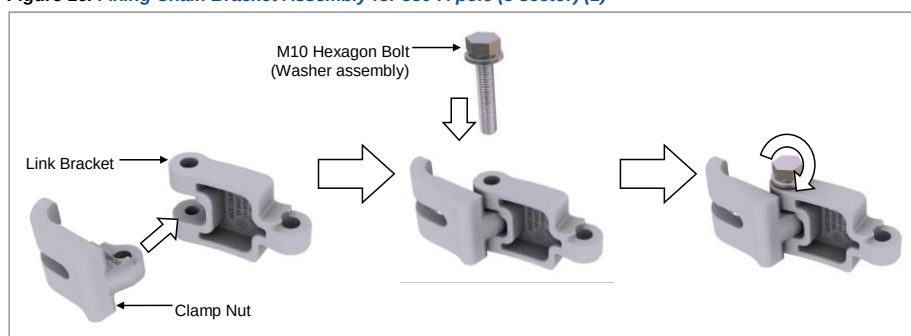


- 3 Place a dummy bracket to the chain bracket fixing hole and fix it using fasteners. Figure below depicts this.

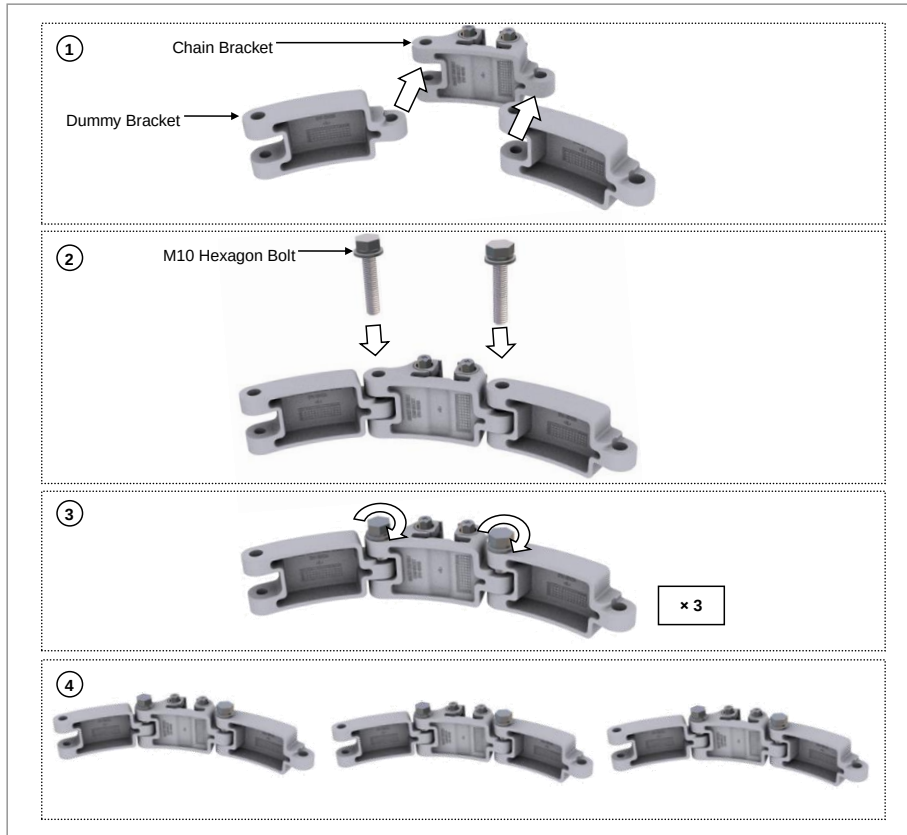Figure 17. Fixing Chain Bracket Assembly for 350 A pole (3 sector) (2)


4 Connect all dummy brackets using fasteners, as depicted in figure below.

Figure 18. Fixing Chain Bracket Assembly for 350 A pole (3 sector) (3)

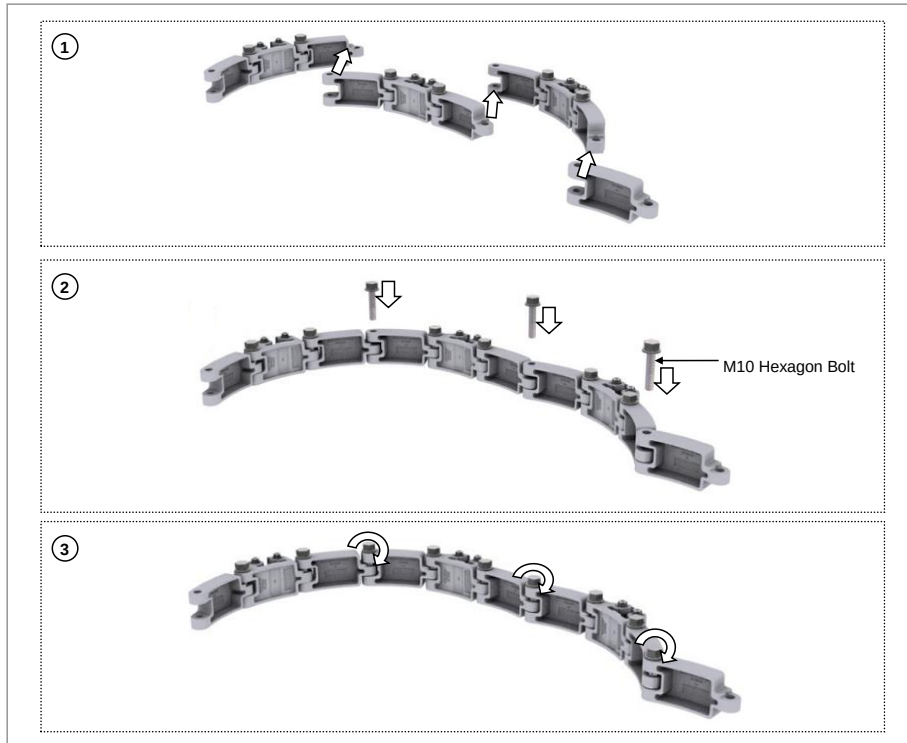


- 5 Place a link bracket and a clamp nut-2 to the dummy bracket fixing hole and fix it using fasteners. Figure below shows this.

Figure 19. Fixing Chain Bracket Assembly for 350 A pole (3 sector) (4)

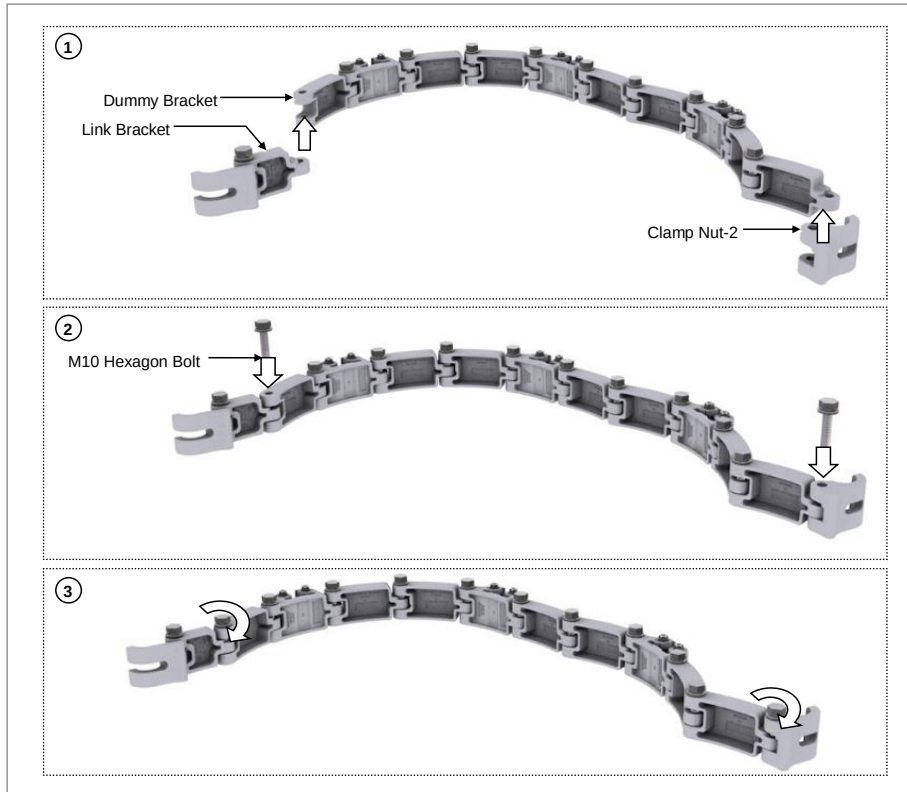


- 6** Place a stud bolt to the clamp nut-2 fixing hole and fix it using fasteners. Figure below shows this.

Figure 20. Fixing Chain Bracket Assembly for 350 A pole (3 sector) (5)

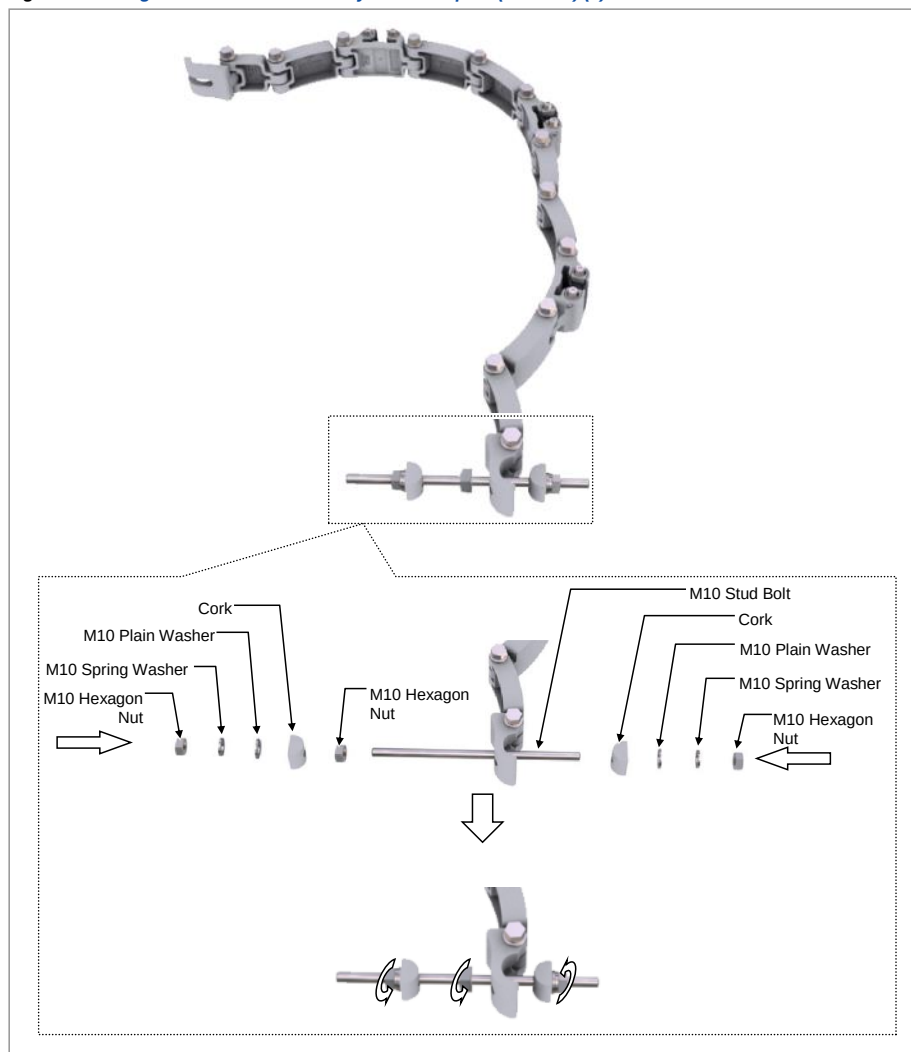

The length of the chain bracket assembly can be adjusted using the dummy bracket.

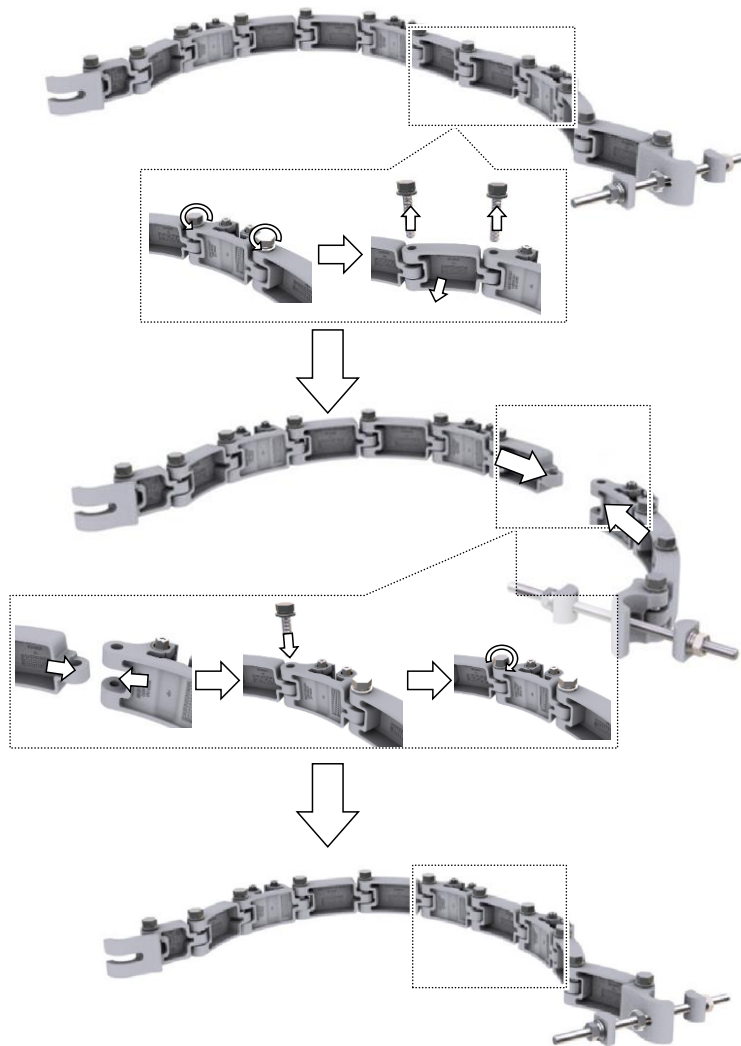

► To fix the chain bracket assembly temporarily

- 1 Ensure that the items mentioned in below table are available.


Table 9. Parts and Tools for Fixing Chain Bracket Assembly on the Pole

Category	Description	
Parts	Chain bracket assembly	1 EA

Category	Description	
Recommended Torque Value	M10 Hexagon Nut	217 lbf-in (250 kgf-cm)
Working Tools	• Torque Wrench (100~400 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 17 mm) • Spanner (Hexagon Head: 17 mm)	


- 2 Open the chain bracket assembly on the ground and place it on the pole, as depicted in figure below.

Figure 21. Fixing Chain Bracket Assembly on the Pole (1)

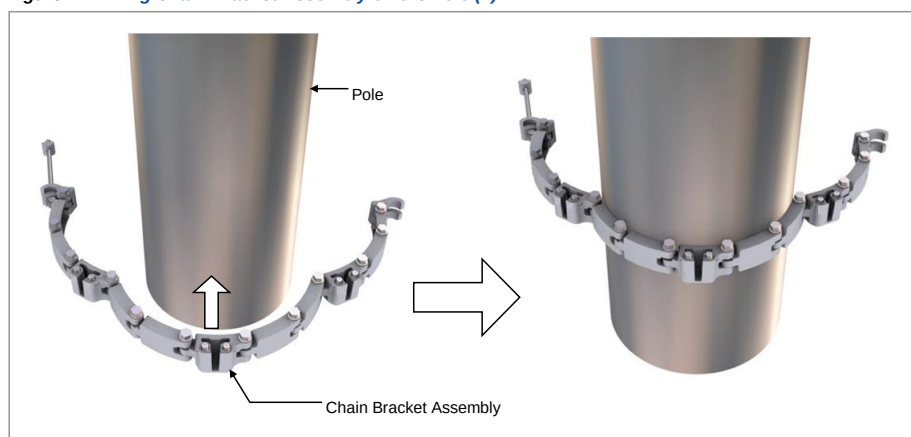


- 3 Fix the chain bracket assembly in place temporarily using the hexagon nuts on each side of the stud bolt, as depicted in figure below.

Figure 22. Fixing Chain Bracket Assembly on the Pole (2)

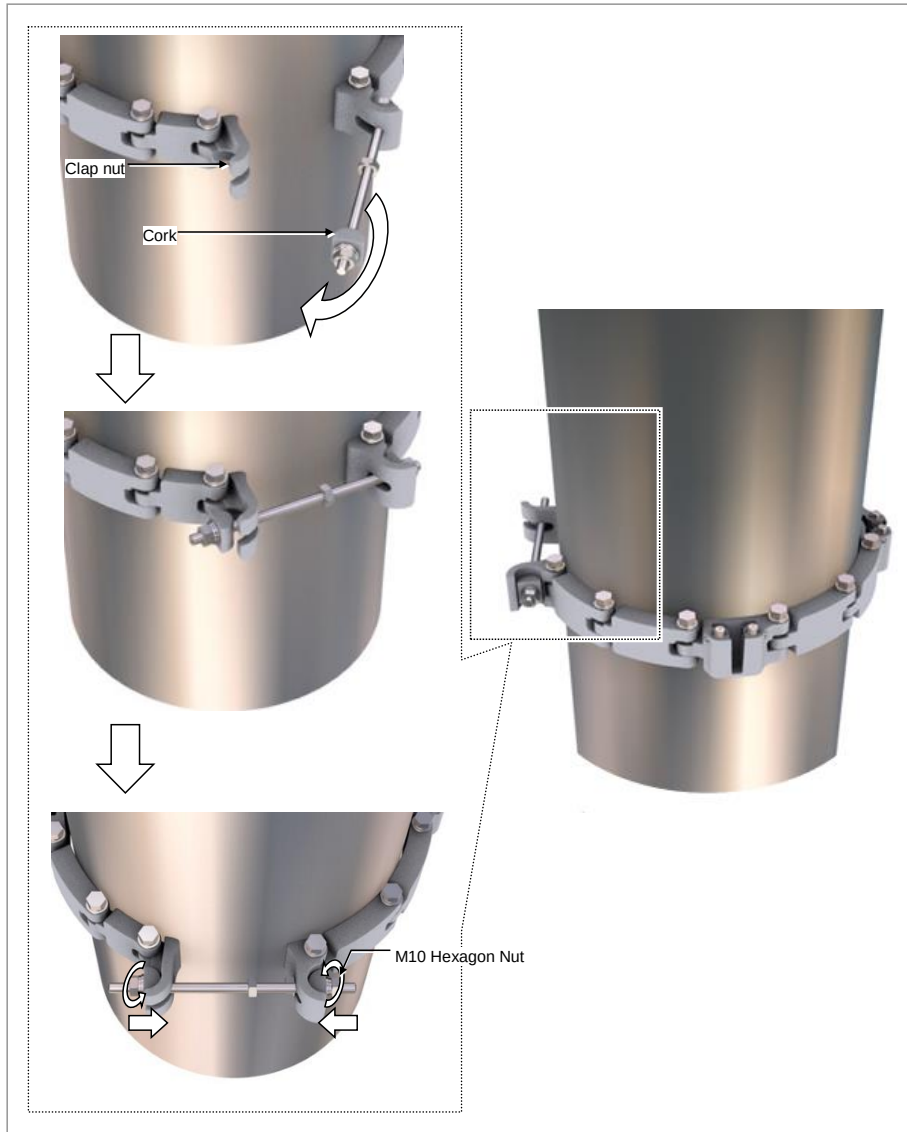


The extra space on each side of the stud bolt (A) must be equal when temporarily fixing the chain bracket assembly in place.

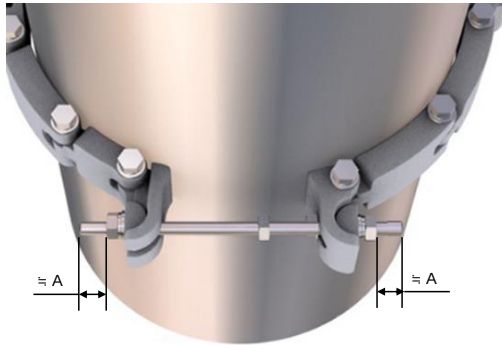


- 4 Use the hexagon nut in the center of the stud bolt to fix the clamp nut-2 in place, as depicted in figure below.

Figure 23. Fixing Chain Bracket Assembly on the Pole (3)

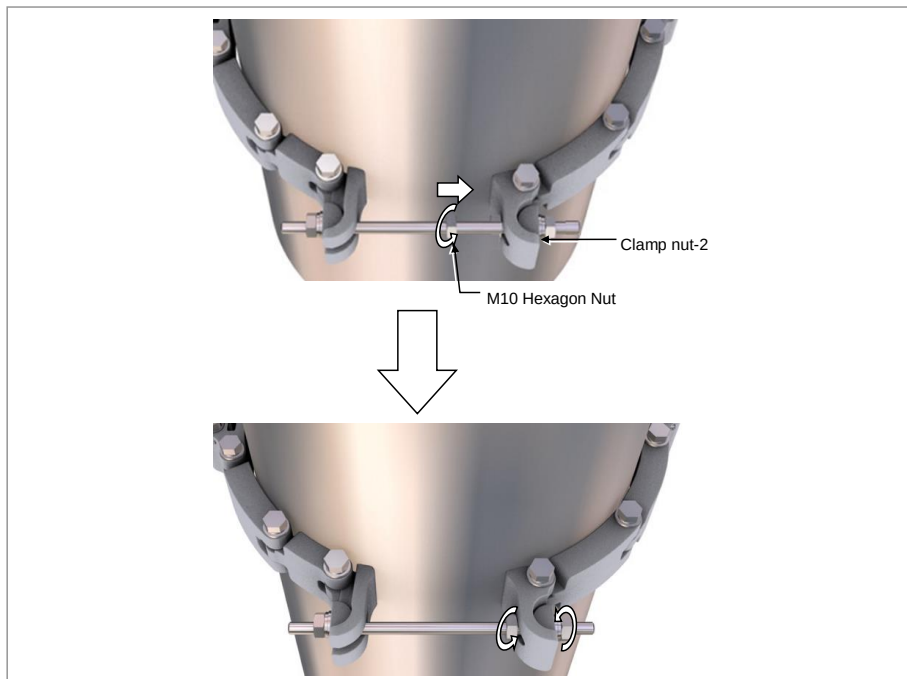

- 5 Unfasten the temporarily fixed hexagon nut to disassemble the chain bracket assembly, as depicted in figure below.

Figure 24. Fixing Chain Bracket Assembly on the Pole (4)

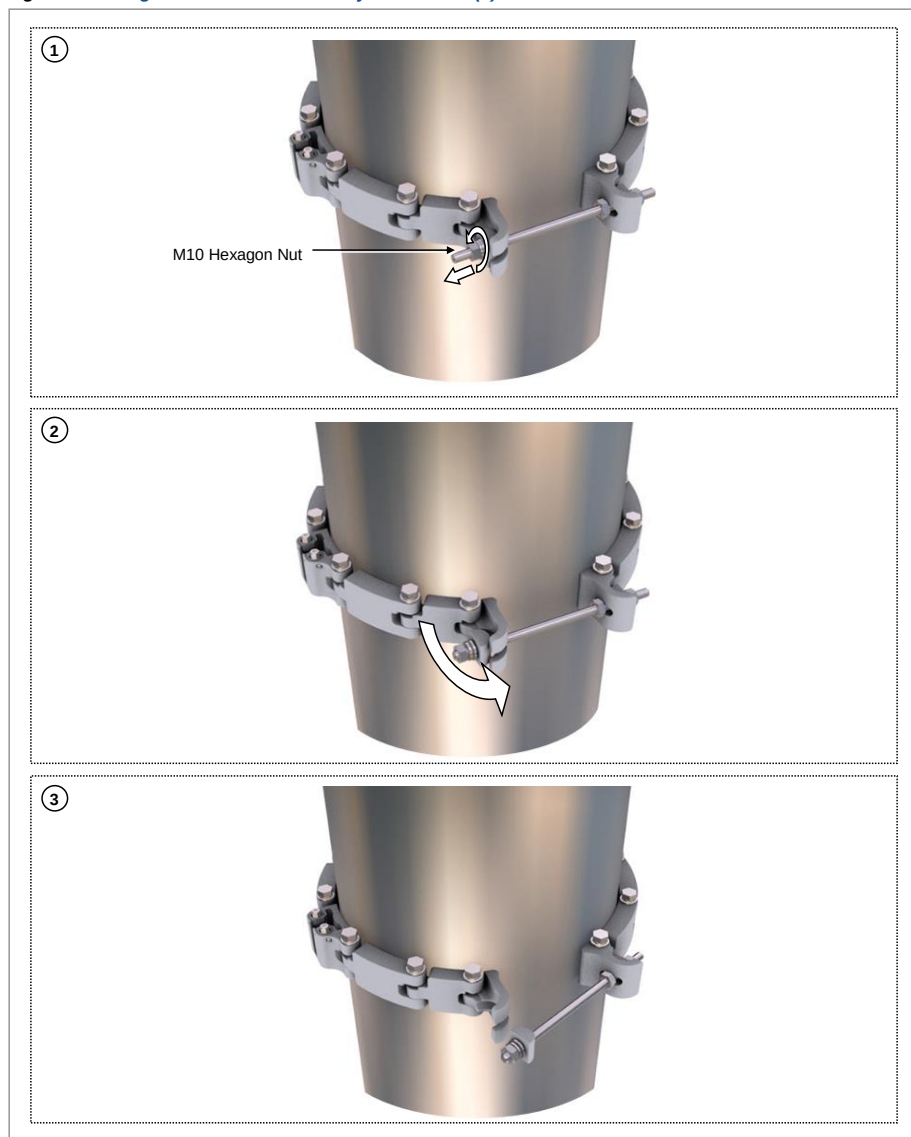

▶ To fix the chain bracket assembly on the pole



The following is based on the 3 sector type that is installed on a 350 A pole (OD:

14 in./355.6 mm).


- 1 Ensure that the items mentioned in below table are available.

Table 10. Parts and Tools for Fixing Chain Bracket Assembly on the Pole


Category	Description	
Parts	Chain bracket assembly	1 EA
Recommended Torque Value	M10 Hexagon Nut	217 lbf-in (250 kgf-cm)
Working Tools	• Torque Wrench (100-400 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 17 mm)	

- 2 Open the chain bracket assembly and place it in the position on the pole where the AU is to be installed. Figure below depicts this.


Figure 25. Fixing Chain Bracket Assembly on the Pole (5)

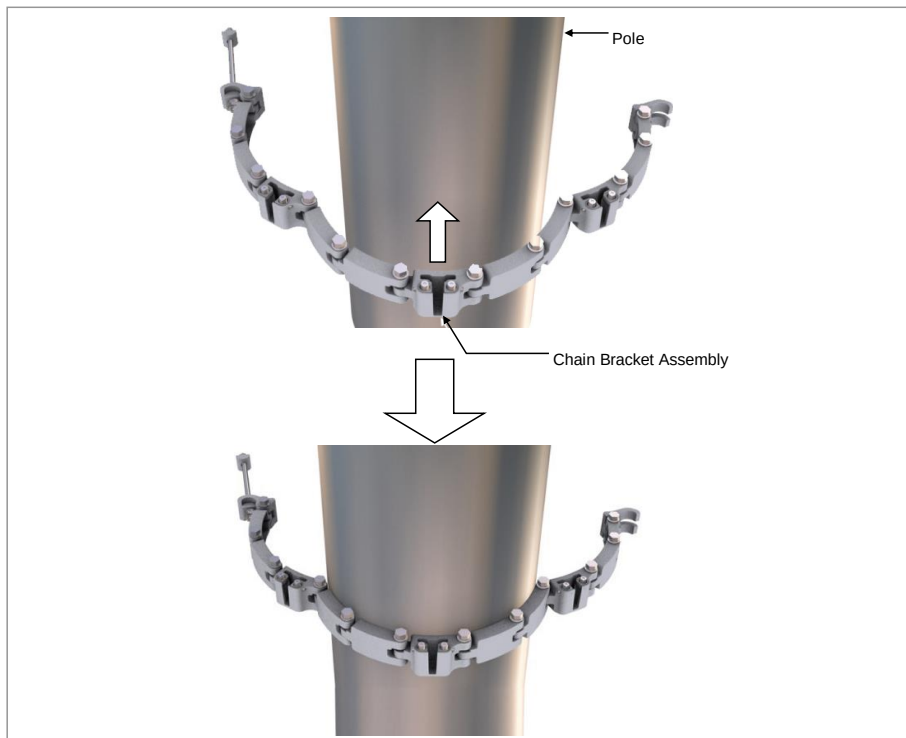

- 3 Fix the chain bracket assembly to the pole using fasteners. Figure below depicts this.

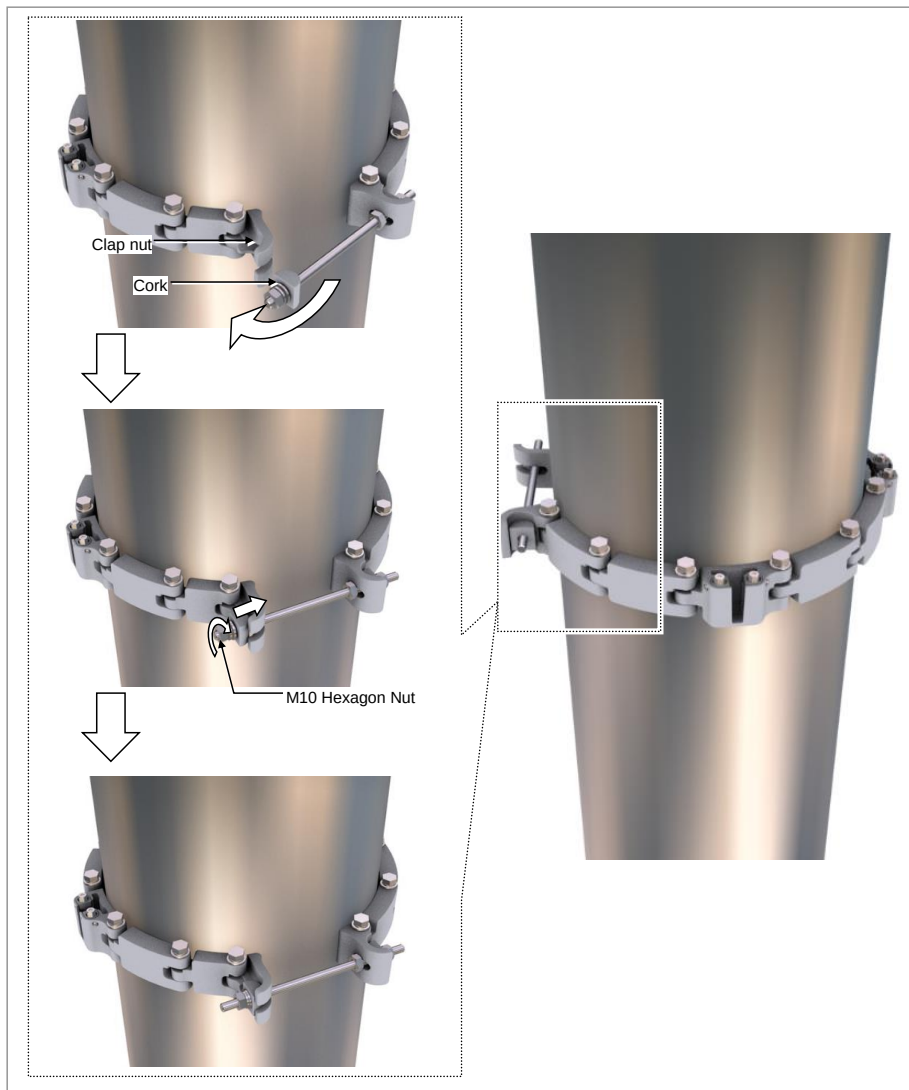
Figure 26. Fixing Chain Bracket Assembly on the Pole (6)

The chain bracket assembly is installed using the same method for all 1-3 sector types.

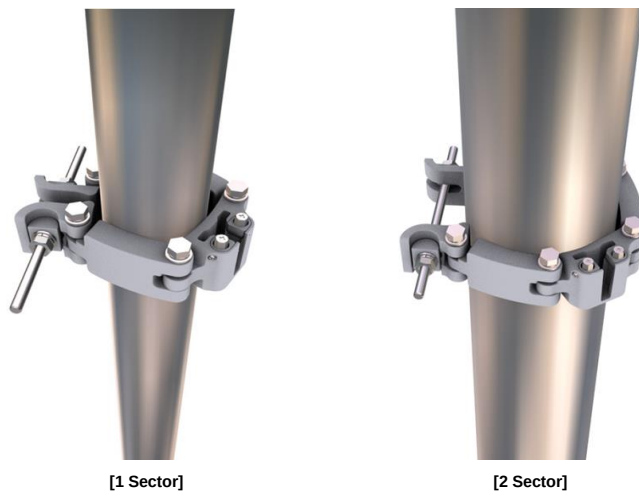


- 4 Check the level of chain bracket assembly on a pole and adjust the level as detailed in figure below.

Figure 27. Fixing Chain Bracket Assembly on the Pole (7)

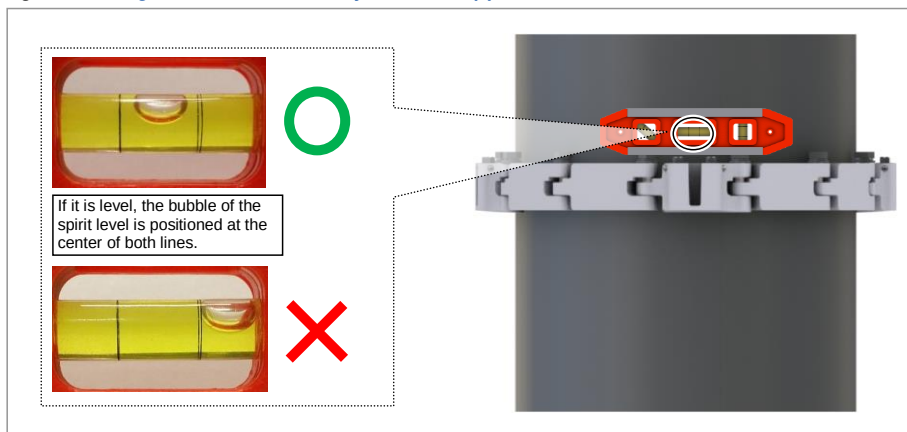

-  When fixing the chain bracket assembly on a pole, be sure to check the level of bracket. After finishing the installation, adjust the level minutely.
-  When poor leveling happens, adjust the position of fasteners used to fix the chain bracket assembly.
-  After the chain bracket assembly is fixed, the extra space on each side of the stud

bolt (A) must be equal, as shown in figure below.

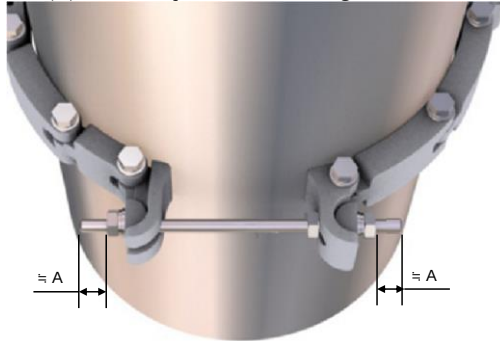


Fixing AU on the Chain Bracket Assembly

► To fix the AU on the chain bracket assembly

- 1 Place the clip-on unit bracket on the fixing grooves of the chain bracket and push the clip-on bracket down until it clicks to fix the AU in place. Figure below depicts this.

Figure 28. Fixing AU on the Pole Chain Bracket Assembly (1)

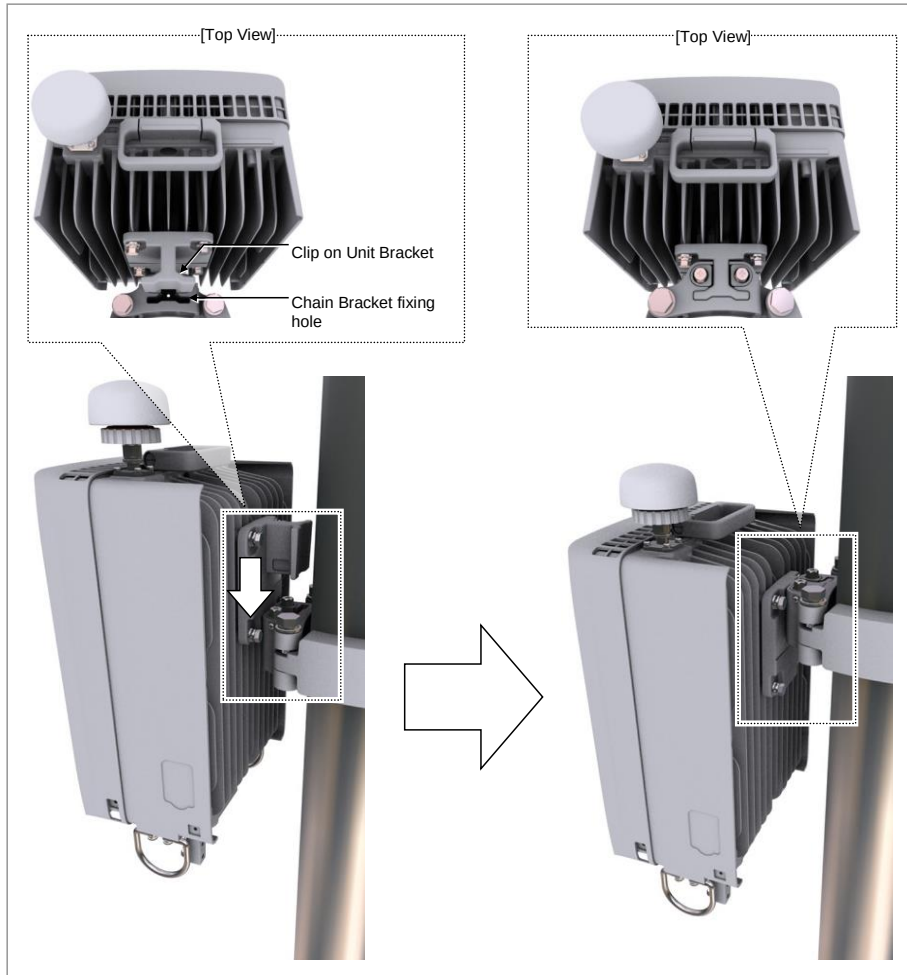

2 Fix all AUs using the same method, as shown in figure below.

Figure 29. Fixing AU on the Pole Chain Bracket Assembly (2)



All AUs are fixed to the chain bracket assembly using the same method.



[1 sector]



[2 sector]

Wall Type

An AU can be fixed on wall using a mounting bracket. This section details the procedures for fixing the mounting bracket on the wall and fixing the AU on the bracket.

Marking and Drilling for Wall Mounting

► To mark on the wall

- 1 Ensure that the items mentioned in below table are available.

Table 11. Tools for Marking

Category	Description
Working Tools	• Tape Measure • Permanent Marker • Level




Perform leveling test before drilling by referring to *System Leveling*, to ensure the positions marked are horizontal or vertical. If the result shows the marked positions are not horizontal or vertical, modify the marking positions.



When the position to place the system is determined, place the system on that position and then mark the positions where anchor bolts are to be fixed. This reduces marking error range.


- 2 Check the distance between the location for fixing the AU and the anchor bolt hole, as shown in figure below.

Figure 30. AU Marking Dimensions for Wall Type

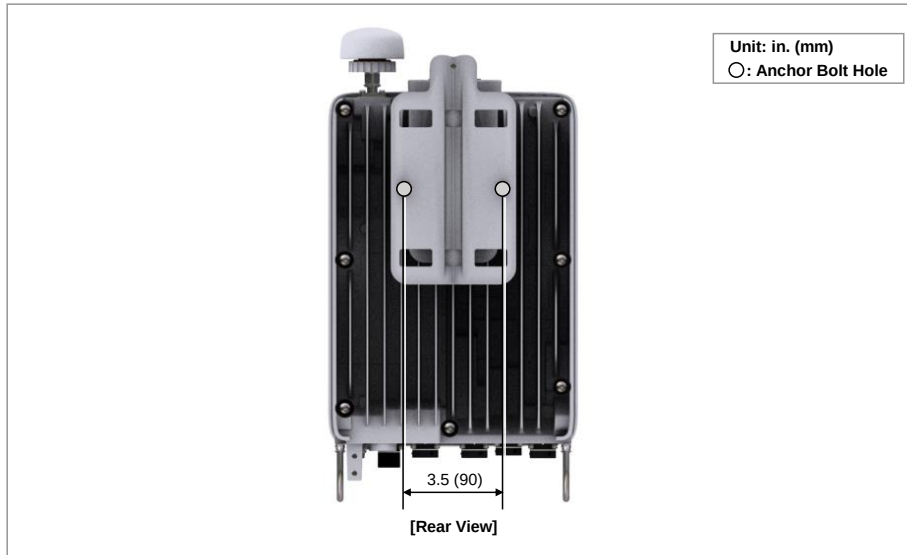

- 3 Place the mounting bracket on the fixing location, check the level status using a level, and adjust the level of the bracket assembly.
- 4 If the level status is normal, mark the anchor bolt holes on the wall. This is detailed in figure below.

Figure 31. Marking Wall Type

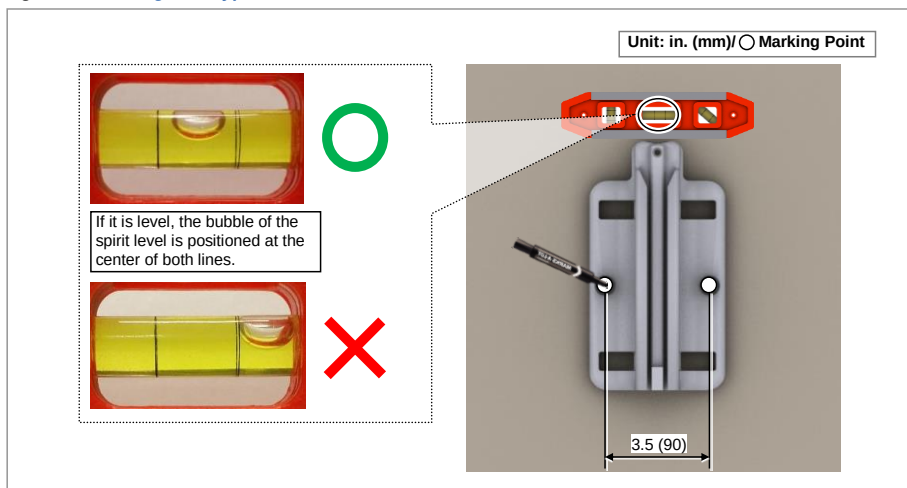

► To drill the anchor holes and fix the anchors

- 1 Ensure that the items mentioned in below table are available.


Table 12. Parts and Tools for Drilling and Anchoring

Category	Description	
Parts	M8 Set Anchor Assembly	2 EA
Working Tools	• Hammer Drill • Concrete Drill Bit (12 mm) • Vacuum Cleaner • Hammer • Anchor Punch (For M8 Set Anchor)	


Table 13. Anchor Bolt Drill Bits and Hole Depth

Category	Anchor Bolt	Drill Bits	Hole Depth
AU	M8	12 mm (0.5 in.)	38 mm (1.5 in.)

[Anchor Hole Cross Section]




* Remove the debris from the drilled hole.

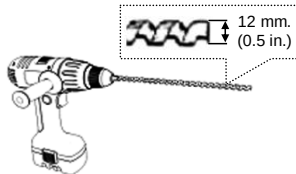

- 2 Drill anchor holes at the marked points. Remove dust from the holes using a vacuum cleaner. Fix set anchor to the drilled hole. This is shown in figure below.

(Ensure you do not lose the M8 hexagon nut, spring washer, and plain washer.)

Figure 32. Drilling and Anchoring

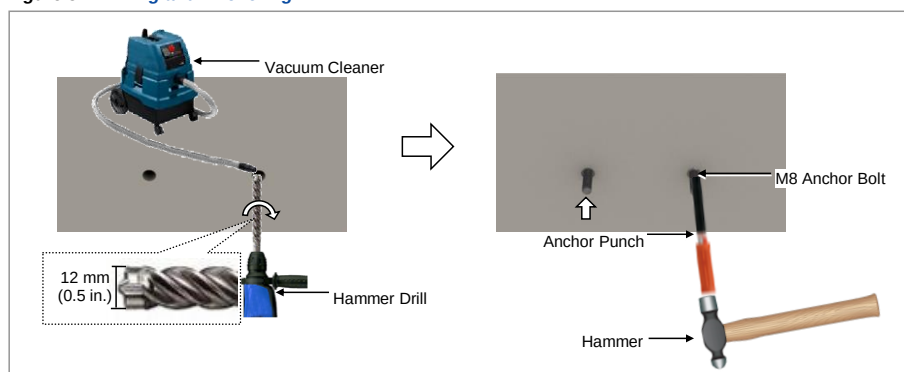

Fixing Mounting Bracket on the Wall

► To fix the mounting bracket on the wall


- 1 Ensure that the items mentioned in below table are available.

Table 14. Parts and Tools for Fixing Mounting Bracket on the Wall


Category	Description		
Parts	Mounting bracket		1 EA
	Fastener	M8 Plain Washer	2 EA
		M8 Spring Washer	2 EA
		M8 Hexagon Nut	2 EA
Recommended Torque Value	M8 Hexagon Nut		110 lbf-in (127 kgf-cm)
Working Tools	• Torque Wrench (100-400 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 13 mm)		

- 2 Place the mounting bracket to the anchor bolt and fix the bracket using fasteners, as depicted in figure below.

Figure 33. Fixing Mounting Bracket on the Wall

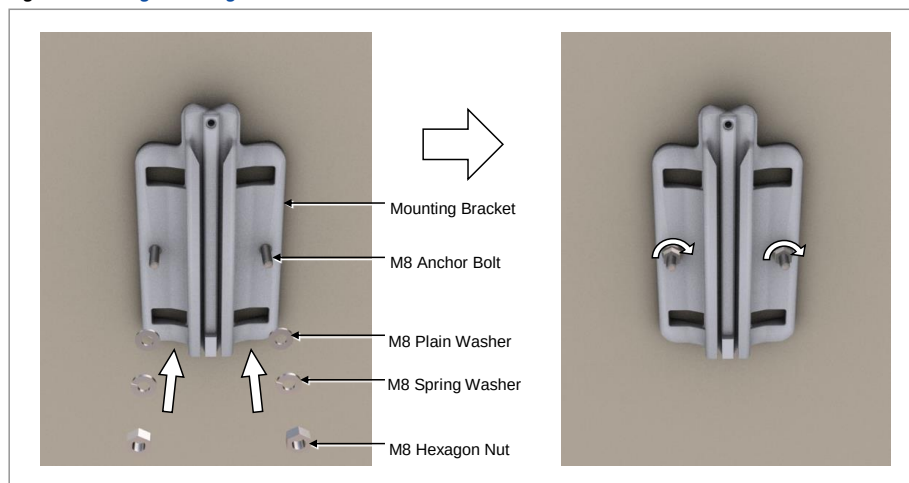

Ensure the fixing hole is upward, as depicted in figure below.

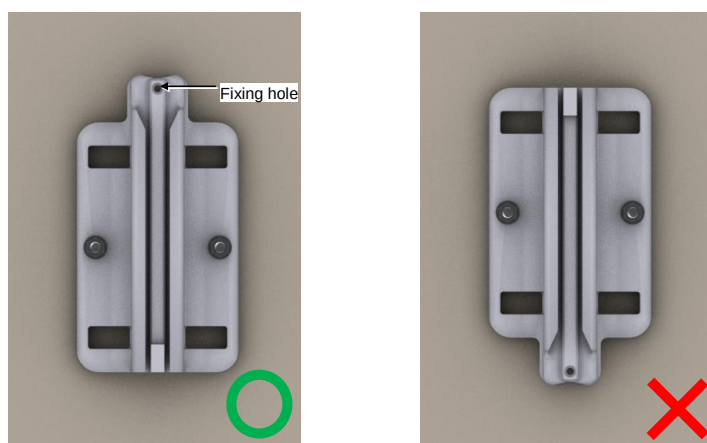

Fixing on the Wall

► To fix the AU on the wall


- 1 Ensure that the items mentioned in below table are available.

Table 15. Parts and Tools for Fixing AU on the Wall

Category	Description		
Parts	Fasteners	M6 × L23 SEMS (Hexagon +) (Fastened to the unit bracket)	1 EA
Recommended Torque Value	M6 SEMS		43 lbf-in (50 kgf-cm)
Working Tools	• Screw Driver Bit ('+', Number 3) • Torque Driver (20-90 lbf-in) • Torque Wrench (10-50 lbf-in) • Torque Wrench Spanner Head (apply Hexagon Head: 10 mm)		


- 2 Pull out the fastening materials so that they do not jut out from the fixing grooves of the unit bracket. (Do not pull out completely.) This is depicted in figure below.

Figure 34. Fixing AU on the Wall (1)

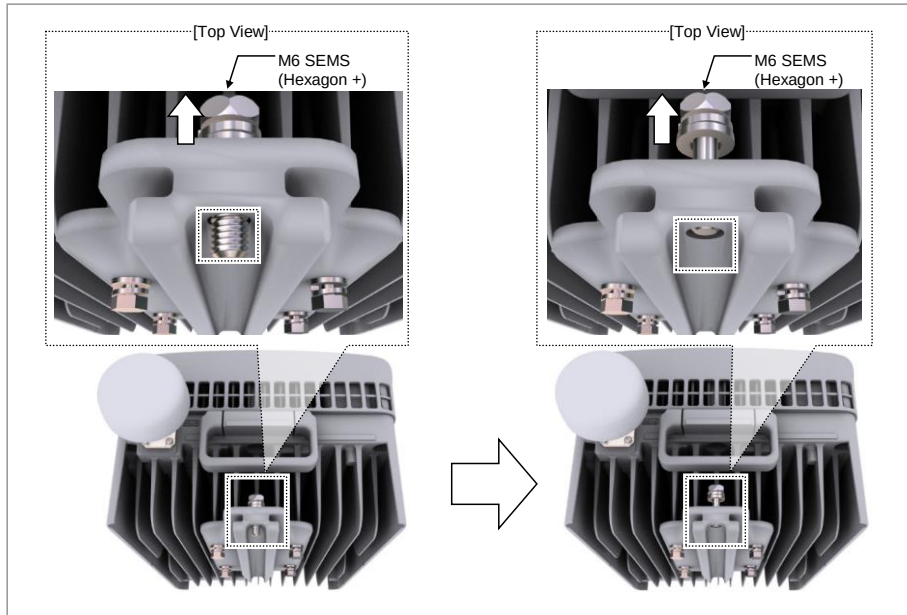


- 3** Place the unit bracket on the fixing grooves of the mounting bracket and push the unit bracket down to fix the AU in place. Figure below depicts this.

Figure 35. Fixing AU on the Wall (2)

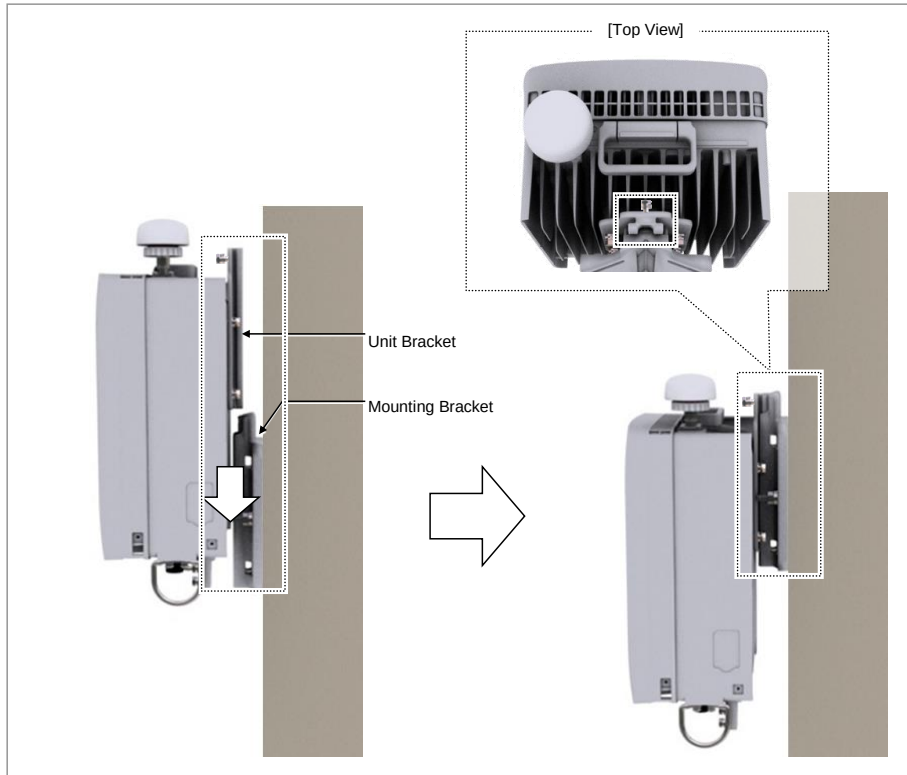

- 4 Fix the unit bracket to the mounting bracket using fasteners as shown in figure below.

Figure 36. Fixing AU on the Wall (3)

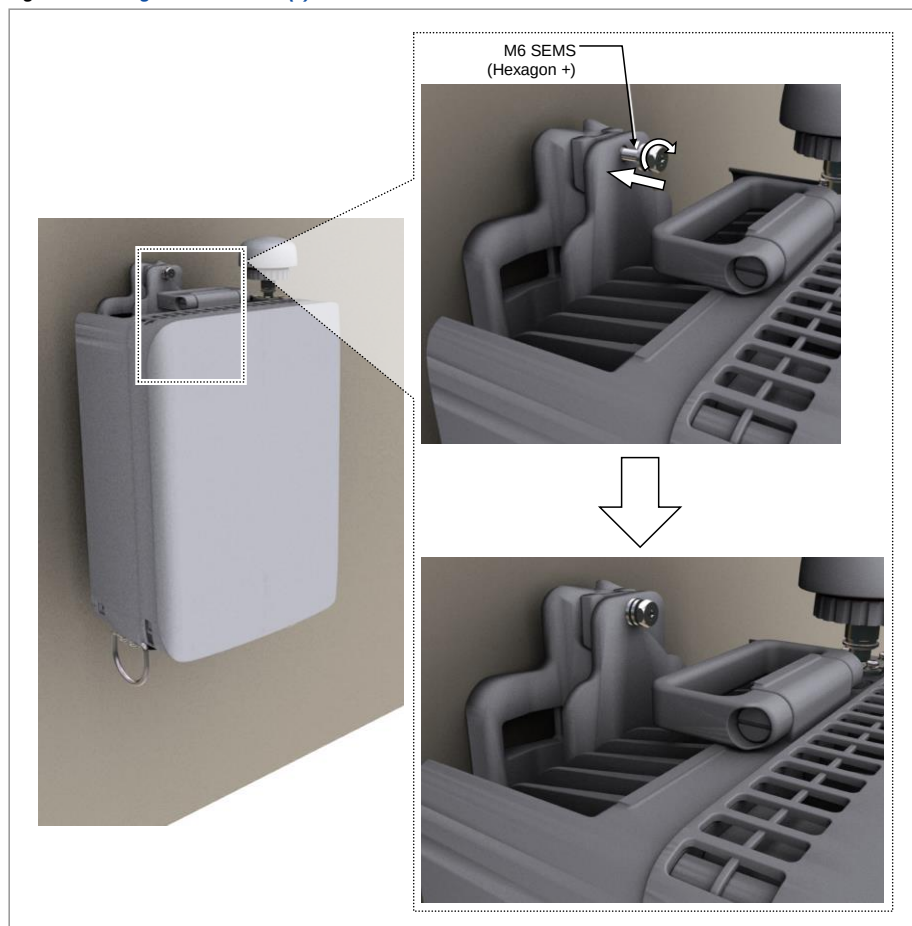

Chapter 3


Connecting Cables

This chapter describes the procedures to connect cables to an AU system and to label the cables.

Cabling Procedure

Figure below depicts the procedure to connect system cables.


Figure 37. Procedure to Connect System Cable

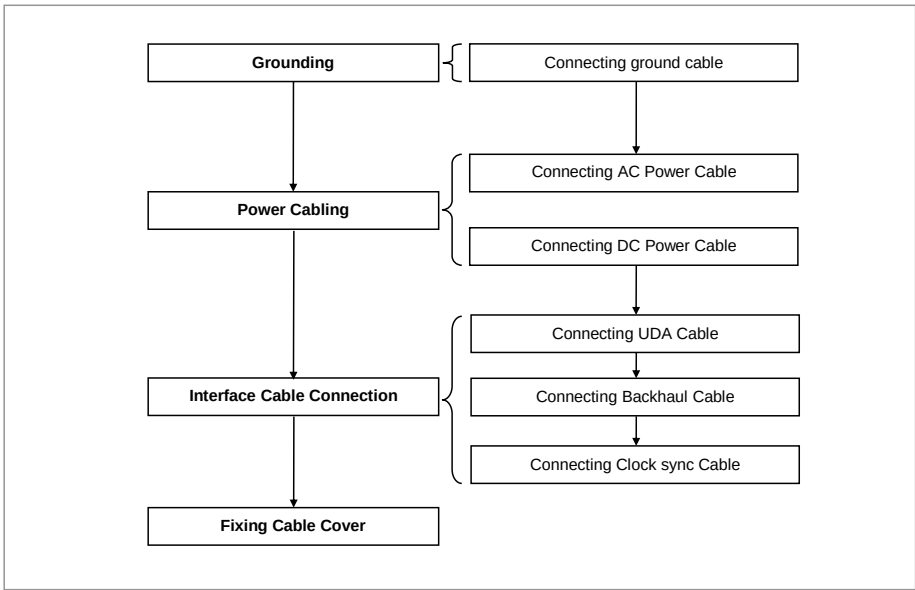

Guidelines for Cable Connections

Figure below depicts the sequence of operations for connecting cables to the system.

Figure 38. Cable Connection Procedure

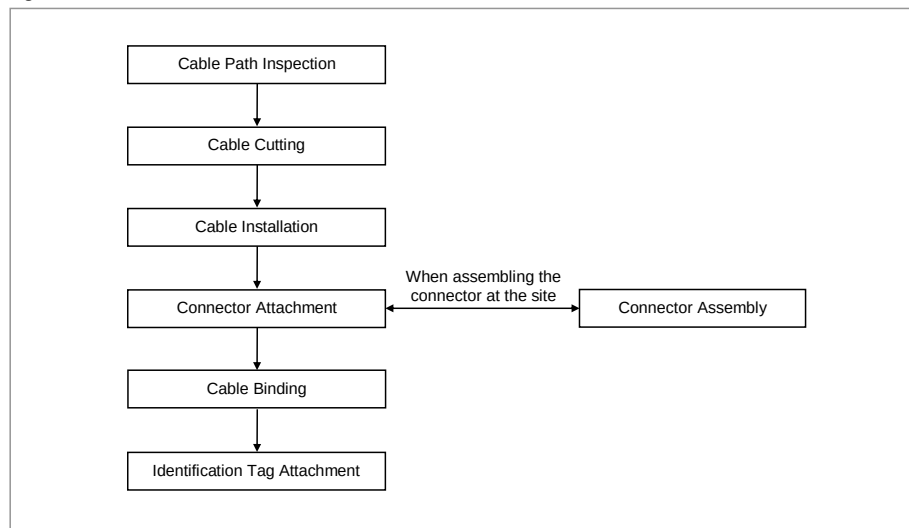

When cutting the cable after installation, ensure that the connector is disconnected. The cable installation while the connector is connected to the system may cause contact failure, or damage to the assembled connector and the cable, due to cable tension or operator mistakes.



The sequence of cable cutting and installation of the cable workflow can be changed depending on the field situation such as "cutting after installing" or "installing after cutting".

Cable Path Inspection

When installing a cable that interconnects rectifier, Main Ground Bar (MGB), and backhaul device, within the system, cable path, length, and cable installation method must be inspected.

To inspect the cable path, ensure the following.

- A minimum cable length must be selected, so that the length does not affect the cable installation and maintenance.

- The cable must be placed in a location where the cable is not damaged by external factors such as power line, flooding, and footpaths.
- In areas where the cable may be damaged by external factors, ensure that measures are taken to prevent damage to the cable, such as cable tray, ducts, and flexible pipe.

Cable Cutting

Measure the exact distance after carefully checking the route, and cut the cable using a cutting tool.

To cut the cable, follow these guidelines:

- Cut the cable to the length determined in the *Cable Path Inspection* step.
- Use a dedicated cable cutting tool.
- Cut the cable at right angles.
- Be careful to keep the cable away from moisture, iron, lead, dust, or other foreign material when cutting.
- Remove any foreign material attached to the cable using solvent and a brush.

Cable Installation

This process involves running the cable along the cabling path to the target connector of the system or an auxiliary device. This is done after cable path inspection and cable cutting are completed.

To install the cable, follow these guidelines:

- Be careful not to damage the cable.
- If the cable is damaged, cut out the damaged section before installing, or replace the cable.
- Run the cable so that it is not tangled. In particular, when installing the cable from a horizontal section to a vertical section, be careful not to reverse the upper and lower lines of the cable.
- Always use the maximum curvature radius possible, and ensure that the minimum curvature radius specification is complied with.
- If the cable needs to be protected, use suitable protective cover such as PVC channel, spiral sleeve, flexible pipe, and cable rack.
- Install the DC power cable and the data transmission cable away from the AC power cable to prevent electromagnetic induction.

Table below provides the recommended minimum allowed cable bend radius of different types of cables

Table 16. Recommended Minimum Allowed Cable Bend Radius

No	Type	Allowed Cable Bend Radius	
1	Ground/Power Cable	Eight times of the cable external diameter	
2	Optical Cable (indoor)	Unloaded Condition (Installed) : 20 times of cable external diameter	Loaded Condition (During Installation) : 40 times of cable external diameter
3	Optical Cable (Outdoor)	Unloaded Condition (Installed) : 10 times of cable external diameter	Loaded Condition (During Installation) : 20 times of cable external diameter
4	UTP/FTP/S-FTP/F-UDP Cable	Four times of the cable external diameter	

※ If the allowed cable bend radius is specified by the manufacturer, comply with the bend radius specified.

Cable Binding

This process involves fixing and arranging an installed cable using binding thread, cable ties, binding wire, and ram clamps.

Follow these guidelines when binding a cable.

- Be careful not to damage the cable during binding.
- Use proper cable binding tools according to the target location (indoor or outdoor) and the type of the cable (power supply cable, optical cable, or feeder line).
- Ensure the cutting sections of the cable tie and the binding line are not exposed to the outside. This may cause damage to the cables or personal injury.
- Cut off the remainder of the cable thread by leaving about 50 mm of extra length to prevent the knot from easily getting untied.
- If there is a chance of contact-failure to occur in the connector connection due to tension, bind the cable at the closest location to the connector.

Connector Attachment

This process involves assembling a connector to an installed cable or to a device on the site.

Follow these guidelines when attaching the connector.

- Ensure operator is fully aware of the connector assembly method before assembling the connector. Assemble the connector in accordance with its pin map.
- Each connector has a hook to prevent its core positions from being changed.
- Check the corresponding grooves before connecting the connector to another connector.
- Use a heat shrink tube at the connector connection for cables that are installed

outdoor, such as feeder lines, to prevent water leakage and corrosion from occurring at the part exposed to the outside.

- Connect each cable of the connector assembly in a straight line.
- Be careful when connecting the cable so that contact failure does not occur at the connector connection due to tension.

Identification Tag Attachment

This process involves attaching a marker cable tie, a nameplate, and a label to both ends of a cable (connections to a connector) to identify the use of the cable and the cabling path.

Follow these guidelines when attaching an identification tag.

- When installing the cable outdoor, use relief engraving and coated labels to prevent the markings from being erased.
- Since the form and attachment method for identification tags are different for each provider, consult with the provider before attaching the tags.



When connecting the cables, always connect the ground cable first. If a worker contacts the equipment, connects a cable, or performs maintenance without connecting the ground cable, the system can be damaged or the worker may be injured due to static electricity and short circuit.



When performing cable work for the system, proceed with the ground work before any other work to prevent errors occurring due to static electricity and other reasons.



After completing cable installation, unused ports must be capped.



When installing, take care not to overlap or tangle the cables. In addition, consider future expansion. Install DC power cable and data transmission cable away from AC power cable to prevent electromagnetic induction.



Ensure the work is done by personnel properly trained for the cabling job.

Cabling Diagram

This section describes the different cabling options for the AU.

For AC Type

Figure below depicts the cabling diagram of AC type AU.

Figure 39. Cable Diagram-AC Type

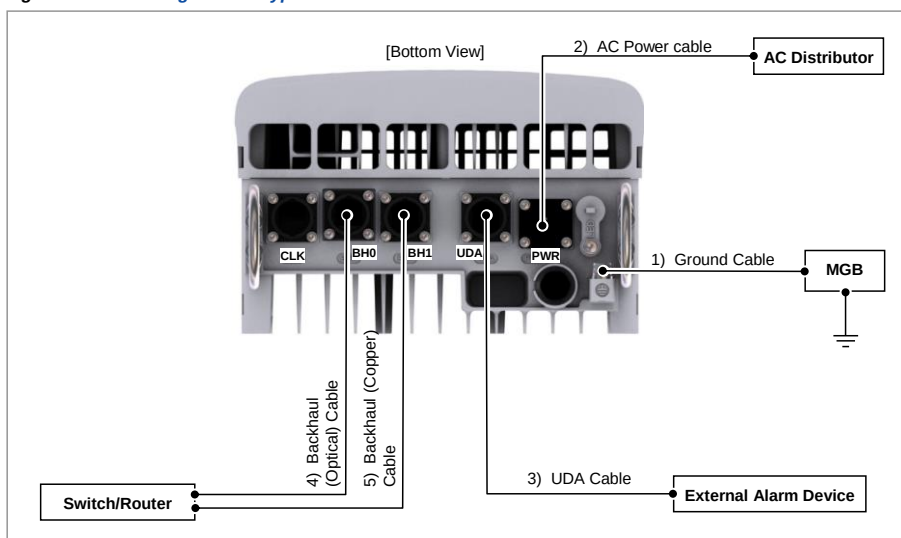


Table below lists the main specifications of the AC type AU cable connections.

Table 17. AU Connection Cable-AC Type

From	To	Cable
MGB	AU	1 Ground Cable : 6 AWG × 1C
AU	AC: Distributor	2 AC Power Cable: 14 AWG or 1.5 mm ² × 3C
	Switch	3 Backhaul (Optical) Cable : Single Mode (Outdoor Type)
	Switch	4 Backhaul (Copper) Cable Assembly : (24 AWG, 4P, CAT6a, F-UDP)
	External Alarm Device	5 UDA Cable : UDA Cable Assembly



The inlet hole finishing method of external equipment must be done after

consultation with operation company, if the cable is connected to external equipment such as optical distribution box.

- The cables: Power cable, Backhaul (Optical and Copper) cables, and UDA cable

For DC Type

Figure below depicts the cabling diagram of DC type AU.

Figure 40. Cable Diagram-DC Type

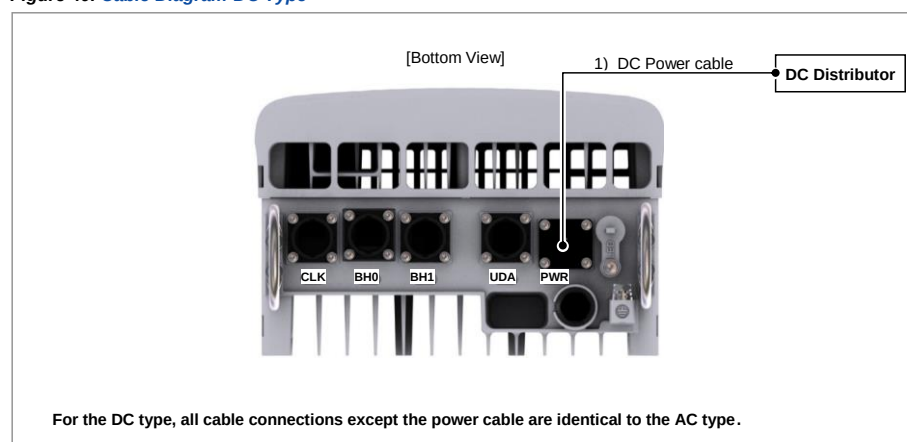


Table below lists the main specifications of the DC type AU cable connections.

Table 18. AU Connection Cable DC Type

From	To	Cable
MGB	AU	1 Ground Cable : 6 AWG × 1C
AU	DC: Distributor	2 DC Power Cable: 12 AWG or 2.5 mm ² × 2C
	Switch	3 Backhaul (Optical) Cable : Single Mode (Outdoor Type)
		4 Backhaul (Copper) Cable Assembly : (24 AWG, 4P, CAT6a, F-UDP)
	External Alarm Device	5 UDA Cable : UDA Cable Assembly



The inlet hole finishing method of external equipment must be done after consultation with operation company, if the cable is connected to external equipment, such as optical distribution box.

- Cables: Power cable, Backhaul (Optical and Copper) cables, and UDA cable

Cascade Cabling (optional)

Figure below depicts the cabling diagram for 2 sector cascade AU.

Figure 41. Cable Diagram (Optional, 2 sector cascade)

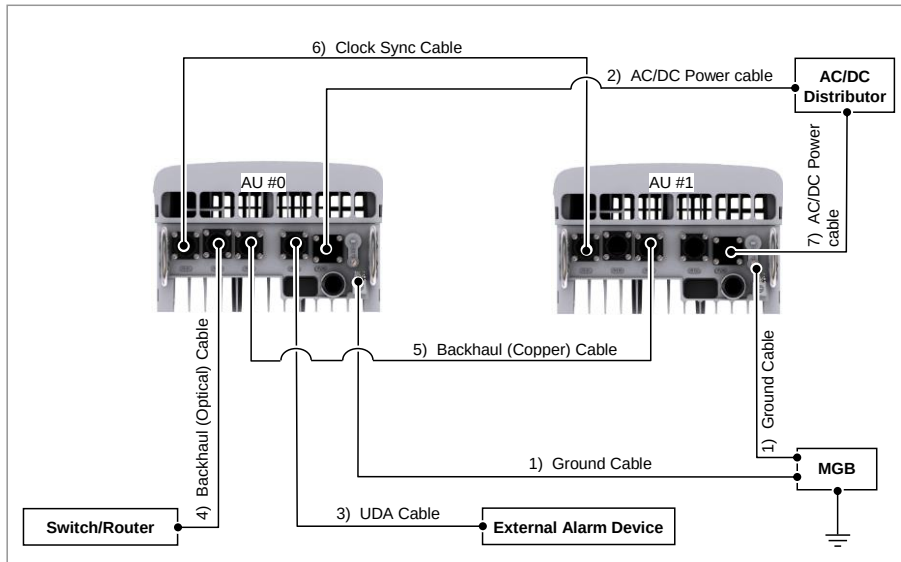


Table below lists the main specifications of the cascade type AU cable connections.

Table 19. AU Connection Cable (Optional, 2 sector cascade)

From	To	Cable
MGB	- AU #0 - AU #1	1 Ground Cable : 6 AWG × 1C
#0 AU	- AC: Distributor - DC: Distributor	2 AC Power Cable: 14 AWG or 1.5 mm × 3C DC Power Cable: 12 AWG or 2.5 mm × 2C
	External Alarm Device	3 UDA Cable Assembly
	Switch/Router	4 Backhaul (Optical) Cable : Single Mode (Outdoor Type)
	#1 AU	5 Backhaul (Copper) Cable Assembly : (24 AWG, 4P, CAT6a, F-UDP)
	#1 AU	6 Clock Sync Cable Assembly
#1 AU	AC or DC: Distributor	7 AC Power Cable: 14 AWG or 1.5 mm × 3C DC Power Cable: 12 AWG or 2.5 mm × 2C



The inlet hole finishing method of external equipment must be done after

consultation with operation company, if the cable is connected to external equipment, such as optical distribution box.

- Cables: Power cable, Backhaul (Optical and Copper) cables, UDA cable, and Clock sync cable.



When connecting a 2 sector cascade, use one GPS antenna on the #0 AU, and have AUs exchange signals through a clock sync cable.

Grounding

Grounding is the process of operating an electronic system such as power supply system, communication system, and control system, stably without damage from lightning, transient-current, transient-voltage, and electric noise. Grounding also helps in preventing injury from electric shock.

Ground equipment minimizes the electrical potential of the electronic device to that of the ground, which is zero electrical potential. This prevents electrification of the electronic device.



Connect the ground cable first. In cabling, the connection of cables without the connection to the ground cable may cause damage of the equipment or bodily injury to personnel.

The purposes of the ground construction are as follows:

- To prevent human life and the system from over-current, over-voltage, and lightning
- To provide a discharge path for surge voltage generated by lightning and power switch
- To protect the system from static electricity
- To eliminate or minimize the high-frequency potential in the system housing
- To provide a conductor for the balance and stability of high-frequency current
- To stabilize the potential of the circuit against the ground

Connecting Ground Cable

▶ To connect a ground cable

- 1 Ensure that the items mentioned in below table are available.

Table 20. Parts and Tools for Connecting Ground Cable

Category	Description	
Installation Section	MGB-AU Ground Terminal	
Cable	6 AWG × 1C	
Heat Shrink Tube (Spec/Color/Length)	Φ 0.47 in. (12 mm)/Clear/1.96 in. (50 mm)	
Pressure Terminal	MGB	Checking MGB specifications per site and preparing connecting parts
	AU	6 AWG, 2 Hole, Hole diameter: 1/4 in. (6.4 mm), Hole spacing: 0.63 in. (16 mm)
Fastener	MGB	Checking MGB specifications per site and preparing connecting parts
	AU	M6 × L12 SEMS (Hexagon+)/2 EA
Recommended Torque Value	M6 SEMS	43 lbf-in (50 kgf-cm)

Category	Description
Working Tools	• Cable Cutter • Wire Stripper • Crimping tool • Heating Gun • Nipper • Screw Driver ('+', Number 3) • Torque Driver (20-90 lbf-in.) • Screw Driver Bit ('+', Number 3)



For the pressure terminals of the cable, the UL Listed products or equivalent must be used.


Example: Manufacturer-Panduit

AU: 6 AWG Pressure Terminal (LCD6-14A-L)




- 2 Install the ground cable from the MGB to the AU ground terminal as shown in figure below.

Figure 42. Connecting Ground Cable (1)

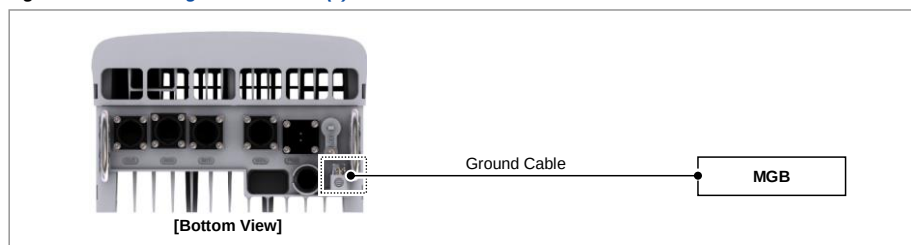

- 3 Assemble a pressure terminal and a heat shrink tube at the end of the AU ground cable.
 - 4 Align the pressure terminal to the mounting hole of the AU ground terminal.
 - 5 Firmly fix the pressure terminal onto the AU ground terminal using fasteners.
- Figure below depicts the steps 3 to 5.


Figure 43. Connecting Ground Cable (2)

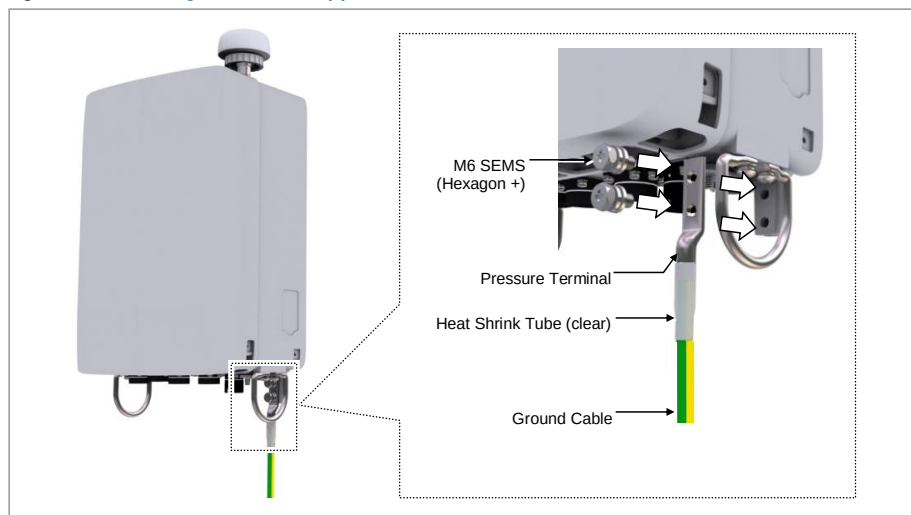

Power Cabling

Figure below depicts the elements of a power supply device.

Figure 44. Power Equipment Elements

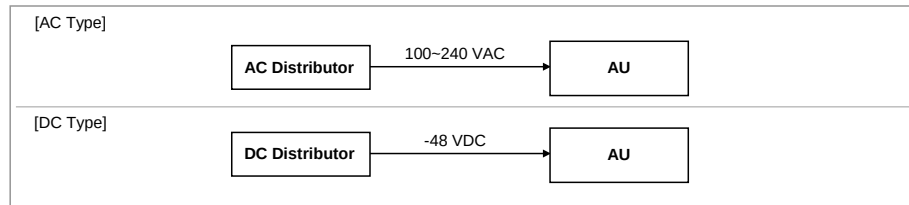

 Since power is applied to the system where the power cable is connected by manipulating the circuit breaker of the rectifier, be sure to check the rectifier breaker is turned off (open) before connecting the power cable to the power connector. If the system is installed while the circuit breaker is on, the worker may get critically injured if the cable is connected in the wrong way.

메모 포함[SSK1]: This element is not shown in the figure.

-  Handling the power cable incorrectly may damage the rack or cause an electric short-circuit through the cable. Ensure the power switch of the rectifier or the system is turned off before handling the power.
-  The fasteners for power cable must be tightly secured to prevent electrical accidents.
-  The heat-resistant temperature of the power cable should be 90°C or more.
-  Install the power cable to the power port of the system by considering the radius of curvature of its cable specification and then cut the cable. If operator installs the cable after cutting, there may be length difference among the core wires at the end of the cable because of cable curvature. This may result in poor contact after the cable is connected to the power port.
-  If you turn the power on and off rapidly (within 1 s), the counter electromotive force caused by cable inductance can damage the system.
-  Connecting more than one power cable together may increase power loss.
-  It must be verified that the rectifier or the power distributor has an output voltage within the specified system input range before the power line is connected.

Connecting AC Power Cable

► To connect an AC power cable

- 1 Ensure that the items mentioned in below table are available.


Table 21. Parts and Tools for Connecting Power Cable

Category	Description	
Installation Section	AC Distributor-AU Ac power input port	
Cable	AC: 14 AWG or 1.5 mm ² × 3C (The color of the core wire can be changed according to the specification of the cable used.)	
Connector	AC Distributor	Check specifications of AC Distributor output terminal per site and prepare fasteners.
	AU (AC)	JONHON, DY6F1203PNFM-06 to OPEN
Working Tools	• Cable Cutter • Wire Stripper • Compressor • Heating Gun • Nipper	


Table below provides the AC power cable connector pin map.

Table 22. AC Power Cable/Connector Pin Map


Power Connector Pin Number	Description	Color
Pin 1	L	Black
Pin 2	PE	Green
Pin 3	N	White

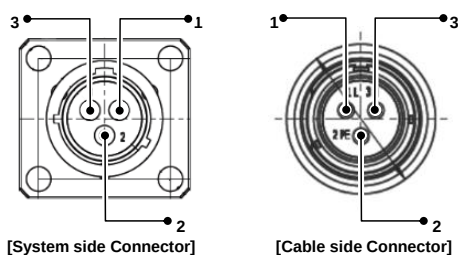

- 2 Install the AC power cable from the AC Distributor to the AU, as shown in figure below.

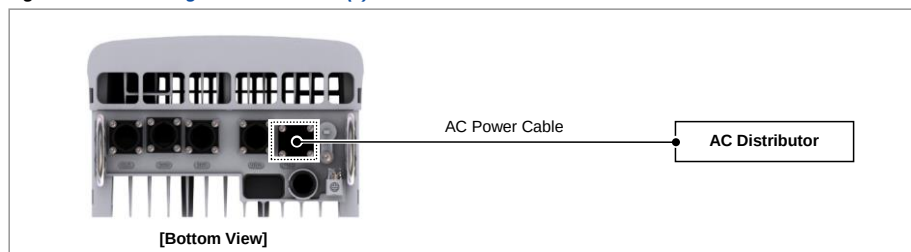
Figure 45. Connecting AC Power Cable (1)

- 3 Separate the cap from the cable side connector, as shown in figure below.

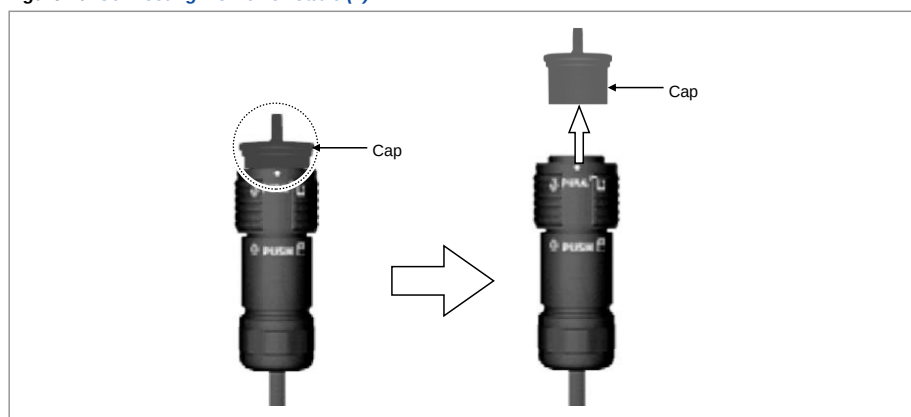Figure 46. Connecting AC Power Cable (2)

- 4 Insert the connector aligning white dot of the cable side connector and white dot of the system side connector. When inserting the connector, push the shell to upper side, as shown in figure below.

Figure 47. Connecting AC Power Cable (3)

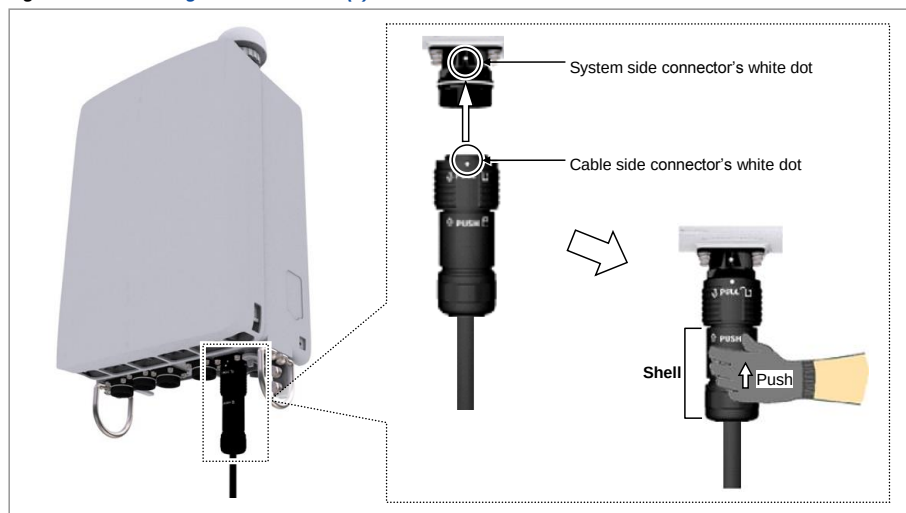

When the connector is fastened tight, the white line on the system side connector becomes invisible (or hidden).



[White Line is invisible]



White Line


[White Line is visible]



The method for connecting or disconnecting the power connector is as follows:

- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

This is depicted in figure below.

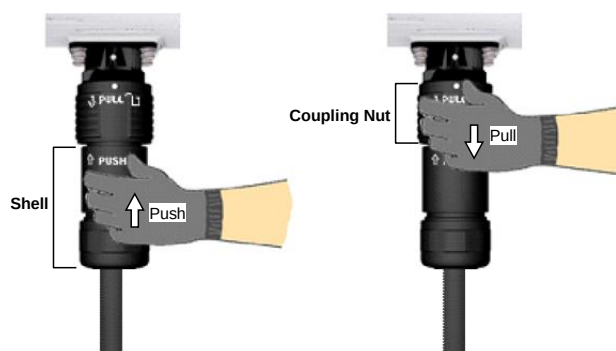

Install a circuit breaker to the rectifier (or power distributor) for stable power. The capacity of the circuit breaker is 10 A.

Connecting DC Power Cable

► To connect a DC power cable

- 1 Ensure that the items mentioned in below table are available.



Table 23. Parts and Tools for Connecting Power Cable

Category	Description	
Installation Section	DC Distributor-AU DC power input port	
Cable	DC: 12 AWG or 2.5 mm ² × 2C (The color of the core wire can be changed according to the specification of the cable used.)	
Connector	DC Distributor	Check specifications of DC Distributor output terminal per site and prepare fasteners.
	AU (DC)	JONHON, DY6F1202PNFM-06 to OPEN
Working Tools	• Cable Cutter • Wire Stripper • Compressor • Heating Gun • Nipper	

Table below provides the DC power cable connector pin map.


Table 24. DC Power Cable/Connector Pin Map

Power Connector Pin Number	Description	Color
Pin 1	-48 V DC	Red
Pin 2	RTN	Black

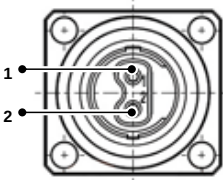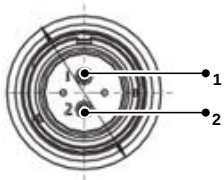Power Connector Pin Number	Description	Color
 [System side Connector]	 [Cable side Connector]	


- 2 Install the DC power cable from the DC Distributor to the AU, as shown in figure below.

Figure 48. Connecting DC Power Cable (1)

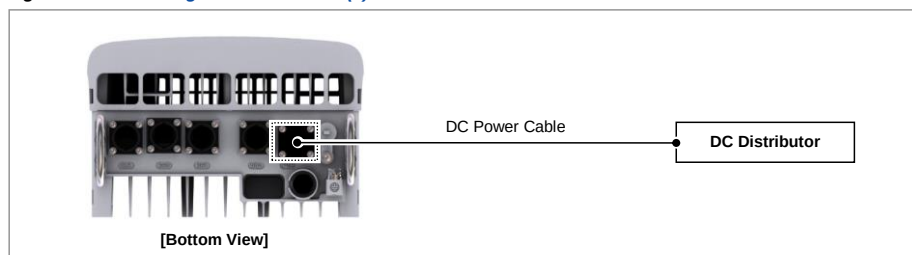

- 3 Separate the cap from the cable side connector, as shown in figure below.


Figure 49. Connecting DC Power Cable (2)

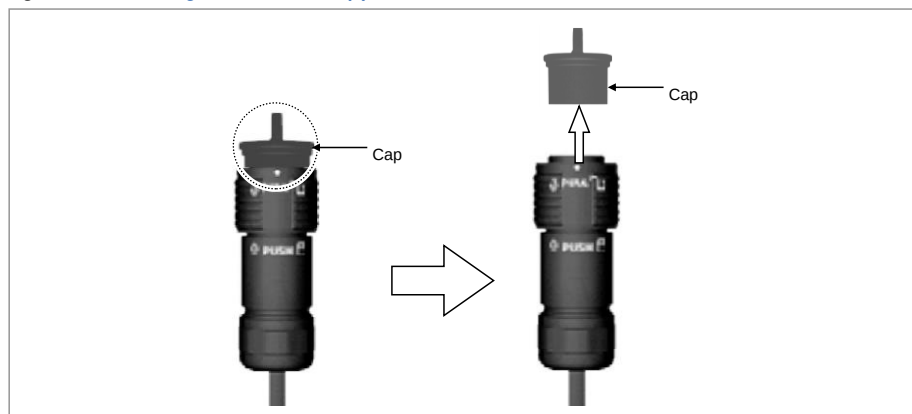

- 4 Insert the connector aligning white dot of the cable side connector and white dot of the system side connector. When inserting the connector, push the shell

to upper side, as shown in figure below.

Figure 50. Connecting DC Power Cable (3)

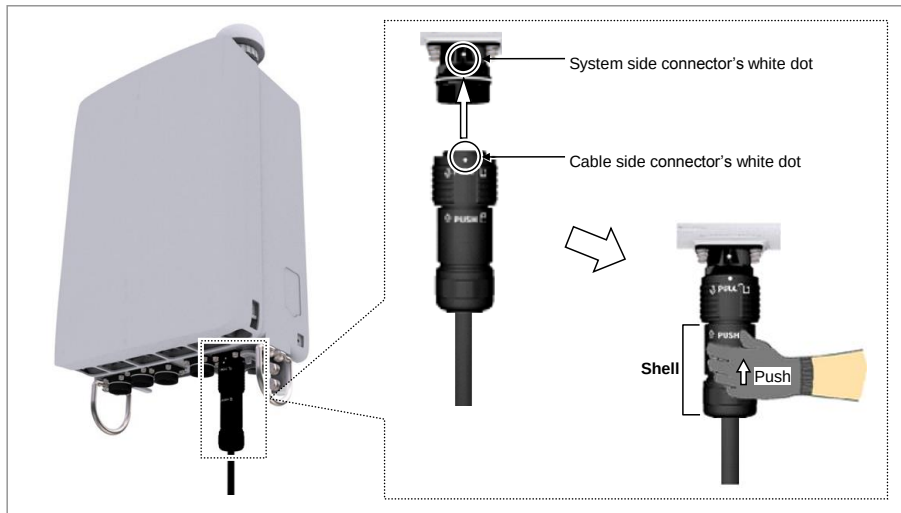

When the connector is fastened tight, the white line on the system side connector becomes invisible (or hidden).



[White Line is invisible]




White Line

[White Line is visible]



The method for connecting or disconnecting the power connector is as follows:

- For connecting the connector, push the shell to upper side.
 - For disconnecting the connector, pull the coupling nut to lower side.
- This is depicted in figure below.

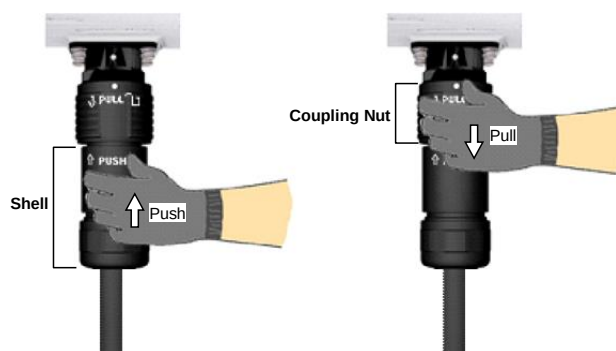

Install a circuit breaker to the rectifier (or power distributor) for stable power. The capacity of the circuit breaker is 14 A.

Interface Cable Connection

This section describes the procedures to connect interface cables.


Remove/Insert Optical Module

This section describes the process to follow if an optical module needs to be removed or inserted before connecting the cable. Each step is followed by its corresponding figure showing the location of the parts and direction of movement.

▶ To remove the optical module


- 1 Hang the hook of Optical Transceiver Removal Tool (OTRT) on the bail of the optical module within the system.

Figure 51. Optical Module Removal (1)

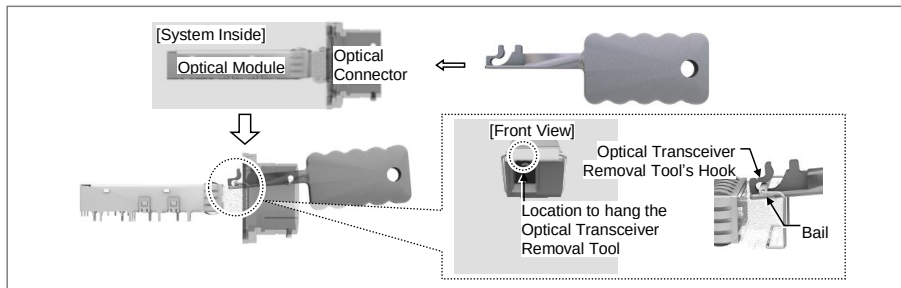


- 2 Completely remove the optical module from the transceiver by pulling the OTRT.

Figure 52. Optical Module Removal (2)

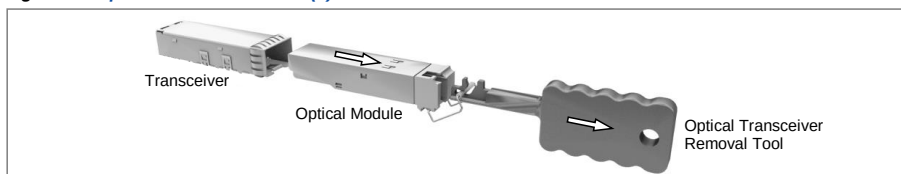

- 3 Remove the optical module and the jig by pressing the hook grip of the OTRT.

Figure 53. Optical Module Removal (3)




► To insert the optical module

Push the optical module into the transceiver within the connector.


Figure 54. Optical Module Inset



Insert the optical module bail, facing the front of the system, to the port.

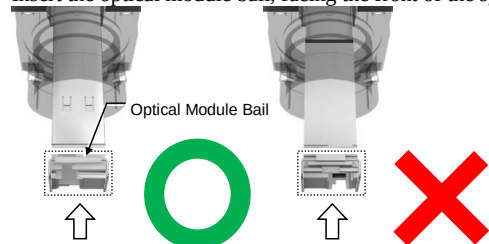

Do not insert when the optic module bail is unlocked.

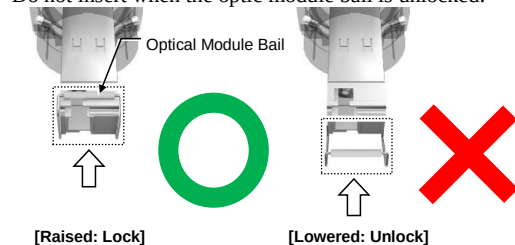

Connecting UDA Cable

► To connect a UDA cable

- 1 Ensure that the items mentioned in below table are available.

Table 25. Parts and Tools for Connecting UDA Cable

Category	Description	
Installation Section	AU UDA Port~External alarm device	
Cable	UDA Cable Assembly (24 AWG, 5C)	
Connector	External alarm device	Check specifications of external device output terminal per site and prepare fasteners.
	AU	JONHON, Push Pull Type, RJ45MF-CT-07

Category	Description
Working Tools	• Cable Cutter • Wire Stripper • Nipper • LAN Tool


Table below provides the UDA cable pin map.

Table 26. UDA Cable Pin Map

System Side	Color Map	Description
1	White/Blue	UDA Common RTN
2	Blue	UDA3
3	Orange	UDA2
4	Green	UDA1
5	Brown	UDA0
6	N.C	N.C
7	N.C	N.C
8	N.C	N.C
Shell	-	-


- 2 Install the UDA cable from the external alarm device to the AU.

Figure 55. Connecting UDA Cable (1)

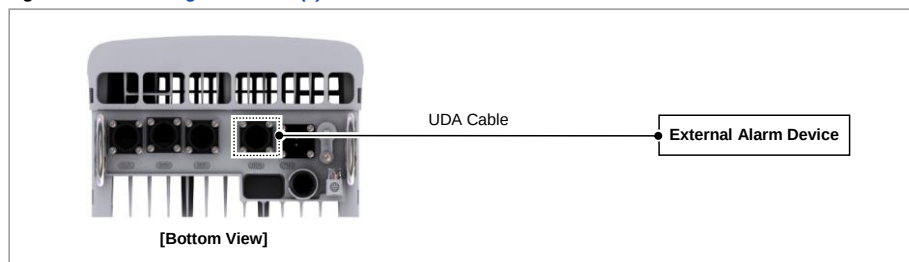


- 3 Separate the cap from the cable side connector.

Figure 56. Connecting UDA Cable (2)

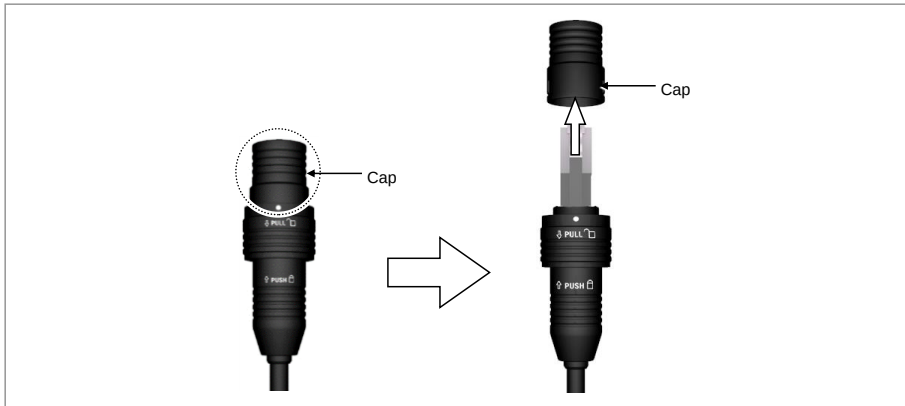


- 4 The latch of cable side connector should be toward the rear of the system.

Figure 57. Connecting UDA Cable (3)

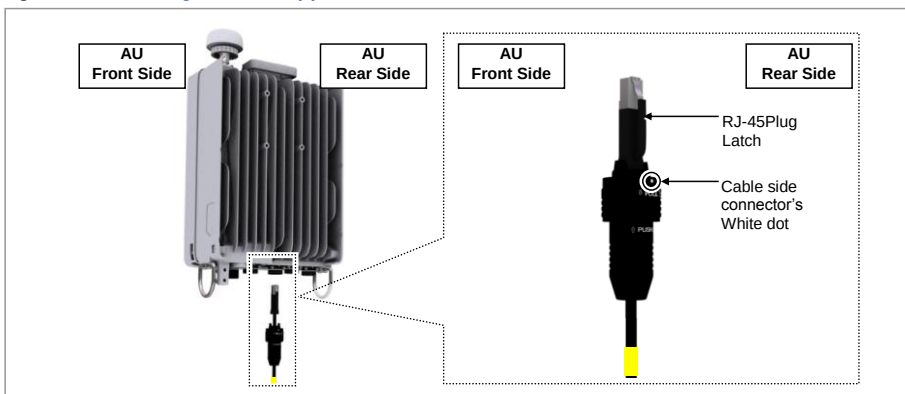


- 5 Insert the RJ-45 plug to the system side connector.

Figure 58. Connecting UDA Cable (4)

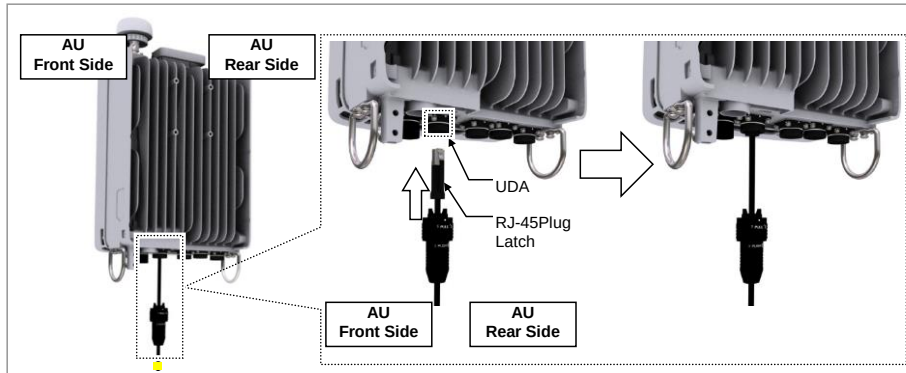


- 6 Insert the connector aligning white dot of the cable side connector and white dot of the system side connector. When inserting the connector, push the shell to the system side.

Figure 59. Connecting UDA Cable (5)

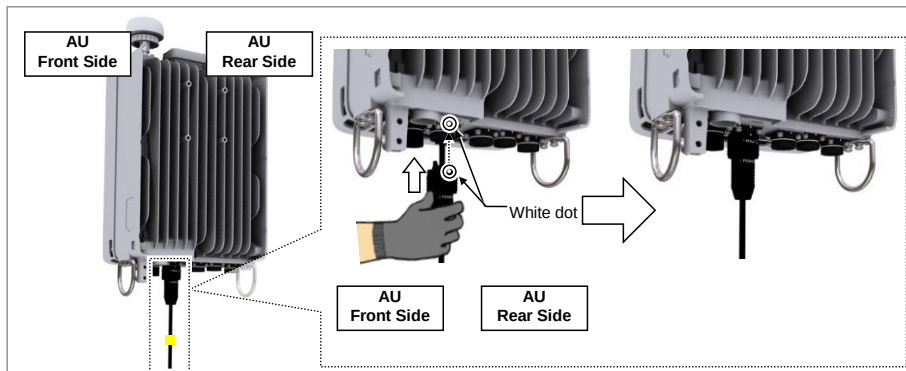


When the connector is fastened tight, the white line on the system side connector becomes invisible (or hidden).

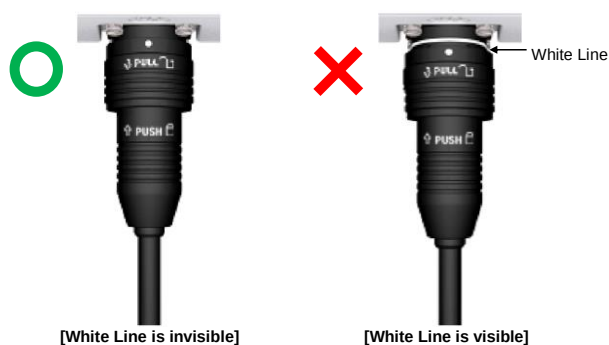

The method for connecting or disconnecting the backhaul (RJ45) connector is as follows:

- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

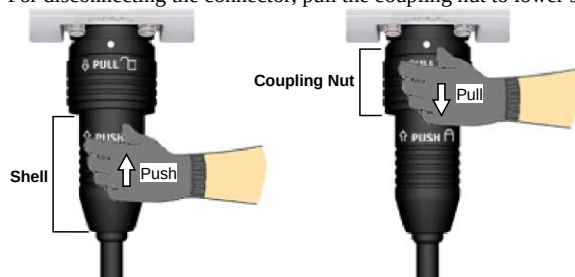

Connecting Backhaul Cable

▶ To connect a backhaul (optical) cable

- 1 Ensure that the items mentioned in below table are available.

Table 27. Parts and Tools for Connecting Backhaul (Optical) Cable


Category	Description	
Installation Section	AU BH0 Port-Switch/Router	
Cable	Backhaul (Optical) Cable (Optical, Single Mode, for Outdoor Type)	
Connector	AU	JONHON, Push Pull Type, PDLC03T03 (DLC/UPC)
Working Tools	Optical Connector Cleaner	



The laser beam light runs through the optical cable in the system. The laser beam can cause serious injury to worker's eyes. Therefore, avoid direct exposure to the laser source.




- Remove the cap of the optical connector before connecting.
- Before connecting the optical cable, check if the ferrule of the connector is soiled. Be careful to keep the cutting section away from dust or foreign material. If the cable is soiled with foreign material, do not blow to remove them.
 - Ensure to clean the connector in accordance with the cleaning directions described in *Appendix B*.
 - Do not touch the ferrule at the end of optical cable because it is easy to be damaged.

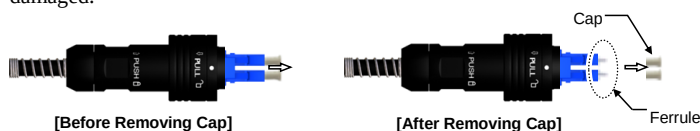


- 2 Install the backhaul (optical) cable from the AU (BH0 port) to the switch/router.

Figure 60. Connecting Backhaul (Optical) Cable (1)

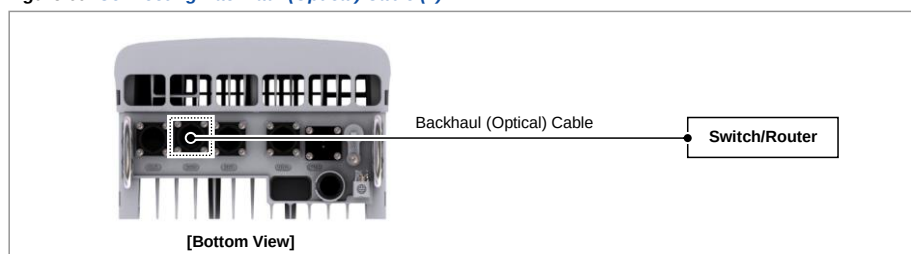


- 3 Separate the cap from the cable side connector.

Figure 61. Connecting Backhaul (Optical) Cable (2)

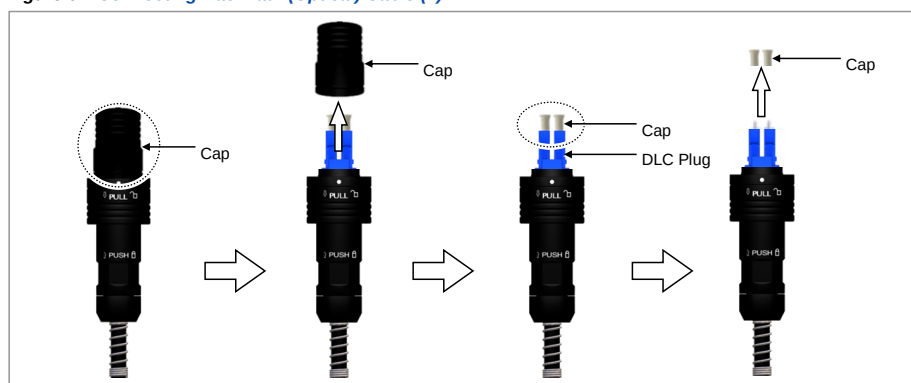


- 4 The latch of cable side connector should be toward the rear side.

Figure 62. Connecting Backhaul (Optical) Cable (3)

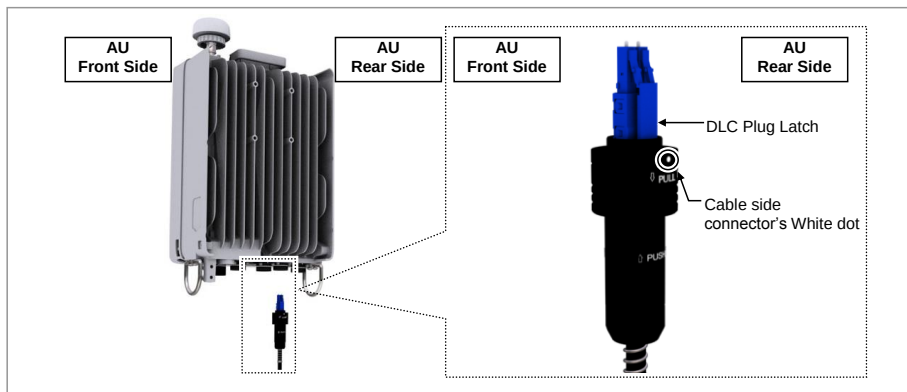


- 5 Insert the DLC plug to the system side optical module.

Figure 63. Connecting Backhaul (Optical) Cable (4)

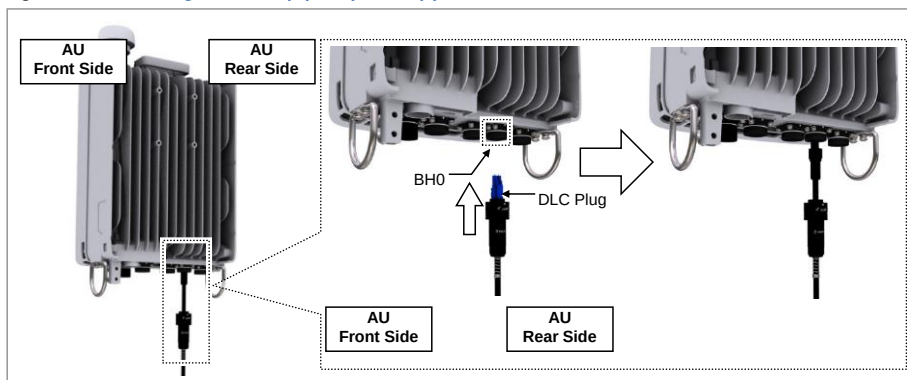

- 6 Insert the connector aligning white dot of the cable side connector and white dot of the system side connector. When inserting the connector, push the shell to the system side.

Figure 64. Connecting Backhaul (Optical) Cable (5)

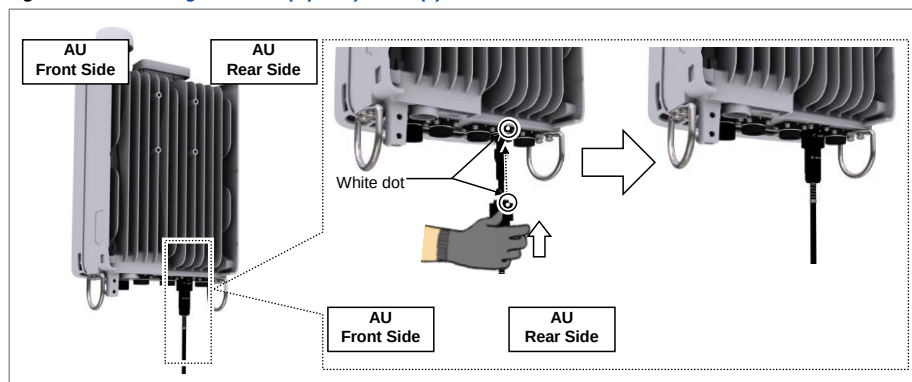

When the connector is fastened tight, the white line on the system side connector becomes invisible (or hidden).



[White Line is invisible]




[White Line is visible]

White Line



The method for connecting or disconnecting the backhaul (optical) connector is as follows:

- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

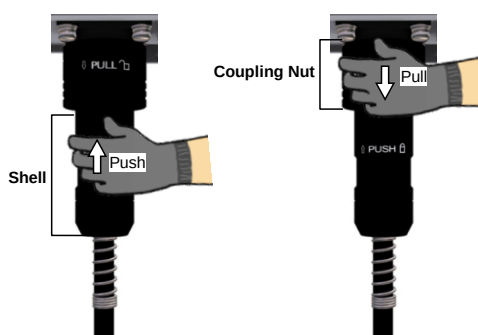

► To connect a backhaul (Copper) cable

- 1 Ensure that the items mentioned in below table are available.

Table 28. Parts and Tools for Connecting Backhaul (Copper) Cable

Category	Description	
Installation Section	AU BH1 Port-Switch/Router	
Cable	Backhaul (Copper) Cable Assembly (24 AWG, 4P, CAT6a, F-UDP)	
Connector	Switch	Check specifications of external device output terminal per site and prepare fasteners.
	AU	JONHON, Push Pull Type, RJ45MF-CT-10
Working Tools	• Cable Cutter • Wire Stripper • Nipper • LAN Tool	


Table below provides the pin map of backhaul cable.

Table 29. Backhaul (Copper) Cable Pin Map

System Side	Color Map	Description
1	White/Orange	1
2	Orange	2
3	White/Green	3
4	Blue	4
5	White/Blue	5
6	Green	6
7	White/Brown	7
8	Brown	8
Shell	Shield	Shell


- 2 Install the backhaul (copper) cable from the external device to the AU.

Figure 65. Connecting Backhaul (Copper) Cable (1)

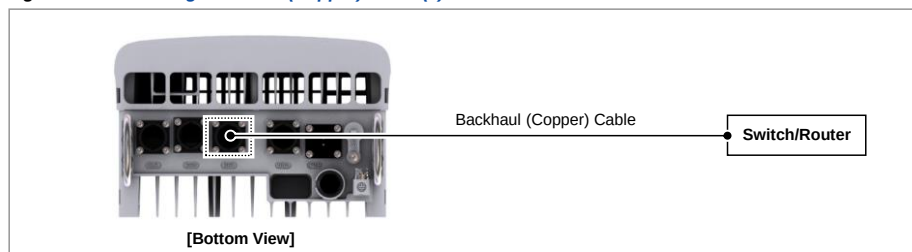


- 3 Separate the cap from the cable side connector.

Figure 66. Connecting Backhaul (Copper) Cable (2)

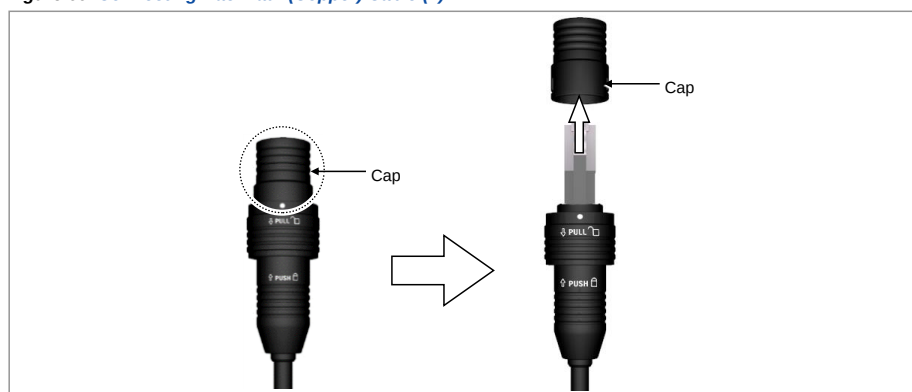


- 4 The latch of cable side connector should be toward the rear of the system.

Figure 67. Connecting Backhaul (Copper) Cable (3)

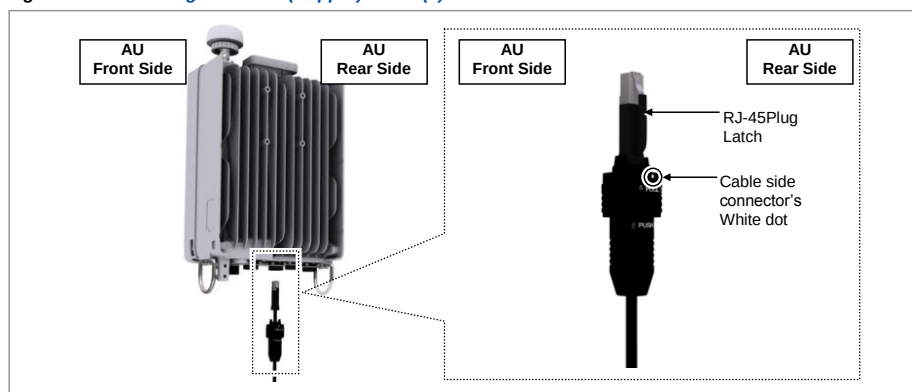


- 5 Insert the RJ-45 plug to the system side connector.

Figure 68. Connecting Backhaul (Copper) Cable (4)

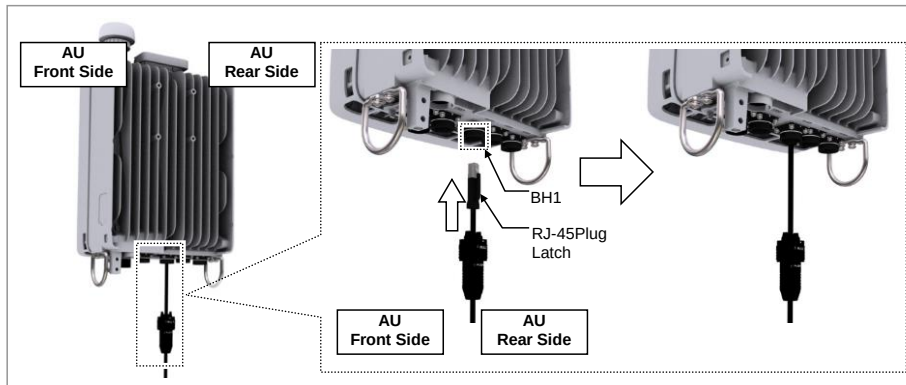


- 6 Insert the connector aligning white dot of the cable side connector and white dot of the system side connector. When inserting the connector, push the shell to the system side.

Figure 69. Connecting Backhaul (Copper) Cable (5)

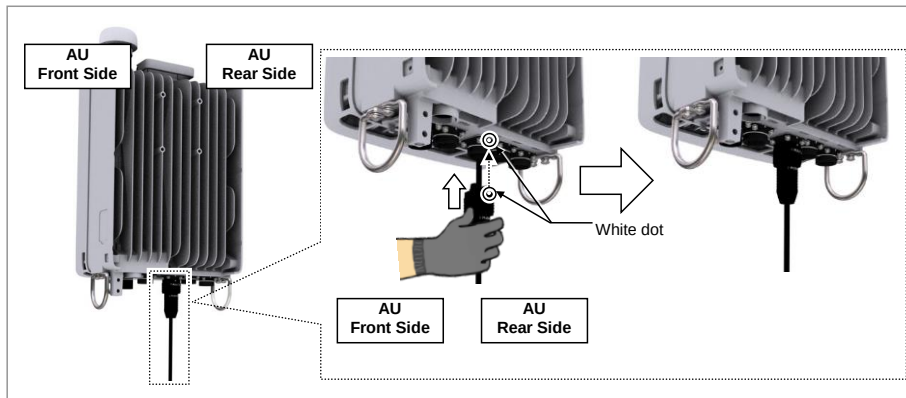


When the connector is fastened tight, the white line on the system side connector becomes invisible (or hidden).

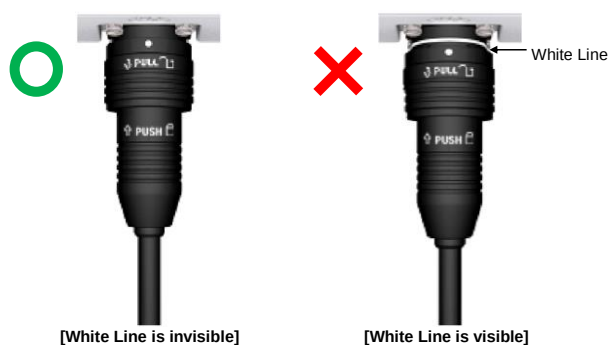

The method for connecting or disconnecting the backhaul (RJ45) connector is as follows:

- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

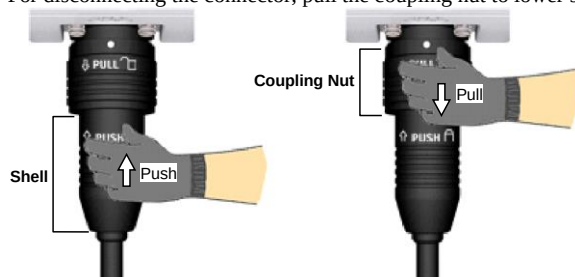

Connecting Clock Sync Cable

▶ To connect a clock sync cable



The clock sync cable is only used for 2 sector cascade installation.

- 1 Ensure that the items mentioned in below table are available.

Table 30. Parts and Tools for Connecting Clock Sync Cable

Category	Description	
Installation Section	#0 AU CLK Port-#1 AU CLK Port	
Cable	Clock sync Cable Assembly (24 AWG, 4P, CAT5e, S-FTP)	
Connector	#0 AU	JONHON, Push Pull Type, RJ45MF-CT-07
	#1 AU	JONHON, Push Pull Type, RJ45MF-CT-07
Working Tools	• Cable Cutter • Wire Stripper • Nipper	

Category	Description
	• LAN Tool


Table below provides the clock sync cable pin map.

Table 31. Clock Sync Cable Pin Map

AU #0 Side	Color Map	AU #1 Side
1	White/Orange	5
2	Orange	6
3	White/Green	4
4	Green	3
5	White/Blue	1
6	Blue	2
7	Cut	7
8	Cut	8
Shell	-	Shell


- 2 Install the clock sync cable from the external alarm device to the AU.

Figure 70. Connecting Clock Sync Cable (1)

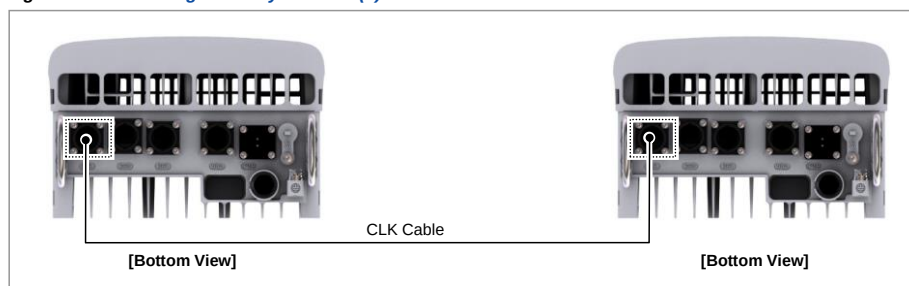


- 3 Separate the cap from the cable side connector.

Figure 71. Connecting Clock Sync Cable (2)

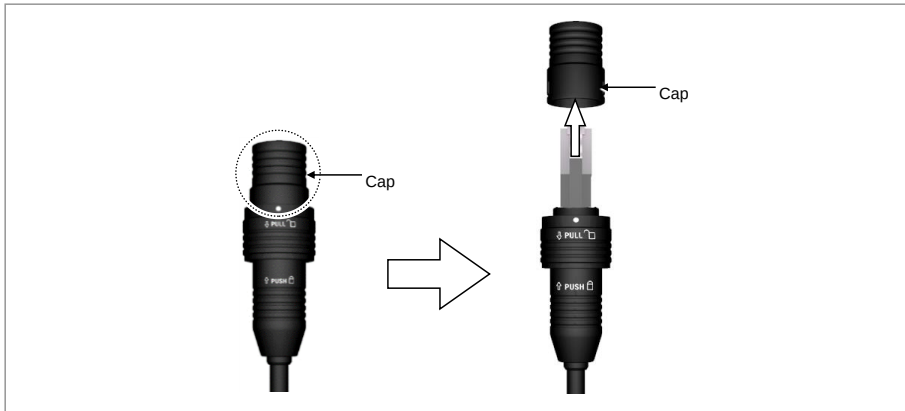


- 4 The latch of cable side connector should be toward the rear of the system.

Figure 72. Connecting Clock Sync Cable (3)

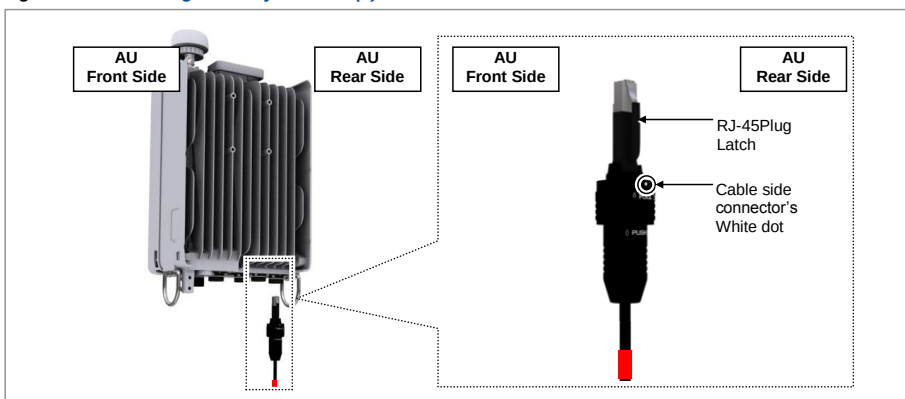


- 5 Insert the RJ-45 plug to the system side connector.

Figure 73. Connecting Clock Sync Cable (4)

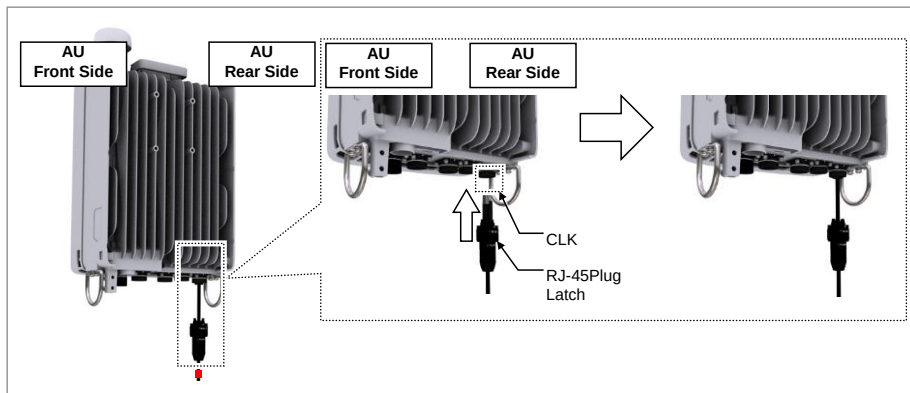


- 6 Insert the connector aligning white dot of the cable side connector and white dot of the system side connector. When inserting the connector, push the shell to the system side.

Figure 74. Connecting Clock Sync Cable (5)

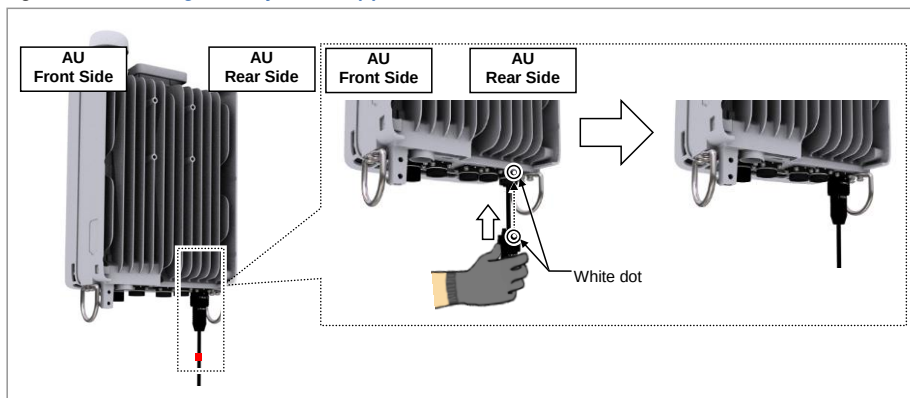


When the connector is fastened tight, the white line on the system side connector becomes invisible (or hidden).

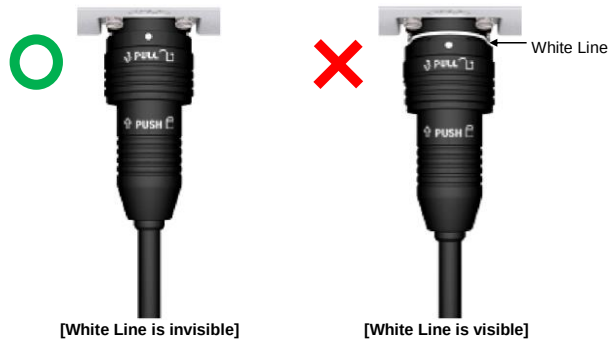

The method for connecting or disconnecting the backhaul (RJ45) connector is as follows:

- For connecting the connector, push the shell to upper side.
- For disconnecting the connector, pull the coupling nut to lower side.

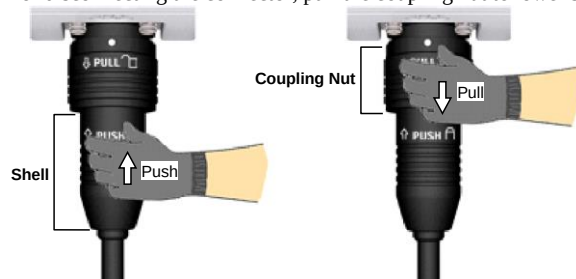

Fixing Cable Cover

► To fix cable cover


- 1 Ensure that the items mentioned in below table are available.

Table 32. *Parts and Tools for Fixing Cable Cover on AU*

Category	Description	
Parts	Cable cover	1 EA
	Fasteners	M4 × L10 Torx Screw
Recommended Torque Value	M4 Torx Screw	13 lbf-in (15 kgf-cm)
Working Tools	• Torque Driver (6-22 lbf-in) • Torx Driver Bit (TH15)	

- 2 Place the cable cover to the AU fixing hole and fix it using fasteners.

Figure 75. *Fixing Cable Cover on AU*

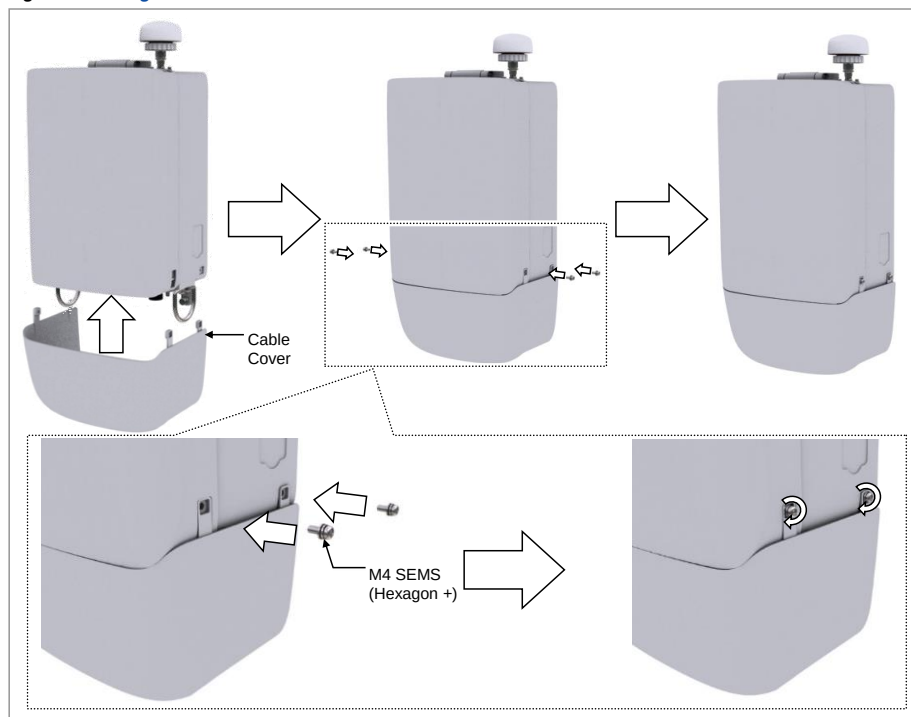


Chapter 4 Inspect the Installation

This chapter describes the procedures to check installation status.

Figure below depicts the overall procedure for inspecting the installation status.

Figure 76. Installation Inspection Procedure

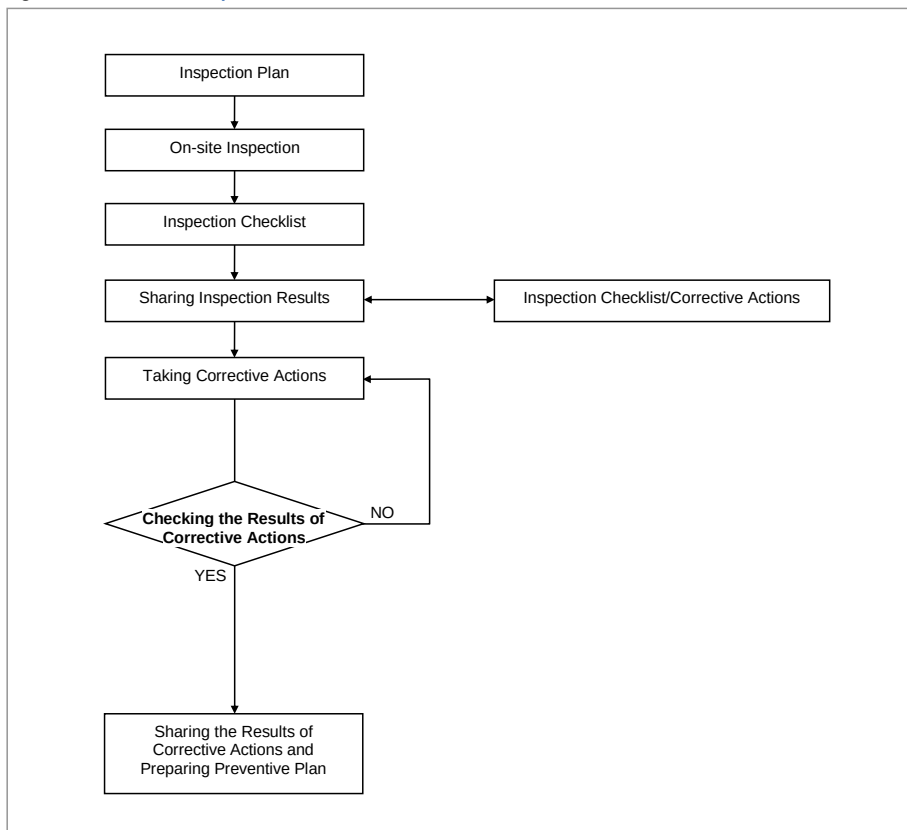

Inspection Plan

Create an inspection sheet per system and select an inspector to set an inspection schedule per site.

On-site Inspection and Inspection Checklist

The on-site inspection is to perform inspection visually or using instruments for each specification, standard, and installation status, based on the inspection checklist at the site where the system is installed.

The inspector must record the results onto the inspection checklist during or after field inspection.

Sharing Inspection Results and Taking Corrective Actions

The inspector must share the inspection results (inspection checklist and corrective actions) with an installation operator. The installation operator must take the corrective actions, if necessary, after reviewing the requirements.

Checking the Results of Corrective Actions

The inspector must check if the corrective actions are properly taken. If they are not sufficient, the inspector must ask the installation operator to take the corrective actions again.

Sharing the Results of Corrective Actions and Preparing Preventive Plan

After the corrective actions are all completed, the inspector must share the results with the installation operator and relevant departments. The inspector must prepare a preventive plan to prevent the same or similar problems from re-occurring.

Construction Situation Checklist

Table below provides the checklist to check the installation of the AU and other devices.

Table 33. Construction Situation Checklist

Category	Check Items	Criteria	Result	
			Pass	Fail
Installing Equipment	Appearance of equipment and mechanical parts	Equipment damage such as dent, scratch, and crack		
	Placement of equipment and mechanical parts	Maintenance and horizontal/vertical placement		
	Leveling condition of equipment and mechanical parts	Horizontal/vertical status		
	Validity of status and specifications of fastening bolt, nut, and washer	Checking fasteners omission		
		Compliance with assembly order of fasteners		
		Compliance with fastening torque value		
	Insulation status	Checking electrical contact between insulators (insulation resistance tester)		
Grounding	Installation of ground bar	Checking the separation of communication/power/lightning		

Category	Check Items	Criteria	Result	
			Pass	Fail
	Cabling	grounding		
		Cable specification	Checking the specification	
		Cable damage		
		Proper installation route		
	Cable binding status	Compliance with the radius of curvature		
		Binding status		
		Binding interval		
	Cable connection	Checking binding materials		
		Assembly condition of a pressure terminal		
		Fastening condition of a pressure terminal		
	Installation status of cable tag	Checking compliance with fastening torque value		
		Position		
		Marking content		
		Checking tag installation method		
Power	Installation status of power supply	Power supply capacity		
		Output voltage (tester)		
	Installation of circuit breaker	Checking circuit breaker capacity		
	Cable specification	Checking the specification		
		Checking the limit distance		
	Cabling	Cable damage		
		Proper installation route		
		Compliance with the radius of curvature		
	Cable binding status	Binding status		
		Binding interval		
		Checking binding materials		
	Cable connection	Checking cable connection (Pin Map)		
		Input voltage		
		Assembly condition of a pressure terminal and connector		
		Fastening condition of a pressure terminal and connector		
	Installation status of cable tag	Checking compliance with fastening torque value		
		Position		
		Marking content		
		Checking tag installation method		
Other data cables	Cable specification	Checking the specification		
	Cabling	Cable damage		
		Proper installation route		

Category	Check Items	Criteria	Result	
			Pass	Fail
	Cable binding status	Compliance with the radius of curvature		
		Binding status		
		Binding interval		
	Cable connection	Checking binding materials		
		Checking cable connection (Pin Map)		
		Assembly condition of a connector		
		Fastening condition of a connector		
	Installation status of cable tag	Checking compliance with fastening torque value		
		Position		
		Marking content		
		Checking tag installation method		
		Checking tag installation method		
Others	Reserved ports	Checking port cap fastening status		
	Cable inlet status/Connection of equipment I/O port	Checking fastening status (Conduit/Cable Gland)		
	Cable tray and duct	Checking installation status		
	Status of inside/outside of the equipment and system surrounding area	Checking the stocking condition (waste parts, waste materials, and packing materials)		
Opinion				

Appendix A Acronyms

AC	Alternating Current
AU	Access Unit
BH	Back Haul
DC	Direct Current
DL	DownLink
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
MGB	Main Ground Bar
NAU	Next generation Access Unit
PDLC	Polymer Dispersed Liquid Crystal
RTN	Return
SELV	Safe Extra Low Voltage
SEMS	pre-asSEMBled washers and screws
S-FTP	Screened-Foiled Twisted Pair
TDD	Time Division Duplex
UL	UpLink
UTP	Unshielded Twisted Pair

Appendix B Clean the Optical Connectors

When connecting an optical cable to the system, the performance of the system can be decreased or failures can occur if the core section of an optical connector is dirty due to dust or foreign material. Therefore, you must clean the optical connector before connecting the cable to the system.

When using an optical connector cleaner, use the products shown in the example below or their equivalents.

Examples:

Manufacturer-USCONEC (<http://www.usconec.com>)

- IBC™ Brand Cleaner (P/N: 9393): For LC-LC and MU Connector Cleaning
- IBC™ Brand Cleaner (P/N: 9392): For SC Connector Cleaning
- IBC™ Brand Cleaner (P/N: 12910): For ODC Connector Cleaning



Manufacturer-The Fibers (www.thefibers.com)

- HuxCleaner 1.25 mm Type: For LC and MU Connector Cleaning
- HuxCleaner 2.5 mm Type: For SC, FC, and ST Connector Cleaning



Follow the instructions of the manufacturer for cleaning the optical connectors.

Measuring the Optical Output and Connecting the Optical Connector

► To measure the optical output

- 1 Using an optical power meter, check the optical output.
- 2 If the optical output measurement result meets the reference value, clean the

connector again and connect it.

- 3 If the measurement result does not meet the reference value, discard the cable and replace it with a new cable. Clean the new cable and connect it to the system.



[LC/PC Plug]



[Optical Power meter]

Appendix C Standard Torque

When operator fastens the bolt, use the standard torque values provided in tables below to prevent the equipment and bolt from damage and secure by fastening. When the torque value for each connection part is defined already, use the defined value.

Table 34. Standard Torque Value for Fastening Bolts

Bolt Spec.	Torque Value (N·m)	Torque Value (lbf·in)	Torque Value (kgf·cm)
M3	0.63	5.6	6.4
M4	1.5	13	15
M5	2.8	25	29
M6	4.9	43	50
M8	12	110	127
M10	25	217	250
M12	42	372	428

Table 35. Brass Bolts Torque Value


Bolt Spec.	Torque Value (N·m)	Torque Value (lbf·in)	Torque Value (kgf·cm)
M6	2.9	26	30
M8	6.3	56	64

Table 36. Connector Connection Torque Value

Connector	Torque Value (N·m)	Torque Value (lbf·in)	Torque Value (kgf·cm)
SMA connector	0.59	5.2	6
TNC connector	0.88	7.8	9
N-type connector	2	17	20
DIN-type connector	25	217	250
4.3-10-type connector	5	44	51



Torque value can be different, depending on the material, characteristic, and specification of the equipment and fastener. Ensure that you check the proper torque value for each specification of the equipment and the fastener.



SAMSUNG

5G AU
Installation Manual

Document Version 2.0

© 2017 Samsung Electronics Co., Ltd.
All rights reserved.