



Digilink MK3

10/5 Zone Telemetry Transmitter, USA Mains Version



Installation & User Manual

Scope Communications UK Ltd, Quantum House, Steamer Quay Rd, Totnes,
Devon TQ9 5AL Tel: +44 (0)1803 860700 Fax: +44 (0)1803 863716
Email: sales@scope-uk.com Web: www.scope-uk.com

Digilink MK3, USA Mains Version

PREFACE

Important Installation Information

It is the purchasers' responsibility to determine the suitability of this equipment and its derivatives for any given application, Scope cannot give specific advice in this manual, as each use will require independent evaluation.

Scope has, wherever possible, employed extra safeguards to monitor the system's performance. Certain system installations, operational requirements or budgets may, however, limit the effectiveness of these safeguards. Again, the suitability of the system for any given application must therefore be decided by the installer and their customer, relative to the application and risk.

Licence

This equipment is cleared for use within the USA under a license assigned to the exclusive importer, PIPS Holdings Inc. License No. 950415906. Certain restrictions apply in respect of power output and antenna installations.

Alternative frequencies are available by formal license application (Form 600) via the FCC. These will not be subject to the same restrictions as the standard assigned license. You should obtain the FCC Rules and Regulations, Title 47, Part 80 to End, including Parts 90 and 95, available from the US Gov. Printing Office, GPO Bookstore, FCC Office or www.fcc.gov/oet/info/rules/

Good working practice dictates that a suitable system installation log must be generated, together with a record of the dates when the system has been manually checked, (with the aid of signal strength meters etc.) enabling the system performance to be compared with the original installation data.

Important Safety Information

Scope products are designed to operate safely when installed and used according to general safety practices. The following requirements should be observed at all times.

Do NOT subject this equipment to:

- Mechanical shock
- Excessive humidity or moisture
- Extremes of temperature
- Corrosive liquids

This equipment is designed for indoor use, unless expressly stated otherwise, and must not be used in classified Hazardous Areas, including areas containing explosive or flammable vapours, unless express authorisation has been given in writing by the manufacturer. If in doubt, consult your local product dealer for further information.

Do not obstruct any slots or openings in the product. These are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.

Only use a damp cloth for cleaning (not liquid or aerosol based cleaners), and ensure that any power is removed from the unit prior to beginning the cleaning operation.

Digilink MK3, USA Mains Version

Preface

Important Safety Information

Removal of covers from the equipment must only be undertaken by authorised service personnel, who must ensure that power is isolated prior to removal.

Installation

Installation must only be undertaken by an Approved contractor, who shall ensure that all work is carried out in compliance with the appropriate State and Federal Regulations. This equipment must be earthed. For mains powered equipment, a readily accessible isolating fused spur must be located within 1 meter of the equipment.

Liability

Scope does not accept liability for any damage or injury, howsoever caused as the result of misuse of this equipment. It is the responsibility of the user to ensure that the equipment is operated in the manner for which it was intended and that it is the correct item of equipment for the required task

Warranty

This product is warranted as free from defects of workmanship and materials for a period of one year from the original purchase date. During this time, if there is a defect or malfunction of this product, Scope will, with proof of purchase, repair or replace at its discretion any defective parts, free of charge. This does not include where the adjustments, parts and repair are necessary due to circumstances beyond the control of Scope, including but not limited to fire or other casualty, accident, neglect, abuse, abnormal use or battery leakage damage.

There are no other expressed or implied warranties except as stated herein, and those excluded include those of merchantability and fitness for a particular purpose. In no event will Scope or any of its agents be liable for direct, indirect, special incidental or consequential damages resulting from any defect in the product, even if advised of the possibility of such damages.

The warranties and remedies set forth above are exclusive and in lieu of all others, oral or written, expressed or implied. No Scope distributor, dealer, agent or employee is authorized to make any modification, extension or addition to this warranty.

Some states do not allow limitations on how long an implied warranty may last and some states do not allow exclusions or limitation of incidental or consequential damages.

No User Serviceable Parts

Alteration or modification to any part of this equipment, without the prior written consent of the manufacturer, will invalidate all Approvals and Warranties attaching to the equipment. Further liability for the operation of the equipment, under the applicable law, will pass to the user, who will absolve the manufacturer of any further responsibility for its correct operation and use.

Caution! RF exposure requirements: this product should be installed so as to ensure a separation distance of greater than 20 cm between the antenna and all persons during normal use.

© Scope Communications UK Ltd, 2014 All Rights Reserved

Digilink MK3, USA Mains Version

System Overview

The Scope Digilink MK3 DL10AC and DL5AC are mains powered, programmable radio paging systems which can be used to transmit data to fixed base stations and/or portable receivers. The unit is supplied with either 5 or 10 inputs, which can be hardware configured to accept either dry contact (no voltage) or voltage (5-18V dc) triggers. Each input is pre-programmed as either N/O (Normally Open), N/C (Normally Closed) or C/S (Change of State). Triggering any of the inputs (zones) will result in pre-programmed data (including up to 80 characters of text message) being transmitted to the selected receiver or group of receivers.

The unit can be programmed to repeat transmit (1-5 repeat transmissions or until reset) if required. In addition, the trigger filter time can be defined between 100 milliseconds and 25 seconds (period for which the zone must remain in the active state before triggering). One input (IN9) can be configured as a Reset to clear any current transmission cycles. This can also be used as an "Arm/Disarm" facility for the alarm inputs. Various other parameters can be programmed to suit specific user requirements.

The Configuration Data sheets accompanying your system will detail how all the various parameters have been set. It is vital that you retain this information in a safe place as you will need to quote the unit's serial number in the unlikely event that you experience any problems. You will also need this information to order more pagers (these must be matched to the identity of your system).

For advanced users who wish to program the unit themselves, a Programming Kit must be purchased. This provides a Windows based application running on a PC's USB port, allowing all functions to be programmed and stored in the system's secure non-volatile memory. Full details can be found in the PT10 Pro Configuration Utility provided on CD with the Programming Kit.

Section 1: Installation

The information contained in this Section is intended for use by authorised system installation engineers only. Other personnel should not undertake installation of this equipment under any circumstances.

Siting of the hardware

Before locating the hardware in any given location, it is important to take into account the range of operation that you require. The standard transmitter can quite easily provide ranges of up to a mile or more, covering a considerable area with just a quarter wave antenna connected directly to the unit.

For coverage of very large sites, or where exceptionally difficult operating conditions exist, it may be advantageous to install an external antenna. Installing the transmitter on the second or third floor of a building will more often than not boost overall range. However, horizontal range is not always required as much as propagation through a multi-storey building. Here it may be more useful to use a small external antenna mounted outside the building at half the building height. Sometimes range is required more in one direction than in the other: moving the aerial to one side of the building can provide a bias in the required direction, which may overcome the range difficulties. (See section: **Other Antennas**).

Important: coaxial feeds which are longer than 5 metres must employ low loss 50 ohm coax. We normally do not recommend feeds of more than 15 metres for standard applications. However, we suggest you contact our technical department where other considerations may prove this to be impractical.

A further consideration that must be taken into account is the length and location of the dry contact cables. To avoid interference and possible false triggering, cable runs should be kept to a minimum (ideally less than 10 metres) and should be isolated from other cabling (e.g. mains, telecoms. PC networks, etc).

Digilink MK3, USA Mains Version

Note ! the Digilink transmitter is only permitted for use with the Scope antennas listed below, all of which are zero Db gain. Use of other antennas may invalidate any or all approvals pertaining to this equipment.

Model No.	Description	Gain
UHF14BNC	1/4 wave BNC mount Antenna	0 dB
LUHFDP	Lightweight 1/2 wave Dipole Antenna	0 dB
FDANT	Heavy Duty 1/2 Wave Dipole Antenna	0 dB

Caution! RF exposure requirements: this product should be installed so as to ensure a separation distance of greater than 20 cm between the antenna and all persons during normal use.

Some major points to consider when installing equipment:

- 1 Never install antennas near or adjacent to telephone, public address or data communication lines or overhead power cables.
- 2 Avoid, where ever possible, running antenna coax alongside other cables.
- 3 Avoid mounting the transmitter in the immediate vicinity of telephone exchanges or computer equipment.
- 4 Always use **50 ohm** coaxial cable between the antenna and the transmitter. If cable runs exceed 5 metres, always use low loss 50 ohm cable such as RG213 or UR67.

Coaxial cable intended for TV, Satellite or CCTV installations is normally 75 OHM and therefore totally unsuitable for any transmitter installation manufactured by Scope.

- 5 Also remember that the performance of the system will be affected by the type of material the unit is mounted on and its surroundings.

The following is a list of materials that this transmitter will be adversely affected by if mounted on or if mounted in close proximity to:

- a) Foil back plasterboard
- b) Metal mesh or wire reinforced glass
- c) Metal sheeting, large mirrors or suspended ceilings
- d) Lift shafts

All of the above can reflect radio waves and thereby reduce the capability of the transmitter to perform its desired functions.

- 6 The circuit boards within this equipment may be harmed by Electrostatic Discharge (ESD). Installers should ensure that both themselves and the system's chassis are grounded before beginning any installation, and should ensure that adequate anti-static procedures are adhered to at all times.
- 7 **Warning!** Never transmit without an aerial attached to the transmitter
- 8 **Warning!** Carefully check the **Installation** section in this manual covering terminal connections prior to installation. Damage caused by incorrect connection is the responsibility of the installer!

Digilink MK3, USA Mains Version

Installation

The following procedure must be adhered to when installing the Digilink system. Ensure you have taken into consideration all of the above information before selecting the location for your transmitter. If in doubt please feel free to telephone the technical helpline on 01803 860710.

- 1 Remove the cover from the Digilink transmitter unit by slackening the four Pozi head screws located at the top and bottom of the unit (see Diagram 1).
- 2 Carefully lift off the cover and set aside.
- 3 The transmitter should be fixed to an even wall surface using suitable screws fitted through the three holes provided in the chassis plate. Hold the chassis up to the chosen location and with the aid of a pencil mark the position of the mounting holes.

Warning: Do not use the chassis plate as a template for drilling the holes into the wall. Hammer drills vibrating through the chassis may irreparably damage the quartz crystals on the printed circuit boards.

- 4 Place the Digilink transmitter over the mounting holes and secure the unit with suitable screws. Check that the chassis plate does not bend and that the screws do not snag or pinch any of the internal cables.
- 5 Connect the antenna to the unit via the BNC connector located at the top of the housing. If the antenna is an external antenna, or an antenna which is separate from the transmitter unit itself, ensure that the previous criteria covered under the section headed **Siting of the Hardware**, have been strictly adhered to (also see section headed **Other Antennas**).
- 6 Connect the input cables to the zone terminals. Unless the unit has been specifically configured for voltage input, these should be simple "dry" (no voltage) contacts only (i.e. isolated switch or relay contacts).
If configured for voltage input (5-18V dc), the jumper link beside the relevant terminal must be positioned nearest the "V" symbol marked on the circuit board (see Diagram 2).
If in doubt, check with Scope before proceeding; incorrect connection may cause permanent damage.
- 7 If the unit is supplied with a sealed lead acid battery, insert the supplied fuse (2A AS type) into the holder and screw together the two halves. Plug the lead into the BATT connector (CN17) on the PT10 board, as shown on Diagram 2. The battery will now be in circuit and the unit will power up. **NOTE: only use fuse rating & type supplied.**
- 8 A relay output is provided to indicate loss of external (mains) power. If required, connection can be made to J14 terminal block (see Diagram 2), using either N/O or N/C terminal and the Common terminal. The relay is energised when external supply is present and drops out when power is lost. Relay max contact rating is 1A @ 60V dc **and must not be exceeded.**
- 9 Replace the cover and re-tighten the four retaining screws.
- 10 Finally, after checking all connections, connect the mains cable supplied to a suitable isolated, fused spur or switched wall outlet. With mains power correctly applied, the red LED on the base of the unit will light and a "Digilink Reset" message will be sent to the receiver(s) to indicate successful initialisation.
- 11 The system is now active and will transmit the pre-programmed data/message for each of the zones when triggered. Repeat transmissions and other programmed parameters (e.g. battery low message) will be identified on the Configuration Data sheet(s) supplied with the system.


Digilink MK3, USA Mains Version

Installation

WARNING !


Isolate mains supply before removing cover.

The circuit boards contain static sensitive components. Care should be taken to avoid contact wherever possible and anti-static precautions should be observed during installation.

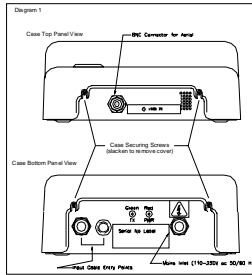

Digilink MK3, USA Mains Version

Diagram 2: wiring interconnect

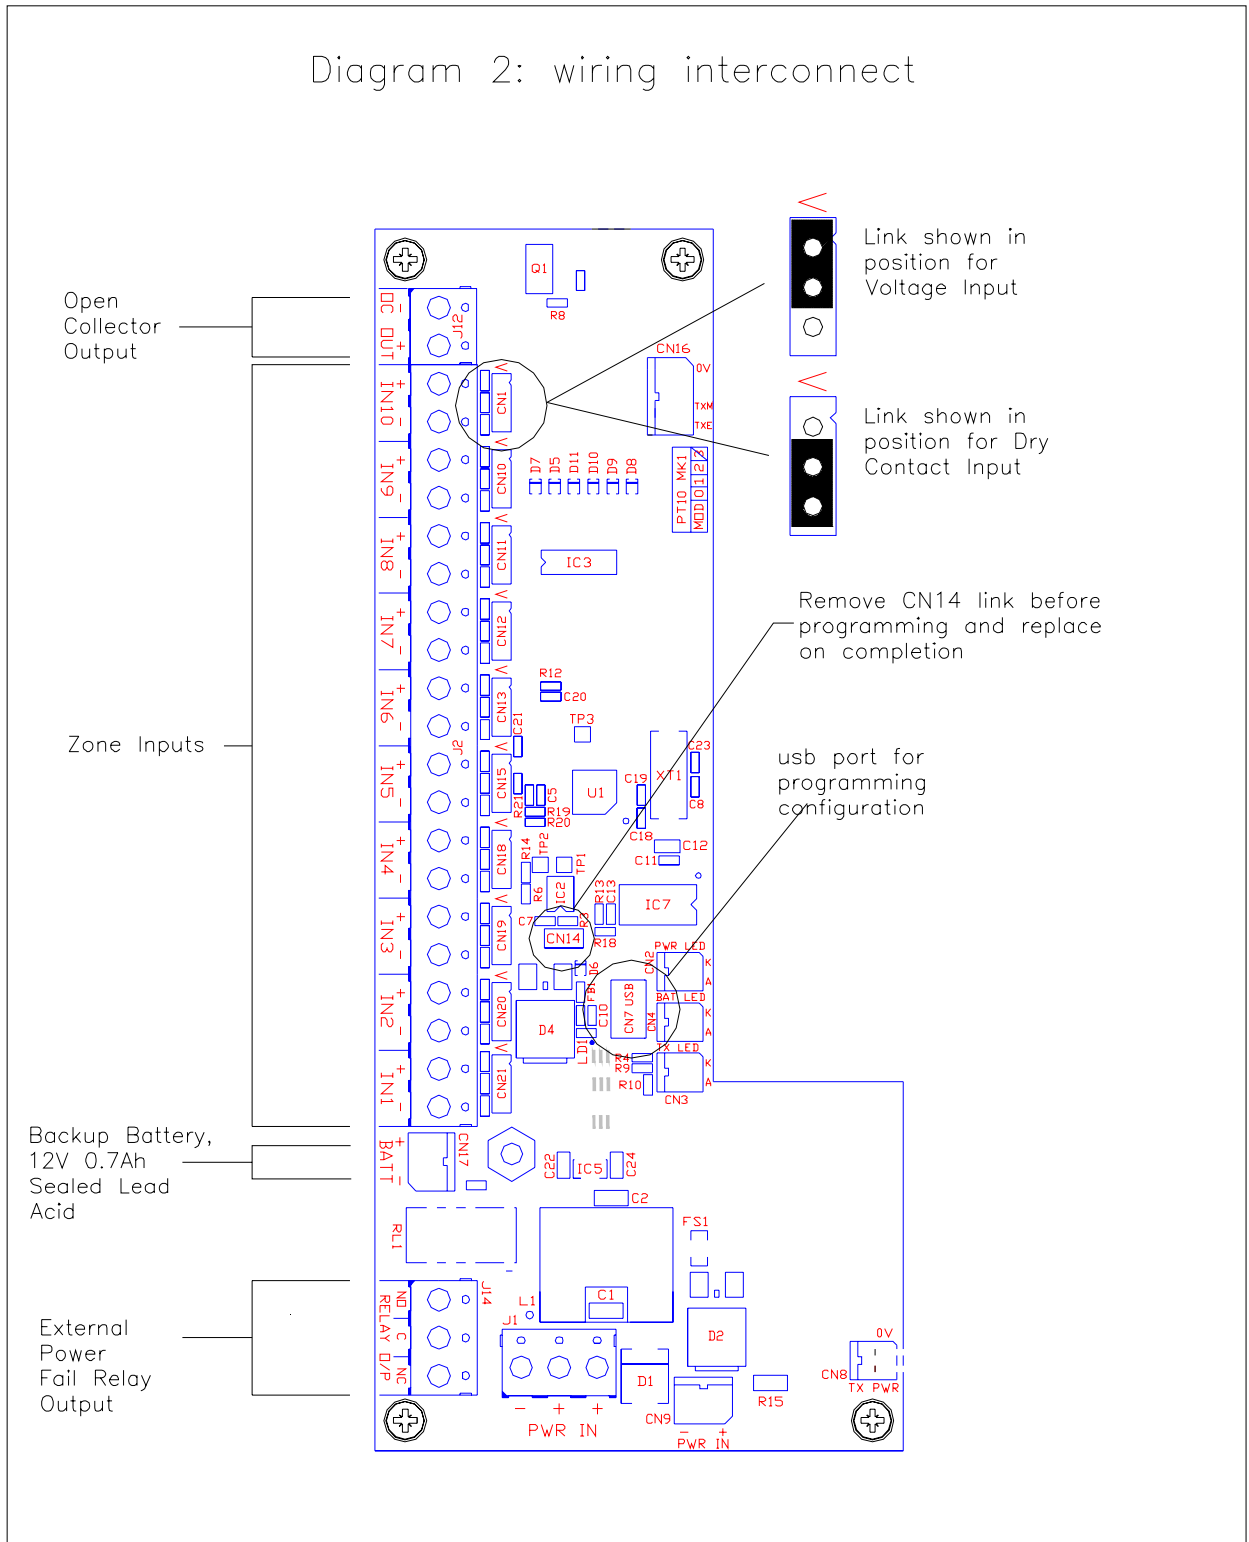

Digilink MK3, USA Mains Version

Section 2: System Operation

Confirmation of power connection is by way of the red PWR indicator on the base of the chassis.

Confirmation of transmit is by way of the momentary green TX indicator on the base of the chassis.

When any zone is changed to it's active state, the pre-programmed data/message for that zone will be transmitted to the receiver(s). Repeat transmissions can be programmed for added security, these will be detailed on the Configuration Data sheets provided with your system.

Where the system has been configured for voltage input:
volts present = an open input, no volts = a closed input.

The siren output is an "open collector" type switching to ground. It may be used to switch up to 24V dc @ 1A max. Note that if it is used to switch a relay, a suitable diode must be connected across the relay coil (stripe towards positive side of coil).

Problems and Fault Finding.

- 1 Check that the input cables are connected to the active zones. For a 5 zone unit, these are the lowermost terminal blocks on the main PCB (see Diagram 2).
- 2 Check the Configuration Data sheet supplied with the system to confirm the active (trigger) state of each input i.e. Normally Open, Normally Closed or Change of State.
- 3 If your system has been configured for Dry Contact operation, ensure that no voltage is present on the input cables. Also check that cable runs are not excessive (preferably less than 10 metres) and are not in close proximity to other mains or telecoms cabling.
- 4 Check that the receivers are at least 3 metres from the transmitter and aerial. Under certain conditions it is possible to flood receivers and corrupt the data received.
- 5 Check that any portable receivers used with the system have the battery installed with the correct polarity and are correctly powered up.
- 6 Check that the red power indicator on the base of the chassis is lit. If not, isolate the power and check the mains plug fuse.
- 7 Check that the green TX indicator lights for the duration of the transmission. If not, go back to the cabling and re-check the terminal connections.
- 8 Check that the aerial is correctly installed.

Digilink MK3, USA Mains Version

Other Antennas

In addition to the standard BNC mount 1/4 wave antenna (UHF14BNC), which attaches directly to the Connexions transmitter, the range and performance of this equipment can be improved by the addition of more efficient antennas*. These can be installed either inside or outside the building and are connected to the transmitter with 50 OHM coaxial cable.

The centre fed half wave di-pole, measuring approximately 12 inches from tip to tip, will provide excellent all round local signalling. This can be mounted either inside or outside a building. Two versions are available:

- 1) a light duty antenna suitable for sheltered environments/internal installation (LUHFDP).
- 2) a heavy duty stainless unit with optional mounting hardware for more arduous applications (FDANT).

Pre-terminated coaxial feeder cables are available for 5, 10 or 15 metre requirements. Consult your dealer for further details.

Note ! Only permitted for use with the above Scope approved antennas, all of which are zero Db gain. High frequencies can equate to high power losses. Always use quality cable. RG58 is only acceptable on cable runs of up to 5 metres. We recommend RG213, or equivalent, on greater lengths. If in doubt consult your dealer's Technical Department.

**subject to license conditions. Specifically, mounting height and Effective Radiated Power (ERP).*

Service Information

If you experience a problem with your equipment you must first telephone your dealer, who may request that you undertake a few simple checks. If a problem still remains, your dealer will arrange collection of your system and will endeavour to service or replace the system within 24 working hours and return the same by overnight carrier.

We suggest that you retain the packaging for your control equipment. Incorrectly packed goods returned for service are the responsibility of the customer. If we deem that new packaging is required before we can return the unit, a charge will be made.

In the event that a pager requires service, return it directly to your dealer. Ensure that you carefully fill out the service form provided. Failure to complete this form in full will result in inevitable delays!

Pagers returned with flat, incorrectly installed or leaking batteries will be billed!

Record your system details here for quick reference:-

Date supplied ___/___/___ Serial Number of the unit _____

Transmitter frequency ___Mhz

Number of pagers supplied with the system _____

System base ID number _____ Transmitter baud rate _____

For information on individual pager types, refer to the appropriate pager manual

Digilink MK3, USA Mains Version

System Specification

Mains Input: 100-240V ac 0.8A 50/60 Hz
System Operating Voltage: 13.8V dc
System Power Consumption: less than 700uA (micro Amp) standby, 1.4A transmit

Transmitter:

Power output: 1W max
Frequency Range: 446-469.700 MHz
Channel Spacing: 12.5KHz
TX Baud Rate: 512 or 1200
RF Standards applied: CFR 47, Part 90 & RSS119
EMC Standards applied: FCC Part 15
FCC ID: JRNUSA1WTX

General:

Ports: 5 or 10 dry contact/voltage inputs (configurable)
Open Collector (siren) output: 1A max
Relay output for Power Fail indication
USB port for programming function only
Footprint (mm): •328 (L) x 190 (W) x 75 (D) max

•excluding aerial

Scope's policy is one of continuous development and specifications are subject to change without prior notice