

FM Stereo FM-AM Receiver


Operating Instructions

STR-GX900ES
STR-GX800ES


Warning

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner's Record

The model number is located on the rear exterior and serial number is on the rear. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

For the customers in Canada

CAUTION :
TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Table of Contents

Introduction

Overview	4
Precautions	5

Chapter 1 Getting Started

Unpacking	5
Checking the Supplied Accessories	5
Inserting the Batteries into the Remote Control	5
Hookups	6
Connecting an FM Antenna	6
Connecting an AM Antenna	6
Connecting Audio Components	7
Connecting Video Components	8
Connecting Speaker Systems	9
Connecting External Amplifiers	10
Connecting the AC Power	11

Chapter 2 Basic Operations

Listening to/Watching a Program Source	12
Selecting a Program Source	12
Selecting the Speaker System	12
Adjusting the Audio	12
Using the Remote Control	13
Changing the Settings of the FUNCTION Buttons	15
Receiving Broadcasts	16
Direct Tuning	16
Automatic Tuning	17
Presetting Stations	17
Receiving Preset Stations	18
Watching Video Programs	19
Watching Video Programs	19
Combining the Video Image with the Sound from Another Program Source	19
Using Pre-programmed Sound Fields	20

Chapter 3 Additional Operations

Recording	21
Recording on a Tape, DAT or an MD Recorder	21
Recording from Another Tape (Dubbing)	21
Recording on a Video Tape	22
Adding New Sound on a Video Tape during Video Editing	22
Indexing the Preset Stations	24
Creating an Index Name for a Preset Station	24
Scanning the Indexed Stations	25
Indexing a Program Source	25
Using Sleep Timer	26
Programming the Remote Control	27
Programming Signals for Non-Sony Components	27
Programming New Signals onto a Previously Programmed Button	28
Obtaining More Powerful Sound	29

Chapter 4 Digital Sound Effects

Dolby Surround Sound	30
Selecting the Center Mode	30
Adjusting the Speaker Volume	31
Adjusting the Delay Time of the Rear Speakers	32
Creating Custom Sound Field	33
Adjustable Parameters	33
Understanding the Surround Sound Parameters for the STR-GX900ES	34
Adjusting Parameters	36
Selecting the Sound Field Setting	39

Chapter 5 Other Information

Troubleshooting	40
Specifications	42
Identifying the Parts and Controls	44
Front Panel	44
Remote Control	46

Index	47
-------------	----

Quick Reference	48
-----------------------	----

Overview

Welcome

Congratulations on your purchase of this Sony FM stereo/FM-AM receiver ! This manual describes two models: models STR-GX900ES and STR-GX800ES. The functions and features of these models are the same, except where noted in this manual.

Features of this receiver include:

Dolby *Pro Logic Surround Sound Decoder

- Provides four channels of sound information (front left, center, front right, and rear).
- Four center modes, to match your speaker configuration (WIDE, NORMAL, PHANTOM and 3 CH (channel LOGIC).
- Two enhanced Dolby Pro Logic sound fields, depending on your sound preferences (LIVE (STR-GX900ES only) and THEATER).
- Variable delay time (15 - 30 ms).

Digital Signal Processing (DSP)

- Automatically converts all signals to digital, which lets you adjust the sound with virtually no degradation in sound quality.
- Allows you to customize individual sound parameters including effect level, room size, wall type, seat position, and reverb time. (STR-GX900ES)

Sound Field Settings

- A variety of adjustable sound fields simulate the way you'd experience sound in various listening environments. STR-GX900ES includes 10 factory preset sound field settings (HALL, ACOUSTIC, OPERA, CHURCH, STADIUM, LIVE, JAZZ, DANCE, THEATER, DOLBY SUR). STR-GX800ES includes 6 factory preset sound field settings (HALL, ACOUSTIC, LIVE, DANCE, THEATER, DOLBY SUR).

Digital Synthesis FM/AM Tuning

- Allows you to precisely tune in a station.

Parametric Graphic Equalizer (STR-GX900ES)

- Lets you adjust bass, middle, treble, and slope.

30 random FM/AM Station presets

- Lets you store your favorite stations in memory for easy recall.

Programmable Remote Control

- Remote control with "learning" capability allows you to use a single remote control for most audio and video operations.

9 Audio/Video Inputs

- Includes five video inputs (one on front panel).

Center Channel and Surround Amps.

- Center channel amp: 100 watts (STR-GX900ES); 90 watts (STR-GX800ES)
- Surround channel amp: 30 watts

4/8-Ohm Impedance Switch

- Lets you use front and center speakers with either 4 or 8 ohm impedance.

Station Index

- Lets you group preset stations by specific names.

Audio/Video Editing

- Lets you combine a video image with the sound from another program source.

About Dolby Surround Sound

The sound tracks of many programs, including current TV shows and movies that are on video cassette and laser disc, use Dolby Surround Sound. This enhanced audio soundtrack complements the action as it happens on the screen. Surround sound uses four separate channels to direct off-screen audio effects, on-screen dialog, left-to right panning, and music, bringing you right into the action. In the past, you would have to go to a movie theater to experience all the benefits of surround sound. But now, with the special sound decoder that is built into this receiver, you can experience Dolby Surround Sound right in your living room, with sound that even rivals what you would experience in a movie house.

Independent 3-Channel Amplifier

The amplifier section is composed of independent power circuits for all channels; front left, right and center channels, and uses a parallel push-pull output circuit. This circuit design allows the output impedance to be lowered, while allowing current flow and total power dissipation to increase. The result is better performance into low impedance loads, and at high power output levels.

Full Bandwidth Center Channel

Because as much as 70% of a typical movie's audio "energy" comes from the center channel, Sony has designed this receiver-with full-bandwidth center channel amplifiers (20 Hz - 20 kHz). This discrete amp is powered by a large transformer and uses dedicated filter capacitors for each channel to further ensure superior audio quality during transients and peak power output periods.

Power Swap

The Power Swap feature lets you add to the receiver's total amplification without compromising the signal integrity (if you want to add a separate power amplifier).

Low Filter (Models for U.S.A. and Canada)

For superior performance when using a subwoofer, this switch will eliminate signals below 100 Hz from the front speakers. This filter will prevent phase cancellation between the subwoofer and the front speakers.

* Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. number 3,959,590; Canadian numbers 1,004,603 and 1,037,877. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Precautions

On safety

- For USA and Canadian models, operate the unit only on 120 V AC, 60 Hz. For the Australian model, operate the unit only on 240 V AC, 50 Hz.
- Should any solid object or liquid fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.

Place the unit in a location with adequate air circulation

This will prevent internal heat build up in the unit.

Do not install the unit:

- near heat sources such as radiators or air ducts.
- in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.

Do not place anything on top of the cabinet

The top ventilation holes must be unobstructed for proper operation of the unit and to prolong the life of its components.

Do not throw away the carton and packing material!

Keep the packaging to transport the system for servicing, etc.

Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine.

For customers in the U.S.A.

For detailed safety precautions, see the "IMPORTANT SAFEGUARDS" leaflet.

If you have any question or problem concerning your unit, please consult your nearest Sony dealer.

Chapter 1 Getting Started

Unpacking


Checking the Supplied Accessories

Check that you have received the following items.

- FM wire antenna (1)
- AM loop antenna (1)
- Remote commander (RM-P341) (1)
- AA-size Sony batteries (SUM-3 (NS)) (2)

Inserting the Batteries into the Remote Control

Insert two size AA batteries (supplied) by matching the + and - on the batteries to the diagram inside the battery compartment.

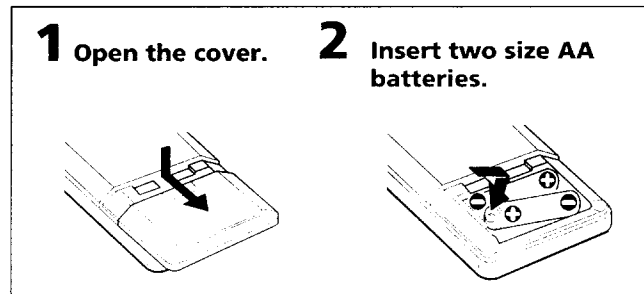

Notes

- If you plan not to use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- With a normal use, the batteries should last for approximately six months.
- Do not mix different types of batteries.

Hookups


This section describes how to hookup antennas, audio components, TV/VCRs, speaker systems, and external amplifiers.

Notes

- Do not connect the power cord to an AC outlet nor press the POWER switch before completing all other hookups.
- Be sure to fully insert the cable connectors into the jacks. Loose connection may cause hum and noise.
- Jacks and plugs of the connecting cord are color-coded as follows:
Red jacks and plugs: For right channel audio
White jacks and plugs: For left channel audio
Yellow jacks and plugs: For video


Connecting an FM Antenna

Connect the supplied FM wire antenna for temporary use. For better sound reception, we recommend that you use a 75-ohm coaxial cable (not supplied) instead.

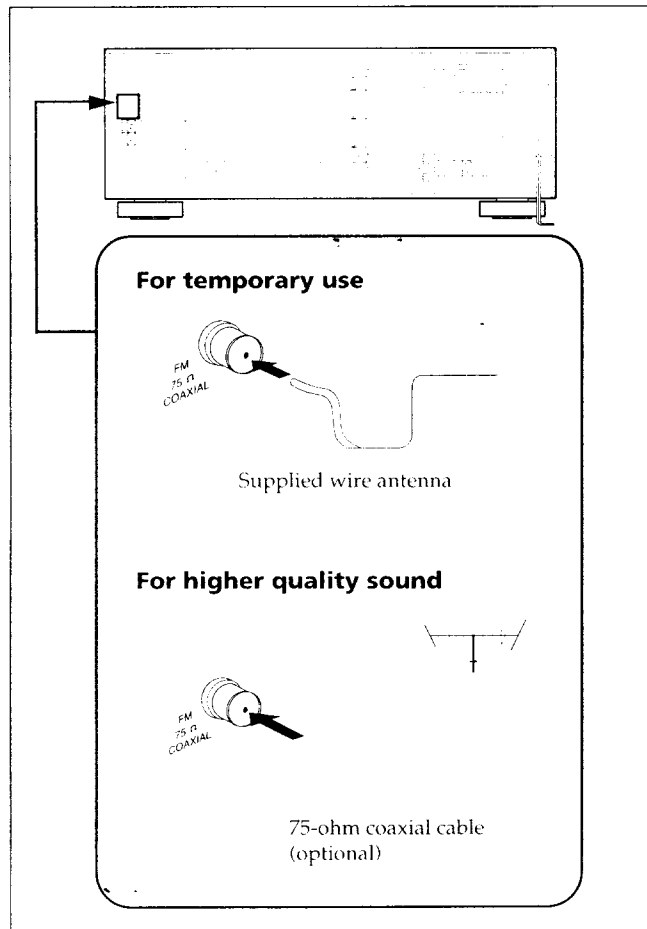

Connecting an AM Antenna

Connect the supplied AM loop antenna to the AM antenna terminal, as shown below:

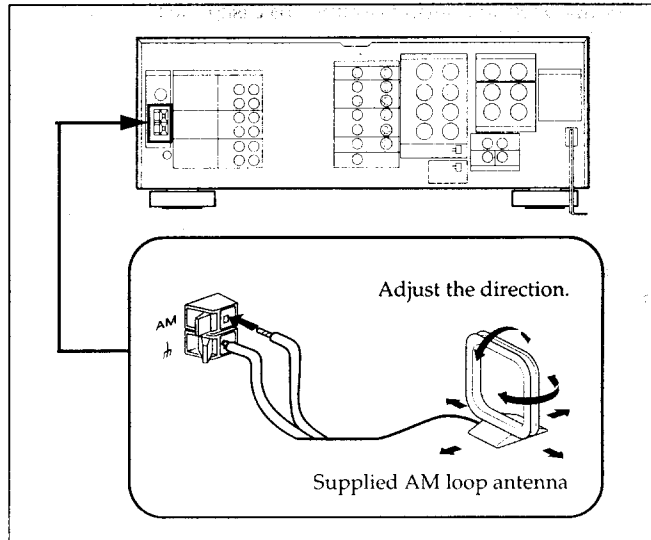

If you have poor AM reception

Usually, the supplied AM loop antenna is adequate to receive AM broadcasts.

If you have poor reception, connect a 20 to 50 ft. (6 to 15-meter) insulated wire to the AM antenna terminal in addition to the loop antenna. If possible, extend the wire out of doors and keep it horizontal.


(Do not remove the AM loop antenna.)

To prevent hum

If you install an outdoor antenna, connect the ground wire to the ANTENNA ground terminal (⚡) for lightning protection.

Connecting Audio Components

Make sure that you connect red plugs to the right channel (R) jacks and white plugs to the left channel (L) jacks.

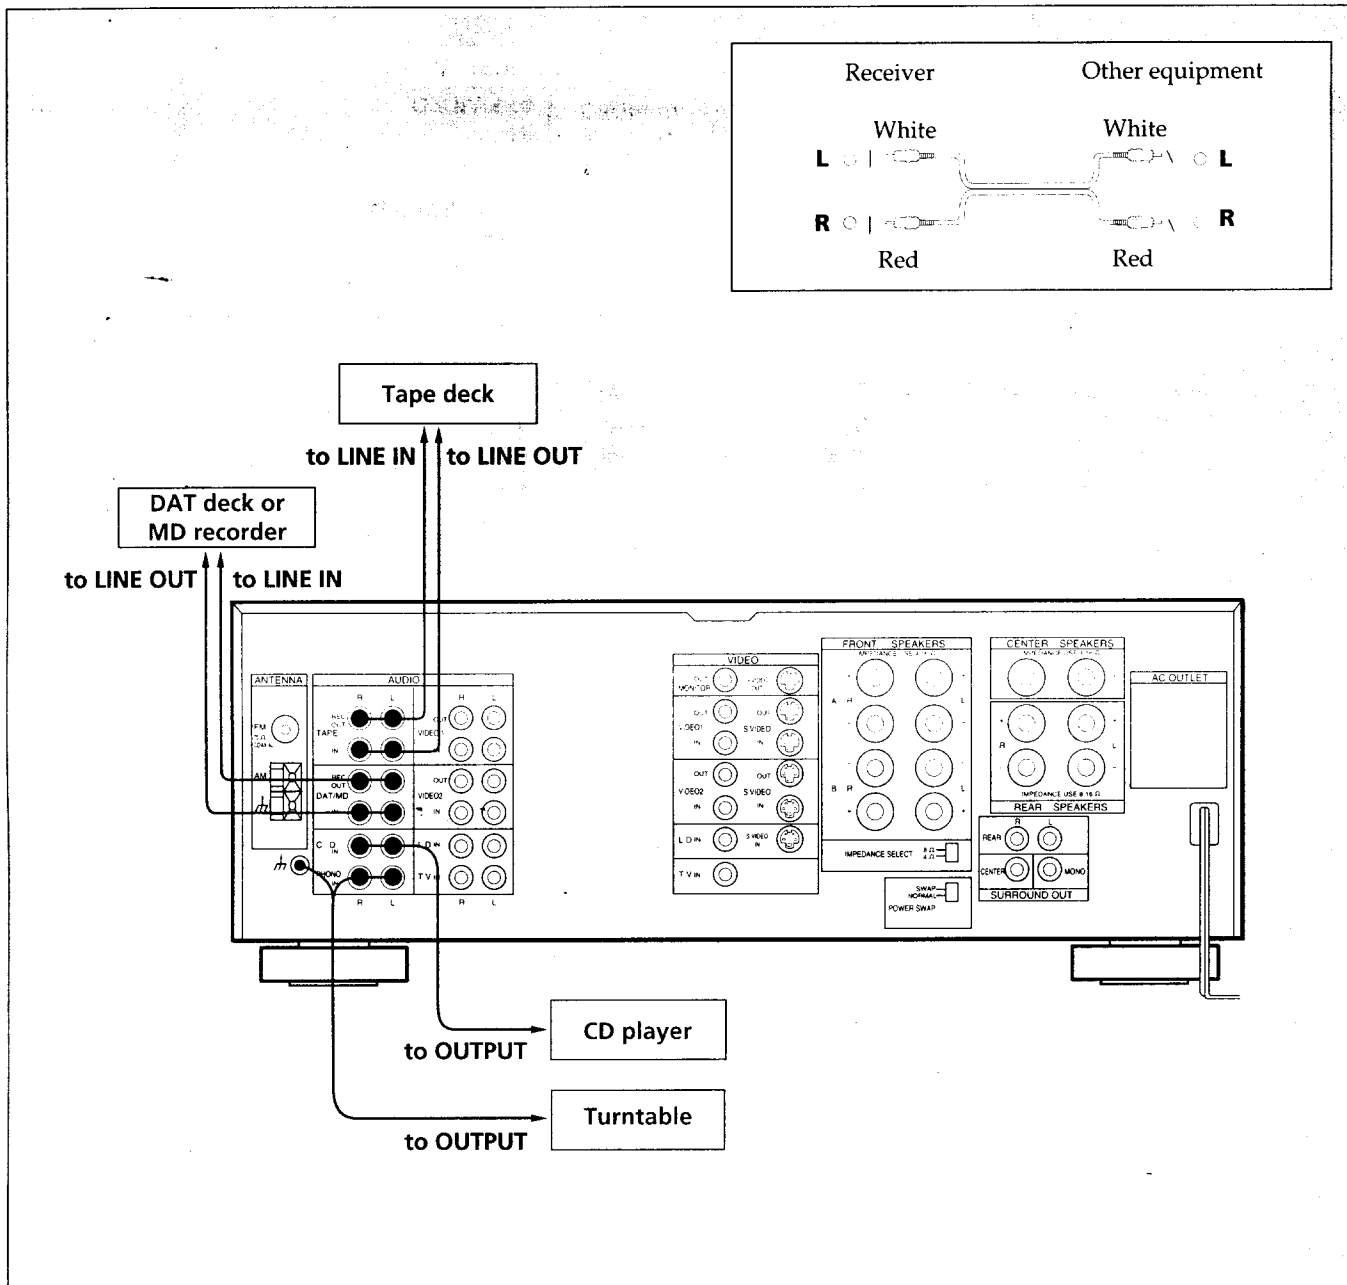


Note

The TAPES IN jacks are only for monitoring the sound so that you cannot record the sound of a component connected to the TAPES IN jacks. Use another IN jacks for recording.

Hookups (continued)

Connecting Video Components

Make sure that you connect each plug correctly: red plugs to the right channel (R) jacks of audio signals; white plugs to the left (L) channel jacks of audio signals; and yellow plugs to the video signals.

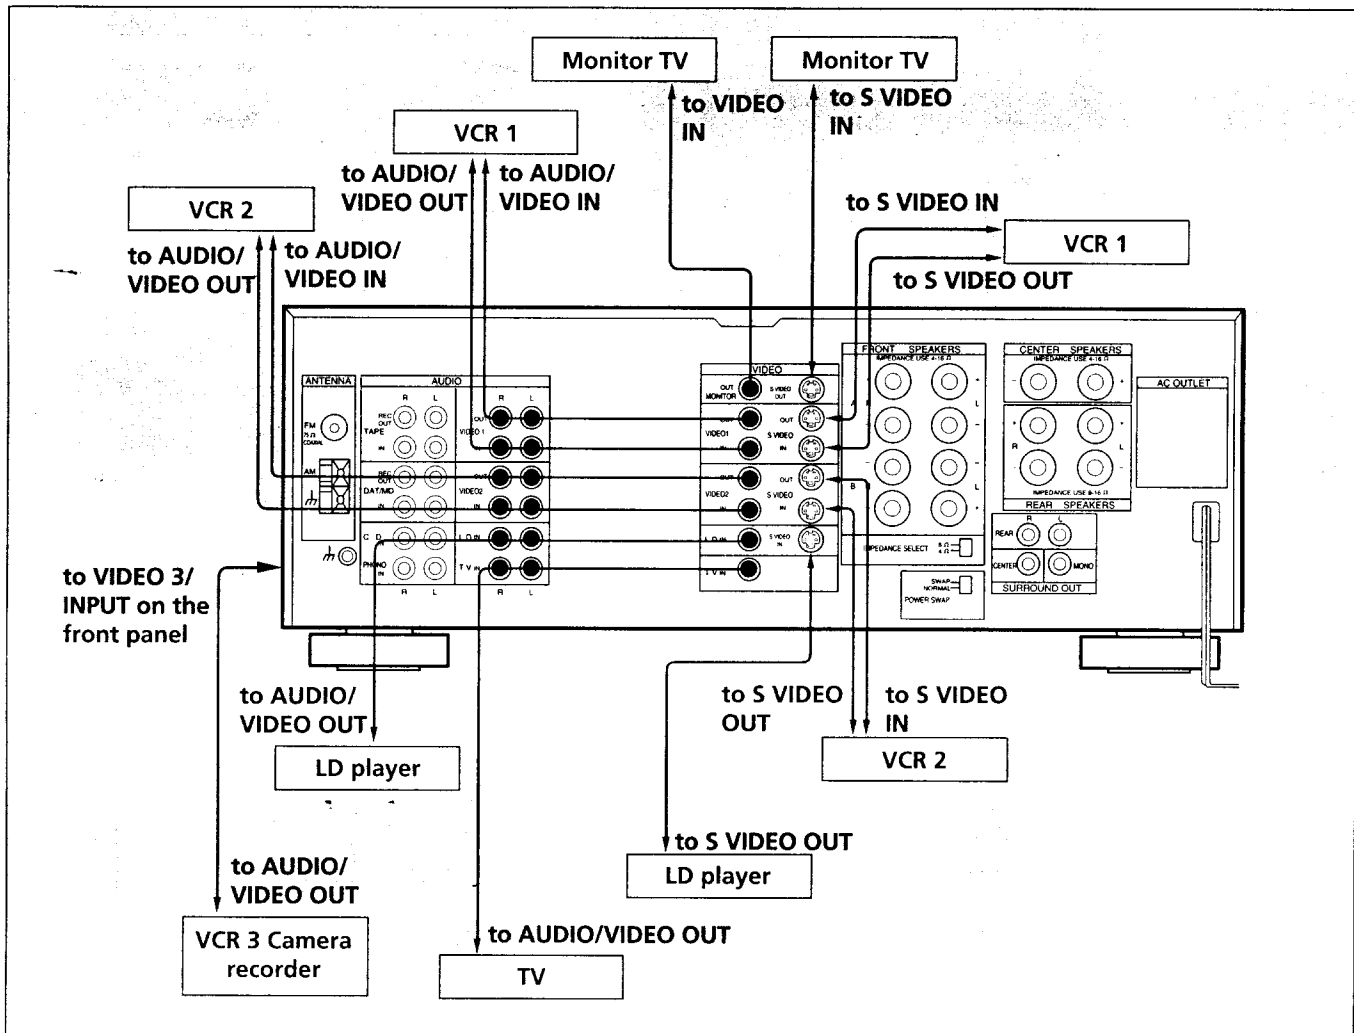

If your video components have S VIDEO IN/OUT jacks

Use the S VIDEO jacks instead of the conventional video jacks. This will give you a clearer picture.

Notes

- The S VIDEO circuitry and the VIDEO circuitry of this unit are independent of each other. The signals input from the S VIDEO jacks are not output to the VIDEO jacks, and the signals input from the VIDEO jacks are not output to the S VIDEO jacks. Therefore, you can connect the S VIDEO jacks between video components which have the S VIDEO jacks but you should connect the VIDEO jacks if one of them has no S VIDEO jacks.
- If your monitor TV does not have an S VIDEO IN jack while other video components have the S VIDEO jacks, be sure you do not connect them to the receiver's S VIDEO jacks. Otherwise, no picture will be seen.


If you are connecting more than two video components

Be sure to use the jacks in the different section for each component.

For example, you cannot use both S VIDEO jacks and VIDEO jacks in VIDEO 1 section simultaneously.

Connecting Speaker Systems

Make sure you match the + and - of the speaker cord to the +/- diagram on the speaker terminals. If the cords are reversed, the sound will be distorted and will lack bass.

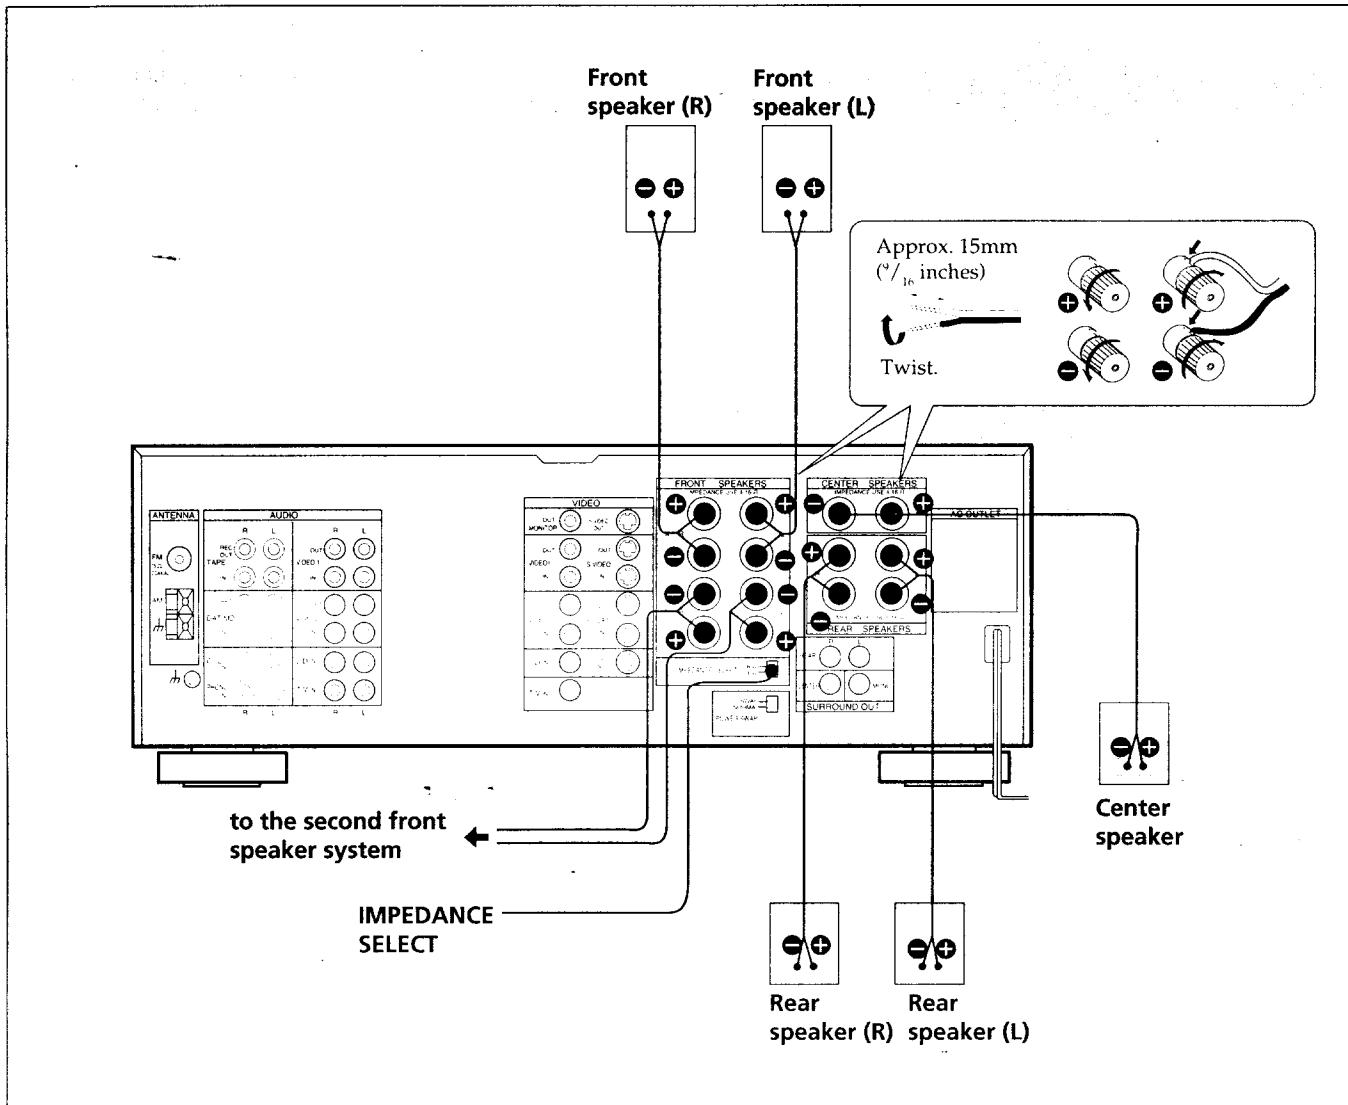

Selecting the impedance

Select the impedance for the front and center speakers.

If nominal impedance of your speaker is:	Set the IMPEDANCE SELECTOR to:
4 ohms or higher	4 Ω
8 ohms or higher	8 Ω

- If you are using both FRONT SPEAKERS A and B systems, use the speakers having nominal impedance of more than 8 ohms and set the IMPEDANCE SELECTOR to the 4 Ω position.


Deciding where to place your speakers

To get the optimum surround sound effect, connect both front and rear speakers. If you have a center speaker, place it between both left and right front speakers.

Even though you do not have a full set of speakers, the receiver is designed to give the best possible surround sound effect. For details, see "Selecting the Center Mode" on page 30.

Connecting External Amplifiers

To obtain more powerful sound, connect an external power amplifier or a pre-amplifier.

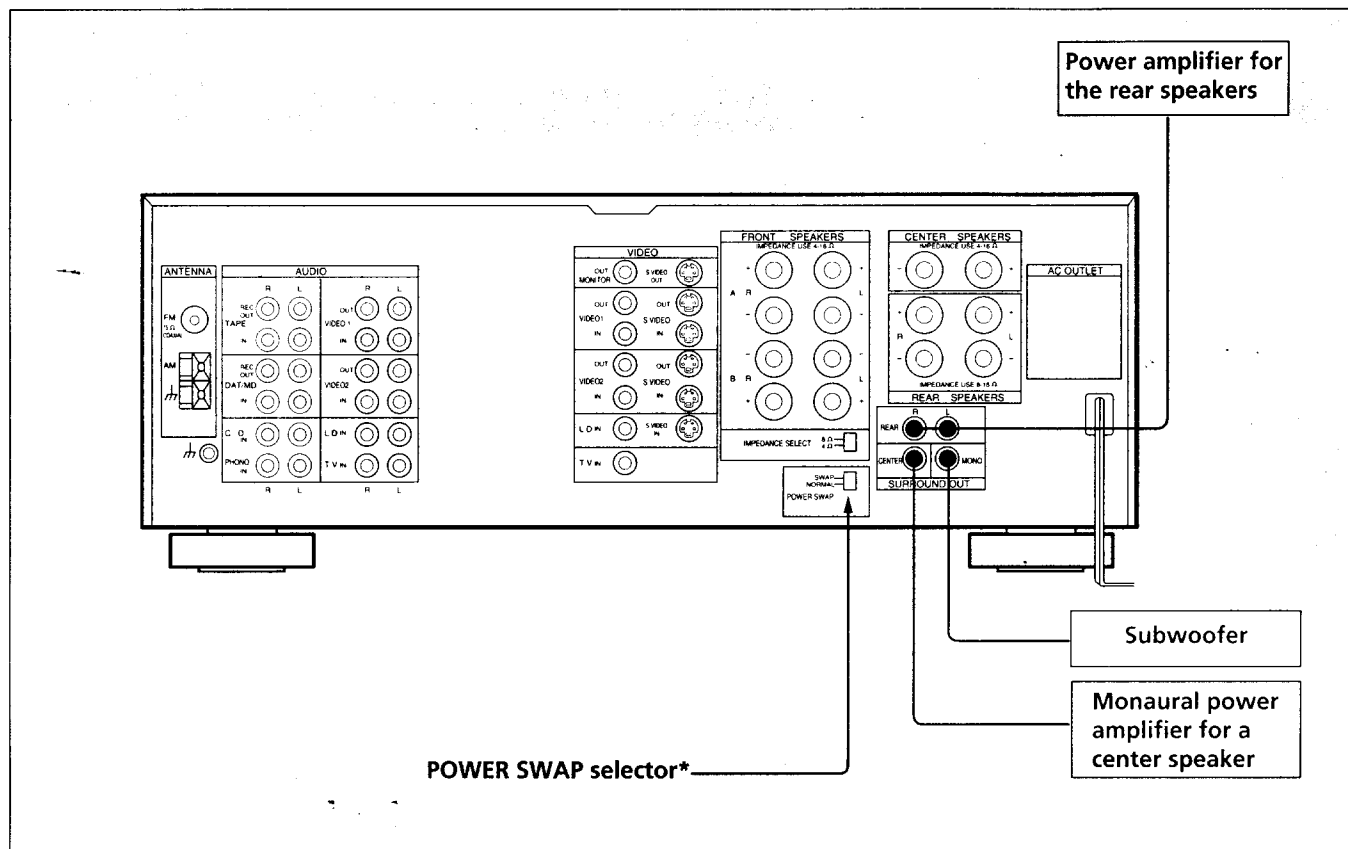

If you are connecting a subwoofer with a power amplifier

Connect the line input jack of the subwoofer to the SURROUND OUT MONO jack of this receiver.

If you are connecting a subwoofer without a power amplifier

Connect it through a monaural power amplifier.

On the low cut filter for front speakers (Models for U.S.A. and Canada only)

When using a subwoofer, the low frequency signal should be cut from the front speakers for better sound reproduction.

To activate the low cut filter function, turn on the power with the POWER switch while holding down the LOW BOOST button. The low cut filter indicator on the front panel lights up.

To cancel the low cut filter function, perform this procedure again.

If you are connecting a power amplifier for the rear speakers

Connect the input jacks of the power amplifier to the SURROUND OUT REAR jacks of this receiver. Make sure the POWER SWAP selector is set to NORMAL.


If you are connecting a monaural power amplifier for the center speaker

Connect the input jack of the power amplifier to the SURROUND OUT CENTER jack of this receiver.

* To obtain more powerful sound from front and rear speakers, you can use the POWER SWAP selector. The total output power of your audio/video system will be increased. See "Obtaining More Powerful Sound" on page 29.

Connecting the AC Power

Connect the power cord from this receiver to a wall outlet. If you connect other audio components to the SWITCHED AC OUTLET on the receiver, the receiver will supply power to the connected components only when the receiver is turned on.

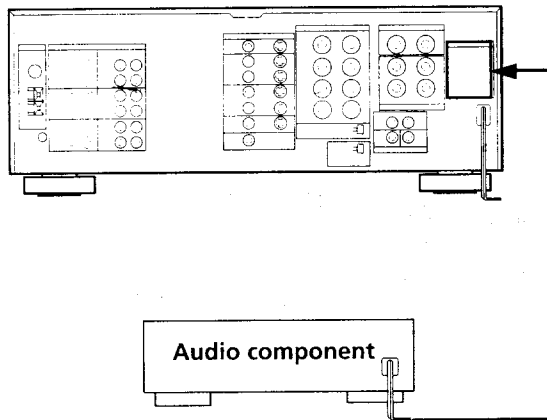


Caution

Be careful that the total power consumption of components connected to the outlet(s) on the receiver does not exceed 120 watts (U.S.A. and Canada models) or 100 watts (Australia model).

Do not connect electrical home appliances such as an electric iron, fan, TV, or other high-wattage appliances to the outlet(s).

Listening to/Watching a Program Source

Selecting a Program Source

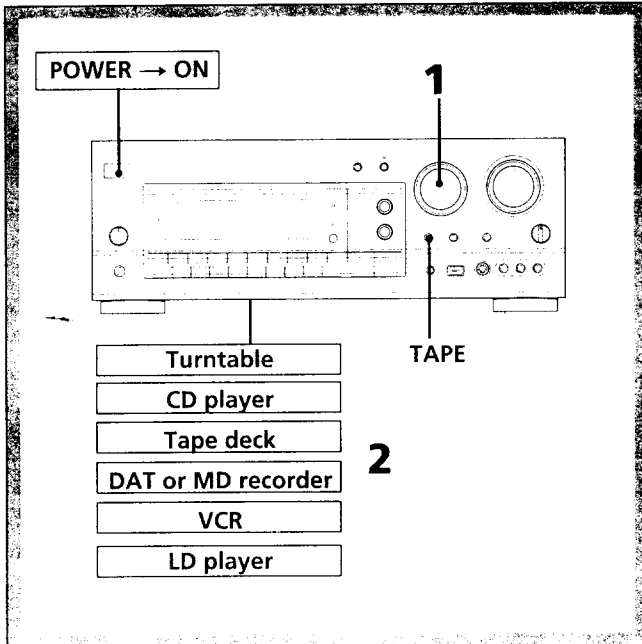

1 Select a program source.
 Rotate the FUNCTION knob until the function indicator you want to select lights on the display.


To select	Set to
Phono record	PHONO -
Radio broadcast	TUNER
TV broadcast	TV
Compact disc	CD
DAT or MD program	DAT/MD
Video program	VIDEO 1, VIDEO 2, VIDEO 3, LD

For taped program: Press TAPE. The MONITOR indicator lights.

If you select a program source using the remote, you can turn on the power of the component as well as the receiver.

2 Start playback of the selected program, for example, a CD.


Selecting the Speaker System

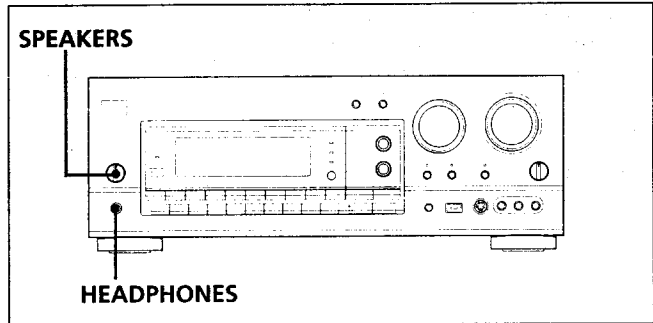

If you connect and drive	Set the SPEAKERS selector to
Speaker system A	A
Speaker system B	B
Both speaker systems A and B	A+B

For headphone listening: Connect headphones to the HEADPHONES jack and set SPEAKERS to OFF.

Adjusting the Audio

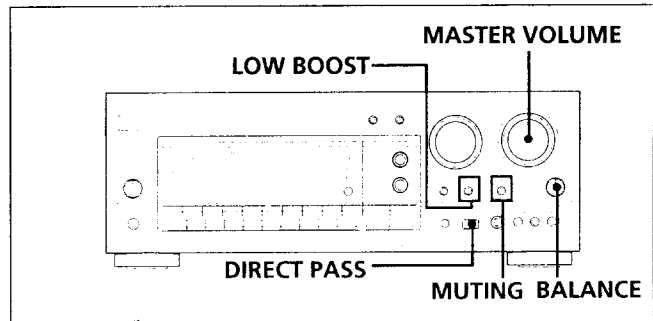

To adjust volume
 Turn MASTER VOLUME.

To mute the sound
 Press MUTING.
 The indicator lights up and the volume level is reduced to a low level (-20 dB attenuation).
 Press it again to restore the previous listening level.

To adjust the balance
 Adjust BALANCE to correct stereo imaging, when the stereo image is not symmetrical.

To reinforce the bass
 Press LOW BOOST so that the indicator lights up. Press it again to turn off the effect (the indicator goes off).
 (Recommended for low listening levels.)

To listen to the sound without sound effect
 Press DIRECT PASS so that the indicator in the button lights up.
 The settings of TONE (STR-GX800ES), EQUALIZER (STR-GX900ES), SOUND FIELD and LOW BOOST will have no effect.

Using the Remote Control


The remote lets you operate the connected components as well as the receiver. Press one of the SYSTEM CONTROL/FUNCTION buttons first to select the program source, then use the following buttons to operate each component.

The SYSTEM CONTROL/FUNCTION buttons are factory set as described in the following list.

FUNCTION button	Operates
TUNER	Tuner
TAPE	Tape deck
DAT/MD	DAT deck/MD recorder
CD	CD player
LD	LD player
VIDEO 1	VCR (VTR 1 mode)
VIDEO 2	VCR (VTR 2 mode)
VIDEO 3	VCR (VTR 3 mode)
TV	TV
PHONO	(The receiver enters PHONO mode)

You can use the RMS function of Sony cassette decks with this remote. For more information on the availability of Sony stereo cassette decks with RMS capability, contact your nearest Sony dealer.

Turning on power of each component

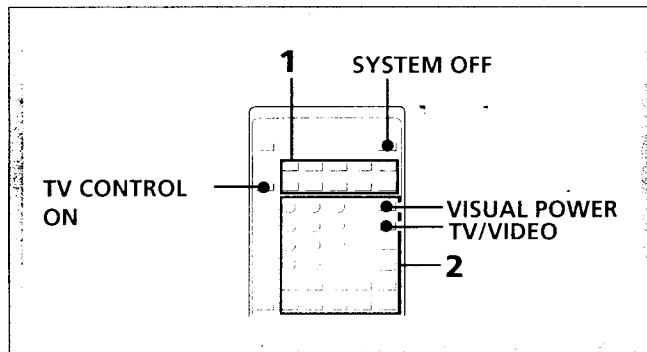

1 Press one of the SYSTEM CONTROL/FUNCTION buttons.

The receiver, the audio component connected to the AC OUTLET of the receiver, VCR, LDP and TV are turned on.

2 Press the button for the function you want to use.

The function of the buttons changes depending on which component you are operating.
(See "Operative Buttons" on page 14.)

Turning off the power of components

- Pressing the SYSTEM OFF button turns off the power of all components at one time.
- Pressing the VISUAL POWER button turns off only the TV, VCRs and LD player.
- If you want to turn off the power while listening to a program source, see "Background operation" on page 15.

If you use Sony TVs

- When you press the VIDEO 1, 2, 3 or LD button, the TV automatically turns on and switches to appropriate VIDEO input.
- When you press the TV button, the TV turns on and switches to the TV reception mode. (If the TV does not switch to the TV reception mode, hold down the button until the TV is turned on or press the button again after the TV is turned on.)
- If the TV input does not switch to the appropriate mode, switch the input signal with the TV/VIDEO button.
- Some Sony TVs cannot be turned on with the remote supplied with this unit. In this case, use the remote supplied with the TV to turn it on.

If you use TV most of the time (Only for Sony TVs)

You can set the remote to operate only the TV. Press the TV CONTROL ON button. This sets up the remote so that it works only with your TV.

Listening to/Watching a Program Source (continued)

Operative buttons

FM/AM tuner

To	Press
Select memory pages for preset tuning	SHIFT
Designate preset numbers	Numeric buttons
Scan and select preset stations	CH PRESET +/-
Select station index names	INDEX

Tape deck/DAT/MD recorder

To	Press
Designate numbers	Numeric buttons
Designate number more than 10 (For tape deck and MD recorder)	>10
Fastforward	▶▶
Rewind	◀◀
Skip selections (For DAT and MD recorder)	▶▶ (forward), ◀◀ (reverse)
Pause play	
Start play	▶
Start reverse play (For tape deck)	◀
Select the tape running direction (For tape decks with the RMS function)	RMS DIRECTION
Stop play	■
Clear the RMS program contents (For tape decks with the RMS function)	RMS CLEAR
Start recording (Forward direction)	● + ▶
Start recording (Reverse direction for tape deck)	● + ◀
Program selections (For tape decks with the RMS function)	RMS/START

CD player

To	Press
Designate numbers	Numeric buttons
Designate number more than 10	>10
Skip discs	D.SKIP
Search selections	▶▶ (forward), ◀◀ (reverse)
Skip selections	▶▶ (forward), ◀◀ (reverse)
Pause play	
Start play	▶
Stop play	■

TV/VCR/LD player

To	Press
Designate channel numbers of TV/VCR or selections of LD	Numeric buttons
Designate selections of LD more than 10	>10
Enter the selected TV/VCR channel	ENTER
Select TV to see TV programs and VIDEO to see videos	TV/VIDEO
Select the output signal from the antenna terminal on the VCR: a TV signal or VCR program	ANT TV/VTR
Select a preset channel of TV or VCR	CH PRESET +/-
Fastforward (For VCR and LD player)	▶▶
Rewind (For VCR and LD player)	◀◀
Pause play (For VCR and LD player)	
Start play (For VCR and LD player)	▶
Stop play (For VCR and LD player)	■
Skip selections (For LD player)	▶▶ (forward), ◀◀ (reverse)
Start recording (For VCR)	● + ▶
Turn on the power of TV, VCR, or LD player	VISUAL POWER


Background operation

You can temporarily operate other components while listening to/watching a program source.

- 1 Hold down the BACKGROUND button.
- 2 Hold down the numeric button* of the component you want to operate.
- 3 Press the button for the operation that you want to perform.

You can use certain buttons such as VISUAL POWER, TV/VIDEO, CH PRESET +/-, ANT TV/ VTR, D.SKIP, ►, ◄, ■, ►►, ◄◄, ►◄, ◄►, II, ●.

Example: To record a CD on a tape:

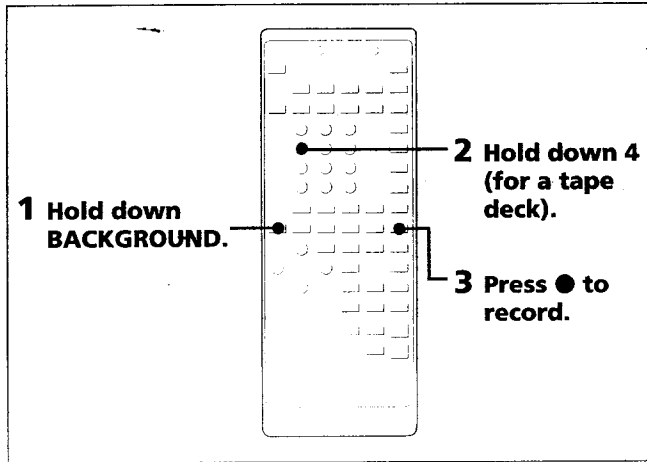

Note

You can record only in the forward direction with background operation.

* For a list of the components that are assigned to the numeric buttons, see the table in "Changing the Settings of the FUNCTION Buttons" on this page.


Changing the Settings of the FUNCTION Buttons

The FUNCTION buttons are preset to operate only specific components. (The CD button operates only the CD player.) However, if you want to use different components, you can change the presets to control these different components. For example, if you connect a DAT deck to the CD IN jacks, you can operate the DAT deck with the CD FUNCTION button by changing the preset function to the DAT function.

To change the settings of the FUNCTION buttons

- 1 Hold down the FUNCTION button that you want to change.
- 2 Press one of the numeric (0 to 9) buttons to select a new component.

Example: To change the CD FUNCTION button to operate a DAT deck, press 2 (for the DAT deck) while holding down the CD button.

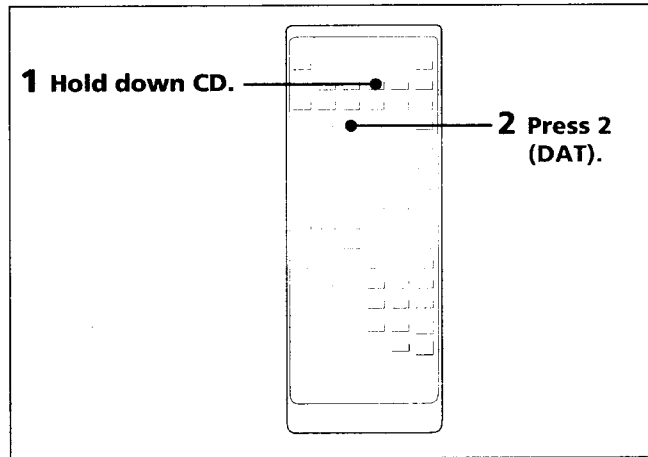

Note

- The settings of the TUNER button and the PHONO button cannot be changed.
- To change the FUNCTION buttons back to their original preset, perform these procedures again.

With the numeric buttons (0 to 9), each function can be selected as described in the following table:

The function to be selected	Numeric buttons
TV	0
CD player	1
DAT deck	2
MD recorder	3
DECK A	4
DECK B	5
LD player	6
VTR 1 (Remote control mode)	7
VTR 2 (Remote control mode)	8
VTR 3 (Remote control mode)	9

Receiving Broadcasts

You can tune in a radio station directly or you can have the receiver scan all the stations until it finds the one you want. Once you preset stations on the receiver, you do not have to tune in the station every time.

Direct Tuning

Use direct tuning if you know the frequency of the station you want. For example, to tune in FM 102.50 MHz, press "1", "0", "2", "5" and "0".


If you enter a frequency not covered by the tuning interval, the entered value is automatically rounded up or down to the closest covered value.

Tuning intervals for direct tuning are set as follows:

FM: 50 kHz interval

AM: 10 kHz interval (changeable to the 9 kHz interval)

(See page 43)

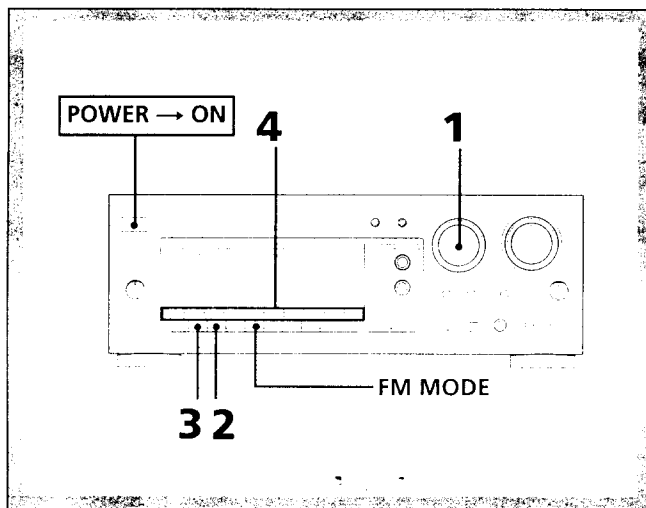

1 Rotate the FUNCTION knob to select TUNER.
The station's frequency number is displayed. If you create a station index name (page 24), this name is displayed instead of the frequency number.


2 Press FM/AM to select FM or AM.

3 Press DIRECT.

4 Enter the frequency with the numeric buttons.


The frequency number is displayed.

Example 1: FM 102.50 MHz



FM 102.50 MHz

Example 2: AM 1350 kHz



AM 1350 kHz

If you enter an AM frequency, you do not have to enter the last "0".

However, if you have changed the AM tuning interval to 9 kHz, you must enter till the last digit.

To change the frequency

Repeat steps 3 and 4.

If you enter a non-receivable frequency

The entered digits blink in the frequency display area, and the station is not tuned in.

If this occurs, enter the correct frequency.

The frequency range of the receiver is as follows:

- U.S.A. and Canadian models
87.50 to 108.0 MHz for FM, and 530 to 1710 kHz (10 kHz step) or 531 to 1710 kHz (9 kHz step) for AM
- Australian model
87.50 to 108.0 MHz for FM, and 531 to 1602 kHz (9 kHz step) for AM


If an FM stereo program is distorted

You might want to change it to monaural. Press the FM MODE button so that "MONO" appears on the display. You will not have the stereo effect, but the distortion will be reduced.

To return to the stereo mode, press the button again. "AUTO STEREO" appears on the display.

Automatic Tuning

In automatic tuning, the receiver scans all the stations to locate the one you want. If you do not know the frequency of the station that you want, use automatic tuning.

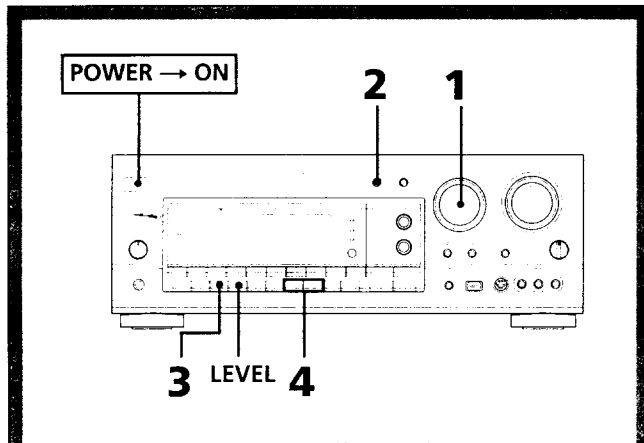

1 Rotate the **FUNCTION** knob to select **TUNER**.
The station's frequency number is displayed. If you create a station index name (page 24), this name is displayed instead of the frequency number.

2 If the index name is displayed, press **DISPLAY** so that "**NORMAL MODE**" appears on the display.
The frequency number is displayed.

3 Press **FM/AM** to select **FM** or **AM**.


4 Press **INDEX SELECT/TUNING + or -**.
For a higher frequency, press **TUNING +**.
For a lower frequency, press **TUNING -**.
When a station is received, automatic tuning stops. To receive other stations, press the button again.

If the scanning stops frequently while receiving FM stations

Press **LEVEL** so that the receiver stops only at the stations with strong signals. To cancel this (to receive stations with weaker signals), press **LEVEL** until **HIGH** goes off.

Presetting Stations

You will most likely want to preset the stations you listen to often. The receiver can store a total of 30 FM or AM stations. Up to 10 stations can be stored in three different memory pages: A, B and C. (For example, a station is stored as A7 or B3.)

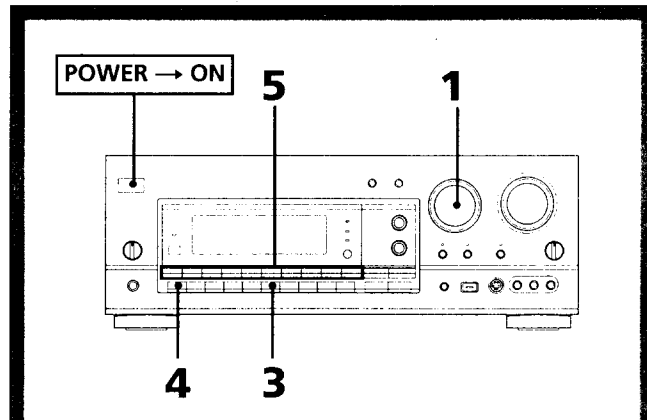

1 Rotate the **FUNCTION** knob to select **TUNER**.
The station's frequency number is displayed. If you create a station index name (page 24), this name is displayed instead of the frequency number.

2 Tune in the station you want.
(See "Direct Tuning" on page 16 or "Automatic Tuning" in the left column of this page.)

3 Press **MEMORY**.
MEMORY is displayed.

4 While "**MEMORY**" appears, press **SHIFT** to select a memory page: **A, B** or **C**.
Each time you press **SHIFT**, **A, B** or **C** is displayed.

5 While "**MEMORY**" appears, press the number you want to use.
Repeat steps from 2 through 5 for presetting other stations.

To change a preset station

Preset a new station on the number of the station to be changed. The station will be replaced.

IMPORTANT


If the power cord is disconnected for more than one month, the preset stations will disappear from the receiver's memory, and you will have to preset the stations again.

Receiving Broadcasts (Continued)

Receiving Preset Stations


You can tune in a preset station either by entering the preset station number or by scanning the preset stations.

By entering preset numbers

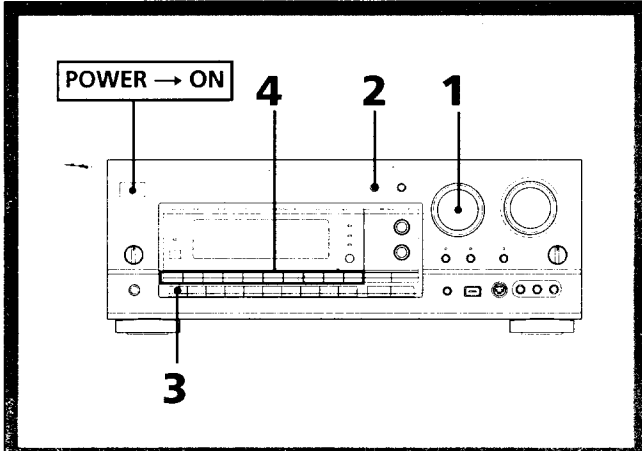


- 1 Rotate the FUNCTION knob to select TUNER.**
The station's frequency number is displayed. If you create a station index name (page 24), this name is displayed instead of the frequency number.
- 2 If the index name is displayed, press DISPLAY so that "NORMAL MODE" appears on the display.**
The frequency number is displayed.
- 3 Press SHIFT to select a memory page: A, B, or C.**
Each time you press SHIFT, A, B or C is displayed.
- 4 Press the numeric button of the preset station you want.**

By scanning preset stations

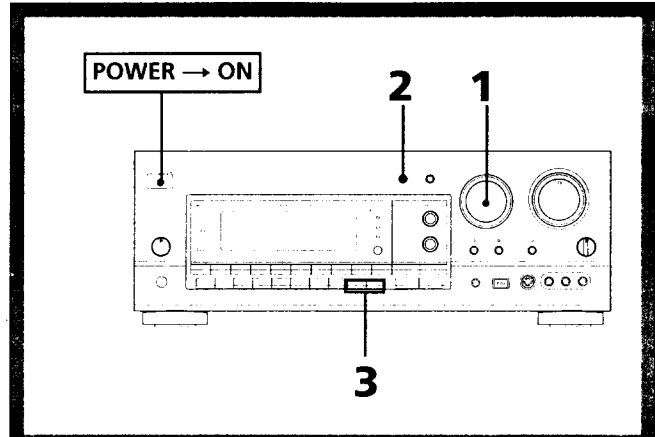

- 1 Rotate the FUNCTION knob to select TUNER.**
The station's frequency number is displayed. If you create a station index name (page 24), this name is displayed instead of the frequency number.
- 2 If the index name is displayed, press DISPLAY so that "NORMAL MODE" appears on the display.**
The frequency number is displayed.
- 3 Press PRESET TUNING + or - to select the preset station you want.**
For a higher preset number, press PRESET TUNING +.
For a lower preset number, press PRESET TUNING -.

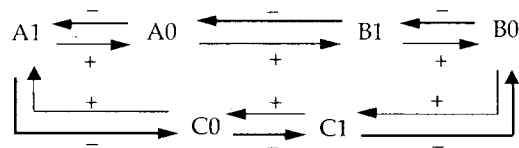


Watching Video Programs

Watching Video Programs

When you watch video programs on your TV, VCR or LD player, we recommend that you play the audio portion of the video through the receiver (instead of your TV's speakers), so that you can take advantage of sound field programs, including Dolby surround sound. In this case, set the speaker volume of TV to the minimum level.

To watch TV programs, turn on both TV and the receiver and select TV with the FUNCTION knob on the receiver. To watch videos or laser discs, use the following procedure if you've hooked up your components as described in "Connecting Video Components" on page 8. See your TV, VCR, LD player's instruction manual if you need help.

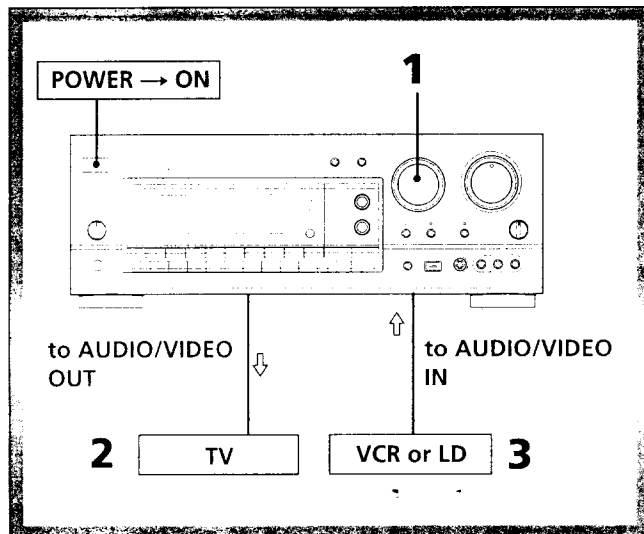


- 1 Rotate the FUNCTION knob to select the video program source you want.**
- 2 Turn on the TV and set the video input to your video component.**
- 3 Turn on the component you are going to use (VCR or LD player), and then start playback.**

If you use a Sony TV

The TV turns on automatically when you press one of the SYSTEM CONTROL/FUNCTION buttons on the remote. Moreover, you can use convenient functions of the remote to watch a video program source on a Sony TV. See page 13.

Combining a Video Image with the Sound from Another Program Source

You can combine a video image with sound from another program source (including video sources). For example, you can watch a video taped program (without original sound) while listening to a CD.

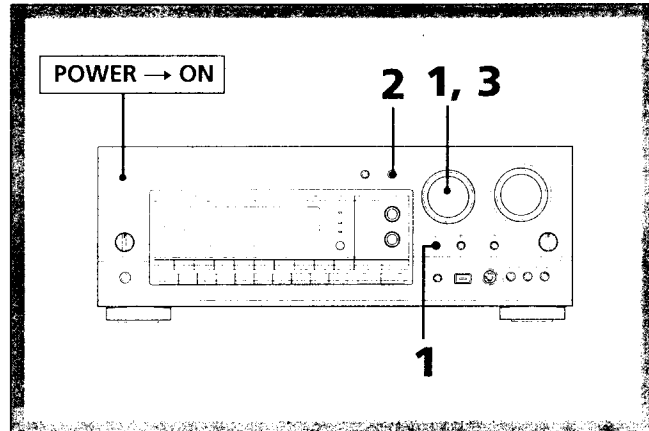

- 1 Rotate the FUNCTION knob or press TAPE to select the audio you want.**
- 2 Press FUNCTION MODE.**
The selected audio is fixed and "VISUAL MODE" appears on the display. In this mode, you can select only the video source without its original sound.
- 3 Rotate the FUNCTION knob to select the video you want.**
If you want to change the audio selected in step 1, press FUNCTION MODE. "AUDIO MODE" appears on the display. In this mode, you can select any audio of the sources (including video sources).
- 4 Play back both program sources you selected.**


Note on the FUNCTION MODE button

If you do not select the video or audio within 8 seconds after pressing the FUNCTION MODE button, the VISUAL MODE or AUDIO MODE is canceled and you cannot fix the video or audio. In this case, press the FUNCTION MODE button until the mode that you want appears on the display. Each time you press the button, the mode changes as follows:

VISUAL MODE → AUDIO MODE → off.

Using Pre-programmed Sound Fields

This receiver comes with 10 (STR-GX900ES) or 6 (STR-GX800ES) pre-programmed sound fields. You can use these sound fields to simulate the sound you would experience in various listening environments. In addition to these pre-programmed sound fields, you can also create custom sound custom fields. For creating custom sound fields, see pages 30 - 39.

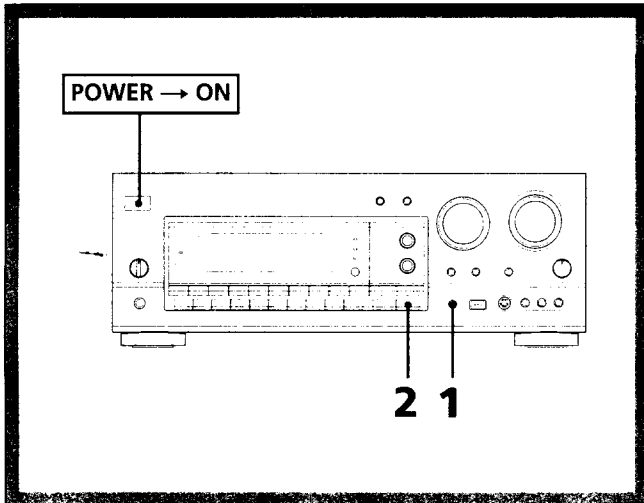

1 Press **SOUND FIELD ON/OFF** to **ON**.
The previously selected sound field setting appears on the display.

2 Press **SOUND FIELD MODE** until the sound field indicator that you want lights up on the display.
Try out different fields using the following table as a reference. Note that some fields are designed specifically for video programs.


	SOUND FIELD	Applications
VIDEO	DOLBY SUR	For Dolby surround encoded video programs
	THEATER	For movie programs on video tapes or laser discs
	LIVE	For music programs on video tapes or laser discs
AUDIO	HALL	For orchestral music, chamber music or an instrumental solo
	DANCE	For dance music
	JAZZ (STR-GX900ES only)	For jazz
	OPERA (STR-GX900ES only)	For operas or musicals
	CHURCH (STR-GX900ES only)	For church music or pipe organ music
	STADIUM (STR-GX900ES only)	For a live concert in an open-air stadium
	ACOUSTIC	The surround effect is defeated and only the equalizer effect can be obtained.

Recording

This receiver makes audio/video recording and editing easier. Before you get started, make sure all the AV components are connected properly.

Recording on a Tape, DAT or an MD Recorder

You can record and make copies of audio program sources on a tape, DAT or MD using the receiver. See your tape deck, DAT deck or MD recorder's instruction manual if you need help.

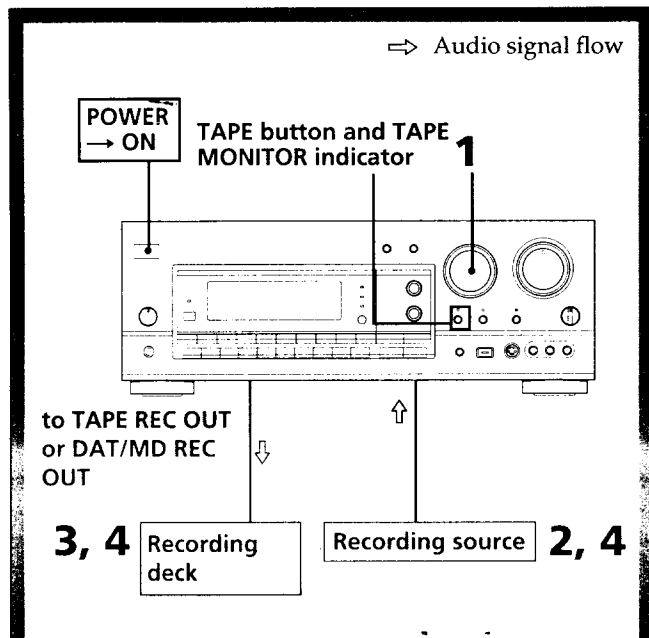


- 1** Rotate the **FUNCTION** knob to select the recording source.
- 2** Set the recording source to be ready for playback.
For example, tune in the desired station for an FM/AM broadcast.
- 3** Insert a blank tape into the recording deck or a disc into the MD recorder and adjust the recording level, if necessary.
- 4** Start recording on the recording component and then start playing the recording source.

You can monitor the sound being recorded on a tape

If you record on a 3-head tape deck connected to the TAPE REC OUT jacks, you can monitor the recording results by connecting it also to the TAPE IN jacks. Press TAPE while recording or dubbing, until the TAPE MONITOR indicator lights up. To listen to the source sound, press the button again until the indicator goes off.

Recording from Another Tape (Dubbing)

Tape dubbing is possible only in the directions that are shown below. Be sure to connect a playback deck to the DAT/MD IN jacks and a recording deck to the TAPE REC OUT jacks.

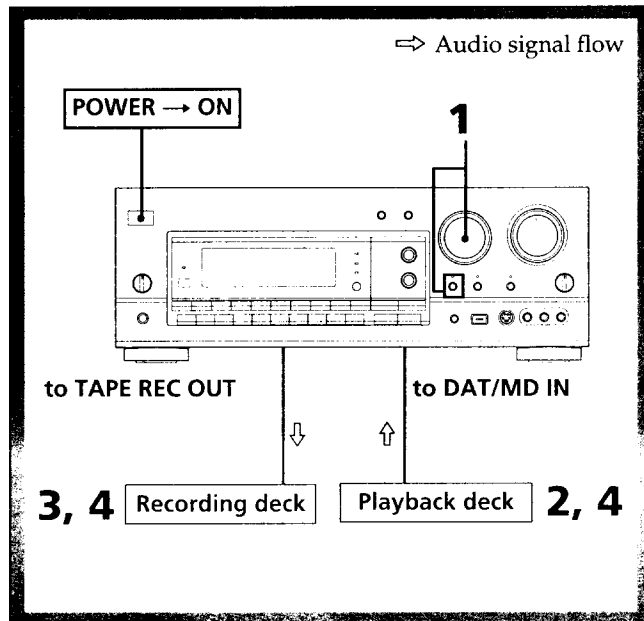


- 1** Rotate the **FUNCTION** knob or press TAPE to select the deck for playback.
- 2** Insert the tape you want to record into the playback deck.
- 3** Insert a blank tape into the recording deck. Adjust the recording level, if necessary.
- 4** Start playback on the playback deck. Then start recording on the recording deck. Dubbing will start.

Recording (Continued)

Recording on a Video Tape


You can record and make copies of programs from other VCR, LD player or TV using the receiver. See your VCR, LD player or TV's instruction manual if you need help.

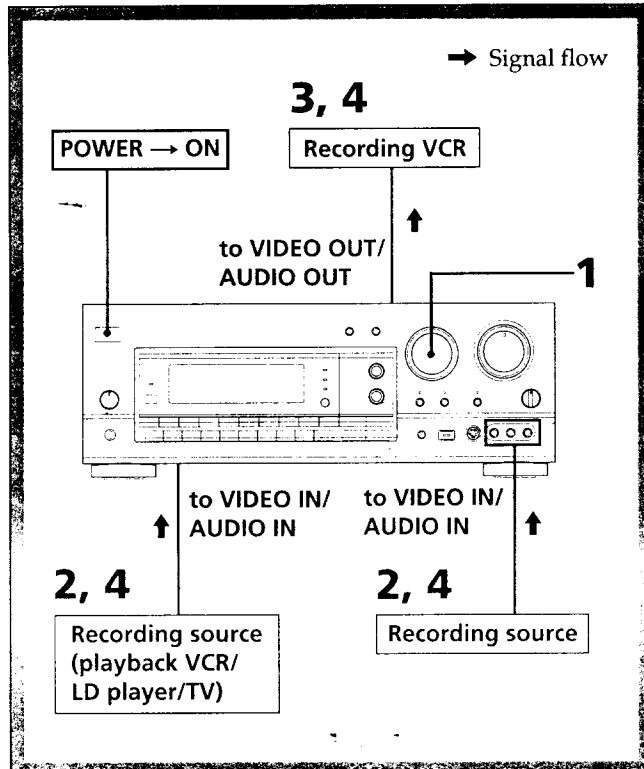

- 1** Rotate the **FUNCTION** knob to select the recording source.
- 2** Set the recording source to be ready for playback.
For example, insert a source tape you want to record from into the playback VCR.
- 3** Insert a blank video tape into the recording VCR.
- 4** Start recording on the recording VCR and then start playing the recording source.

Adding New Sound on a Video Tape during Video Editing

You can record audio from all program sources while recording video, LD or TV programs on a video tape instead of their original sound. See your VCR, LD player or TV's instruction manual if you need help.

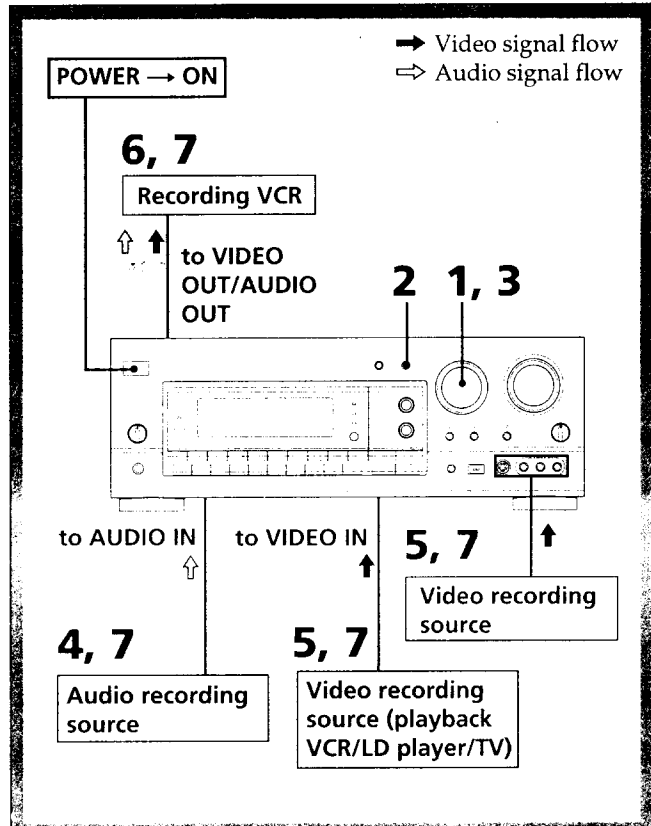

- 1** Rotate the **FUNCTION** knob to select the program source that contains the sound you want.
- 2** Press **FUNCTION MODE**.
The selected audio is fixed and "VISUAL MODE" appears on the display. In this mode, you can select only the video source without its original sound.
- 3** Rotate the **FUNCTION** knob to select the video you want.
If you want to change the audio selected in step 1, press **FUNCTION MODE**. "AUDIO MODE" appears on the display. In this mode, you can select any audio of the program sources (including video sources).
- 4** Set the recording source for audio to be ready for playback.

5 Set the video recording source to be ready for playback.

6 Insert a blank video tape into the recording VCR.

7 Start recording on the recording VCR and then start playing the both video and audio recording source.

Note on the FUNCTION MODE button

If you do not select the video or audio within 8 seconds after pressing the FUNCTION MODE button, the VISUAL MODE or AUDIO MODE is canceled and you cannot fix the video or audio. In this case, press the FUNCTION MODE button until the mode that you want appears on the display. Each time you press the button, the mode changes as follows:

VISUAL MODE → AUDIO MODE → off.

To record other audio on a desired part of video


- 1 Play back the video recording source and press the pause button on it at the point where you want to record other audio.
- 2 Press FUNCTION MODE twice and select the audio with the FUNCTION knob or TAPE button.
- 3 Start recording on the recording VCR, release the pause mode and start playing the recording source for audio.

Indexing Preset Stations

You might find that too many preset stations make it hard to find the one you want to listen to. This receiver includes a feature that lets you group preset stations and give each group a name (station index). For example, you can group all the Jazz stations and label them "JAZZ." The next time you select "JAZZ," you can scan all the stations labeled "JAZZ."

Creating an Index Name for a Preset Station

You can create an index name (station index) using up to five letters and symbols each.

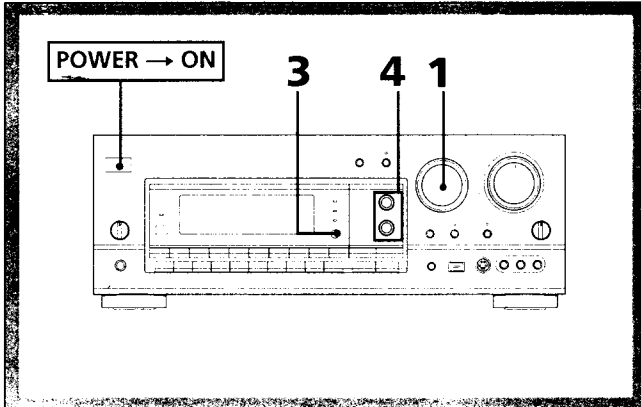

- 1 Rotate the FUNCTION knob to select TUNER.**
The station's frequency number is displayed. If you have already created a station index name, this name may be displayed instead of the frequency number.
- 2 Tune in the preset station that you want to create a station index name for.**
To receive the preset station, see page 18.
- 3 Press DPC MODE until the INDEX indicator lights up.**

- 4 Create an index name.**
To select a character, rotate the PARAMETER/EQ LEVEL/CHARACTER knob*.
To change the position within the name, rotate the LEVEL/FREQUENCY/POSITION knob**.
When using the remote, press ^ or v to select a character. To change the position, press < or >.

If you make a mistake, move to the character position to be corrected and enter a new character. To use the same index name again, select the name you have stored before by rotating the PARAMETER/EQ LEVEL/CHARACTER knob*.

- 5 Repeat steps 2 through 4 for all other stations to which you want to assign an index name.**

If you store an already categorized station under any other index name
Only the last selected category will be stored. Each station can be stored under only one index name.

Usable letters and symbols
You can use any of the following characters to create a station index name:

STR-GX900ES
(space), !, @, #, \$, %, &, ', (,), *, +, -, ., /, 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, :, ;, <, =, >, ?, ^, A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, [, \,], II, ↓, a, b, c, d, e, f, g, h, i, j, k, l, m, n, o, p, q, r, s, t, u, v, w, x, y, z


STR-GX800ES
A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, 1, 2, 3, 4, -, (space)

* For STR-GX800ES, the name of the knob is PARAMETER/TONE LEVEL/CHARACTER.
** For STR-GX800ES, the name of the knob is LEVEL/BASS/TREBLE/POSITION.

Indexing a Program Source

Scanning the Indexed Stations

You can easily find the station you want by scanning the indexed stations.

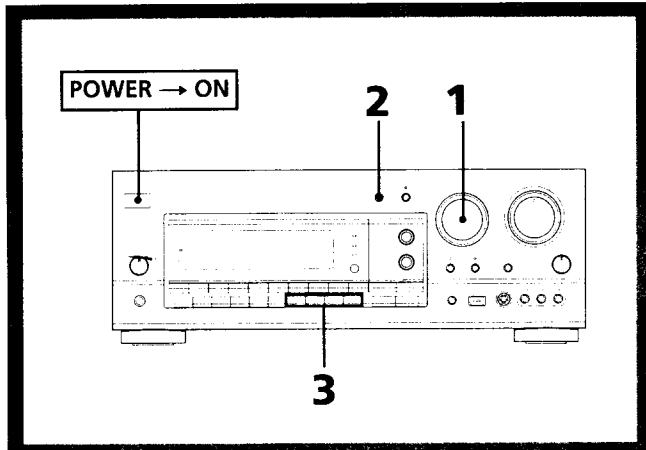


1 Rotate the FUNCTION knob to select TUNER.
The station index name you created appears on the display. The frequency number appears if you have not created the station index name on that station.

2 Press DISPLAY until "INDEX MODE" appears on the display.
Each time you press this button, frequency and station index name (if you have created one) alternately appears on the display. If you have not stored an index name, " _ _ _ _ " appears.

3 Select the station you want.

- To select a station in the same index:
Press PRESET TUNING + for a higher channel index station and press PRESET TUNING - for a lower channel index station.
- To select an index station other than the displayed index station:
Press INDEX SELECT/TUNING + or - once. Then press PRESET TUNING + for a higher channel index station and press PRESET TUNING - for a lower channel index station.

In addition to indexing preset radio stations (see page 23), you can also create a name (index name) for program sources (e.g., CD, TAPE, etc.). For example, if you connected a second tape deck to the DAT/MD jacks, you will most likely want to display "TAPE 2" (instead of "DAT/MD") when you use the second tape deck. The name you create appears in the display whenever you select that program source. You can use up to 11 letters and symbols for each index name.

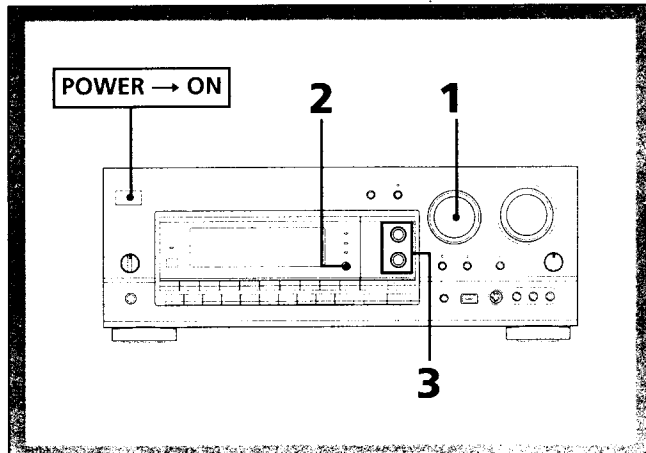

1 Rotate the FUNCTION knob to select a program source that you want to create an index name for.

2 Press DPC MODE until the INDEX indicator lights up.

3 Create an index name.
To select a character, rotate the PARAMETER/EQ LEVEL/CHARACTER knob*.
To change the position within the name, rotate the LEVEL/FREQUENCY/POSITION knob**.

4 Repeat steps 1 to 3 for all other program sources you want to assign an index name to.

* For STR-GX800ES, the name of the knob is PARAMETER/TONE LEVEL/CHARACTER.

** For STR-GX800ES, the name of the knob is LEVEL/BASS/TREBLE/POSITION.

Indexing a Program Source (continued)

To change the index name

Store a new name to replace it.

Usable letters and symbols

You can use any of the following characters to create a function index name:

STR-GX900ES


(space), !, →, #, ←, %, &, ', (,), *, +, -, ., /, 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, :, ;, <, =, >, ?, ↑, A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, [, \,], II, ↓, a, b, c, d, e, f, g, h, i, j, k, l, m, n, o, p, q, r, s, t, u, v, w, x, y, z

STR-GX800ES

A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, 1, 2, 3, 4, 5, 6, 7, 8, 9, -, (space)

Using the Sleep Timer

You can set the receiver to turn off automatically at a time that you specify.

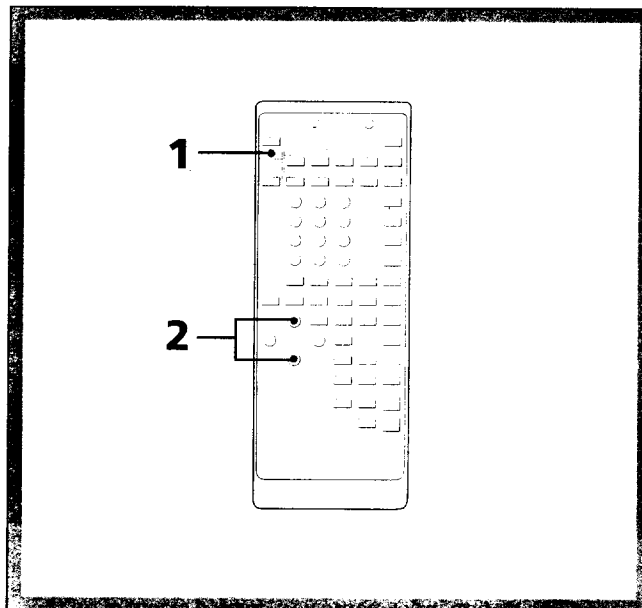

1 Press SLEEP on the remote while the power is on.

Each time you press SLEEP, the time is displayed in the following order:

2 hours → 1 hour and 30 minutes → 1 hour → 30 minutes → SLEEP OFF.

2 Press ^ or v to precisely specify the sleep time, if necessary.

You can change the sleep time by 1 minute and extend the time up to 5 hours.

To check the remaining time of the sleep timer

Press SLEEP. The remaining time is displayed.

Note

After you have checked the remaining time, the display returns to the function display and becomes dim.


Programming the Remote Control

This remote can operate other components that are connected to the receiver. In addition, the remote can literally "learn" the signals from non-Sony components and let you control them.

Programming Signals for Non-Sony Components

Once this remote learns the signals of the other components, you can use other non-Sony components as part of your system. Also if any of your other Sony components fail to operate with this remote, use this programming function. Your remote can "learn" only the signals from remotes that are infrared wireless remotes. Before you program signals, make sure that the two remotes:

- face straight each other (as shown in step 3 below)
- are placed at a distance of approximately 2 inches (5 cm)
- are not moved during programming

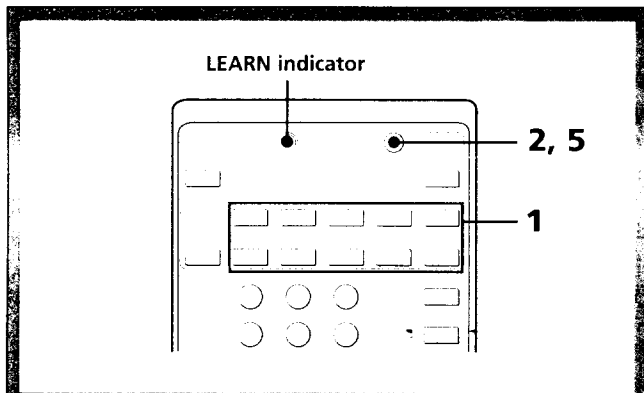


1 Press the FUNCTION button of the component to be programmed.

For example, if you want to program a CD player's remote control, press CD.

2 Press the LEARN button with a ball-point pen, etc., so that the indicator lights up.

3 Program a signal.

- ① On this receiver's remote, press the button that is to "learn" the signal from the other remote until the LEARN indicator blinks slowly.

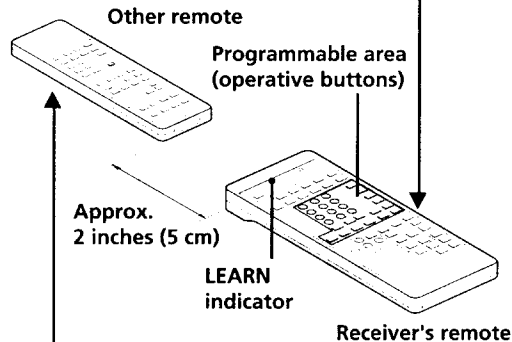

- ② On the other remote, hold down the button you want the receiver's remote to "learn."

- ③ Remove your finger(s) from the button(s) after the LEARN indicator on this remote lights up.

Note

You can program only specific buttons for specific components. See "Operative Buttons" on page 14 for a list of the buttons that can be programmed for each component type. If you press a button that cannot be programmed in step ①, the LEARN indicator blinks rapidly.

4 Repeat step 3 for other buttons that you want to program.

5 Press the LEARN button with a ball-point pen, etc.

The LEARN indicator lights for a few seconds. After the indicator goes off, you can control other components with the programmed buttons.

Note

If you do not perform the next operation in about one minute after steps 2 and 3-①, the learning mode will be canceled. If this happens, start again at step 1.

Programming the Remote Control

After programming

Be sure to test that the component really works with the programmed signals.

How many signals can you store in memory?

You can store approximately 60 signals, depending on the format of the signal being used.

Memory capacity

If the LEARN indicator does not blink or light in step 3-① or ③, this indicates that the memory capacity is full. In this case, clear the signal stored in that button following the procedure described in "To clear a programmed signal" and program again from the beginning. When programming, avoid the following conditions.

- Placing the remotes too far apart from each other.
- Exposing the remotes to intense light such as of inverter fluorescent lamp.
- Receiving infrared signals of another appliance's remote.

Notes on programming

- Remote control signals of components of manufacturers other than Sony can be programmed only when they are compatible with the infrared wireless remote control system. Since the programmable remote can "learn" only the signals output from another remote, it cannot control components that do not use a remote.
- Do not attempt to use the programmable remote with an air conditioner or other household appliance.
- Note that there are some special remote control signals that cannot be programmed.
- The SYSTEM CONTROL/FUNCTION button of this remote does not work for the other components even if their signals are programmed.

Programming a New Signal onto a Previously Programmed Button

Follow the programming procedure described on page 27. The previously programmed signal is cleared and replaced by the new signal.

To clear a programmed signal

- 1 Press the LEARN button with a ball-point pen, etc., so that the LEARN indicator lights up.
- 2 Press the button to be cleared while pressing the BACKGROUND button until the LEARN indicator goes off.

To program a signal onto the ● button for recording


It is not possible to operate any component with only the ● button. You have to program the record standby signal and record start signal under the ● + ► button on the receiver's remote. With a tape deck, you can also program the signal under the ● + ◀ button (in the reverse direction).

Notes on batteries

If the LEARN indicator does not light when a button is pressed, this means that the batteries are low. When the batteries are low, the remote can no longer operate the unit and programming becomes impossible. If this happens, replace both batteries with new ones. We recommend you use alkaline batteries for extended use.

Obtaining More Powerful Sound

If you would like to create an even more powerful system, you can expand the total power output by using the Power Swap Function and connecting the two additional amplifiers. Connect the speakers and additional amplifiers as shown in the diagram below.

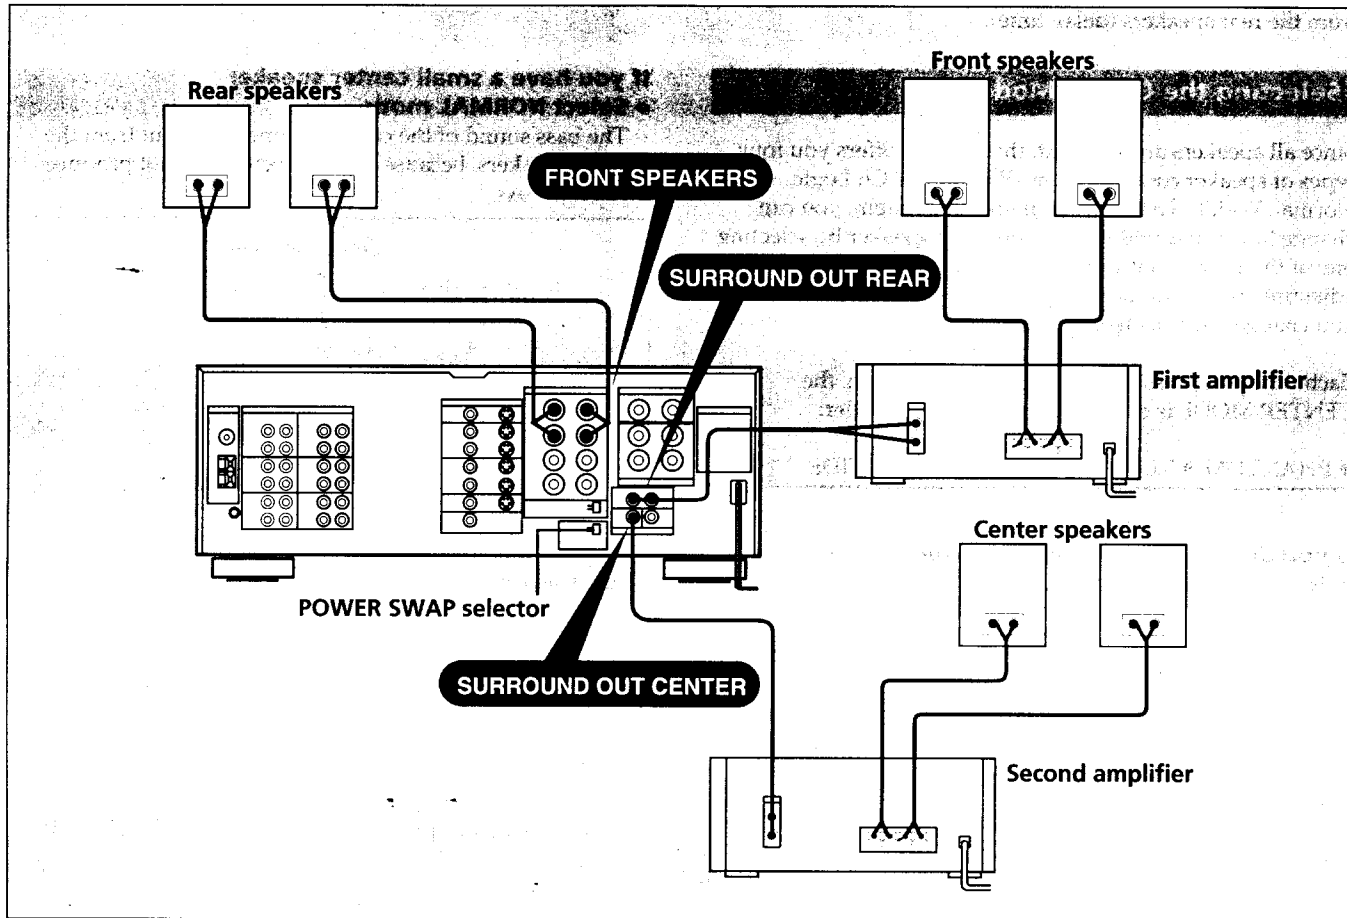

1 Unplug the power cord.

2 Connect the rear speakers to the FRONT SPEAKERS terminals of this receiver.
The rear signals are output from the FRONT SPEAKERS terminals.

3 Connect the first amplifier to the SURROUND OUT REAR, and connect the front speakers to this amplifier.
The front signals are output from the SURROUND OUT REAR terminals.

4 Connect the second amplifier to the SURROUND OUT CENTER, and connect the center speaker to this amplifier.
The center signal is output from the SURROUND OUT CENTER terminal.

5 Remove the cover of the POWER SWAP selector and set the selector to the SWAP position.
After you have completed the setting, attach the cover to the selector and plug in the power cord.

Adjusting the volume

Set the volume control of separate amplifiers to the maximum position and adjust the volume level with the volume control of the receiver.

Notes

- For best results, we recommend using a pair of equivalent amplifiers to boost front and center speaker output. You can, however, connect the center speakers to the CENTER SPEAKERS terminals if you only have one additional amplifier.
- Do not use the terminals labeled CENTER SPEAKERS or REAR SPEAKERS if you connect two additional amplifiers. Make connections as shown in the diagram above.
- If you want to turn off the power swap function, set the POWER SWAP selector to the NORMAL position.

Dolby Surround Sound

Many video tapes and laser discs available today are encoded with Dolby surround sound, which adds theater-like sound to your viewing experience. To take advantage of Dolby surround sound, first select the pre-programmed Dolby Surround sound field. To make the most out of the Dolby surround sound, however, we recommend that you select the center mode and adjust the speaker volume based on your speaker configuration. Also, if you have rear speakers, you can adjust the timing of the sound that comes from the rear speakers (delay time).

Selecting the Center Mode

Since all speakers are different, the receiver offers you four types of speaker configurations (Phantom, 3 Ch Logic, Normal, Wide). To best fit your speaker system, you can change how the sound comes from each speaker by selecting one of these four configurations. Once you make the adjustments, you do not have to adjust them again unless you change your speaker system.


Each time you press the CENTER MODE button, the CENTER MODE is changed in the following order:

→ PHANTOM → 3 CH LOGIC → NORMAL → WIDE

If you do not have a center speaker

→ Select PHANTOM mode.


The sound of the center channel is output from the front speakers.

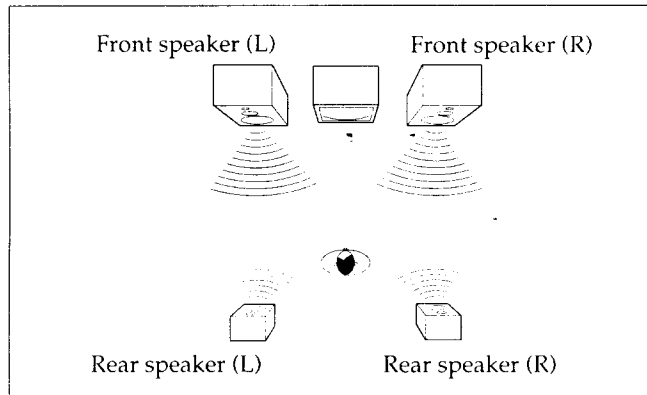

If you have only front speakers and a center speaker

→ Select 3 CH (Channel) LOGIC mode.


The sound of the rear channel is output from the front speakers.

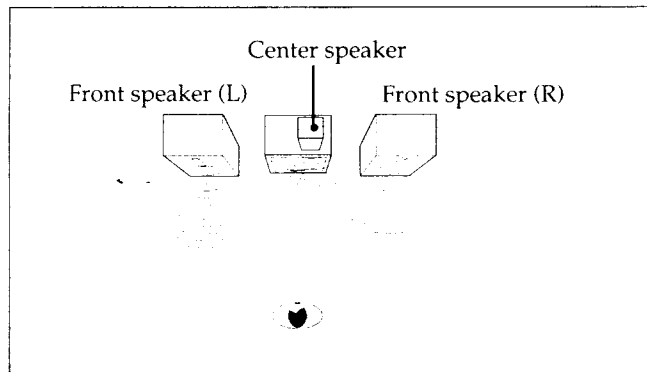

If you have a small center speaker

→ Select NORMAL mode.


The bass sound of the center channel is output from the front speakers, because a small speaker cannot produce enough bass.

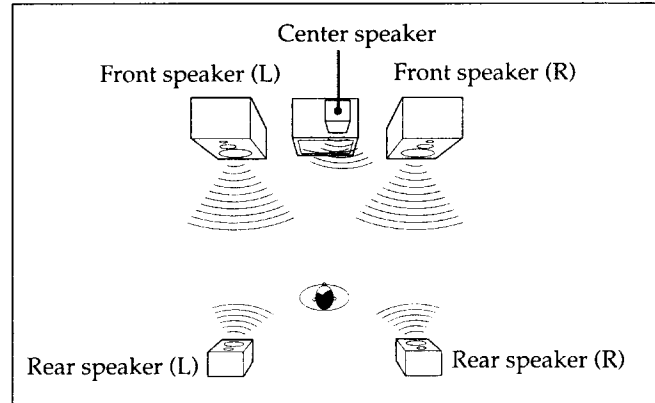


If you have a medium to large center speaker

→ Select WIDE mode.

This is the best possible combination of the speakers.

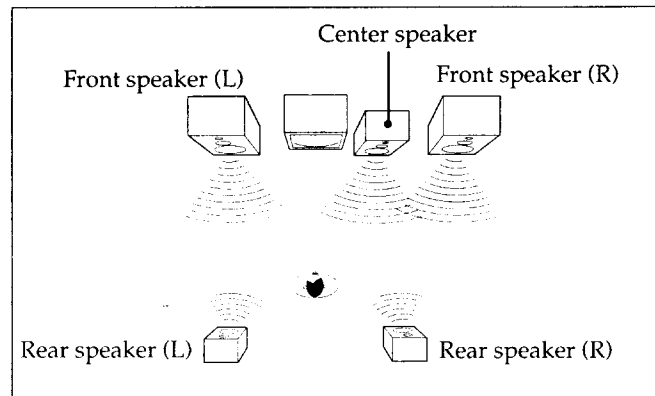


Note

The Dolby Pro Logic Surround Decoder is a system to decode the software carrying the  mark.

Adjusting the Speaker Volume

To obtain the best possible surround sound, set the volume of the front, center, and rear speakers to the same level. A Test Tone feature lets you test the volume of each speaker set. You can adjust the volume level from your listening position using the remote.

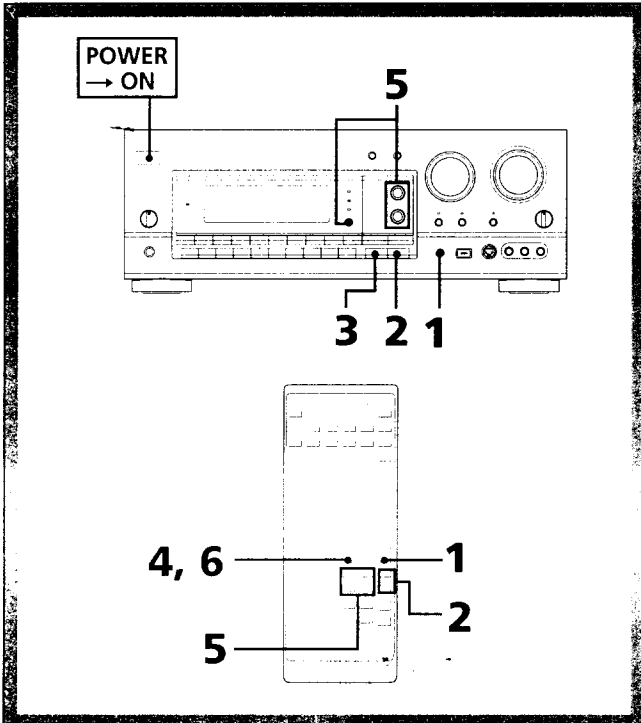

1 Press **SOUND FIELD ON/OFF** to ON. The indicator of the last selected sound field lights up.

2 Press **SOUND FIELD MODE** until the **DOLBY SUR** indicator lights.

3 Press the **CENTER MODE** button to select the center mode according to your speaker system. Refer to "Selecting the Center Mode" on page 30.

4 Press **TEST TONE** on the remote control to set to on.

5 Adjust the volume level so that sound from each speaker will be the same level at your listening position.

To adjust the level of center speaker

Press **CENTER LEVEL +/-** on the remote, or press **DPC MODE** until the **SUR** indicator lights up and then rotate the **PARAMETER/EQ LEVEL/CHARACTER** knob* on the front panel.

To adjust the level of rear speakers

Press **REAR LEVEL +/-** on the remote, or press **DPC MODE** until the **SUR** indicator lights up and then rotate the **LEVEL/FREQUENCY/POSITION** knob** on the front panel.

(When adjusting the **MASTER VOLUME** control on the receiver, all speakers are adjusted simultaneously.)


6 Press **T. TONE** on the remote to set to off.

* For STR-GX800ES, the name of the knob is **PARAMETER/TONE LEVEL/CHARACTER**.


** For STR-GX800ES, the name of the knob is **LEVEL/BASS/TREBLE/POSITION**.

Sequence of the test tone

In a system with a center speaker:
The test tone will be output automatically from the front L (Left), center, front R (Right), and the rear speakers in succession.

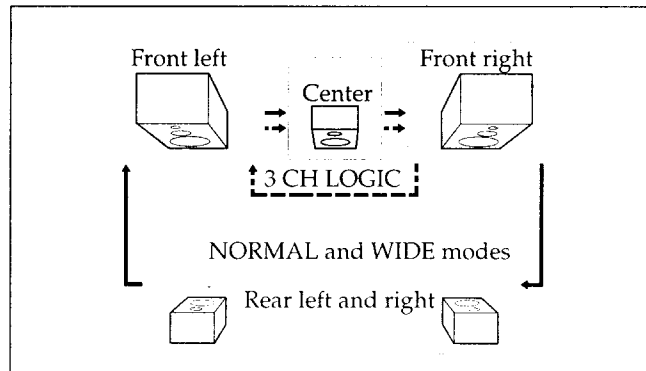

In a system without a center speaker:
The test tone will be output automatically from the front left and right speakers and the rear speakers alternately.

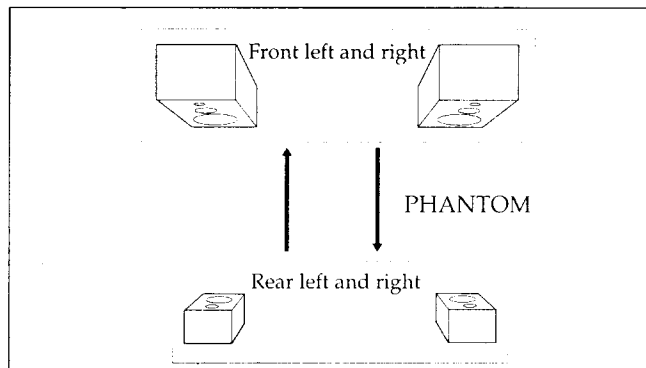


Dolby Surround Sound (continued)

Adjusting the Delay Time of the Rear Speakers

— for Dolby surround mode

Sound from the front and rear speakers is not output simultaneously. By adjusting the time difference between front and rear speakers (delay time), you can make the surround sound best fit your listening environment. You can make the delay time longer or shorter within the range of 15 ms to 30 ms.

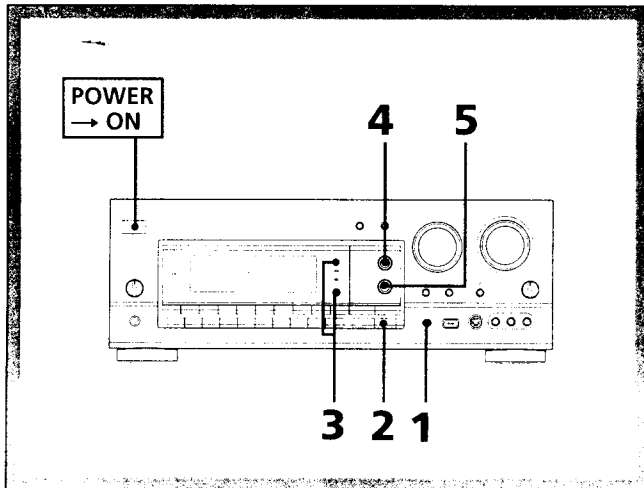

- 1** Press **SOUND FIELD ON/OFF** to ON.
The indicator of the last selected sound field lights up.
- 2** Press **SOUND FIELD MODE** until the **DOLBY SUR** indicator lights up.
- 3** Press **DPC MODE** so that the **SUR** (surround) indicator lights.
- 4** Rotate the **PARAMETER/EQ LEVEL/CHARACTER** knob* to select the delay time mode.
- 5** Rotate the **LEVEL/FREQUENCY/POSITION** knob** to adjust the delay time.

* For STR-GX800ES, the name of the knob is PARAMETER/TONE LEVEL/CHARACTER.

** For STR-GX800ES, the name of the knob is LEVEL/BASS/TREBLE/POSITION.

To turn off the surround effect

Press **SOUND FIELD ON/OFF** to OFF.

The normal sound without the surround and equalizer effects (STR-GX800ES: tone effect) will resume.

The settings of the center and rear level and the delay time remain until you change the settings. They will be recalled whenever you select a sound field program.

Creating Custom Sound Fields

In addition to using the pre-programmed sound fields (page 20), you can create your own customized sound field settings. By changing the pre-programmed sound fields, you can customize the sound field to best fit your listening environment.

Adjustable Parameters

The digital surround processor electronically reproduces the acoustics of various listening environments. It has several parameters (for example, delay time) that you can adjust. For each sound field, you can adjust the sound parameters, as described in the following chart. These are discussed in more detail on pages 36 to 38.

YES: You can adjust this parameter.
 -: You cannot adjust this parameter.

STR-GX900ES

PARAMETER \ SOUND FIELD		ACOUSTIC	DOLBY SUR	THEATER	LIVE	HALL	DANCE	JAZZ	OPERA	CHURCH	STADIUM
EQUALIZER		YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
Surround sound	ROOM SIZE	-	-	YES	YES	YES	YES	YES	YES	YES	YES
	WALL TYPE	-	-	YES	YES	YES	YES	YES	YES	YES	YES
	SEAT F/R	-	-	YES	YES	YES	YES	YES	YES	YES	YES
	SEAT L/R	-	-	YES	YES	YES	YES	YES	YES	YES	YES
	EFFECT	-	-	YES	YES	YES	YES	YES	YES	YES	YES
	REVERB TIME	-	-	YES	YES	YES	YES	YES	YES	YES	YES
	DELAY TIME	-	YES	-	-	-	-	-	-	-	-
	REAR LEVEL	-	YES	YES	YES	YES	YES	YES	YES	YES	YES
	CENTER LEVEL	-	YES	YES	YES	-	-	-	-	-	-


STR-GX800ES

PARAMETER \ SOUND FIELD		ACOUSTIC	DOLBY SUR	THEATER	LIVE	HALL	DANCE
TONE		YES	YES	YES	YES	YES	YES
Surround sound	DELAY TIME	-	YES	YES	YES	YES	YES
	REAR LEVEL	-	YES	YES	YES	YES	YES
	CENTER LEVEL	-	YES	YES	-	-	-

Creating Custom Sound Fields (continued)

Understanding the Surround Sound Parameters for the STR-GX 900ES

This receiver uses digital signal processing to reproduce the sound effects of various listening environments, such as a concert hall. Three sound elements contribute to this effect: direct sound, early reflection and reverberation. The following diagrams show how each sound element work.

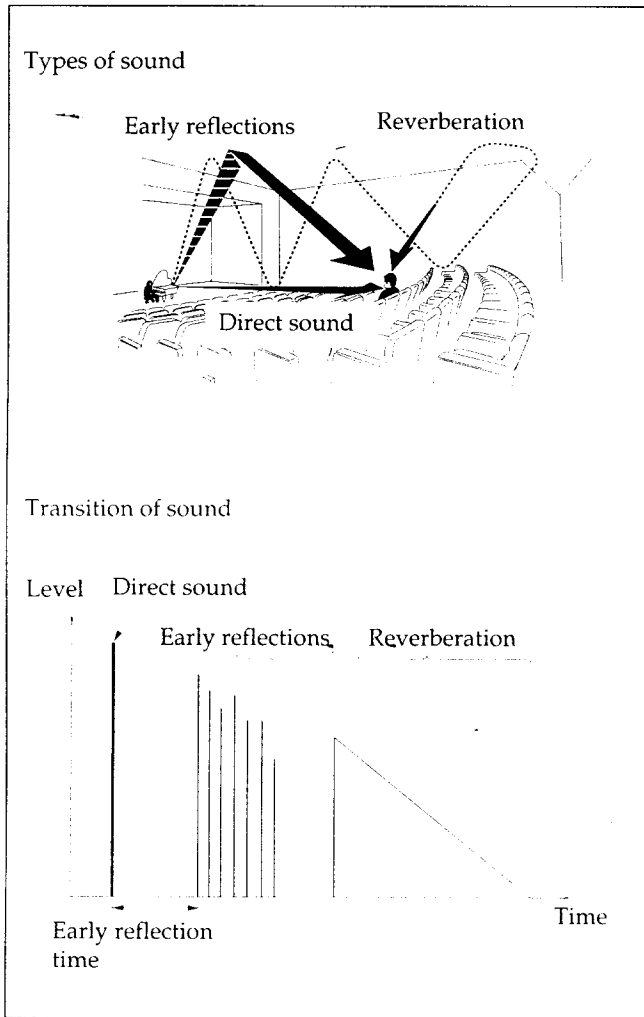


You can adjust the parameters to control direct sound, early reflection, and reverberation. The following diagrams show how these three elements are controlled in each parameter.

Room Size Simulation (ROOM SIZE)

Before sound reaches our ears, it is reflected many times between the left and right walls, ceiling, and floor. In a large room, sound takes more time to bounce from one surface to another than in a smaller room.


The room size parameter controls the spacing of early reflections to simulate the room size. The S indicator on the display signifies a small room, the L indicator signifies a large room, and the middle point designates a standard room size.

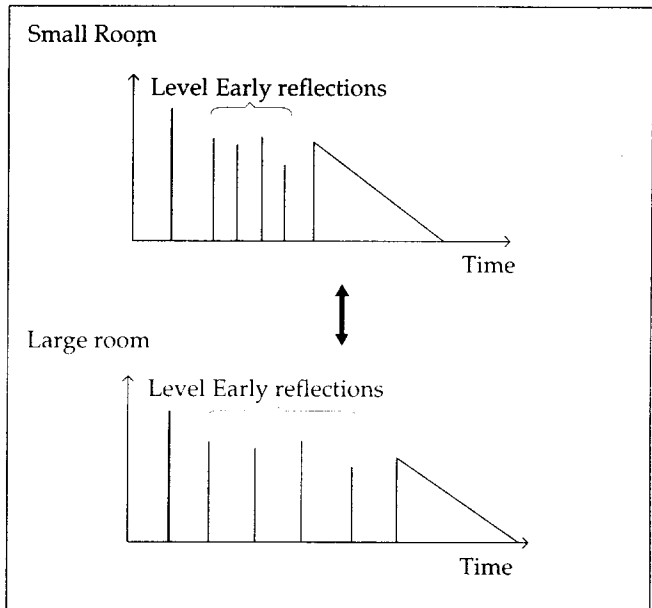

Wall Material Simulation (WALL TYPE)

When sound is reflected off a wall made of soft material, such as wood or a wall covered with a curtain, the high frequency elements are reduced. A hard wall is highly reflective and does not significantly affect the frequency response of the reflected sound.


The WALL TYPE parameter controls the level of high frequencies to simulate the wall material. The S indicator on the display signifies a soft wall. The H indicator signifies a hard wall. The middle point designates a standard wall made of wood.

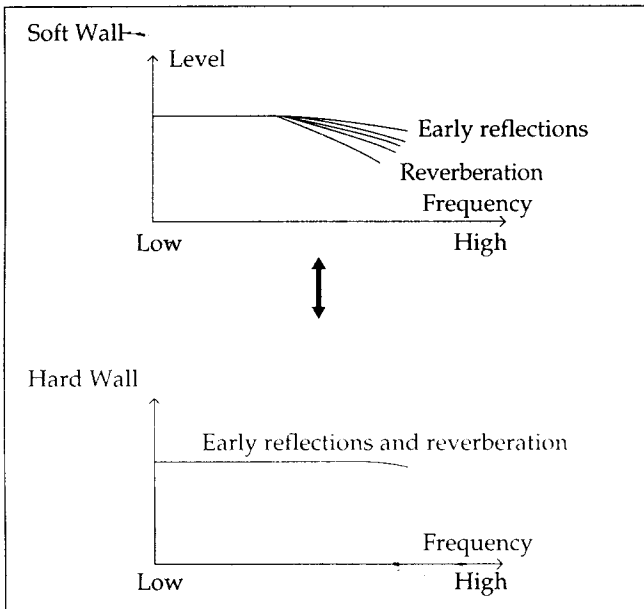

Seat Position Simulation (SEAT F/L, L/R)

If you sit in the front of a room, you hear more direct sound from the front speakers. As you move to the rear, the reflected sound from the front speakers increases. Similarly, the reflected sound changes if you move from left to right, and vice versa. The F/R and L/R parameters control the balance of the direct and reflected sound and other elements of sound to simulate your listening position.


When adjusting the F/R parameter, the F indicator on the display signifies the front position of the room. The R indicator signifies the rear position, the middle point of the indicator designates the center position. When adjusting the L/R parameter, the L indicator signifies the left position of the room. The R indicator signifies the right position. The middle point of the indicator designates the center position.

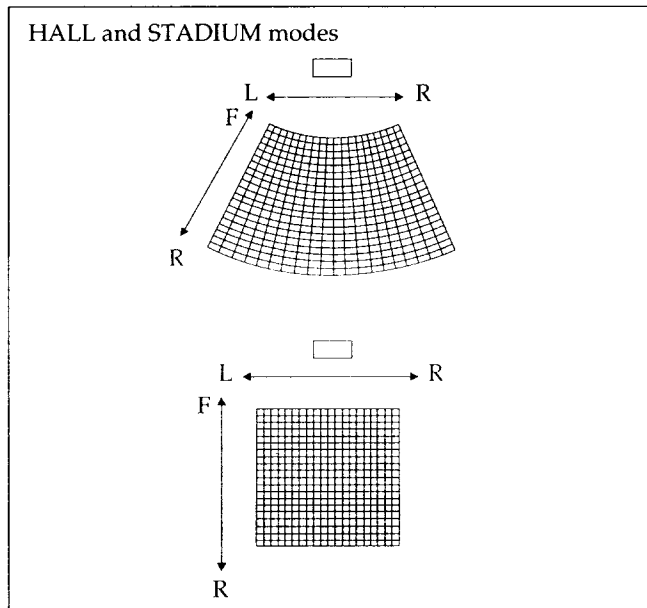

Creating Custom Sound Fields (continued)


Effect Level (EFFECT)

Effect level is the combination of the level of early reflections and reverberation. The L indicator on the display signifies the lowest level and the H indicator signifies the highest level. The adjustable level is divided into 20 segments. As you select higher levels, the room becomes more "live." As you select lower levels, the room becomes more "dead."

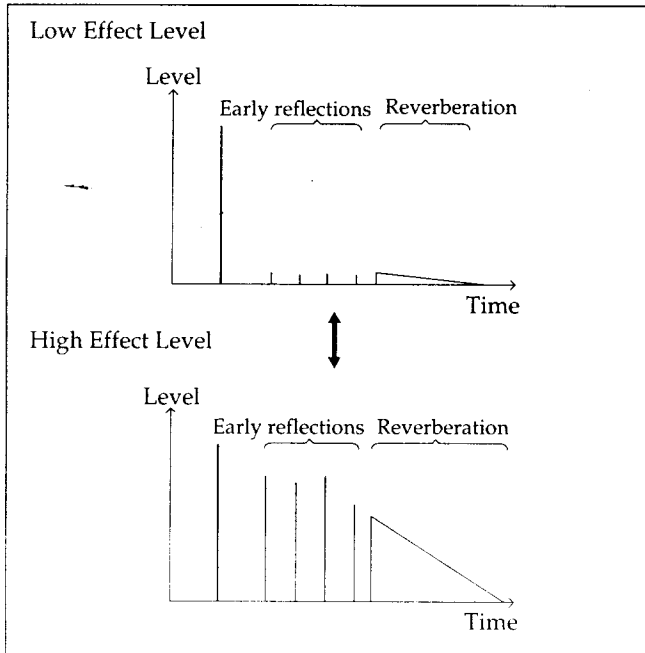

Reverberation Time (REVERB TIME)

This parameter adjusts the length of the reverberation — the time required for reverberative sound to decrease to -60 dB. The S indicator on the display signifies the shortest reverberation time, the L indicator signifies the longest reverberation time.

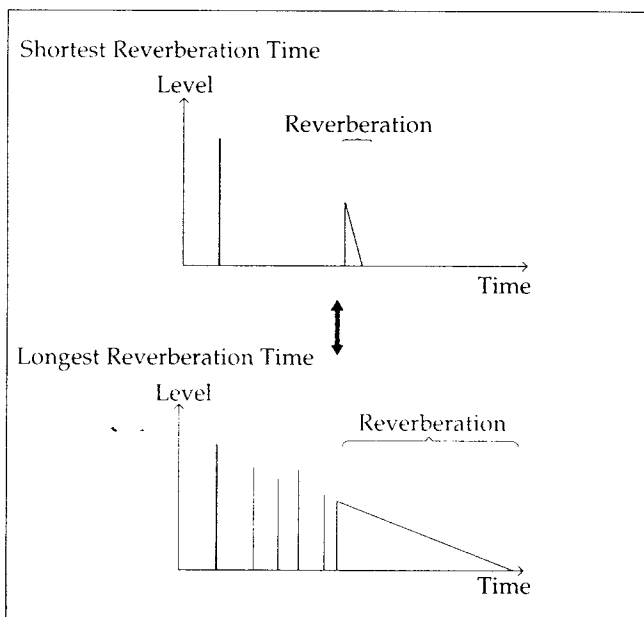


Adjusting Parameters

Once you create your own sound field, it is automatically stored in memory, replacing the pre-programmed sound field. However, you can always reset to the pre-programmed sound fields when you want to (page 39).

Adjusting parameters other than the digital parametric equalizer (STR-GX900ES) or the tone controls (STR-GX800ES)

The adjustable parameters are different depending on the sound field you select. Refer to "Adjustable Parameters" on page 33.

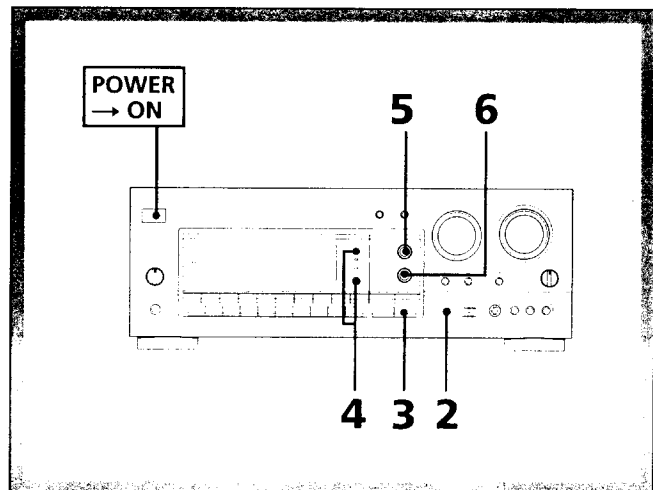

- 1** Play back the program source, for example, a CD.
- 2** Press **SOUND FIELD ON/OFF** to ON.
- 3** Press **SOUND FIELD MODE** to select the sound field you want.
- 4** Press **DPC MODE** so that the **SUR** (surround) indicator lights up.
- 5** Rotate the **PARAMETER/EQ LEVEL/CHARACTER** knob* to select the parameter you want.
- 6** Adjust the parameter by rotating the **LEVEL/FREQUENCY/POSITION** knob**. After adjusting, the settings are stored automatically.

* For STR-GX800ES, the name of the knob is **PARAMETER/TONE LEVEL/CHARACTER**.

** For STR-GX800ES, the name of the knob is **LEVEL/BASS/TREBLE/POSITION**.

Tips for adjusting the parameters (STR-GX900ES only)

The following procedure allows you to set up the desired sound field more effectively.

- 1 Select the factory-preset sound field program you want.
- 2 Adjust the effect level.
- 3 Adjust the reverberation time.
- 4 Adjust other parameters, if necessary.

If you store a new SOUND FIELD effect

The previous sound field effect is replaced by the new one.

Even if the AC power cord is disconnected


The receiver retains the stored data for approximately 1 month.

If you select ACOUSTIC

ACOUSTIC does not have the surround effect and only the equalizer effect is available. If you select ACOUSTIC, you can adjust only the parametric equalizer settings (STR-GX900ES) or tone controls settings (STR-GX800ES).

Adjusting the digital parametric equalizer (STR-GX900ES)

You can adjust equalizer bands (bass, middle, treble) and the equalizer slope (Q). The equalizer control works on all the sound fields, including Dolby surround.

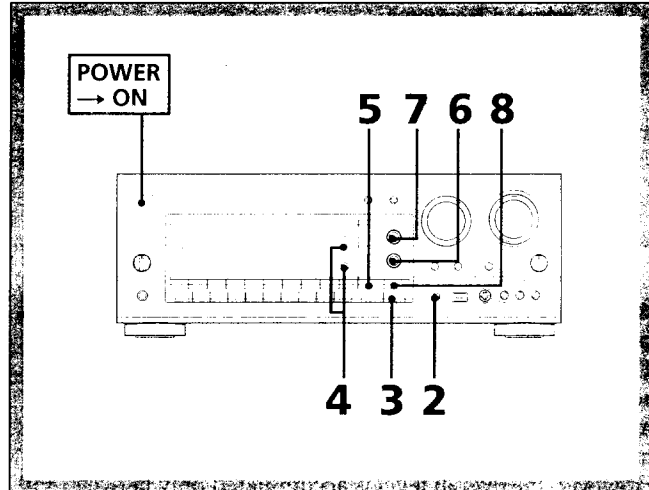

1 Play back the program source, for example, a CD.

2 Press SOUND FIELD ON/OFF to ON.

3 Press SOUND FIELD MODE to select the sound field you want.

4 Press DPC MODE so that the EQ (equalizer) indicator lights up.

5 Press EQUALIZER BAND to select a frequency band.

B: Bass
M: Middle
T: Treble

6 Rotate the LEVEL/FREQUENCY/POSITION knob to select the frequency you want to adjust.

7 Rotate the PARAMETER/EQ LEVEL/CHARACTER knob to raise or lower the level of the selected frequency.

Creating Custom Sound Fields (continued)

8 To adjust the equalizer slope of the middle range, press EQUALIZER SLOPE.

Each time you press EQUALIZER SLOPE, the equalizer slope changes between NARROW, MID and WIDE. The slope will be made around the selected frequency.

9 Repeat steps 4 through 7 for other frequency bands until you obtain the equalization curve that you want.

When the middle frequency band overlaps the bass or treble frequency band during adjustment


The setting level of the bands which overlap each other will accumulate. For example, if you adjust 1 kHz band in middle range to +2 dB after adjusting 1 kHz band in treble range to +4 dB, the overall level of 1 kHz band is +6 dB. However, the overall level is accumulated only between ± 10 dB.

To cancel the equalizer effect

Press EQ/TONE ON/OFF button on the remote. The sound without equalizer effect will be heard. You can compare the sound with equalizer effect and the sound without equalizer effect by switching the EQ/TONE ON/OFF button.

Adjusting the tone controls (STR-GX800ES)

You can adjust the bass and treble sound. The tone controls work on all the sound fields, including Dolby surround.

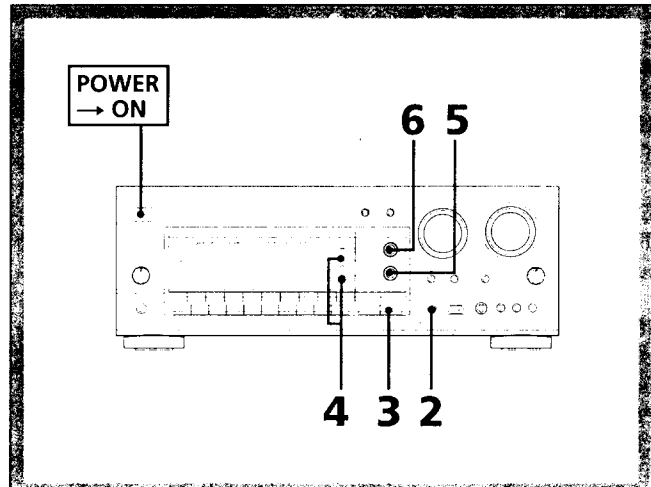

1 Play back the program source, for example, a CD.

2 Press SOUND FIELD ON/OFF to ON.

3 Press SOUND FIELD MODE to select the sound field you want.

4 Press DPC MODE so that the TONE indicator lights.


5 Rotate the LEVEL/BASS/TREBLE/POSITION knob so that BASS or TREBLE appears on the display.

6 Rotate the PARAMETER/TONE LEVEL/CHARACTER knob to adjust the level.

To cancel the tone effect

Press EQ/TONE ON/OFF button on the remote. The sound without tone effect will be heard. You can compare the sound with tone effect and the sound without tone effect by switching the EQ/TONE ON/OFF button.

Selecting the Sound Field Setting

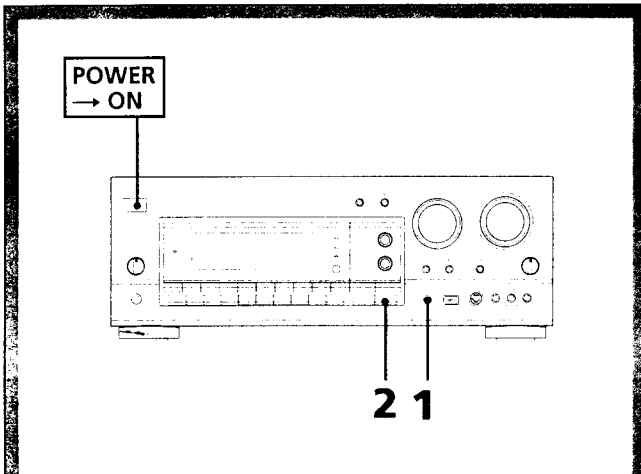

1 Press **SOUND FIELD ON/OFF** to **ON**.

2 Press **SOUND FIELD MODE** to select the sound field you want.

To recall the settings stored at the factory

Turn off the power of the receiver once. Press the **POWER** switch while holding down the **SOUND FIELD ON/OFF** button.

The sound fields you created are erased.

Troubleshooting

Before proceeding through the list below, first check the connections and the procedures outlined in the manual.

Should any problem persist after you have checked the following items, consult your nearest Sony dealer.

Problem	Cause	Solution
FM stations cannot be located with Automatic Tuning.	The signal strength of the stations is too weak.	Press LEVEL to set the receiving signal level to low. Check the antenna connection.
The STEREO indicator flickers or does not appear when receiving stereo programs.	The FM station is very weak or noisy.	Adjust the antenna or connect an external FM antenna. Press FM MODE to set to MONO (monaural) mode.
AM stations cannot be tuned in with Automatic Tuning.	The AM tuning interval is set incorrectly.	Change the tuning interval according to the AM frequency allocation system of your country. (See page 43)
	The signal strength of the station is too weak for Automatic Tuning.	Adjust the antenna. Directly tune in the stations. (See page 16)
Stations cannot be tuned in by pressing PRESET TUNING +/-.	No stations have been preset.	Preset the stations. (See page 17)
No sound is heard even if you adjust VOLUME.	The speaker or program source component is not connected correctly.	Connect the component correctly.
	The SPEAKERS selector is not set correctly.	Set the selector correctly. (See page 12)
	TAPE has been pressed for a program source other than tape deck. (The indicator is lit.)	Press the button so that the indicator goes off.
	A wrong function selector has been pressed.	Press the correct FUNCTION button.
	The volume controls on the separate amplifiers are set to a low level when the power swap connections are performed	Set the volume controls on the separate amplifiers to the maximum position and then adjust the volume on the receiver.
No sound or sound at very low level is heard from rear speakers.	For VCR's: The function switch on the VCR is not set correctly.	Check and set it correctly.
	SOUND FIELD function is turned off.	Press SOUND FIELD ON/OFF to turn on the function.
Sound is heard only at a very low volume.	The CENTER MODE button is set to 3 CH LOGIC.	Set it to WIDE, PHANTOM or NORMAL according to your speaker system.
	MUTING has been pressed. (The MUTING indicator is lit.)	Press the button so that the indicator goes off.
One channel does not transmit audio, or the volume from the left and right speakers is unbalanced.	The BALANCE control is not set properly.	Adjust the BALANCE control.
	The speaker or program source is not connected correctly.	Check and properly connect the component.
There is an abrupt loss of sound from one or both of the speakers, and the PROTECTOR indicator flickers in the display window.	A short-circuit problem activates the protective circuit.	Turn off the unit, check the speaker cord connections and turn on the power again. If there is no short-circuit problem, consult your nearest Sony dealer.

Problem	Cause	Solution
Sound transmitted from the speakers is reversed.	The speakers are not connected correctly.	Connect the right speaker to the R SPEAKER terminals and the left speaker to the L SPEAKER terminals.
There is lack of bass sound or the instrument position is obscure.	The \oplus/\ominus connection of the speaker is reversed.	Connect the speaker with the correct phase.
Severe hum or noise is heard.	The connecting cords are not shielded type.	Use shielded type cords.
	A transformer, motor, TV or fluorescent light affects the connecting cords.	Place the connecting cords in a location away from a transformer or motor, and at least 10 feet (3 meters) from a TV set or a fluorescent light.
	The audio components are too close to a TV set.	If both are used at the same time, separate the TV from the audio components.
	The unit is not grounded.	Connect a ground wire to the antenna ground terminal.
	The connections are loose.	Make secure connections.
Surround settings cannot be adjusted.	The plugs and jacks are dirty.	Wipe the plugs and jacks with a cloth lightly dampened with alcohol.
	The unit is in the wrong mode.	Press DPC MODE so that the SUR indicator lights up.
	Surround circuit is turned off.	Set the SOUND FIELD ON/OFF button to ON and select an appropriate sound field with SOUND FIELD MODE.
Equalization curve (STR-GX900ES) or tone (STR-GX800ES) adjustment is impossible.	The unit is in the wrong mode.	STR-GX900ES: Press DPC MODE so that the EQ indicator lights up. STR-GX800ES: Press DPC MODE so that the TONE indicator lights up.
	Equalization or tone circuit is turned off.	Set the SOUND FIELD ON/OFF button to ON and select an appropriate sound field with SOUND FIELD MODE.
The remote will not operate.	The batteries are low.	Replace the batteries with new ones.
	The remote head is not pointed toward the unit's front.	Point the remote head toward the receiver.
The receiver or components cannot be operated using the remote.	There is an object between the remote and the receiver.	Remove the object.
	The FUNCTION mode of the remote is not same as that of the receiver.	At first, select the same FUNCTION mode with that of the receiver.
The remote signal cannot be programmed.	There is noise interference.	Place both remotes apart from the source of noise.
The LEARN indicator of the remote goes off after flashing.	The batteries are low.	Replace the batteries with new ones.
	The internal memory capacity is full.	Clear all the signals and program again. (See page 28)

Specifications

Audio Power Specifications

(For U.S.A. and Canadian models)

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

With 8-ohm load, both channels driven, from 20 - 20,000 Hz, rated 100 watts (STR-GX900ES) or 90 watts (STR-GX800ES) per channel minimum RMS power, with no more than 0.05 % total harmonic distortion from 250 milliwatts to rated output. (U.S.A. model only)

	STR-GX900ES Surround mode (8 ohms)	STR-GX800ES Surround mode (8 ohms)
FRONT (at 20 Hz-20 kHz)	100 W + 100 W	90 W + 90 W
CENTER* (at 20 Hz-20 kHz)	100 W	90 W
REAR (at 1 kHz)	30 W + 30 W	30 W + 30 W

(For Australian model)

	STR-GX900ES (1 kHz, THD 0.8 %)
FRONT 8 ohms/4 ohms	100 W + 100 W
CENTER* 8 ohms/4 ohms	100 W
REAR 8 ohms	30 W + 30 W

* (only in the DOLBY SUR, THEATER and LIVE (STR-GX900ES only) modes)

Other Specifications

Amplifier section (Front)

		STR-GX900ES	STR-GX800ES
Dynamic power output (in the stereo mode)	8 ohms, at 1 kHz IHF	125 W + 125 W	115 W + 115 W
	4 ohms, at 1 kHz IHF	195 W + 195 W	185 W + 185 W
	2 ohms, at 1 kHz IHF	255 W + 255 W	245 W + 245 W
Frequency response	PHONO	RIAA equalization curve ± 0.5 dB	
	CD, DAT/MD, TAPE, TV, LD, VIDEO 1,2,3,	10 Hz - 50 kHz ± 1 dB (Direct pass)	
Damping factor (8 ohms, at 1kHz)		50	
Input sensitivity/impedance	PHONO MM	2.5 mV, 50 kilohms	
	CD	300 mV, 50 kilohms	
	DAT/MD, TAPE, TV, LD, VIDEO 1,2,3	250 mV, 50 kilohms	
S/N	PHONO MM	75 dB 75 dB** (A, 2.5mV)	
	CD, DAT/MD, TAPE, TV, LD, VIDEO 1,2,3	82 dB 82 dB** (A, 150mV)	
Output sensitivity/impedance	DAT/MD REC OUT, TAPE REC OUT, VIDEO 1,2	250 mV 10 kilohms	
	HEADPHONES	Accepts headphones of high and low impedance	
	SURROUND OUT REAR	1 V, 1 kilohm	
	SURROUND OUT CENTER	1 V, 1 kilohm	
	SURROUND OUT MONO	1 V, 1 kilohm	
MUTING		-20dB	
LOW BOOST		+ 7dB at 70 Hz (STR-GX900ES) + 10 dB at 70Hz (STR-GX800ES)	
Low cut filter		90 Hz, 12 dB/oct	
Tone (STR-GX800ES)		BASS: ± 10 dB at 100 Hz TREBLE: ± 8 dB at 10 kHz	

** 78IHF

Digital signal processor section

Modulation (A/D conversion)***		High Density Linear Converter
Demonstration (D/A conversion)***		High Density Linear Converter (Pulse D/A Converter)
Sampling frequency***		48 kHz
Equalizer***	Band	3-band, Bass/Treble/Mid
	Turnover frequency	Bass: 125 Hz - 1 kHz Treble: 1 kHz - 8 kHz
	Center frequency	Mid: 435 Hz - 8 kHz
	Level Slope (Q)	±10 dB, 1 dB step 3-step selectable, Wide, Mid, Narrow
Surround	ROOM SIZE***	16-step adjustable
	WALL TYPE***	16-step adjustable
	SEAT F/R and L/R***	16-step adjustable
	EFFECT***	20-step adjustable
	REVERB TIME***	16-step adjustable
	DELAY TIME	In DOLBY SUR mode 15.0 ms - 30.0 ms, 0.1 ms step (STR-GX900ES) 15.0 ms - 30.0 ms, 5 ms step (STR-GX800ES) In other sound field modes (STR-GX800ES only) 5 ms - 30.0 ms, 5ms step
	REAR LEVEL	+10 - -50 dB, 1 dB step (STR-GX900ES) +10 - -20 dB, 1 dB step (STR-GX800ES)
	CENTER LEVEL****	+10 - -50 dB, 1 dB step (STR-GX900ES) +10 - -20 dB, 1 dB step (STR-GX800ES)
Input balance	Automatic	

*** (only for STR-GX900ES)

**** (only in the DOLBY SUR, THEATER and LIVE modes)

FM tuner section

Frequency range		87.5 - 108.0 MHz
Antenna terminals		75 ohms, unbalanced
Sensitivity at 50 dB		18.3 dBf, 4.5 µV (mono) 38.3 dBf, 45 µV (stereo)
Usable sensitivity		11.2 dBf, 2 µV (IHF)
S/N	Mono	76 dB
	Stereo	70 dB
Harmonic distortion at 1 kHz	Mono	0.3 %
	Stereo	0.5 %
Separation		45 dB at 1 kHz
Frequency response		30 Hz - 15 kHz $_{-2}^{+0}$ dB
Auto tuning threshold	Low	30 dBf
	High	50 dBf

AM tuner section

Frequency range	USA and Canadian models*: 530 - 1,710 kHz (with 10 kHz interval) 531 - 1,710 kHz (with 9 kHz interval) Australian model: 531 - 1,602 kHz
Antenna	Loop antenna
Usable sensitivity	50 dB/m (at 1,000 kHz or 999 kHz)
S/N	54 dB (at 50 mV/m)
Harmonic distortion	0.5% (50 mV/m, 400 Hz)
Selectivity	35 dB (9 kHz), 40 dB (10 kHz)
Auto tuning threshold	55 dB/m

Video section

Inputs	VIDEO 1,2,3, TV, LD: 1 V _{p-p} 75 ohms S VIDEO 1, 2, 3, LD: Luminance (Y) 1 V _{p-p} 75 ohms Chrominance (C) 0.286 V _{p-p} 75 ohms
Outputs	VIDEO 1,2 MONITOR: 1 V _{p-p} 75 ohms S VIDEO 1, 2, MONITOR: Luminance (Y) 1 V _{p-p} 75 ohms Chrominance (C) 0.286 V _{p-p} 75 ohms

General

System	Tuner section	PLL quartz-locked digital synthesizer system
	Preamplifier section	Low-noise NF type equalizer
	Power amplifier section	Pure-complimentary SEPP
Power requirements		USA and Canadian models: 120 V AC, 60 Hz Australian model: 240 V AC, 50 Hz
Power consumption		USA model: 290 W Australian model: 400 W Canadian model: 410 VA
AC outlets		USA and Canadian models: Two switched, total 120 W/1A max. Australian model: One switched, total 100 W max.
Dimensions (including projecting parts and controls)		Approx. 430 x 160 x 425 mm (w/h/d) (17 x 6 ³ / ₈ x 16 ³ / ₄ inches)
Mass		Approx. 13.5 kg (29 lb 13 oz)


Supplied accessories FM wire antenna (1)
AM loop antenna (1)
Remote commander RM-P341 (1)
Sony Batteries SUM-3(NS) (2)

* You can change the AM tuning interval to 9 kHz. After tuning in any AM station, turn off the power of the receiver once. While holding down the INDEX SELECT/TUNING + button, press the POWER switch. When you change the interval, all the preset stations will be erased. To reset the interval, repeat the same procedure.


Identifying the Parts and Controls

Front Panel

STR-GX900ES

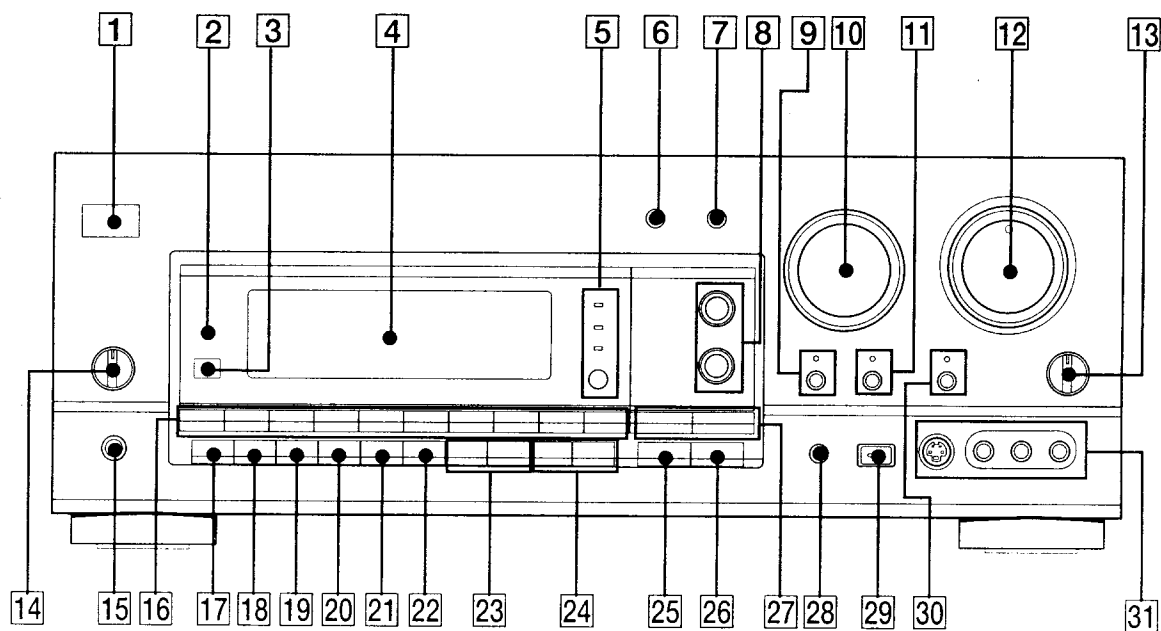

STR-GX800ES

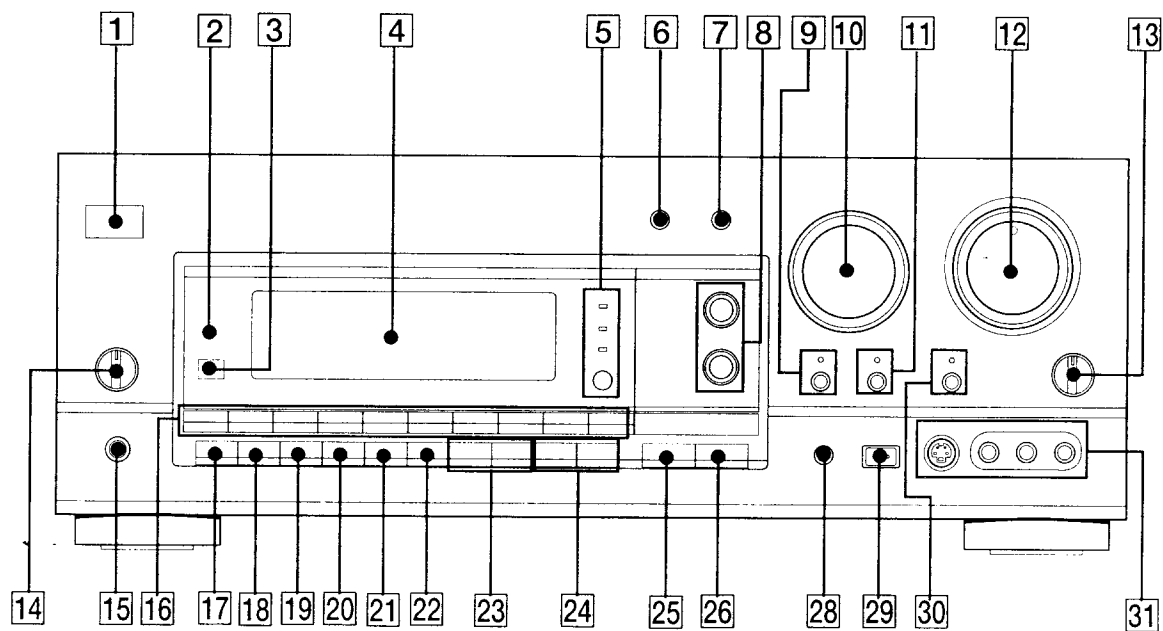


Refer to the pages indicated in () for details.

- 1 **POWER switch**
- 2 **Low cut filter indicator** (10)
(U.S.A. and Canadian model)
Standby indicator (Australian model)
- 3 **Remote sensor**
- 4 **Display**
- 5 **DPC (Digital Processing Control) MODE button**
and indicators (24, 25, 31, 32, 36, 37, 38)
- 6 **DISPLAY button** (25)
- 7 **FUNCTION MODE button** (13, 23)
- 8 **DIGITAL PROCESSING CONTROL knobs**
STR-GX900ES: PARAMETER/EQ LEVEL/CHARACTER
and LEVEL/FREQUENCY/POSITION knobs (24, 25, 31,
32, 36, 37, 38)
STR-GX800ES: PARAMETER/TONE LEVEL/
CHARACTER and LEVEL/BASS/TREBLE/POSITION
knobs (24, 25, 31, 32, 36, 37, 38)
- 9 **TAPE button and MONITOR indicator** (21)
- 10 **FUNCTION knob** (12)
- 11 **LOW BOOST button and indicator** (12)
- 12 **MASTER VOLUME control** (12)
- 13 **BALANCE control** (12)
- 14 **SPEAKERS selector** (12)
- 15 **HEADPHONES jack** (12)
- 16 **Numeric buttons** (16, 17, 18)
- 17 **SHIFT button** (16, 17, 18)
- 18 **DIRECT button** (16)
- 19 **FM/AM button** (16, 17)
- 20 **LEVEL button** (17)
- 21 **FM MODE button** (16)
- 22 **MEMORY button** (17)
- 23 **INDEX SELECT/TUNING -/+ buttons** (17, 25)
- 24 **PRESET TUNING -/+ buttons** (18)
- 25 **CENTER MODE button** (30, 31)
- 26 **SOUND FIELD MODE button** (20, 31)
- 27 **EQUALIZER BAND and SLOPE buttons** (38)
(STR-GX900ES only)
- 28 **SOUND FIELD ON/OFF button** (20, 31, 32)
- 29 **DIRECT PASS button** (12)
- 30 **MUTING button and indicator** (12)
- 31 **VIDEO 3/INPUT jacks**

Identifying the Parts and Controls (continued)

Remote Control

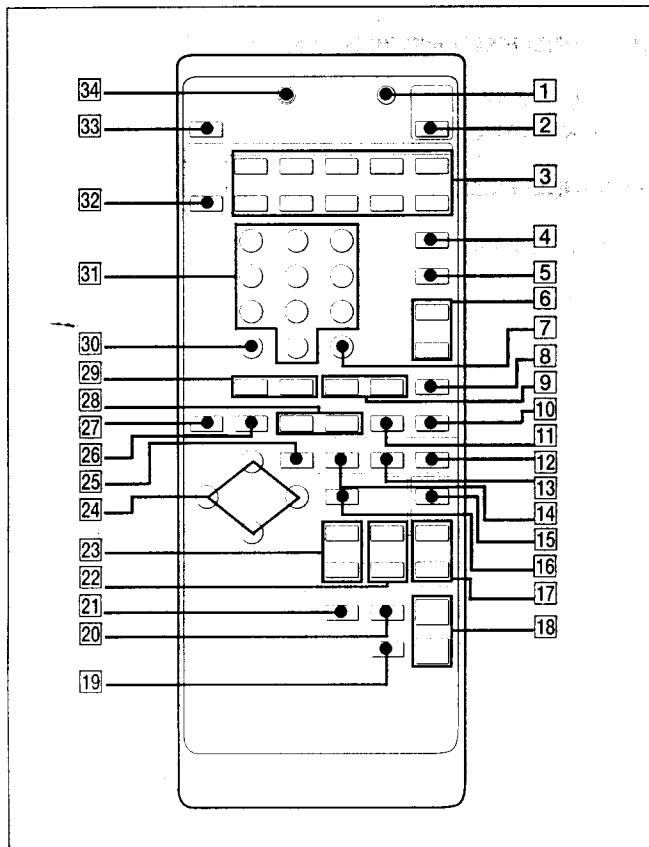

Refer to the pages indicated in () for details.

- 1 LEARN button (27)
- 2 SYSTEM OFF button (13)
- 3 SYSTEM CONTROL/FUNCTION TAPE, DAT/MD, CD, TUNER, PHONO, VIDEO 1, VIDEO 2, VIDEO 3, LD, TV buttons (13)
- 4 VISUAL POWER button (13)
- 5 TV/VIDEO, INDEX button (13, 14)
- 6 CH (channel)/PRESET +/- buttons (14)
- 7 RMS (random music sensor)/START, ENTER button (14)
- 8 ANT (antenna) TV/VTR, D (disc) SKIP button (14)
- 9 ◀▶ (AMS: Automatic Music Sensor) buttons (14)
- 10 ● (recording) button (14)
- 11 || (pause) button (14)
- 12 EQ (equalizer) /TONE ON/OFF button (38)
- 13 EQ (equalizer) SLOPE button (38)
- 14 EQ (equalizer) BAND button (37)
- 15 SOUND FIELD ON/OFF button (20, 31, 32)
- 16 TEST TONE button (31)
- 17 SOUND FIELD MODE +/- buttons (20, 31)
- 18 MASTER VOL +/- buttons (12)
- 19 MUTING button (12)
- 20 LOW BOOST button (12)
- 21 DIRECT (PASS) button (12)
- 22 CENTER LEVEL +/- buttons (31)
- 23 REAR LEVEL +/- buttons (31)
- 24 DIGITAL PROCESSING CONTROL buttons (24, 26)
- 25 DPC (Digital Processing Control) MODE button (24, 25, 31, 32, 36, 37, 38)
- 26 RMS (Random Music Sensor) CLEAR, ■ button (14)
- 27 BACK GROUND button (15)
- 28 ◀ (forward play), ▶ (play), RMS (Random Music Sensor) DIRECTION buttons (14)
- 29 ◀◀, ▶▶ (search) button (14)
- 30 > 10 (over 10), SHIFT button (14)
- 31 Numeric buttons (1 to 0) (14)
- 32 TV CONTROL ON button (13)
- 33 SLEEP button (26)
- 34 LEARN indicator (27)

A, B

- Adjustable parameters 33
- Adjusting
 - audio 12
 - delay time 32
 - digital parametric equalizer 37
 - parameters 36
 - speaker volume 31
 - tone controls 38
 - volume 12
- Automatic tuning 17
- Back ground operation 15

C

- Center mode 30
- Changing the settings of the FUNCTION buttons 15
- Checking the supplied accessories 5
- Connecting
 - AC power cord 11
 - AM antenna 6
 - audio components 7
 - external amplifiers 10
 - FM antenna 6
 - speaker systems 9
 - video components 8
- Creating
 - an index name 24
 - custom sound field 33

D

- Digital parametric equalizer 37
- Digital Signal Processor 34
- Direct tuning 16
- Dolby Pro Logic mode 4, 30
- Dolby surround sound 4, 30
- Dubbing. *See* Recording.

E, F, G, H

- Front panel 45

I, J, K

- Indexing
 - preset station 24
 - program source 25
- Index tuning 25

L

- Labeling. *See* Indexing

M, N, O

- Memory page 17
- Normal mode 17

P, Q

- Parameter 33
- Phantom mode 30
- Power swap function 29
- Pre-programmed sound field 20
- Preset
 - number 17
 - stations 17
 - tuning 18
- Program source 12
- Programming
 - a new signal onto a previously programmed button 28
 - remote control 27
 - signals for non-Sony component 27
- Quick reference 48

R

- Rear panel. *See* Connecting.
- Receiving broadcasts 16
- Receiving preset stations
 - by entering preset numbers 18
 - by scanning preset stations 18
- Recording
 - Adding new sound on a video tape during video editing 22
 - from another tape 21
 - on a tape, DAT or an MD recorder 21
 - on a video tape 22
- Remote control 44

S

- Scanning the indexed stations 25
- Selecting
 - center mode 30
 - program source 12
 - speaker systems 12
 - sound field settings 39
- Sleep timer 26
- Sound field 20, 33
- Speakers
 - connection 9
 - impedance 9
 - placement 30
 - selecting speaker system 30
- Specifications 42
- Station index 24
- S video connection 8

T

- Test tone 31
- 3 ch logic mode 30
- Troubleshooting 40
- Tuning
 - Automatic 17
 - Direct 16
 - Presetting 17

U, V, W, X, Y, Z


- Using the remote control 13
- Unpacking 5
- Video program
 - Combining video image with the sound from another program source 19
 - Watching video programs 19
- Wide mode 30

Quick Reference

Directly tuning in an FM or AM station

Ex. Tuning in FM station 102.50 MHz

Select TUNER
FUNCTION

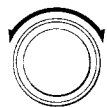

VIDEO 1
 VIDEO 2
 VIDEO 3
 LD
 TV
 DAT/MD
 CD
 TUNER
 PHONO


→ **FM /AM** → **DIRECT**

→ 1 0 2 5 0

FM102.50MHz

Presetting stations

Select TUNER
FUNCTION



→ Tune in a station. → **MEMORY** → **SHIFT**

Select memory page.


→ **Select preset No.**

1 2 3 4 5

Tuning in a preset station

Method A: Direct tuning

Select TUNER
FUNCTION

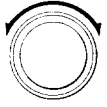


→ **SHIFT** → **Select preset No.**

1 2 3 4 5




Method B: Scan tuning

Select TUNER
FUNCTION



→ **PRESET TUNING**



- +

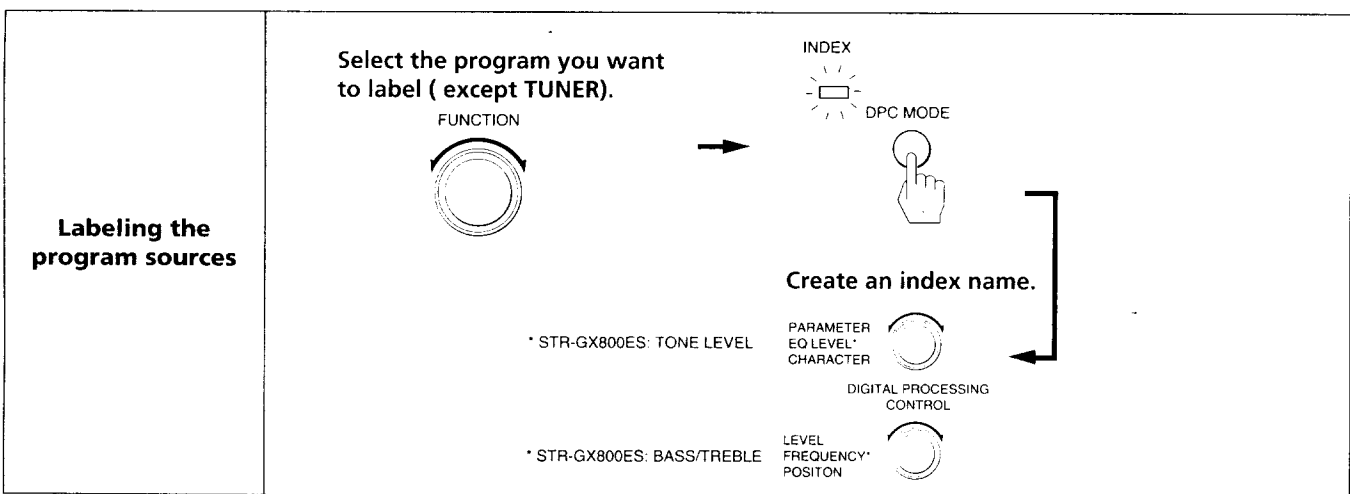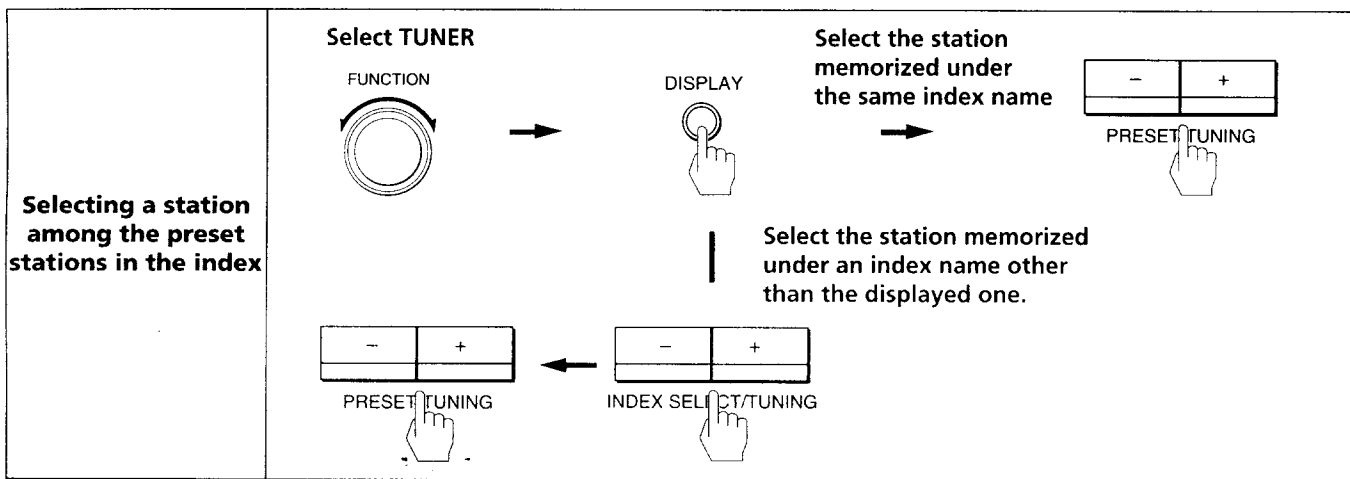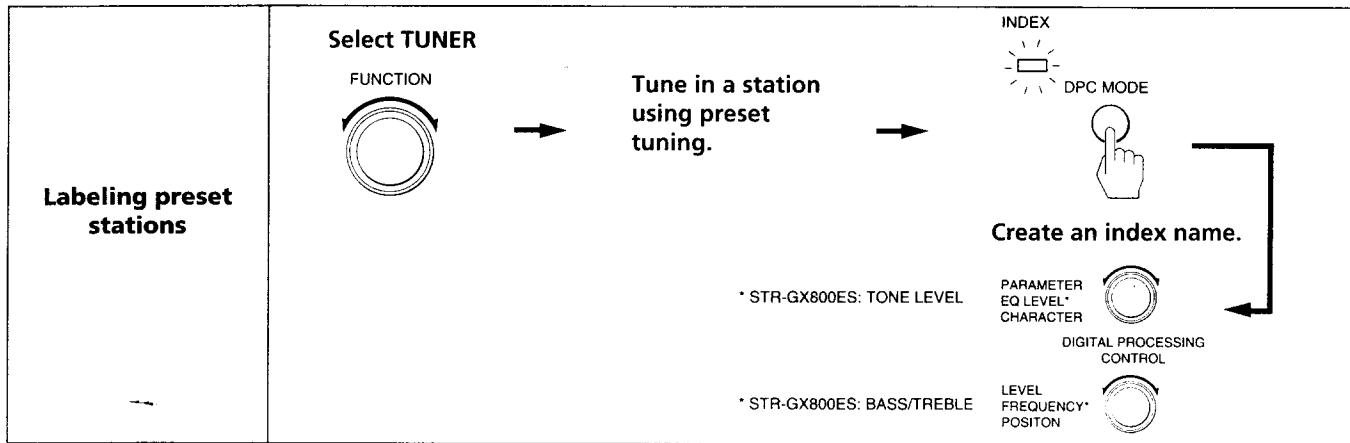

Quick Reference (continued)



Adjusting the surround effect

Select the **SOUND FIELD** program you want.

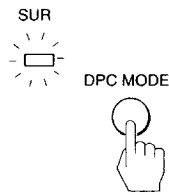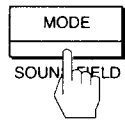

Adjust the level.

Select the desired parameter you want to adjust.





* STR-GX800ES: BASS/TREBLE

* STR-GX800ES: TONE LEVEL

Adjusting the digital parametric equalizer (STR-GX900ES only)

Select the **SOUND FIELD** program you want.

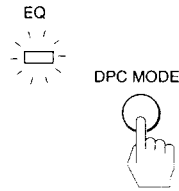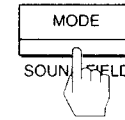



Select the equalizer slope.

Adjust the level.

Select the frequency.

Select a frequency band.

EQUALIZER





EQUALIZER

(only in the middle band mode)

Adjusting the tone (STR-GX800ES only)

Select the **SOUND FIELD** program you want.

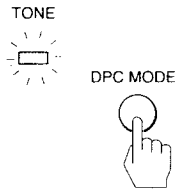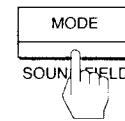

Adjust the level.

Select **BASS** or **TREBLE**.

