

FOR AGES 5 AND UP

One "9 volt" and 9.6V  
rechargeable battery  
pack and charger  
(not included)

# Radio Control Swamp Buggy

## INSTALLING BATTERIES


WARNING: Dispose of old batteries promptly and properly. Do not burn or bury them.

### CAUTIONS:

- Use only fresh batteries of the required size and recommended type.
- If you do not plan to use the Swamp Buggy for a week or more, remove the batteries from both the transmitter and the Swamp Buggy. Batteries can leak chemicals that can destroy electronic parts.


## CONTROLLER BATTERY INSTALLATION

Use a Phillips head screw driver to remove the battery compartment cover located on the back of the controller. Insert 1 "9V." alkaline battery in the correct position as marked in compartment. Replace cover and screw.

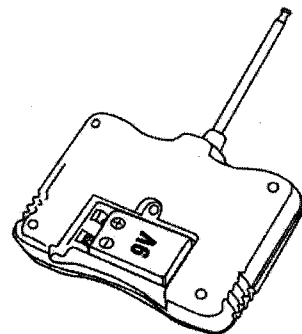


## SWAMP BUGGY INSTALLATION

1. Follow all operating instructions and precautions to charge your "9.6V" rechargeable battery pack. Note: most rechargeable batteries need charging when newly purchased.
2. Turn the four battery compartment lock located on top of Swamp Buggy to remove battery cover.
3. Insert fully charged battery pack into battery compartment and join the wire on the battery pack with the wire inside the battery compartment ensuring the (+) and (-) ends match. Replace battery compartment cover and turn the four locks to tightly seal the compartment. Turn battery compartment lock all the way to lock battery pack in place.

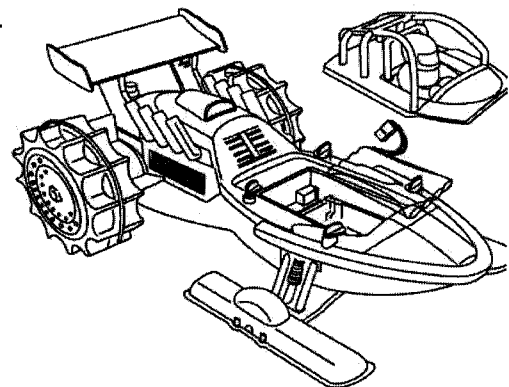

## RADIO CONTROL DRIVING

1. Slide ON/OFF to ON.
2. Fully extend the antenna on the transmitter and slide OFF/ON on the transmitter to ON. The indicator on the transmitter lights.
3. Use the transmitter's control levers to move and steer the Swamp Buggy.
4. When the Swamp Buggy goes outside the transmitter's control range, it stops. Hold the transmitter as high as possible with the antenna vertical to try to re-establish contact. If you cannot, you must move closer to the Swamp Buggy to control it again, but be careful not to wade into deep water or strong currents.
5. When the batteries begin to lose power, the Swamp Buggy slows down. So you don't lose your Swamp Buggy, guide the Swamp Buggy to shore as soon as you notice it slowing down.
6. When you finish driving the Swamp Buggy, slide OFF/ON on the Swamp Buggy and the transmitter to OFF.

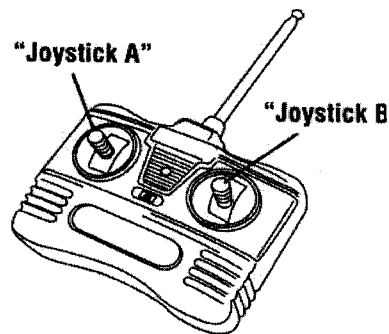

## SWAMP BUGGY FUNCTION CONTROLS

Install fully charged rechargeable batteries into the Swamp Buggy battery compartment and transmitter in the correct position as indicated. Install transmitter antenna as indicated.

Move power switches located on the top of the Swamp Buggy and front of the transmitter to the "on" positions. Fully extend transmitter antenna. Place Swamp Buggy on the water surface.

- To drive forward, move "Joystick A" + "Joystick B" upward.
- To drive in reverse, move "Joystick A" + "Joystick B" downward.
- To turn right, move "Joystick A" upward.
- To turn left, move "Joystick B" upward.
- To turn left in reverse, move "Joystick A" downward.
- To turn right in reverse, move "Joystick B" downward.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is needed. Consult the dealer or an experienced radio/TV technician for help.

### Helpful hints for maintenance and performance.

- 1- Check batteries frequently.
- 2- Always replace with fresh alkaline batteries.
- 3- Check battery terminals for contact.
- 4- Always turn switch off when not in use.
- 5- Run on smooth level surfaces.

COLOURS AND DECORATION MAY VARY

Another quality product from **Supertoys**

ITEM/Art # 4456

All Rights World-wide Reserved  
SUPERTOYS U.S.A. INC.

200 FIFTH AVE., ROOM 201 NEW YORK, NY 10011

CAUTION: NOT SUITABLE FOR CHILDREN UNDER  
36 MONTHS DUE TO SMALL PARTS  
MADE IN CHINA