

# Installation, Operation, and Maintenance

## Split System Air Conditioners **Odyssey™**


Cooling Condenser – 6 to 25 Tons

(60 Hz)

TTA073G\*\*\*A  
TTA090G/H\*\*\*A  
TTA120G/H/F\*\*\*A  
TTA150E\*\*\*A  
TTA180E/F\*\*\*A  
TTA240E/F\*\*\*A  
TTA300F\*\*\*A

(50 Hz)

TTA061G\*\*\*A  
TTA076G/H\*\*\*A  
TTA101G/H/F\*\*\*A  
TTA126E\*\*\*A  
TTA156E/F\*\*\*A  
TTA201E/F\*\*\*A  
TTA251F\*\*\*A

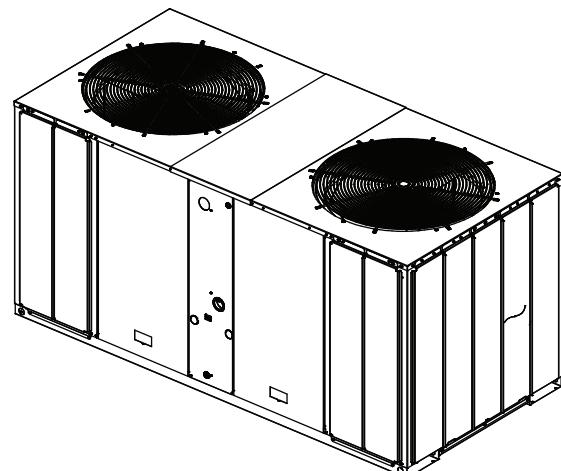

### ⚠ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

March 2015

**SS-SVX10E-EN**

 **Ingersoll Rand**

# Introduction

Read this manual thoroughly before operating or servicing this unit.

## Warnings, Cautions, and Notices

Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.



Indicates a situation that could result in equipment or property-damage only accidents.

## Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants-including industry replacements for CFCs such as HCFCs and HFCs.

## Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified. The Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.



## Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state electrical codes.



## Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury. Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians **MUST** put on all PPE required for the work being undertaken (Examples; cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). **ALWAYS** refer to appropriate Material Safety Data Sheets (MSDS)/Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, **ALWAYS** refer to the appropriate MSDS/SDS and OSHA/GHS (Global Harmonized System of Classification and Labelling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.
- If there is a risk of energized electrical contact, arc, or flash, technicians **MUST** put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, **PRIOR** to servicing the unit. **NEVER PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.**

**⚠ WARNING****Refrigerant under High Pressure!**

Failure to follow instructions below could result in an explosion which could result in death or serious injury or equipment damage.

System contains oil and refrigerant under high pressure. Recover refrigerant to relieve pressure before opening the system. See unit nameplate for refrigerant type. Do not use non-approved refrigerants, refrigerant substitutes, or refrigerant additives.

**⚠ WARNING****R-410A Refrigerant under Higher Pressure than R-22!**

Failure to use proper equipment or components as described below, could result in equipment failing and possibly exploding, which could result in death, serious injury, or equipment damage.

The units described in this manual use R-410A refrigerant which operates at higher pressures than R-22. Use ONLY R-410A rated service equipment or components with these units. For specific handling concerns with R-410A, please contact your local Trane representative.

**Copyright**

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

**Trademarks**

All trademarks referenced in this document are the trademarks of their respective owners.

**Revision History**

- Microchannel is now standard on 5-10 ton single and dual compressor units. All data has been updated to reflect this change.
- With the change to Microchannel, the Odyssey split system now offers a new 60Hz, 7.5 ton dual compressor model that can be matched with a new 60Hz, 7.5 ton Single Zone VAV and 2-Speed air handler. A new 50Hz, 6.25 ton dual compressor model is now also available and can be matched with a new 50Hz, 6.25 ton standard air handler.
- The 50Hz, 7 ton model has been discontinued.

# Table of Contents

Model Number Description .....	6
Cooling Condenser .....	6
General Information .....	7
Unit Description .....	7
Pre-Installation .....	8
Unit Inspection .....	8
Inspection Checklist .....	8
Testing for Leaks .....	8
Lifting Recommendations .....	8
Clearances .....	8
Unit Mounting .....	9
Structural Preparation .....	9
Rooftop Mounting .....	9
Ground Level Mounting .....	9
Dimensional Data .....	10
Weights .....	20
Cooling Condenser .....	20
Installation .....	22
Refrigerant Piping Guidelines .....	22
Refrigerant Piping Procedures (Outdoor Units) .....	23
Refrigerant Piping Procedures (Indoor Unit) .....	24
Leak Check .....	24
System Evacuation .....	24
Insulating and Isolating Refrigerant Lines .....	25
Refrigerant Charging Procedure .....	25
Charging Levels .....	26
Liquid Charging .....	27
Electrical Wiring .....	28
Unit Power Supply .....	28
Low Voltage Wiring .....	29
Electromechanical Controls .....	29
ReliaTel Controls .....	29
Field Wiring .....	30
Refrigerant Circuit .....	32
Electrical Data .....	34
Charging Charts and Superheat .....	38
Installation Checklist .....	43
Refrigerant Piping .....	43
Electrical Wiring .....	43
Pre-Start .....	44
Control Circuit Features .....	44
Discharge Temperature Limit (DTL) .....	44
Low Outdoor Ambient Cooling .....	44
Evaporator Defrost Control (EDC) .....	44
Low Pressure Cut-Out (LPCO) .....	44
High Pressure Cut-Out (HPCO) .....	44
Internal Overload Protector (IOL) .....	44
Start-Up .....	45
Electromechanical Controls .....	45
General .....	45
Evaporator Fan (Indoor Supply Air) .....	45
Cooling Mode .....	45
ReliaTel Controls .....	45
Control Cooling Mode .....	45
Control Evaporator Fan .....	46
Operation .....	46
Control Heating Operation .....	46
Service Test Modes for ReliaTel™ Controls .....	47
Test Modes .....	47
Step Test Mode .....	47
Resistance Test Mode .....	47
Auto Test Mode .....	47
Troubleshooting .....	48
Troubleshooting ReliaTel™ Controls .....	48
System Status Checkout Procedure .....	48
Method 1 .....	48
Method 2 .....	49
Temperature Tests .....	49
Test 1 - Zone Temperature Thermistor (ZTEMP) .....	49
Test 2 - Cooling Set Point (CSP) and Heating Set Point (HSP) .....	49
Test 3 - System Mode and Fan Selection .....	50
Test 4 - LED Indicator Test (SYS ON, HEAT, & COOL) .....	50
Programmable & Digital Zone Sensor Test .....	50
Testing Serial Communication .....	50
Voltage .....	50
RLCI Loss of Communications .....	51
Resetting Cooling and Heating Lockouts .....	51

---

## Table of Contents

Method 1.....	51	Annually (Cooling Season) .....	52
Method 2.....	51	Coil Cleaning.....	52
Zone Temperature Sensor (ZTS) Service Indicator.....	51	Tube and Fin.....	52
Maintenance .....	52	Microchannel (MCHE) Coils .....	53
Monthly .....	52	Maintenance Log .....	54
		Wiring Diagram Matrix .....	55

# Model Number Description

## Cooling Condenser

<b>TTA</b>	<b>2 40</b>	<b>F</b>	<b>3</b>	<b>0 0</b>	*	*
<b>1 2 3</b>	<b>4 5 6</b>	<b>7</b>	<b>8</b>	<b>9 10</b>	<b>11</b>	<b>12</b>
<b>TTA</b>	<b>2 0 1</b>	<b>F</b>	<b>D</b>	<b>0 0</b>	*	*
<b>1 2 3</b>	<b>4 5 6</b>	<b>7</b>	<b>8</b>	<b>9 10</b>	<b>11</b>	<b>12</b>

**Note:** When ordering replacement parts or requesting service, be sure to refer to the specific model number, serial number, and DL number (if applicable) stamped on the unit nameplate.

### DIGITS 1 - 3: Product Type

TTA = Split System Cooling

### DIGITS 4 - 6: Nominal Gross Cooling Capacity (MBh)

061 = 5 Tons (50Hz)  
 076 = 6.25 Tons (50Hz)  
 101 = 8.33 Tons (50Hz)  
 126 = 10.4 Tons (50Hz)  
 156 = 13.0 Tons (50Hz)  
 201 = 16.7 Tons (50Hz)  
 251 = 20.9 Tons (50Hz)  
 073 = 6 Tons (60Hz)  
 090 = 7.5 Tons (60Hz)  
 120 = 10 Tons (60Hz)  
 150 = 12.5 Tons (60Hz)  
 180 = 15 Tons (60Hz)  
 240 = 20 Tons (60Hz)  
 300 = 25 Tons (60Hz)

### DIGIT 7: Major Development Sequence

E = Dual Compressor, Dual Circuit, Tube and Fin  
 F = Dual Compressor, Single Circuit (Manifold Scroll Compressors), Tube and Fin  
 G = Single Compressor, Single Circuit, Microchannel

H = Dual Compressor, Dual Circuit, Microchannel

### DIGIT 8: Electrical Characteristics

3 = 208-230/60/3

4 = 460/60/3

W = 575/60/3

D = 380-415/50/3

K = 380/60/3

### DIGITS 9 - 10: Factory Installed Options

00 = Packed Stock

0S = Coated Coil

0R = ReliaTel, no LCI Board

0T = ReliaTel, no LCI Board with Coated Coil

0U = ReliaTel, with LCI Board

0W = ReliaTel, with LCI Board and Coated Coil

H0 = Hail Guard with Packed Stock

HS = Hail Guard with Coated Coil

HR = Hail Guard with ReliaTel, no LCI Board

HT = Hail Guard with ReliaTel, no LCI Board with Coated Coil

HU = Hail Guard with ReliaTel, with LCI Board

HW = Hail Guard with ReliaTel, with LCI Board and Coated Coil

### DIGITS 11: Minor Design Sequence

\* = Current Design Sequence

### DIGITS 12: Service Digit

\* = Current Design Sequence

1. \* = sequential alpha character

# General Information

This manual describes proper installation, operation, and maintenance procedures for air-cooled systems. By carefully reviewing the information within this manual and following the instructions, the risk of improper operation and/or component damage will be minimized. It is important that periodic maintenance be performed to help assure trouble free operation. Should equipment failure occur, contact a qualified service organization with qualified, experienced HVAC technicians to properly diagnose and repair this equipment.

**Important:** *All phases of this installation must comply with the NATIONAL, STATE & LOCAL CODES. In addition to local codes, the installation must conform with National Electric Code -ANSI/NFPA NO. 70 LATEST REVISION.*

Any individual installing, maintaining, or servicing this equipment must be properly trained, licensed and qualified.

**Important:** *Do not remove the VFD without first contacting technical support! For performance-related questions and diagnostic support in North America call 1-877-872-6363. Any return requires a claim number FIRST. Removal of the VFD prior to this step will void the unit's warranties.*

Installation procedures should be performed in the sequence that they appear in this manual. Do not destroy or remove the manual from the unit. The manual should remain weather-protected with the unit until all installation procedures are complete.

**Note:** *It is not the intention of this manual to cover all possible variations in systems that may occur or to provide comprehensive information concerning every possible contingency that may be encountered during an installation. If additional information is required or if specific problems arise that are not fully discussed in this manual, contact your local sales office.*

Use the “[Installation Checklist](#),” p. 43 provided in this manual to verify that all necessary installation procedures have been completed. Do not use the checklist as a substitute for reading the information contained in the manual. Read the entire manual before beginning installation procedures.

## Unit Description

These condensers come with single, dual and manifolded compressor options. Single compressor outdoor units feature a single refrigeration circuitry, requiring only one set of refrigerant lines. Dual compressor/dual circuit models give true stand-by protection; if one compressor fails, the second will automatically start-up. Also, the first compressor can be serviced without shutting down the unit since the refrigerant circuits are independent. During light load conditions, only one compressor will operate to save energy. The dual manifolded scroll compressors come with two stages of capacity modulation and a single refrigeration circuit.

# Pre-Installation

## Unit Inspection

Inspect material carefully for any shipping damage. If damaged, it must be reported to, and claims made against the transportation company. Compare the information that appears on the unit nameplate with ordering and submittal data to ensure the proper unit was shipped. Available power supply must be compatible with electrical characteristics specified on component nameplates. Replace damaged parts with authorized parts only.

### Inspection Checklist

To protect against loss due to damage incurred in transit, complete the following checklist upon receipt of the unit.

- Inspect individual pieces of the shipment before accepting the unit. Check for obvious damage to the unit or packing material.
- Inspect the unit for concealed damage before it is stored and as soon as possible after delivery. Concealed damage must be reported within 15 days. If concealed damage is discovered, stop unpacking the shipment. Do not remove damaged material from the receiving location. Take photos of the damage if possible. The owner must provide reasonable evidence that the damage did not occur after delivery.
- Notify the carrier's terminal of damage immediately by phone and by mail. Request an immediate joint inspection of the damage by the carrier and the consignee.
- Notify the sales representative and arrange for repair. Do not repair the unit until the damage is inspected by the carrier's representative.

### Testing for Leaks

All units are shipped with a holding charge of nitrogen in each circuit and should be leak tested before installation.

1. Remove the access panel.
2. Locate the liquid line or suction line access valve for each circuit.
3. Install gauges to determine if the circuits are still pressurized. If not, the charge has escaped and should be repaired as required to obtain a leak-free circuit.

### Lifting Recommendations

#### ⚠ WARNING

##### Improper Unit Lift!

Failure to properly lift unit could result in unit dropping and possibly crushing operator/technician which could result in death or serious injury, and equipment or property-only damage. Test lift unit approximately 24 inches to verify proper center of gravity lift point. To avoid dropping of unit, reposition lifting point if unit is not level.

#### NOTICE

##### Equipment Damage!

Use spreader bars to prevent straps from damaging the unit. Install the bars between lifting straps, both underneath the unit and above the unit to prevent the straps from crushing the unit cabinet or damaging the finish.

Before preparing the unit for lifting, estimate the approximate center of gravity for lifting safety. Because of placement of internal components, the unit weight may be unevenly distributed. See "[Weights](#)," p. 20 for approximate unit weights.

The crated unit can be moved using a forklift of suitable capacity. For lifting the unit, attach lifting straps or slings securely to the lifting holes at each corner (see unit drawings in "[Weights](#)," p. 20). Use spreader bars to protect the unit casing from damage. Test lift the unit to determine proper balance and stability.

### Clearances

Provide enough space around the unit to allow unrestricted access to all service points. Refer to the "[Dimensional Data](#)," p. 10 for unit dimensions and minimum required service and free air clearances. Observe the following points to ensure proper unit operation.

1. Do not install the unit under a low overhang. Condenser discharge must not be restricted—refer to notes in "[Dimensional Data drawings](#)," p. 10.  
*Important: Do not obstruct condenser discharge air. This can result in warm air recirculation through the coil.*
2. Do not locate the unit in a position where runoff water can fall into the fan discharge openings.
3. Condenser intake air is supplied from three or four sides of the unit. Adhere to the minimum required clearances given in unit dimensional drawings (see "[Dimensional Data](#)," p. 10).

## Unit Mounting

### ⚠ WARNING

#### Mounting Integrity!

Failure to follow instruction below could result in death or serious injury or possible equipment or property-only damage.

Ensure the roof structure supports are strong enough to support the weight of the unit and any accessories.

## Structural Preparation

### NOTICE

#### Roof Damage!


System contains oil and refrigerant under high pressure. Roofs should be protected from exposure to oils and refrigerant in the system. If rooftop is not protected, damage to the roof may occur.

**Important:** Refer to local building codes for proper installation. All installation must comply with local building codes.

## Rooftop Mounting

If the unit will be roof mounted, determine for certain that the structure is strong enough to support the unit and any required accessories, see "[Weights](#)," p. 20. The unit should be elevated on a level, field fabricated four-inch steel or wood 4" x 4" mounting frame. Complete the frame and secure it into position before lifting the unit to the roof. The mounting frame must support a minimum of three of the unit's four sides and should span roof supports to distribute the load on the roof.

Figure 1. Roof mounted unit

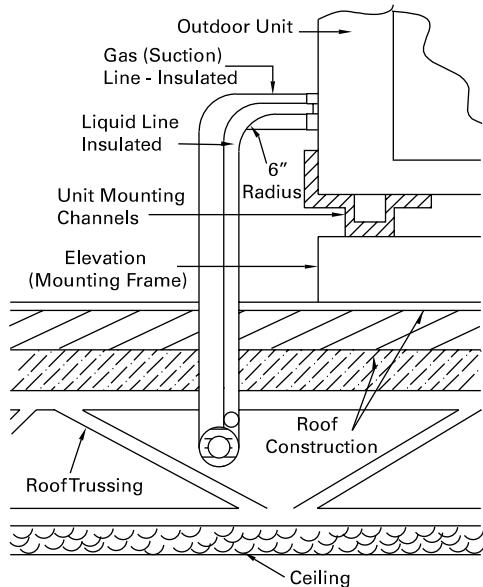


## Ground Level Mounting

For ground level installation, the unit base should be adequately supported and hold the unit near level. The installation must meet the guidelines set forth in local codes. The support should extend two inches beyond the unit base channels at all points. The unit and support must be isolated from any adjacent structure to prevent possible noise or vibration problems. Any ground level location must comply with required clearances given in the unit dimensional drawings (see "[Dimensional Data](#)," p. 10).

# Dimensional Data


Figure 2. Height, width and depth measurements

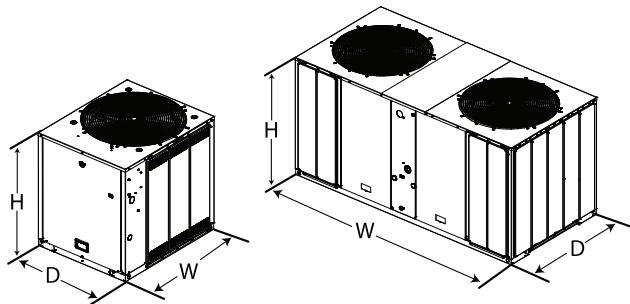

	<b>H - in. (mm)</b>	<b>W - in. (mm)</b>	<b>D - in. (mm)</b>
TTA061, 073, 076, 090	39.125 (993.8)	42.125 (1070)	36 (914.4)
TTA101, 120	39.125 (993.8)	52.125 (1324)	40 (1016)
TTA126, 150	45.125 (1146.1)	52.125 (1324)	40 (1016)
TTA156, 180, 201, 240	45.125 (1146.1)	95.5 (2425.7)	45.875 (1165.2)
TTA251, 300	51.125 (1298.6)	95.5 (2425.7)	45.875 (1165.2)

**Note:** Full dimensional data available on next pages.

Figure 3. 5, 6, 6.25 and 7.5 ton condensing unit, single compressor, microchannel

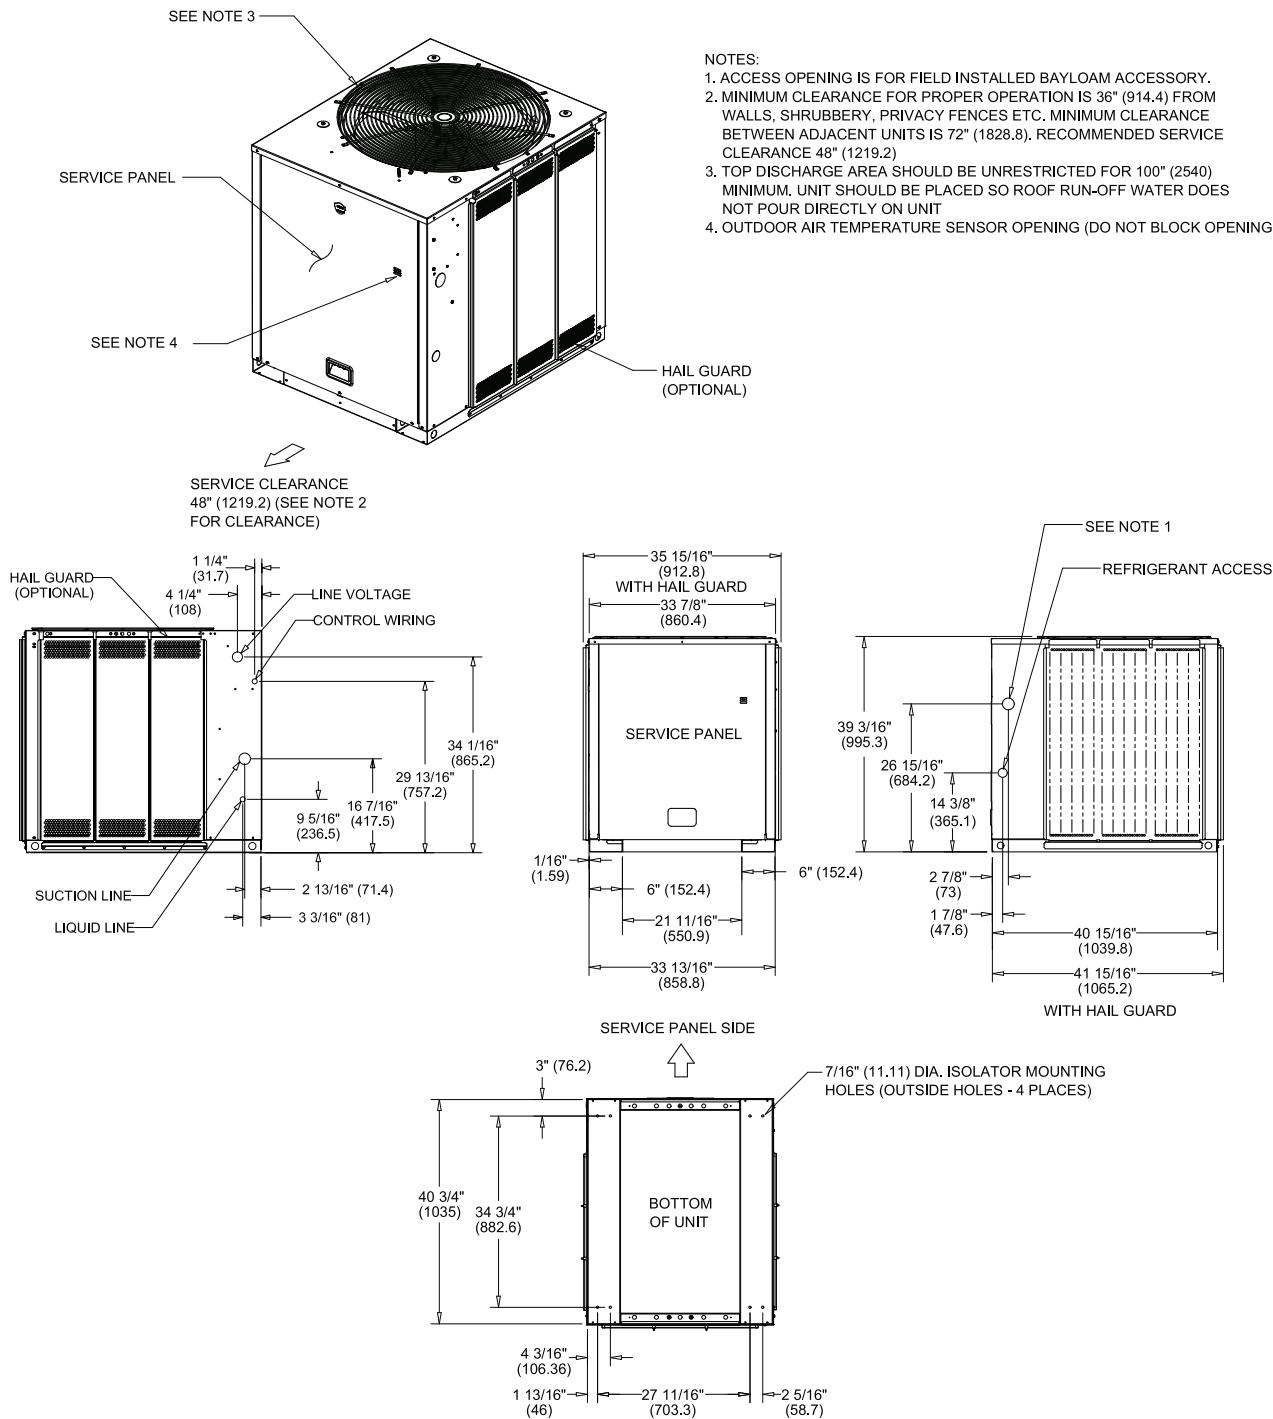

## Dimensional Data

Figure 4. 5, 6, 6.25 and 7.5 ton condensing unit, dual compressor, microchannel


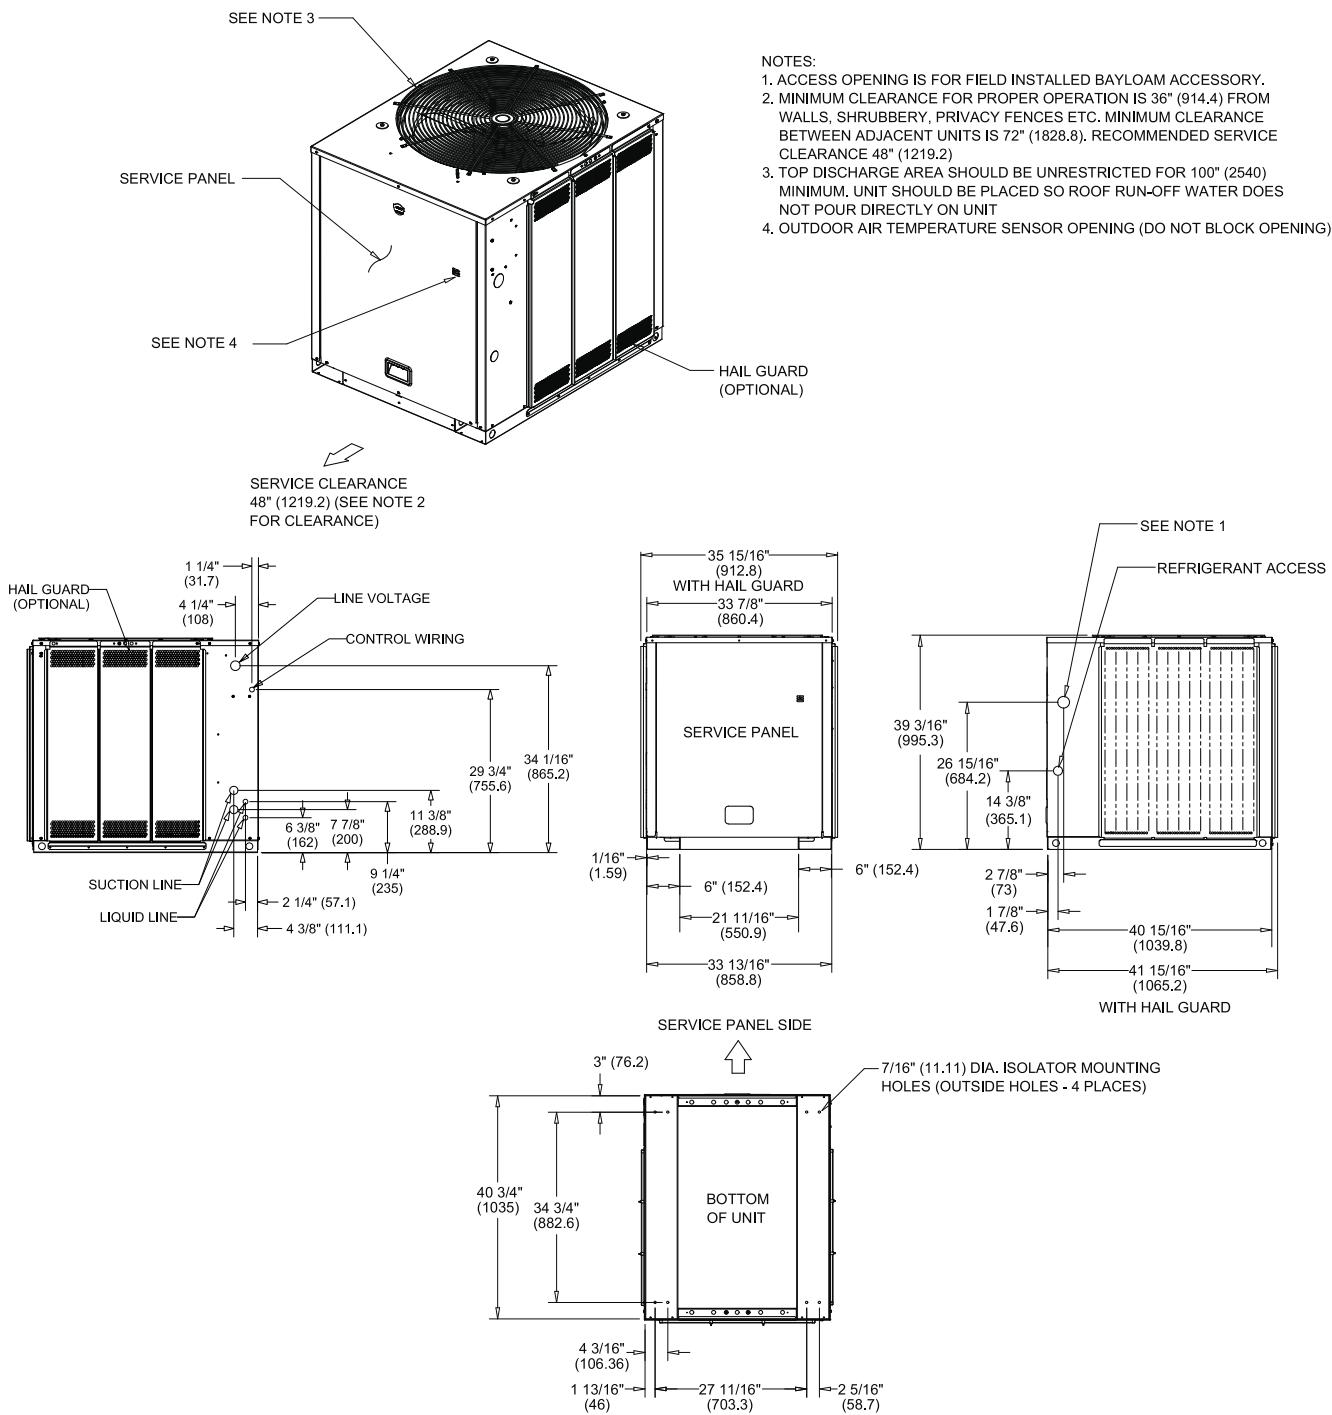


Figure 5. 8.33 and 10 ton condensing unit, single compressor. microchannel

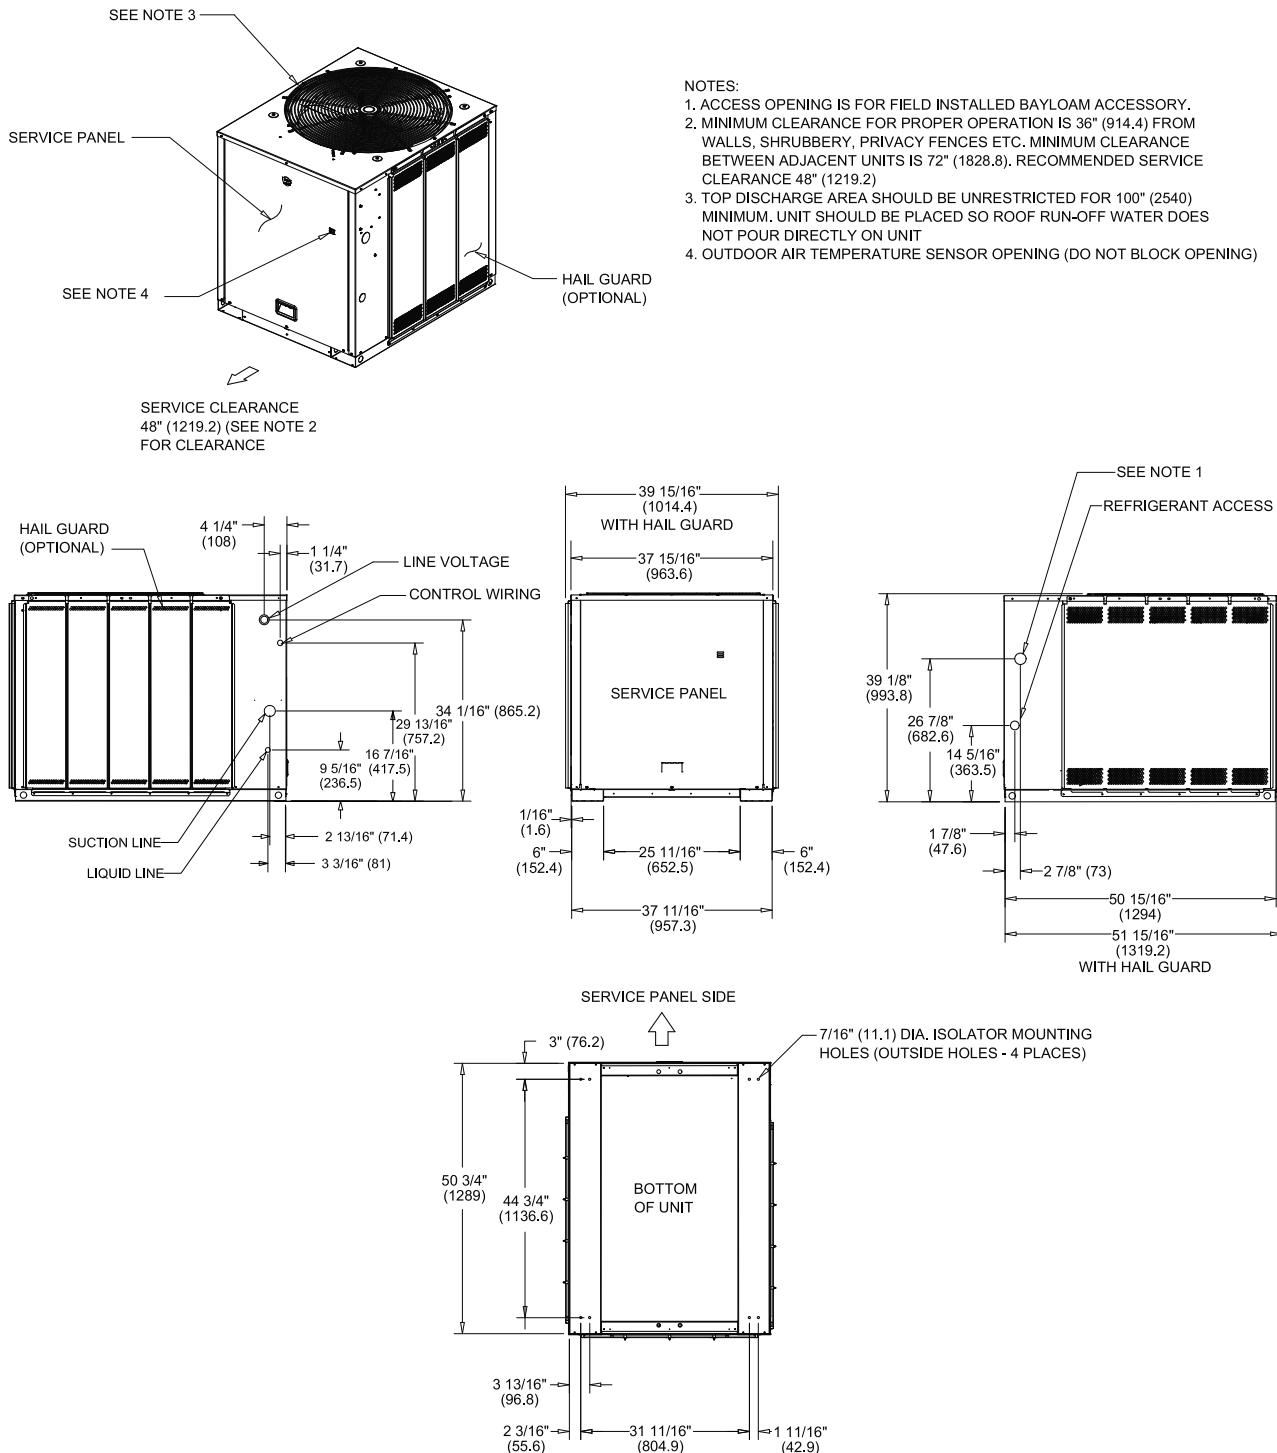

## Dimensional Data

Figure 6. 8.33 and 10 ton condensing unit, dual compressor, microchannel


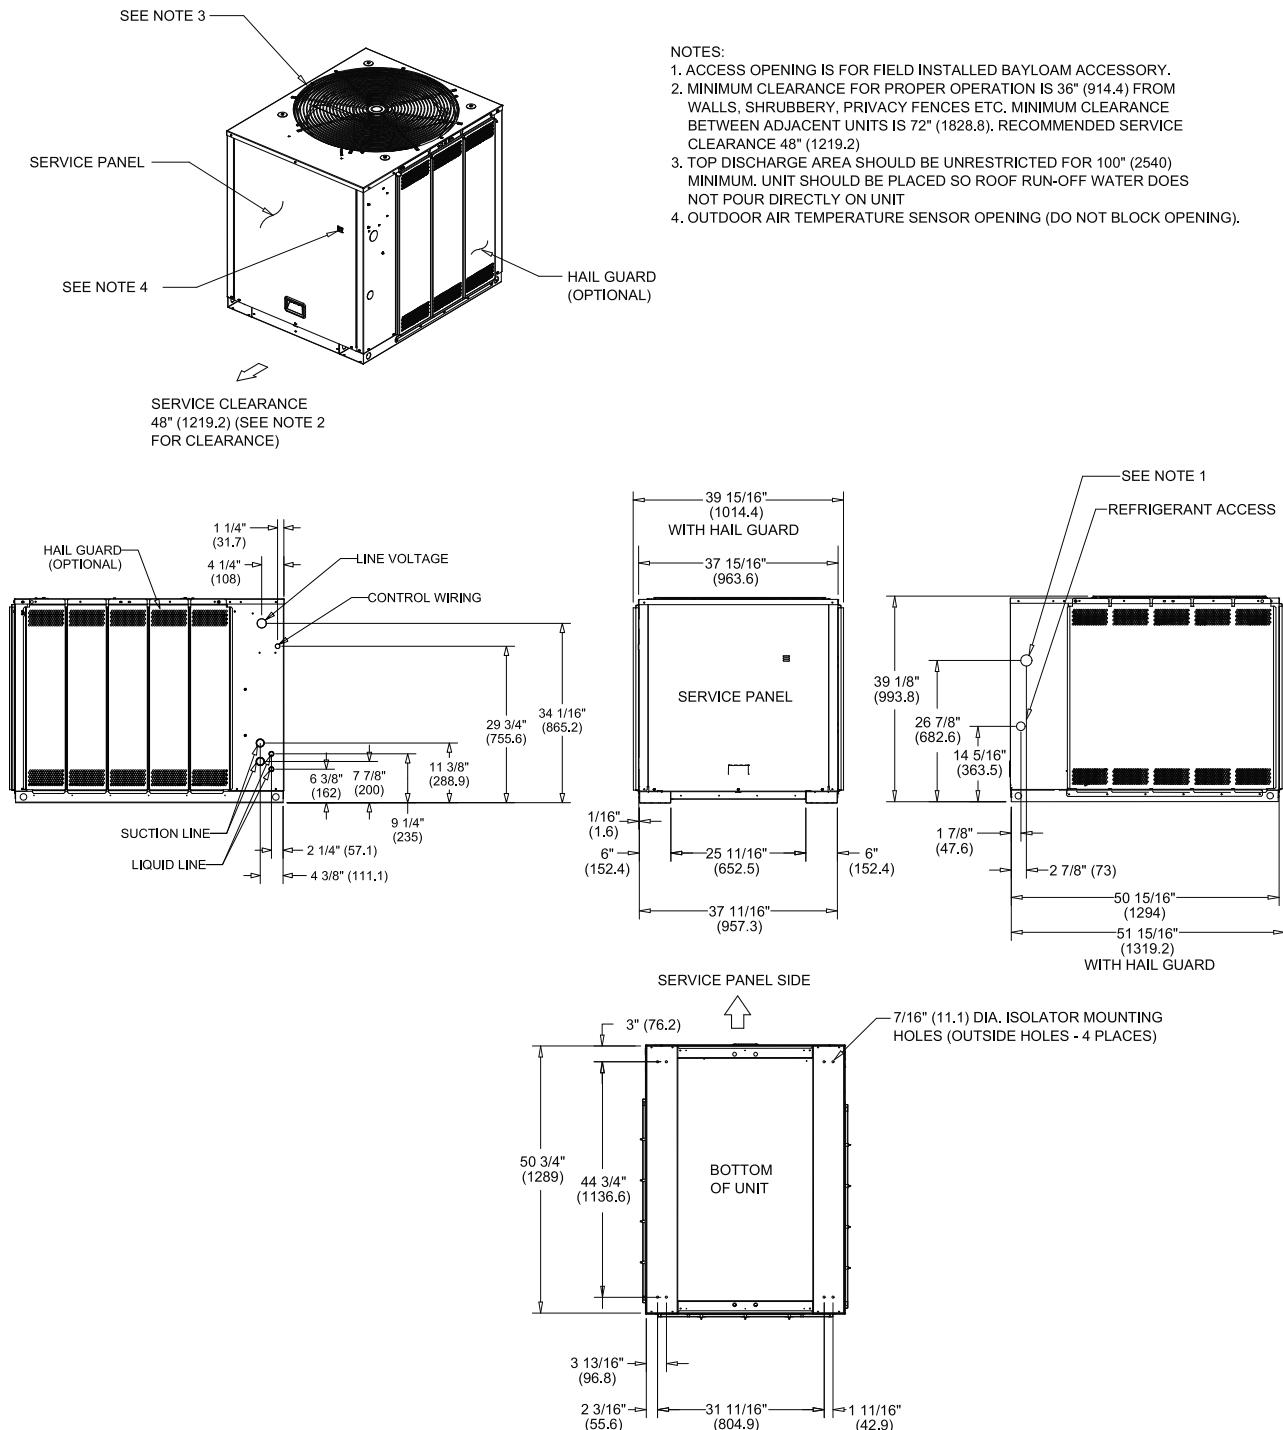


Figure 7. 8.33 and 10 condensing unit, manifoldeD compressor, tube and fin

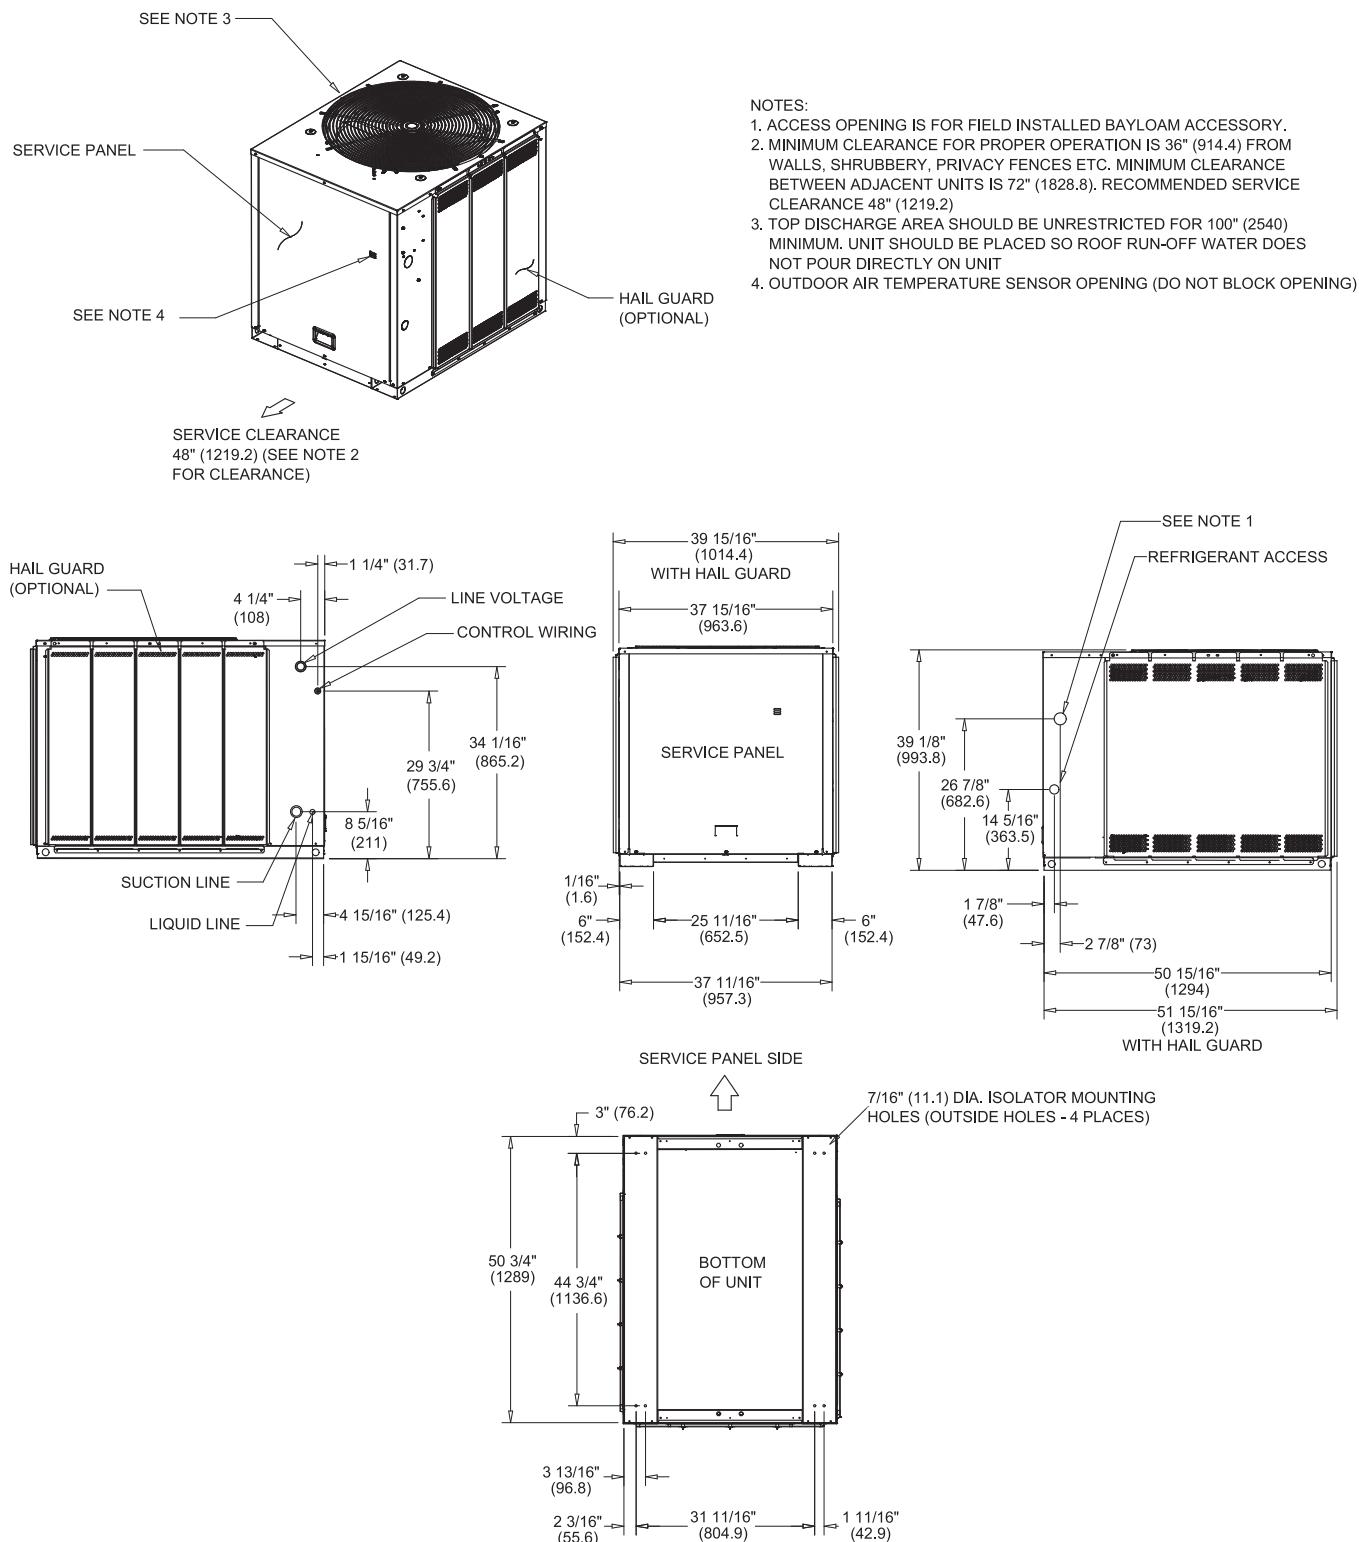

## Dimensional Data

**Figure 8. 10.4 and 12.5 ton condensing unit, dual compressor, tube and fin**



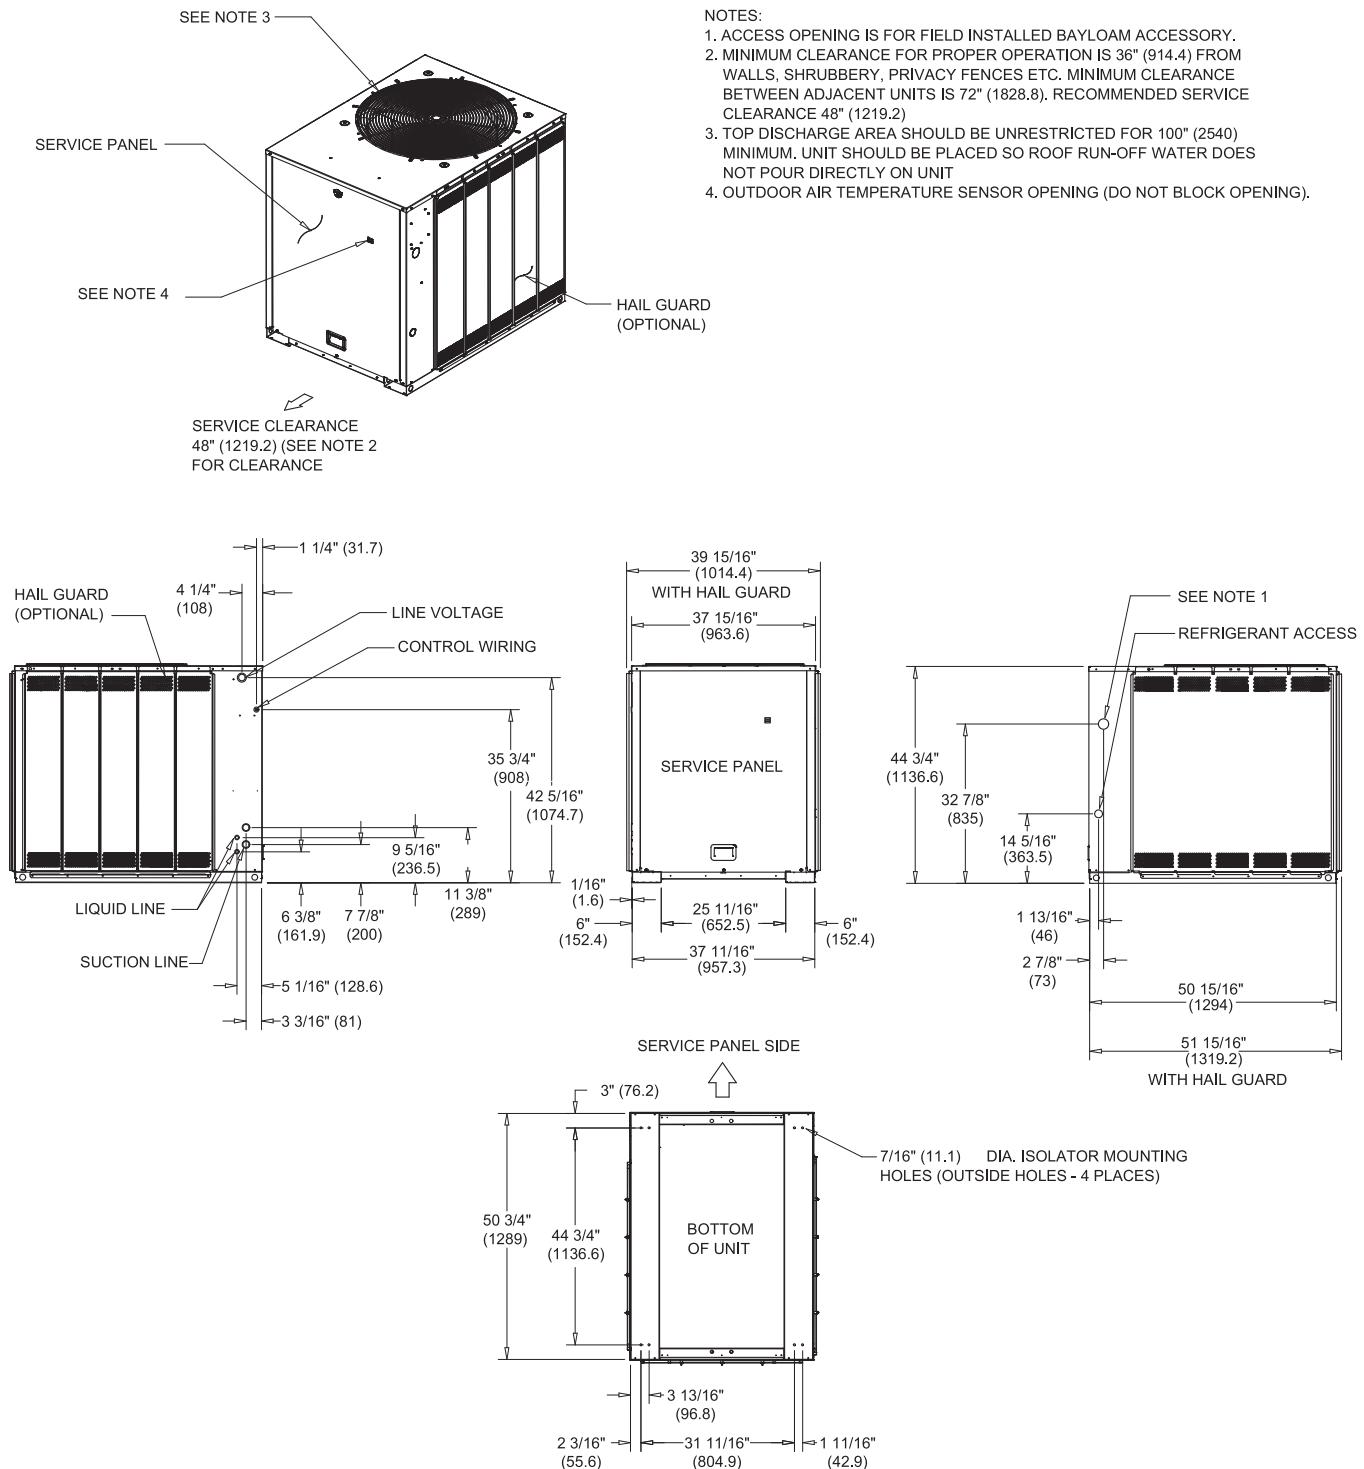


Figure 9. 13, 15, 16.7 and 20 ton condensing unit, dual compressor, tube and fin

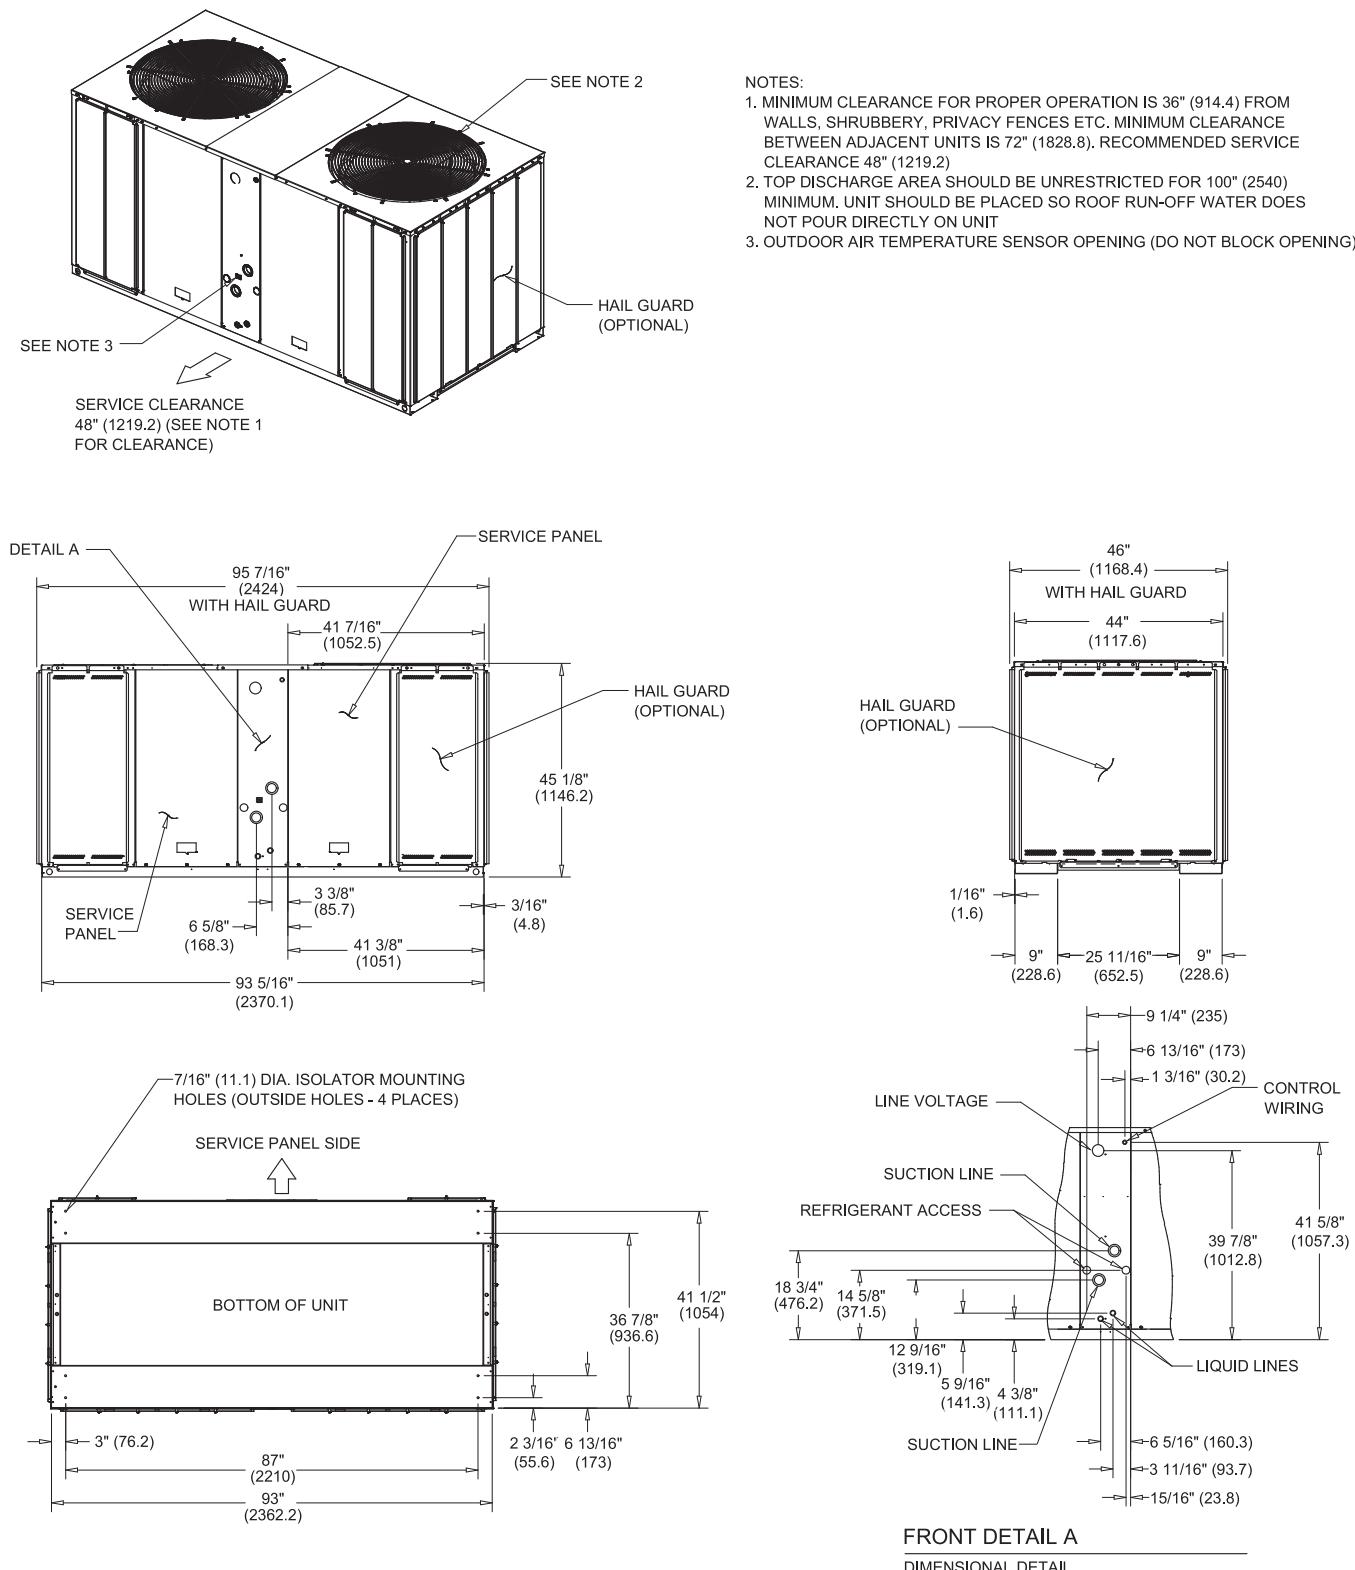





## Dimensional Data

Figure 10. 13, 15, 16.7 and 20 condensing unit, manifolde

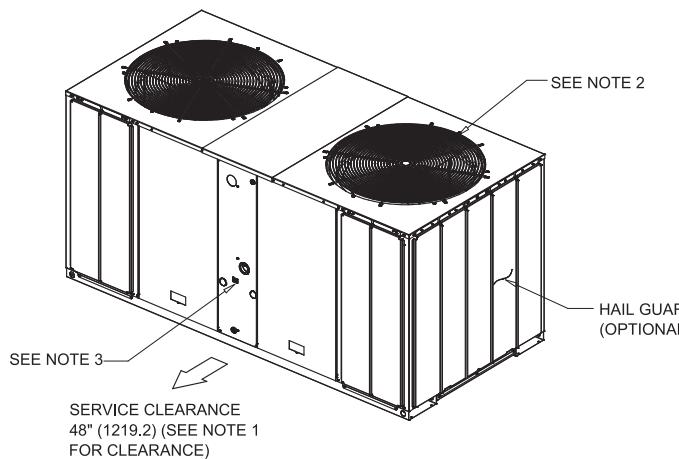

NOTES:


1. MINIMUM CLEARANCE FOR PROPER OPERATION IS 36" (914.4) FROM WALLS, SHRUBBERY, PRIVACY FENCES ETC. MINIMUM CLEARANCE BETWEEN ADJACENT UNITS IS 72" (1828.8). RECOMMENDED SERVICE CLEARANCE 48" (1219.2)
2. TOP DISCHARGE AREA SHOULD BE UNRESTRICTED FOR 100" (2540) MINIMUM. UNIT SHOULD BE PLACED SO ROOF RUN-OFF WATER DOES NOT POUR DIRECTLY ON UNIT
3. OUTDOOR AIR TEMPERATURE SENSOR OPENING (DO NOT BLOCK OPENING)

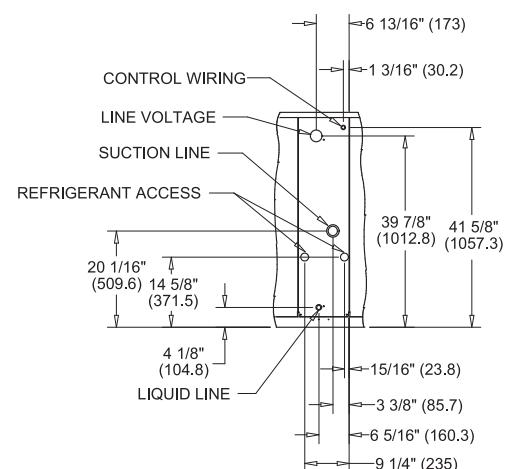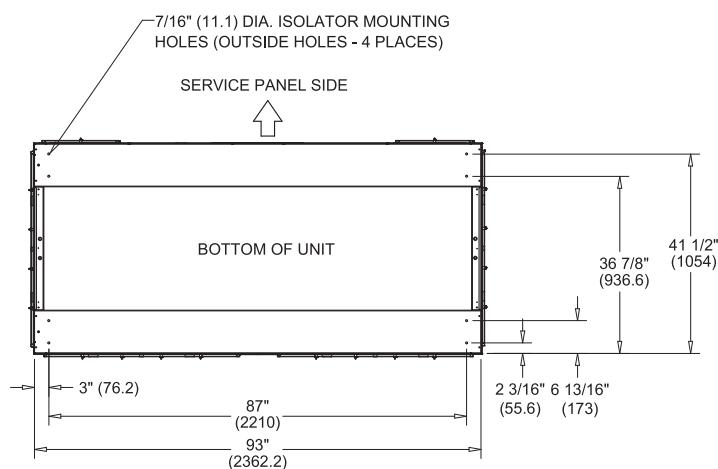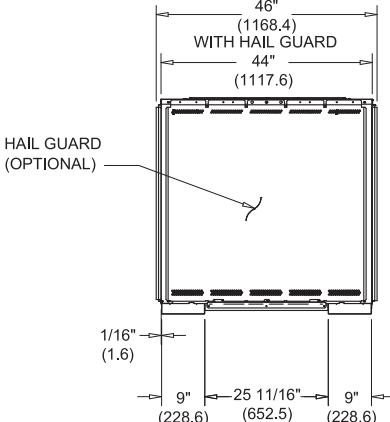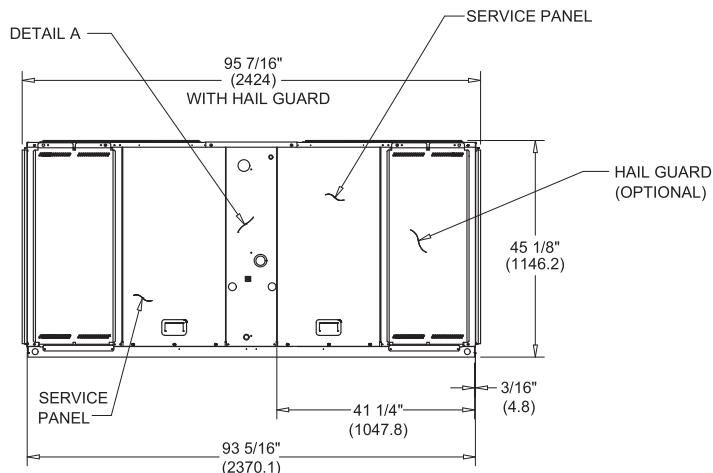

FRONT DETAIL A

DIMENSIONAL DETAIL

Figure 11. 20.9 and 25 ton condensing unit, manifolde compressor, tube and fin

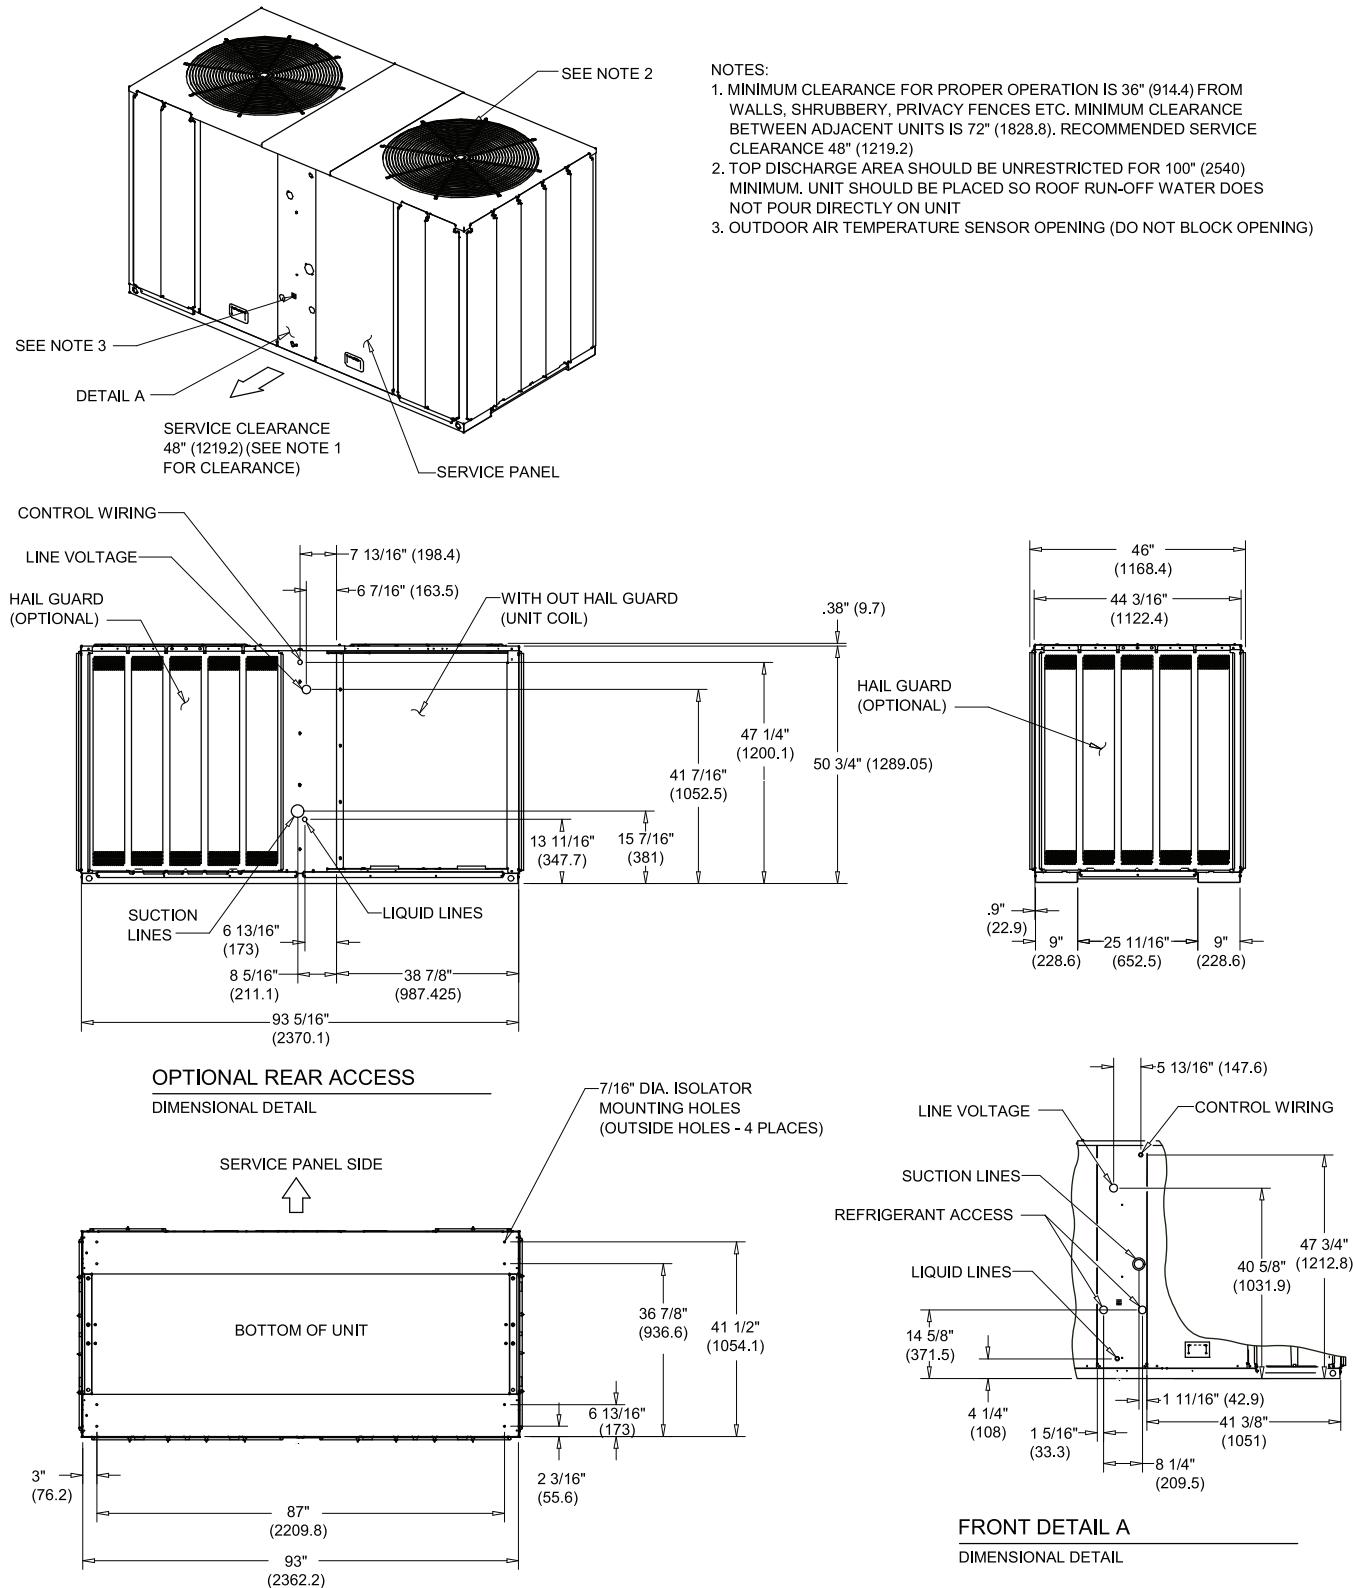

# Weights

## Cooling Condenser


**Table 1. TTA unit and corner weights — lbs (60 Hz)**

Tons	Model No.	Shipping Max (lbs)	Net Max (lbs)	Corner Weights			
				1	2	3	4
6	TTA073G	306	241	68	72	35	65
7.5	TTA090G	316	251	71	75	37	68
	TTA090H	380	315	99	91	63	62
10	TTA120G	412	340	114	89	60	77
	TTA120H	424	352	110	102	71	69
	TTA120F	509	438	129	140	83	86
12.5	TTA150E	543	468	130	151	79	108
15	TTA180E	850	723	207	204	151	161
	TTA180F	852	725	196	208	153	168
20	TTA240E	970	837	262	240	164	171
	TTA240F	966	835	257	249	153	176
25	TTA300F	1168	1037	338	266	241	194

**Table 2. TTA unit and corner weights — lbs (50 Hz)**


Tons	Model No.	Shipping Max (kg)	Net Max (kg)	Corner Weights			
				1	2	3	4
5	TTA061G	140	110	31	33	16	30
6.25	TTA076G	144	115	32	34	17	31
	TTA076H	173	144	45	42	29	28
8.33	TTA101G	188	155	52	40	27	35
	TTA101H	193	160	50	46	32	31
	TTA101F	229	197	58	63	37	39
10.4	TTA126E	244	211	59	68	36	49
13	TTA156E	383	325	93	92	68	72
	TTA156F	383	326	88	94	69	76
16.7	TTA201E	437	377	118	108	74	77
	TTA201F	435	376	116	112	69	79
20.9	TTA251F	530	470	153	121	109	88

Figure 12. TTA073, 090, 120, 150, TTA061, 076, 101

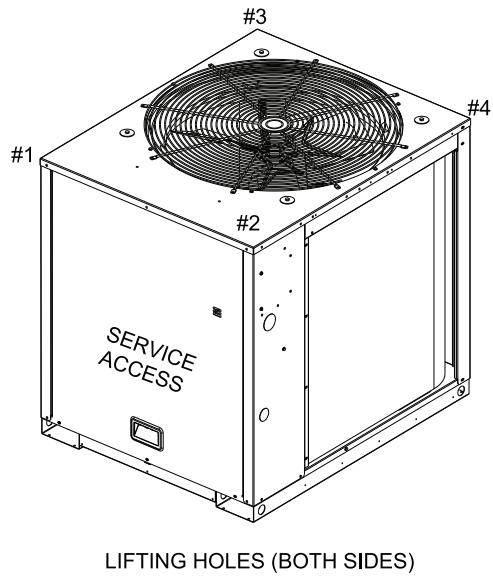

LIFTING HOLES (BOTH SIDES)

Figure 13. TTA180, 240, 300, TTA156, 201, 251

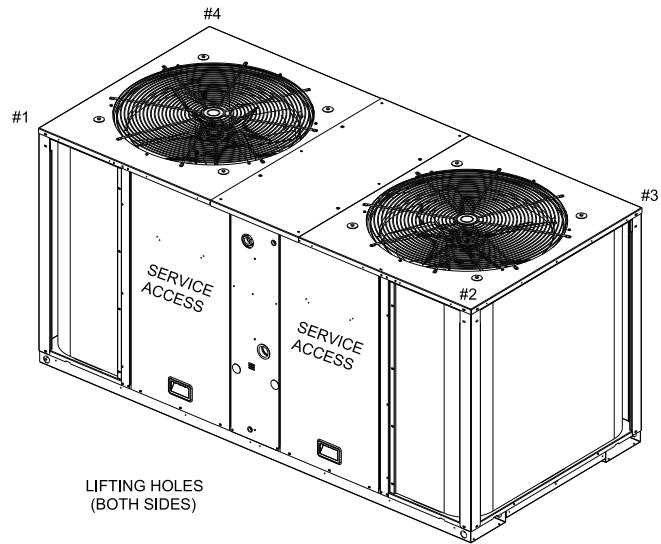


LIFTING HOLES  
(BOTH SIDES)


# Installation

## Refrigerant Piping Guidelines

**Figure 14. Allowable elevation difference: Cooling only TTA *above* indoor unit**

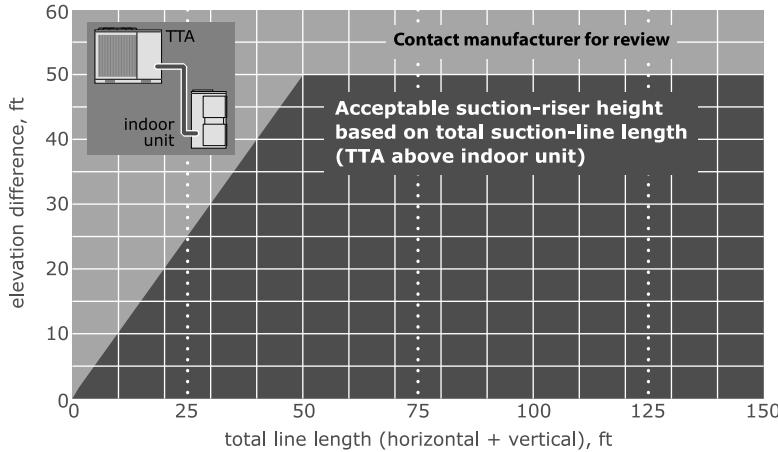

**Figure 15. Allowable elevation difference: TTA *below* indoor unit**

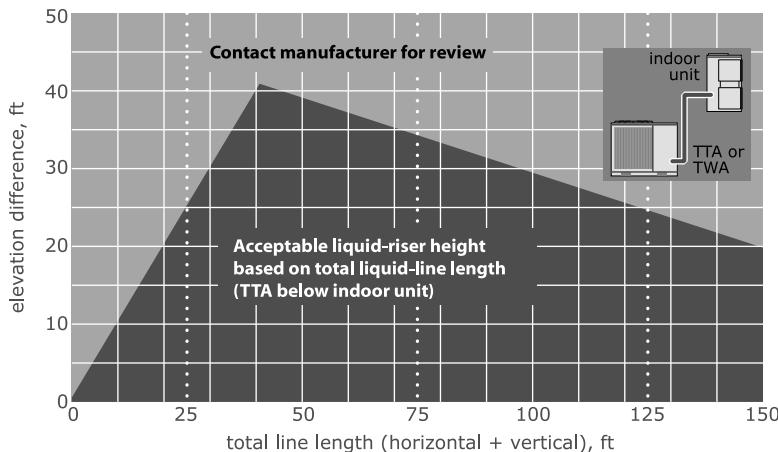

**Note:** Route refrigerant piping for minimum linear length, minimum number of bends and fittings (no reducers) and minimum amount of line exposed to outdoor ambients.

## Refrigerant Piping Procedures (Outdoor Units)

### ⚠ WARNING


#### R-410A Refrigerant under Higher Pressure than R-22!

Failure to use proper equipment or components as described below, could result in equipment failing and possibly exploding, which could result in death, serious injury, or equipment damage. The units described in this manual use R-410A refrigerant which operates at higher pressures than R-22. Use ONLY R-410A rated service equipment or components with these units. For specific handling concerns with R-410A, please contact your local Trane representative.

Each TTA unit ships with a holding charge of dry nitrogen. The nitrogen should be removed and the entire system evacuated (at the proper time) to avoid possible contamination.

1. Remove the compressor service access panel.
2. Locate the liquid and suction line service valves. Check that the piping connection stubs on the valves (Figure 16, p. 23) line up properly with the holes in the unit cabinet.

**Figure 16. Outdoor units - refrigerant piping (with dry nitrogen)**

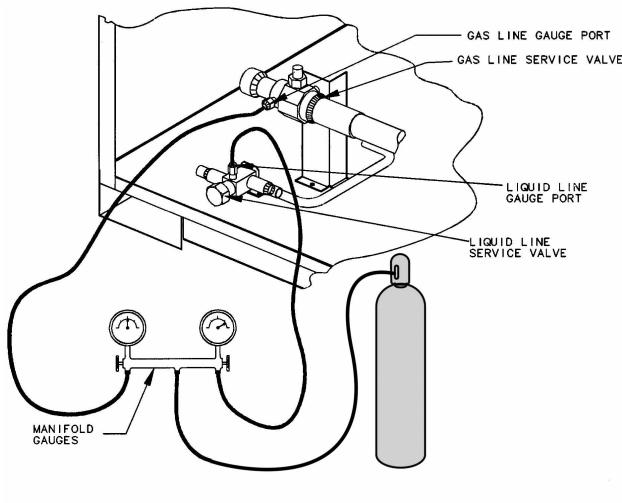

3. Remove the refrigerant connection seal caps and open the service valve slowly to release the nitrogen from the unit.

### NOTICE

#### System Component Damage!

Do not remove the seal caps from refrigerant connections, or open the service valves until prepared to braze refrigerant lines to the connections. Excessive exposure to atmosphere (> 5 min.) may allow moisture or dirt to contaminate the system, damaging valve seals and causing ice formation in system components.

### ⚠ WARNING

#### Hazard of Explosion and Deadly Gases!

Failure to follow all proper safe refrigerant handling practices could result in death or serious injury.

Never solder, braze or weld on refrigerant lines or any unit components that are above atmospheric pressure or where refrigerant may be present. Always remove refrigerant by following the guidelines established by the EPA Federal Clean Air Act or other state or local codes as appropriate. After refrigerant removal, use dry nitrogen to bring system back to atmospheric pressure before opening system for repairs. Mixtures of refrigerants and air under pressure may become combustible in the presence of an ignition source leading to an explosion. Excessive heat from soldering, brazing or welding with refrigerant vapors present can form highly toxic gases and extremely corrosive acids.

4. Cut, fit and braze tubing, starting at the outdoor unit and work toward the indoor unit. See recommended tube sizes.

**Note:** Use long radius ell for all 90° bends.

All brazing should be done using a 2 to 3 psig dry nitrogen purge flowing through the pipe being brazed, see Figure 16, p. 23.

### NOTICE

#### System Component Damage!

Install a regulating valve between the nitrogen source and the gauge manifold. Unregulated pressure can damage system components.

### NOTICE

#### System Component Damage!

Wet-wrap all valves and protect painted surfaces from excessive heat. Heat can damage system components and the unit finish.

5. Shut off nitrogen supply. Shut off the manifold valve for the line that is connected to the suction line service valve. Disconnect the line from the gauge port on the valve.

# Refrigerant Piping Procedures (Indoor Unit)

Once liquid and suction lines are complete to the refrigerant connections on the indoor unit, remove the gauge port core(s) on the indoor unit connection stubs to release the dry nitrogen charge.

## NOTICE

### Unit Damage!

**Do not apply heat to remove seal caps until the gauge port cores have been removed. If seal caps are intact, application of heat may generate excessive pressure in the unit and result in damage to the coil or expansion valve.**

1. Remove both seal caps from the indoor unit connection stubs.

## NOTICE

### Unit Damage!

**Do not remove the seal caps from refrigerant connections, or open the service valves until prepared to braze refrigerant lines to the connections. Due to the high hygroscopic properties of the R-410A oil, excessive exposure to atmosphere will allow moisture to contaminate the system, damaging the compressor.**

2. Turn on nitrogen supply. Nitrogen enters through the liquid line gauge port.
3. Braze the liquid line connections.
4. Open the gauge port on the suction line and then braze the suction line to the connection stub. Nitrogen will bleed out the open gauge port on the suction line.
5. Shut off nitrogen supply.

## Leak Check

## ⚠ WARNING

### Hazard of Explosion!

**Failure to follow these recommendations could result in death or serious injury or equipment or property-only damage.**

**Use only dry nitrogen with a pressure regulator for pressurizing unit. Do not use acetylene, oxygen or compressed air or mixtures containing them for pressure testing. Do not use mixtures of a hydrogen containing refrigerant and air above atmospheric pressure for pressure testing as they may become flammable and could result in an explosion. Refrigerant, when used as a trace gas should only be mixed with dry nitrogen for pressurizing units.**

## ⚠ WARNING

### Hazard of Explosion!

**Failure to follow recommended safe leak test procedures could result in death or serious injury or equipment or property-only damage. Never use an open flame to detect gas leaks. Use a leak test solution for leak testing.**

After the brazing operation of refrigerant lines to both the outdoor and indoor unit is completed, the field brazed connections must be checked for leaks. Pressurize the system through the service valve with dry nitrogen to 200 psi. Use soap bubbles or other leak-checking methods to ensure that all field joints are leak free. If not, release pressure, repair and repeat leak test.

## System Evacuation

1. After completion of leak check, evacuate the system.
2. Attach appropriate hoses from manifold gauge to gas and liquid line pressure taps.

**Note: Unnecessary switching of hoses can be avoided and complete evacuation of all lines leading to sealed system can be accomplished with manifold center hose and connecting branch hose to a cylinder of R-410A and vacuum pump.**

3. Attach center hose of manifold gauges to vacuum pump.

## NOTICE

### Operating Under Vacuum!

**Failure to follow these instructions will result in compressor failure.**

**Do not operate or apply power to the compressor while under a vacuum.**

4. Evacuate the system to hold a 500 micron vacuum.
5. Close off valve to vacuum pump and observe the micron gauge. If gauge pressure rises above 500 microns in one minute, then evacuation is incomplete or the system has a leak.
6. If vacuum gauge does not rise above 500 microns in 10 minutes, the evacuation should be complete.

## NOTICE

### Equipment Damage!

**Charge with access port on the liquid line service valve only.**

7. With vacuum pump and micron gauge blanked off, open valve on R-410A cylinder and allow refrigerant pressure to build up to about 80 psig.
8. Close valve on the R-410A supply cylinder. Close valves on manifold gauge set and remove

refrigerant charging hoses from liquid and gas gauge ports.

9. Leak test the entire system. Using proper procedures and caution, as described in the previous section, repair any leaks found and repeat the leak test.

## Insulating and Isolating Refrigerant Lines

Insulate the entire suction line with refrigerant piping insulation. Also insulate any portion of the liquid line exposed to temperature extremes. Insulate and isolate liquid and suction lines from each other. Isolate refrigerant lines from the structure and any duct work.

### Important:

1. *To prevent possible noise or vibration problems, be certain to isolate refrigerant lines from the building.*
2. *All suction and hot gas bypass piping (if installed) should be insulated from the termination in the air handler to the condensing unit cabinet entry. Failure to do so can cause condensate drip off and performance degradation.*
3. *Prior to starting a unit, it is advisable to have the approved oils available in the event oil needs to be added to the system.*

## NOTICE

### Equipment Damage!

This is POE oil, which readily absorbs moisture. Always use new oil and never leave containers open to atmosphere while not in use.

Table 3. TTA approved oils

Unit Model Number	Approved Oils
TTA061, TTA073, TTA076, TTA090, TTA101, TTA120, TTA126, TTA150, TTA156, TTA180, TTA251, TTA300	Trane Oil Part Number OIL00094 (1 quart container)
TTA201, TTA240	Trane Oil Part Number OIL00079 (1 quart container) or OIL00080 (1 gallon container).

For units equipped with compressors containing site glasses, the oil level must be visible through the sight glass when the compressor is running under stabilized conditions and a few minutes after the compressor has stopped.

## Refrigerant Charging Procedure

If charging by weight, refer to for starting charge. If refrigerant adjustments are needed because of length of line, refer to "Charging Charts and Superheat," p. 38.

Charge by weight through the gauge port on the liquid line. Once the charge enters the system, backseat (open) the liquid line service valve and disconnect the charging line and replace the cap on the gauge port.

### Notes:


- *R-410A should only be charged in the liquid state.*
- *When possible, always charge the refrigerant into the liquid line of the unit.*
- *If the entire charge can't be charged into the liquid line, the balance of the unit charge can be metered through a charging manifold set as liquid — preferably through a schrader valve into the suction line to the compressor — only while the compressor is running.*
- *Check and adjust superheat using Table 9, p. 41, then re-check charging charts to determine if charge corrections are necessary.*

## NOTICE

### Equipment Damage!

Never charge liquid refrigerant into the suction line of the unit with the compressor off.

Figure 17. Outdoor units - refrigerant piping

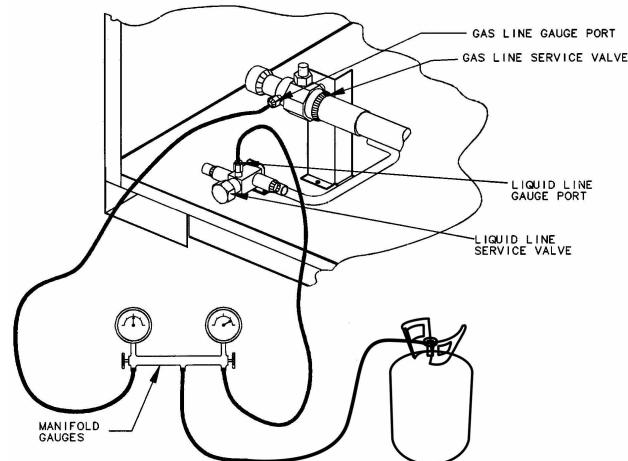

### Charging Levels

**Table 4. Estimated charge levels at ARI rated line lengths (25 feet) - 50 & 60 Hz**


Matched Set	Refrigerant Charge		Per Circuit	
	Circuit 1	Circuit 2	Liquid Line Diameter	Vapor Line Diameter
TTA061G w/TWE076D <sup>(a)</sup>	10	N/A	0.5 (1/2")	1.125 (1 1/8")
TTA073G w/TWE090D	10	N/A	0.5 (1/2")	1.125 (1 1/8")
TTA076G w/TWE076D	9.7	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA076H w/TWE076E	7.25	7.3125	0.5 (1/2")	1.125 (1 1/8")
TTA090G w/TWE090D	9.7	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA090H w/TWE090E	7.25	7.3125	0.5 (1/2")	1.125 (1 1/8")
TTA101G w/TWE101D	13.6	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA101H w/TWE101E	7.7	7.6	0.5 (1/2")	1.125 (1 1/8")
TTA101F w/TWE101D	21.2	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA120G w/TWE120D	13.6	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA120H w/TWE120E	7.7	7.6	0.5 (1/2")	1.125 (1 1/8")
TTA120F w/TWE120D	21.2	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA126E w/TWE126E	15.2	15.5	0.5 (1/2")	1.125 (1 1/8")
TTA150E w/TWE150E	15.2	15.5	0.5 (1/2")	1.125 (1 1/8")
TTA156E w/TWE156E	19.5	19.5	0.5 (1/2")	1.375 (1 3/8")
TTA156F w/TWE156E	37.6	N/A	0.625 (5/8")	1.625 (1 5/8")
TTA180E w/TWE180E	19.5	19.5	0.5 (1/2")	1.375 (1 3/8")
TTA180F w/TWE180E	37.6	N/A	0.625 (5/8")	1.625 (1 5/8")
TTA201E w/TWE201E	21.9	21.9	0.5 (1/2")	1.375 (1 3/8")
TTA201F w/TWE201E	41.3	N/A	0.625 (5/8")	1.625 (1 5/8")
TTA240E w/TWE240E	21.9	21.9	0.5 (1/2")	1.375 (1 3/8")
TTA240F w/TWE240E	41.3	N/A	0.625 (5/8")	1.625 (1 5/8")
TTA251F w/TWE251E <sup>(b)</sup>	62.5	N/A	0.625 (5/8")	2.125 (2 1/8")
TTA300F w/TWE300E	62.5	N/A	0.625 (5/8")	2.125 (2 1/8")

**Notes:**


1. For line lengths other than 25', please refer to the Application Guide (SS-APG008-EN) for charge levels and line sizes.
2. See and for transition tube location and electrical connections.

(a) TTA061D and TTA073D need a reducer for vapor line. (1.375 to 1.125 inch) (1 3/8" to 1 1/8")

(b) TTA251F and TTA300F are provided with a transition tube to be installed outside of the unit for front or rear access, (1.625 to 2.125 inch) (1 5/8" to 2 1/8").

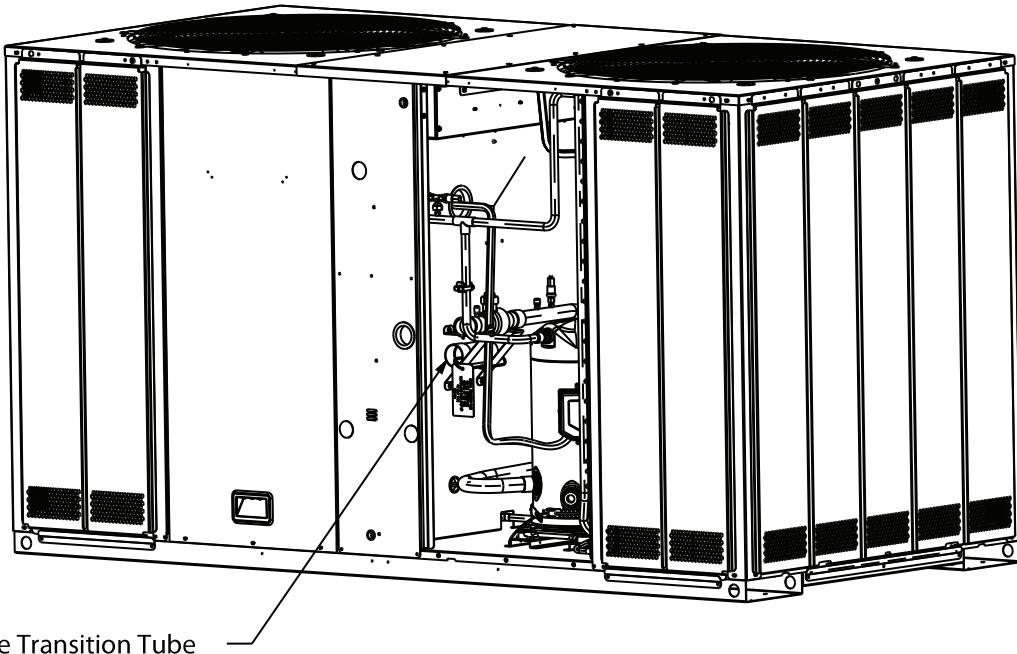**Figure 18. TTA 251, 300 transition tube location**

Suction Line Transition Tube

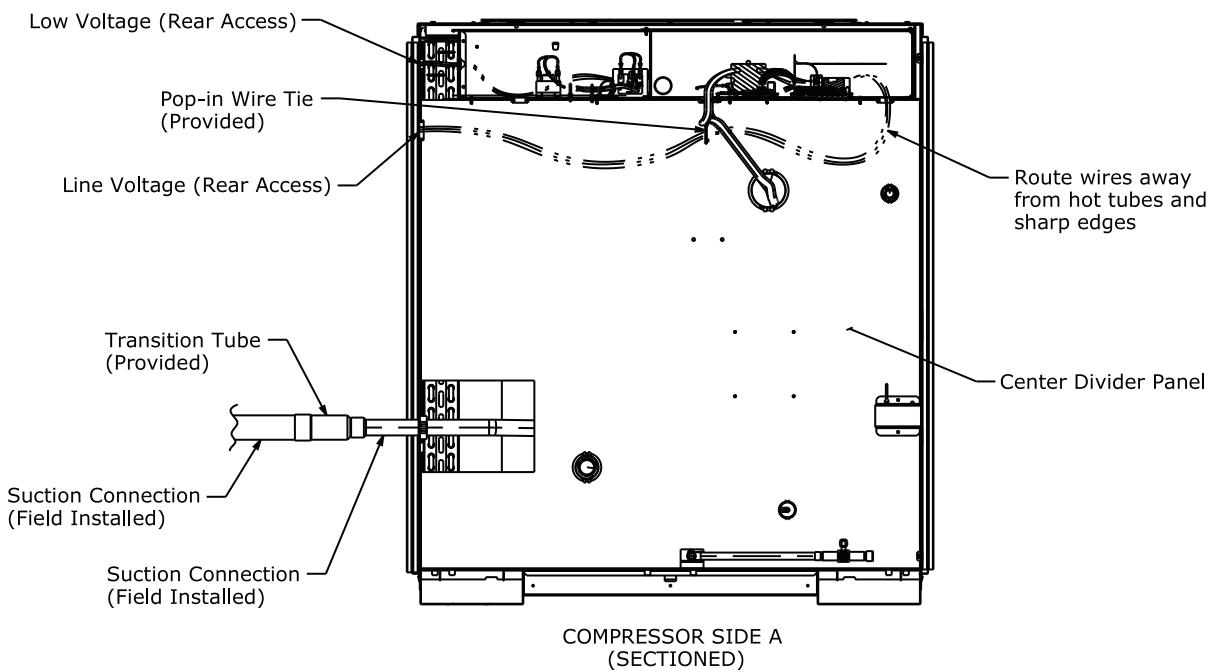**Figure 19. TTA251, 300 rear refrigerant and electrical connections**

## Liquid Charging

This procedure is accomplished with the unit operating. Electrical connections must be complete. Do not proceed until the system is ready to operate.

**Note:** The compressor access panel must be installed when the unit is running and being charged. Manifold hoses must be routed through refrigerant gauge access hole(s). See "Dimensional Data," p. 10 for specific locations.

### ⚠ WARNING

#### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

1. Turn on power to the unit. Allow the system to run for 15 minutes to stabilize operating conditions.
2. Measure airflow across the indoor coil. Compare the measurements with the fan performance data in the Data/Submittal or Service Facts. Once proper airflow is established, compare discharge pressure and liquid temperature to the ["Charging Charts,"](#) p. 38. Add or remove refrigerant (liquid only) as required to obtain correct discharge pressure and liquid temperature.
3. Check suction line superheat and condenser sub-cooling to ensure the unit is operating properly.
4. Disconnect all power to the unit.

**Important:** If the unit is charged and left without power until a later date, the crankcase heater should be energized for a minimum of 8 hours prior to powering the compressor(s).

### ⚠ WARNING

#### Hazardous Voltage w/Capacitors!

Failure to disconnect power and discharge capacitors before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects and discharge all motor start/run capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized. For variable frequency drives or other energy storing components provided by Trane or others, refer to the appropriate manufacturer's literature for allowable waiting periods for discharge of capacitors. Verify with an appropriate voltmeter that all capacitors have discharged.

For additional information regarding the safe discharge of capacitors, see [PROD-SVB06A-EN](#).

5. Remove the charging system from the unit.
6. Replace all panels.

## Electrical Wiring

### ⚠ WARNING

#### Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring MUST be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you MUST follow requirements for field wiring installation and grounding as described in NEC and your local/state electrical codes.

Field wiring consists of providing power supply to the unit, installing the system indoor thermostat and providing low voltage system interconnecting wiring. Access to electrical connection locations is shown in ["Dimensional Data,"](#) p. 10. Determine proper wire sizes and unit protective fusing requirements by referring to the unit nameplate and/or the unit Service Facts. Field wiring diagrams for accessories are shipped with the accessory.

## Unit Power Supply

The installer must provide line voltage circuit(s) to the unit main power terminals as shown by the unit wiring diagrams (available through e-Library or by contacting a local sales office) or field wiring. Power supply must include a disconnect switch in a location convenient to the unit. Ground the unit according to local codes and provide flexible conduit if codes require and/or if vibration transmission may cause noise problems.

**Important:** All wiring must comply with applicable local and national (NEC) codes. Type and location of disconnect switches must comply with all applicable codes.

### ⚠ WARNING

#### Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring MUST be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you MUST follow requirements for field wiring installation and grounding as described in NEC and your local/state electrical codes.

**NOTICE****Use Copper Conductors Only!**

Failure to use copper conductors could result in equipment damage as unit terminals are not designed to accept other types of conductors.

**Low Voltage Wiring**


Mount the indoor thermostat, zone sensor, or Night Setback Panel (NSB) in accordance with the corresponding thermostat installation instructions. Install color-coded, weather-proof, multi-wire cable according to the field wiring schematics (see "Field Wiring," p. 30).

**Electromechanical Controls**

Wiring shown with dashed lines is to be furnished and installed by the customer. All customer supplied wiring must be copper only and must conform to NEC and local electrical codes. Codes may require line of sight between disconnect switch and unit.

**Note:** When electric heater accessory is used, single point power entry or dual point power entry is field optional. Single point power entry option is through electric heater only.

**Figure 20. Electromechanical jobsite connections**

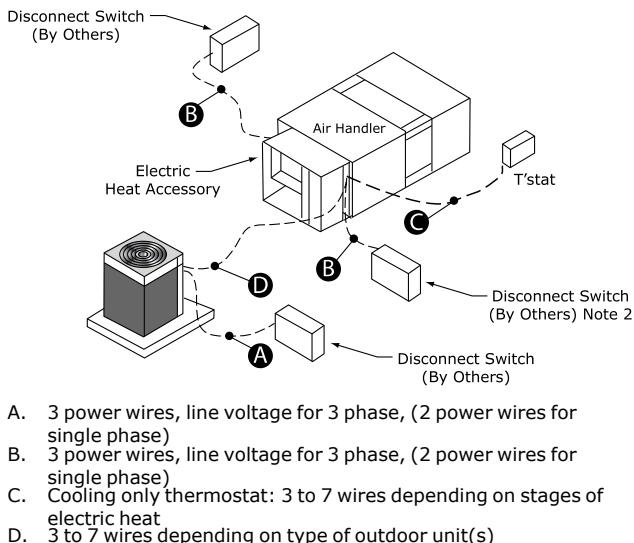
**ReliaTel Controls**

Wiring shown with dashed lines is to be furnished and installed by the customer. All customer supplied wiring must be copper only and must conform to NEC and local electrical codes. Codes may require line of sight between disconnect switch and unit.

**Notes:**

1. When electric heater accessory is used, single point power entry or dual point power entry is field optional. Single point power entry option is through electric heater only.
2. \*\*\*Choose only one of the following; Thermostat, Zone Sensor, or NSB Panel.

**Figure 21. ReliaTel jobsite connections**

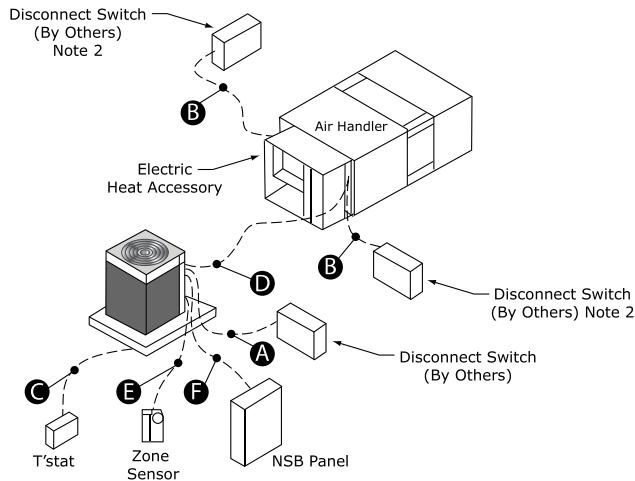

- 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- Cooling only thermostat: 3 to 7 wires depending on stages of electric heat
- 3 to 7 wires depending on type of outdoor unit(s)
- Zone Sensor: 4 to 10 wires depending on zone sensor model(a)
- Night Setback Panel: 7 wires

(a) For SZVAV air handlers: 4 additional wires are required (2 of which require twisted pair or shielded wire) in order to make connections between ReliaTel boards in the condenser and air handler.

### Field Wiring

Figure 22. Night setback panel field wiring




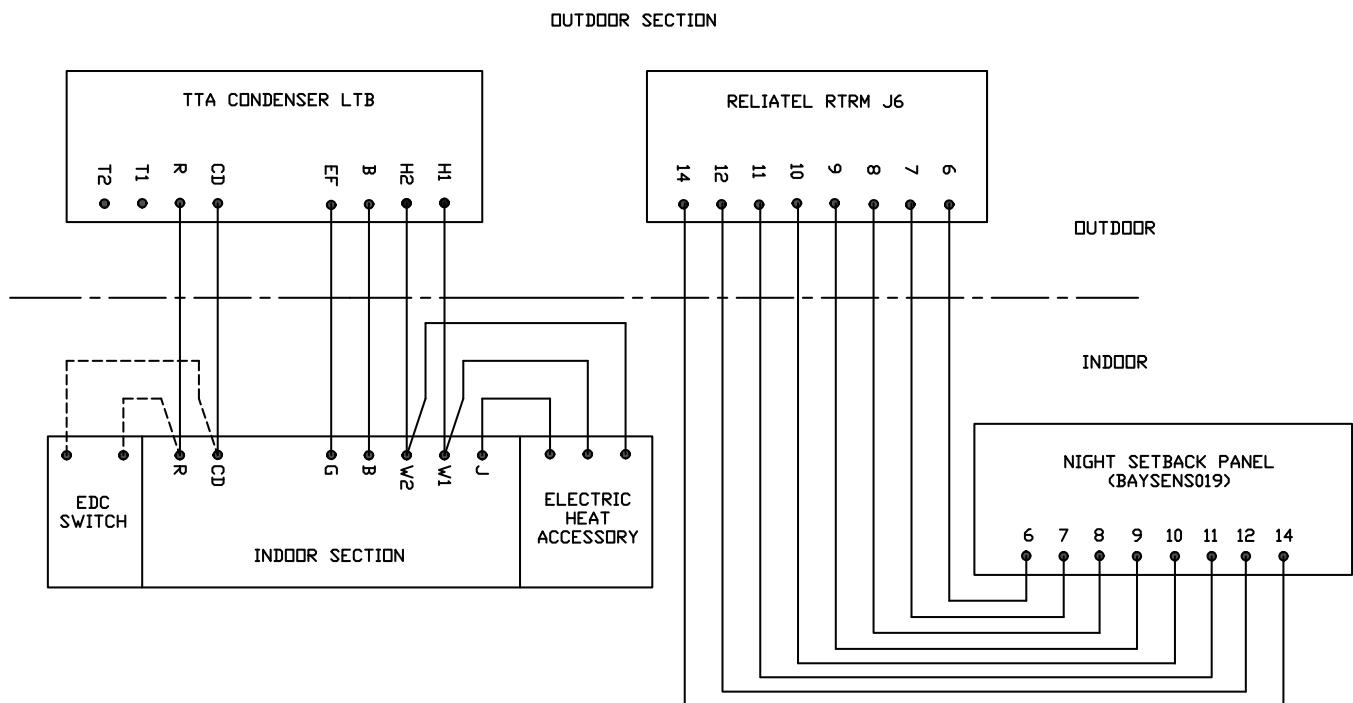


Figure 23. Zone sensor field wiring

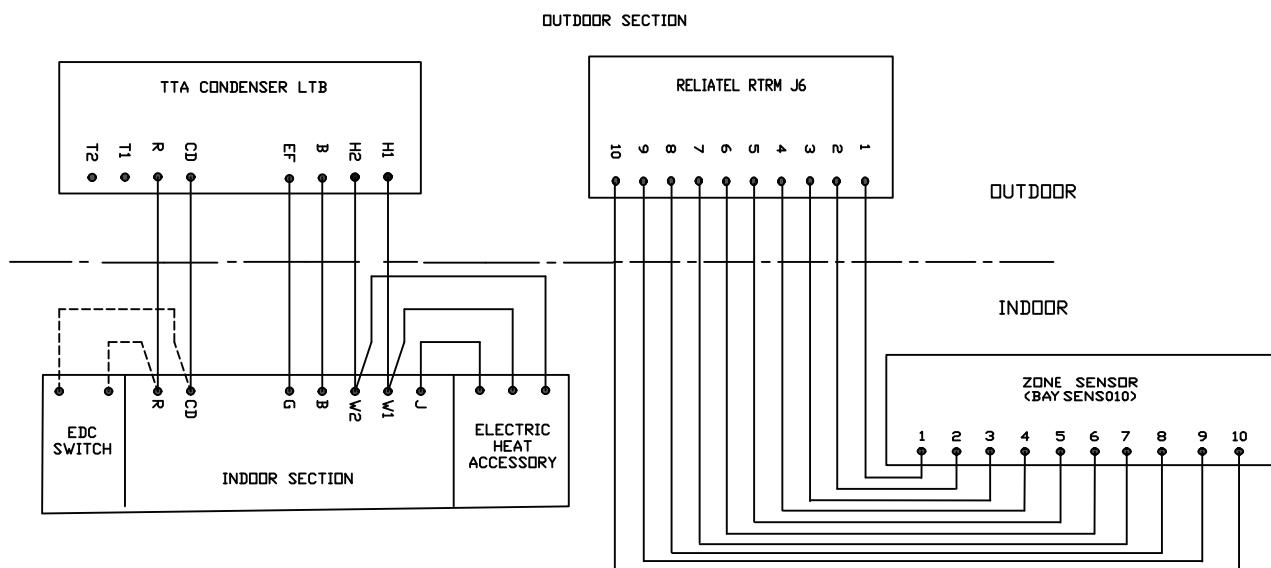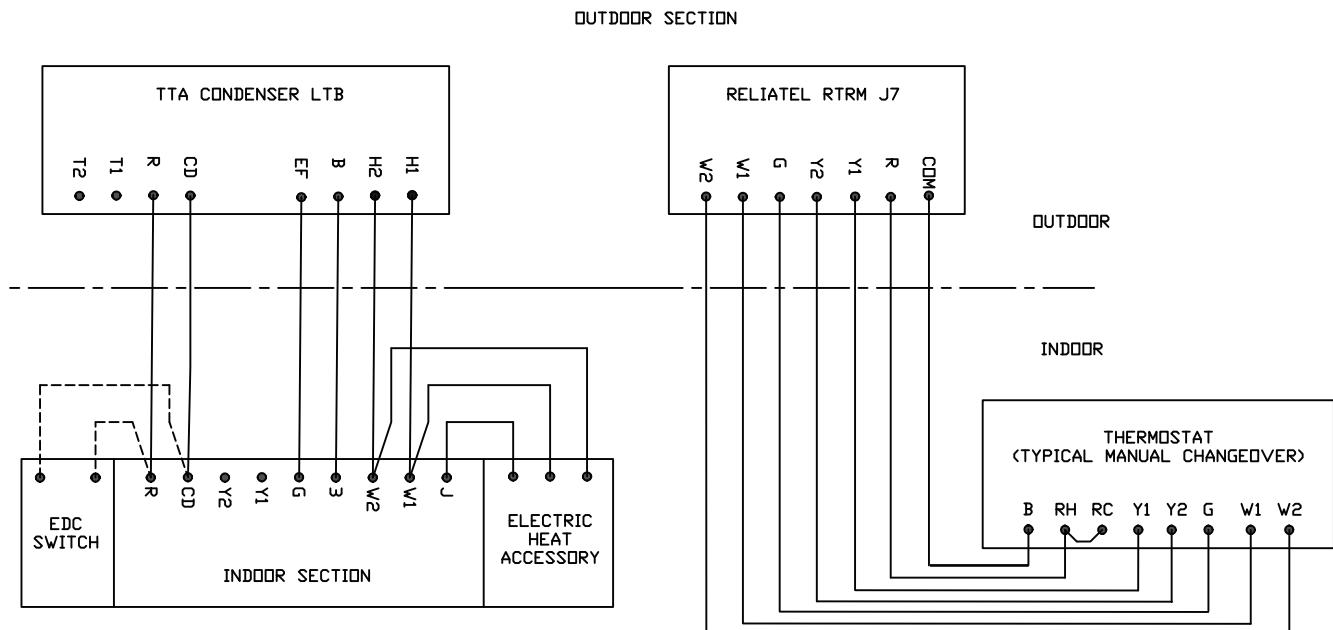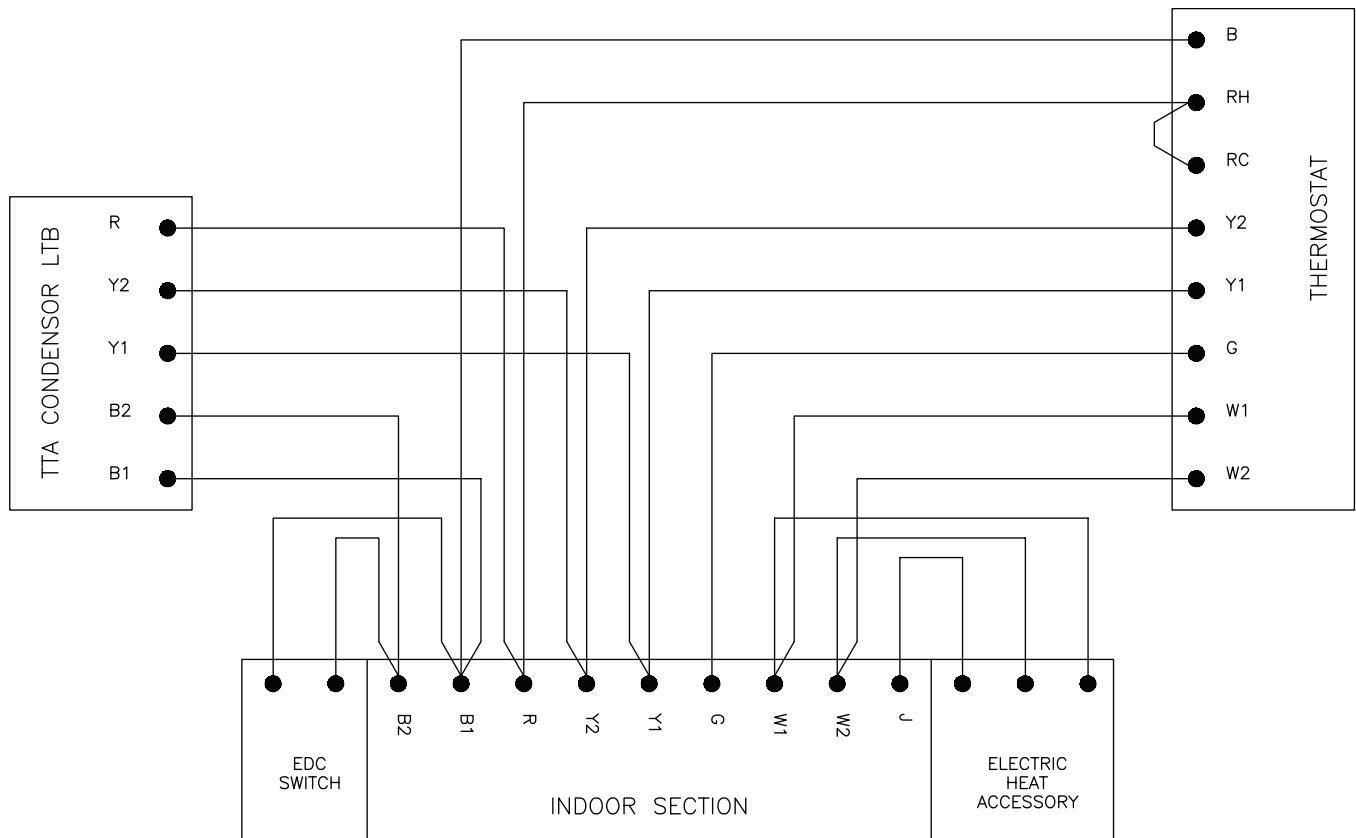

**Figure 24. Thermostat field wiring****Figure 25. Thermostat wiring for electromechanical units**

### Refrigerant Circuit

Figure 26. Typical split system cooling refrigerant circuit — microchannel


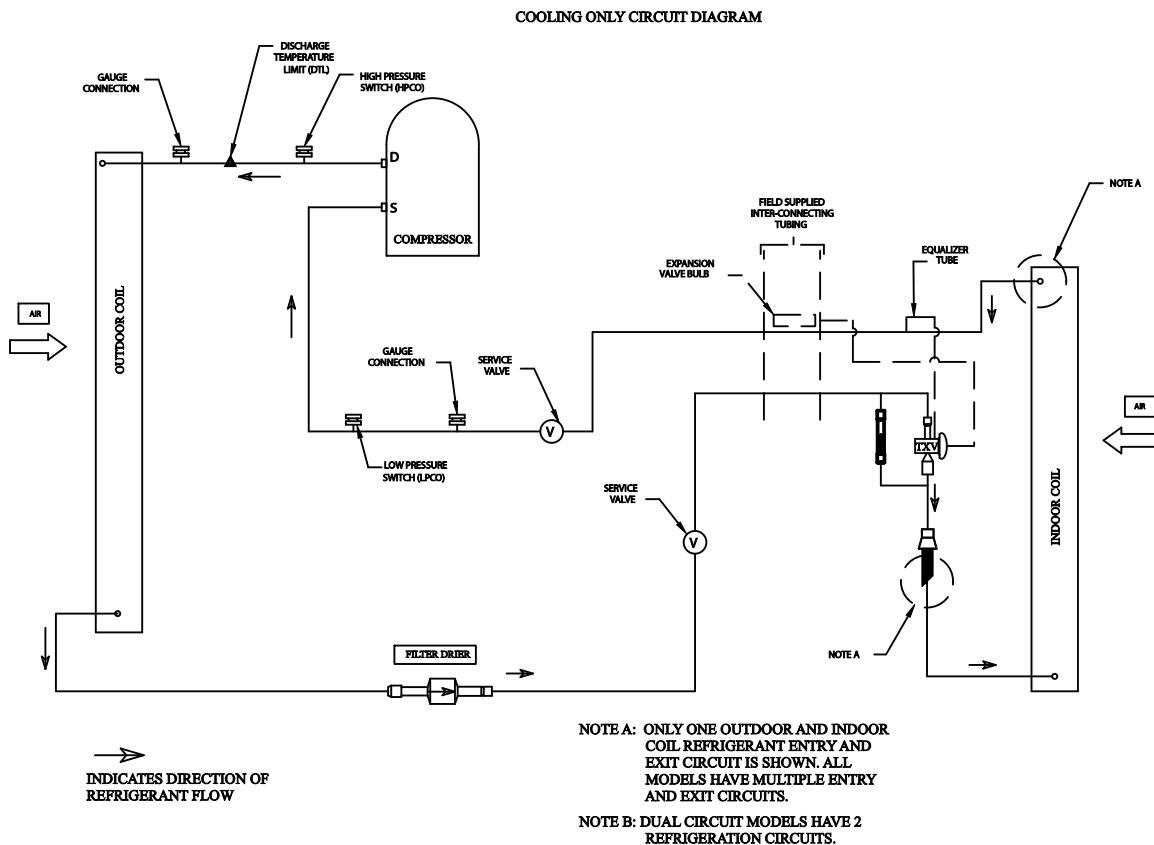


Figure 27. Typical split system cooling refrigerant circuit

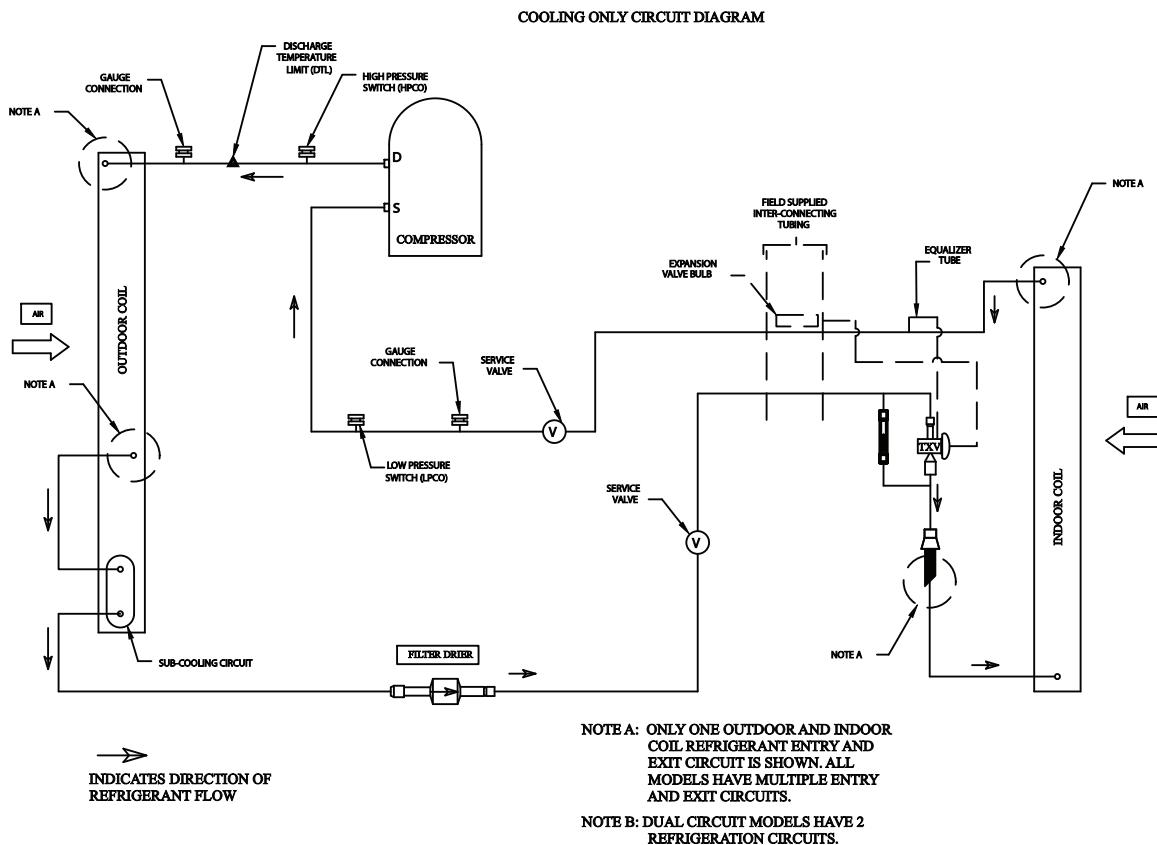

# Electrical Data

Table 5. Electrical characteristics — compressor and condenser fan motors — 60 Hz

Tons	Unit Model Number	Compressor Motor				Condenser Fan Motor					
		No.	Volts	Phase	Amps		No.	Volts	Phase		
					RLA	LRA					
		(Ea.)	(Ea.)		(Ea.)	(Ea.)					
6	TTA073G3	1	208-230	3	21.9	136	1	208-230	1	3.1	8.1
	TTA073G4	1	460	3	9.1	66.1	1	460	1	1.6	3.8
	TTA073GK	1	380	3	11.4	83	1	380	1	2.7	7
	TTA073GW	1	575	3	7.4	55.3	1	575	1	1.2	3
7.5	TTA090G3	1	208-230	3	25	164	1	208-230	1	3.1	8.1
	TTA090G4	1	460	3	12.9	100	1	460	1	1.6	3.8
	TTA090GK	1	380	3	14.3	94.3	1	380	1	2.7	7
	TTA090GW	1	575	3	10.6	78	1	575	1	1.2	3
7.5	TTA090H3	2	208-230	3	14.6	83.1	1	208-230	1	3.1	8.1
	TTA090H4	2	460	3	6.8	41	1	460	1	1.6	3.8
	TTA090HK	2	380	3	8.5	51.8	1	380	1	2.7	7
	TTA090HW	2	575	3	4.9	33	1	575	1	1.2	3
10	TTA120G3	1	208-230	3	36	267	1	208-230	1	5	14.4
	TTA120G4	1	460	3	19	142	1	460	1	2.5	5.8
	TTA120GK	1	380	3	27	160	1	380	1	3.4	7.8
	TTA120GW	1	575	3	17	103	1	575	1	2	5.1
10	TTA120H3	2	208-230	3	16	110	1	208-230	1	5	14.4
	TTA120H4	2	460	3	7.8	52	1	460	1	2.5	5.8
	TTA120HK	2	380	3	10.4	65.6	1	380	1	3.4	7.8
	TTA120HW	2	575	3	6	38.9	1	575	1	2	5.1
10	TTA120F3	2	208-230	3	17.6	123	1	208-230	1	5	14.4
	TTA120F4	2	460	3	9.6	62	1	460	1	2.5	5.8
	TTA120FW	2	575	3	6.1	40	1	575	1	2	5.1
12.5	TTA150E3	2	208-230	3	22.4	149	1	208-230	1	5	14.4
	TTA150E4	2	460	3	10.6	75	1	460	1	2.5	5.8
	TTA150EK	2	380	3	11.3	88	1	380	1	3.4	7.8
	TTA150EW	2	575	3	8.6	54	1	575	1	2	5.1
15	TTA180E3	2	208-230	3	25	164	2	208-230	1	5	14.4
	TTA180E4	2	460	3	12.2	100	2	460	1	2.5	5.8
	TTA180EK	2	380	3	14.3	94.3	2	380	1	3.4	7.8
	TTA180EW	2	575	3	9.6	78	2	575	1	2	5.1
15	TTA180F3	2	208-230	3	25	164	2	208-230	1	5	14.4
	TTA180F4	2	460	3	12.2	100	2	460	1	2.5	5.8
	TTA180FK	2	380	3	14.3	94.3	2	380	1	3.4	7.8
	TTA180FW	2	575	3	9.9	78	2	575	1	2	5.1
20	TTA240E3	2	208-230	3	39.1	267	2	208-230	1	5	14.4
	TTA240E4	2	460	3	18.6	142	2	460	1	2.5	5.8
	TTA240EK	2	380	3	23.1	160	2	380	1	3.4	7.8
	TTA240EW	2	575	3	15.4	103	2	575	1	2	5.1
20	TTA240F3	2	208-230	3	39.1	267	2	208-230	1	5	14.4
	TTA240F4	2	460	3	19.8	142	2	460	1	2.5	5.8
	TTA240FK	2	380	3	23.1	160	2	380	1	3.4	7.8
	TTA240FW	2	575	3	15.8	103	2	575	1	2	5.1

**Table 5. Electrical characteristics — compressor and condenser fan motors — 60 Hz (continued)**

Tons	Unit Model Number	Compressor Motor					Condenser Fan Motor				
		No.	Volts	Phase	Amps		No.	Volts	Phase	Amps	
					RLA	LRA				FLA	LRA
					(Ea.)	(Ea.)				(Ea.)	(Ea.)
25	TTA300F3	2	208-230	3	53.6	245	2	208-230	1	5	14.4
	TTA300F4	2	460	3	20.7	125	2	460	1	2.5	5.8
	TTA300FK	2	380	3	26.4	145	2	380	1	3.4	7.8
	TTA300FW	2	575	3	16.4	100	2	575	1	2	5.1

**Note:** Electrical characteristics reflect nameplate values and are calculated in accordance with cULus and ARI specifications.

**Table 6. Unit wiring — condensing units — 60 Hz**

Tons	Unit Model Number	Unit Operating Voltage Range	Minimum Circuit Ampacity	Maximum Fuse or HACR Circuit Breaker Size
6	TTA073G3	187-253	30.5	50
	TTA073G4	414-506	13	20
	TTA073GK	342-418	17	25
	TTA073GW	518-632	10.5	15
7.5	TTA090G3	187-253	34.4	45
	TTA090G4	414-506	17.7	25
	TTA090GK	342-418	20.6	25
	TTA090GW	518-632	14.5	20
7.5	TTA090H3	187-253	36	50
	TTA090H4	414-506	16.9	20
	TTA090HK	342-418	21.8	30
	TTA090HW	518-632	12.2	15
10	TTA120G3	187-253	42.6	60
	TTA120G4	414-506	23.4	30
	TTA120GK	342-418	28.2	35
	TTA120GW	518-632	17.5	25
10	TTA120H3	187-253	41	45
	TTA120H4	414-506	20.1	25
	TTA120HK	342-418	26.9	30
	TTA120HW	518-632	15.5	20
10	TTA120F3	187-253	44.6	50
	TTA120F4	414-506	24.1	30
	TTA120FW	518-632	15.7	20
12.5	TTA150E3	187-253	55.4	70
	TTA150E4	414-506	26.4	30
	TTA150EK	342-418	28.8	35
	TTA150EW	518-632	21.4	25
15	TTA180E3	187-253	66.3	80
	TTA180E4	414-506	32.5	40
	TTA180EK	342-418	39	45
	TTA180EW	518-632	25.6	30
15	TTA180F3	187-253	66.3	80
	TTA180F4	414-506	32.5	40
	TTA180FK	342-418	39	45
	TTA180FW	518-632	26.3	30

## Electrical Data

**Table 6. Unit wiring – condensing units – 60 Hz (continued)**

Tons	Unit Model Number	Unit Operating Voltage Range	Minimum Circuit Ampacity	Maximum Fuse or HACR Circuit Breaker Size
20	TTA240E3	187-253	98	110
	TTA240E4	414-506	46.9	60
	TTA240EK	342-418	58.8	70
	TTA240EW	518-632	38.7	45
20	TTA240F3	187-253	98	110
	TTA240F4	414-506	49.6	60
	TTA240FK	342-418	58.8	70
	TTA240FW	518-632	39.6	45
25	TTA300F3	187-253	130.6	150
	TTA300F4	414-506	51.6	60
	TTA300FK	342-418	66.2	70
	TTA300FW	518-632	40.9	45

**Notes:**

1. Electrical characteristics reflect nameplate values and are calculated in accordance with cULus and ARI specifications. 7.5 and 10 ton values are system rated; 12.5 - 25 ton values are condensing unit only rated.
2. HACR type circuit breaker per NEC.

**Table 7. Electrical characteristics – compressor and condenser fan motors – 50 Hz**

Tons	Unit Model Number	Compressor Motor					Condenser Fan Motor				
		No.	Volts	Phase	Amps		No.	Volts	Phase	Amps	
					RLA (Ea.)	LRA (Ea.)				RLA (Ea.)	LRA (Ea.)
5	TTA061GD	1	380-415-50	3	8.9	67.1	1	380-415-50	1	1.6	3.8
6.25	TTA076GD	1	380-415-50	3	12.5	101	1	380-415-50	1	1.6	3.8
	TTA076HD	2	380-415-50	3	6.7	43	1	380-415-50	1	1.6	3.8
8.33	TTA101GD	1	380-415-50	3	19	142	1	380-415-50	1	1.9	5.8
	TTA101HD	2	380-415-50	3	8	51.5	1	380-415-50	1	1.9	5.8
	TTA101FD	2	380-415-50	3	9.9	64	1	380-415-50	1	1.9	5.8
10.4	TTA126ED	2	380-415-50	3	10.9	75	1	380-415-50	1	1.9	5.8
13	TTA156ED	2	380-415-50	3	12.5	101	2	380-415-50	1	1.9	5.8
	TTA156FD	2	380-415-50	3	12.5	101	2	380-415-50	1	1.9	5.8
16.7	TTA201ED	2	380-415-50	3	19.1	142	2	380-415-50	1	1.9	5.8
	TTA201FD	2	380-415-50	3	19.1	142	2	380-415-50	1	1.9	5.8
20.9	TTA251FD	2	380-415-50	3	20.7	118	2	380-415-50	1	1.9	5.8

**Note:** Electrical characteristics reflect nameplate values and are calculated in accordance with UL and ARI specifications.

**Table 8. Unit wiring – condensing units – 50 Hz**

Tons	Unit Model Number	Unit Operating Voltage	Maximum Circuit Ampacity	Maximum Fuse Size or Maximum Circuit Breaker
5	TTA061GD	380/415	12.7	20
6.25	TTA076GD	380/415	17.3	25
	TTA076HD	380/415	16.7	20
8.33	TTA101GD	380/415	25.7	40
	TTA101HD	380/415	19.9	25
	TTA101FD	380/415	24.2	30
10.4	TTA126ED	380/415	26.4	30
13	TTA156ED	380/415	32	40
	TTA156FD	380/415	32	40

**Table 8. Unit wiring – condensing units – 50 Hz (continued)**

16.7	TTA201ED	380/415	46.9	60
	TTA201FD	380/415	46.9	60
20.9	TTA251FD	380/415	50.4	60

**Note:** HACR type circuit breaker per NEC

# Charging Charts and Superheat

Figure 28. TTA061G

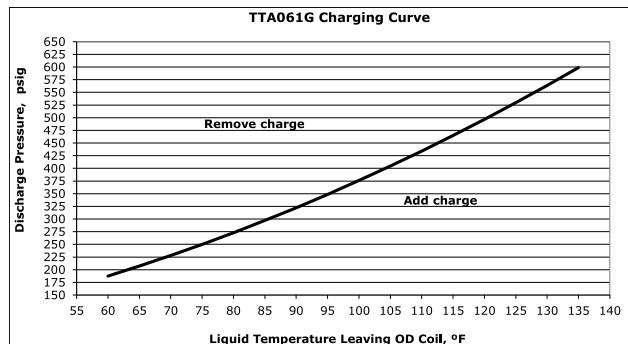


Figure 29. TTA073G

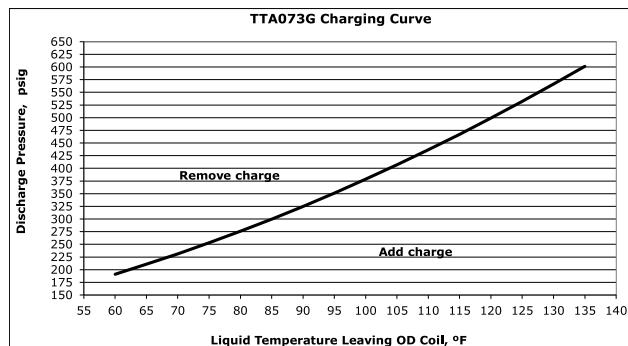


Figure 30. TTA076G

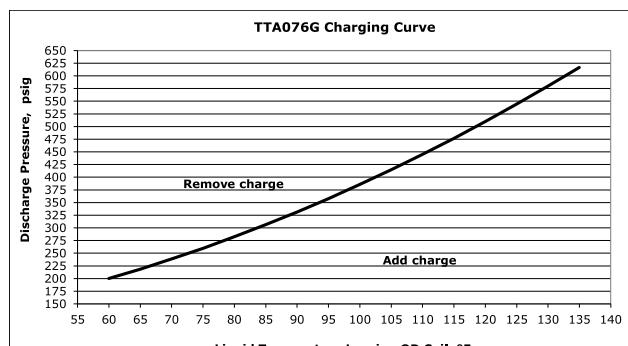


Figure 31. TTA076H

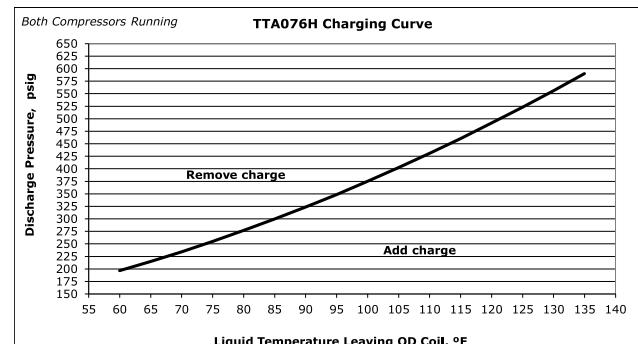


Figure 32. TTA090G



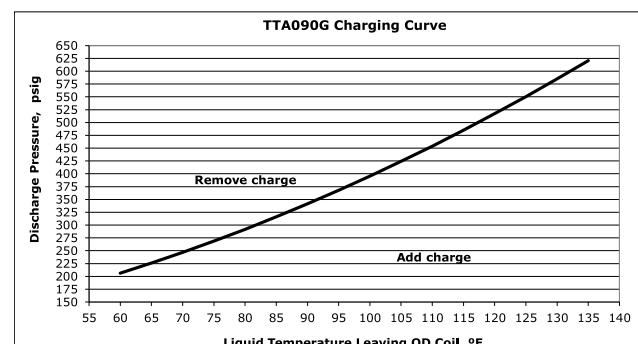



Figure 33. TTA090H

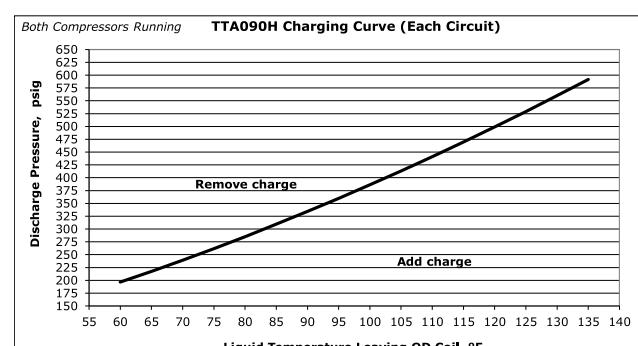


**Figure 34. TTA101F**

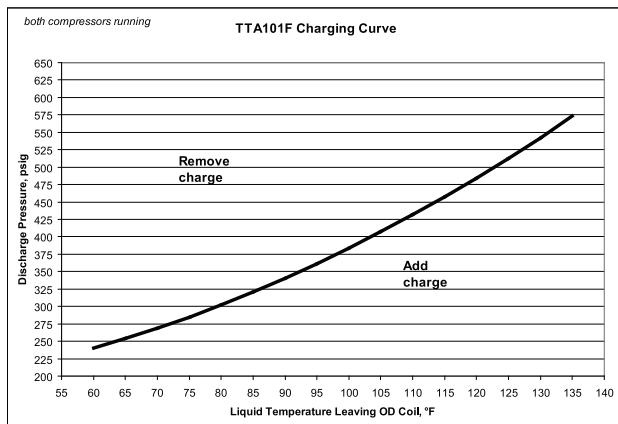


**Figure 35. TTA101G**

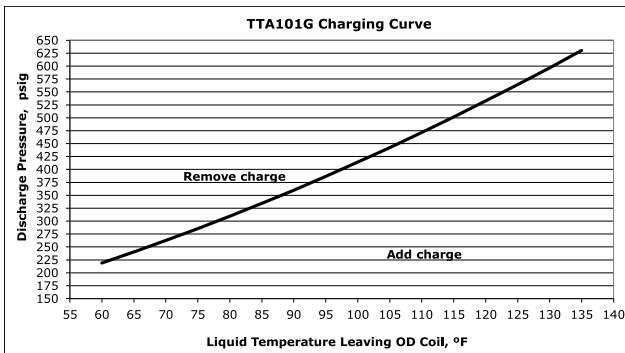


**Figure 36. TTA101H**

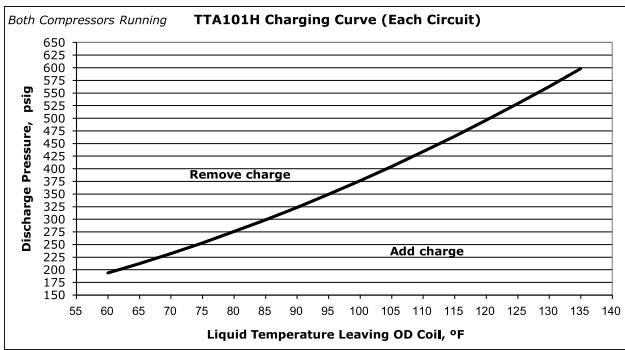


**Figure 37. TTA120G**

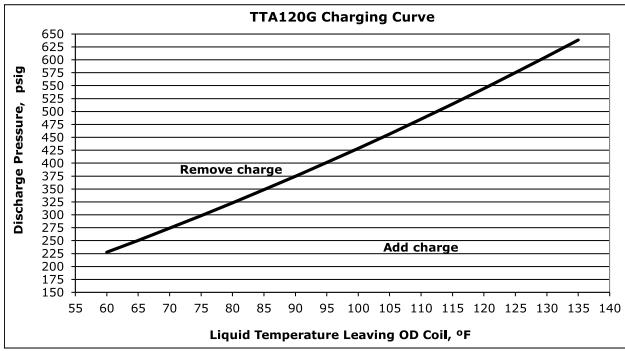


**Figure 38. TTA120F**

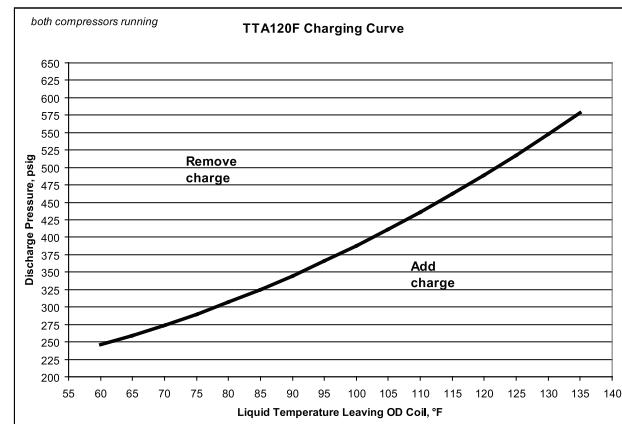

**Figure 39. TTA120H**

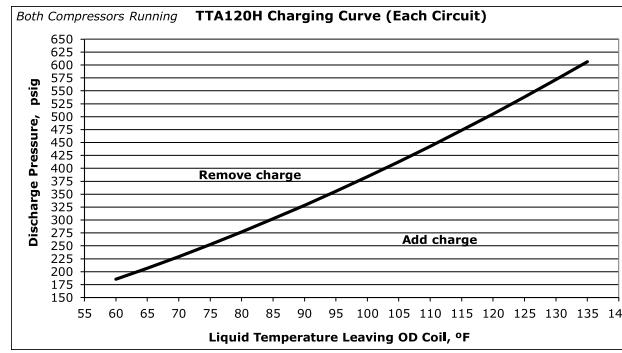

**Figure 40. TTA126E**

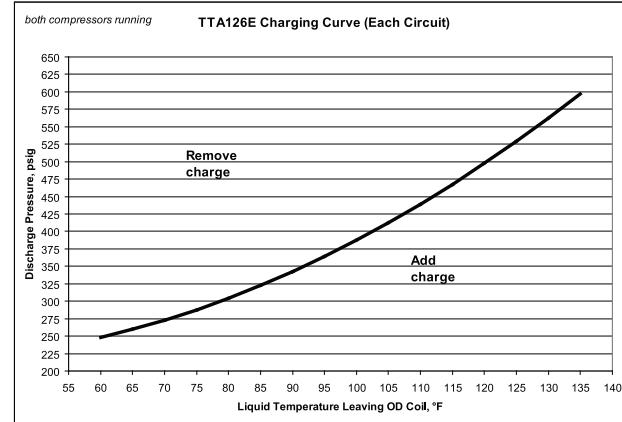

## Charging Charts and Superheat

Figure 41. TTA150E

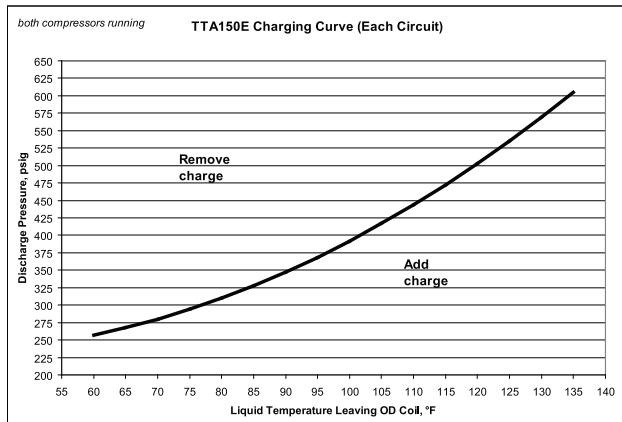


Figure 44. TTA180E

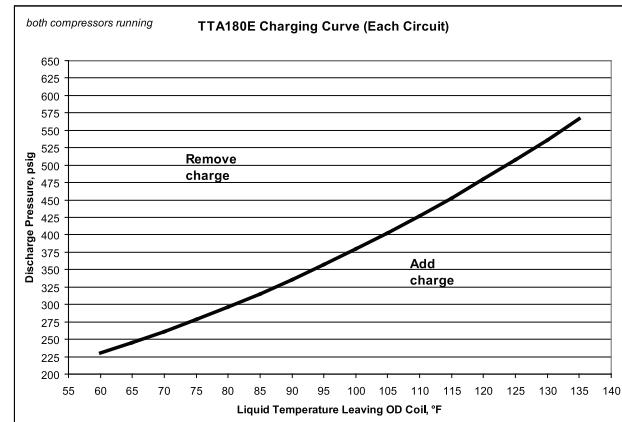


Figure 42. TTA156E

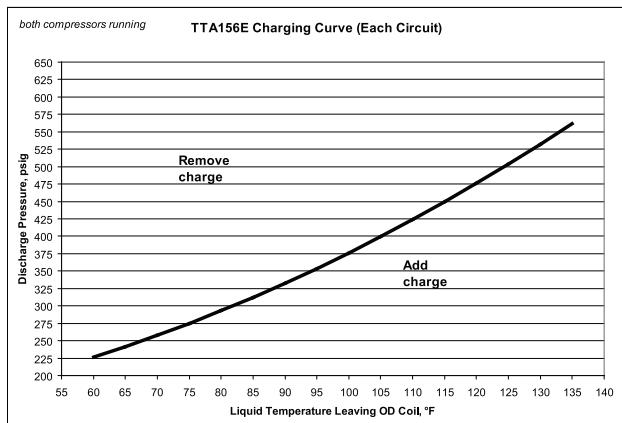


Figure 45. TTA180F

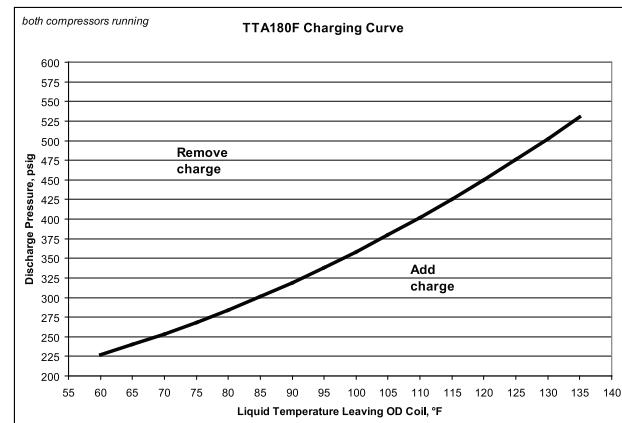


Figure 43. TTA156F



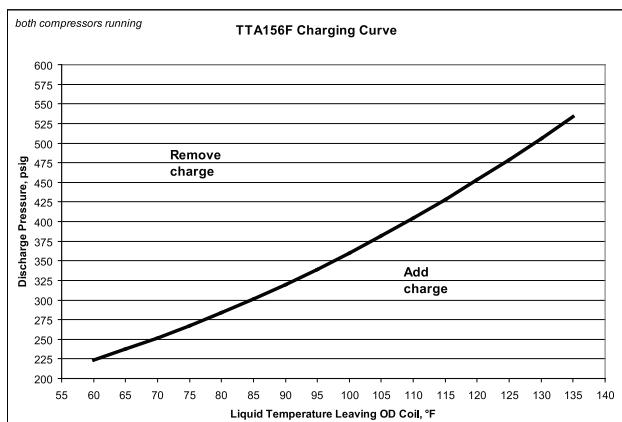



Figure 46. TTA201E

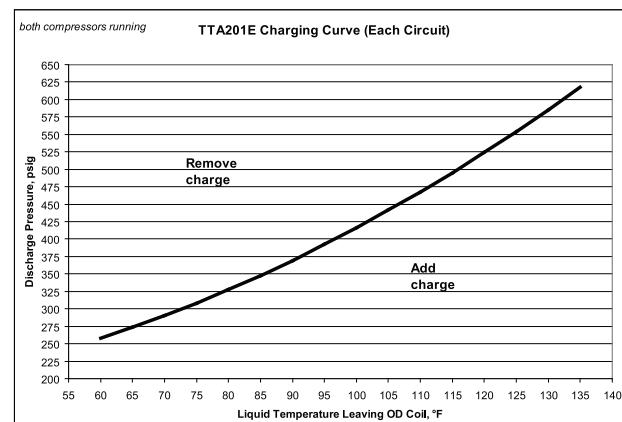


**Figure 47. TTA201F**

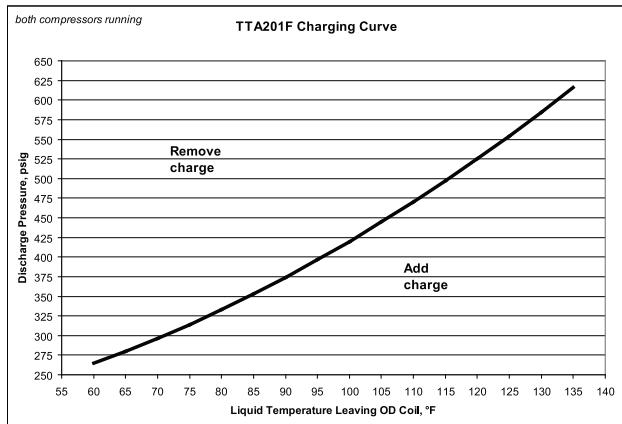


**Figure 50. TTA251F**

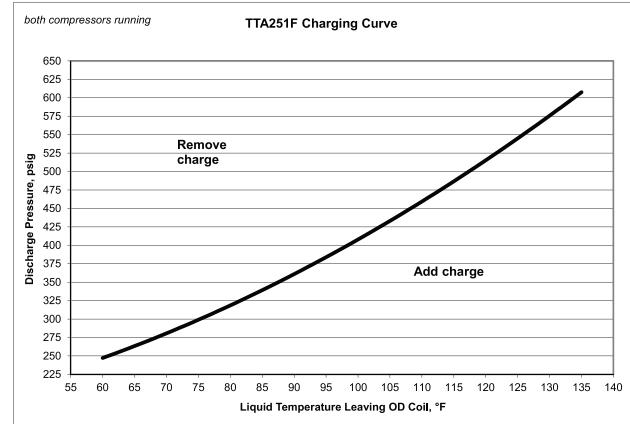


**Figure 48. TTA240E**

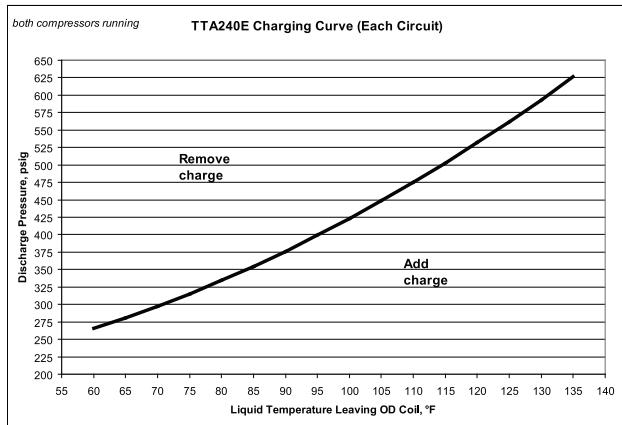

**Figure 51. TTA300F**

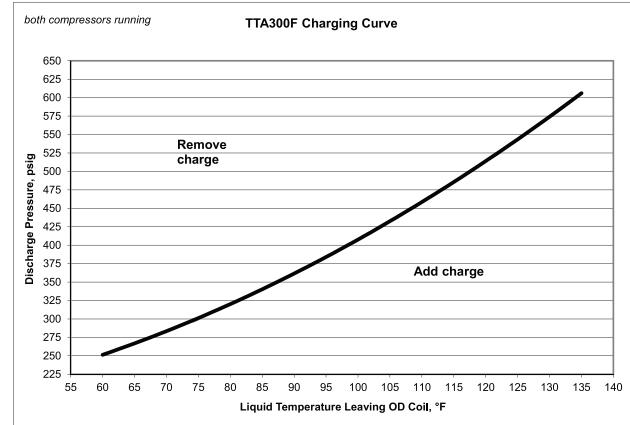

**Figure 49. TTA240F**

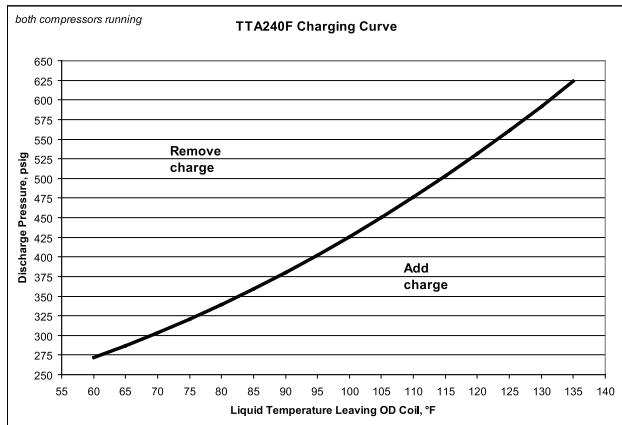

**Table 9. TTA superheat with matched TWE air handler**

Condenser	Air Handler	Cooling Superheat	
		Circuit 1	Circuit 2
TTA061G	TWE076D	13.23	—
TTA073G	TWE090D	13.23	—

## Charging Charts and Superheat

---

**Table 9. TTA superheat with matched TWE air handler (continued)**

Condenser	Air Handler	Cooling Superheat	
		Circuit 1	Circuit 2
TTA076G	TWE076D	15.51	—
TTA076H	TWE076E	10.44	10.58
TTA090G	TWE090D	15.51	—
TTA090H	TWE090E	10.44	10.58
TTA101G	TWE101D	13.68	—
TTA101H	TWE101E	15.19	16.72
TTA101F	TWE101D	11.4	—
TTA120G	TWE120D	13.68	—
TTA120H	TWE120E	15.19	16.72
TTA120F	TWE120D	11.4	—
TTA126E	TWE126E	13.6	13.6
TTA150E	TWE150E	13.6	13.6
TTA156E	TWE156E	18.4	18.4
TTA156F	TWE156E	19.1	—
TTA180E	TWE180E	18.4	18.4
TTA180F	TWE180E	19.1	—
TTA201E	TWE201E	15.2	15.2
TTA201F	TWE201E	12.9	—
TTA240E	TWE240E	15.2	15.2
TTA240F	TWE240E	12.9	—
TTA251F	TWE251E	16.2	—
TTA300F	TWE251E	16.2	—

**Notes:**

1. An adjustable TXV is provided for each circuit in the TWE and TWA models. If the application causes the superheat to deviate from the values shown above by more than 1 degree - after the system has achieved steady state - the TXV should be adjusted to provide the values shown as measured at the compressor.
2. The values given above have been tested and are approved for the matched sets shown. If an alternate combination is used, an expansion device should be used that provides 16-20°F degrees of superheat measured at the compressor.
3. Check and adjust superheat using this table, then compare with charging chart to determine if charge corrections are necessary.

# Installation Checklist

Complete this checklist once the unit is installed to verify that all recommended procedures have been accomplished before starting the system. Do not operate the system until all items covered by this checklist are complete.

- Inspect unit location for proper required service clearances.
- Inspect unit location for proper free air clearances.
- Inspect unit location for secure, level mounting position.
- Remove coil protection boards on microchannel units.

## Refrigerant Piping

- Properly sized/constructed liquid and suction lines connected to stubs at both the indoor and outdoor units?

- Insulated the entire suction line?
- Insulated portions of liquid line exposed to extremes in temperature?
- Performed initial leak test?
- Evacuated each refrigerant circuit to 500 microns?
- Charged each circuit with proper amount of R-410A?

## Electrical Wiring

- Provided unit power wiring (with disconnect) to proper terminals in the unit control section?
- Installed system indoor thermostat?
- Installed system low voltage interconnecting wiring to proper terminals of outdoor unit, indoor unit and system thermostat?

# Pre-Start

## Control Circuit Features

*Note: Not all of these features may be required for your unit, check electrical schematic.*

### Discharge Temperature Limit (DTL)

The control's sensor is located on the discharge line. This device will shut off the compressor and the outdoor fan(s) if the discharge temperature exceeds the DTL setting. Once the discharge temperature has returned to normal, the compressor will cycle back on.

### Low Outdoor Ambient Cooling

The Evaporator Defrost Control is standard equipment on Air Handlers and will permit low ambient cooling down to 50°F. For cooling operation down to 0°F, use an Accessory Head Pressure Control on the outdoor unit.

### Evaporator Defrost Control (EDC)

This control is located in the Air Handler. The control's sensing tube is embedded vertically in the evaporator coil, near the center. This device will stop the compressor if the indoor coil temperature drops below its setting. The indoor air will still circulate across the coil bringing the temperature of the coil back up to the cut-in temperature of the evaporator defrost control.

### Low Pressure Cut-Out (LPCO)

This control's sensor is located in the suction (gas) line, near the compressor. This control will stop the compressor and the outdoor fans if suction pressure

drops below the Low Pressure Cut-Out setting. Once the suction pressure has returned to normal, the compressor and outdoor fans will cycle back on.

### High Pressure Cut-Out (HPCO)

This control's sensor is located in the discharge line. This device will shut off the compressor and the outdoor fan(s) if the discharge pressure exceeds the High Pressure Cut-Out's setting. Once the discharge pressure has returned to normal, the compressor will cycle back on.

#### ⚠ WARNING

##### Prevent Injury!

**Due to agency safety requirements, no schrader core is to be installed beneath the HPCO. Removal of the HPCO without evacuating the system charge could cause injury and release of refrigerant.**

### Internal Overload Protector (IOL)

This device is embedded in the compressor. It will shut off the compressor if the discharge temperature of the compressor exceeds its design trip temperature.

***Note: The IOL will put the compressor back in operation once the compressor motor heat has dropped below the trip setting; however, a check of the refrigerant and electrical systems should be made to determine the cause and be corrected.***

# Start-Up

## Electromechanical Controls

The 24-volt, electromechanical controls feature a control transformer and contactor pressure lugs for power wiring. Once the unit is properly installed and pre-start procedures are complete, start the unit by turning the System Switch on the indoor thermostat to either **HEAT**, **COOL** or **AUTO**. The system should operate normally.

### NOTICE

#### Equipment Damage!

Ensure the disconnect for the indoor air handler is closed before operating the system. Operating the outdoor unit without the indoor fan energized can cause unit trip-out on high pressure control and/or liquid flood back to the compressor.

## General

Operation of the system cooling (and optional heating) cycles is controlled by the position of the system switch on the room thermostat. Once the system switch is placed in either the **HEAT** or **COOL** position, unit operation is automatic. The optional automatic changeover thermostat, when in the **AUTO** position, automatically changes to heat or cool with sufficient room temperature change.

## Evaporator Fan (Indoor Supply Air)

The evaporator fan is controlled by an **ON/AUTO** switch on the room thermostat. With the switch positioned at **AUTO** and the system operating in the cooling mode, fan operation coincides with the cooling run cycles. If the system is equipped with heat and is operating in the heating mode while the fan switch is at **AUTO**, fan operation coincides with the heating run cycles. When the fan switch is positioned at **ON**, fan operation is continuous.

## Cooling Mode

With the disconnect switch in the **ON** position, current is supplied to the compressor sump heater(s), phase monitor and control transformer. The sump heater(s) supplies heat to the compressor(s) during the **“Off”** cycle. The phase monitor looks at the incoming power to verify that there is no reversed phase, no phase imbalance, and no loss of phase. If the phase monitor detects any of these three conditions, it will shut off control voltage. The transformer steps down the line voltage to 24V for the low voltage control circuit. When the room thermostat system switch is positioned at **COOL** and the fan switch is at **AUTO**, the compressor contactor energizes on a call for cooling. When the contacts of the compressor contactor close, operation of the compressor and condenser fan begins. The

evaporator fan contactor also energizes on a call for cooling and initiates evaporator fan operation.

On units with dual circuits, the second stage of cooling is initiated as a result of the 2-stage thermostat calling for additional cooling.

## ReliaTel Controls

The ReliaTel™ Control is a microelectronic control feature, which provides operating functions that are significantly different than conventional Electromechanical units. The ReliaTel™ Refrigeration Module (RTRM) uses Proportional/Integral control algorithms to perform specific unit functions that govern the unit operation in response to application conditions.

The RTRM provides compressor anti-short cycle timing functions through minimum **“Off”** and **“On”** timing to increase reliability, performance and to maximize unit efficiency. Upon power initialization, the RTRM performs self-diagnostic checks to ensure that all internal controls are functioning. It checks the configuration parameters against the components connected to the system. The system LED located on the RTRM module is turned **“On”** within one second after power-up if all internal operations are okay.

Once the unit is properly installed and pre-start procedures are complete, start the unit by turning the System Switch on the indoor thermostat to either **HEAT**, **COOL** or **AUTO**. The system should operate normally.

### NOTICE

#### Equipment Damage!

Ensure the disconnect for the indoor air handler is closed before operating the system. Operating the outdoor unit without the indoor fan energized can cause unit trip-out on high pressure control and/or liquid flood back to the compressor.

## Control Cooling Mode

### For Zone Sensor Control

When the system switch is set to the **COOL** position and the zone temperature rises above the cooling setpoint, the RTRM energizes the compressor contactor, provided the high and low pressure and the discharge temperature limit controls are closed. When the compressor contacts close, the compressor and the outdoor fan motor start to maintain the zone temperature to within  $\pm 2^{\circ}\text{F}$  of the sensor setpoint at the sensed location. On units with dual circuits, the second stage of cooling is initiated as a result of the Proportional/Integral control algorithms calling for additional cooling.

### For Thermostat Control

When the room thermostat system switch is positioned at **COOL** and the fan switch is at **AUTO**, the RTRM energizes the compressor contactor, provided the high and low pressure and the discharge temperature limit controls are closed. When the contacts of the compressor contactor close, operation of the compressor and condenser fan begins. The evaporator fan contactor also energizes on a call for cooling and initiates evaporator fan operation. On units with dual circuits, the second stage of cooling is initiated as a result of the 2-stage thermostat calling for additional cooling.

**Note:** *Irregular unit operation may occur when the unit is controlled with a triac-switching thermostat. Please review the approved thermostat vendor list for all recommended relay-switching thermostats.*

### Control Evaporator Fan Operation

When the fan selection switch is set to the **AUTO** position, the RTRM energizes the evaporator fan relay coil approximately 1 second after energizing the compressor contactor coil in the cooling mode. In the heating mode, the RTRM energizes the evaporator fan relay coil approximately 1 second before energizing the electric heat contactors.

The RTRM de-energizes the evaporator fan relay coil approximately 60 seconds on dual compressor units and 80 seconds on single compressor units after the

cooling requirement has been satisfied to enhance unit efficiency. When the heating cycle is terminated, the evaporator fan relay coil is de-energized at the same time as the heater contactors. When the fan selection switch is set to the **ON** position, the RTRM keeps the evaporator fan relay coil energized for continuous fan motor operation.

### Control Heating Operation

Electric heat is factory disabled on all split system units with ReliaTel control (jumper placed between J2-1 and J2-2 RTRM inputs). To configure the unit for electric heat, cut or remove the jumper wire between J2-1 and J2-2 on the RTRM. All split system units with ReliaTel control are also configured from the factory for only 1-stage of electric heat (jumper placed between J1-3 and J1-6 RTRM inputs). To configure the unit for 2-stages of electric heat, cut or remove the jumper placed between J1-3 and J1-6 RTRM inputs.

When the system switch is set to the **HEAT** position and heating is required, the RTRM energizes the Heat 1 relay coil on the RTRM. When the Heat 1 relay contacts close, the first stage electric heat contactor is energized. If the first stage of electric heat cannot satisfy the heating requirement, the RTRM energizes the Heat 2 relay coil on the RTRM. When the Heat 2 relay contacts close, the second stage electric heat contactor is energized. The first and second stages of heat are cycled **“On”** and **“Off”** as required to maintain the zone.

# Service Test Modes for ReliaTel™ Controls

## Test Modes

Upon power initialization, the RTRM performs self-diagnostic checks to ensure that all internal controls are functional. It also checks the configuration parameters against the components connected to the system. The system LED located on the RTRM module is turned “On” within one second of power-up if internal operation is okay.

Use one of the following “Test” procedures to bypass some time delays and to start the unit at the control panel. Each step of unit operation can be activated individually by temporarily shorting across the “Test” terminals for 2 to 3 seconds. The system LED located on the RTRM module will blink when the test mode has been initiated. The unit can be left in any “Test” step for up to one hour before it will automatically terminate, or it can be terminated by opening the main power disconnect switch. Once the test mode has been terminated, the system LED will glow continuously and the unit will revert to the “System” control.

There are three methods in which the “Service Test” can be cycled at LTB-Test 1(T1) and LTB-Test 2 (T2).

**Table 10. Service test guide for component operation**

TEST STEP	MODE	FAN	COMP 1	COMP 2	HEAT 1	HEAT 2	OHMS
1	Fan	On	Off	Off	Off	Off	2.2K
2	Cool 1	On	On <sup>(a)</sup>	Off	Off	Off	4.7K
3 <sup>(b)</sup>	Cool 2	On	On <sup>(a)</sup>	On <sup>(a)</sup>	Off	Off	6.8K
4 <sup>(b)</sup>	Heat 1	On	Off	Off	On	Off	10K
5 <sup>(b)</sup>	Heat 2	On	Off	Off	On	On	15K

(a) The condenser fans will operate any time a compressor is ON.

(b) Steps for optional accessories and non-applicable modes in unit will be skipped.

## Auto Test Mode

This method is not recommended for start-up due to the short timing between individual component steps. This method initiates the different components of the unit, one at a time, when a fixed jumper is installed across the test terminals.

## Step Test Mode

This method initiates the different components of the unit, one at a time, by temporarily shorting across the two test terminals for 2 to 3 seconds.

For the initial start-up of the unit, this method allows the technician to cycle a component “On” and have up to one hour to complete the check. Service Test Mode will be ignored if a short is present across Test 1 and Test 2 at start-up.

## Resistance Test Mode

This method can be used for start-up when a decade box for variable resistance outputs is available. This method initiates the different components of the unit, one at a time, when a specific resistance value is placed across the two test terminals. The unit will remain in the specific test mode for approximately one hour even though the resistance is left on the test terminals.

# Troubleshooting

## Troubleshooting ReliaTel™ Controls

### ⚠ WARNING

#### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

The RTRM has the ability to provide the service personnel with some unit diagnostics and system status information.

Before turning the main power disconnect switch "Off," follow the steps below to check the ReliaTel™ Refrigeration Module (RTRM). All diagnostics & system status information stored in the RTRM will be lost when the main power is turned "Off".

To prevent injury or death from electrocution, it is the responsibility of the technician to recognize this hazard and use extreme care when performing service procedures with the electrical power energized.

**Note:** The J6 & J7 screw terminals must be tightened in order to accurately measure voltage in the required steps.

1. Verify that the system LED on the RTRM is burning continuously. If the LED is lit, go to Step 3.
2. If the LED is not lit, verify that 24 VAC is present between J1-1 and J1-2. If 24 VAC is present, proceed to Step 3. If 24 VAC is not present, check the unit main power supply, check transformer (TNS1). Proceed to Step 3 if necessary.
3. Utilizing "Method 1," p. 48 or "Method 2," p. 49 in the System Status Checkout Procedure section, check the following:
  - System status
  - Heating status
  - Cooling status

**Note:** If a System failure is indicated, proceed to Step 4. If no failures are indicated, proceed to Step 5.

4. If a System failure is indicated, recheck Step 1 and Step 2. If the LED is not lit in Step 1, and 24 VAC is present in Step 2, then the RTRM has failed. Replace the RTRM.
5. If no failures are indicated, use one of the TEST mode procedures described in the "Service Test Modes chapter," p. 47 to start the unit. This procedure will allow you to check all of the RTRM

outputs, and all of the external controls (relays, contactors, etc.) that the RTRM outputs energize, for each respective mode. Proceed to Step 6.

6. Step the system through all of the available modes, and verify operation of all outputs, controls, and modes. If a problem in operation is noted in any mode, you may leave the system in that mode for up to one hour while troubleshooting. Refer to the sequence of operations for each mode, to assist in verifying proper operation. Make the necessary repairs and proceed to Step 7 and Step 8.
7. If no abnormal operating conditions appear in the test mode, exit the test mode by turning the power "Off" at the main power disconnect switch.
8. Refer to the individual component test procedures if other microelectronic components are suspect.

## System Status Checkout Procedure

"System Status" is checked by using one of the following two methods:

### Method 1

If the Zone Sensor Module (ZSM) is equipped with a remote panel with LED status indication, you can check the unit within the space. If the ZSM does not have LED's, use "Method 2," p. 49. BAYSENS010B, BAYSENS011B, BAYSENS119A, BAYSENS020A, BAYSENS021A, BAYSENS023A, BAYSENS109 and BAYSENS110 all have the remote panel indication feature. The LED descriptions are listed below.

- **LED 1 (System)**
  - "On" during normal operation.
  - "Off" if a system failure occurs or the LED fails.
  - "Flashing" indicates test mode
- **LED 2 (Heat)**
  - "On" when the heat cycle is operating.
  - "Off" when the heat cycle terminates or the LED fails.
  - "Flashing" indicates a heating failure.
- **LED 3 (Cool)**
  - "On" when the cooling cycle is operating.
  - "Off" when the cooling cycle terminates or the LED fails.
  - "Flashing" indicates a cooling failure.

The following information describes the complete listing of failure indication causes.

## System Failure

Check the voltage between terminals 6 and 9 on J6, it should read approximately 32 VDC. If no voltage is present, a System failure has occurred. Refer to Step 4 in the previous section for the recommended troubleshooting procedure.

## Cooling Failure

1. Cooling and heating set point (slide pot) on the zone sensor has failed. Refer to the "Programmable & Digital Zone Sensor Test," p. 50.
2. Zone temperature thermistor ZTEMP on ZTS failed. Refer to the "Programmable & Digital Zone Sensor Test," p. 50.
3. CC1 or CC2 24 VAC control circuit has opened, check CC1 & CC2 coils, and any of the controls below that apply to the unit (HPC1, HPC2, DTL1, DTL2).
4. LPC1 has opened during the 3 minute minimum "on time" during 4 consecutive compressor starts, check LPC1 or LPC2 by testing voltage between the J1-8 & J3-2 terminals on the RTRM and ground. If 24 VAC is present, the LPCs have not tripped. If no voltage is present, LPCs have tripped.

## Simultaneous Heat and Cool Failure

### ⚠ WARNING

#### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

- Emergency Stop is activated.

## Method 2

The second method for determining system status is done by checking voltage readings at the RTRM (J6). The system indication descriptions and the approximate voltages are listed below.

## System Failure

Measure the voltage between terminals J6-9 & J6-6.

- **Normal Operation** = approximately 32 VDC
- **System Failure** = less than 1 VDC, approximately 0.75 VDC
- **Test Mode** = voltage alternates between 32 VDC & 0.75 VDC

## Heat Failure

Measure the voltage between terminals J6-7 & J6-6.

- **Heat Operating** = approximately 32 VDC
- **Heat Off** = less than 1 VDC, approximately 0.75 VDC
- **Heating Failure** = voltage alternates between 32 VDC & 0.75 VDC

## Cool Failure

Measure the voltage between terminals J6-8 & J6-6.

- **Cool Operating** = approximately 32 VDC
- **Cool Off** = less than 1 VDC, approximately 0.75 VDC
- **Cooling Failure** = voltage alternates between 32 VDC & 0.75 VDC

To use LED's for quick status information at the unit, purchase a BAYSENS010B ZSM and connect wires with alligator clamps to terminals 6 through 10. Connected each respective terminal wire (6 through 10) from the Zone Sensor to the unit J6 terminals 6 through 10.

**Note:** If the system is equipped with a programmable zone sensor, (BAYSENS119A, or BAYSENS023A), the LED indicators will not function while the BAYSENS010A is connected.

## Temperature Tests

**Note:** These procedures are not for programmable or digital models and are conducted with the Zone Sensor Module electrically removed from the system.

## Test 1 - Zone Temperature Thermistor (ZTEMP)

This component can be tested by measuring the resistance between terminals 1 and 2 on the Zone Temperature Sensor. See Table 11, p. 49 for typical indoor temperatures, and corresponding resistive values.

Table 11. Typical indoor temperatures and values

Zone Temperature	Nominal Resistance
50°F or 10.0°C	19.9 Kohms
55°F or 12.8°C	17.47 Kohms
60°F or 15.6°C	15.3 Kohms
65°F or 18.3°C	13.49 Kohms
70°F or 21.1°C	11.9 Kohms
75°F or 23.9°C	10.50 Kohms
80°F or 26.7°C	9.3 Kohms
85°F or 29.4°C	8.25 Kohms
90°F or 32.2°C	7.3 Kohms

## Test 2 - Cooling Set Point (CSP) and Heating Set Point (HSP)

Cool SP = Terminals 2 and 3

## Troubleshooting

Range = 100 to 900 Ohms approximate

**Heat SP** = Terminals 2 and 5

Range = 100 to 900 Ohms approximate

### Test 3 - System Mode and Fan Selection

The combined resistance of the **MODE** selection switch and the **FAN** selection switch can be measured between terminals 2 and 4 on the Zone Sensor. The possible switch combinations are listed in [Table 12](#), p. 50 with their corresponding resistance values.

**Table 12. Test 3 - system mode and fan selection**

Resistance Valves(Ohms)	Zone Sensor Unit/Fan Mode	Local Unit Mode	Local Fan Mode
2.32K	Off/Auto	Off	Auto
4.87K	Cool/Auto	Cool	Auto
7.68K	Auto/Auto	Auto	Auto
10.77K	Off/On	Off	On
13.32K	Cool/On	Cool	On
16.13K	Auto/On	Auto	On
19.48K	Heat/Auto	Heat	Auto
27.93K	Heat/On	Heat	On
35.0K	Emergency Heat/Auto	Emergency Heat	Auto
43.45K	Emergency Heat/On	Emergency Heat	On
Out of Range (Short)	INVALID/Short	Invalid (CV), Auto (VAV)	Invalid
Out of Range (Open)	INVALID/Open	Invalid (CV), Off (VAV)	Invalid

### Test 4 - LED Indicator Test (SYS ON, HEAT, & COOL)

#### ⚠ WARNING

##### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

high resistance in both directions, LED is open. If low in both directions, LED is shorted.

### Method 3

To test LED's with ZSM connected to unit, test voltages at LED terminals on ZSM. A measurement of 32 VDC, across an unlit LED, means the LED has failed.

*Important: Measurements should be made from LED common (ZSM terminal 6 to respective LED terminal).*

### Programmable & Digital Zone Sensor Test

#### Testing Serial Communication Voltage

1. Verify 24 VAC is present between terminals J6-14 & J6-11.

### Method 1

Testing the LED using a meter with diode test function. Test both forward and reverse bias. Forward bias should measure a voltage drop of 1.5 to 2.5 volts, depending on your meter. Reverse bias will show an Over Load, or open circuit indication if LED is functional.

### Method 2

Testing the LED with an analog Ohmmeter. Connect Ohmmeter across LED in one direction, then reverse the leads for the opposite direction. The LED should have at least 100 times more resistance in reverse direction, as compared with the forward direction. If

**⚠ WARNING****Live Electrical Components!**

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

2. Disconnect wires from J6-11 and J6-12. Measure the voltage between J6-11 and J6-12, should be about 32 VDC.
3. Reconnect wires to terminals J6-11 and J6-12. Measure voltage again between J6-11 and J6-12, voltage should flash high and low every 0.5 seconds. The voltage on the low end will measure about 19 VDC, while the voltage on the high end will measure from approximately 24 to 38 VDC.
4. Verify all modes of operation, by running the unit through all of the steps in ["Service Test Modes for ReliaTel Controls," p. 47.](#)
5. After verifying proper unit operation, exit the test mode. Turn the fan on continuously at the ZSM, by pressing the button with the fan symbol. If the fan comes on and runs continuously, the ZSM is good. If you are not able to turn the fan on, the ZSM is defective.

**RLCI Loss of Communications**

If the RLCI loses input from the building management system, the RTRM will control in the default mode after approximately 15 minutes. If the RTRM loses the Heating and Cooling setpoint input, the RTRM will control in the default mode instantaneously. The temperature sensing thermistor in the Zone Sensor Module is the only component required for the "Default Mode" to operate.

**Resetting Cooling and Heating Lockouts**

Cooling Failures and Heating Lockouts are reset in an identical manner. ["Method 1," p. 51](#) explains resetting the system from the space; ["Method 2," p. 51](#) explains resetting the system at the unit.

**Note:** Before resetting Cooling Failures and Heating Lockouts check the Failure Status Diagnostics by the methods previously explained. Diagnostics will be lost when the power to the unit is disconnected.

**Method 1**

To reset the system from the space, turn the **MODE** selection switch at the zone sensor to the **OFF** position. After approximately 30 seconds, turn the **MODE** selection switch to the desired mode, i.e. **HEAT**, **COOL**, or **AUTO**.

**Method 2**

To reset the system at the unit, cycle the unit power by turning the disconnect switch **OFF** and then **ON**

Lockouts can be cleared through the building management system. Refer to the building management system instructions for more information.

**Zone Temperature Sensor (ZTS) Service Indicator**

The ZSM SERVICE LED is a generic indicator that will signal the closing of a Normally Open switch at any time, providing the Indoor Motor (IDM) is operating. This indicator is usually used to indicate an airside fan failure.

The RTRM will ignore the closing of this Normally Open switch for 2 ( $\pm 1$ ) minutes. This helps prevent nuisance SERVICE LED indications.

# Maintenance

## ⚠ WARNING

### Hazardous Voltage w/Capacitors!

Failure to disconnect power and discharge capacitors before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects and discharge all motor start/run capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized. For variable frequency drives or other energy storing components provided by Trane or others, refer to the appropriate manufacturer's literature for allowable waiting periods for discharge of capacitors. Verify with an appropriate voltmeter that all capacitors have discharged.

For additional information regarding the safe discharge of capacitors, see PROD-SVB06A-EN.

## NOTICE

### Operating Under Vacuum!

Failure to follow these instructions will result in compressor failure.

Do not operate or apply power to the compressor while under a vacuum.

Perform all of the indicated maintenance procedures at the intervals scheduled. This will prolong the life of the unit and reduce the possibility of costly equipment failure.

## Monthly

Conduct the following maintenance inspections once per month.

- Check unit wiring to ensure all connections are tight and that the wiring insulation is intact.
- Inspect the condenser coils for dirt and debris. If the coils appear dirty, clean them.
- With the unit operating in the cooling mode, check the suction and discharge pressures and compare them with Pressure Curve values in unit Service Facts. Record these readings on the "Maintenance Log," p. 54.

## Annually (Cooling Season)

The following maintenance procedures must be performed at the beginning of each cooling season to ensure efficient unit operation.

- Perform all of the monthly maintenance inspections.
- With the unit operating, check unit superheat and record the reading in the "Maintenance Log," p. 54.

- Remove any accumulation of dust and/or dirt from the unit casing.
- Remove corrosion from any surface and repaint. Check the gasket around the control panel door to ensure it fits correctly and is in good condition to prevent water leakage.
- Inspect the control panel wiring to ensure that all connections are tight and that the insulation is intact.  
**Note:** Condenser fan motors are permanently lubricated.
- Check refrigerant piping and fittings for leaks
- Inspect the condenser coils for dirt and debris. If the coils appear dirty, clean them.

## Coil Cleaning

Regular coil maintenance, including annual cleaning, enhances the unit's operating efficiency by minimizing:

- compressor head pressure and amperage draw
- water carryover
- fan brake horsepower
- static pressure losses

At least once each year — or more often if the unit is located in a "dirty" environment — clean the coil using the instructions outlined below. Be sure to follow these instructions as closely as possible to avoid damaging the coils.

## Tube and Fin

**Note:** To clean refrigerant coils, use a soft brush and a sprayer. Contact your local Parts Center for appropriate detergents.

1. Remove enough panels from the unit to gain safe access to coil.
2. Straighten any bent coil fins with a fin comb.
3. Remove loose dirt and debris from both sides of the coil with a soft brush.
4. Mix the detergent with water according to the manufacturer's instructions. If desired, heat the solution to 150° F maximum to improve its cleansing capability.
5. Pour the cleaning solution into the sprayer.
6. Spray the leaving-airflow side of the coil first; then spray the opposite side of the coil. Allow the cleaning solution to stand on the coil for five minutes.
7. Rinse both sides of the coil with cool, clean water.
8. Inspect both sides of the coil; if it still appears to be dirty, repeat Step 7 and 8.
9. Reinstall all of the components and panels removed

in Step 1; then restore power to the unit.

10. Using a fin comb, straighten any coil fins that were inadvertently bent during the cleaning process.

## Microchannel (MCHE) Coils

### **NOTICE**

#### **Coil Damage!**

**Failure to follow instructions below could result in coil damage.**

**DO NOT use any detergents with microchannel condenser coils.**

**Use pressurized water or air ONLY, with pressure no greater than 600psi.**

***For additional information regarding the proper microchannel coil cleaning procedure, refer to RT-SVB83\*-EN***

Due to the soft material and thin walls of the MCHE coils, the traditional field maintenance method recommended for Round Tube Plate Fin (RTPF) coils does not apply to microchannel coils. Moreover, chemical cleaners are a risk factor to MCHE due to the material of the coil. The manufacturer does not recommend the use of chemical cleaners to clean microchannel coils. Using chemical cleaners could lead to warranty claims being further evaluated for validity and failure analysis.

The recommended cleaning method for microchannel condenser coils is pressurized water or air with a non-pingpong nozzle and an ECU of at least 180 with pressure no greater than 600 psi. To minimize the risk of coil damage, approach the cleaning of the coil with the pressure washer aimed perpendicular to the face of the coil during cleaning. Optimum clearance between the sprayer nozzle and the microchannel coil is 1"-3".

# Maintenance Log

**Note:** Perform each inspection once per month (during cooling season) while unit is operating

# Wiring Diagram Matrix

Table 13. Wiring schematics R-410A cooling

Model Number	Ton	Refrigerant Circuit	Voltage	Hz	Ph	Schematics		Connection Diagrams	
						ReliaTel	Electromechanical	ReliaTel	Electromechanical
TTA061GD	5	Single	380-415	50	3	2313-0403	2313-0404	2313-0416	2313-0413
TTA073G3	6	Single	208-230	60	3	2313-0403	2313-0404	2313-0416	2313-0413
TTA073G4	6	Single	460	60	3	2313-0403	2313-0404	2313-0416	2313-0413
TTA073GW	6	Single	575	60	3	2313-0403	2313-0404	2313-0416	2313-0413
TTA073GK	6	Single	380	60	3	2313-0403	2313-0404	2313-0416	2313-0413
TTA073H3	6	Dual	208-230	60	3	1213-1507	1213-1503	2313-0416	2313-0413
TTA073H4	6	Dual	460	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA073HW	6	Dual	575	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA073HK	6	Dual	380	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA076GD	6.25	Single	380-415	50	3	2313-0403	2313-0404	2313-0416	2313-0413
TTA090G3	7.5	Single	208-230	60	3	12131506	12131502	1213-1516	1213-1511
TTA090G4	7.5	Single	460	60	3	12131506	12131502	1213-1516	1213-1511
TTA090GW	7.5	Single	575	60	3	12131506	12131502	1213-1516	1213-1511
TTA090GK	7.5	Single	380	60	3	12131506	12131502	1213-1516	1213-1511
TTA090H3	7.5	Dual	208-230	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA090H4	7.5	Dual	460	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA090HW	7.5	Dual	575	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA090HK	7.5	Dual	380	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA101GD	10	Single	380-415	50	3	2313-0403	2313-0404	2313-0416	2313-0413
TTA101HD	10	Dual	380-415	50	3	2313-0435	2313-0433	2313-0436	2313-0434
TTA101FD	10	Manif	380-415	50	3	2313-0411	2313-0412	2313-0418	2313-0415
TTA120G3	10	Single	208-230	60	3	12131506	12131502	1213-1516	1213-1511
TTA120G4	10	Single	460	60	3	12131506	12131502	1213-1516	1213-1511
TTA120GW	10	Single	575	60	3	12131506	12131502	1213-1516	1213-1511
TTA120GK	10	Single	380	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA120H3	10	Dual	208-230	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA120H4	10	Dual	460	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA120HW	10	Dual	575	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA120HK	10	Dual	380	60	3	1213-1507	1213-1503	1213-1517	1213-1512
TTA120F3	10	Manif	208-230	60	3	2313-0411	2313-0412	2313-0418	2313-0415
TTA120F4	10	Manif	460	60	3	2313-0411	2313-0412	2313-0418	2313-0415
TTA120FW	10	Manif	575	60	3	2313-0411	2313-0412	2313-0418	2313-0415
TTA120FK	10	Manif	380	60	3	2313-0411	2313-0412	2313-0418	2313-0415
TTA126ED	10.4	Dual	380-415	50	3	2313-0435	2313-0433	2313-0436	2313-0434
TTA150E3	12.5	Dual	208-230	60	3	2313-0435	2313-0433	2313-0436	2313-0434
TTA150E4	12.5	Dual	460	60	3	2313-0435	2313-0433	2313-0436	2313-0434
TTA150EW	12.5	Dual	575	60	3	2313-0435	2313-0433	2313-0436	2313-0434
TTA150EK	12.5	Dual	380	60	3	2313-0435	2313-0433	2313-0436	2313-0434
TTA156ED	13	Dual	380-415	50	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA156FD	15	Manif	380-415	50	3	2313-0411	2313-0412	2313-0427	2313-0423
TTA180E3	15	Dual	208-230	60	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA180E4	15	Dual	460	60	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA180EW	15	Dual	575	60	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA180EK	15	Dual	380	60	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA180F3	15	Manif	208-230	60	3	2313-0411	2313-0412	2313-0427	2313-0423
TTA180F4	15	Manif	460	60	3	2313-0411	2313-0412	2313-0427	2313-0423
TTA180FW	15	Manif	575	60	3	2313-0411	2313-0412	2313-0427	2313-0423
TTA180FK	15	Manif	380	60	3	2313-0411	2313-0412	2313-0427	2313-0423

## Wiring Diagram Matrix

---

**Table 13. Wiring schematics R-410A cooling (continued)**

Model Number	Ton	Refrigerant Circuit	Voltage	Hz	Ph	Schematics		Connection Diagrams	
						ReliaTel	Electromechanical	ReliaTel	Electromechanical
TTA201ED	16.7	Dual	380-415	50	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA201FD	16.7	Manif	380-415	50	3	2313-0411	2313-0412	2313-0427	2313-0423
TTA240E3	20	Dual	208-230	60	3	2313-0407	2313-0408	2313-0426	2313-0422
TTA240E4	20	Dual	460	60	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA240EW	20	Dual	575	60	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA240EK	20	Dual	380	60	3	2313-0403	2313-0404	2313-0425	2313-0421
TTA240F3	20	Manif	208-230	60	3	2313-0410	2313-0409	2313-0428	2313-0424
TTA240F4	20	Manif	460	60	3	2313-0411	2313-0412	2313-0427	2313-0423
TTA240FW	20	Manif	575	60	3	2313-0411	2313-0412	2313-0427	2313-0423
TTA240FK	20	Manif	380	60	3	2313-0411	2313-0412	2313-0427	2313-0423
TTA251FD	25	Manif	380-415	50	3	2313-0445	2313-0444	2313-0449	2313-0447
TTA300F3	25	Manif	208-230	60	3	2313-0443	2313-0442	2313-0448	2313-0446
TTA300F4	25	Manif	460	60	3	2313-0445	2313-0444	2313-0449	2313-0447
TTA300FW	25	Manif	575	60	3	2313-0445	2313-0444	2313-0449	2313-0447
TTA300FK	25	Manif	380	60	3	2313-0445	2313-0444	2313-0449	2313-0447

**Note:** Wiring diagrams are available through e-Library or by contacting your local sales office.

The manufacturer optimizes the performance of homes and buildings around the world. A business of Ingersoll Rand, the leader in creating and sustaining safe, comfortable and energy efficient environments, the manufacturer offers a broad portfolio of advanced controls and HVAC systems, comprehensive building services, and parts. For more information, visit [www.IRCO.com](http://www.IRCO.com).

The manufacturer has a policy of continuous product and product data improvements and reserves the right to change design and specifications without notice.

©2015 Trane All rights reserved

SS-SVX10E-EN 02 Mar 2015

Supersedes SS-SVX10D-EN (January 2014)

We are committed to using environmentally conscious print practices that reduce waste.

