



# airFiber<sup>®</sup> X

2.4 GHz, 3 GHz, 5 GHz  
Carrier Backhaul Radio

Model: AF-2X, AF-3X, AF-5X

USER GUIDE



# Table of Contents

---

<b>Chapter 1: Overview</b> .....	1
Introduction .....	1
Package Contents .....	1
airFiber Configuration Interface System Requirements .....	1
Hardware Overview .....	1
<b>Chapter 2: Installation</b> .....	3
Installation Requirements .....	3
Installation Overview .....	3
Connecting Power over Ethernet .....	3
airFiber Configuration .....	4
Hardware Installation .....	5
Alignment .....	9
Installer Compliance Responsibility .....	10
<b>Chapter 3: Navigation</b> .....	11
Accessing the airFiber Configuration Interface .....	11
Product Verification .....	12
Interface Tabs .....	12
<b>Chapter 4: Main Tab</b> .....	13
Status .....	13
Ethernet .....	15
Monitor .....	15
<b>Chapter 5: Wireless Tab</b> .....	17
Basic Wireless Settings .....	17
Frequency Settings .....	19
Wireless Security .....	19
<b>Chapter 6: Network Tab</b> .....	20
Management Network Settings .....	20
<b>Chapter 7: Advanced Tab</b> .....	22
Wireless Settings .....	22
DATA Port Ethernet Settings .....	23
MGMT Port Ethernet Settings .....	24

<b>Chapter 8: Services Tab</b> .....	25
Ping Watchdog .....	25
SNMP Agent .....	26
Telnet Server .....	27
NTP Client .....	27
Dynamic DNS .....	27
System Log .....	27
Device Discovery .....	28
<b>Chapter 9: System Tab</b> .....	29
Firmware Update .....	29
Device .....	30
Date Settings .....	30
System Accounts .....	30
Miscellaneous .....	30
Location .....	31
Device Maintenance .....	31
Configuration Management .....	31
<b>Chapter 10: Tools</b> .....	32
Align Antenna .....	32
Discovery .....	33
Ping .....	33
Traceroute .....	33
airView .....	33
<b>Appendix A: Specifications</b> .....	37
<b>Appendix B: Listen Before Talk</b> .....	40
Introduction .....	40
Unrestricted Protocol Description .....	40
Threshold Detection To Determine Occupancy .....	40
Action Taken When Occupancy is Determined .....	40
Opportunities for Other Transmitters to Operate .....	41
<b>Appendix C: Safety Notices</b> .....	42
Electrical Safety Information .....	42
<b>Appendix D: Warranty</b> .....	43
Limited Warranty .....	43

<b>Appendix E: Compliance Information</b> .....	45
Installer Compliance Responsibility .....	45
airFiber AF-2X .....	45
airFiber AF-3X .....	46
airFiber AF-5X .....	48
Frequency Ranges and Power Levels per Country/Region .....	50
RoHS/WEEE Compliance Statement .....	56
<b>Appendix F: Declaration of Conformity</b> .....	57
<b>Appendix G: Contact Information.</b> .....	58
Ubiquiti Networks Support .....	58



# Chapter 1: Overview

## Introduction

Thank you for purchasing the Ubiquiti Networks® airFiber® X Carrier Backhaul Radio. This User Guide is for use with the following models:

Model	Description	Operating Frequency*
AF-2X	2.4 GHz Carrier Backhaul Radio	2400 - 2500 MHz
AF-3X	3 GHz Carrier Backhaul Radio	3300 - 3900 MHz
AF-5X	5 GHz Carrier Backhaul Radio	5150 - 5925 MHz

\* Depends on Regulatory Region. Refer to **“Specifications” on page 37** for more information.

This User Guide provides installation instructions, explains how to set up an airFiber link, and shows how to access and use the airFiber Configuration Interface.

**Note:** Throughout this User Guide, *airFiber X radio* refers to all models listed above. Unless noted otherwise, illustrations for a specific model are applicable to all airFiber X radio models and accessories.

## Package Contents




**TERMS OF USE:** Ubiquiti radio devices must be professionally installed. Shielded Ethernet cable and earth grounding must be used as conditions of product warranty. TOUGH Cable™ is designed for outdoor installations. It is the customer's responsibility to follow local country regulations, including operation within legal frequency channels, output power, and Dynamic Frequency Selection (DFS) requirements.


## airFiber Configuration Interface System Requirements

- Microsoft Windows 7, Windows 8; Linux; or Mac OS X
- Java Runtime Environment 1.6 (or above)
- Web Browser: Mozilla Firefox, Apple Safari, Google Chrome, or Microsoft Internet Explorer 8 (or above)

## Hardware Overview

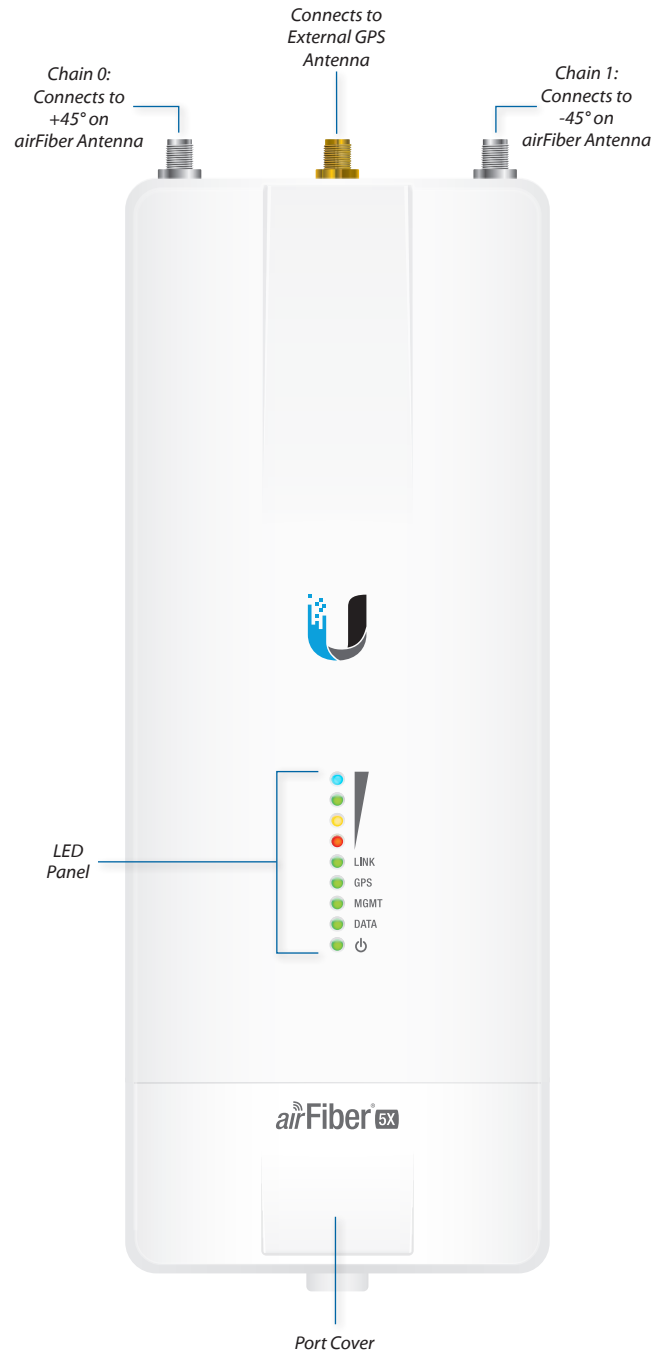

## Ports

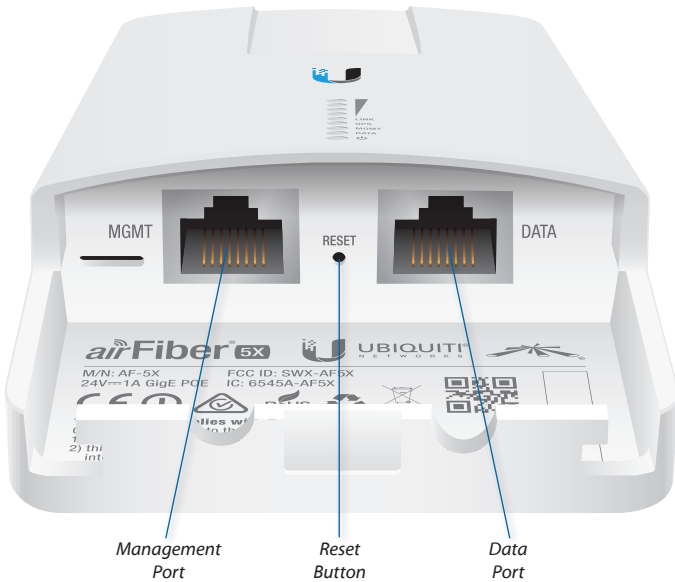





**Management Port** 10/100 Mbps, secured Ethernet port for configuration. *In-Band Management* is enabled by default in the airFiber Configuration Interface. When *In-Band Management* is disabled, the *MGMT* port is the only port that can monitor, configure, and/or update firmware.

**Reset Button** To reset to factory defaults, press and hold the *Reset* button for more than 10 seconds while the device is already powered on.

**Data Port** Gigabit PoE port for handling all user traffic and powering the device.

## LEDs

### Signal LEDs

-  **Signal 4** LED will light blue when on.
-  **Signal 3** LED will light green when on.
-  **Signal 2** LED will light yellow when on.
-  **Signal 1** LED will light red when on.

**Bootup to airOS** When powering on, the *Power*, *GPS*, *LINK*, and *Signal 1-4* LEDs light on. Once the CPU code takes over, the *GPS*, *LINK*, and *Signal 1-3* LEDs turn off. *Signal 4* LED remains on to indicate the boot sequence is underway.


**Initializing airFiber Software** When the airFiber application begins to boot under airOS, the *Signal 4* LED goes from solidly on to a 2.5 Hz flash. This continues until the airFiber X radio is fully booted.

**Signal Level** Once fully booted, the *Signal 1-4* LEDs act as a bar graph showing how close the airFiber X radio is to ideal aiming. This is auto-scaled based on the link range, the antenna gains, and the configured TX power of the remote airFiber X radio. Each *Signal* LED has three possible states: *On*, *Flashing*, and *Off*. All *Signal* LEDs would be solidly on in an ideal link. If the link has a 1 dB loss, the *Signal 4* LED will flash; a 2 dB loss and the *Signal 4* LED will turn off. The full bar graph LED states are shown below.

dB loss	0	-1	-2	-3	-4	-5	-6	-7	-8	-9	-10	-11	-12	-13
Signal 4 (Blue)	1	F	0	0	0	0	0	0	0	0	0	0	0	0
Signal 3 (Green)	1	1	1	F	0	0	0	0	0	0	0	0	0	0
Signal 2 (Yellow)	1	1	1	1	1	F	F	0	0	0	0	0	0	0
Signal 1 (Red)	1	1	1	1	1	1	1	1	1	1	F	F	F	0

0 = Off, 1 = On, F = Flashing

## Additional LEDs

LED	State	Status
LINK	Off	RF Off
	Short Flash*	Syncing
	Normal Flash*	Beaconing
	Long Flash*	Registering
	On	Operational
GPS	Off	No GPS Synchronization
	Normal Flash*	Non-Operational (Weak Signal)
	On	Operational (Strong Signal)
MGMT	Off	No Ethernet Link
	On	Ethernet Link Established
	Random Flashing	Ethernet Activity
DATA	Off	No Ethernet Link
	On	Ethernet Link Established
	Random Flashing	Ethernet Activity
	Off	No Power
	On	Powered On

\* Short Flash (1:3 on/off cycle)  
 Normal Flash (1:1 on/off cycle)  
 Long Flash (3:1 on/off cycle)



## Chapter 2: Installation

### Installation Requirements

The airFiber radio operates only with the antennas listed below.

airFiber Radio	airFiber X Antenna	RocketDish + Conversion Kit
AF-2X	AF-2G24-S45	n/a
AF-3X	AF-3G26-S45	n/a
AF-5X	AF-5G23-S45 AF-5G30-S45 AF-5G34-S45	RD-5G30 + AF-5G-OMT-S45 RD-5G34 + AF-5G-OMT-S45

See the antenna's Quick Start Guide for antenna installation instructions.

### Other Requirements

- Clear line of sight between airFiber X radios
  - Clear view of the sky for proper GPS operation
  - Vertical mounting orientation
  - Mounting point:
    - At least 1 m below the highest point on the structure
    - For tower installations, at least 3 m below the top of the tower
  - Ground wires – min. 10 AWG (5 mm<sup>2</sup>) and max. length: 1 m. As a safety precaution, ground the airFiber X radio to grounded masts, poles, towers, or grounding bars.
- !** **WARNING:** Failure to properly ground your airFiber X radio will void your warranty.
- (Recommended) 2 Outdoor Gigabit PoE surge protectors
- !** **Note:** For guidelines about grounding and lightning protection, follow your local electrical regulatory codes.
- Outdoor, shielded Category 6 (or above) cabling and shielded RJ-45 connectors are required for all wired Ethernet connections.


### Installation Overview

We recommend to configure your paired airFiber X radios before site installation. The overview below summarizes the installation procedure, and the subsequent sections provide detailed installation information:


- Connect the *airFiber PoE Adapter* to the *DATA* port, and connect your computer and the *MGMT* port.
- Configure the airFiber X radio.
- Install a ground wire and mount the airFiber X radio on an airFiber X antenna.
- At the installation site, install the airFiber X antenna with the mounted airFiber X radio (see the antenna's Quick Start Guide for installation instructions).
- Secure the ground wire and mount the GPS antenna.
- Establish and optimize the RF link.

### Connecting Power over Ethernet

1. Lift the release latch on the bottom of the airFiber X radio and slide the *Port Cover* off.

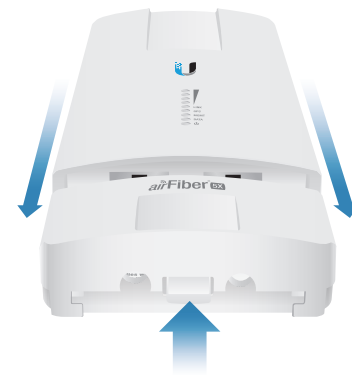


2. Connect an Ethernet cable to the *DATA* port.

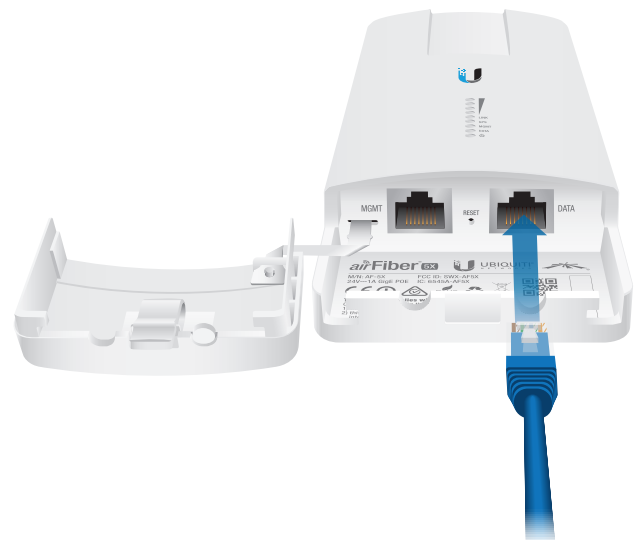


3. Connect the Ethernet cable from the *DATA* port to the Ethernet port labeled **POE** on the *airFiber PoE Adapter*.

- !** **WARNING:** Use only the included airFiber PoE adapter, Model: **GP-H240-100G-4**. Failure to do so can damage the unit and void the product warranty.

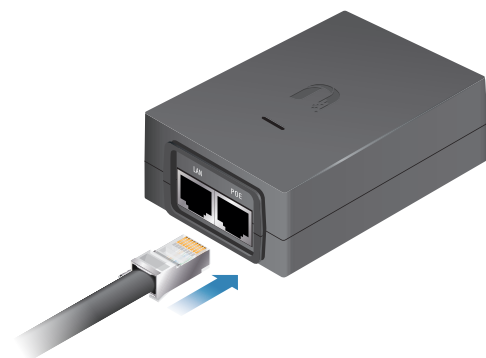


4. Connect the *Power Cord* to the power port on the *airFiber PoE Adapter*. Connect the other end of the *Power Cord* to a power source.

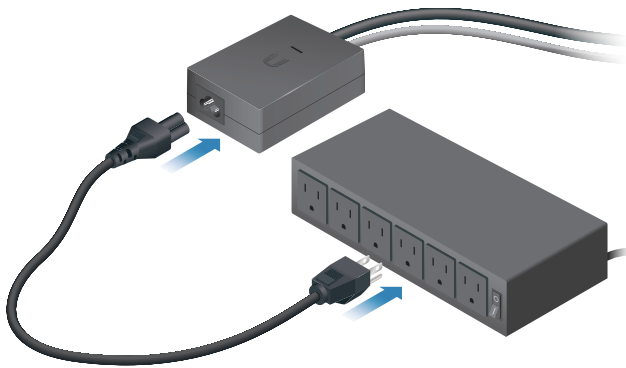

## airFiber Configuration

The instructions in this section explain how to access the airFiber Configuration Interface and configure the following settings:


- **Wireless Mode** Configure one airFiber X radio as the *Master* and the other as the *Slave*.
  - **Frequency Setting** The operating *Frequency* must be the same on both the Master and the Slave.
1. Connect an Ethernet cable from your computer to the *MGMT* port on the airFiber X radio.

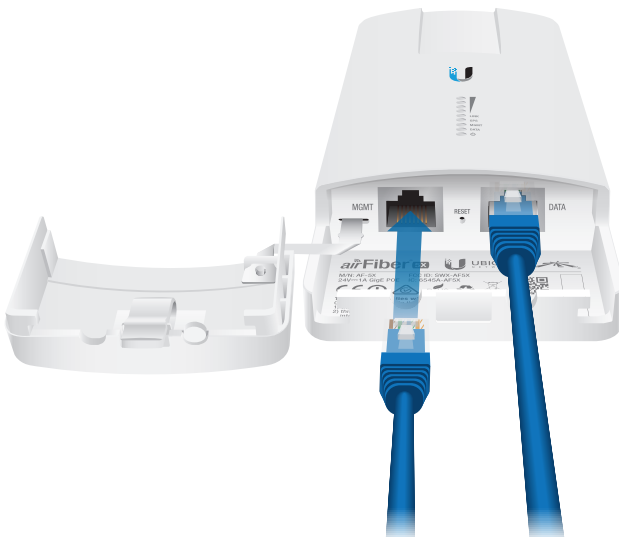

2. Configure the Ethernet adapter on your computer with a static IP address on the 192.168.1.x subnet.
3. Launch your web browser. Type **http://192.168.1.20** in the address field and press **enter** (PC) or **return** (Mac).




4. The login screen will appear. Enter **ubnt** in the *Username* and *Password* fields. Select your *Country* and *Language*. You must agree to the *Terms of Use* to use the product. Click **Login**.

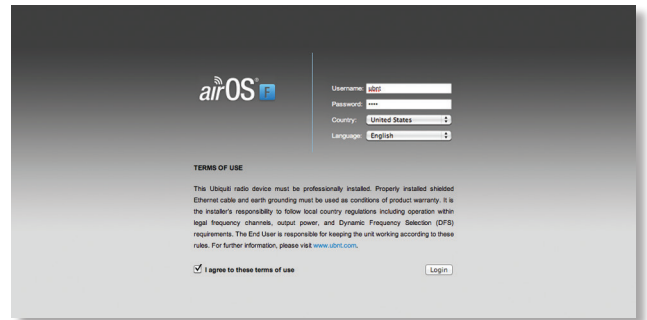

**Note:** U.S. product versions are locked to the U.S. Country Code to ensure compliance with FCC regulations.

5. The *Main* tab will appear. Click the **Tools** drop-down and select **Link Calculator**. This tool will guide you on how to best minimize bandwidth and power/interference issues.
6. Enter the requirements of your link, and then click **Calculate**. Adjust the values as needed to get the optimal result, and then write down the settings needed for your configuration.
7. Click the **Wireless** tab.

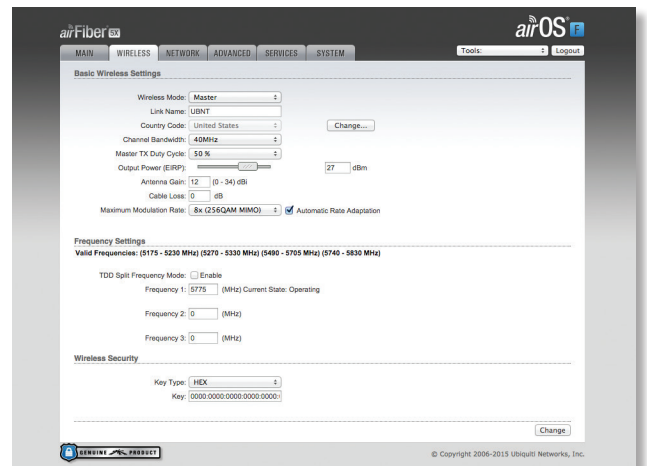

8. Configure the *Basic Wireless Settings*:
  - a. For one airFiber X radio, select **Master** as the *Wireless Mode*. For the other airFiber X radio, keep the default, *Slave*.
  - b. Enter a name in the *Link Name* field. This should be the same on both the Master and the Slave.
  - c. If needed, change the *Channel Bandwidth*, (*Master*) *Duty Cycle*, *Output Power* and/or *Maximum Modulation Rate* settings.
9. Configure the *Frequency Settings*. The selected *Frequency* must be the same on both airFiber X radios.