

Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news

SN7014

Remote ringer for use with VTech CareLine® SN5127/SN5147



vtech® User's manual



Congratulations


on purchasing your new VTech product. Before using this product, please read **Important safety instructions**.

This user's manual provides you with installation and operation instructions. Please read this manual thoroughly to ensure proper installation and operation of this VTech product.


For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com. In Canada, please visit www.vtechcanada.com.

What's in the box

Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

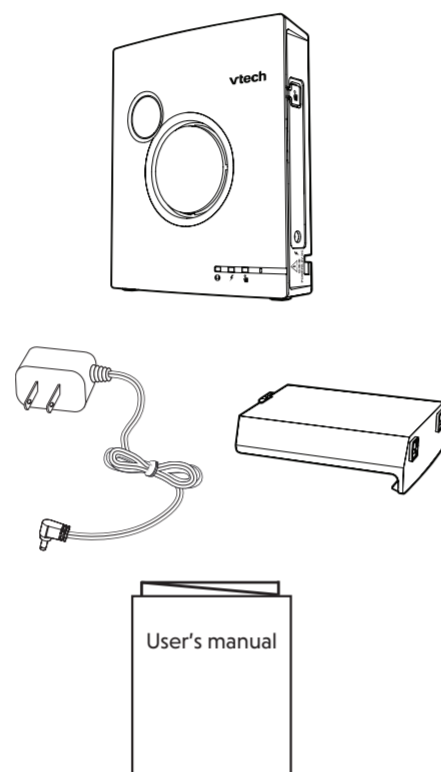

Handset overview

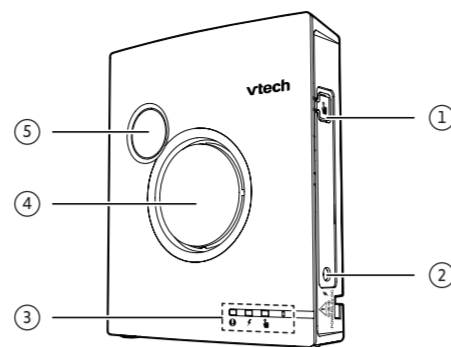

1 - PAIR button

- Press and hold to enter pairing mode.


2 - Power jack

3 - LED lights

- Red when the battery is low.
- Green when the remote ringer is powered on.
- Amber while checking signal strength.

4 - Loud speaker

- Flashes when receiving an incoming call, or when there is an event triggered on another registered device, for example, when the audio door bell is ringing or when reminder alarm is triggered.

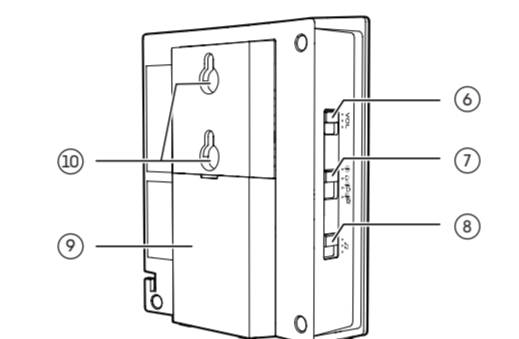

VOL

6 - Ringer volume

- Slide the switch to adjust the ringer volume between:
 - Low;
 - Medium; and
 - High.

CAUTION

- For hearing protection, do not put the remote ringer near your ear as loud ringer sound may damage your hearing. Adjust the volume to lower the ringer sound if you find it too loud.

7 - Alert modes

- Slide the switch to change the alert mode between:
 - Flash only**
The LED light flashes when there is an incoming call or event triggered.
 - Play melody only**
The ringer plays the melody when there is an incoming call or event triggered.
 - Flash and play melody**
The ringer plays the melody and the LED light flashes when there is an incoming call or event triggered.
 - Turn off both flash and melody**
The ringer does not play the melody and the LED light does not flash when there is an incoming call or event triggered.

8 - Melodies

- Slide the switch to change between the three melodies.

9 - Battery compartment cover

10 - Wall mounting holes


Connect to power supply

The remote ringer runs on 3 AA alkaline batteries (not included), or you can connect your remote ringer to a power supply.

Connect Remote ringer to power supply

NOTES:

- Use only the power adapter provided.
- Make sure the electrical outlet is not controlled by a wall switch.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- Make sure the remote ringer and the power adapter cord are out of reach of children.


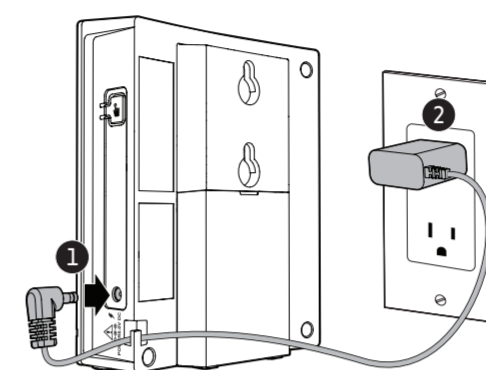


Install the battery


If you choose to run your remote ringer on batteries, install the batteries as shown below.

NOTES

- You need to purchase 3 AA alkaline batteries separately to run your remote ringer wirelessly.
- If the remote ringer will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.

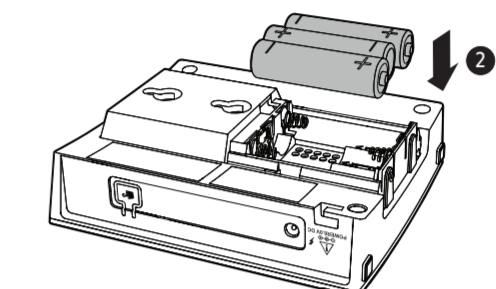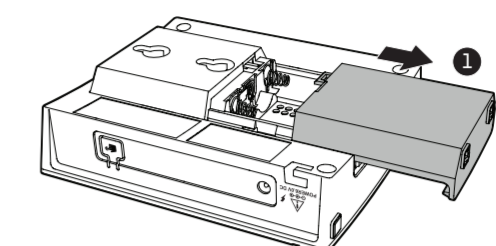


Match the polarity markings (+ and -) inside the battery compartment.

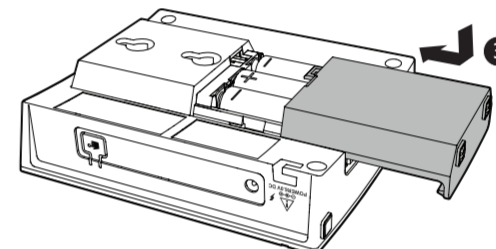

Before use

Add and register a remote ringer

Register each new SN7014 remote ringer to your CareLine® telephone base (SN5127/SN5147) before use. Your telephone system supports a maximum of four handsets and 30 compatible ULE devices.

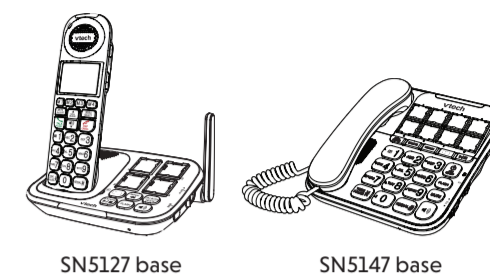


NOTES

- Connect the remote ringer to a power supply or install the batteries before registering it to the telephone base.
- Visit www.vtechphones.com for a list of ULE devices that are compatible with your CareLine telephone base SN5127/SN5147.

To register a remote ringer to the SN5127 telephone base:



- Press and hold **PAIR** on the remote ringer until the green LED light on the remote ringer flashes, then release.

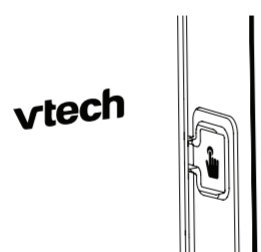

It takes up to 60 seconds to complete the registration. When the registration is successful, the green LED lights on the remote ringer turns to steady on, and the telephone base beeps and its visual ringer indicator light turns off.

If registration fails, start again from Step 1 above.

NOTE


- You cannot register a remote ringer if any other system device is in use.

To register a remote ringer to the SN5147 telephone base:



Connect the remote ringer to a power supply or install the batteries before registering it to the telephone base.

- When the telephone is not in use, Press and hold **PAGE** at the telephone base for about five seconds until the visual ringer indicator light turns on. Release **PAGE**.

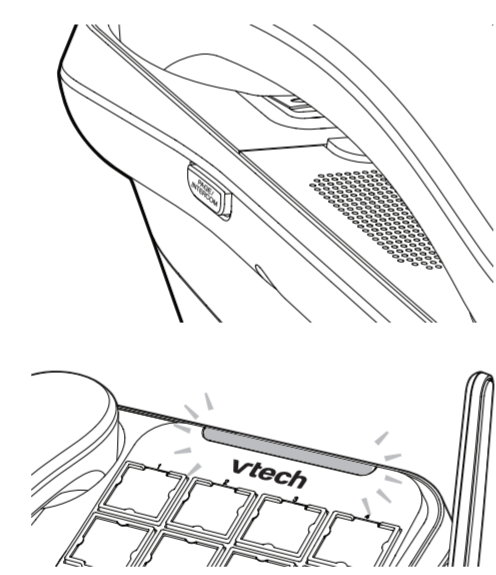

- Press and hold **PAIR** on the remote ringer until the green LED light on the remote ringer flashes, then release.



It takes up to 60 seconds to complete the registration. When the registration is successful, the green LED lights on the remote ringer turns to steady on, and the telephone base beeps and its visual ringer indicator light turns off.

If registration fails, start again from Step 1 above.

NOTE

- You cannot register a remote ringer if any other system device is in use.

Replace a remote ringer

If you have purchased this new SN7014 accessory remote ringer to replace an old one, you must deregister the old remote ringer first, and then register this new remote ringer to your CareLine telephone base (SN5127/SN5147).

Deregister remote ringer

If you want to replace a remote ringer, you must deregister all the devices, and then individually register each device.

If you want to register a remote ringer to another telephone base, you must deregister all devices, and then register each device individually to the desired telephone base.

To deregister all devices from the telephone base:

- Press and hold **PAGE** on the telephone base for about five seconds until the visual indicator light on the telephone base turns on. Keep holding **PAGE** until the visual ringer indicator light begins to flash. Release **PAGE**.
- Immediately press **PAGE** again while the light is still flashing.

You hear a confirmation tone when the deregistration process completes. It takes about 10 seconds to complete the deregistration.

Operating range

The operating range of the remote ringer is up to 1,000 feet outdoors or 150 feet indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

Test the signal strength

You can mount the remote ringer on a wall.

Before you mount the remote ringer, follow the instructions below to check the signal strength between the remote ringer and the telephone base. Make sure you mount the device in a location where the signal strength is good.


Test device signal strength with your SN5127/SN5147 telephone

- Press **MENU** on the cordless handset when the telephone is not in use.
- Press **▼** or **▲** to scroll to **Device setup**, and then press **SELECT**.
- Press **SELECT** to select **Check signal**.
- Scroll to select **Remote ringer**, and then press **SELECT**.
- When the handset screen displays **PLS TRIGGER THE DEVICE**, make sure your remote ringer is powered on, and then press **SELECT**.
- The handset screen displays **AWAITING SIGNAL**.
 - If the handset screen displays **NO SIGNAL**, press **SELECT**, and then repeat from step 2 to test again.
 - If the handset screen displays **WEAK SIGNAL**, move the remote ringer closer to the base, and then adjust the remote ringer's location to improve the signal. Press **SELECT**, and then repeat from step 2 to test again.
- When the handset screen displays **GOOD**, press **SELECT**. The testing is complete.

Mount the remote ringer

NOTES


- You will need to purchase the following items separately to mount your remote ringer:

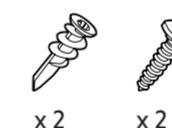

x 2 x 2


- Before mounting your remote ringer, make sure you have installed the batteries if you choose to run your remote ringer with batteries.

- Use a pencil to mark two holes in parallel. Make sure they are the same distance apart as the wall mount holes on the remote ringer.
 - Check for signal strength before drilling the holes.

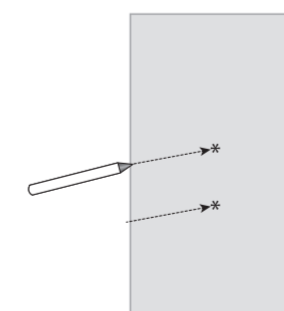


- Drill two holes in the wall (7/32" drill bit).
 - If you drill the holes into an object other than a stud, insert the wall anchors into the holes and tap gently on the ends with a hammer until the wall anchors are flush with the wall.

- Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

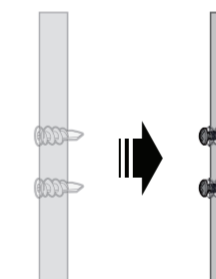

- Align the wall mount holes of the remote ringer with the screws on the wall. Slide the remote ringer down until it locks into place.

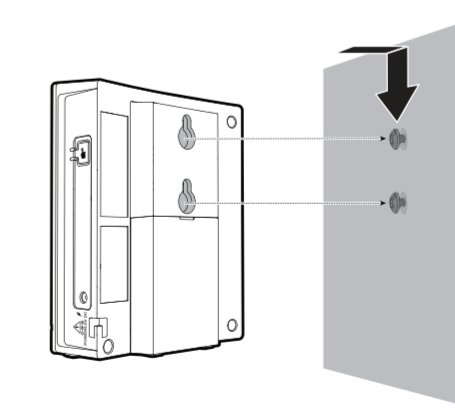

- If you choose to run your remote ringer with a power supply, connect the power adapter to the remote ringer and a power supply not controlled by a wall switch.

General product care

To keep this product working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.

Storage

When you are not going to use the remote ringer for some time, remove the batteries from the remote ringer. Store the remote ringer and the power adapter in a cool and dry place.

Frequently asked questions

Below is the question most frequently asked about the remote ringer. If you cannot find the answer to your question in the below table, visit our website at www.vtechphones.com or call

1 (800) 595-9511 for customer service. In Canada, go to www.vtechcanada.com or call **1 (800) 267-7377**.

The remote ringer doesn't work with the telephone system equipment.	Make sure the 3 AA alkaline batteries are installed.
The remote ringer may be out of range. Move the remote ringer closer to your telephone system.	The remote ringer may be deregistered from your telephone system. Refer to Add and register a remote ringer and register the remote ringer back.
If the above suggestions do not work, deregister all devices and register them to the telephone base again.	The remote ringer may be out of range. Move the remote ringer closer to your telephone system.

Important safety instructions

When using your remote ringer, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry non-abrasive cloth for cleaning.
- Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower.
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
- Avoid placing the device in places with extreme temperature, direct sunlight, or other electrical devices. Protect your remote ringer from moisture, dust, corrosive liquids and fumes.
- This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

- To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the remote ringer other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- Do not overload wall outlets and extension cords.
- Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped or damaged.
 - If the product exhibits a distinct change in performance.
- Avoid using the product during an electrical storm. There is a remote risk of electric shock from lightning.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Periodically examine all components for damage.

- CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the remote ringer. Do not dispose of batteries in a fire. They may explode.
- Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.

Charger power adapter: Output: 6V DC @ 450mA.

SAVE THESE INSTRUCTIONS

Battery

- CAUTION: To prevent risk of fire or battery explosion, replace with the correct battery type.
- Dispose of used batteries according to the instructions.
- Batteries should not be exposed to excessive heat such as bright sunshine or fire.
- Do not dispose of the batteries in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

FCC and IC regulations

FCC Part 15

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The remote ringer shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian requirement:
CAN ICES-3 (B)/NMB-3(B)

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term "IC:" before the certification/ registration number only signifies that the Industry Canada technical specifications were met.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

RF radiation exposure statement

The remote ringer complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The remote ringer should be installed and operated with a minimum distance of 20 cm (8 inches) between the remote ringer and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

For C-UL compliance only

Mesures de sécurité importantes

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie, d'électrocution et de blessures corporelles, dont ceux qui suivent :

- Lisez et comprenez bien toutes les instructions.
- Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N'utilisez pas de nettoyeurs en aérosols. Utilisez un chiffon humide pour le nettoyer.
- N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
- Ne placez pas cet appareil sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé.
- Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel.
- Évitez d'installer le appareil dans les endroits soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre appareil contre les sources d'humidité, la poussière, les vapeurs et les liquides corrosifs.
- Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas d'aération adéquate.
- Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous

ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.

- Ne laissez aucun objet reposer ni appuyer sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit oùè l'on risque d'écraser le cordon d'alimentation ou de le piétiner.
- N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points de tension dangereux ou court-circuiter des pièces, ce qui constituerait un risque d'incendie ou d'électrocution. N'échappez pas de liquides dans l'appareil.
- Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux.

- Ne surchargez pas les prises de courant et les rallonges.

- Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants:

- Lorsque le cordon d'alimentation est endommagé ou écorché.
- Si du liquide a été échappé dans l'appareil.
- Si l'appareil a été exposé à une source d'humidité telle que la pluie ou l'eau.
- Si le produit ne fonctionne pas normale-ment en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans le les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de l'appareil.

Technical specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	1921.536-1928.448 MHz
Channels	5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Battery: 3 x AA Alkaline battery <p>Power adapter: 6V DC @ 450mA</p>



VTech Communications, Inc.
A member of THE VTECH GROUP OF COMPANIES.
VTech is a registered trademark of VTech Holdings Limited.
Specifications are subject to change without notice.
© 2018 VTech Communications, Inc.
All rights reserved. 03/18. SN7014_CIB_V1.0
Document order number: 91-010998-010-100

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or

(b) the time remaining on the original one-year warranty; whichever is longer.

- Si le produit a été échappé ou endomagé.
- Si le produit affiche une nette diminution de sa performance.

- Évitez d'utiliser l'appareil pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.
- Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci est barnché dans une prise au plafond ou sous une table/ armoire.
- Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant.
- Examinez les composantes afin de vérifier si celles-ci ne sont pas endommagées.**
- MISE EN GARDE :** Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles. Utilisez uniquement les piles indiquées dans ce manuel. N'incinérez pas les piles. Celles-ci risqueraient d'exploser.
- N'utilisez que les adaptateur inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.

Adaptateur: Sortie : 6 V CC 450 mA

CONSERVEZ CES INSTRUCTIONS

Pile

- MISE EN GARDE:** Afin de prévenir les risques d'incendie ou d'explosion de la pile, remplace la pile avec une pile du même type.
- Jetez les piles épuisées en respectant les instructions.
- Le bloc-piles ne doit pas être exposé la chaleur excessive telle que la lumière du soleil ou au feu.
- Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus auprès des autorités locales.

- N'ouvrez pas et ne mutilé pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est toxique si avalé.

- Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux conducteurs.

Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (s'applique uniquement aux téléphones numériques sans fil) :

L'organisme Wireless Technology Research, LLC (WTR), une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins :

- Avis aux détenteurs de stimulateurs cardiaques**
- Vous devriez maintenir les dispositifs sans fil au moins six pouces du simulateur cardiaque.

- Ils ne doivent PAS placer les dispositifs sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil à proximité de ceux-ci.

