

Imperial II



User Manual

U.S. Cellular® Customer Service 1-888-944-9400

LEGAL INFORMATION

Copyright © 2014 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

This guide is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. Every effort has been made in the preparation of this guide to ensure accuracy of the contents, but all statements, information, and recommendations in this guide do not constitute a warranty of any kind, expressed or implied.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.zteusa.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

4G LTE is not available in all areas. See uscellular.com/4G for complete coverage details. 4G LTE service provided through King Street Wireless, a partner of U.S. Cellular. LTE is a trademark of ETSI.

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.


Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSDHC logo  is a trademark of the SD-3C, LLC.

Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Other trademarks and trade names are the property of their respective owners.

Qualcomm®
snapdragon ™

Version No. : R1.0

Edition Time : July 9, 2014


Manual No. : 07958450xxxx


Contents

Getting to Know Your Phone	5
Starting Up.....	7
<i>Installing the SIM Card and the Battery</i>	7
<i>Installing the microSDHC Card</i>	9
Charging the Battery	10
Powering On/Off Your Phone	11
Getting to Know the Home Screen	12
<i>Adding Shortcuts or Widgets</i>	13
<i>Moving/Removing Shortcuts or Widgets</i>	13
<i>Applying New Wallpapers</i>	13
Checking the Phone Status.....	14
Managing Notifications	15
Adjusting Volumes	16
Setting a Screen Lock	16
Making a Call	17
Adding Contacts.....	18
<i>Creating a New Contact</i>	18
<i>Importing Contacts in Batches</i>	18
Sending a Message	19
Setting Up Email Accounts	20
<i>Setting Up Gmail</i>	20
<i>Setting Up Email</i>	20
<i>Setting Up an Exchange ActiveSync® Account</i>	20
Connecting to a Wi-Fi Network.....	21

Connecting With a Bluetooth Headset.....	21
Installing Apps From the Google Play™ Store.	22
Capturing a Photo or Video.....	23
Playing Music	24
Connecting to PC	25
Using USB On-The-Go	26
Browsing the Internet.....	26
<i>Opening a Web Page</i>	26
<i>Customizing the Browsers</i>	27
Extending Battery Life.....	27
Your Navigator Deluxe	27
Health and Safety Information.....	29
<i>General Safety</i>	29
<i>Radio Frequency (RF) Energy</i>	30
<i>FCC Compliance</i>	32
<i>Hearing Aid Compatibility (HAC) Regulations for Mobile Phones</i>	33
<i>Turning on the HAC Setting</i>	35
<i>Distraction</i>	35
<i>Product Handling</i>	36
<i>Electrical Safety</i>	40
<i>Battery Handling & Safety</i>	40
<i>Interference</i>	42
<i>Explosive environments</i>	43
<i>Third Party Equipment</i>	44
<i>Efficient Use</i>	44

Getting to Know Your Phone

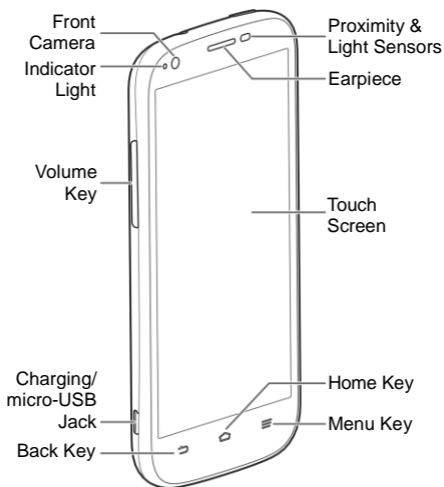

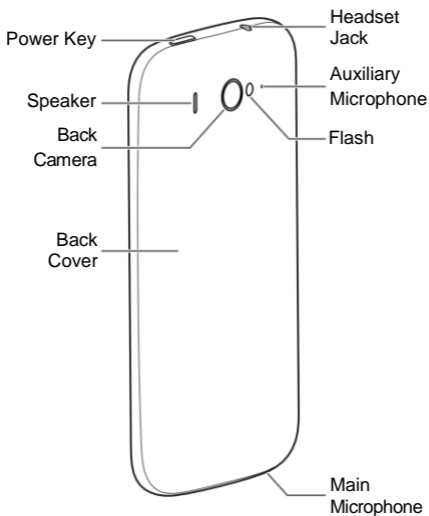

Power Key

- Press and hold to power on, select phone modes, turn on/off airplane mode, restart, or power off.
- Press to turn off or on the screen display.

Volume Key

Press or hold to turn the volume up or down.

Home Key

- Touch to return to the home screen from any application or screen.
- Touch and hold to open Google Search.

Menu Key

- Touch to get the options for the current screen.
- Touch and hold to see recently used applications.

Back Key

- Touch to go to the previous screen.
- Touch and hold to enable/disable Mi-POP.

Starting Up

Switch off your phone before installing or replacing the battery or the 4G LTE SIM card. The microSDHC™ card is optional and can be installed and removed while the phone is turned on. Unmount the microSDHC card before removing it.

Installing the SIM Card and the Battery


Notice on the 4G LTE SIM card:

This phone requires a 4G LTE SIM card to connect to the 4G LTE™ network. Prior to turning on the phone please insert the 4G LTE SIM card as instructed below. This 4G LTE SIM card will only work with this phone. Once the card has been inserted, do not remove!


If your 4G LTE SIM card is ever separated from the phone or damaged, your phone will not fully

function. If you experience any issues with your phone, contact customer service at 1-888-944-9400 or visit your nearest U.S. Cellular[®] retail location.


1. Place your finger in the slot at the bottom left of the back cover to lift and remove it.

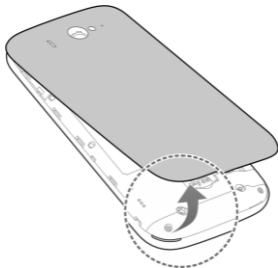

2. Hold the 4G LTE SIM card with its cut corner oriented as shown and slip it into the card holder.

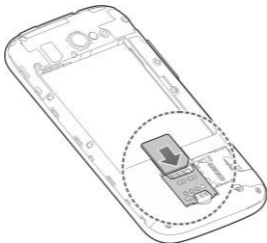


3. Align the connectors on the phone and the battery and slide the battery into the compartment (1). Then gently press the battery down until it is secured (2).

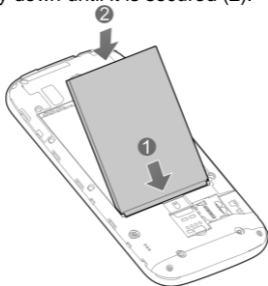


4. Align the back cover with the back of the phone and press the cover back into place. Make sure all the tabs are secure and there are no gaps around the cover.

Installing the microSDHC Card

1. Remove the back cover.

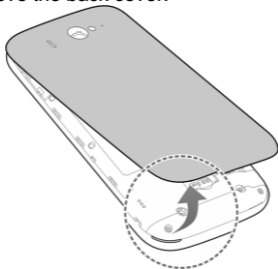

2. Hold your microSDHC card with the metal contacts facing down and slide it into the microSDHC card slot.

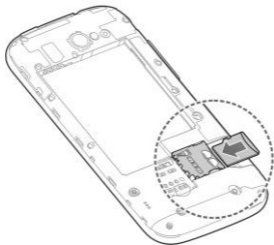


NOTE: The microSDHC card is sold separately.

NOTE: Some applications may require a microSDHC card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it randomly.

3. Replace the back cover.

Charging the Battery

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.

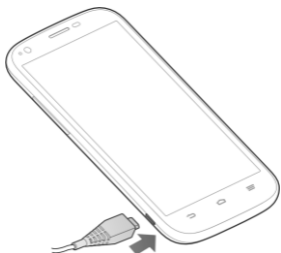

2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.

NOTE: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off Your Phone

Make sure the battery is charged before powering on.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off > OK**.

Getting to Know the Home Screen



The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding shortcuts, folders, widgets, and more.



NOTE: Your home screen extends beyond the initial screen, providing more space for shortcuts, widgets, and folders. Simply swipe left or right to see the extended home screens.

Adding Shortcuts or Widgets

1. Touch and hold a blank area of the home screen.
2. In the new screen that opens, touch **Widgets** or **Apps** to browse the available widgets or application shortcuts.
3. Touch and hold a widget or an app icon and drag it to one home screen at the bottom.

Moving/Removing Shortcuts or Widgets

Touch and hold a widget or shortcut on the home screen.

- Drag it to the place you need on the screen.
- Drag it to  at the top to remove it.
- Drag the shortcut to  at the top left to create a new folder.


















Applying New Wallpapers

You can set the wallpaper for the home screen or the lock screen.

1. Touch and hold a blank area of the home screen.
2. In the new screen that opens, touch **Wallpaper** and select a wallpaper source.
3. Touch the image or animation you want to use as the wallpaper. Some cropping may be needed for **Gallery** images.
4. Touch **Set wallpaper** (Wallpapers or Live Wallpapers), **SET WALLPAPER** (Photos), or **OK** (Gallery).

Checking the Phone Status

















The status bar at the top of the screen displays phone and service status with various icons on the right side. Below are some of the icons and their meanings.

	System connected		No signal
	Ringer off		Signal strength
	Vibrate mode		Flight mode
	Battery low		Bluetooth on
	Battery full		Connected to a Wi-Fi® network
	Battery charging		Wi-Fi in use
	Alarm set		Wired headset connected
	Phone microphone off		Speaker on
	GPS on		

Managing Notifications


The status bar at the top of the screen provides notification alerts with different icons on the left side. Below are some of the icons and their meanings.




The notifications depend on the apps installed and you can touch and drag the status bar down to see more information.

	New SMS/MMS		microSDHC card removed
	New email		Upcoming event
	New Gmail™ message		New Wi-Fi network detected
	Problem with SMS/MMS delivery		Downloading data
	Missed call		Sending data
	Call in progress		USB tethering is on
	USB connected		Portable Wi-Fi hotspot
	Song is playing		Updates available

Adjusting Volumes


To adjust call volume, press the **Volume Key** while on a call. To adjust other volumes, follow the steps below.

1. Touch the **Home Key** >  > **Settings** > **Sound** > **Volumes**.
2. Drag the sliders to adjust the volume for music, video, games, and other media, the ringtone and notification volume, and the alarm volume.
3. Touch **OK** to save.

NOTE: Press and hold the **Power Key** and then touch  to enable the silent mode, touch  to enable the vibration mode, or touch  to disable the silent mode.

Setting a Screen Lock


You can protect your phone by creating a screen lock. When enabled, you need to touch and hold the screen, look at the device, draw a pattern, or enter a numeric PIN or password to unlock the phone's screen and keys.



1. Touch the **Home Key** >  > **Settings** > **Security** > **Screen lock**.
2. Touch **None**, **Long press**, **Face Unlock**, **Pattern**, **PIN** or **Password**.
 - ▶ Touch **None** to disable the screen lock feature.
 - ▶ Touch **Long press** to enable unlock with a 'touch and hold' gesture. You can unlock

the screen by touching and holding the display.

- ▶ Touch **Face Unlock** to let the phone capture your face. You can unlock the screen by looking at the phone. You also need to set a pattern or PIN in case the phone cannot recognize your face.
- ▶ Touch **Pattern** to create a pattern that you must draw to unlock the screen.
- ▶ Touch **PIN** or **Password** to set a numeric PIN or a password you must enter to unlock your screen.




Making a Call

1. Touch the **Home Key** > .
2. Touch the search box at the top and enter the phone number or the contact name. The phone will display matching information from your contact list.
3. Touch the matching contact or **Call** [number] to call the contact or the number you have entered.


NOTE: Touch  and then touch and hold  to retrieve your voicemail.

Adding Contacts




Creating a New Contact


1. Touch the **Home Key** >  and touch the Contacts tab .
2. Touch  at the bottom of the screen.
3. Touch the field above **Name** to choose an account for the new contact. You can select **Phone-only** to save the contact only on the phone, or select a web account if you have signed in on the phone so that the contact can be synchronized to your web account.
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch **DONE** to save the contact.

Importing Contacts in Batches

1. Touch the **Home Key** > .
2. Touch the **Menu Key** > **Import/export** > **Import from storage**.
3. If prompted, select an account in which to save the contacts.
4. Select the vCard file(s) (*.vcf) and touch **OK** to begin importing.


Sending a Message

1. Touch the **Home Key** > , then touch .
2. Enter the recipient(s) and message text. If you want to send an MMS, add subject and attachments.
3. Touch  to send the message.

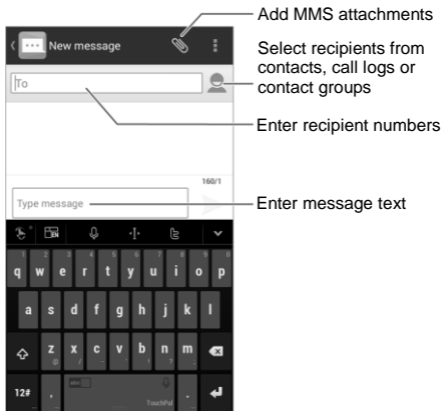


Setting Up Email Accounts


Setting Up Gmail

1. Touch the **Home Key** >  > **Settings** > **Add account** > **Google**.
2. Touch **Existing** to sign in to your existing Google Account. If you have no Google Accounts, touch **New** to create one.
3. Follow the instructions on the screen to set up the account.

Setting Up Email

1. Touch the **Home Key** >  > **Settings** > **Add account** > **Email**.
2. Enter the email address and password.
3. Touch **Next** and follow the onscreen instructions.


Setting Up an Exchange ActiveSync[®] Account

1. Touch the **Home Key** >  > **Settings** > **Add account** > **Corporate**.
2. Enter the email address and password.
3. Touch **Next**.
4. If necessary, edit **Domain\Username**, **Password**, and **Server** information. Then touch **Next**.
5. Configure the settings on the screen, such as **Days to sync email**, and then touch **Next**.

6. Identify your new account with a unique name and then touch **Next**.

Contact your server administrator for more help.



Connecting to a Wi-Fi Network

1. Touch the **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the ON/OFF switch at the top right if Wi-Fi is off.

Your phone automatically searches for Wi-Fi networks in range and displays their names (SSID) and security settings. Your phone also connects to previously linked networks when they are in range.


3. Touch a network name to connect to it.
If the network is secured, enter a password or other credentials. (Ask your network administrator for details.)

Connecting With a Bluetooth Headset

1. Turn on the Bluetooth headset and switch it to pairing mode. Refer to the headset's user guide for more information.
2. Touch the **Home Key** >  > **Settings** > **Bluetooth**.
3. Slide the **ON/OFF** switch at the top right if Bluetooth is off. When Bluetooth is on, the 

icon appears in the status bar.

NOTE: Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch **SEARCH FOR DEVICES** if you wanted to scan again.



4. Touch the ID of the headset, or any other device you want to pair with your phone. Enter a passcode if prompted.
5. If necessary, touch the ID of the paired headset to connect with it. Once connected, the  icon in the status bar lights up.

NOTE: Touch the ID again to end the connection.

Installing Apps From the Google Play™ Store



Before you begin, make sure that you have signed in to your Google Account.

NOTE: The content you can access in the Play Store depends on your region and your service provider.

1. Touch the **Home Key** >  > **Play Store**. The first time you launch **Play Store**, accept the Google Play Terms of Service.
2. Find the apps you need either by category or by touching .
3. Touch the app to see detailed description.
4. Touch **Install** (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet™ account and select a payment method.


CAUTION: Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch **Accept** to proceed, or touch the **Back Key** to cancel.


5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.




The app is successfully installed when the  icon appears in the status bar. You can find the new app after touching the **Home Key** > .


Capturing a Photo or Video

You can use the **Camera** app to capture high quality photos and record high-definition videos.


1. Touch  in the home screen and select **Camera**.
2. Aim the camera at the subjects and, if necessary, touch the buttons on the screen to switch cameras, turn on/off flash, select special features or color effects, or set up other related options.


NOTE: Your phone offers a variety of modes for picture-taking. You can touch  to select a pre-set mode or the manual mode where you can freely adjust ISO, white balance and other parameters.

3. Take the picture or record the video.
 - ▶ Touch  to take the picture.
 - ▶ Touch  to record the video and touch  to stop.

NOTE: While video recording is in progress, you can touch  to save the current frame as a photo.

Playing Music

1. Touch  in the home screen and select **Music**.
2. Touch a card at the top of the screen to view your music library organized by **Artists**, **Albums**, **Songs**, **Playlists**, **Folders**, or **Genres**. You can also touch **RECENTLY PLAYED** or **FAVORITES** to browse songs you recently played or you have added as favorites.
3. Touch a song to play it. The following playback screen and controls appear.

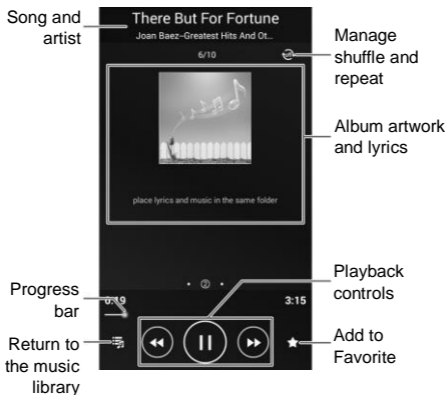


NOTE: Swipe left or right in the Album artwork and lyrics area to see the whole lyrics or the current playlist.

NOTE: Save a lyrics file (*.lrc) with the same name as the music file to see the lyrics on the screen when the song is being played.

Connecting to PC

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in either direction. Your device stores these files in its internal USB storage (internal SD card) or on a removable microSDHC card.


1. Connect your phone to the PC with a USB cable.
2. Touch and hold the status bar across the top of the screen and flick down.
3. Touch  (**Connected as [current connection mode]**).
4. Choose one of the following options:
 - ▶ **Charge only:** Charge your phone via USB.
 - ▶ **Install driver:** Install the driver needed for connecting your phone to your PC.
 - ▶ **Media device (MTP):** Transfer media files on Windows[®] or Mac[®].
 - ▶ **Camera (PTP):** Transfer photos using camera software.

To disconnect the device from the computer, simply unplug the USB cable when you're finished.

Using USB On-The-Go


Your phone supports USB On-The-Go. You can connect the phone and a USB peripheral device (such as a USB flash drive, a USB mouse, and a USB keyboard) with an adapter cable.

For example, when you connect the phone with a USB flash drive, you can browse the files on the flash drive; connect the phone with a USB mouse and you can navigate the phone with the mouse.



NOTE: Touch the **Home Key** >  > **Settings** > **Language & input** > **Pointer speed** to adjust the speed of the mouse or trackpad when you connect it with the phone.

Browsing the Internet

Opening a Web Page

Touch  in the home screen and select **Browser** or **Chrome** to view web pages or search for information on the Internet. Chrome™ on your phone can sync bookmarks, browsing history, and opened tabs from your Google Account.

1. Touch the address field at the top and enter the URL of the web page or the words you want to search for.

NOTE: You can touch the microphone icon  /  to search by voice.

2. Touch **Go** on the keyboard to open the web page.

NOTE: Touch **X** to stop opening the page.



Customizing the Browsers

Open the Browser or the Chrome app and touch the **Menu Key > Settings** to customize the settings for each browser.

With the customizing options, you can manage privacy-related settings such as passwords saving, browsing data (history) and cookies, accessibility options such as text scaling and forced zooming, bandwidth-related settings and more.

Extending Battery Life

There are several things you can do to make your battery last longer.


- Turn on Wi-Fi, Bluetooth, GPS, mobile data, auto-sync only when you need to.
- Lower the screen brightness.
- Use Bluetooth tethering or USB tethering (when you have a cable) instead of mobile hotspot to share your phone's data service.
- From the home screen, touch  > **Task Manager** and close the apps you do not need but still run in the background.
- From the home screen, touch  > **Settings > Sound** and uncheck **Vibrate on touch**.

Your Navigator Deluxe

With Your Navigator Deluxe, you get all of the features of an advanced car navigation system on your phone, with voice turn-by-turn navigation and GPS support. Search for any destination

including gas stations, ATMs, restaurants and more, and get detailed maps of any location.

To set location services:

1. Touch the **Home Key** >  > **Settings** > **Location**.
2. Slide the ON/OFF switch at the top right to turn on the location function.
3. Touch **Mode** to select location sources you want to use.
 - ▶ **High accuracy:** Get accurate location using both GPS and Wi-Fi as well as mobile networks.
 - ▶ **Battery saving:** Use only Wi-Fi and mobile networks to get your approximate location. This will drain less power from your battery than using GPS.
 - ▶ **Device only:** Use GPS to pinpoint your location.













To use Your Navigator Deluxe:







Touch the **Home Key** >  > **Your Navigator Deluxe** or, from the home screen, touch the following shortcuts created by the application.

- Touch **Navigate** for turn-by-turn directions to an address, airport, a contact and more.
- Touch **Local Places** to search for nearby businesses, the cheapest gas prices and more.
- Touch **Maps & Traffic** to see where you are currently located on the map and what the traffic is like in the area.

Health and Safety Information

General Safety

	Do not use while re-fuelling.
	Do not use hand-held while driving.
	This device may produce a bright or flashing light.
	For body-worn operation maintain a separation of 15 mm.
	Do not dispose of it in a fire.
	Small parts may cause a choking hazard.
	Avoid contact with magnetic media.
	This device may produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid Extreme Temperatures.
	Keep away from pacemakers and other personal medical devices.
	Avoid any contact with liquid, keep it dry.

	Switch off when instructed in hospitals and medical facilities.
	Do not attempt to disassemble.
	Switch off when instructed in aircrafts and airports.
	Do not rely on this device for emergency communications.
	Switch off in explosive environments.
	Only use approved accessories.

Radio Frequency (RF) Energy

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the

device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for use at the ear is 0.93 W/kg and when worn on the body, as described in this user guide, is 1.22 W/kg (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of **<http://www.fcc.gov/oet/ea/fccid/>** after searching on:
FCC ID: SRQ-ZTEN9516

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a

minimum of 1.5 cm from your body when the device is switched on.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION! Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing

device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.




T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Your phone meets the M4/T4 level rating.

Hearing devices may also be rated. Your hearing

device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

Turning on the HAC Setting

To turn on the HAC function, touch  >  >  > **Settings** and check **Hearing aids**.

This section applies to T-Rating only and hearing aids that contain telecoils. When the HAC setting is on, your phone sends the audio from your phone calls to the telecoil rather than to the microphone of your hearing aid. You are likely to hear calls much better because volume is increased and background noise and feedback are diminished. The HAC setting improves only the calls you listen to through the earpiece. It does not affect calls heard on the speaker or with a headset. HAC requires extra battery power, so watch your battery consumption when it's turned on.

CAUTION: Do not turn on the HAC setting unless you use a hearing aid with a telecoil. Using this setting without a hearing aid or with a hearing aid without a telecoil may be harmful to your hearing.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must

comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

- You alone are responsible for how you use your phone and any consequences of its use.
- You must always turn off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.
- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do

so.

- Do not expose your phone or its accessories to extreme temperatures, minimum 23 and maximum 122 degrees Fahrenheit.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

- Do not leave your phone and its accessories within the reach of small children or allow them to play with it.
- They could hurt themselves or others, or could accidentally damage the phone.
- Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media to be close to your phone for a long time.

Electrostatic discharge (ESD)

Do not touch the UICC card's metal connectors.

Power supply

Do not connect your mobile phone to the power supply or switch it on until instructed to do so in the installation instructions.

Air Bags

- Do not place the phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.
- Store the phone safely before driving your vehicle.

Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

Repetitive Motion Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the mobile phone too tightly.
- Press the icons and touch screen lightly.
- Use the special features which are designed to minimize the times of pressing the icons and touch screen buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

MP3 and video player function

- When listening to pre-recorded music or watching videos on your mobile phone, with headphones or earphones at high volumes, you run the risk of permanent damage to your hearing. Even if you are used to listening to music at a high volume and it seems acceptable to you, you still risk damaging your hearing. Reduce the sound volume to a reasonable level and avoid using headphones for an excessive period of time to avoid hearing damage.
- Different headphones, earphones or ear buds may deliver a higher or lower volume, at the same volume setting on your mobile phone. Always start at a low volume setting.
- Do not listen to music or video with headphones while driving.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

- Use only approved accessories.
- Do not connect with incompatible products or accessories.
- Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

- Do not attempt to disassemble the phone or its accessories.
- Only qualified personnel can service or repair the phone or its accessories.
- If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Battery Handling & Safety

- Do not disassemble or open crush, bend or

deform, puncture or shred

- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire,

explosion or other hazard.

- The phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Turn off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

- Turn off your wireless device whenever you are instructed to do so by airport or airline staff.
- Consult the airline staff about the use of wireless devices onboard the aircraft. Enable airplane mode prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices

such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Turn off your mobile phone or wireless device when in a blasting area or in areas posted turn off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Third Party Equipment

The use of third party equipment, cables or accessories, not made or authorized by ZTE, may invalidate the warranty of the mobile phone and also adversely affect the mobile phone’s operation. For example, use only the ZTE charger supplied with the mobile phone.

Efficient Use

For optimum performance with minimum power consumption, do not cover the mobile phone with anything. Covering the mobile phone may cause it to operate at higher power levels than needed, and may drain the battery.