

Q370M-IM-A

Industrial Motherboard

E16258
First Edition
April 2020

Copyright © 2020 ASUSTeK COMPUTER INC. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Offer to Provide Source Code of Certain Software

This product contains copyrighted software that is licensed under the General Public License ("GPL"), under the Lesser General Public License Version ("LGPL") and/or other Free Open Source Software Licenses. Such software in this product is distributed without any warranty to the extent permitted by the applicable law. Copies of these licenses are included in this product.

Where the applicable license entitles you to the source code of such software and/or other additional data, you may obtain it for a period of three years after our last shipment of the product, either

(1) for free by downloading it from <https://www.asus.com/support/>

or

(2) for the cost of reproduction and shipment, which is dependent on the preferred carrier and the location where you want to have it shipped to, by sending a request to:

ASUSTeK Computer Inc.

Legal Compliance Dept.

1F., No.15, Lide Rd.,

Beitou Dist., Taipei City 112

Taiwan

In your request please provide the name, model number and version, as stated in the About Box of the product for which you wish to obtain the corresponding source code and your contact details so that we can coordinate the terms and cost of shipment with you.

The source code will be distributed WITHOUT ANY WARRANTY and licensed under the same license as the corresponding binary/object code.

This offer is valid to anyone in receipt of this information.

ASUSTeK is eager to duly provide complete source code as required under various Free Open Source Software licenses. If however you encounter any problems in obtaining the full corresponding source code we would be much obliged if you give us a notification to the email address gpl@asus.com, stating the product and describing the problem (please DO NOT send large attachments such as source code archives, etc. to this email address).

Contents

Chapter 1 Product overview

1.1	Package contents.....	1-1
1.2	Features	1-1
1.3	Specifications.....	1-2

Chapter 2 Motherboard information

2.1	Before you proceed	2-1
2.2	Motherboard layout.....	2-2
2.3	Central Processing Unit (CPU)	2-4
2.3.1	Installing the CPU	2-5
2.3.2	CPU heatsink and fan assembly installation.....	2-7
2.4	System memory	2-9
2.5	Jumpers	2-10
2.6	Connectors	2-12
2.6.1	Rear panel connectors.....	2-12
2.6.2	Internal connectors	2-14

Chapter 3 BIOS setup

3.1	BIOS setup program	3-1
3.1.1	BIOS menu screen.....	3-2
3.2	Main menu	3-2
3.2.1	System Language [English]	3-2
3.2.2	System Date [Day MM/DD/YYYY]	3-2
3.2.3	System Time [HH:MM:SS]	3-2
3.2.4	Security	3-2
3.3	Ai Tweaker menu.....	3-4
3.3.1	CPU Power Enhancement.....	3-4
3.3.2	CPU Core Ratio	3-4
3.3.3	DRAM Odd Ratio Mode	3-5
3.3.4	DRAM Frequency	3-5
3.3.5	Power-saving & Performance Mode	3-6
3.3.6	DRAM Timing Control	3-6
3.3.7	DIGI+ VRM.....	3-14
3.3.8	Internal CPU Power Management	3-15
3.3.9	CPU Core/Cache Current Limit Max.....	3-15
3.3.10	CPU Graphics Current Limit	3-16

3.3.11	Min. CPU Cache Ratio.....	3-16
3.3.12	Max. CPU Cache Ratio.....	3-16
3.3.13	Max. CPU Graphics Ratio	3-16
3.3.14	DRAM Voltage	3-16
3.3.15	DRAM REF Voltage Control	3-16
3.4	Advanced menu	3-18
3.4.1	Platform Misc Configuration.....	3-18
3.4.2	CPU Configuration	3-19
3.4.3	System Agent (SA) Configuration	3-21
3.4.4	PCH Configuration	3-22
3.4.5	PCH Storage Configuration	3-22
3.4.6	PCH-FW Configuration	3-23
3.4.7	AMT Configuration	3-23
3.4.8	Trusted Computing	3-24
3.4.9	Onboard Devices Configuration.....	3-25
3.4.10	APM Configuration.....	3-27
3.4.11	Serial Port Console Redirection.....	3-27
3.4.12	Intel TXT Information	3-28
3.4.13	PCI Subsystem Settings	3-28
3.4.14	USB Configuration	3-28
3.4.15	Network Stack Configuration	3-29
3.4.16	NVMe Configuration.....	3-29
3.4.17	HDD Secure Erase	3-29
3.4.18	HDD/SSD SMART Information	3-29
3.5	Monitor menu	3-30
3.6	Boot menu	3-34
3.7	Tool menu.....	3-38
3.8	Exit menu	3-39
Appendix		
Notices.....		A-1
ASUS contact information		A-5

Chapter 1

Product overview

1.1 Package contents

Check your industrial motherboard package for the following items.

- 1 x ASUS Q370M-IM-A Motherboard
- 2 x Serial ATA 6.0 Gb/s cables
- 1 x ASUS I/O Shield



NOTE: If any of the above items is damaged or missing, contact your distributor or sales representative immediately.

1.2 Features

- Intel® socket 1151 for 9th/8th Gen Intel® Core™ i9/ i7/ i5/ i3, Pentium®, and Celeron® processors
- Four Dual Channel DDR4 2666/2400/2133MHz Non-ECC U-DIMMs up to 64GB
- 6 x SATA 6.0 Gb/s, 4 x USB 3.2 Gen 2, 4 x USB 3.2 Gen 1, 4 x USB 2.0 ports
- 1 x PCIe x16 slot, 2 x PCIe x1 slots, 1 x PCI slot, 1 x M.2 (Key E, 2230) for Wi-Fi devices, 1 x M.2 supports PCIe and SATA modes, 1 x M.2 supports PCIe mode
- Multi-display: 2 x DisplayPort, 1 x HDMI, 1 x D-Sub

1.3 Specifications

CPU	Intel® socket 1151 for 9th/8th Gen Intel® Core™ i9/ i7/ i5/ i3, Pentium®, and Celeron® processors Supports Intel® 14nm CPU
Chipset	Intel® Q370 Chipset
Memory	4 x U-DIMM, max.64GB, DDR4 2666*/2400/2133 MHz *DDR4 2666MHz and higher memory modules will run at max. 2666MHz on Intel® 9th/8th Gen. 6-core or higher processors
Graphics	Intel® UHD Graphics 630/610 Multi-VGA output support: DP/HDMI/D-Sub ports <ul style="list-style-type: none"> - Supports HDMI 1.4 output with a maximum resolution of 4096 x 2304 @ 24Hz / 2560 x 1600 @ 60Hz - Supports 2x DisplayPort outputs with a maximum resolution of 4096 x 2304 @ 60 Hz - Supports D-Sub output with a maximum resolution of 1920 x 1200 @ 60Hz
Expansion slots	1 x PCI Express 3.0/2.0 x16 slot 2 x PCI Express 3.0/2.0 x1 slots 1 x PCI slot 1 x M.2 socket 1 (Key E, 2230) for WiFi devices 1 x M.2 socket 3 supports SATA* and PCIe x4 modes 1 x M.2 socket 3 supports PCIe x4 mode Intel® Optane™ Memory Ready *SATA mode shares with SATA6G_2 port
Storage	- 6 x SATA 6.0 Gb/s ports - Supports RAID 0, 1, 5, 10
LAN	Intel® I219LM Gigabit LAN controller
Audio	Realtek® ALC887 8-channel High Definition Audio CODEC
Rear panel I/O ports	1 x P/S2 keyboard port (purple) 1 x P/S2 mouse port (green) 2 x DP connectors 1 x HDMI port 1 x D-Sub port 4 x USB 3.2 Gen 2 ports 2 x USB 2.0 ports 1 x LAN (RJ45) port 3 x Audio jacks
Front panel I/O ports	2 x COM headers(2 x RS232) 2 x USB 3.2 Gen 1 connectors support additional 4 USB 3.2 Gen 1 ports 1 x USB 2.0 connector supports additional 2 USB 2.0 ports

(continued on the next page)

Front panel I/O ports	1 x CPU Fan connector 2 x Chassis Fan connectors 1 x Chassis intrusion header 1 x Front panel audio connector(AAfp) 1 x System panel connector 1 x Clear CMOS header 1 x Speaker connector 1 x LPC Debug header 1 x LPT port header 1 x 24-pin ATX power connector 1 x 8-pin EATX power connector 6 x SATA 6.0Gb/s connectors 1 x MONO_out header 1 x DIS ME jumper TPM IC 2.0 Onboard
Manageability	WfM 2.0, DMI 2.0, WOL by PME
Watch dog timer	NO
Power requirement	ATX Power
Operation Temperature	0~60°C
Non-Operation Temperature	-40~85°C
Relative Humidity	0%~85%
OS support	Windows® 10 (64-bit) Windows® 10 IoT Enterprise Ubuntu RedHat Enterprise Fedora Workstation
Form factor	Micro ATX, 9.6 x 9.6 inches (24.4 x 24.4 cm)
Certification	CE FCC UL CCC



NOTE: Specifications are subject to change without notice.

Chapter 2

Motherboard information

2.1 Before you proceed

Take note of the following precautions before you install motherboard components or change any motherboard settings.



CAUTION!

- Unplug the power cord from the wall socket before touching any component.
- Before handling components, use a grounded wrist strap or touch a safely grounded object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.
- Hold components by the edges to avoid touching the ICs on them.
- Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that came with the component.
- Before you install or remove any component, always remove the AC power by unplugging the power cord from the power outlet. Failure to do so may cause severe damage to the motherboard, peripherals, or components.

2.2

Motherboard layout




NOTE: Place eight screws into the holes indicated by circles to secure the motherboard to the chassis.



CAUTION! Do not overtighten the screws! Doing so can damage the motherboard.


Place this side
towards the rear
of the chassis

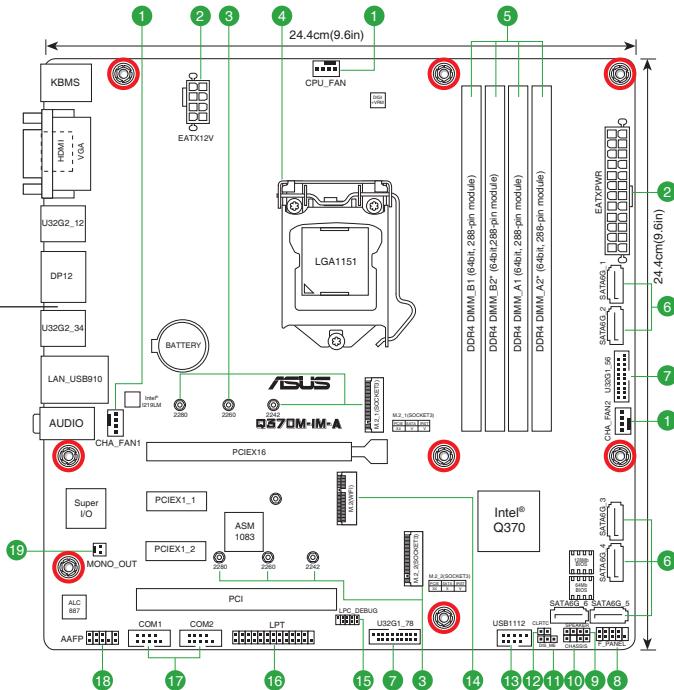

Connectors/Jumpers/Slots	Page
1. CPU and chassis fan connectors (4-pin CPU_FAN, 4-pin CHA_FAN1/2)	2-16
2. ATX power connectors (24-pin EATXPWR, 8-pin EATX12V)	2-20
3. M.2 socket 3	2-18
4. Intel®LGA1151 CPU socket	2-4
5. DDR4 DIMM slots	2-9
6. SATA 6.0Gb/s connectors (7-pin SATA6G_1-6)	2-19
7. USB 3.2 Gen 1 connectors (U32G1_56; U32G1_78)	2-14
8. System panel connector (10-1 pin F_PANEL)	2-17
9. Speaker connector (4-1 pin SPEAKER)	2-16
10. Chassis Intrusion header (4-1 pin CHASSIS)	2-10
11. DIS_ME jumper (3-pin DIS_ME)	2-11
12. Clear RTC RAM (2-pin CLRRTC)	2-10
13. USB 2.0 connector (10-1pin USB_1112)	2-15
14. M.2 Wi-Fi	2-18
15. LPC Debug header	2-19
16. LPT connector	2-14
17. Serial port connectors (10-1 pin COM1, COM2)	2-20
18. Front panel audio connector (10-1 pin AAFP)	2-21
19. Mono out header (2-pin Mono_Out)	2-15

2.3 Central Processing Unit (CPU)

The motherboard comes with a surface mount LGA1151 socket designed for the Intel® 9th/8th Generation Core™ i9 / i7 / i5 / i3, Pentium®, and Celeron® processors.

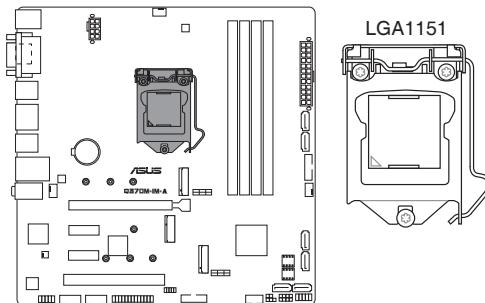


IMPORTANT: Unplug all power cables before installing the CPU.



CAUTION!


- Upon purchase of the motherboard, ensure that the PnP cap is on the socket and the socket contacts are not bent. Contact your retailer immediately if the PnP cap is missing, or if you see any damage to the PnP cap/socket contacts/motherboard components. The manufacturer will shoulder the cost of repair only if the damage is shipment/transit-related.
- Keep the cap after installing the motherboard. The manufacturer will process Return Merchandise Authorization (RMA) requests only if the motherboard comes with the cap on the LGA1151 socket.
- The product warranty does not cover damage to the socket contacts resulting from incorrect CPU installation/removal, or misplacement/loss/incorrect removal of the PnP cap.

2.3.1 Installing the CPU

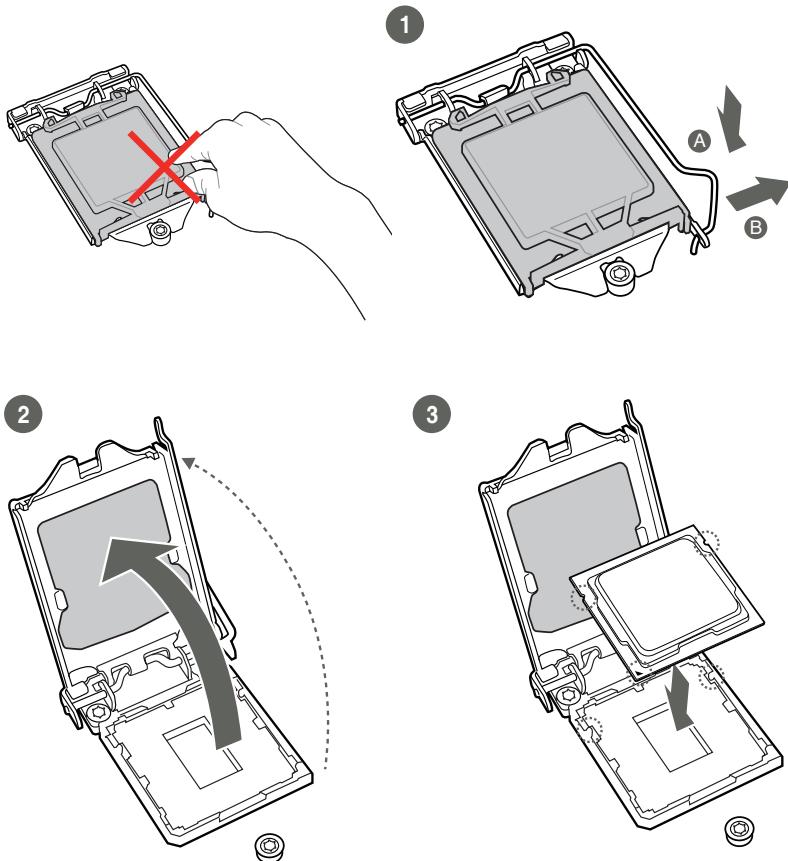


CAUTION! LGA1156 CPU is not compatible with the LGA1151 socket. DO NOT install an LGA1156 CPU on the LGA1151 socket.


4

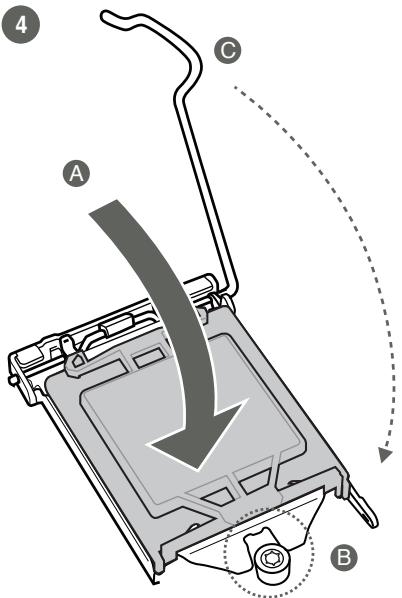

5

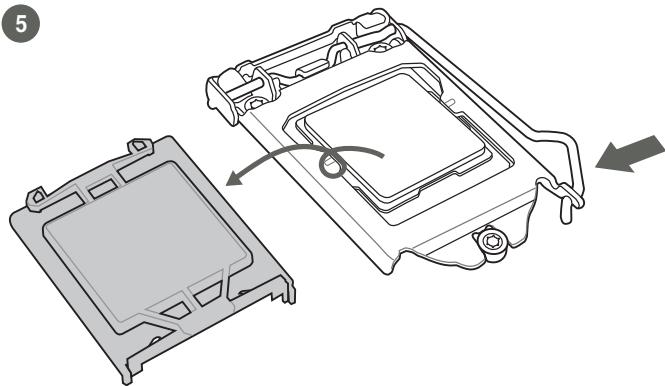


2.3.2 CPU heatsink and fan assembly installation

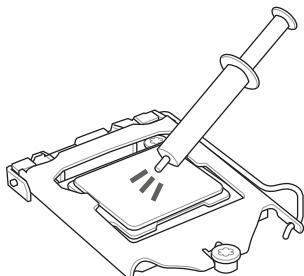


CAUTION! Apply the Thermal Interface Material to the CPU heatsink and CPU before you install the heatsink and fan if necessary.

To install the CPU heatsink and fan assembly

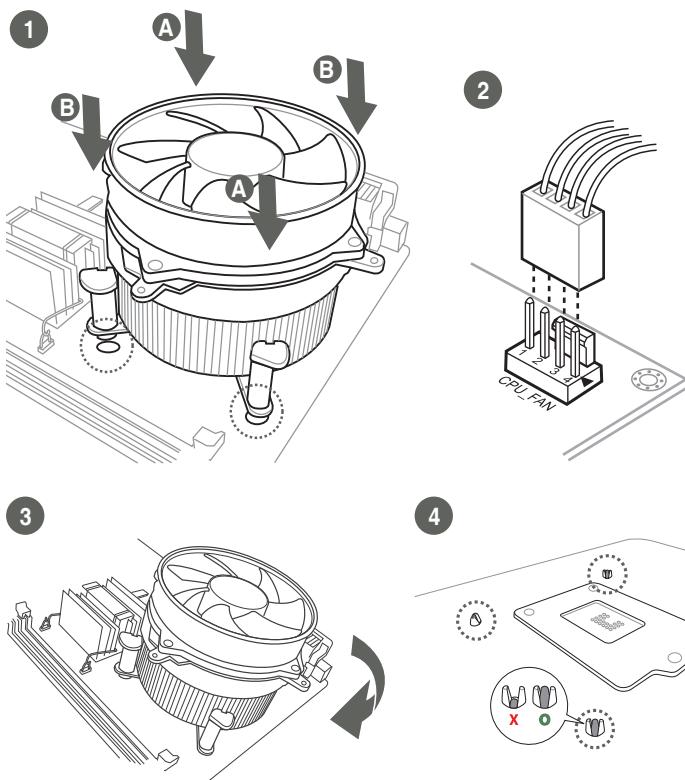


To uninstall the CPU heatsink and fan assembly

1

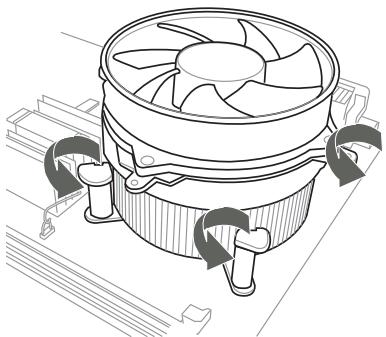


2

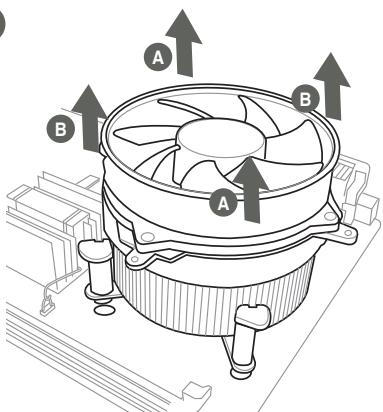


2.4 System memory


This motherboard comes with four Double Data Rate 4 (DDR4) Dual Inline Memory Module (DIMM) sockets. The figure below illustrates the location of the DDR4 DIMM sockets:

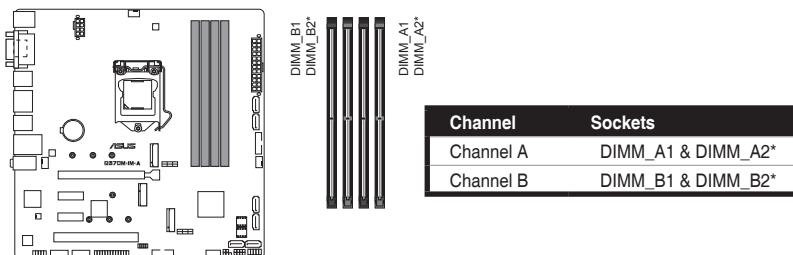


Recommended memory configuration

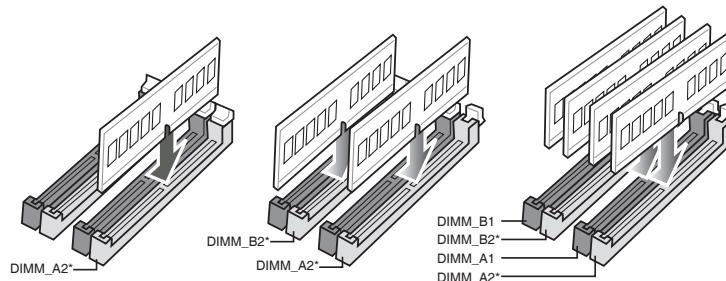

Installing a DIMM

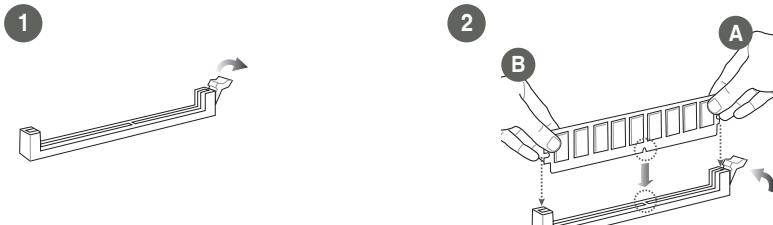


To remove a DIMM

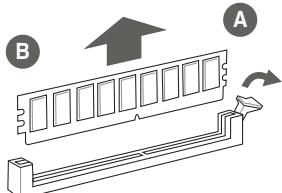

2.5 Jumpers

1. Clear RTC RAM (2-pin CLRTC)

This header allows you to clear the CMOS RTC RAM data of the system setup information such as date, time, and system passwords.

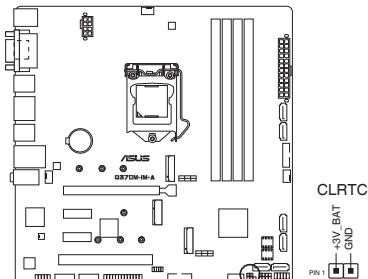

Connector type HEADER 1x2p, 2.54mm pitch, S/T

To erase the RTC RAM:


1. Turn OFF the computer and unplug the power cord.
2. Use a metal object such as a screwdriver to short the two pins.
3. Plug the power cord and turn ON the computer.
4. Hold down the **** key during the boot process and enter BIOS setup to re-enter data.



NOTE: If the steps above do not help, remove the onboard battery and move the jumper again to clear the CMOS RTC RAM data. After clearing the CMOS, reinstall the battery.

2. Chassis intrusion header (4-1 pin_CHASSIS)


This header is for a chassis-mounted intrusion detection sensor or switch. Connect one end of the chassis intrusion sensor or switch cable to this connector. The chassis intrusion sensor or switch sends a low-level signal to this connector when a chassis component is installed. The signal is then generated as a chassis intrusion event.

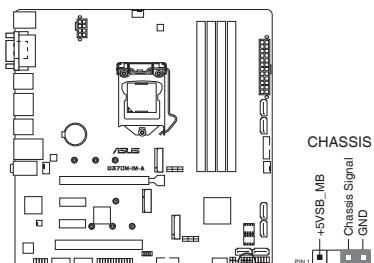

Connector type HEADER 4p, K2, 2.54mm pitch

3. Intel® ME jumper (3-pin DIS_ME)

This jumper allows you to enable or disable the Intel® ME function. Set this jumper to pins 1-2 to enable (default) the Intel® ME function and to pins 2-3 to disable it.

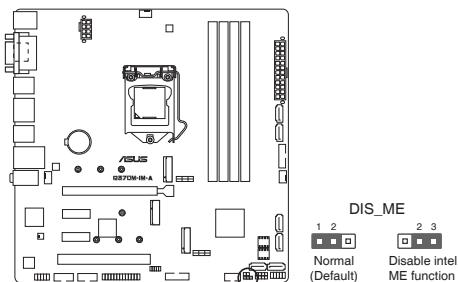


Connector type

HEADER 1x3p, 2.54mm pitch, S/T

2.6 Connectors

2.6.1 Rear panel connectors

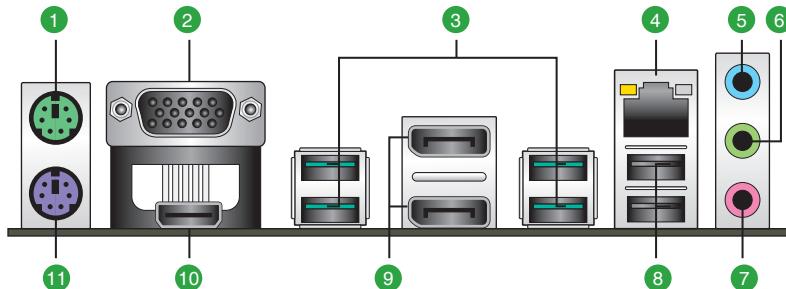

1. **PS/2 mouse port (green).** This port is for a PS/2 mouse.
2. **Video Graphics Adapter (VGA) port.** This 15-pin port is for a VGA monitor or other VGA-compatible devices.
3. **USB 3.2 Gen 2 (up to 10Gbps) ports.** These 9-pin Universal Serial Bus (USB) ports are for USB 3.2 Gen 2 devices.



- USB 3.2 Gen 2 devices can only be used for data storage.
- Due to the design of the Intel® 300 series series chipset, all USB devices connected to the USB 2.0 and USB 3.2 Gen 2 ports are controlled by the xHCl controller.
- We strongly recommend that you connect USB 3.2 Gen 2 devices to USB 3.2 Gen 2 ports for faster and better performance from your USB 3.2 Gen 2 devices.

4. **LAN (RJ-45) ports.** These ports allow Gigabit connection to a Local Area Network (LAN) through a network hub.

LAN port LED indications

Activity/Link LED		Speed LED	
Status	Description	Status	Description
Off	No link	OFF	10Mbps connection
Orange	Linked	ORANGE	100Mbps connection
Orange (Blinking)	Data activity	GREEN	1Gbps connection
Orange (Blinking then steady)	Ready to wake up from S5 mode		

Activity Link LED Speed LED

LAN port

5. **Line In port (light blue).** This port connects to the tape, CD, DVD player, or other audio sources.
6. **Line Out port (lime).** This port connects to a headphone or a speaker. In the 4.1, and 5.1 channel configurations, the function of this port becomes Front Speaker Out.
7. **Microphone port (pink).** This port connects to a microphone.




Refer to the audio configuration table for the function of the audio ports in 2.1, 4.1, 5.1, or 7.1-channel configuration.

8. **USB 2.0 ports.** These 4-pin Universal Serial Bus (USB) ports are for USB 2.0/1.1 devices.
9. **DisplayPorts.** These ports are for DisplayPort-compatible devices.
10. **HDMI port.** This port is for a High-Definition Multimedia Interface (HDMI) connector, and is HDCP compliant allowing playback of HD DVD, Blu-ray, and other protected content.
11. **PS/2 keyboard port (purple).** This port is for a PS/2 keyboard.

2.6.2 Internal connectors


1. USB 3.2 Gen 1 connectors (20-1 pin U32G1_56; U32G1_78)

Connect a USB 3.2 Gen 1 module to any of these connectors for additional USB 3.2 Gen 1 front or rear panel ports. These connectors comply with USB 3.2 Gen 1 specifications and provide faster data transfer speeds of up to 5 Gbps, faster charging time for USB-chargeable devices, optimized power efficiency, and backward compatibility with USB 2.0.

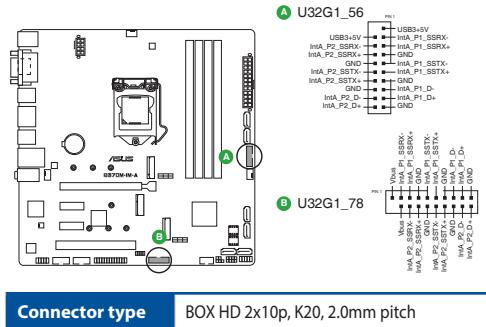


2. LPT connector (26-1pin LPT)

The LPT (Line Printing Terminal) connector supports devices such as a printer. LPT standardizes as IEEE 1284, which is the parallel port interface on IBM PC-compatible computers.

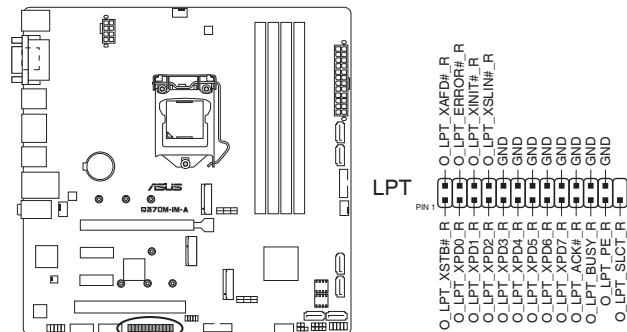

3. USB 2.0 connector (10-1 pin USB1112)

This connector is for an USB 2.0 port. Connect the USB cable to this connector. This USB connector complies with USB 2.0 specification that supports up to 480 Mbps connection speed.

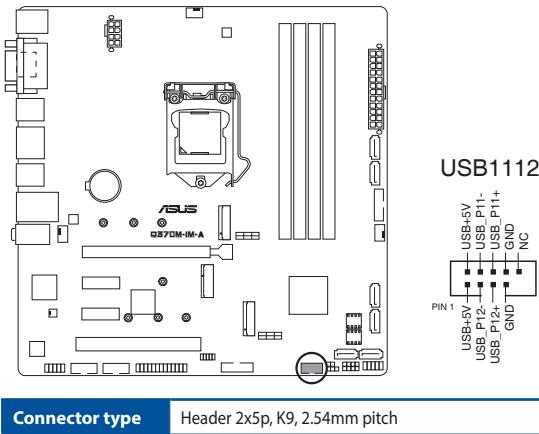


CAUTION! Never connect a 1394 cable to the USB connector. Doing so will damage the motherboard.



NOTE: The USB cable is purchased separately.


4. MONO out header (2-pin MONO_OUT)

This internal mono out header allows connection to an internal, low power speaker for basic system sound capability. You can connect a 3W speaker to this header, but the subsystem is capable of driving a speaker load of 2 Ohms at 2 Watts (rms).

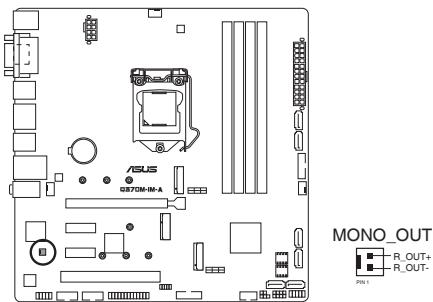

5. CPU and chassis fan connectors (4-pin CPU_FAN, 4-pin CHA_FAN1/2)

Connect the fan cables to the fan connectors on the motherboard, ensuring that the black wire of each cable matches the ground pin of the connector.

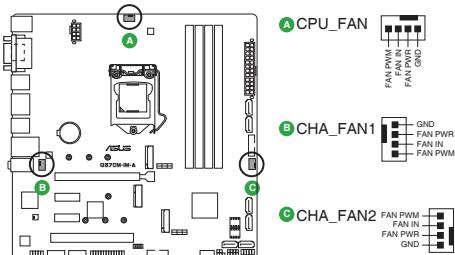


Connector type WAFER HD 4p, 2.54mm pitch, S/T



CAUTION: Do not forget to connect the fan cables to the fan connectors. Insufficient air flow inside the system may damage the motherboard components. These are not jumpers! Do not place jumper caps on the fan connectors!

6. Speaker connector (4-pin SPEAKER)


The 4-pin connector is for the chassis-mounted system warning speaker. The speaker allows you to hear system beeps and warnings.

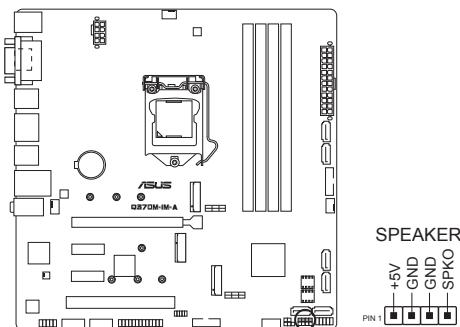

Connector type HEADER 1x4p, 2.54mm pitch, S/T

7. Front panel system panel connector (10-1 pin F_PANEL)

This connector supports several chassis-mounted functions.

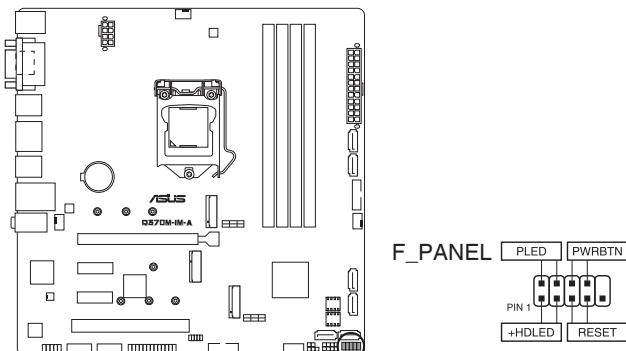

Connector type Header 2x5p, K10, 2.54mm pitch

- **System power LED (2-pin +PWR_LED)**

This 2-pin connector is for the system power LED. Connect the chassis power LED cable to this connector. The system power LED lights up when you turn on the system power, and blinks when the system is in sleep mode.

- **Hard disk drive activity LED (2-pin +HDD_LED)**

This 2-pin connector is for the HDD Activity LED. Connect the HDD Activity LED cable to this connector. The IDE LED lights up or flashes when data is read from or written to the HDD.

- **ATX power button/soft-off button (2-pin PWR_BTN)**


This 2-pin connector is for the system power button.

- **Reset button (2-pin RESET)**

This 2-pin connector is for the chassis-mounted reset button for system reboot without turning off the system power.

8. M.2 socket 3

These sockets allow you to install M.2 SSD modules.

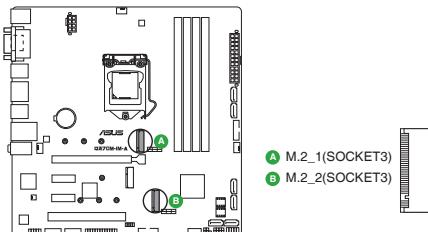


NOTES:

- The M.2 SSD module is purchased separately.
- These sockets support M Key and 2242/2260/2280 storage devices.

9. M.2 Wi-Fi


This socket connects to an M.2 Wi-Fi device.

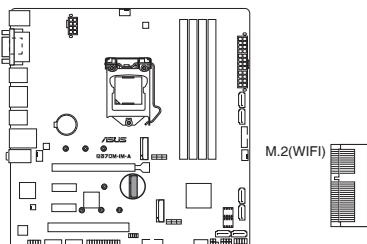

 **NOTE:** The M.2 Wi-Fi module is purchased separately.


10. Serial ATA 6.0Gb/s connectors (7-pin SATA6G_1~6)

These connectors connect to Serial ATA 6.0 Gb/s hard disk drives or an optical drive via Serial ATA 6.0 Gb/s signal cables.

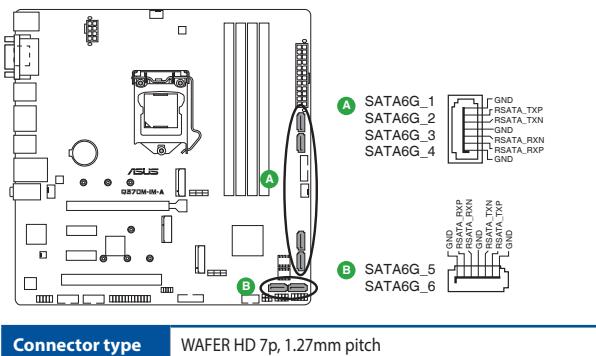

11. LPC Debug header

This header allows connection to a LPC Debug card.

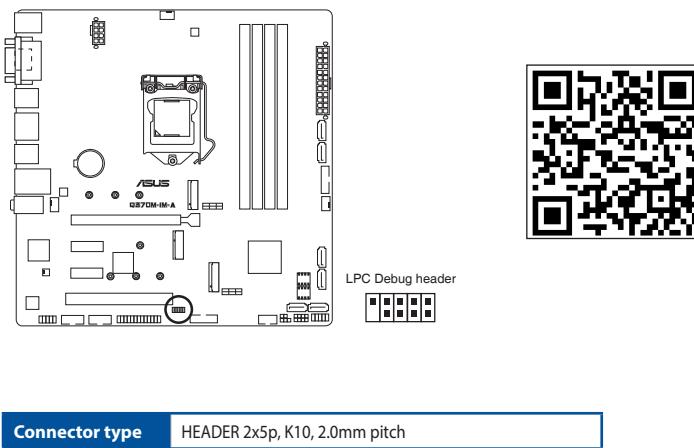


IMPORTANT!

- Scan the QR code to view the meaning of each debugging code.
- Debugging codes are only available for ASUS LPC Debug cards.
- Contact your region sales representative for LPC Debug cards ordering.

12. Serial port connectors (10-pin COM1, COM2)

These connectors are for serial (COM) ports. Connect the serial port cables to these connectors, then install the module to a slot opening at the back of the system chassis.

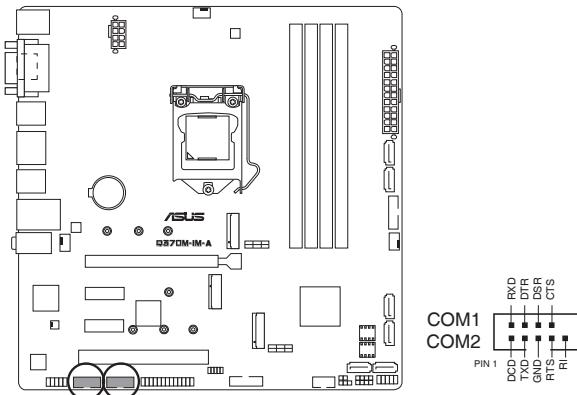


Connector type BOX header 2x5p, K10, 2.0mm pitch



NOTE: The serial port cables are purchased separately.


13. ATX power connectors (24-pin EATXPWR, 8-pin ATX12V)

Correctly orient the ATX power supply plugs into these connectors and push down firmly until the connectors completely fit.

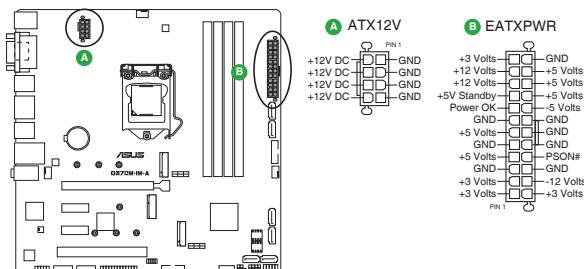

14. Front panel audio connector (10-1 pin AAFP)

This connector is for a chassis-mounted front panel audio I/O module that supports HD Audio standard. Connect one end of the front panel audio I/O module cable to this connector.

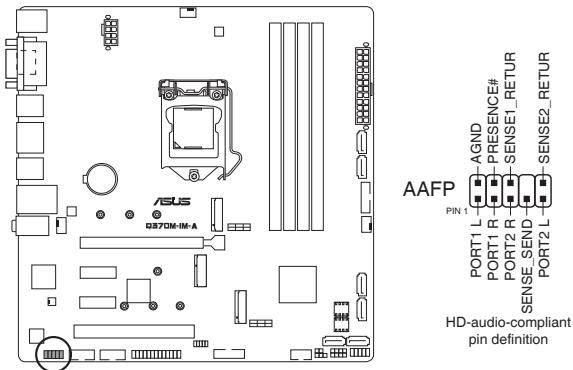

Connector type HEADER 2x5p, K8, 2.54mm pitch



IMPORTANT!

- We recommend that you connect a high-definition front panel audio module to this connector to avail of the motherboard's high-definition audio capability.
- If you want to connect a high-definition front panel audio module to this connector, set the HD Audio Controller item in the BIOS setup to [Enabled].

Chapter 3

BIOS setup



Scan the QR code to view the BIOS update guide.



3.1 BIOS setup program

Use the BIOS Setup program to update the BIOS or configure its parameters. The BIOS screens include navigation keys and brief online help to guide you in using the BIOS Setup program.

Entering BIOS Setup at startup

To enter BIOS Setup at startup:

Press <Delete> or <F2> during the Power-On Self Test (POST). If you do not press <Delete> or <F2>, POST continues with its routines.

Entering BIOS Setup after POST

To enter BIOS Setup after POST:

- Press <Ctrl>+<Alt>+ simultaneously.
- Press the reset button on the system chassis.
- Press the power button to turn the system off then back on. Do this option only if you failed to enter BIOS Setup using the first two options.



NOTE: Using the power button, reset button, or the <Ctrl>+<Alt>+ keys to reboot a running operating system can cause damage to your data or system. Always shut down the system properly from the operating system.



IMPORTANT:

- Visit the ASUS website at www.asus.com to download the latest BIOS file for this motherboard.
- The default BIOS settings for this motherboard apply to most working conditions and ensures optimal performance. If the system becomes unstable after changing any BIOS settings, load the default settings to regain system stability. Select the option **Restore Defaults** under the Exit Menu or press hotkey F3.
- The BIOS setup screens shown in this section are for reference purposes only, and may not exactly match what you see on your screen.

3.1.1 BIOS menu screen

Menu bar

The menu bar on top of the screen has the following main items:

Main	For changing the basic system configuration.
Ai Tweaker	For changing the overclocking settings
Advanced	For changing the advanced system settings.
Monitor	For displaying the system temperature, power status, and changing the fan settings
Boot	For changing the system boot configuration.
Tool	For configuring options for special functions
Exit	For selecting the exit options and loading default settings.

To select an item on the menu bar, press the right or left arrow key on the keyboard until the desired item is highlighted.

3.2 Main menu

The Main menu provides you an overview of the basic system information, and allows you to set the system date, time, language, and security settings.

3.2.1 System Language [English]

Allows you to choose the BIOS language version from the options. Configuration options: [English] [Français] [Deutsch] [简体中文] [繁體中文] [日本語] [Español] [Русский] [Korean]

3.2.2 System Date [Day MM/DD/YYYY]

Allows you to set the system date.

3.2.3 System Time [HH:MM:SS]

Allows you to set the system time.

3.2.4 Security

The Security menu items allow you to change the system security settings.



- If you have forgotten your BIOS password, erase the CMOS Real Time Clock (RTC) RAM to clear the BIOS password. See section **2.5 Jumpers** for information on how to erase the RTC RAM.
- The **Administrator** or **User Password** items on top of the screen show the default **Not Installed**. After you set a password, these items show **Installed**.

Administrator Password

If you have set an administrator password, we recommend that you enter the administrator password for accessing the system.

To set an administrator password:

1. Select the **Administrator Password** item and press <Enter>.
2. From the **Create New Password** box, key in a password, then press <Enter>.
3. From the **Confirm New Password** box, key in your password again to confirm the password, then click **OK**.

To change an administrator password:

1. Select the **Administrator Password** item and press <Enter>.
2. From the **Enter Current Password** box, key in the current password, then press <Enter>.
3. From the **Create New Password** box, key in a new password, then press <Enter>.
4. From the **Confirm New Password** box, key in your password again to confirm the password, then click **OK**.

To clear the administrator password, follow the same steps as in changing an administrator password, but click **OK** when prompted to create/confirm the password. After you clear the password, the **Administrator Password** item on top of the screen shows **Not Installed**.

User Password

If you have set a user password, you must enter the user password for accessing the system. The **User Password** item on top of the screen shows the default **Not Installed**. After you set a password, this item shows **Installed**.

To set a user password:

1. Select the **User Password** item and press <Enter>.
2. From the **Create New Password** box, key in a password, then press <Enter>.
3. From the **Confirm New Password** box, key in your password again to confirm the password, then click **OK**.

To change a user password:

1. Select the **User Password** item and press <Enter>.
2. From the **Enter Current Password** box, key in the current password, then press <Enter>.
3. From the **Create New Password** box, key in a new password, then press <Enter>.

4. From the **Confirm New Password** box, key in your password again to confirm the password, then click **OK**.

To clear the user password, follow the same steps as in changing a user password, but click **OK** when prompted to create/confirm the password. After you clear the password, the **User Password** item on top of the screen shows **Not Installed**.

3.3 Ai Tweaker menu

The Ai Tweaker menu items allow you to configure overclocking-related items.



Be cautious when changing the settings of the Ai Tweaker menu items. Incorrect field values can cause the system to malfunction.



The configuration options for this section vary depending on the CPU and DIMM model you installed on the motherboard.

3.3.1 CPU Power Enhancement

This item allows you to reset the CPU load-line to the Intel default settings.

Configuration options: [Auto] [Disabled]

3.3.2 CPU Core Ratio

This item allows you to set the CPU core ratio limit per core or synchronize automatically to all cores.

Configuration options: [Auto] [Sync All Cores] [Per Core]



When the CPU Core Ratio is set to **[Sync All Cores]** or **[Per Core]**, the following item appears.

1-Core Ratio Limit

Enter **[Auto]** to apply the CPU default Turbo Ratio setting or manually assign a 1-Core Limit value that must be higher than or equal to the 2-Core Ratio Limit.



When the CPU Core Ratio is set to **[Per Core]**, the following items appears.

2-Core Ratio Limit

Enter **[Auto]** to apply the CPU default Turbo Ratio setting or manually assign a 2-core ratio limit that must be higher than or equal to the 3-core ratio limit.



If you assign a value for 2-Core Ratio Limit, do not set the 1-Core Ratio Limit to **[Auto]**.

3-Core Ratio Limit

Enter **[Auto]** to apply the CPU default Turbo Ratio setting or manually assign a 3-core ratio limit that must be higher than or equal to the 4-core ratio limit.



If you assign a value for 3-Core Ratio Limit, do not set the 1-Core Ratio Limit and 2-Core Ratio Limit to **[Auto]**.

4-Core Ratio Limit

Enter **[Auto]** to apply the CPU default Turbo Ratio setting or manually assign a 4-core ratio limit that must be higher than or equal to the 5-core ratio limit.



If you assign a value for 4-Core Ratio Limit, do not set the 1-Core Ratio Limit, 2-Core Ratio Limit, and 3-Core Ratio Limit to **[Auto]**.

5-Core Ratio Limit

Enter **[Auto]** to apply the CPU default Turbo Ratio setting or manually assign a 5-core ratio limit that must be higher than or equal to the 6-core ratio limit.



If you assign a value for 5-Core Ratio Limit, do not set the 1-Core Ratio Limit, 2-Core Ratio Limit, 3-Core Ratio Limit and 4-Core Ratio Limit to **[Auto]**.

6-Core Ratio Limit

Enter **[Auto]** to apply the CPU default Turbo Ratio setting or manually assign a 6-core ratio limit that must be lower than or equal to the 5-core ratio limit.



If you assign a value for 4-Core Ratio Limit, do not set the 1-Core Ratio Limit, 2-Core Ratio Limit, 3-Core Ratio Limit, 4-Core Ratio Limit, and 5-Core Ratio Limit to **[Auto]**.

BCLK Frequency: DRAM Frequency Ratio

Allows you set the CPU bus speed to DRAM speedratio.

[Auto] DRAM speed is set to the optimized settings.

[100:133] The BCLK frequency to DRAM speed ratio is set to 100:133.

[100:100] The BCLK frequency to DRAM speed ratio is set to 100:100.

3.3.3 DRAM Odd Ratio Mode

This item allows you to enable or disable availability of odd DRAM ratios for improved granularity.

Configuration options: **[Enabled]** **[Disabled]**

3.3.4 DRAM Frequency

This item allows you to set the memory operating frequency. The configurable options vary with the BCLK (base clock) frequency setting. Select the auto mode to apply the optimized setting.

Configuration options: **[Auto]** **[DDR4-800MHz]** - **[DDR4-8533MHz]**

3.3.5 Power-saving & Performance Mode

Power-saving & Performance Mode lets you configure the power usage to boost or enhance system performance.

- [Auto] Automatically adjusts the power usage based on the system load.
- [Max Power-Saving Mode] Enables all power-saving settings for maximum energy-saving condition
- [Performance Mode] Disables all power-saving settings to achieve a high system performance.

3.3.6 DRAM Timing Control

The sub-items in this menu allow you to set the DRAM timing control features. Use the <+> and <-> keys to adjust the value. To restore the default setting, type [auto] using the keyboard and press the <Enter> key.



Changing the values in this menu may cause the system to become unstable! If this happens, revert to the default settings.

Primary Timings

DRAM CAS# Latency

Configuration option: [Auto]

DRAM RAS# to CAS# Delay

Configuration option: [Auto]

DRAM RAS# ACT Time

Configuration options: [Auto]

DRAM Command Rate

Configuration options: [Auto] [1N] [2N] [3N] [N:1]

Secondary Timings

DRAM RAS# to RAS# Delay L

Configuration option: [Auto]

DRAM RAS# to RAS# Delay S

Configuration option: [Auto]

DRAM REF Cycle Time

Configuration option: [Auto]

DRAM Refresh Interval

Configuration option: [Auto]

DRAM WRITE Recovery Time

Configuration option: [Auto]

DRAM READ to PRE Time

Configuration option: [Auto]

DRAM FOUR ACT WIN Time

Configuration option: [Auto]

DRAM WRITE to READ Delay

Configuration option: [Auto]

DRAM WRITE to READ Delay L

Configuration option: [Auto]

DRAM WRITE to READ Delay S

Configuration option: [Auto]

DRAM CKE Minimum Pulse Width

Configuration option: [Auto]

DRAM Write Latency

Configuration option: [Auto]

Skew Control**ODT RTT WR (CHA)**

Configuration options: [Auto] [0 DRAM CLOCK] [80 DRAM CLOCK] [120 DRAM CLOCK] [240 DRAM CLOCK] [255 DRAM CLOCK]

ODT RTT PARK (CHA)

Configuration options: [Auto] [0 DRAM CLOCK] [34 DRAM CLOCK] [40 DRAM CLOCK] [48 DRAM CLOCK] [60 DRAM CLOCK] [80 DRAM CLOCK] [120 DRAM CLOCK] [240 DRAM CLOCK]

ODT RTT NOM (CHA)

Configuration options: [Auto] [0 DRAM CLOCK] [34 DRAM CLOCK] [40 DRAM CLOCK] [48 DRAM CLOCK] [60 DRAM CLOCK] [80 DRAM CLOCK] [120 DRAM CLOCK] [240 DRAM CLOCK]

ODT RTT WR (CHB)

Configuration options: [Auto] [0 DRAM CLOCK] [80 DRAM CLOCK] [120 DRAM CLOCK] [240 DRAM CLOCK] [255 DRAM CLOCK]

ODT RTT PARK (CHB)

Configuration options: [Auto] [0 DRAM CLOCK] [34 DRAM CLOCK] [40 DRAM CLOCK] [48 DRAM CLOCK] [60 DRAM CLOCK] [80 DRAM CLOCK] [120 DRAM CLOCK] [240 DRAM CLOCK]

ODT RTT NOM (CHB)

Configuration options: [Auto] [0 DRAM CLOCK] [34 DRAM CLOCK] [40 DRAM CLOCK] [48 DRAM CLOCK] [60 DRAM CLOCK] [80 DRAM CLOCK] [120 DRAM CLOCK] [240 DRAM CLOCK]

ODT_READ_DURATION

Configuration option: [Auto]

ODT_READ_DELAY

Configuration option: [Auto]

ODT_WRITE_DURATION

Configuration option: [Auto]

ODT_WRITE_DELAY
Configuration option: [Auto]

Data Rising Slope
Configuration option: [Auto]

Data Rising Slope Offset
Configuration option: [Auto]

Cmd Rising Slope
Configuration option: [Auto]

Cmd Rising Slope Offset
Configuration option: [Auto]

Ctl Rising Slope
Configuration option: [Auto]

Ctl Rising Slope Offset
Configuration option: [Auto]

Clk Rising Slope
Configuration option: [Auto]

Clk Rising Slope Offset
Configuration option: [Auto]

Data Falling Slope
Configuration option: [Auto]

Data Falling Slope Offset
Configuration option: [Auto]

Cmd Falling Slope
Configuration option: [Auto]

Cmd Falling Slope Offset
Configuration option: [Auto]

Ctl Falling Slope
Configuration option: [Auto]

Ctl Falling Slope Offset
Configuration option: [Auto]

Clk Falling Slope
Configuration option: [Auto]

Clk Falling Slope Offset
Configuration option: [Auto]

RTL IOL Control

DRAM RTL INIT Value
Configuration option: [Auto]

DRAM RTL (CHA DIMM0 Rank0)
Configuration option: [Auto]

DRAM RTL (CHA DIMM0 Rank1)
Configuration option: [Auto]

DRAM RTL (CHA DIMM1 Rank0)
Configuration option: [Auto]

DRAM RTL (CHA DIMM1 Rank1)
Configuration option: [Auto]

DRAM RTL (CHB DIMM0 Rank0)
Configuration option: [Auto]

DRAM RTL (CHB DIMM0 Rank1)
Configuration option: [Auto]

DRAM RTL (CHB DIMM1 Rank0)
Configuration option: [Auto]

DRAM RTL (CHB DIMM1 Rank1)
Configuration option: [Auto]

DRAM IOL (CHA DIMM0 Rank0)
Configuration option: [Auto]

DRAM IOL (CHA DIMM0 Rank1)
Configuration option: [Auto]

DRAM IOL (CHA DIMM1 Rank0)
Configuration option: [Auto]

DRAM IOL (CHA DIMM1 Rank1)
Configuration option: [Auto]

DRAM IOL (CHB DIMM0 Rank0)
Configuration option: [Auto]

DRAM IOL (CHB DIMM0 Rank1)
Configuration option: [Auto]

DRAM IOL (CHB DIMM1 Rank0)
Configuration option: [Auto]

DRAM IOL (CHB DIMM1 Rank1)
Configuration option: [Auto]

IO Latency offset

CHA IO_Latency_offset
Configuration option: [Auto]

CHB IO_Latency_offset
Configuration option: [Auto]

IO Latency RFR delay

CHA RFR delay
Configuration option: [Auto]

CHB RFR delay
Configuration option: [Auto]

Memory Training Algorithms

Early Command Training
Configuration options: [Enabled] [Disabled]

SenseAmp Offset Training
Configuration options: [Enabled] [Disabled]

Early ReadMPR Timing Centering 2D
Configuration options: [Enabled] [Disabled]

Read MPR Training
Configuration options: [Enabled] [Disabled]

Receive Enable Training
Configuration options: [Enabled] [Disabled]

Jedec Write Leveling
Configuration options: [Enabled] [Disabled]

Early Write Time Centering 2D
Configuration options: [Enabled] [Disabled]

Early Read Time Centering 2D
Configuration options: [Auto] [Enabled] [Disabled]

Write Timing Centering 1D
Configuration options: [Enabled] [Disabled]

Write Voltage Centering 1D
Configuration options: [Enabled] [Disabled]

Read Timing Centering 1D
Configuration options: [Enabled] [Disabled]

DIMM ODT Training*
Configuration options: [Auto] [Enabled] [Disabled]

Max RTT_WR
Configuration options: [ODT Off] [120Ohms]

DIMM RON Training*
Configuration options: [Auto] [Enabled] [Disabled]

Write Drive Strength/Equalization 2D*
Configuration options: [Enabled] [Disabled]

Write Slew Rate Training*
Configuration options: [Enabled] [Disabled]

Read ODT Training*
Configuration options: [Enabled] [Disabled]

Read Equalization Training*
Configuration options: [Enabled] [Disabled]

Read Amplifier Training*
Configuration options: [Enabled] [Disabled]

Write Timing Centering 2D
Configuration options: [Enabled] [Disabled]

Read Timing Centering 2D
Configuration options: [Enabled] [Disabled]

Command Voltage Centering
Configuration options: [Enabled] [Disabled]

Write Voltage Centering 2D
Configuration options: [Enabled] [Disabled]

Read Voltage Centering 2D
Configuration options: [Enabled] [Disabled]

Late Command Training

Configuration options: [Auto] [Enabled] [Disabled]

Round Trip Latency

Configuration options: [Auto] [Enabled] [Disabled]

Turn Around Timing Training

Configuration options: [Enabled] [Disabled]

Rank Margin Tool

Configuration options: [Enabled] [Disabled]

Memory Test

Configuration options: [Enabled] [Disabled]

DIMM SPD Alias Test

Configuration options: [Enabled] [Disabled]

Receive Enable Centering 1D

Configuration options: [Enabled] [Disabled]

Retrain Margin Check

Configuration options: [Enabled] [Disabled]

Write Drive Strength Up/Dn independently

Configuration options: [Enabled] [Disabled]

Third Timings**tRDRD_sg**

Configuration option: [Auto]

tRDRD_dg

Configuration option: [Auto]

tRDWR_sg

Configuration option: [Auto]

tRDWR_dg

Configuration option: [Auto]

tWRWR_sg

Configuration option: [Auto]

tWRWR_dg

Configuration option: [Auto]

tWRRD_sg

Configuration option: [Auto]

tWRRD_dg

Configuration option: [Auto]

tRDRD_dr

Configuration option: [Auto]

tRDRD_dd

Configuration option: [Auto]

tRDWR_dr

Configuration option: [Auto]

tRDWR_dd

Configuration option: [Auto]

tWRWR_dr

Configuration option: [Auto]

tWRWR_dd

Configuration option: [Auto]

tWRRD_dr

Configuration option: [Auto]

tWRRD_dd

Configuration option: [Auto]

TWRPRE

Configuration option: [Auto]

TRDPRE

Configuration option: [Auto]

tREFIX9

Configuration option: [Auto]

OREF_RI

Configuration option: [Auto]

Misc.**MRC Fast Boot**

Allows you to enable, disable or automatically set the MRC fast boot.

Configuration options: [Auto] [Enabled] [Disabled]

DRAM CLK Period

Configuration options: [Auto] [1] – [58]

Memory Scrambler

Set this item to enable or disable memory scrambler support.

Configuration options: [Enabled] [Disabled]

Channel A DIMM Control

Allows you to enable or disable the Channel A DIMM slots.

Configuration options: [Enable Both DIMMs] [Disable DIMM0] [Disable DIMM1] [Disable Both DIMMs]

Channel B DIMM Control

Allows you to enable or disable the Channel B DIMM slots.

Configuration options: [Enable Both DIMMs] [Disable DIMM0] [Disable DIMM1] [Disable Both DIMMs]

MCH Full Check

Enable this item to enhance the stability of your system. Disable this item to enhance the DRAM overclocking capability.

Configuration options: [Auto] [Enabled] [Disabled]

Training Profile

Configuration options: [Auto] [Standard Profile] [ASUS User Profile]

DLLBwEn

Configuration option: [Auto]

SPD Write Disable

Configuration options: [TRUE] [FALSE]

3.3.7 DIGI+ VRM

CPU Load-line Calibration

Load-line is defined by Intel® specification and affects CPU power voltage. The CPU working voltage decreases proportionally to CPU loading. Higher load-line calibration could get higher voltage and good overclocking performance, but increases the CPU and VRM thermal conditions. Select from levels 1 to 7 to adjust the load-line slope.

Configuration options [Auto] [Default] [Level 1] - [Level 7]



The actual performance boost may vary depending on your CPU specification.



DO NOT remove the thermal module. The thermal conditions should be monitored.

CPU Power Phase Control

This item allows you to set the power phase control of the CPU.

[Auto] Automatically set the phase control mode.

[Standard] The phase control will be based on the CPU command.

[Extreme] Set to the full phase mode.



DO NOT remove the thermal module when setting this item to [Extreme]. The thermal conditions should be monitored.

CPU VRM Thermal Control

This item allows you to adjust the temperature limit of the CPU VRM.

Configuration options: [Auto] [Enabled] [Disabled]

CPU Graphics Load-Line Calibration

Load-line is defined by Intel VRM specification and affects the GT power voltage. The GT working voltage will decrease proportionally depending on the GT loading. Higher levels of the load-line calibration can get a higher voltage and a better overclocking performance but increases the GT and VRM thermal. Select from level 1 to 7 to adjust the GT power voltage from 0% to 100%. Configuration options: [Auto] [Level 1] [Level 2] [Level 3] [Level 4] [Level 5] [Level 6] [Level 7]



The boosted performance may vary depending on the GT specification. Do not remove the thermal module.

3.3.8 Internal CPU Power Management

The subitems in this menu allow you to set the CPU ratio and features.

Intel(R) SpeedStep(tm)

Allows the operating system to dynamically adjust the processor voltage and cores frequency to decrease the average power consumption and decrease average heat production. Configuration options: [Auto] [Enabled] [Disabled]

Turbo Mode

Allows you to enable your processor cores to run faster than the base operating frequency when it is below power, current and specification limit. Configuration options: [Disabled] [Enabled]

Turbo Mode Parameters



The following items appear only when you set the Turbo Mode to **[Enabled]**.

Long Duration Package Power Limit

As know as the power limit 1 in Watts. The default value will be the TDP (thermal design power). The turbo ratio can be maintained for a duration to exceed the TDP for the maximum system performance.

Configuration options: [Auto] [1] - [4095]

Package Power Time Window

As know as the power limit 1 in seconds. The value indicates the maintained duration for the turbo ratio to exceed TDP (thermal design power).

Configuration options: [Auto] [1] - [127]

Short Duration Package Power Limit

Also know as the power limit 2 in Watts. It is the second power limit to provide a rapid protection when the package power exceed power limit 1. The default setting is 1.25 times the power limit 1. According to Intel, the platform must be capable of supporting the duration for up to 10 msec when the turbo ratio exceeds the power limit 2.

Configuration options: [Auto] [1] - [4095]

IA AC Load Line

This item allows you to set the AC loadline defined in 1/100 mOhms. Use the <+> and <-> keys to adjust the value.

Configuration options: [Auto] [0.01] - [62.49]

IA DC Load Line

This item allows you to set the DC loadline defined in 1/100 mOhms. Use the <+> and <-> keys to adjust the value.

Configuration options: [Auto] [0.01] - [62.49]

3.3.9 CPU Core/Cache Current Limit Max.

This item allows you to configure a higher current limit to prevent a frequency or power throttling when overclocking.

Configuration options: [Auto] [0.00] - [255.50]

3.3.10 CPU Graphics Current Limit

Allows you to set a higher current limit to prevent a frequency or power throttling when overclocking.

3.3.11 Min. CPU Cache Ratio

This item allows you to set the minimum possible CPU cache ratio.

Configuration option: [Auto]

3.3.12 Max. CPU Cache Ratio

This item allows you to set the maximum possible CPU cache ratio.

Configuration option: [Auto]

3.3.13 Max. CPU Graphics Ratio

This item allows you to set the maximum possible CPU graphics ratio.

Configuration option: [Auto]

3.3.14 DRAM Voltage

This item allows you to configure the voltage for the DRAM.

Configuration options: [Auto] [1.20V] [1.25V] [1.35V] [1.40V]

3.3.15 DRAM REF Voltage Control

DRAM CTRL REF Voltage

Configures the DRAM reference voltage on the control lines. The reference voltage will be the DRAM voltage times the configured value.

Configuration options: [Auto] [0.39500X] - [0.63000X]

DRAM DATA REF Voltage on CHB

Configures the DRAM reference voltage on the control lines of channel B. The reference voltage will be the DRAM voltage times the configured value. It is recommended to configure the value close to the standard value.

Configuration option: [Auto] [0.39500X] - [0.63000X]

DRAM DATA REF Voltage on CHA DIMMO Rank0 BL0-7

Configures the DRAM Data REF Voltage.

Configuration option: [Auto]

DRAM DATA REF Voltage on CHA DIMMO Rank1 BL0-7

Configures the DRAM Data REF Voltage.

Configuration option: [Auto]

DRAM DATA REF Voltage on CHA DIMM1 Rank0 BL0-7

Configures the DRAM Data REF Voltage.

Configuration option: [Auto]

DRAM DATA REF Voltage on CHA DIMM1 Rank1 BL0-7

Configures the DRAM Data REF Voltage.

Configuration option: [Auto]

DRAM DATA REF Voltage on CHB DIMM0 Rank0 BL0-7

Configures the DRAM Data REF Voltage.

Configuration option: [Auto]

DRAM DATA REF Voltage on CHB DIMM0 Rank1 BL0-7

Configures the DRAM Data REF Voltage.

Configuration option: [Auto]

DRAM DATA REF Voltage on CHB DIMM1 Rank0 BL0-7

Configures the DRAM Data REF Voltage.

Configuration option: [Auto]

DRAM DATA REF Voltage on CHB DIMM1 Rank1 BL0-7

Configures the DRAM Data REF Voltage.

Configuration option: [Auto]

3.4 Advanced menu

The Advanced menu items allow you to change the settings for the CPU and other system devices.



Be cautious when changing the settings of the Advanced menu items. Incorrect field values can cause the system to malfunction.

3.4.1 Platform Misc Configuration

The items in this menu allow you to configure the platform-related features.

PCI Express Native Power Management

This item allows you to enhance the power saving feature of PCI Express and perform ASPM operations in the operating system. Configuration options: [Disabled] [Enabled]



The following item appears only when you set the PCI Express Native Power Management to [Enabled].

Native ASPM [Disabled]

[Enabled]	Windows® Vista OS controls the ASPM (active state power management) support for devices.
[Disabled]	BIOS controls the ASPM support for the device.
[Auto]	Automatic configuration.

PCH - PCI Express options

PCH DMI ASPM

This item allows you to control the Active State Power Management on both NB (NorthBridge) side and SB (SouthBridge) side of the DMI Link. Configuration options: [Disabled] [L0s] [L1] [L0sL1] [Auto]

ASPM

This item allows you to select the ASPM state for energy-saving conditions. Configuration options: [Disabled] [L0s] [L1] [L0sL1] [Auto]

L1 Substates

This item allows you to select the PCI Express L1 Substates settings. Configuration options: [Disabled] [L1.1] [L1.1 & L1.2]

PCI Express Clock Gating

This item allows you to enable or disable PCI Express Clock Gating for each port. Configuration options: [Disabled] [Enabled]

SA - PCI Express options

DMI Link ASPM Control

This item allows you to control the Active State Power Management on both CPU and PCH (platform controller hub). Both DMI link ASPM control items of the CPU and PCH sides must be enabled for the ASPM to take effect. Configuration options: [Disabled] [L0s] [L1] [L0sL1]

PEG-ASPM

This item allows you to select the ASPM state for energy-saving conditions, or use the ASUS optimized energy saving profile. Configuration options: [Disabled] [Auto] [ASPM L0s] [ASPM L1] [ASPM L0sL1]

3.4.2 CPU Configuration

The items in this menu show CPU-related information the BIOS automatically detects.



The items shown in the submenu may be different depending on the type of CPU installed.

SW Guard Extensions

This item enables/disables the Software Guard Extensions (SGX). Configuration options: [Disabled] [Enabled] [Software Controlled]

Tcc Offset Time Window

This item allows you to specify the time window for the Running Average Temperature Limit (RATL) feature. Configuration options: [Auto] [Disabled] [5 ms] [10 ms] [55 ms] [156 ms] [375 ms] [500 ms] [750 ms] ~ [256 sec]

Hardware Prefetcher

This item allows you to turn on/off the MLC streamer prefetcher. Configuration options: [Disabled] [Enabled]

Adjacent Cache Line Prefetcher

This item allows you to turn on/off prefetching adjacent cache lines. Configuration options: [Disabled] [Enabled]

Intel (VMX) Virtualization Technology

When set to [Enabled], a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology. Configuration options: [Disabled] [Enabled]

Active Processor Cores

This item allows you to select the number of CPU cores to activate in each processor package. Configuration options: [All] [1] [2] [3] [4] [5] [6] [7]



For some CPU types, only [All] and [1] appear.

Thermal Monitor

The item allows you to enable or disable Thermal Monitor.

Configuration options: [Disabled] [Enabled]

CPU Power Management Control

This item allows you to manage and configure the CPU's power.

Intel(R) SpeedStep(tm)

This item allows your system to support more than two frequency ranges.

Configuration options: [Auto] [Disabled] [Enabled]

Intel(R) Speed Shift Technology

This item allows you to enable or disable Intel(R) Speed Shift Technology support. When enabled, CPPC v2 interface allows hardware controlled P-states. Configuration options: [Auto] [Disabled] [Enabled]

Turbo Mode

This item allows you to automatically set the CPU cores to run faster than the base operating frequency when it is below the operating power, current and temperature specification limit. Configuration options: [Enabled] [Disabled]



Turbo Mode is only available on selected CPU models only.

CPU C-states

This item allows you to set the power saving of the CPU states. Configuration options: [Auto] [Disabled] [Enabled]



The following items appear only when you set the CPU C-States to [Enabled].

Enhanced C-states [Enabled]

[Enabled] Enables enhanced C1 state.

[Disabled] Disables enhanced C1 state.

CPU C3 Report [Enabled]

Allows you to disable or enable the CPU C3 report to OS. Configuration options:

[Enabled] [Disabled]

CPU C6 Report [Disabled]

Allows you to disable or enable the CPU C6 report to OS. Configuration options: [Enabled] [Disabled]

CPU C7 Report [Disabled]

Allows you to disable or enable the CPU C7 report to OS. Configuration options: [Disabled] [CPU C7] [CPU C7s]

CPU C8 Report [Disabled]

Allows you to disable or enable the CPU C8 report to OS. Configuration options: [Enabled] [Disabled]

CPU C9 Report [Disabled]

Allows you to disable or enable the CPU C9 report to OS. Configuration options: [Enabled] [Disabled]

CPU C10 Report [Disabled]

Allows you to disable or enable the CPU C10 report to OS. Configuration options: [Enabled] [Disabled]

CFG Lock

This item allows you to enable or disable the CFG lock. Configuration options: [Disabled] [Enabled]

3.4.3 System Agent (SA) Configuration

VT-d

Allows you to enable or disable VT-d function on MCH. Configuration options: [Enabled] [Disabled]

Above 4G Decoding

Allows you to enable or disable the 4G decoding for 64-bit devices when the system supports the 64-bit PCI decoding. Configuration options: [Enabled] [Disabled]

Memory Configuration

Memory Remap

Allows you to enable or disable remapping the memory above 4GB. Configuration options: [Disabled] [Enabled]

Graphics Configuration

Allows you to select a primary display from iGPU, and PCIe graphical devices.

Primary Display

Allows you to select which of the iGPU/PCIe Graphics device should be the Primary Display. Configuration options: [Auto] [CPU Graphics] [PCIe] [PEG]

iGPU Multi-Monitor

Allows you to enable the iGPU Multi-Monitor. Set this item to [Enabled] to empower both integrated and discrete graphics. The iGPU shared system memory size will be fixed at 64MB. Configuration options: [Disabled] [Enabled]

DVMT Pre-Allocated

Allows you to select DVMT 5.0 Pre_Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device. Configuration options: [32M] [64M] [96M] ~ [1024M]

RC6(Render Standby)

Allows you to enable or disable render standby support. Configuration options: [Disabled] [Auto]

PEG Port Configuration

Allows you to configure the PEG Port settings.

PCIEX16_1 Link Speed

Allows you to configure the PCIEX16_1 speed. Configuration options: [Auto] [Gen1] [Gen2] [Gen3]

3.4.4 PCH Configuration

PCI Express Configuration

PCIe Speed

Allows you to configure the PCIe speed. Configuration options: [Auto] [Gen1] [Gen2] [Gen3]

IOAPIC 24-119 Entries

Sets to whether allow IOAPIC 24-119 Entries to expand to PIRQI-PIRQX. Configuration options: [Disabled] [Enabled]

System Time and Alarm Source

Allows you to select source of system time and alarm functions.

Configuration options: [ACPI Time and Alarm Device] [Legacy RTC]

DeepSx Power Policies

Allows you to configure DeepSx Mode.

Configuration options: [Disabled] [Enabled in S4-S5]

3.4.5 PCH Storage Configuration

While entering Setup, the BIOS automatically detects the presence of SATA devices. The SATA Port items show **Empty** if no SATA device is installed to the corresponding SATA port.

SATA Controller(s)

Enables or disables onboard the SATA device. Configuration options: [Disabled] [Enabled]



The following items appear only when you set SATA Controller(s) to [Enabled].

SATA Mode Selection

Determines how SATA controller(s) operate. This PCH SKU does not support RST feature. Configuration options: [AHCI] [Intel RST Premium with Intel Optane System Acceleration (RAID)]

Aggressive LPM Support

This item is designed for LPM (link power management) support with a better energy saving conditions. When disabled, the hot plug function of SATA ports are disabled. Configuration options: [Disabled] [Enabled]

Smart Self Test

This item allows you to enable or disable the SMART Self Test on all HDDs during POST. Configuration options: [Disabled] [Enabled]

SATA6G_1~6(Gray)

Allow you to enable/disable the SATA6G_1~6 port. Configuration options: [Disabled] [Enabled]

SATA6G_1~6 Hot Plug

These items allow you to enable/disable SATA Hot Plug Support. Configuration options: [Disabled] [Enabled]

3.4.6 PCH-FW Configuration

TPM Device Selection

This item allows you to select the TPM device. Configuration options: [Discrete TPM] [Firmware TPM]

3.4.7 AMT Configuration

End of Post Message

This item allows you to enable or disable End of Post Message sent to ME. Configuration options: [Disabled] [Send in DXE]

USB Provisioning of AMT

This item allows you to enable or disable AMT USB Provisioning. Configuration options: [Enabled] [Disabled]

Secure Erase Configuration

Secure Erase mode

This item allows you to change Secure Erase module behavior. Configuration options: [Simulated] [Real]

Force Secure Erase

This item allows you to enable or disable Force Secure Erase on next boot. Configuration options: [Enabled] [Disabled]

OEM Flags Settings

MEBx hotkey Pressed

This item allows you to enable or disable automatic MEBx hotkey press.

Configuration options: [Disabled] [Enabled]

MEBx Selection Screen

This item allows you to enable MEBx selection screen by pressing 1 to enter ME Configure Screen or pressing 2 to initiate a remote connection.

Configuration options: [Disabled] [Enabled]

Unconfigure ME

This item allows you to unconfigure ME by resetting the MEBx password to default.

Configuration options: [Disabled] [Enabled]

3.4.8 Trusted Computing

Security Device Support

This item allows you to enable or disable BIOS support for security devices.

Configuration options: [Disabled] [Enabled]

SHA-1 PCR Bank

Allows you to enable or disable SHA-1 PCR Bank. Configuration options: [Enabled] [Disabled]

SHA256 PCR Bank

Allows you to enable or disable SHA384 PCR Bank. Configuration options: [Enabled] [Disabled]

SHA384 PCR Bank

Allows you to enable or disable SHA256 PCR Bank. Configuration options: [Enabled] [Disabled]

Pending operation

Allows you to schedule an operation for security devices. Reboot your system for the changes to take effect. Configuration options: [None] [TPM Clear]

Platform Hierarchy

Allows you to enable or disable Platform Hierarchy. Configuration options: [Enabled] [Disabled]

Storage Hierarchy

Allows you to enable or disable Storage Hierarchy. Configuration options: [Enabled] [Disabled]

Endorsement Hierarchy

Allows you to enable or disable Endorsement Hierarchy. Configuration options: [Enabled] [Disabled]

TPM2.0 UEFI Spec Version

Allows you to select the TCG2 spec version support.

Configuration options: [TCG_1_2] [TCG_2]

Physical Presence Spec Version

Allows you to select the PPI spec version support.

Configuration options: [1.2] [1.3]

3.4.9 Onboard Devices Configuration

Hyper M.2X16

This item allows you to detect the SSD intalled onto the Hyper M.2 X16 card.

[Enabled]	Two or three SSDs installed onto the Hyper M.2 X16 card can be detected.
[Disabled]	Only one SSD installed onto the Hyper M.2 X16 card can be detected.



The number of the SSDs that can be detected varies depending on the configurations of the PCIe X16 slots.

HD Audio

[Enabled]	Enables the HD Audio Device.
[Disabled]	Disables the HD Audio Device.

Intel LAN Controller

[Enabled]	Enables the Intel LAN controller.
[Disabled]	Disables the controller.



The following item appears only when you set **Intel LAN Controller** to [Enabled].

Intel LAN PXE Option ROM

This item appears only when you set the previous item to [Enabled] and allows you to enable or disable the PXE Option ROM of the Intel LAN controller. Configuration options: [Disabled] [Enabled]

Connectivity mode (Wi-Fi & Bluetooth)

This item allows you to enable or disable the Wi-Fi and Bluetooth connectivity module. Configuration options: [Disabled] [Enabled]

Serial Port Configuration

The sub-items in this menu allow you to set the serial port configuration.

Serial Port

Allows you to enable or disable the serial port (COM). Configuration options: [Disabled] [Enabled]



The following item appears only when you set **Serial Port** to **[Enabled]**.

Change Settings

Allows you to choose the setting for Super IO device.

Configuration options: [IO=3F8h; IRQ=4] [IO=2F8h; IRQ=3] [IO=3E8h; IRQ=4] [IO=2E8h; IRQ=3]

Serial Port 2 Configuration

The sub-items in this menu allow you to set the serial port configuration.

Serial Port

Allows you to enable or disable the serial port (COM). Configuration options: [Disabled] [Enabled]



The following item appears only when you set **Serial Port** to **[Enabled]**.

Change Settings

Allows you to choose the setting for Super IO device.

Configuration options: [IO=3F8h; IRQ=4] [IO=2F8h; IRQ=3] [IO=3E8h; IRQ=4] [IO=2E8h; IRQ=3]

Parallel Port Configuration

Allows you to set parameters of Parallel Port.

Parallel Port

Allows you to enable or disable the parallel port (LPT/LPTE).

Configuration options: [Disabled] [Enabled]



The following item appears only when you set **Serial Port** to **[Enabled]**.

Change Settings

Allows you to choose the setting for Super IO device.

Configuration options: [Auto] [IO=378h; IRQ=5] [IO=378h; IRQ=5,6,7,9,10,11,12] [IO=278h; IRQ=5,6,7,9,10,11,12] [IO=3BCh; IRQ=5,6,7,9,10,11,12]

Device Mode

This item allows you to change the Printer Port mode.

Configuration options: [STD Printer Mode] [SPP Mode] [EPP-1.9 and SPP Mode] [EPP-1.7 and SPP Mode] [ECP Mode] [ECP and EPP 1.9 Mode] [ECP and EPP 1.7 Mode]

3.4.10 APM Configuration

CEC Ready

Enable this item to allow your system to comply with CEC (California Energy Commission) regulations to save some power at S0 state. Configuration options: [Enable] [Disabled]

Restore AC Power Loss

[Power On] The system goes into on state after an AC power loss.

[Power Off] The system goes into off state after an AC power loss.

[Last State] The system goes into either off or on state, whatever the system state was before the AC power loss.

Power On By PCI-E

This item allows you to enable or disable the Wake-on-LAN function of the onboard LAN controller or other installed PCIe LAN cards. Configuration options: [Disabled] [Enabled]

Power On By Ring

[Disabled] Disables the Ring devices to generate a wake event.

[Enabled] Enables the Ring devices to generate a wake event.

Power On By RTC

This item allows you to enable or disable the RTC (Real-Time Clock) to generate a wake event and configure the RTC alarm date. When enabled, you can set the days, hours, minutes, or seconds to schedule an RTC alarm date. Configuration options: [Disabled] [Enabled]

3.4.11 Serial Port Console Redirection

Console Redirection

Allows you enable or disable the console redirection feature. Configuration options: [Enabled] [Disabled]

Legacy Console Redirection Settings

Redirection COM Port

Allows you to select a COM port to display redirection of Legacy OS and Legacy OPROM Messages.

Configuration options: [COM] [COM1 (PCI Bus0, Dev0, Func0) (Disabled)]

Resolution

This allows you to set the number of rows and columns supported on the Legacy OS.

Configuration options: [80x24] [80x25]

Redirection After POST

This setting allows you to specify if Bootloader is selected than Legacy console redirection.

[Always Enable] Legacy Console Redirection is enabled for Legacy OS.

[Bootloader] Legacy Console Redirection is disabled before booting to Legacy OS.

Console Redirection

This setting allows you to enable or disable console redirection. Configuration options: [Disabled] [Enabled]

3.4.12 Intel TXT Information

This menu displays the Intel TXT information.

3.4.13 PCI Subsystem Settings

SR-IOV Support

Allows you to enable or disable Single Root IO Virtualization Support.

Configuration options: [Enable] [Disabled]

3.4.14 USB Configuration



The USB Devices item lists auto-detected values. If no USB device is detected, the item shows None.

Legacy USB Support

[Enabled] Enables the support for USB devices on legacy operating systems (OS).

[Disabled] USB devices are only available when running BIOS Setup.

[Auto] Allows the system to detect the presence of USB devices at startup. If detected, the USB controller legacy mode is enabled. If no USB device is detected, the legacy USB support is disabled.

XHCI Hand-off



This item is set to [Disabled] by default for the EHCI (enhanced host controller interface) support by XHCI drivers in operating systems.

[Disabled]	Support XHCI by XHCI drivers for operating systems with XHCI support.
[Enabled]	Support XHCI by BIOS for operating systems without XHCI support.

USB Single Port Control

This item allows you to enable or disable the individual USB ports.



Refer to the manual for the location of the USB ports.

3.4.15 Network Stack Configuration

Network Stack

This item allows user to disable or enable the UEFI network stack. Configuration options: [Disabled] [Enabled]



The following two items appear only when you set the previous item to [Enabled].

Ipv4 PXE Support

This item allows user to disable or enable the Ipv4 PXE Boot support. Configuration options: [Disabled] [Enabled]

Ipv6 PXE Support

This item allows user to disable or enable the Ipv6 PXE Boot support. Configuration options: [Disabled] [Enabled]

3.4.16 NVMe Configuration

This menu displays the NVMe controller and drive information of the connected devices.

3.4.17 HDD Secure Erase

This menu displays the HDDs that support Secure Erase function.

3.4.18 HDD/SSD SMART Information

This menu displays the SMART information of the connected devices.

3.5 Monitor menu

The Monitor menu displays the system temperature/power status, and allows you to change the fan settings.

CPU / MotherBoard Temperature

The onboard hardware monitor automatically detects and displays the CPU/ motherboard temperatures. Select **Ignore** if you do not wish to display the detected temperature.

CPU / Chassis Fan1/2 Speed

The onboard hardware monitor automatically detects and displays the CPU / chassis fan speeds in rotations per minute (RPM). If the fan is not connected to the motherboard, the field shows N/A. Select **Ignore** if you do not wish to display the detected speed.

CPU Core Voltage, 3.3V Voltage, 5V Voltage, 12V Voltage

The onboard hardware monitor automatically detects the voltage output through the onboard voltage regulators. Select **Ignore** if you do not want to detect this item.

Q-Fan Configuration

Q-Fan Tuning

Click **[OK]** button to detect the lowest speed and configure the minimum duty circle for each fan. Do not shut down or reset your system during the tuning progress.
Configuration options: **[Ok]** **[Cancel]**

CPU Q-Fan Control

[Disabled] Disables the CPU Q-Fan control feature.

[PWM Mode] Enable the CPU Q-Fan control in PWM mode for 4-pin CPU fan.



The following items appear only when you set **CPU Q-Fan Control** to **[PWM Mode]**.

CPU Fan Step Up

This item allows you to set the value of the CPU fan step up.

Configuration options: **[0 sec]** **[2.1 sec]** **[2.8 sec]** **[3.6 sec]** **[4.2 sec]** **[5.0 sec]** **[6.3 sec]** **[8.5 sec]** **[12 sec]** **[25 sec]**

CPU Fan Step Down

This item allows you to set the value of the CPU fan step down.

Configuration options: **[0 sec]** **[2.1 sec]** **[2.8 sec]** **[3.6 sec]** **[4.2 sec]** **[5.0 sec]** **[6.3 sec]** **[8.5 sec]** **[12 sec]** **[25 sec]**

CPU Fan Speed Low Limit

This item appears only when you enable the CPU Q-Fan Control feature and allows you to disable or set the CPU fan warning speed. Configuration options: [Ignore] [200RPM] [300 RPM] [400 RPM] [500 RPM] [600RPM]

CPU Fan Profile

This item appears only when you enable the CPU Q-Fan Control feature and allows you to set the appropriate performance level of the CPU fan.

- [Standard] Sets to [Standard] to make the CPU fan automatically adjust depending on the CPU temperature.
- [Silent] Sets to [Silent] to minimize the fan speed for quiet CPU fan operation.
- [Turbo] Sets to [Turbo] to achieve maximum CPU fan speed.
- [Manual] Sets to [Manual] to assign detailed fan speed control parameters.



The following four items appear only when you set **CPU Fan Profile** to [Manual].

CPU Upper Temperature

Use the <+> and <-> keys to adjust the upper limit of the CPU temperature.

CPU Fan Max. Duty Cycle(%)

Use the <+> and <-> keys to adjust the maximum CPU fan duty cycle. The values range from 20% to 100%. When the CPU temperature reaches the upper limit, the CPU fan will operate at the maximum duty cycle.

CPU Middle Temperature

Use the <+> or <-> keys to set the value for CPU Middle Temperature. The range of the values depends on the CPU installed.

CPU Fan Middle Duty Cycle(%)

Use the <+> or <-> keys to adjust the CPU fan middle duty cycle. When the CPU temperature reaches the middle value, the CPU fan operates at the middle duty cycle.

CPU Lower Temperature

Displays the lower limit of the CPU temperature.

CPU Fan Min. Duty Cycle(%)

Use the <+> and <-> keys to adjust the minimum CPU fan duty cycle. When the CPU temperature is under the lower limit, the CPU fan will operate at the minimum duty cycle.

Chassis Fan 1/2 Q-Fan Control

- [PWM mode] Enables the chassis Q-Fan control in PWM mode for 4-pin chassis fan.
- [DC mode] Enables the chassis Q-Fan control in DC mode for 3-pin chassis fan.
- [Disabled] Disables the chassis Q-Fan control feature.



The following items appear only when you set the Chassis Fan Q-Fan Control to **[PWM Mode]** or **[DC Mode]**.

Chassis Fan 1/2 Q-Fan Source

This item controls the assigned fan according to the selected temperature source. Configuration options: [CPU] [MotherBoard]

Chassis Fan 1/2 Step Up

This item allows you to set the value of the Chassis fan1 step up.

Configuration options: [0 sec] [12 sec] [25 sec] [51 sec] [76 sec] [102 sec] [127 sec] [153 sec] [178 sec] [204 sec]

Chassis Fan 1/2 Step Down

This item allows you to set the value of the Chassis fan1 step down.

Configuration options: [0 sec] [12 sec] [25 sec] [51 sec] [76 sec] [102 sec] [127 sec] [153 sec] [178 sec] [204 sec]

Chassis Fan 1/2 Speed Low Limit

This item appears only when you enable the Chassis Q-Fan Control feature and allows you to disable or set the chassis fan warning speed. Configuration options: [Ignore] [200RPM] [300 RPM] [400 RPM] [500 RPM] [600 RPM]

Chassis Fan 1/2 Profile

This item appears only when you enable the Chassis Q-Fan Control feature and allows you to set the appropriate performance level of the chassis fan.

- [Standard] Sets to [Standard] to make the chassis fan automatically adjust depending on the chassis temperature.
- [Silent] Sets to [Silent] to minimize the fan speed for quiet chassis fan operation.
- [Turbo] Sets to [Turbo] to achieve maximum chassis fan speed.
- [Manual] Sets to [Manual] to assign detailed fan speed control parameters.



The following four items appear only when you set **Chassis Fan1/2 Q-Fan Control** to **[PWM mode]** and **Chassis Fan 1/2 Profile** to **[Manual]**.

Chassis Fan 1/2 Upper Temperature

Use the <+> and <-> keys to adjust the upper limit of the chassis temperature.

Chassis Fan 1/2 Max. Duty Cycle(%)

Use the <+> and <-> keys to adjust the maximum chassis fan duty cycle. When the chassis temperature reaches the upper limit, the chassis fan will operate at the maximum duty cycle.

Chassis Fan 1/2 Middle Temperature

Use the <+> or <-> keys to set the value for Chassis Fan Middle Temperature.

Chassis Fan 1/2 Middle Duty Cycle(%)

Use the <+> or <-> keys to adjust the chassis fan middle duty cycle.

Chassis Fan 1/2 Lower Temperature

Displays the lower limit of the Chassis Fan temperature.

Chassis Fan 1/2 Min. Duty Cycle(%)

Use the <+> and <-> keys to adjust the minimum chassis fan duty cycle. The values range from 20% to 100%. When the chassis temperature is under 40°C, the chassis fan will operate at the minimum duty cycle.



The following four items appear only when you set **Chassis Fan 1/2 Q-Fan Control** to **[DC Mode]** and **Chassis Fan 1/2 Profile** to **[Manual]**.

Chassis Fan 1/2 Upper Temperature

Use the <+> and <-> keys to adjust the upper limit of the chassis temperature.

Chassis Fan 1/2 Max. Duty Cycle(%)

Use the <+> and <-> keys to adjust the maximum chassis fan duty cycle. When the chassis temperature reaches the upper limit, the chassis fan will operate at the maximum duty cycle.

Chassis Fan 1/2 Middle Temperature

Use the <+> or <-> keys to set the value for Chassis Fan Middle Temperature.

Chassis Fan 1/2 Middle Duty Cycle(%)

Use the <+> or <-> keys to adjust the chassis fan middle duty cycle.

Chassis Fan 1/2 Lower Temperature

Displays the lower limit of the Chassis Fan temperature.

Chassis Fan 1/2 Min. Duty Cycle(%)

Use the <+> and <-> keys to adjust the minimum chassis fan duty cycle. The values range from 20% to 100%. When the chassis temperature is under 40°C, the chassis fan will operate at the minimum duty cycle.

Chassis Intrusion Detection Support

This item allows you to enable or disable the chassis intrusion detection function. Configuration options: [Disabled] [Enabled]

3.6 Boot menu

The Boot menu items allow you to change the system boot options.

Boot Configuration

Fast Boot

- [Enabled] Select to accelerate the boot speed.
- [Disabled] Select to go back to normal boot speed.



The following item appears only when you set Fast Boot to [Enabled].

Next Boot after AC Power Loss

- [Normal Boot] Returns to normal boot on the next boot after AC power loss.
- [Fast Boot] Accelerates the boot speed on the next boot after AC power loss.

Boot Logo Display

- [Auto] Adjusts logo automatically based on Windows® display requirements.
- [Full Screen] Maximize the boot logo size.
- [Disabled] Hide the logo during POST.

POST Delay Time

This item appears only when you set Boot Logo Display to [Auto] and [Full Screen]. This item allows you to select the desired additional POST waiting time to easily enter the BIOS setup. You can only execute the POST delay time during Normal Boot. The values range from 0 to 10 seconds.



This feature will only work under normal boot.

Bootup NumLock State

This item allows you to enable or disable power-on state of the NumLock. Configuration options: [On] [Off]

Wait for 'F1' If Error

When this item is set to [Enabled], the system waits for the F1 key to be pressed when error occurs. Configuration options: [Disabled] [Enabled]

Option ROM Messages

[Force BIOS] The third-party ROM messages will be forced to display during the boot sequence.

[Keep Current] The third-party ROM messages will be displayed only if the third-party manufacturer had set the add-on device to do so.

Interrupt 19 Capture

This item allows you to trap Interrupt 19 by the option ROMs. Configuration options: [Disabled] [Enabled]

AMI Native NVMe Driver Support [Enabled]

Configuration options: [Disabled] [Enabled]

CSM (Compatibility Support Module)

This item allows you to configure the CSM (Compatibility Support Module) items to fully support the various VGA, bootable devices and add-on devices for better compatibility.

Launch CSM

[Auto]	The system automatically detects the bootable devices and the add-on devices.
[Enabled]	For better compatibility, enable the CSM to fully support the non-UEFI driver add-on devices or the Windows® UEFI mode.
[Disabled]	Disable the CSM to fully support the non-UEFI driver add-on devices or the Windows® UEFI mode.



The following items appear only when you set the Launch CSM to [Enabled].

Boot Device Control

This item allows you to select the type of devices that you want to boot. Configuration options: [UEFI and Legacy OPROM] [Legacy OPROM only] [UEFI only]

Boot from Network Devices

This item allows you to select the type of network devices that you want to launch.

Configuration options: [Ignore] [Legacy only] [UEFI only]

Boot from Storage Devices

This item allows you to select the type of storage devices that you want to launch.

Configuration options: [Ignore] [Legacy only] [UEFI only]

Boot from PCI-E / PCI Expansion Devices

This item allows you to select the type of PCI-E expansion devices that you want to launch.

Configuration options: [Ignore] [Legacy only] [UEFI only]

Secure Boot

Allows you to configure the Windows® Secure Boot settings and manage its keys to protect the system from unauthorized access and malwares during POST.

OS Type

Allows you to select your installed operating system.

[Windows UEFI mode]	This item allows you to select your installed operating system. Execute the Microsoft® Secure Boot check. Only select this option when booting on Windows® UEFI mode or other Microsoft® Secure Boot compliant OS.
[Other OS]	Get the optimized function when booting on Windows® non-UEFI mode. Microsoft® Secure Boot only supports Windows® UEFI mode.

Key Management

This allows you to manage the Secure Boot keys.

Clear Secure Boot keys

This item appears only when you load the default Secure Boot keys. This item allows you to clear all the previously applied Secure Boot keys.

Save all Secure Boot variables

This item allows you to save all the Secure Boot keys to a USB storage device.

PK Management

The Platform Key (PK) locks and secures the firmware from any non-permissible changes. The system verifies the PK before your system enters the OS.

Save to File

This item allows you to save the downloaded PK to a USB storage device.

Set New Key

This item allows you to load the downloaded PK from a USB storage device.



The PK file must be formatted as a UEFI variable structure with time-based authenticated variable.

Delete Key

This item allows you to delete the PK from your system. Once the PK is deleted, all the system's Secure Boot keys will not be active.

KEK Management

The KEK (Key-exchange Key or Key Enrollment Key) manages the Signature database (db) and Revoked Signature database (dbx).



Key-exchange Key (KEK) refers to Microsoft® Secure Boot Key-Enrollment Key (KEK).

Save to File

Allows you to save the downloaded KEK to a USB storage device.

Set New Key

Allows you to load the downloaded KEK from a USB storage device.

Append Key

Allows you to load the additional KEK from a storage device for an additional db and dbx loaded management.



The KEK file must be formatted as a public key certificate or UEFI variable structure with time-based authenticated variable.

Delete key

Allows you to delete the Key from your system. Configuration options: [Yes] [No]

DB Management

The db (Authorized Signature database) lists the signers or images of UEFI applications, operating system loaders, and UEFI drivers that you can load on the single computer.

Save to File

Allows you to save the downloaded db to a USB storage device.

Set New Key

Allows you to load the downloaded db from a USB storage device.

Append Key

Allows you to load the additional KEK from a storage device for an additional db and dbx loaded management.



The db file must be formatted as a UEFI variable structure with time-based authenticated variable.

Delete Key

Allows you to delete the db file from your system. Configuration options: [Yes] [No]

DBX Management

The DBX (Revoked Signature database) lists the forbidden images of db items that are no longer trusted and cannot be loaded.

Save to File

Allows you to load the downloaded dbx to a USB storage device.

Set New Key

Allows you to load the downloaded dbx from a USB storage device.

Append Key

Allows you to load the additional KEK from a storage device for an additional db and dbx loaded management.



The dbx file must be formatted as a UEFI variable structure with time-based authenticated variable.

Delete key

Allows you to delete the Key from your system. Configuration options: [Yes] [No]

Boot Option Priorities

These items specify the boot device priority sequence from the available devices. The number of device items that appears on the screen depends on the number of devices installed in the system.



To select the boot device during system startup, press <F8> when ASUS Logo appears.

Boot Override

These items displays the available devices. The number of device items that appears on the screen depends on the number of devices installed in the system. Click an item to start booting from the selected device.

3.7 Tool menu

The Tool menu items allow you to configure options for special functions. Select an item then press <Enter> to display the submenu.

ASUS EZ Flash 3 Utility

This item allows you to run ASUS EZ Flash 3 utility. When you press <Enter>, a confirmation message appears. Use the left/right arrow key to select between [Yes] or [No], then press <Enter> to confirm your choice.

ASUS User Profile

This item allows you to save and load BIOS setting and profiles.

Profile Name

This item allows you to key in a profile name.

Save to Profile

This item allows you to save the current BIOS settings to the BIOS Flash, and create a profile. Key in a profile number from one to eight, press **<Enter>**, and then select **Yes**.

Load/Save Profile from/to USB Drive

This item allows you to load or save profile from your USB drive, load and save profile to your USB drive.

ASUS SPD Information

This item allows you to view the DRAM SPD information.

Event Log

A built-in event log enables easier troubleshooting by capturing useful system information.

3.8 Exit menu

The Exit menu items allow you to load the optimal default values for the BIOS items, and save or discard your changes to the BIOS items. You can access the EZ Mode from the Exit menu.

Load Optimized Defaults

This option allows you to load the default values for each of the parameters on the Setup menus. When you select this option or if you press **<F5>**, a confirmation window appears. Select **OK** to load the default values.

Save Changes & Reset

Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved. When you select this option or if you press **<F10>**, a confirmation window appears. Select **OK** to save changes and exit.

Discard Changes & Exit

This option allows you to exit the Setup program without saving your changes. When you select this option or if you press **<Esc>**, a confirmation window appears. Select **Yes** to discard changes and exit.

Launch EFI Shell from USB drives

This item allows you to attempt to launch the EFI Shell application (shellx64.efi) from one of the available filesystem devices.

Appendix

Notices

FCC Compliance Information

Responsible Party: Asus Computer International

Address: 48720 Kato Rd., Fremont, CA 94538, USA

Phone / Fax No: (510)739-3777 / (510)608-4555

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance Statement of Innovation, Science and Economic Development Canada (ISED)

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

Déclaration de conformité de Innovation, Sciences et Développement économique Canada (ISED)

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES-3(B)/NMB-3(B)

VCCI: Japan Compliance Statement

Class B ITE

この装置は、クラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

V C C I - B

KC: Korea Warning Statement

B급 기기 (가정용 방송통신기자재)

이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

REACH

Complying with the REACH (Registration, Evaluation, Authorisation, and Restriction of Chemicals) regulatory framework, we published the chemical substances in our products at ASUS REACH website at <http://csr.asus.com/english/REACH.htm>.



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.



DO NOT throw the mercury-containing button cell battery in municipal waste. This symbol of the crossed out wheeled bin indicates that the battery should not be placed in municipal waste.

ASUS Recycling/Takeback Services

ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment. We believe in providing solutions for you to be able to responsibly recycle our products, batteries, other components as well as the packaging materials. Please go to <http://csr.asus.com/english/Takeback.htm> for detailed recycling information in different regions.

Regional notice for California



WARNING

Cancer and Reproductive Harm -
www.P65Warnings.ca.gov

Google™ License Terms

Copyright© 2020 Google Inc. All Rights Reserved.

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at:

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.

See the License for the specific language governing permissions and limitations under the License.

English ASUSTeK Computer Inc. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related Directives. Full text of EU declaration of conformity is available at: www.asus.com/support

Français ASUSTeK Computer Inc. déclare par la présente que cet appareil est conforme aux critères essentiels et autres clauses pertinentes des directives concernées. La déclaration de conformité de l'UE peut être téléchargée à partir du site Internet suivant : www.asus.com/support

Deutsch ASUSTeK Computer Inc. erklärt hiermit, dass dieses Gerät mit den wesentlichen Anforderungen und anderen relevanten Bestimmungen der zugehörigen Richtlinien übereinstimmt. Der gesamte Text der EU-Konformitätserklärung ist verfügbar unter: www.asus.com/support

Italiano ASUSTeK Computer Inc. con la presente dichiara che questo dispositivo è conforme ai requisiti essenziali e alle altre disposizioni pertinenti con le direttive correlate. Il testo completo della dichiarazione di conformità UE è disponibile all'indirizzo: www.asus.com/support

Русский Компания ASUS заявляет, что это устройство соответствует основным требованиям и другим соответствующим условиям, соответствующим директиве. Подробную информацию, пожалуйста, смите на www.asus.com/support

Български С настоящото ASUSTeK Computer Inc. декларира, че това устройство е в съответствие със съществените изисквания и другите приложими постановления на свързаните директиви. Пълният текст на декларацията за съответствие на ЕС е достъпна на адрес:

www.asus.com/support

Hrvatski ASUSTeK Computer Inc. ovim izjavljuje da je ovaj uređaj u skladu s bitnim zahtjevima i ostalim odgovarajućim odredbama vezanim direktivom. Cijeli tekst EU izjave o ukladnosti dostupan je na: www.asus.com/support

Čeština Společnost ASUSTeK Computer Inc. tímto prohlašuje, že toto zařízení splňuje základní požadavky a další příslušná stanovení související směrnici. Plně znění prohlášení o shodě EU je k dispozici na adrese:

www.asus.com/support

Dansk ASUSTeK Computer Inc. erklaerer hermed, at denne enhed er i overensstemmelse med hovedkravene og andre relevante bestemmelser i de relaterede direktiver. Helle EU-overensstemmelseserklæringen kan findes på: www.asus.com/support

Nederlands ASUSTeK Computer Inc. verklaart hierbij dat dit apparaat voldoet aan de essentiële vereisten en andere relevante bepalingen van de verwante richtlijnen. De volledige tekst van de EU-verklaring van conformiteit is beschikbaar op: www.asus.com/support

Eesti Käesolevaga kinnitab ASUSTeK Computer Inc, et see seade vastab asjakohaste direktiivide oluliste nõutete ja teistele ajasääspurutevale sätetele. EL vastavusdeklaratsiooni täielik tekst on saadaval järgmisel aadressil: www.asus.com/support

Suomi ASUSTeK Computer Inc. ilmoittaa täten, että tämä laite on asiankuituvalle direktiiville olemallaan vastaavissa ja muiden tätä koskevien säädösten mukainen. EU-yhdenmukaisuusilmoituksen koko teksti on luettavissa osoitteessa: www.asus.com/support

Ελληνικά Με το παρόν, η ASUSTeK Computer Inc. δηλώνει ότι αυτή η συσκευή συμμορφώνεται με τις θεμελιώδεις απαραίτησης και άλλες σχετικές διατάξεις των Οδηγιών της ΕΕ. Το πλήρες κείμενο της δηλώσης συμβατότητας είναι διαθέσιμο στη διεύθυνση: www.asus.com/support

Magyar Az ASUSTeK Computer Inc. ezennel kijelenti, hogy ez az eszköz megfelel a kapcsolódó irányelvök lényeges követelményeinek és egyéb vonatkozó rendelkezéseinek. Az EU megfelelőségi nyilatkozat teljes szövege minden letölthető: www.asus.com/support

Latviski ASUSTeK Computer Inc. ar šo paziņo, ka šī ierīce atbilst saistītajiem Direktīvi būtiskajām prasībām un citiem citiem saistīšajiem nosacījumiem. Plīns ES atbilstības paziņojuma teksts pieejams šeit: www.asus.com/support

Lietuvių ASUSTeK Computer Inc. šiuo tvirtina, kad šis įrenginys atitinka pagrindinius reikalavimus ir kitas svarbias susijusias direktyvų nuostatas. Visą ES atitinkantes deklaracijos tekstą galima rasti: www.asus.com/support

Norsk ASUSTeK Computer Inc. erklaerer hermed at denne enheten er i samsvar med hovedsaklige krav og andre relevante forskrifter i relaterete direktiver. Fullstendig tekst for EU-samsvarserklæringen finnes på:

www.asus.com/support

Polski Firma ASUSTeK Computer Inc. niniejszym oświadczyc, że urządzenie to jest zgodne z zasadniczymi wymogami i innymi właściwymi postanowieniami powiązanych dyrektyw. Pełny tekst deklaracji zgodności UE jest dostępny pod adresem: www.asus.com/support

Português A ASUSTeK Computer Inc. declara que este dispositivo está em conformidade com os requisitos essenciais e outras disposições relevantes das Diretivas relacionadas. Texto integral da declaração da UE disponível em:

www.asus.com/support

Română ASUSTeK Computer Inc. declară că acest dispozitiv se conformează cerințelor esențiale și altor prevederi relevante ale directivelor conexe. Textul complet al declarării de conformitate a Uniunii Europene se găsește la: www.asus.com/support

Srpski ASUSTeK Computer Inc. ovim izjavljuje da je ovaj uređaj u saglasnosti sa osnovnim zahtevima i drugim relevantnim odredbama povezanimi Direktiva. Pun tekst EU deklaracije o usaglašenosti je dostupan na adresi: www.asus.com/support

Slovensky Spoločnosť ASUSTeK Computer Inc. týmto vyhlašuje, že toto zariadenie vyhovuje základným požiadavkám a ostatným príslušným ustanoveniam príslušných smerníc. Celý text vyhlásenia o zhode pre štát EU je dostupný na adrese: www.asus.com/support

Slovenščina ASUSTeK Computer Inc. izjavlja, da je ta naprava skladna z bistvenimi zahtevami in drugimi ustrezanimi določbami povezanimi direktivom. Celotno besedilo EU-izjave o skladnosti je na voljo na spletnem mestu: www.asus.com/support

Español Por la presente, ASUSTeK Computer Inc. declara que este dispositivo cumple los requisitos básicos y otras disposiciones pertinentes de las directivas relacionadas. El texto completo de la declaración de la UE de conformidad está disponible en: www.asus.com/support

Svenska ASUSTeK Computer Inc. förklrar härmed att denne enhet överensstämmer med de grundläggande kraven och andra relevanta föreskrifter i relaterade direktiv. Fulltext av EU-försäkran om överensstämme finns på: www.asus.com/support

Українська ASUSTeK Computer Inc. заявляє, що цей пристрій відповідає основним вимогам та іншим відповідним положенням відповідних Директив. Повний текст декларації відповідності стандартам ЄС доступний на: www.asus.com/support

Türkçe ASUSTeK Computer Inc., bu aygıt temel gerekliliklerle ile ilişkili Youngelerin diğer ilgili koşullarıyla uyumlu olduğunu beyan eder. AB uygunluk bildiriminin tam metni şu adresle bulunabilir: www.asus.com/support

Bosanski ASUSTeK Computer Inc. ovim izjavljuje da je ovaj uređaj usklađen sa bitnim zahtjevima i ostalim odgovarajućim odredbama vezanim direktivom. Cijeli tekst EU izjave o usklađenosti dostupan je na: www.asus.com/support

ASUS contact information

ASUSTeK COMPUTER INC.

Address 1F., No. 15, Lide Rd., Beitou Dist., Taipei City 112, Taiwan
Telephone +886-2-2894-3447
Fax +886-2-2890-7798
Web site <https://www.asus.com>

Technical Support

Telephone +86-21-38429911
Online support <https://qr.asus.com/techserv>

ASUS COMPUTER INTERNATIONAL (America)

Address 48720 Kato Rd., Fremont, CA 94538, USA
Telephone +1-510-739-3777
Fax +1-510-608-4555
Web site <https://www.asus.com/us/>

Technical Support

Support fax +1-812-284-0883
Telephone +1-812-282-2787
Online support <https://qr.asus.com/techserv>

ASUS COMPUTER GmbH (Germany and Austria)

Address Harkortstrasse 21-23, 40880 Ratingen, Germany
Web site <https://www.asus.com/de>
Online contact <https://www.asus.com/support/Product/ContactUs/Services/questionform/?lang=de-de>

Technical Support

Telephone (DE) +49-2102-5789557
Telephone (AT) +43-1360-2775461
Online support <https://www.asus.com/de/support>

