


# INSTALLATION GUIDE



## **XR100FC SERIES COMMAND PROCESSOR™ PANEL**

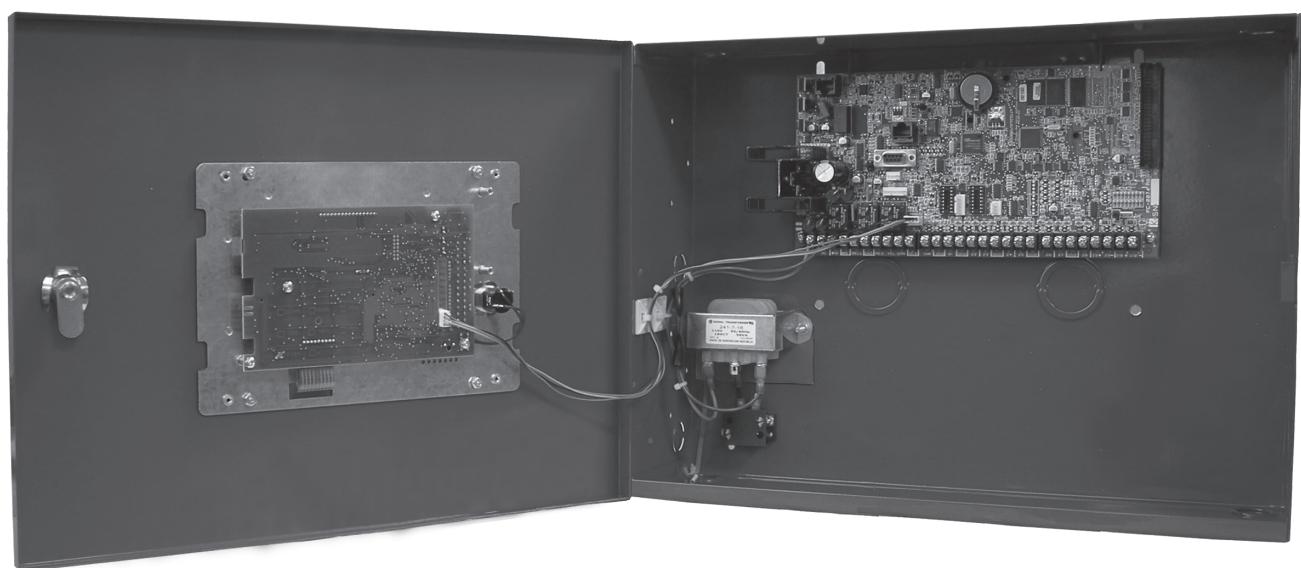

## **MODEL XR100FC SERIES COMMAND PROCESSOR™ PANEL INSTALLATION GUIDE**

### **FCC NOTICE**

This equipment generates and uses radio frequency energy and, if not installed and used properly in strict accordance with the manufacturer's instructions, may cause interference with radio and television reception. It has been type tested and found to comply with the limits for a Class A computing device in accordance with the specification in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the installer is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
- Relocate the computer with respect to the receiver
- Move the computer away from the receiver
- Plug the computer into a different outlet so that computer and receiver are on different branch circuits

If necessary, the installer should consult the dealer or an experienced radio/television technician for additional suggestions. The installer may find the following booklet, prepared by the Federal Communications Commission, helpful:

"How to Identify and Resolve Radio-TV Interference Problems."

This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402  
Stock No. 004-000-00345-4

© 2015 Digital Monitoring Products, Inc.

Information furnished by DMP is believed to be accurate and reliable.  
This information is subject to change without notice.

# TABLE OF CONTENTS

## Product Specifications

1.1	Power Supply .....	1
1.2	Communication .....	1
1.3	Panel Zones .....	1
1.4	Keypad Bus.....	1
1.5	LX-Bus™ .....	1
1.6	Outputs .....	1

## Panel Features

2.1	Description.....	1
2.2	Zone Expansion .....	1
2.3	Output Expansion .....	2
2.4	Central Station Communication.....	2
2.5	Caution Notes .....	2
2.6	Compliance Instructions .....	2

## System Components

3.1	Description.....	2
3.2	Wiring Diagram .....	3
3.3	Lightning Protection.....	3
3.4	Accessory Devices .....	4
3.4	Accessory Devices (continued).....	5

## Installation

4.1	Mounting the Enclosure.....	6
4.2	Fire Command Center LCD Keyboard.....	6
4.3	Connection.....	6
4.4	Mounting Keypads and Zone Expansion Modules.....	7

## Primary Power Supply

5.1	Transformers and AC Power Connection .....	8
-----	--	---

## Secondary Power Supply

6.1	Battery Terminals 3 and 4 .....	9
6.2	Earth Ground (GND) .....	9
6.3	Battery Only Restart .....	9
6.4	Battery Replacement Period.....	9
6.5	Discharge/Recharge.....	9
6.6	Battery Supervision.....	9
6.7	Battery Cutoff.....	9
6.8	XR100FC Series Power Requirements .....	10
6.9	Standby Battery Selection .....	12

## Bell Output

7.1	Terminals 5 and 6 .....	13
-----	-------------------------	----

## Keypad Bus

8.1	Description.....	13
8.2	Terminal 7 - RED .....	13
8.3	Terminal 8 - YELLOW .....	13
8.4	Terminal 9 - GREEN .....	13
8.5	Terminal 10 - BLACK .....	13
8.6	J8 Programming Connection .....	13
8.7	OVC LED.....	13

## Smoke and Glassbreak Detector Output

9.1	Terminals 11 and 12 .....	13
9.2	Current Rating.....	13

## Protection Zones

10.1	Terminals 13–24 .....	14
10.2	Operational Parameters.....	14
10.3	Zone Response Time.....	14
10.4	Keypad Arming Zone.....	14

# TABLE OF CONTENTS

<b>Powered Zones for 2-Wire Smoke Detectors</b>	
11.1    Terminals 25–26 and 27–28 .....	14
11.2    Compatible 2-Wire Smoke Detector Chart.....	15
<b>Dry Contact Relay Outputs</b>	
12.1    Description.....	16
12.2    Contact Rating .....	16
12.3    Model 431 Output Harness Wiring.....	16
<b>Annunciator Outputs</b>	
13.1    Description.....	16
13.2    Model 300 Harness Wiring.....	16
13.3    Model 860 Relay Module .....	16
<b>J23 6-Pin Header</b>	
14.1    Description.....	17
<b>J22 LX-Bus Expansion Connector</b>	
15.1    Description.....	17
15.2    J22 LX-Bus Header .....	17
15.3    LX-Bus Interface Cards.....	17
15.4    LX-Bus LEDs.....	17
<b>J1 Ethernet Connector (XR100NFC only)</b>	
16.1    Description.....	18
16.2    Ethernet LEDs .....	18
<b>J3 Telephone RJ Connector</b>	
17.1    Description.....	18
17.2    J10 893A Connector.....	18
17.3    Notification .....	18
17.4    Phone Line Monitor.....	18
17.5    FCC Registration .....	19
<b>Reset and Tamper Headers</b>	
18.1    J16 Reset Header .....	19
18.2    J4 Tamper Header .....	19
<b>Listed Compliance Specifications</b>	
19.1    Introduction .....	20
<b>Universal Burglary Specifications</b>	
20.1    Introduction .....	20
20.2    Wiring.....	20
20.3    Control Outside of Protected Area .....	20
20.4    Digital Dialer .....	20
20.5    Bypass Reports.....	20
20.6    System Maintenance.....	20
20.7    Listed Receivers.....	20
20.9    Wireless External Contact.....	20
20.10    Wireless Supervision Time.....	20
20.11    Detect Wireless Jamming .....	20
20.12    Bell Output.....	20
<b>Area Information</b>	
21.1    Ownership .....	21
21.2    Annunciation .....	21
21.3    Trouble Display.....	21
21.4    Closing Wait.....	21
<b>Central-Station and Proprietary Burglar-Alarm Units</b>	
<b>ANSI/UL 1610 AND ANSI/UL 1076</b>	
22.1    Opening/Closing Reports.....	21
22.2    Closing Wait.....	21
22.3    Entry Delay .....	21
22.4    Exit Delay .....	21
22.5    Proprietary Dialer .....	21

# TABLE OF CONTENTS

22.6	Standard Line Security .....	21
22.7	Wireless Audible Annunciation Option .....	21
22.8	CELL Only, Standard Line Security.....	21

## Holdup Alarm Units

### ANSI/UL 636

23.1	UL 1610 Required .....	22
23.2	1100X/1100XH Wireless Receiver.....	22
23.3	Wireless Supervision Time.....	22
23.4	LED Display.....	22
23.5	Jamming Detection .....	22
23.6	Local Alarm.....	22
23.7	Message to Transmit.....	22
23.8	Wireless Audible Annunciation Option .....	22

## Access Control System Units

### ANSI/UL 294

24.1	Panel Designation.....	22
24.2	Tamper Protection .....	22
24.3	Compatible Devices .....	22

## Universal Fire Alarm Specifications

25.1	Introduction .....	23
25.2	Wiring.....	23
25.3	Transformer .....	23
25.4	End-of-Line Resistor.....	23
25.5	System Trouble Display .....	23
25.6	Fire Display .....	23
25.7	Police Station Phone Number.....	23
25.8	System Maintenance .....	23
25.9	Audible Alarm.....	23
25.10	Fire Zone Programming.....	23
25.11	Class A Style D Zones .....	23
25.12	Listed Receivers.....	23

## Control Units for Fire-Protective Signaling Systems

### ANSI/UL 864, NFPA 72

26.1	Power Supply .....	23
26.2	Zone Restoral Reports.....	23
26.3	Power Fail Delay .....	23
26.5	DACT Systems.....	24
26.6	Local Protective Signaling Systems.....	24
26.7	Remote Station Protective Signaling Systems.....	24
26.8	Fire Protective Signaling Systems using Internet/Intranet/Cell Networks .....	25
26.9	Combination Systems.....	25
26.10	Remote Annunciators.....	25
26.11	Notification Appliances .....	26
26.12	Cross Zoning.....	26
26.13	Ground Fault.....	26
26.14	Wireless Testing .....	26
26.15	Wireless Supervision.....	26

## California State Fire Marshal Specifications

27.1	Bell Output Definition.....	26
------	-----------------------------	----

## New York City (FDNY) Specifications

28.1	Introduction .....	27
28.2	Network and Cellular Communication, Primary and Secondary .....	27
28.3	Digital Dialer Primary and Network Secondary Communication.....	27
28.3.1	Communication Programming .....	27
28.4	Wiring.....	27
28.5	Additional Requirements .....	27

# TABLE OF CONTENTS

## Wiring Diagrams

29.1	866 with NAC Extender .....	28
29.2	866 Class B Style W using Single Notification Appliance .....	29
29.3	866 Class B Style W Multiple Notification Appliances Circuit .....	30
29.4	866 Class B Style W Dual Notification Appliances Circuits .....	31
29.5	865 Class B Style W using Single Notification Appliance .....	32
29.6	865 Class B Style W Multiple Notification Appliance Circuit .....	33
29.7	865 Class B Style W Dual Notification Appliance Circuits .....	34
29.8	865 Class A Style X using Single Notification Appliance .....	35
29.9	867 Class B Style W Notification Appliance Circuit .....	36
29.10	867 Class B Style W Multiple Notification Appliance Circuit .....	37
29.11	867 Class B Style W Dual Notification Appliance Circuits .....	38
29.12	Panel Slave Communicator for FACP using 630F Announcer ..	39
29.13	Dual Style D Zone Module Installation .....	40
29.14	Derived Channel Installation Using Bosch D8122 .....	41
29.15	LX-Bus™ Module Connection .....	42
29.16	Model 860 Relay Module Connection .....	43
29.17	Powered Burglary Devices .....	43
29.18	System Sensor 2-Wire Smoke Detectors .....	44
29.19	System Sensor i4 Series Smoke and CO Detectors Using A Single COSMOD2W Module .....	45
29.20	System Sensor i4 Series Smoke and CO Detectors Using Multiple COSMOD2W Modules .....	46

## Revisions to This Document

## Certifications

## Product Specifications

### 1.1 Power Supply

Transformer Input:	Primary input: 120 VAC, 60 Hz, Secondary output: 16 VAC 56 VA
Standby Battery:	12 Vdc, 1.0 Amps Max. charging current
Auxiliary:	12 Vdc output at .5 Amp Max*
Bell Output:	12 Vdc at .7 Amp Max*

**Note:** The combined Auxiliary and Bell outputs total cannot exceed 1.2 Amps with a 56 VA Transformer.

All circuits are inherent Power Limited except the red battery wire and AC terminal.

\* For Commercial Fire installations, see the Compliance Instructions section.

### 1.2 Communication

- Built-in network communication to DMP SCS-1R or SCS-VR Receivers (XR100NFC only)
- Built-in dialer communication to DMP SCS-1R Receivers
- Optional cellular communication to DMP SCS-1R or SCS-VR Receivers
- Built-in Contact ID communication DMP Model SCS-1R Receivers
- Optional 893A Dual Phone Line Module with phone line supervision
- Can operate as a local panel

### 1.3 Panel Zones

Eight 1k Ohm EOL burglary zones (zones 1 to 8)

Two 3.3k Ohm EOL powered zone with reset (zones 9 and 10)

### 1.4 Keypad Bus

You can connect the following supervised keypads and expansion modules to the keypad bus:

- Alphanumeric keypads
- Sixteen-, eight-, four- and/or single-zone expansion modules
- Single-zone detectors
- Access control modules

### 1.5 LX-Bus™

You can connect the following devices to the LX-Bus™ provided on the panel or by the DMP Model 481, 462N, 463C, 464-263C or 464-263H Interface Cards up to the maximum number of LX-Bus™ addresses.

See Accessory Devices in section 3.4.

- Sixteen-, eight-, four- and/or single-zone expansion modules
- Model 521LX or 521LXT Smoke Detectors with CleanMe
- Model 2W-BLX or 2WT-BLX Smoke Detectors
- Graphic annunciation modules
- Relay output expansion modules

### 1.6 Outputs

The XR100FC Series provide two Single Pole, Double Throw (SPDT) relay outputs which require the installation of two Model 305 relays, each rated 1 Amp at 30 Vdc resistive (power limited sources only). A Model 431 Output Harness is required to use these outputs.

The XR100FC Series panels also provide four open collector outputs rated for 50mA each. The open collector outputs provide ground connection for a positive voltage source. A Model 300 Output Harness is required to use these outputs.

## Panel Features

### 2.1 Description

The DMP XR100FC Series Command Processor™ Panel is a versatile 12 Vdc, combined access control, burglary, and fire communicator panel with a built in LCD Fire Command Center keyboard with membrane keyswitch. A complete system can provide:

- 142 programmable inputs and outputs for commercial and industrial fire alarm service
- Eight on-board grounded burglary zones
- Two on-board 12 Vdc Class B powered zones

The powered zones have a reset capability to provide for 2-wire smoke detectors, relays, or other latching devices.

Connect a 12 or 24 Vdc regulated, power limited power supply listed for Fire Protective Signaling Systems to distribute notification appliance power between Model 865, 866 or 867 NAC outputs. Addressable smoke detectors and input modules round out the XR100FC Series to deliver a truly flexible and expansive fire detection and notification system. The Fire Alarm Control Panel is shipped pre-wired in a red metal enclosure.

### 2.2 Zone Expansion

Up to 142 additional zones are available on the XR100FC Series using DMP LCD keypad remote zone capability and zone expansion modules. The panel keypad data bus supports up to eight supervised device addresses with each address supporting up to four programmable expansion zones.

Up to 100 zones are available using the on board LX-Bus, Model 461 Interface Adaptor with 481, 462N, 463C, 464-263C or 464-263H, and any combination of single, four, eight, or 16-zone expansion modules and single-zone LX-Bus™ detectors.

**Note:** Do not use shielded wire for LX-Bus or Keypad Bus circuits.

## 2.3 Output Expansion

In addition to the two SPDT relays and four programmable open collector outputs on the XR100FC Series, you can also connect up to 25 programmable Model 716 Output Expansion Modules. These modules can provide an additional 100 programmable SPDT relays.

The XR100FC Series provides 100 Output Schedules you can use for programming the 716 to perform a variety of annunciation and control functions. You can also assign the 716 outputs to any panel Output Options such as Fire Alarm, Communication Fail, or Phone Trouble Outputs. Refer to the 716 Installation Guide (LT-0183).

The LX-Bus™ also supports the Model 717 Graphic Annunciator Module. Each 717 module supplies 20 switched ground outputs that follow the state of their assigned zones.

**Note:** The 717 supports the first eight Keypad Bus addresses. To follow Keypad Bus addresses nine through 16, install multiple 716 modules. Refer to the 717 Installation Guide (LT-0235) and 716 Installation Guide (LT-0183).

## 2.4 Central Station Communication

Program the XR100FC Series panel for reporting to DMP SCS-1R or SCS-VR Receivers using digital dialer, cellular, network, or Contact ID communication. The XR100FC Series connects at the premises to a standard RJ31X or RJ38X telephone jack. Use the DMP 893A Dual Phone Line Module when connecting the XR100FC Series panel to two separate phone lines in fire or burglary applications.

## 2.5 Caution Notes

Throughout this guide you will see caution notes containing information you need to know when installing the panel. These cautions are indicated with a yield sign. Whenever you see a caution note, make sure you completely read and understand its information. Failing to follow the caution note can cause damage to the equipment or improper operation of one or more components in the system. See the example shown below.



***Always ground the panel before applying power to any devices:*** The XR100FC Series must be properly grounded before connecting any devices or applying power to the panel. Proper grounding protects against Electrostatic Discharge (ESD) that can damage system components.

## 2.6 Compliance Instructions

For applications that must conform to a local authorities installation standard or a National Recognized Testing Laboratory certificated system, please see the Wiring Diagrams for Notification Appliances and the Listed Compliance Specifications section near the end of this guide for additional instructions.

# System Components

## 3.1 Description

The DMP XR100FC Series system is made up of an alarm panel with a built-in communicator, an enclosure, battery, one 16.5 VAC transformer, and keypads. You can use up to sixteen supervised 32-character LCD keypads; network communications; zone and output expansion modules; and initiating and indicating circuit modules. You can also connect auxiliary devices to the panel's output relays to expand the basic system control capability. Combined current requirements of additional modules may require an auxiliary power supply. Refer to the XR100FC Series Power Requirements section in this guide when calculating power requirements.

### 3.2 Wiring Diagram

The XR100FC Series diagram below shows some of the accessory modules you can connect for use in various applications. A brief description of each module follows in section 3.4.

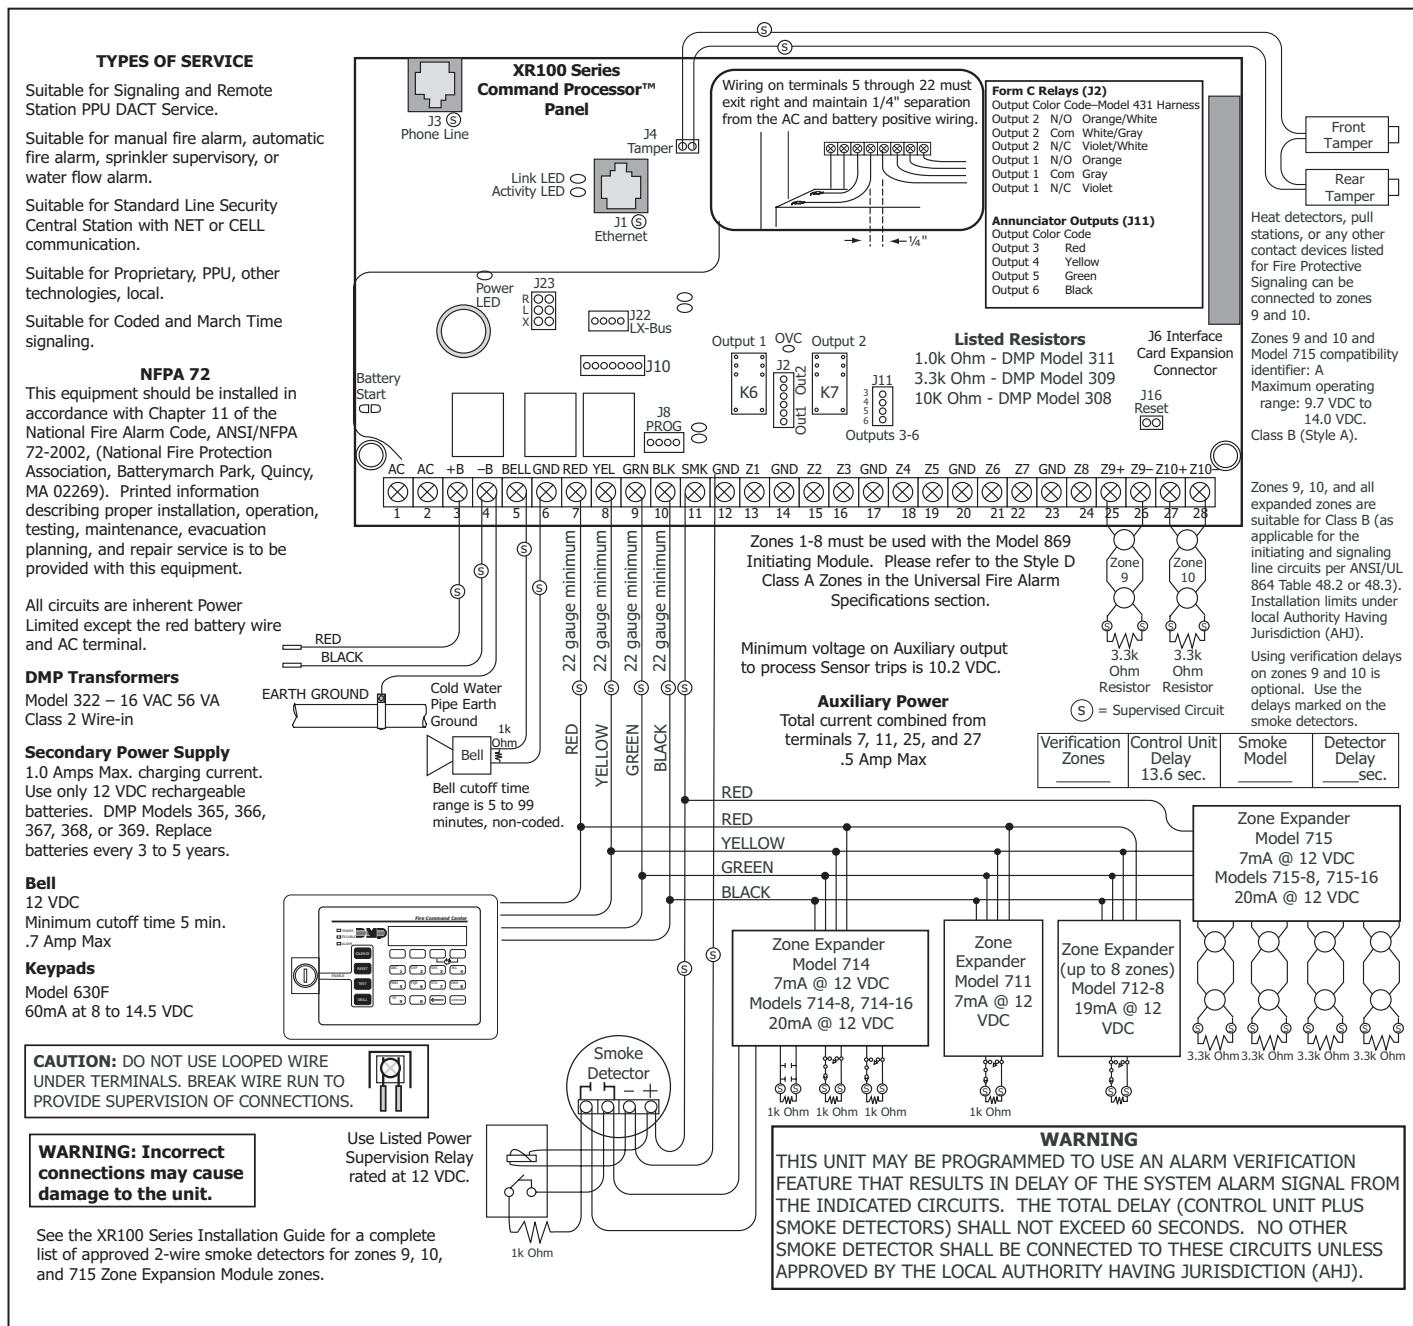


Figure 1: XR100FC Series Wiring Diagram

### 3.3 Lightning Protection

Metal Oxide Varistors and Transient Voltage Suppressors help protect against voltage surges on XR100FC Series input and output circuits. Additional surge protection is available by installing the DMP 370 or 370RJ Lightning Suppressors.

# INTRODUCTION

## 3.4 Accessory Devices

Interface Card	
462N Network Interface Card	Allows you to connect the XR100FC Series to any compatible data network and use its communication capability in place of standard dial out telephone lines. The 462N also provides an LX-Bus™ connection.
463C CDMA Cellular Communicator Card	Allows you to connect the XR100 Series to any compatible CDMA/SMS network. The 463C also provides an LX-Bus™ for connecting zone and output expansion modules to the panel.
464-263C/464-263H Cellular Communicator Card	Provides a fully supervised alarm communication path (burglary only) over the CDMA network or HSPA + network for XR100/XR500 Series panels. The 464-263C or 464-263H also provides an LX-Bus™ for connecting zone and output expansion modules to the panel.
481 Expansion Interface Card	Provides one LX-Bus for connecting up to 100 zone and output expansion modules.
Expansion Modules	
710 Bus Splitter/Repeater	Increase keypad or LX-Bus™ wiring distance to 2500 feet.
711 Single Point Zone Expanders	Provides one Class B zone for connecting burglary devices.
714, 714-8, 714-16 Zone Expanders	Provides Class B zones for connecting burglary and non-powered fire devices.
712-8 Zone Expander	Provides Class B zones for connecting burglary devices.
715, 715-8, 715-16 Zone Expanders	Provides 12 Vdc Class B powered zones for connecting smoke detectors, glassbreak detectors, and other 2- or 4-wire devices.
716 Output Expander	Provides four Form C relays (SPDT) and four switched grounds (open collector) for use in a variety of remote annunciation and control applications for use on the LX-Bus only.
717 Graphic Annunciator Module	Provides 20 zone following annunciator outputs (open collector) for use in a variety of remote annunciation and control applications for use on the LX-Bus only.
734, 734N Wiegand Interface Modules	Provides system codeless entry, and arming and disarming using access control readers.
DMP Two-Way Wireless Devices	
1100X/1100XH Wireless Receiver	Supports up to 100 devices in residential or commercial wireless operation.
1100R Repeater	Provides additional range for wireless devices.
1101 Universal Transmitter	Provides both internal and external contacts that may be used at the same time to yield two individual reporting zones from one wireless transmitter.
1102 Universal Transmitter	Provides an external contact.
1103 Universal Transmitter	Provides both and internal and external contacts that may be used at the same time to yield two individual reporting zones from one wireless transmitter. Requires EOL resistor for external contact.
1105 Universal Transmitter	Provides both internal and external contacts that may be used at the same time to yield two individual reporting zones from one wireless transmitter.
1125 PIR Motion Detector	Provides multiple lens configurations, dual coverage area selection, and sensitivity adjustments.
1127C/1127W PIR Motion Detector	Wall mount motion detector with panel programmable sensitivity and Disarm/Disable functionality.
1142BC Two-button Hold-up Belt Clip Transmitter	Provides two-button hold-up operation with a belt clip.
1142 Two-button Hold-up Transmitter	Provides permanently mounted under-the-counter two-button hold-up operation.
1161 Residential Smoke Detector	Residential smoke detector with sounder.
1162 Residential Smoke/Heat Detector	Residential smoke/heat detector with sounder and fixed rate-of-rise heat detector.
1165 Commercial Smoke Detector	Commercial smoke detector.
1165H Commercial Smoke/Heat Detector	Commercial smoke/heat detector with fixed rate-of-rise heat detector.
1165HS Commercial Smoke/Heat Detector and Sounder	Commercial smoke/heat detector with fixed rate-of-rise heat detector and sounder.
1181 PIV	Commercial Post Indicator Valve (PIV)
1182 OS&Y	Commercial Outside Screw and Yoke Valve (OS&Y)
1183-135F Heat Detector	Fixed temperature heat detector
1183-135R Heat Detector	Fixed temperature and rate-of-rise heat detector
1184 Carbon Monoxide Detector	Carbon Monoxide Detector

### 3.4 Accessory Devices (continued)


Indicating and Initiating Devices	
860 Relay Module	Provides dry relay contacts that are programmable and controlled from the DMP panel annunciator outputs. Includes one Form C (SPDT) relay rated 1 Amp @ 30 Vdc. Sockets are provided to allow the addition of three Model 305 plug-in relays. These relays can be used for electrical isolation between the alarm panel and another system or switching 5, 12, or 24 Volts to control various functions within a building or around its perimeter.
865 Supervised Style W or X Notification Circuit Module	Provides supervised alarm current when using the XR100FC Series panel bell output and up to 5 Amps at 12 or 24 Vdc when using a listed auxiliary power supply. The 865 can supervise 2-wire or 4-wire style circuits for opens and shorts with individual LED annunciation.
866 Style W Notification Circuit Module	Provides supervised alarm current using the XR100FC Series panel bell output and up to 5 Amps at 12 or 24 Vdc when using a listed auxiliary power supply. The 866 can supervise 2-wire Style W circuits for opens and shorts.
867 Style W LX-Bus Notification Circuit Module	Provides supervised alarm current using the XR100FC Series panel bell output and up to 5 Amps at 12 or 24 Vdc when using a listed auxiliary power supply. The 867 connects to the XR100FC Series panel LX-Bus™ and provides one 2-wire Style W notification circuit for ground faults, open and short conditions. Individual Bell Relay addresses Bell Ring styles.
869 Dual Class A Style D Initiating Module	Provides two Class A, Style D, 4-wire initiating zones for connecting waterflow switches and other non-powered fire and burglary devices.
Accessory Modules and Keypads	
893A Dual Phone Line Module	Allows you to supervise two standard phone lines connected to an XR100FC Series panel. The 893A module monitors the main and backup phone lines for a sustained voltage drop and alerts users when the phone line is bad.
LCD keypads	Allows you to control the panel from various remote locations. Connect up to fifteen supervised Model 630F Remote Fire Command Center, 7060, 7063, 7070, 7073, 7160, 7163, 7170, 7173 Thinline™ keypads, 7060A, 7063A, 7070A, 7073A Aqualite™ keypads, or 7760 Clear Touch™ keypad to the keypad bus using terminals 7, 8, 9, and 10.
Addressable Smoke Detectors	
521LX, 521LXT	Single-zone, addressable conventional smoke, smoke/heat detectors that connect to the LX-Bus. Includes remote maintenance reporting, drift compensation, and multi-criteria detection.
2W-BLX, 2WT-BLX	Single-zone, addressable conventional smoke, smoke/heat detectors that connect to the LX-Bus. Includes drift compensation.

## 4.1 Mounting the Enclosure

The metal enclosure for the XR100FC Series must be mounted using screws in the four mounting holes shown in Figure 2. Mount the enclosure in a secure, dry place to protect the panel from damage due to tampering or the elements. It is not necessary to remove the XR100FC Series PCB when installing the enclosure.

The enclosure dimensions are 13.44" tall, 17.1" wide, by 4.8" deep.


**Note:** When using the XR100FC Series panel for UL Listed applications, use the Model 350, 349, 341, or 352S enclosure for standby batteries.

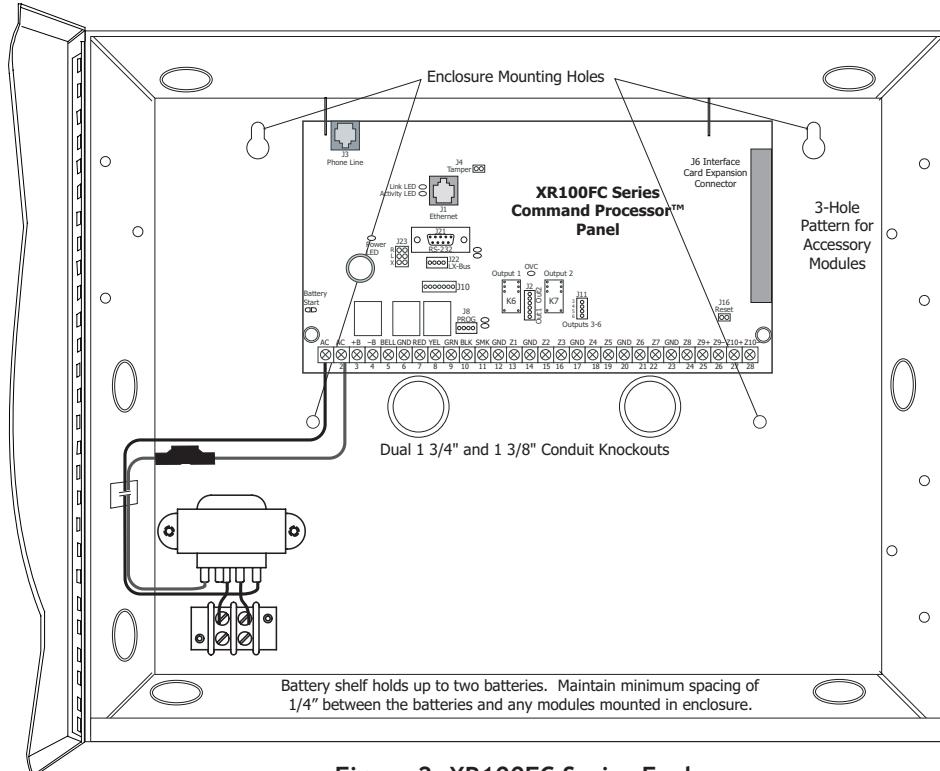

**Figure 2: XR100FC Series Enclosure**

## 4.2 Fire Command Center LCD Keyboard

A Fire Command Center LCD Keyboard has been factory installed on the XR100FC enclosure door. A keyswitch has also been installed and pre-wired to the left of the keyboard. The user can turn the keyswitch to enable the four function keys without opening the enclosure door.

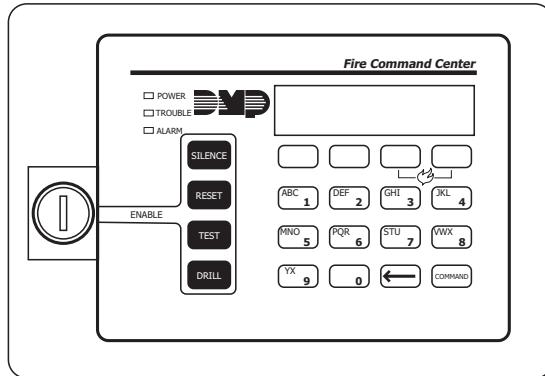

**Figure 3: Fire Command Center LCD and Keyboard**

## 4.3 Connection

The display and keyboard are factory pre-wired to the XR100FC panel J8-header. For standby battery calculations, the display draws 92mA of current in normal standby or alarm condition. See [Panel Standby Battery Calculations](#). The keyswitch is pre-wired to the membrane keyboard.

## 4.4 Mounting Keypads and Zone Expansion Modules

DMP LCD keypads have removable covers that allow you to easily mount the keypad to a wall or other flat surface using the screw holes on each corner of the base. Before mounting the base, connect the keypad wire harness leads to the keypad cable from the panel and to any device wiring run to that location. Then attach the harness to the pin connector on the PC board, mount the base, and install the keypad cover making sure all of the keys extend through their respective holes.

For mounting keypads on solid walls, or for applications where conduit is required, use the Model 695 1-1/2" deep or the Model 696 1/2" deep backboxes.

The DMP 711, 712-8, 714, 715, 716, and 717 modules are each contained in molded plastic housings with removable covers. The base provides you with mounting holes for installing the unit to a wall, switch plate, or other surface.

## 4.3 Connecting LX-Bus and Keypad Bus Devices

Several factors determine the DMP LX-Bus™ and keypad bus performance characteristics: the wire length and gauge used, the number of devices connected, and the voltage at each device. When planning an LX-Bus™ and keypad bus installation, keep in mind the following information:

1. DMP recommends using 18 or 22-gauge **unshielded** wire for all keypad and LX-Bus circuits. **Do not** use twisted pair or shielded wire for LX-Bus and keypad bus data circuits. All 22-gauge wire must be connected to a power-limited circuit and jacket wrapped.
2. On keypad bus circuits, to maintain auxiliary power integrity when using 22-gauge wire do not exceed 500 feet. When using 18-gauge wire do not exceed 1,000 feet. To increase the wire length or to add devices, install an additional power supply that is listed for Fire Protective Signaling, power limited, and regulated (12 Vdc nominal) with battery backup.
- Note:** Each panel allows a specific number of supervised keypads. Add additional keypads in the unsupervised mode. Refer to the panel installation guide for the specific number of supervised keypads allowed.
3. Maximum distance for any one bus circuit (length of wire) is 2,500 feet regardless of the wire gauge. This distance can be in the form of one long wire run or multiple branches with all wiring totaling no more than 2,500 feet. As wire distance from the panel increases, DC voltage on the wire decreases. Maximum number of LX-Bus devices per 2,500 feet circuit is 40.
4. Maximum voltage drop between the panel (or auxiliary power supply) and any device is 2.0 Vdc. If the voltage at any device is less than the required level, add an auxiliary power supply to the circuit. When voltage is too low, the devices cannot operate properly.

For additional information refer to the LX-Bus/Keypad Bus Wiring Application Note (LT-2031).

### Expansion Interface Cards (Models 481, 462N, 463C, 464-263C and 464-263H)

The LX-Bus provided on these cards requires only a 4-wire cable between the card and any devices connected to the bus. You can connect devices (zone or output expansion modules) together on the same cable or provide separate runs back to the card. The LX-Bus provides up to 100 zones or outputs.

**Note:** Do not use twisted pair or shielded wire when connecting an LX-Bus or keypad bus.

## Primary Power Supply

### 5.1 Transformers and AC Power Connection

The AC connection should be completed by a licensed electrician.

**Never share the Fire Alarm Control Panel circuit with any other equipment.**

The XR100FC panel comes supplied with a 16 VAC 56 VA transformer. The 16 VAC transformer must be wired to a dedicated unswitched 120 VAC 60 Hz circuit with at least .87A available.



**Always ground the panel before applying power to any devices!** Use 18 AWG or larger for all power connections. The XR100FC must be properly grounded before connecting any devices or applying power to the panel. Proper grounding protects against Electrostatic Discharge (ESD) that can damage system components.

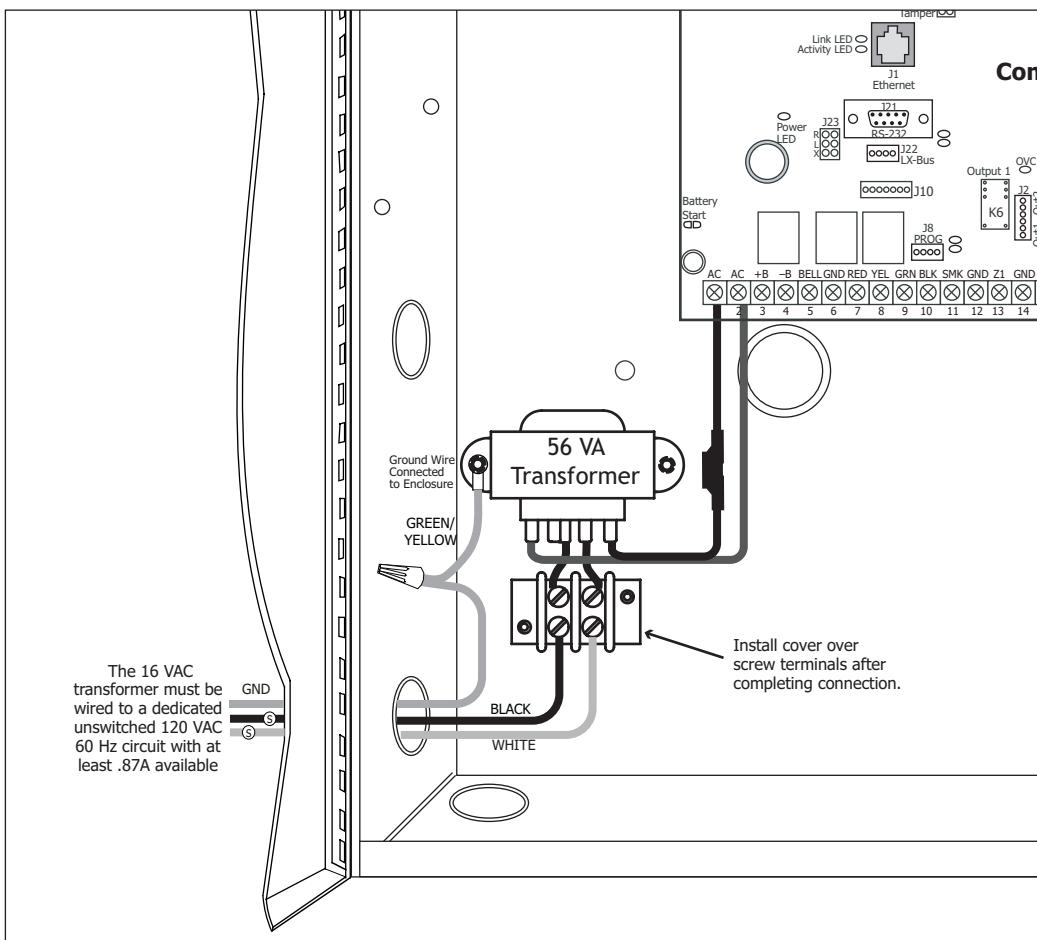


Figure 4: 56 VA Transformer Wiring

## Secondary Power Supply

### 6.1 Battery Terminals 3 and 4

Connect the black battery lead to the negative battery terminal. The negative terminal connects to the enclosure ground internally through the XR100FC Series circuit board. Connect the red battery lead to the battery positive terminal. Observe polarity when connecting the battery.

You can add a second battery in parallel using the DMP Model 318 Dual Battery Harness. **DMP requires each battery be separated by a PTC in the battery harness wiring to protect each battery from a reversal or short within the circuit.**

For listed installations, all batteries shall be installed in a DMP Model 350, 349, 341, 342, or 352S enclosure and all wiring shall run through conduit. The enclosure shall be installed to the left of the XR100FC Series enclosure to ensure Battery and AC wire separation.



**Use sealed lead-acid batteries only:** Use the DMP Model 365 (12 Vdc 9 Ah), Model 366 (12 Vdc 18 Ah), Model 368 (12 Vdc 5.0 Ah), or Model 369 (12 Vdc 7 Ah) sealed lead-acid rechargeable battery. Batteries supplied by DMP have been tested to ensure proper charging with DMP products.

GEL CELL BATTERIES CANNOT BE USED WITH THE XR100FC SERIES PANEL.

### 6.2 Earth Ground (GND)

To provide proper transient suppression, XR100FC Series panel terminal 4 must be connected to earth ground using 14 gauge or larger wire. DMP recommends connecting to a cold water pipe, ground rod, or building ground only. Do not connect to an electrical ground or conduit, sprinkler or gas pipes, or to a telephone company ground.

### 6.3 Battery Only Restart

When powering up the XR100FC Series panel without AC power, briefly short across the battery start pads to pull in the battery cutoff relay. The leads need a momentary short only. Once the relay has pulled in, the battery voltage holds it in that condition. If the XR100FC Series panel is powered up with an AC transformer, the battery cutoff relay is pulled in automatically. For more information refer to Figure 1.

### 6.4 Battery Replacement Period

DMP recommends replacing the battery every 3 to 5 years under normal use.

### 6.5 Discharge/Recharge

The XR100FC Series battery charging circuit float charges at 13.9 Vdc at a maximum current of 1.0 Amps using a 56 VA transformer. Listed below are the various battery voltage level conditions:

Battery Trouble: Below 11.9 Vdc

Battery Cutoff: Below 10.2 Vdc

Battery Restored: Above 12.6 Vdc

### 6.6 Battery Supervision

The XR100FC Series tests the battery when AC power is present. The test is done every three minutes and lasts for five seconds. During the test, the panel places a load on the battery; if the battery voltage falls below 11.9 Vdc a low battery is detected. If AC power is not present, a low battery is detected any time the battery voltage falls below 11.9 Vdc.

If a low battery is detected with AC power present, the test repeats every two minutes until the battery charges above 12.6 Vdc indicating the battery has restored voltage. If a weak battery is replaced with a fully charged battery, the restored battery will not be detected until the next two minute test is completed.

### 6.7 Battery Cutoff

The panel disconnects the battery any time the battery voltage drops below 10.2 Vdc. This prevents battery deep discharge damage.

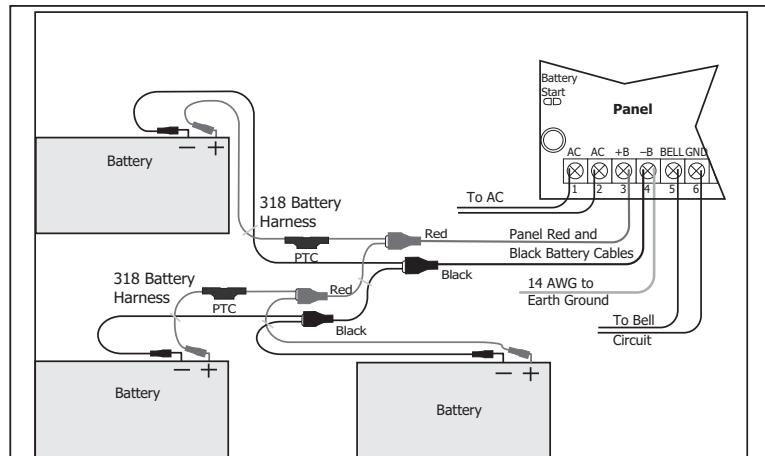


Figure 5: Wiring Multiple Batteries

**6.8 XR100FC Series Power Requirements**

During AC power failure, the XR100FC Series panel and all connected auxiliary devices draw their power from the battery. All devices must be taken into consideration when calculating the battery standby capacity. The following table lists the XR100FC Series panel power requirements. You must add the additional current draw of keypads, zone expansion modules, smoke detector output, and any other auxiliary devices used in the system for the total current required. The total is then multiplied by the number of standby hours required to calculate the total ampere-hours required.

<b>Standby Battery Power Calculations</b>	<b>Standby Current</b>	<b>Alarm Current</b>
XR100FC Series Control Panel	Qty <u>1</u> 180mA 180 mA	Qty <u>1</u> 180mA 180 mA
Relay Outputs 1-2 (ON)	Qty <u>      </u> 30mA <u>      </u>	Qty <u>      </u> 30mA <u>      </u>
Switch Grounds 3-6 (ON)	Qty <u>      </u> 5mA <u>      </u>	Qty <u>      </u> 5mA <u>      </u>
Active Zones 1-8	Qty <u>      </u> x 1.6mA <u>      </u>	Qty <u>      </u> x 2mA* <u>      </u>
Active Zones 9-10	Qty <u>      </u> 4mA <u>      </u>	Qty <u>      </u> 30mA <u>      </u>
2-Wire Smoke Detectors	Qty <u>      </u> 0.1mA <u>      </u>	Qty <u>      </u> 0.1mA <u>      </u>
Panel Bell Output		1500mA <u>      </u> mA
893A Dual Phone Line Module	Qty <u>      </u> x 12mA <u>      </u>	Qty <u>      </u> x 50mA <u>      </u>
462N Network Interface Card	Qty <u>      </u> x 50mA <u>      </u>	Qty <u>      </u> x 50mA <u>      </u>
463C CDMA Cellular Communicator Card	Qty <u>      </u> x 22mA <u>      </u>	Qty <u>      </u> x 22mA <u>      </u>
464-263C CDMA Cellular Communicator	Qty <u>      </u> x 15mA <u>      </u>	Qty <u>      </u> x 48mA <u>      </u>
464-263H HSPA+ Cellular Communicator	Qty <u>      </u> x 15mA <u>      </u>	Qty <u>      </u> x 48mA <u>      </u>
481 Expansion Interface Card	Qty <u>      </u> x 15mA <u>      </u>	Qty <u>      </u> x 15mA <u>      </u>
630F Remote Fire Command Center	Qty <u>      </u> x 63mA <u>      </u>	Qty <u>      </u> x 92mA <u>      </u>
734 Wiegand Interface Module	Qty <u>      </u> x 15mA <u>      </u>	Qty <u>      </u> x 15mA <u>      </u>
Active Zones (EOL Installed)	Qty <u>      </u> x 1.6mA <u>      </u>	Qty <u>      </u> x 2mA* <u>      </u>
Annunciator (ON)		Qty <u>      </u> x 20mA <u>      </u>
734N Wiegand Interface Module	Qty <u>      </u> x 146mA <u>      </u>	Qty <u>      </u> x 148mA <u>      </u>
Active Zones (EOL Installed)	Qty <u>      </u> x 1.6mA <u>      </u>	Qty <u>      </u> x 2mA* <u>      </u>
Annunciator (ON)	Qty <u>      </u> x 200mA <u>      </u>	Qty <u>      </u> x 200mA <u>      </u>
860 Relay Output Module (one relay active)	Qty <u>      </u> x 34mA <u>      </u>	Qty <u>      </u> x 34mA <u>      </u>
All four relays active	Qty <u>      </u> x 138mA <u>      </u>	Qty <u>      </u> x 138mA <u>      </u>
865 Style W or X Notification Module	Qty <u>      </u> x 26mA <u>      </u>	Qty <u>      </u> x 85mA <u>      </u>
866 Style W Notification Module	Qty <u>      </u> x 45mA <u>      </u>	Qty <u>      </u> x 76mA <u>      </u>
867 LX-Bus Style W Notification Module	Qty <u>      </u> x 30mA <u>      </u>	Qty <u>      </u> x 86mA <u>      </u>
869 Dual Style D Initiating Module	Qty <u>      </u> x 25mA <u>      </u>	Qty <u>      </u> x 75mA <u>      </u>
1100X Wireless Receiver	Qty <u>      </u> x 46mA <u>      </u>	Qty <u>      </u> x 46mA <u>      </u>
1100XH Wireless High Power Receiver	Qty <u>      </u> x 160mA <u>      </u>	Qty <u>      </u> x 160mA <u>      </u>
7060/7160 Thinline/7060A Aqualite Keypad	Qty <u>      </u> x 72mA <u>      </u>	Qty <u>      </u> x 80mA <u>      </u>
7063/7163 Thinline/7063A Aqualite Keypad	Qty <u>      </u> x 85mA <u>      </u>	Qty <u>      </u> x 100mA <u>      </u>
7070/7170 Thinline/7070A Aqualite Keypad	Qty <u>      </u> x 72mA <u>      </u>	Qty <u>      </u> x 87mA <u>      </u>
Active Zones (EOL Installed)	Qty <u>      </u> x 1.6mA <u>      </u>	Qty <u>      </u> x 2mA* <u>      </u>
7073/7173 Thinline/7073A Aqualite Keypad	Qty <u>      </u> x 85mA <u>      </u>	Qty <u>      </u> x 100mA <u>      </u>
Active Zones (EOL Installed)	Qty <u>      </u> x 1.6mA <u>      </u>	Qty <u>      </u> x 2mA* <u>      </u>

**Copy Sub-Totals to next page**Sub-Total Standby        mASub-Total Alarm        mA

\*Based on 10% of active zones in alarm.

Standby Battery Power Calculations	Standby Current	Alarm Current
736P POPIT Interface Module Radionics Popex, POPITs, OctoPOPITs	Qty _____ x 25mA _____ Qty _____ x ____mA _____	Qty _____ x 25mA _____ Qty _____ x ____mA _____
738A Ademco Wireless Interface Module	Qty _____ x 75mA _____	Qty _____ x 75mA _____
710 Bus Splitter/Repeater Module	Qty _____ x 32mA _____	Qty _____ x 32mA _____
711 Zone Expansion Module Active Zone (EOL Installed)	Qty _____ x 11mA _____ Qty _____ x 1.6mA _____	Qty _____ x 11mA _____ Qty _____ x 2mA* _____
714 Zone Expansion Module Active Zones (EOL Installed)	Qty _____ x 7mA _____ Qty _____ x 1.6mA _____	Qty _____ x 7mA _____ Qty _____ x 2mA* _____
712-8 Zone Expansion Module Active Zones (EOL Installed)	Qty _____ x 17mA _____ Qty _____ x 1.6mA _____	Qty _____ x 17mA _____ Qty _____ x 2mA* _____
714-8, 714-16 Zone Expansion Module Active Zones (EOL Installed)	Qty _____ x 20mA _____ Qty _____ x 1.6mA _____	Qty _____ x 20mA _____ Qty _____ x 2mA* _____
715 Zone Expansion Module Active Zones (EOL Installed) 2-Wire Smokes	Qty _____ x 7mA _____ Qty _____ x 4mA _____ Qty _____ x .1mA _____	Qty _____ x 7mA _____ Qty _____ x 30mA* _____ Qty _____ x .1mA _____
715-8, 715-16 Zone Expansion Modules Active Zones (EOL Installed) 2-Wire Smokes	Qty _____ x 20mA _____ Qty _____ x 4mA _____ Qty _____ x .1mA _____	Qty _____ x 20mA _____ Qty _____ x 30mA* _____ Qty _____ x .1mA _____
716 Output Expansion Module Active Form C Relays	Qty _____ x 13mA _____	Qty _____ x 13mA _____ Qty _____ x 12mA _____
717 Graphic Annunciator Module Annunciator Outputs	Qty _____ x 10mA _____	Qty _____ x 10mA _____ Qty _____ x 1mA _____
521LX, 521LXT Smoke Detectors	Qty _____ x 8.8mA _____	Qty _____ x 28mA* _____
2W-BLX, 2WT-BLX Smoke Detectors	Qty _____ x 11mA _____	Qty _____ x 31mA* _____
COSMOD2W Module COSMO-2W Smoke and CO Detectors	Qty _____ x 45mA _____ Qty _____ x 1mA _____	Qty _____ x 174mA*# _____ Qty _____ x 50mA*# _____
Aux. Powered Devices on Terminals 7 and 11 Other than Keypads and LX-Bus Modules	_____mA	_____mA
<b>Sub-Total this page only</b>	Sub-Total Standby _____mA	Sub-Total Alarm _____mA
<b>Sub-Totals from previous page</b>	Sub-Total Standby _____mA	Sub-Total Alarm _____mA
*Based on 10% of active zones in alarm	Total Standby _____mA	Total Alarm _____mA
# For systems that are not central station monitored, multiply alarm current by 12.		
Total Standby _____mA x number of Standby Hours needed _____ = _____mA-hours Total Alarm _____mA + _____mA-hours Total _____mA-hours X .001 = _____Amp-hrs Required		

Refer to section 6.9 for standby battery selection.

## 6.9 Standby Battery Selection

To choose the type and number of batteries needed for 24, 60, or 72 hours of standby power based on the Amp Hours Required calculation from section 6.8 XR100 Series Power Requirements, perform the following:

1. Select the desired standby hours required from the table below: 24, 60, or 72 hours
2. Select the desired battery size: Model 368 (12 Vdc 5.0 Ah), Model 369 (12 Vdc 7 Ah), Model 365 (12 Vdc 9 Ah), Model 366 (12 Vdc 18 Ah).
3. Select a Max. Ah Available number that is just greater than the number calculated in Amp Hours Required.
4. Install the number of batteries shown in the corresponding No. of Batteries required column.

**Example:** If the Amp Hours Required calculation equals 22 Ah for 24 hours of standby time and 4.5 Ah batteries are desired, install six (6) Model 368 (12 Vdc, 5.0 Ah) batteries.

For listed installations, all batteries shall be installed in a DMP Model 341, 349, 350 or 352S enclosure and all wiring shall run through conduit. The enclosure shall be installed to the left of the XR100FC Series enclosure to ensure Battery and AC wire separation.

### 24 hours of standby power

5.0 Ah Batteries		7 Ah Batteries		7.7 Ah Batteries		9 Ah Batteries		18 Ah Batteries	
Max. Ah Available	No. of Batteries								
8	2	6	1	6	1	8	1	16	1
12	3	12	2	13	2	16	2	32	2
16	4	18	3	20	3	24	3	48	3
20	5	24	4	27	4	32	4		
24	6	31	5	34	5	40	5		
28	7	37	6	41	6				
32	8	43	7						
36	9								
40	10								

**Note:** 48 hours is the typical battery recharge time for any of the Number of Batteries shown in this section.

### 60 hours of standby power

7 Ah Batteries		7.7 Ah Batteries		9 Ah Batteries		18 Ah Batteries	
Max. Ah Available	No. of Batteries						
13	2	14	2	17	2	17	1
20	3	22	3	26	3	34	2
27	4	29	4	34	4	52	3
33	5	37	5	43	5	69	4
40	6	44	6	52	6		
47	7	52	7	61	7		
54	8	59	8	69	8		
60	9	67	9				
67	10						

**Note:** 48 hours is the typical battery recharge time for any of the Number of Batteries shown in this section.

### 72 hours of standby power

9 Ah Batteries		18 Ah Batteries	
Max. Ah Available	No. of Batteries	Max. Ah Available	No. of Batteries
16	2	16	1
25	3	33	2
33	4	50	3
42	5	67	4
50	6		
59	7		
67	8		

**Note:** 72 hours is the typical battery recharge time required for any of the Number of Batteries shown in this section.

**Note:** If the Amp Hours Required calculation is greater than any Max. Ah Available number shown on a table, then add power supply(s) to power some system devices allowing the Amp Hours Required calculation to be reduced. See the 710 Bus Splitter/Repeater Installation Guide (LT-0310).

## Bell Output

### 7.1 Terminals 5 and 6

Terminal 5 supplies positive 12 Vdc to power alarm bells or horns. This output can be steady, pulsed, or temporal depending upon the Bell Action specified in Output Options. Terminal 6 is the ground reference for the bell circuit. This supervised output detects 1k Ohms or less as normal. The indicating appliance can supply this resistance. If using a horn or siren, a 1k Ohm 1/2 W EOL resistor (provided) should be added across the bell circuit to provide supervision. See the Notification Appliance section for a list of approved notification appliances and the Wiring Diagrams for connections.

## Keypad Bus

### 8.1 Description

XR100FC Series panel terminals 7, 8, 9, and 10 are for the keypad bus. You can connect up to fifteen supervised keypads and multiple unsupervised keypads to the XR100FC Series. In addition to DMP LCD keypads, you can also connect any combination of zone expansion modules to the data bus. Refer to the specific device Installation sheet for the maximum number of Keypad Bus devices.

Refer to the section titled LX-Bus for complete information about the LX-Bus 4-pin header and expansion slot.

**Note:** Do not use shielded wire for LX-Bus/Keypad Bus circuits.

### 8.2 Terminal 7 - RED

This terminal supplies positive 12 Vdc regulated to power DMP LCD keypads and zone expansion modules. Terminal 7 also supplies power for any auxiliary device. The ground reference for terminal 7 is terminal 10.

The output current is shared with the smoke power output on terminal 11 and Zones 9 and 10. Current draw for all connected devices must not exceed the panel maximum current rating. See Power Supply in the Compliance section for maximum current in a fire listed application.

### 8.3 Terminal 8 - YELLOW

Terminal 8 receives data from keypads and zone expansion modules. It cannot be used for any other purpose.

### 8.4 Terminal 9 - GREEN

Terminal 9 transmits data to keypads and zone expansion modules. It cannot be used for any other purpose.

### 8.5 Terminal 10 - BLACK

Terminal 10 is the ground reference for DMP LCD keypads, zone expansion modules, and all auxiliary devices being powered by terminal 7.

### 8.6 J8 Programming Connection

A 4-pin header (J8) is provided to connect a keypad when using a DMP Model 330 Programming Cable. This provides a quick and easy connection for panel programming.

You may also use the J8 Programming Header to connect Keypad Bus devices. This is an alternative to connecting keypad bus devices to terminals 7, 8, 9, and 10.

### 8.7 OVC LED

The Overcurrent LED (OVC) lights Red when the devices connected to the Keypad Bus and LX-Bus(es) draw more current than the panel is rated for. The OVC is located above Outputs 1 and 2 on the panel and turns a steady Red when lit. When the OVC LED lights Red, the LX-Bus(es) and Keypad bus are shut down.

## Smoke and Glassbreak Detector Output

### 9.1 Terminals 11 and 12

Terminal 11 supplies positive 12 Vdc regulated to power 4-wire smoke detectors and other powered devices. This output can be turned off by the user for 5 seconds using the Sensor Reset User Menu option to allow latched devices to reset.

Terminal 12 is the ground reference for terminal 11.

### 9.2 Current Rating

The Output current from terminal 11 is shared with terminals 7, 25, and 27.



The total current draw of all devices powered from the panel must be included with terminal 11 calculations and must not exceed the maximum output rating.

## Protection Zones

### 10.1 Terminals 13–24

Zones 1 to 8 (terminals 13 to 24) on the XR100FC Series panel are all grounded burglary zones. For programming purposes, the zone numbers are 1 through 8. Listed below are terminal 13 to 24 connection functions.

Terminal	Function	Terminal	Function
13	Zone 1 voltage sensing	19	Zone 5 voltage sensing
14	Ground for Zones 1 and 2	20	Ground for Zones 5 and 6
15	Zone 2 voltage sensing	21	Zone 6 voltage sensing
16	Zone 3 voltage sensing	22	Zone 7 voltage sensing
17	Ground for Zones 3 and 4	23	Ground for Zones 7 and 8
18	Zone 4 voltage sensing	24	Zone 8 voltage sensing

The voltage sensing terminal measures the voltage across a 1k Ohm End-of-Line resistor to ground. Use DMP Model 311 1k Ohm resistors. Dry contact sensing devices can be used in series (normally-closed) or in parallel (normally-open) with any of the burglary protection zones.

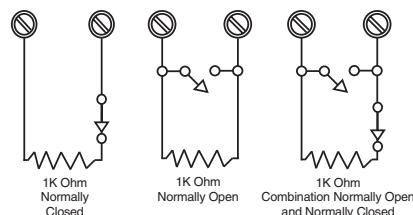


Figure 6: Protection Zone Wiring

### 10.2 Operational Parameters

Each protection zone detects three conditions: Open, Normal, and Short. Listed below are voltage and resistance parameters for each condition:

Condition	Resistance on zone	Voltage on positive terminal
Open	over 1300 ohms	over 2.0 Vdc
Normal	600 to 1300 ohms	1.2 to 2.0 Vdc
Short	under 600 ohms	under 1.2 Vdc

### 10.3 Zone Response Time

A condition must be present on a zone for 500 milliseconds before it is detected by the XR100FC Series panel. Ensure detection devices used on the protection zones are rated for use with this delay. Zones 1-10 can also be programmed for a fast response delay of 160 milliseconds.

### 10.4 Keyswitch Arming Zone

Using a keyswitch on an Arming type zone allows you to arm and disarm selected areas without having to enter a user code.

## Powered Zones for 2-Wire Smoke Detectors

### 11.1 Terminals 25–26 and 27–28

Panel terminals 25 through 28 provide two resettable Class B, Style A, 2-wire powered zones. For programming purposes the zone numbers are 9 and 10.

**Note:** The maximum wire length for either zone 9 or zone 10 is 3000 feet using 18 AWG or 1000 feet using 22 AWG. The maximum voltage is 14 Vdc and maximum current is 1.25mA DC. The maximum line impedance is 100 Ohms. The maximum short circuit current is 56mA.

When using all other zone expansion modules, use UL Listed Model 309 EOL resistors. The UL compatibility identifier for the zones is A.

**Note:** Do not mix detectors from different manufacturers on the same zone.



**Caution:** Performing a Sensor Reset momentarily drops power to the devices on Terminal 11 (SMK), Zones 9 and 10. The panel views these zones (9 and 10) as "Open" while the power is absent.

## 11.2 Compatible 2-Wire Smoke Detector Chart

Manufacturer	Model	Detector ID	Base	Base ID	DC Voltage Range	# of Detectors (12V/24V)	Zone Expansion Modules	Panel Zones
Hochiki	SLR-835B-2 SLR-835BH-2	HD-6	N/A		8-35	14	715, 715-8, 715-16	9 & 10
EST	521B, 521BXT, 521NB, 521NBXT	S09A			6.5-20	12	715, 715-8, 715-16	9 & 10
System Sensor	2W-B, 2WT-B	A			8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	2WTA-B	A	(*)		8.5-35	12	715, 715-8, 715-16	9 & 10
System Sensor	2WTR-B	A	(*)		8.5-35	1	715, 715-8, 715-16	9 & 10
System Sensor	1151, 2151	A	B110PL, B401		8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	COSMO-2W (using COSMOD2W)	A			8.5-35	12	714, 714-8, 714-16, 715, 715-8, 715-16	1-10

(\*) = Must be used in conjunction with System Sensor Polarity Reversal Module model RRS-MOD.

Figure 7: Compatible 2-Wire Smoke Detectors

## Dry Contact Relay Outputs

### 12.1 Description

The XR100FC Series panel provides two programmable auxiliary SPDT relays when equipped with two DMP Model 305 relays in sockets K6 (Output 1) and K7 (Output 2) and a Model 431 Output Harness on the J2 4-pin Header. Each relay provides one SPDT set of contacts that can be operated by any of the functions listed below:

- 1) Activation by zone condition: Steady, Pulsing, Momentary, and Follow
- 2) Activation by 24-hour 7-day schedule: One on and one off time a day for each relay
- 3) Manual activation from the DMP LCD keypad menu
- 4) Communication failure
- 5) Armed area annunciation
- 6) Fire Alarm or Fire Trouble or Supervisory
- 7) Ambush Alarm
- 8) Exit and Entry timers
- 9) System Ready
- 10) Late to Close

Refer to the XR100 Series Programming Guide (LT-0896) for specific information.

### 12.2 Contact Rating

The Model 305 relay contacts are rated for 1 Amp at 30 Vdc (allows .35 power factor). You can connect auxiliary power to the Relay Output 1 common terminal by installing the gray harness wire to terminal 7. Current draw for all connected devices must not exceed the panel maximum current rating.

### 12.3 Model 431 Output Harness Wiring

The relay contacts are accessible by installing the DMP 431 Output Harness on the 4-pin header labeled J2. Output 2 uses the top three prongs, and Output 1 uses the bottom three prongs. The wire harness and contact locations are shown below:

Contact	Color
Output 1 normally closed	Violet
Output 1 common	Gray
Output 1 normally open	Orange
Output 2 normally closed	Violet with white stripe
Output 2 common	White with gray stripe
Output 2 normally open	Orange with white stripe

The relay contacts must be connected to devices located within the same room as the XR100FC Series panel.

## Annunciator Outputs

### 13.1 Description

The four programmable annunciator outputs can be programmed to indicate the activity of the panel zones or conditions occurring on the system. **Annunciator outputs do not provide a voltage but instead switch-to-ground** a voltage from another source. The outputs can respond to any of the conditions listed in the Description section for Dry Contact Relays. Maximum voltage is 30 Vdc @ 50mA.

### 13.2 Model 300 Harness Wiring

Access the open collector outputs by installing DMP 300 Harness on the 4-pin header labeled J11. The output locations are shown below. For UL applications, devices connected to the outputs must be located within the same room as the panel.

Output	Color	Wire	Output	Color	Wire
3	Red	1	5	Green	3
4	Yellow	2	6	Black	4

### 13.3 Model 860 Relay Module

Connect a Model 860 Relay Module to the J11 on the XR100FC Series panel to provide relays for outputs 3-6. Use these relays for electrical isolation between the alarm panel and other systems or for switching voltage to control various functions. Power is supplied to the relay coils from a single wire connected to the panel auxiliary power terminal 7. The module includes one relay and provides three additional sockets for expansion of up to four relays. Mount the 860 inside the panel enclosure using the 3-hole pattern and plastic standoffs. Refer to the 860 Module Install Sheet (LT-0484) as needed.

**Relay Contact Rating:** 1 Amp at 30 Vdc (allows .35 power factor)

## J23 6-Pin Header

### 14.1 Description

The XR100FC Series Command Processor™ panel supports Direct Programming, LX-Bus, and, DMP Wireless operation. Only one operation can function at a time. Install a jumper on one pair of J23 header pins to indicate how the panel is programmed to operate. Refer to the table below when installing a jumper on J23. When a jumper is installed or moved on the 6-pin header, briefly reset the panel using the J16 jumper to activate the selected operation.

**Note:** Only one operation, Direct Programming, LX-Bus, or DMP Wireless can function at a time.

J23 6-pin Header	
Letter	Operation
R	Direct Programming
L	LX-Bus
X	1100 Series DMP Wireless

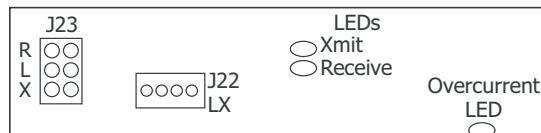


Figure 8: J23 6-pin Header

## J22 LX-Bus Expansion Connector

### 15.1 Description

The XR100FC Series Command Processor™ Panel supports one LX-Bus circuit that provides 100 expansion zones, DMP Wireless that provides 100 wireless zones, or direct connect programming. Enable J22 LX-Bus Header to use the 100 expansion or wireless zones.

### 15.2 J22 LX-Bus Header

**Note:** Only one operation, Direct Programming, LX-Bus, or DMP Wireless can function at a time. See the Connecting LX-Bus and Keypad Bus Devices section for maximum wiring distances.

For each connection, respect wire colors when connecting devices and use all four wires. After placing the jumper on the J23 6-Pin header to enable the required operation, briefly reset the panel using the J16 jumper to activate operation.

**Wireless Bus Operation:** Place a jumper on the two pins next to the letter "X" on the J23 6-Pin header. When using J22 as a wireless bus, connect a DMP Model 300 4-wire Harness to the J22 4-pin header labeled LX. Connect the other end to the J3 header on the 1100X or 1100XH Wireless Receiver. This provides up to 500 wireless zones numbered 500 to 999. Refer to the 1100X Wireless Receiver Install Guide (LT-0708) or the 1100XH Wireless Receiver Install Guide (LT-0970).

**LX-Bus Operation:** Place a jumper on the two pins next to the letter "L" on the J23 6-pin header. When using J22 as an LX-Bus, connect a DMP Model 300 4-wire Harness to the J22 6-pin header labeled LX. This provides 100 LX-Bus zones numbered 500-599.

**Note:** Do NOT use shielded wire when using the LX-Bus.

**Direct Programming Operation:** Place a jumper on the two pins next to the letter "R" on the J23 6-Pin header. When using J22 as a direct programming port, connect a the 4-wire connector from DMP Model 399 Harness to the J22 4-pin header labeled LX. Connect the Model 399 DB-9 connector onto an RS-232 port on a Laptop computer. This allows direct panel programming from the attached computer.

### 15.3 LX-Bus Interface Cards

You can add one Interface Card (Model 481, 462N, 463C, 464-263C or 464-263H) to the XR100FC Series using J6 Interface Card Connector located on the board right edge. The Interface Cards provide up to 100 LX-Bus Zones. Refer to the following table to identify zone locations and numbers relative to J22 operation.

J22 LX-Bus Enabled (Set J23 to "X")		One Interface Card	
Wireless-Bus	Zone Numbers	LX-Bus	Zone Numbers
1	500-599	1	500-599

### 15.4 LX-Bus LEDs

The two LEDs, located near the bottom-right corner of J21 indicate data transmission and receipt. The top LED flashes green to indicate the panel is transmitting LX-Bus data. The bottom LED flashes yellow to indicate the panel is receiving LX-Bus data.

**J1 Ethernet Connector (XR100NFC only)****16.1 Description**

The J1 Ethernet Connector is available on the XR100NFC Network version to connect directly to an Ethernet network using a standard patch cable. The maximum line impedance is 100 Ohms.

**16.2 Ethernet LEDs**

The two LEDs, located to the left of J1 Ethernet Connector, indicate network connection. The top, Link LED lights up green to indicate a valid receive connection from the host network. The bottom, Activity LED flashes yellow to indicate messages are being sent and received.




Figure 9: J1 Header and LEDs

**J3 Telephone RJ Connector****17.1 Description**

Connect the panel to the public telephone network by installing a DMP 356 RJ Cable between the panel J3 connector and the RJ31X or RJ38X phone jack. The maximum line impedance is 100 Ohms. **CAUTION** - To reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cord, such as DMP Model 356 Series Phone Cords.

**17.2 J10 893A Connector**

Connect an 893A Dual Phone Line Module to J10 on the XR100FC Series. Refer to the 893A Installation Sheet (LT-0135) for complete information.

**17.3 Notification**

The user must not repair registered terminal equipment. In case of trouble, immediately unplug the device from the telephone jack. The factory warranty provides for repairs. Registered terminal equipment may not be used on party lines or in connection with coin telephones. Notify the telephone company with the following information:

- The particular line(s) where the service is connected
- The FCC registration number as listed in Section 18.1
- The ringer equivalence
- The device make, model, and serial number

**17.4 Phone Line Monitor**

The XR100FC Series panel has a built-in telephone monitor that monitors the phone line voltage to verify the connection to the central office. Figure 10 and the table below identify the phone block pin layout, wire numbers, and colors.

Wire Number	Wire Color
1	Gray
2	Orange
3	Black
4	Red
5	Green
6	Yellow
7	Blue
8	Brown

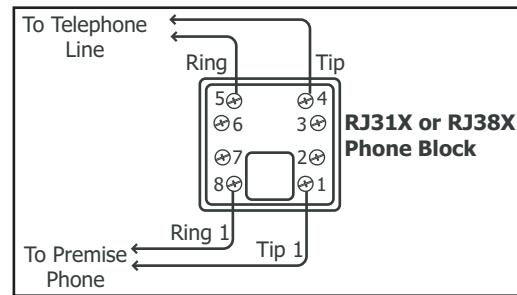


Figure 10: Phone Jack Wiring

The wires on the RJ31 that feed pins 4 and 5 should be the ONLY wires on the D-marc. All other house phone wiring should be tied to pins 1 and 8 coming back from the RJ31.

Dial tone must come into RJ31X on pins 4 and 5 and go back to house phones from pins 1 and 8. Follow these steps to determine if panel is seizing the line:

1. Unplug phone cord from RJ31X
2. Place butt-set on pins 4 and 5
3. Listen for dial tone. With dial tone present, lift either wire from pins 1 or 8
4. Listen for dial tone again. If the dial tone is present, RJ31X wiring is correct. If no dial tone is present, the RJ31X wiring is backwards. Rewire so dial tone is coming IN on 4 and 5.

If you still have trouble with the phone line, you may need to replace the RJ cord. If the dial tone is still not present, swap out the RJ31X phone block.

## 17.5 FCC Registration

The Model XR100FC Series complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the outside of the enclosure of this equipment is a label that contains, among other information, a product identifier in the format US:CCKAL00BXR500. If requested this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If the XR100FC Series causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with the Model XR100FC Series, for repair or warranty information, please contact DMP at the address and telephone number listed on the back of this document. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

If your premises has specially wired alarm equipment connected to the telephone line, ensure the installation of the XR100FC Series does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

**Caution:** To ensure proper operation, this equipment must be installed according to the installation instructions in this manual. To verify that the equipment is operating properly and can successfully report an alarm, this equipment must be tested immediately after installation, and periodically thereafter, according to the test instructions in this document and the XR100 Series Programming Guide (LT-0896). Additionally, verification of Line Seize capability should be made immediately after installation, and periodically thereafter, in order to ensure that this equipment can initiate a call even when other equipment (telephone, answering system, computer modem, etc.) connected to the same line is in use.

## Reset and Tamper Headers

### 18.1 J16 Reset Header

The reset header is located just above the terminal strip on the right side of the circuit board and is used to reset the XR100FC Series microprocessor. To reset the panel when first installing the system, install the reset jumper before applying power to the panel.

After connecting the AC and battery, remove the reset jumper.

To reset the panel while the system is operational, for example, prior to reprogramming, install the reset jumper without powering down the system. Remove the reset jumper after one or two seconds.

After resetting the panel, begin programming within 30 minutes. If you wait longer than 30 minutes, you must reset the panel again.

### 18.2 J4 Tamper Header

The J4 header is for use with the optional DMP 306 Tamper Harness. The harness connects to one or more tamper switches mounted inside the panel enclosure to supervise against unauthorized enclosure opening or removal. Refer to the wiring diagram on the enclosure door for correct tamper switch wiring.

#### How the Tamper Works

If the enclosure is opened or removed while one or more of the system areas are armed, a panel tamper alarm is indicated. If all areas are disarmed, a panel tamper trouble is indicated.

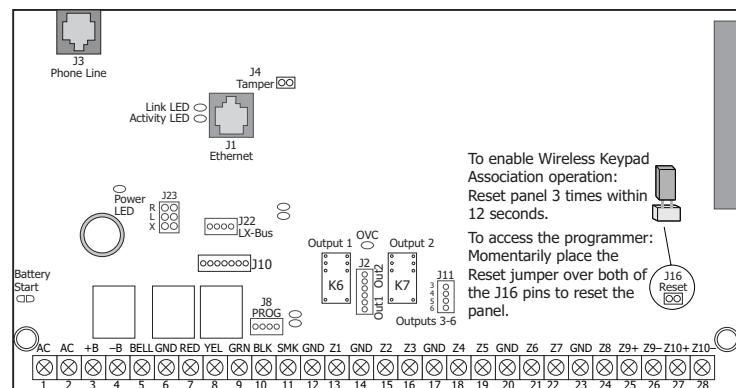


Figure 11: Panel Showing the Reset Jumper

## **Listed Compliance Specifications**

### **19.1 Introduction**

For applications that must conform to a local authorities installation standard or a National Recognized Testing Laboratory certificated system, please see the following sections.

## **Universal Burglary Specifications**

### **20.1 Introduction**

The programming and installation specifications contained in this section must be completed when installing the XR100FC Series panel in accordance with any of the UL burglary standards. Additional specifications may be required by a particular standard. See the XR100 Series Programming Guide (LT-0896).

### **20.2 Wiring**

All wiring must be in accordance with NEC, ANSI/NFPA 70, UL 681, and UL 827 for all burglary installations. All transformer wires must be installed in conduit.

### **20.3 Control Outside of Protected Area**

A Potter EVD or Sentrol 5402 should be used in place of a lined cabinet when the panel is installed outside of the protected area. Front and rear tamper switches are required. Refer to the system wiring diagram and Figure 2.

### **20.4 Digital Dialer**

The digital dialer cannot be used for listed commercial burglary installations.

### **20.5 Bypass Reports**

The Bypass Reports option must be programmed as YES for all UL burglary applications.

### **20.6 System Maintenance**

To ensure continuous satisfactory operation of any alarm system, proper installation and regular maintenance by the installing alarm company and frequent testing by the end user is essential. Offering a maintenance program and acquainting the user with the correct procedures for system use and testing is also the responsibility of the installing alarm company.

### **20.7 Listed Receivers**

Operation has been verified with the DMP SCS-VR and SCS-1R receivers and any Central Station Receiver that accepts industry standard Contact ID (DTMF) format. It is the installer's responsibility to verify compatibility between the panel and the receiver used during installation. The installer shall verify the compatibility of the receiver and the system on a yearly basis.

### **20.8 Wireless Tamper**

The Zone Information Disarmed Open Message to Transmit must be programmed Trouble (T).

### **20.9 Wireless External Contact**

When used, the External Contact of 1101 or 1102 must be programmed Normally Closed.

### **20.10 Wireless Supervision Time**

The Zone Information Supervision Time cannot be set to 0 (zero).

### **20.11 Detect Wireless Jamming**

The Detect Wireless Jamming option must be programmed YES.

### **20.12 Bell Output**

The panel bell output cannot be used for annunciation in a listed commercial burglary installation.

## Area Information

### 21.1 Ownership

The control unit system shall be under one ownership.

### 21.2 Annunciation

The System shall be installed so that when arming any area from any keypad, the local bell shall annunciate.

### 21.3 Trouble Display

The Status List programming shall be set to annunciate all trouble messages at all keypads.

### 21.4 Closing Wait

The Closing Wait option must be programmed YES.

## Central-Station and Proprietary Burglar-Alarm Units ANSI/UL 1610 AND ANSI/UL 1076

### 22.1 Opening/Closing Reports

The Opening/Closing Reports option must be programmed as YES.

### 22.2 Closing Wait

The Closing Wait option must be programmed YES.

### 22.3 Entry Delay

The maximum entry delay used must not be more than 60 seconds.

### 22.4 Exit Delay

The maximum exit delay used must not be more than 60 seconds.

### 22.5 Proprietary Dialer

The Model XR100FC Series provides proprietary service when configured as a digital dialer.

### 22.6 Standard Line Security

Standard Line Security is provided when configured as a Path 1 NET system using an XR100NFC panel. The NET Check-in time must be set to 03 minutes or RND. When programmed for Standard Line Security, Exit Time Restart is disabled. When a dialer is required for 06 minute check-in time, an attack resistant enclosure (DMP Model 350A or 350H) is required. When the check-in time is set to a number less than 200 seconds, an attack resistant enclosure is not required.

The XR100FC Series Protected Premises Control Unit is suitable for Standard Line Security service when configured for NET communication with SCS-1R receiving system. This configuration is approved for the following:

AMCX - Central Station Alarm Units

APOU - Proprietary Alarm Units

### 22.7 Wireless Audible Annunciation Option

The Wireless Audible option must be selected as ANY for commercial applications.

### 22.8 CELL Only, Standard Line Security

Standard Line Security is provided when programmed using the 463C, 464-263C or 464-263H for CELL with no backup. XR100FC cellular communication is used as primary with a 3 minute check-in when armed or disarmed.

Path 1 programming	
Comm Type: = CELL	Checkin: = 3 minute
Path Type: = Primary	Fail Time: = 3 minute
Sub Code: = NO or YES	Test Rpt: = NO

**Holdup Alarm Units  
ANSI/UL 636****23.1 UL 1610 Required**

The programming and installation specifications contained in this section must be completed in addition to ANSI/UL 1610 Specifications when installing a Model 1142 with a Model XR100FC Series panel.

**23.2 1100X/1100XH Wireless Receiver**

The Model 1100X/1100XH Wireless Receiver in conjunction with the Model 1142 Holdup Alarm Transmitter must be installed in the system.

**23.3 Wireless Supervision Time**

The Zone Information Supervision Time must be a maximum of 240 minutes.

**23.4 LED Display**

The LED Operation option display must be set to NO when using a Model 1142 Holdup Alarm Transmitter.

**23.5 Jamming Detection**

The Detect Wireless Jamming option must be set to YES.

**23.6 Local Alarm**

The Bell Action for a PN (Panic) type zone must be programmed as N (None).

**23.7 Message to Transmit**

The Armed Open and Armed Short messages for a PN (Panic) type zone must be programmed to A (Alarm). S

**23.8 Wireless Audible Annunciation Option**

The Wireless Audible option must be selected as ANY for commercial applications.

**Access Control System Units  
ANSI/UL 294****24.1 Panel Designation**

The XR100FC Series panels are designated stand alone units.

**24.2 Tamper Protection**

For Listed Access Control installations, a tamper switch must be used.

**24.3 Compatible Devices**

The following devices are compatible with the XR100FC Series panels.

<b>Access Control</b>	
734/734N/734N-WIFI* Wiegand Interface Module	Proximity reader connector
OP-08CB Motion Detector	Infrared sensor
PB-2 REX Button*	Exit control push button
PP-6005B Proxpoint Plus® Reader	Proximity reader
MP-5365 Miniprox® Reader	Slimline proximity reader
PR-5455 ProxPro® II Reader	Long range reader with sounder
MX-5375 Maxi-Prox™ Reader	Long range reader compatible with 1351 Prox Pass

**\* This device has not been investigated and shall not be used in listed installations.**

## Universal Fire Alarm Specifications

### 25.1 Introduction

The programming and installation specifications contained in this section must be completed when installing the Model XR100FC Series in accordance with any of the ANSI/UL or NFPA fire standards. Additional specifications may be required by a particular standard. See the XR100 Series Programming Guide (LT-0896).

### 25.2 Wiring

All wiring must be in accordance with NEC, ANSI/NFPA 70.

### 25.3 Transformer

Use the factory installed 56 VA wire-in transformer.

### 25.4 End-of-Line Resistor

The DMP Model 310 1k Ohm EOL resistor should be used on all 1k Ohm EOL fire zones.

### 25.5 System Trouble Display

The Status List Display must include at least one keypad that displays system monitor troubles.

### 25.6 Fire Display

The Status List Display must include at least one keypad that displays troubles and alarms on fire type zones.

### 25.7 Police Station Phone Number

The digital dialer telephone number programmed for communication must not be a police station phone number, unless that phone number is specifically provided for that purpose.

### 25.8 System Maintenance

To ensure continuous satisfactory operation of any alarm system, proper installation and regular maintenance by the installing alarm company and frequent testing by the end user is essential. Offering a maintenance program and acquainting the user with the correct procedures for system use and testing is also the responsibility of the installing alarm company.

### 25.9 Audible Alarm

Fire Type zones should be programmed to activate an audible alarm. The Bell Action for Fire Type zones should not be programmed as "N".

### 25.10 Fire Zone Programming

If a retard delay is used on a waterflow zone, it cannot exceed 90 seconds and any retard delay in the waterflow initiating devices must be subtracted from the 90 seconds allowed. The retard delay should not be used on a zone with smoke detectors.

### 25.11 Class A Style D Zones

If required, the DMP 869 Dual Style D Initiating Module provides for connection of two Class A Style D zones to the Model XR100FC Series. See the 869 Installation Guide (LT-0186) and sections 20.2 and 28.2 of this guide for wiring information.

### 25.12 Listed Receivers

Operation has been verified with the DMP SCS-VR and SCS-1R receivers and any Central Station Receiver that accepts industry standard Contact ID (DTMF) format. It is the installer's responsibility to verify compatibility between the panel and the receiver used during installation. The installer shall verify the compatibility of the receiver and the system on a yearly basis.

## Control Units for Fire-Protective Signaling Systems ANSI/UL 864, NFPA 72

### 26.1 Power Supply

For listed installations, the total current combined from Auxiliary and Bell Power cannot exceed:

1.2 Amps with a 56 VA transformer; .5 Amp Max for Auxiliary Power and .7 Amp Max for Bell

For listed installations, the 50 VA Plug-in transformer cannot be used.

The total combined current from Terminal 7, 11, 25, and 27 cannot exceed 1.2 Amps.

### 26.2 Zone Restoral Reports

The Restoral Reports option must be selected as YES or Disarm.

### 26.3 Power Fail Delay

The Power Fail Delay option must be selected as required by the service of the panel. For Central Station or Remote Station service: 1.

### 26.4 Sprinkler Supervisory

Any zone used for sprinkler supervisory must be programmed with "SPRINKLR XXX" as the zone name. The last three characters in the zone name may be assigned a number to identify the zone. The Model 893A Dual Phone Line Module must be used on all sprinkler supervisory systems.

## 26.5 DACT Systems

A DACT system may be configured as one of the following:

Path 1 Type DD Primary and Path 2 Type DD Backup

Path 1 Type DD Primary and Path 2 Type CELL Backup

Path 1 Type DD Primary and Path 2 Type NET Backup

### Path 1 Type DD Primary and Path 2 Type DD Backup

Use two telephone lines and the Model 893A Dual Phone Line Module to provide two phone line connections to the system.

Two different telephone numbers must be programmed for digital communication. Do not connect to ground start or party lines.

Path 1 Programming	Path 2 Programming
Comm Type = DD	Comm Type = DD
Path Type = Primary	Path Type = Backup
Test Rpt = Yes	Test Rpt = Yes
Test Freq = 1 Dy	Test Freq = 1 Dy
893A = Yes	

### Path 1 Type DD Primary and Path 2 Type CELL Backup

When using a telephone line and cellular as backup,

Path 1 Programming	Path 2 Programming
Comm Type = DD	Comm Type = CELL
Path Type = Primary	Path Type = Backup
Test Rpt = Yes	Test Rpt = Yes
Test Freq = 1 Dy	Test Freq = 1 Dy
	Receiver IP Address
	First GPRS APN

### Path 1 Type DD Primary and Path 2 Type NET Backup

When using a telephone line and a Network IP as backup,

Path 1 Programming	Path 2 Programming
Comm Type = DD	Comm Type = NET
Path Type = Primary	Path Type = Backup
Test Rpt = Yes	Test Rpt = Yes
Test Freq = 1 Dy	Test Freq = 1 Dy
	Receiver IP Address

## 26.6 Local Protective Signaling Systems

The DMP Model 865, 866, or 867 Notification Circuit Module must be used on the bell circuit for detection of shorts and grounds. Any burglary or other off premises communication must be done with the Model 893A Dual Phone Line Module. For local commercial fire installations, the 893A is required.

## 26.7 Remote Station Protective Signaling Systems

You must provide 60 hours of standby battery. See section 6.9 in this guide for standby battery calculations. Two Radionics Model D127 Reversing Relay Modules provide two reversing polarity telephone connections. See the D127 Installation Instruction sheet for wiring details. A DMP Model 893A is used to provide two line dialer communication.

## 26.8 Fire Protective Signaling Systems using Internet/Intranet/Cell Networks

An Other Transmission Technologies system as defined in UL 864 9th Edition, Section 40.7 may be configured as NET Primary using a hardwired IP network or CELL Primary using a Model 463C CDMA Cellular Communicator with or without a backup path. The system may be configured as one of the following:

### Path 1 Type NET or CELL Primary with no Backup

Path 1 Programming	
Comm Type = NET or CELL	Checkin Min = 5
Path Type = Primary	Failtime Min = 5
Test Rpt = No	Sub Code = Yes
Checkin = Yes	Send Comm Trbl = Yes

### Path 1 Type NET Primary and Path 2 Type DD Backup

Path 1 Programming	Path 2 Programming
Comm Type = NET	Comm Type = DD
Path Type = Primary	Path Type = Backup
Test Rpt = Yes	Test Rpt = Yes
Test Freq = 1 Dy	Test Freq = 1 Dy
Send Comm Trbl = Yes	Send Comm Trbl = Yes
Comm Path Trbl = Yes (Status List Programming)	

### Path 1 Type NET Primary and Path 2 Type CELL Backup

Path 1 Programming	Path 2 Programming
Comm Type = NET	Comm Type = CELL
Path Type = Primary	Path Type = Backup
Test Rpt = Yes	Test Rpt = Yes
Test Freq = 1 Dy	Test Freq = 1 Dy
Send Comm Trbl = Yes	Send Comm Trbl = Yes
Comm Path Trbl = Yes (Status List Programming)	

### Path 1 Type CELL Primary and Path 2 Type NET Backup

Path 1 Programming	Path 2 Programming
Comm Type = CELL	Comm Type = NET
Path Type = Primary	Path Type = Backup
Test Rpt = Yes	Test Rpt = Yes
Test Freq = 1 Dy	Test Freq = 1 Dy
Send Comm Trbl = Yes	Send Comm Trbl = Yes
Comm Path Trbl = Yes (Status List Programming)	

## 26.9 Combination Systems

For combination fire and burglary systems, powered burglary devices (PIR, Glassbreak, etc.) must be powered from a separate UL Listed power supply (DMP Model 505-12). This requirement is not needed for non-powered burglary devices (door contacts, etc.) which only connect to the zone input of zone expanders or keypads. Refer to Powered Burglary Devices in this document.

For combination fire and burglary systems, burglary sounding devices such as sirens and bells must be energized using panel relays, 860 relays, or 716 relays. Programming the output to activate the relay must occur using the Burglary Bell Output option in Area Information or by the Alarm Action output option of Zone Information. The Burglary Bell Action option of the panel Bell Options must be programmed as None.

## 26.10 Remote Annunciators

At least one Model 630F Remote Annunciator must be used on the system. All fire alarms, fire troubles and supervisory alarms or troubles must be annunciated only on the 630F. All burglary alarms or troubles must only be annunciated on non-fire keypads. See Status List options of the XR100 Series Programming Guide (LT-0896).

## 26.11 Notification Appliances

The following table indicates the approved notification appliances that can be used with the XR100FC Series system.

Wheelock Model No.	Description	Max No. of Appliances using 56 VA/100 VA
MT-12/24	Multi-tone Horn	8
MB-G6-12	Bell, 6 inch	16
MB-G10-12	Bell, 10 inch	16
ST Series	Strobe, 15/75 candela	5
HS Series	Horn Strobe, 15/75 candela	5
SM-12/24-R	Sync Module, Single circuit	
DSM-12/24-R	Sync Module, Dual circuit	

## 26.12 Cross Zoning

When using cross zoning, there must be a minimum of two detectors installed in each protected space and the detector installation spacing must be 0.7 times the linear spacing in accordance with National Fire Alarm Code, NFPA 72.

## 26.13 Ground Fault

For supervised circuits, ground fault is detected at 0 (zero) Ohms.

## 26.14 Wireless Testing

When using the 1100X or 1100XH Wireless Receiver for Fire Protective Signaling, after all transmitters are in position, the WLS option of the panel's Walk Test must be operated and all transmitters programmed for Fire (FI) or Supervisory (SV) must show that their checkin message was received.

## 26.15 Wireless Supervision

When using the 1103 Universal Transmitter for Fire Protective Signaling, supervision time must be set for 3 minutes. Supervision time cannot be set to 0 (zero).

# California State Fire Marshal Specifications

## 27.1 Bell Output Definition

The Model XR100 Series panel Bell Output must be programmed to operate steady on burglary alarms and pulsed, temporal, or California School Code on fire alarms. See the XR100 Series Programming Guide (LT-0896).

## New York City (FDNY) Specifications

### 28.1 Introduction

The programming specifications contained in section 28.2 or 28.3 must be completed when installing the XR100 Series panel for New York City (FDNY) fire alarm installations for IP communication applications.

**Note:** Fire alarm installations that use two digital dialer telephone lines do not need to comply with these two sections.

### 28.2 Network and Cellular Communication, Primary and Secondary

When installed as a central station Internet (Network) communicator or slave transmitter both primary and secondary channels of communication are required and must meet the conditions below. Network communication must be used as primary channel of communication with Central Station and a 463C Cellular Communicator must be used as the secondary channel of communication or in reverse order: 463C Cellular Communicator as primary and Network connection as the secondary channel.

#### Path 1 Type NET Primary and Path 2 Type CELL Backup Programming

Path 1 Programming	Path 2 Programming
Comm Type = NET	Comm Type = CELL
Path Type = Primary	Path Type = Backup
Checkin Min = 5	Checkin Min = 5
Failtime Min = 5	Failtime Min = 5
Test Rpt = Yes	Test Rpt = Yes
Test Freq = 1 Dy	Test Freq = 1 Dy
Send Comm Trbl = Yes	Send Comm Trbl = Yes
Comm Path Trbl = Yes (Status List Programming)	

#### Path 1 Type CELL Primary and Path 2 Type NET Backup Programming

Path 1 Programming	Path 2 Programming
Comm Type = CELL	Comm Type = NET
Path Type = Primary	Path Type = Backup
Checkin Min = 5	Checkin Min = 5
Failtime Min = 5	Failtime Min = 5
Test Rpt = Yes	Test Rpt = Yes
Test Freq = 1 Dy	Test Freq = 1 Dy
Send Comm Trbl = Yes	Send Comm Trbl = Yes
Comm Path Trbl = Yes (Status List Programming)	

Please see The City of New York Fire Department Certificate of Approval # 6123 or #6145 for additional installation instructions.

### 28.3 Digital Dialer Primary and Network Secondary Communication

When used with a central office communicator or a transmitter, the installation and operation of the equipment and devices must comply with 3RCNY 17-01. The installation must employ the digital dialer as the primary communicator (using telephone line) with network IP communication as backup or secondary means of communication. It must have the capability of transmitting separate and distinct signals to indicate manual pull station alarm, automatic detection alarm, sprinkler waterflow alarm, supervisory signal indications and trouble indications.

#### 28.3.1 Communication Programming

For digital dialer communication with supervised network backup, program the following:

PRIMARY COMM TYPE = DD

FIRST PHONE NUMBER = Central Station Receiver Phone Number

BACKUP COMM TYPE = NET

RECEIVER

ALARMS = YES

### 28.4 Wiring


All wiring must be in accordance with NEC, ANSI, and NFPA 70. All network cabling must be installed in accordance with NFPA 70 for communication circuits.

### 28.5 Additional Requirements


Program and install the equipment to comply with NFPA basic fire requirements. Refer to the Universal Fire Alarm Specifications and ANSI/UL 864 NFPA 72 Specifications in this document.

## Wiring Diagrams

### 29.1 866 with NAC Extender

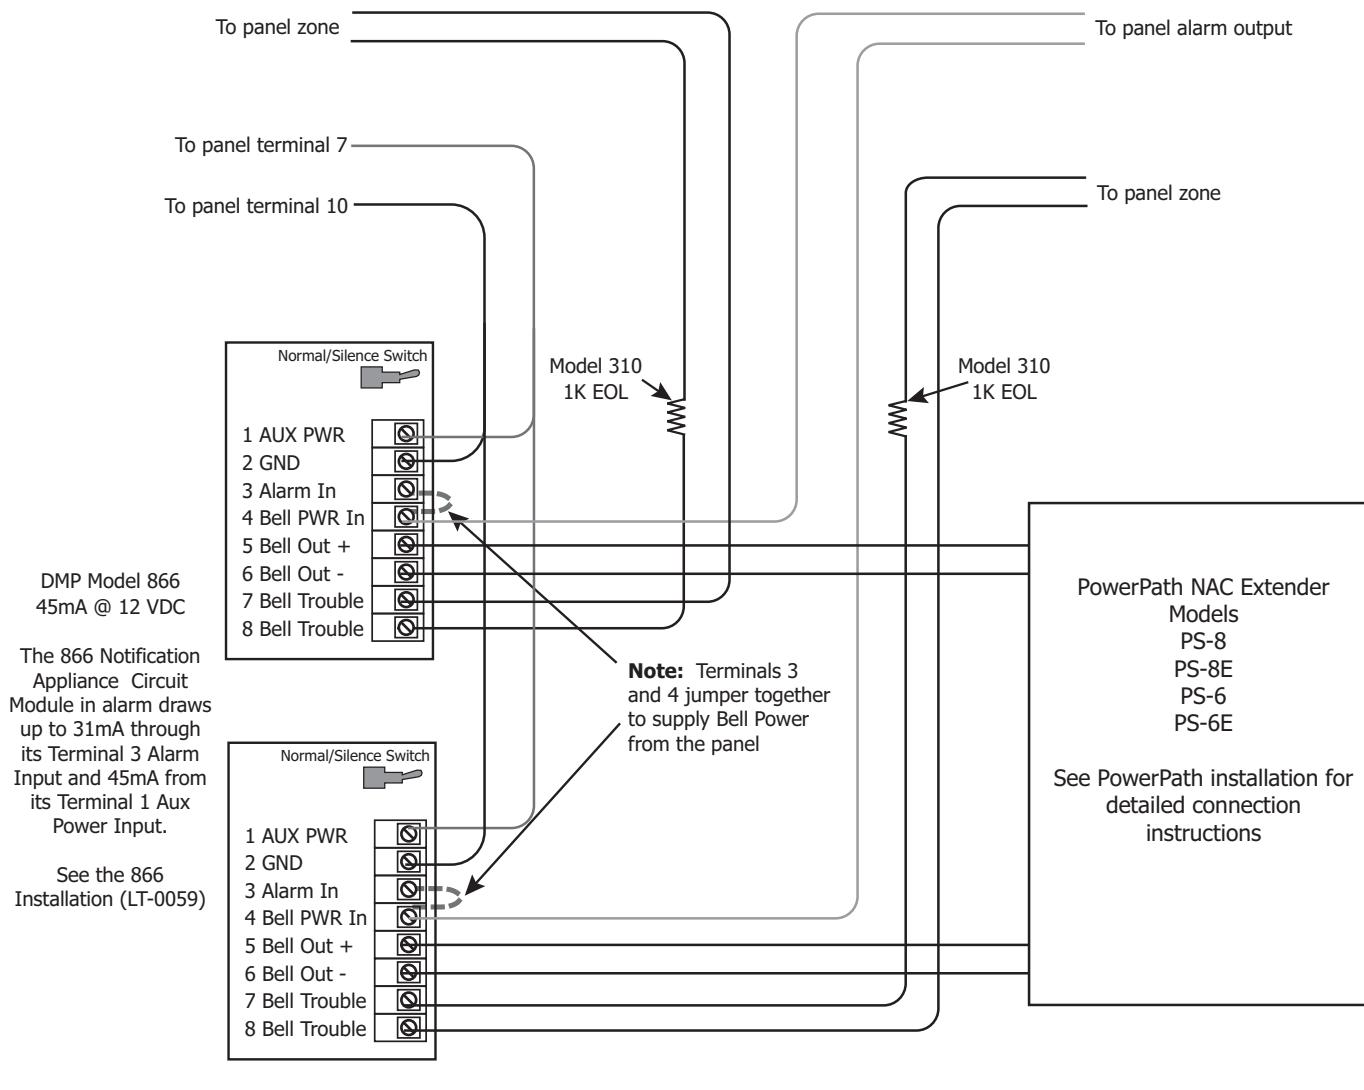


## 29.2 866 Class B Style W using Single Notification Appliance

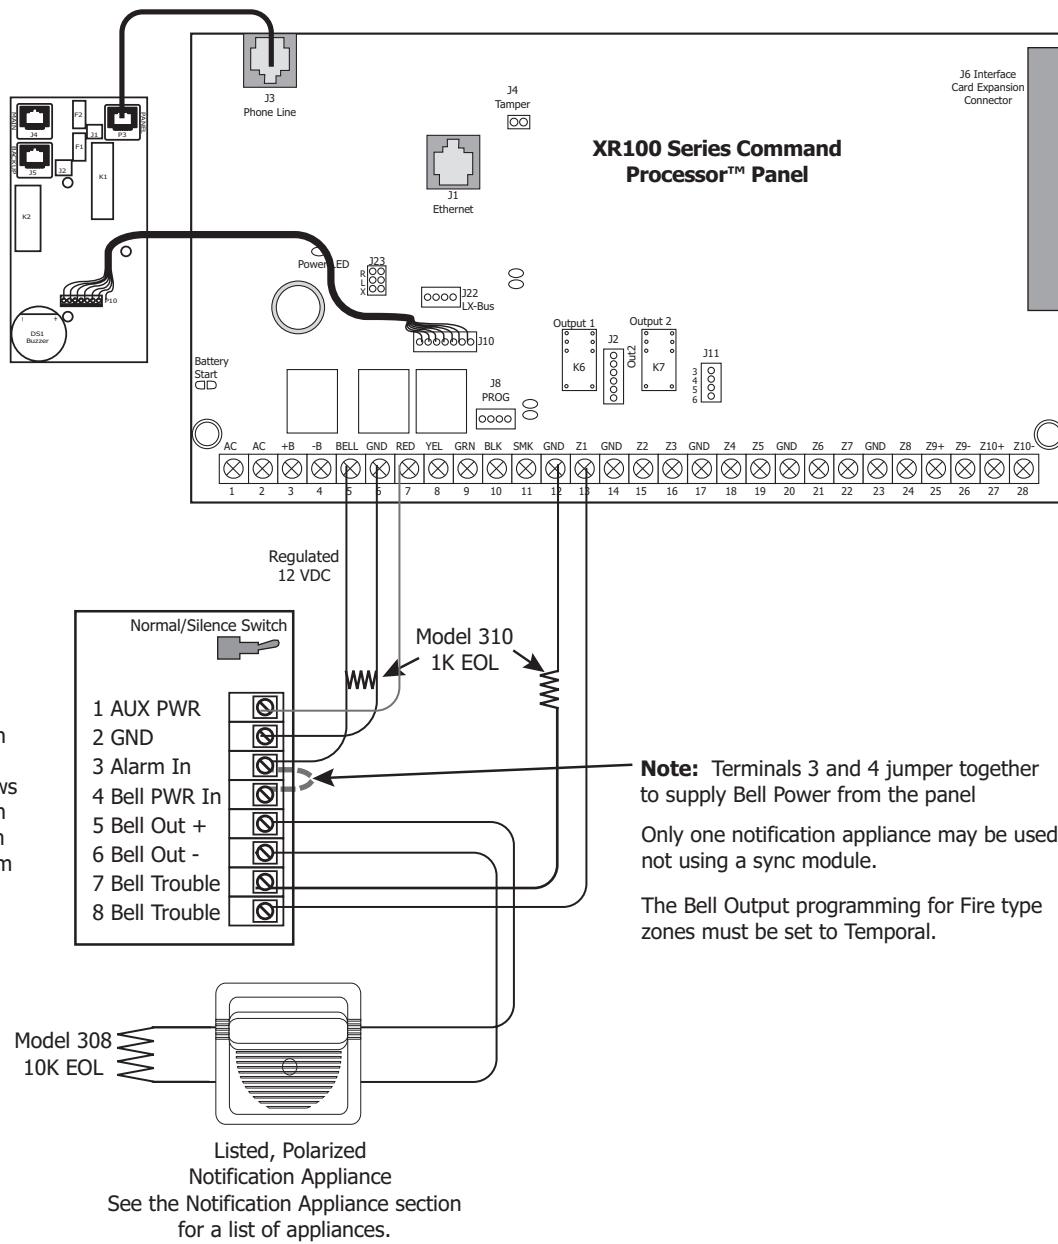


# WIRING DIAGRAMS

## 29.3 866 Class B Style W Multiple Notification Appliances Circuit

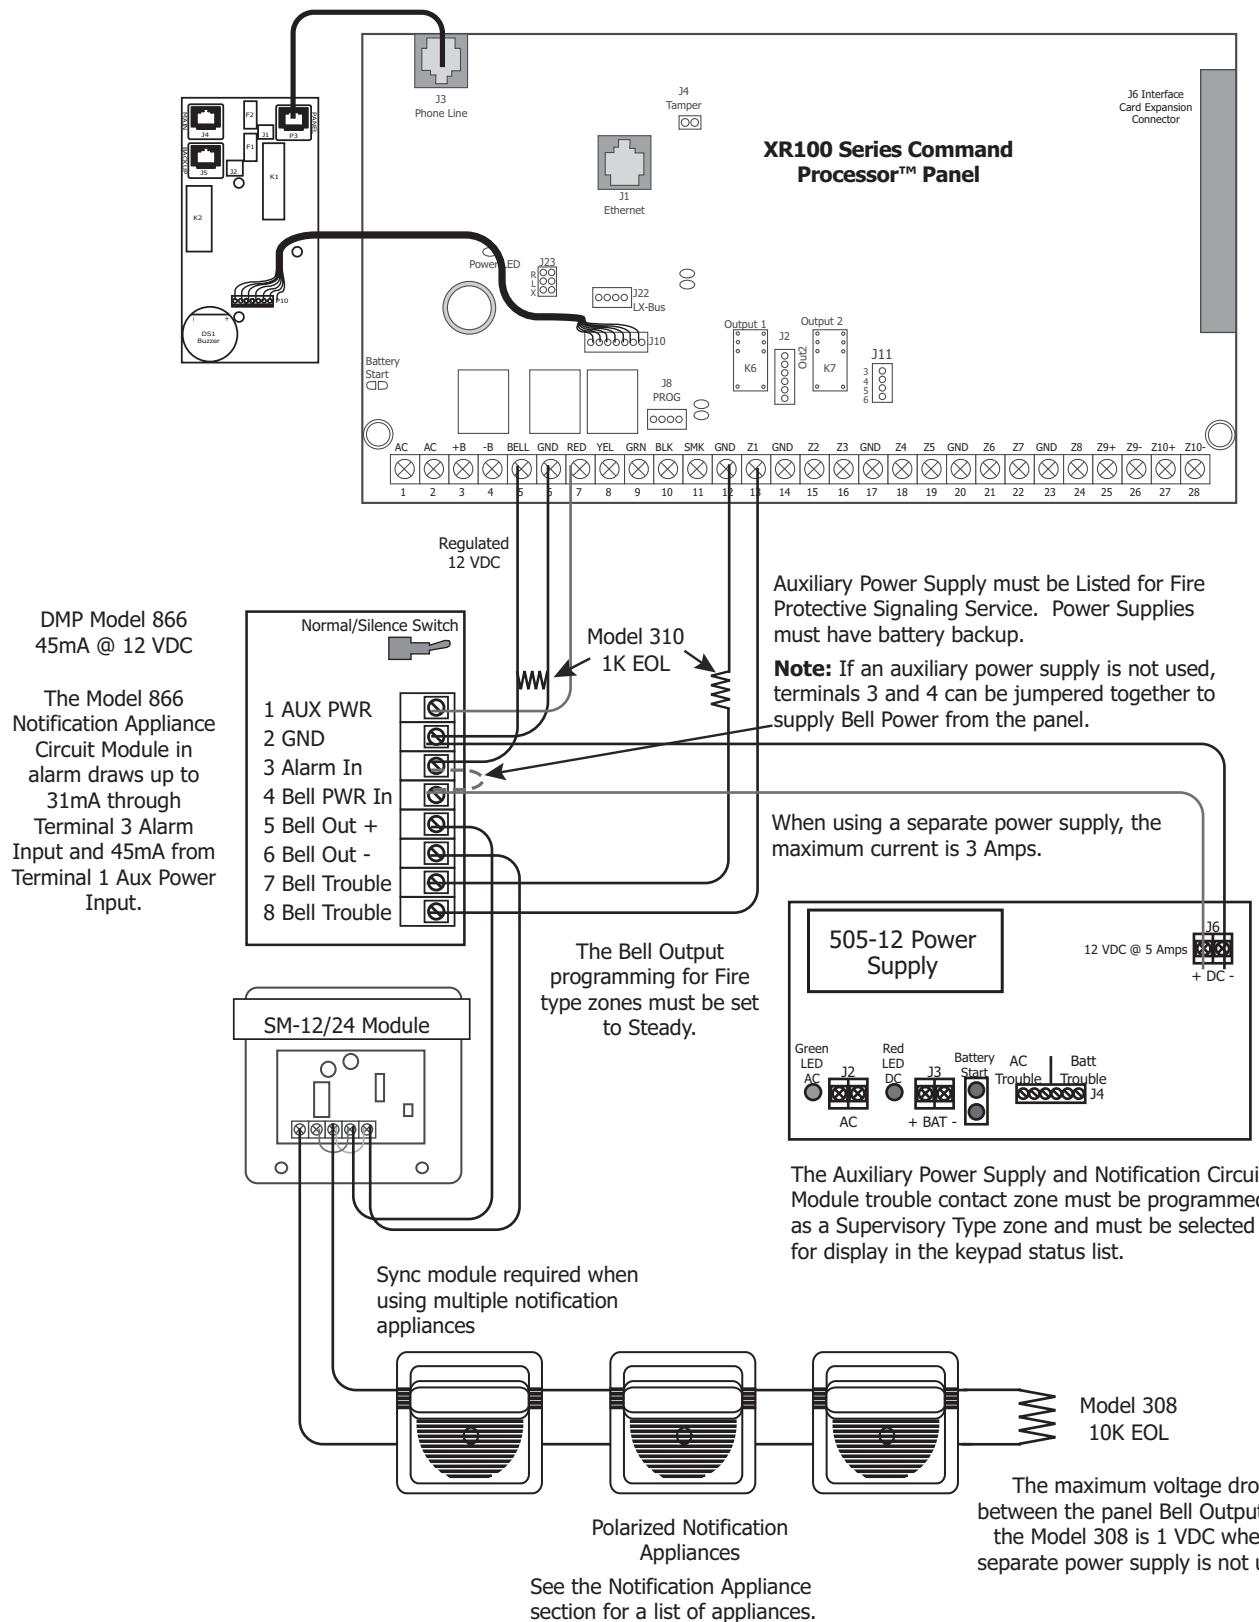


## 29.4 866 Class B Style W Dual Notification Appliances Circuits

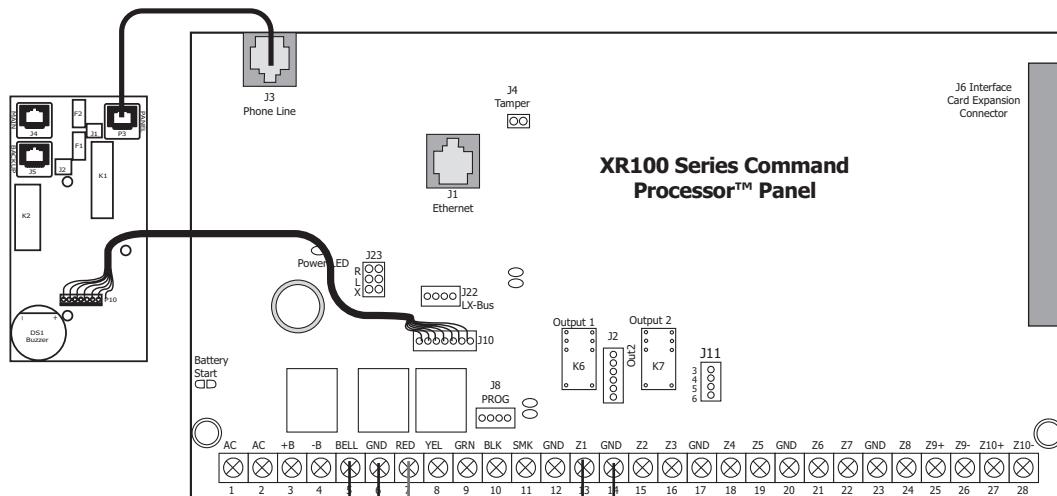


DMP Model 866  
45mA @ 12 VDC

The Model 866  
Notification Appliance  
Circuit Module in  
alarm draws up to  
31mA through its  
Terminal 3 Alarm  
Input and 45mA from  
its Terminal 1 Aux  
Power Input.

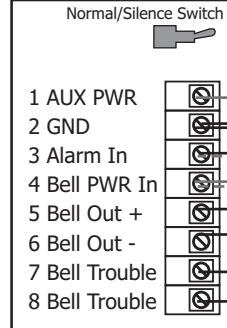


Sync module required when  
using multiple notification  
appliances

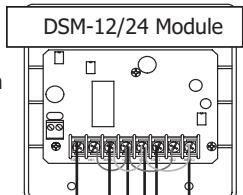


Auxiliary Power Supply must be Listed for Fire  
Protective Signaling Service. Power Supplies must  
have battery backup.

When using a separate power supply, the  
maximum current is 3 Amps.

**Note:** If an auxiliary power supply is not used, terminals  
3 and 4 can be jumpered together to supply Bell Power  
from the panel.

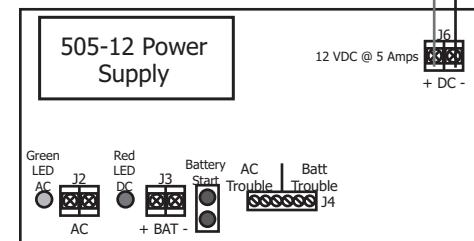

The Auxiliary Power Supply and Notification  
Circuit Module trouble contact zone must be  
programmed as a Supervisory Type zone and  
must be selected for display in the keypad  
status list.

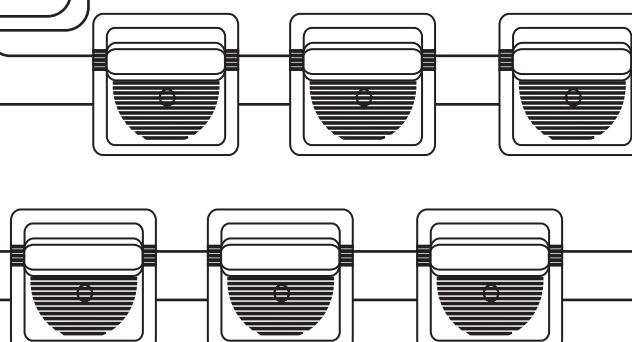


The maximum voltage drop  
between the panel Bell  
Output and the Model 308 is  
1 VDC when a separate  
power supply is not used.

Model 308  
10K EOL


Listed, Polarized Notification Appliances  
See the Notification Appliance section for a list of appliances.

# WIRING DIAGRAMS

## 29.5 865 Class B Style W using Single Notification Appliance

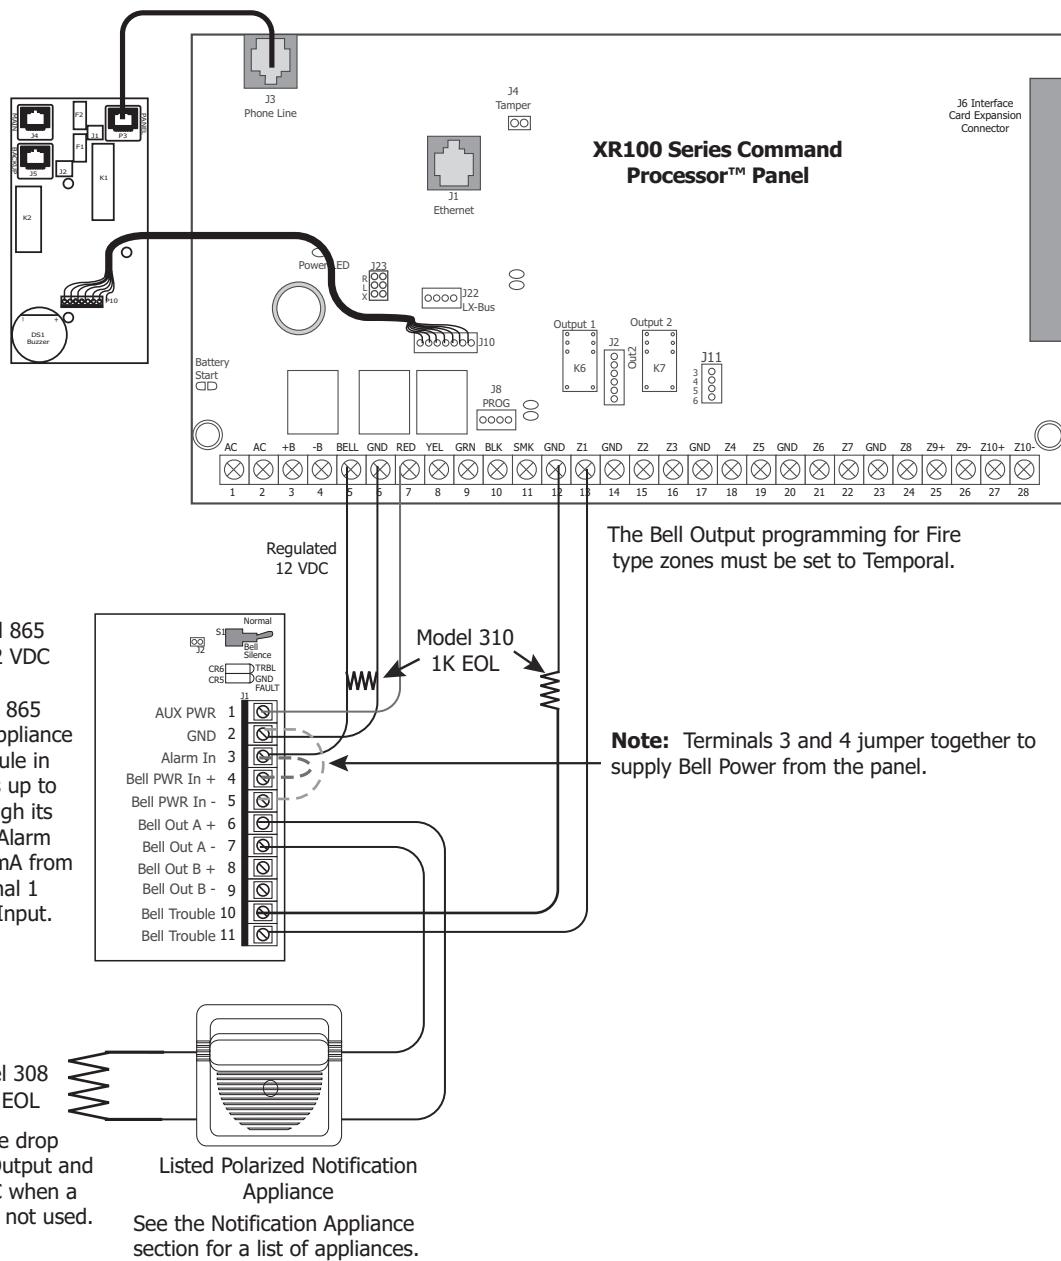


## 29.6 865 Class B Style W Multiple Notification Appliance Circuit

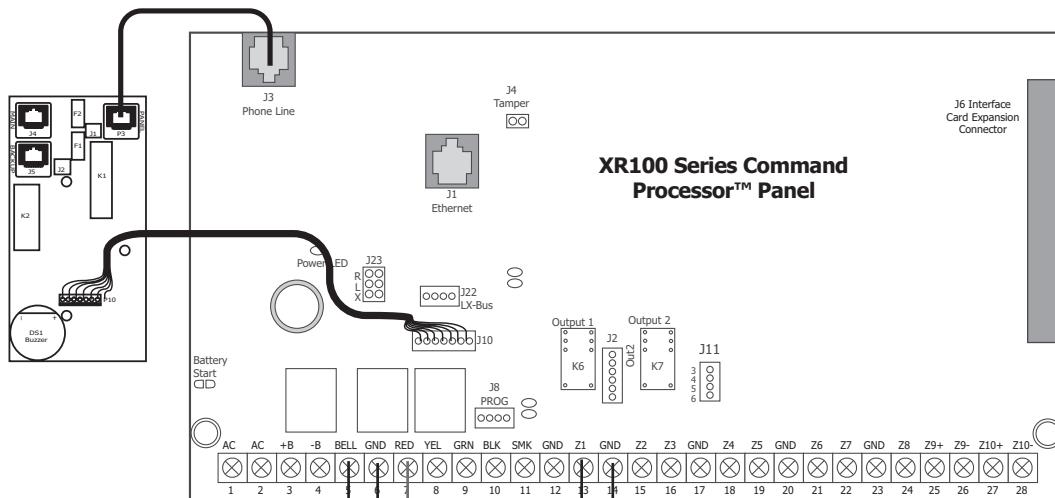

DMP Model 865  
26mA @ 12 VDC

The Model 865  
Notification Appliance  
Circuit Module in  
alarm draws up to  
59mA through its  
Terminal 3 Alarm  
Input and 26mA from  
the Terminal 1  
Aux Power Input.

Sync module required  
when using multiple  
notification appliances

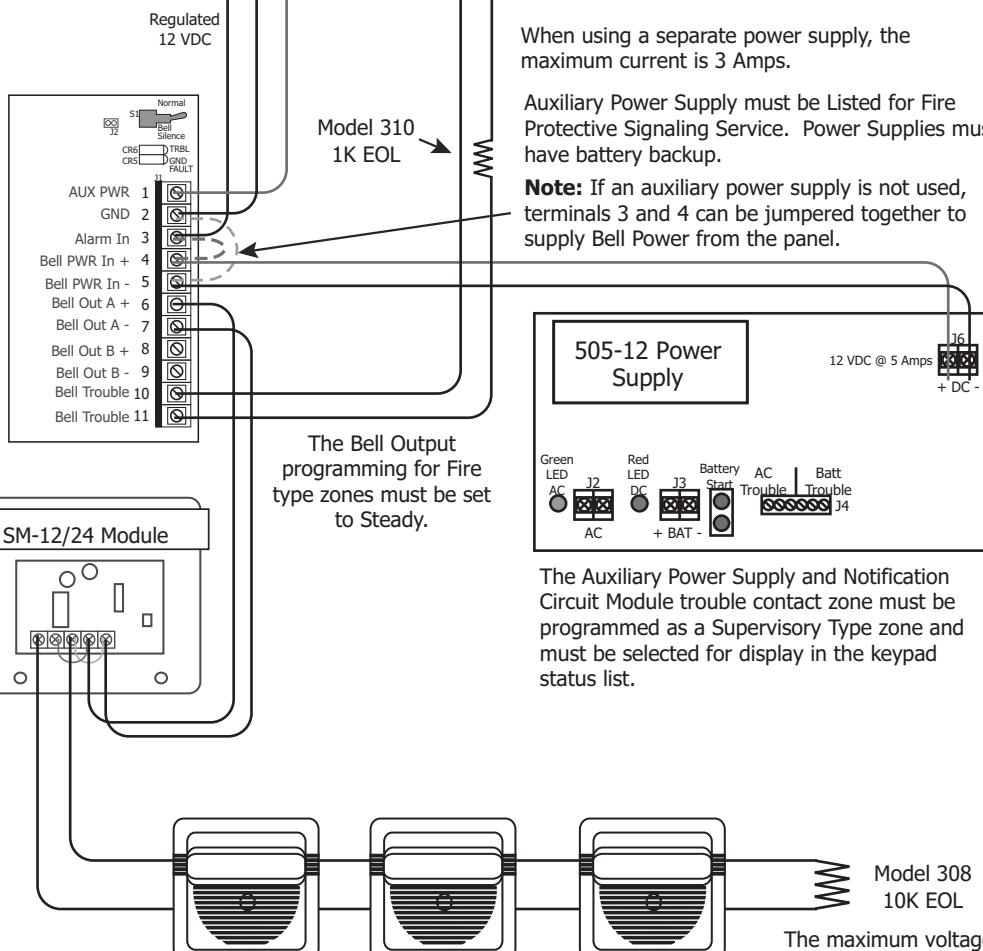


Polarized Notification Appliances  
See the Notification Appliance section for a list of appliances.

Model 308  
10K EOL  
The maximum voltage drop  
between the panel Bell  
Output and the Model 308 is  
1 VDC when a separate  
power supply is not used.

When using a separate power supply, the  
maximum current is 3 Amps.

Auxiliary Power Supply must be Listed for Fire  
Protective Signaling Service. Power Supplies must  
have battery backup.


**Note:** If an auxiliary power supply is not used,  
terminals 3 and 4 can be jumpered together to  
supply Bell Power from the panel.

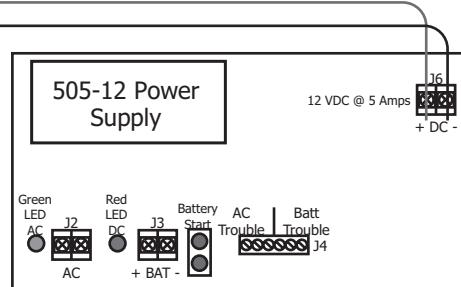

The Auxiliary Power Supply and Notification  
Circuit Module trouble contact zone must be  
programmed as a Supervisory Type zone and  
must be selected for display in the keypad  
status list.


# WIRING DIAGRAMS

## 29.7 865 Class B Style W Dual Notification Appliance Circuits

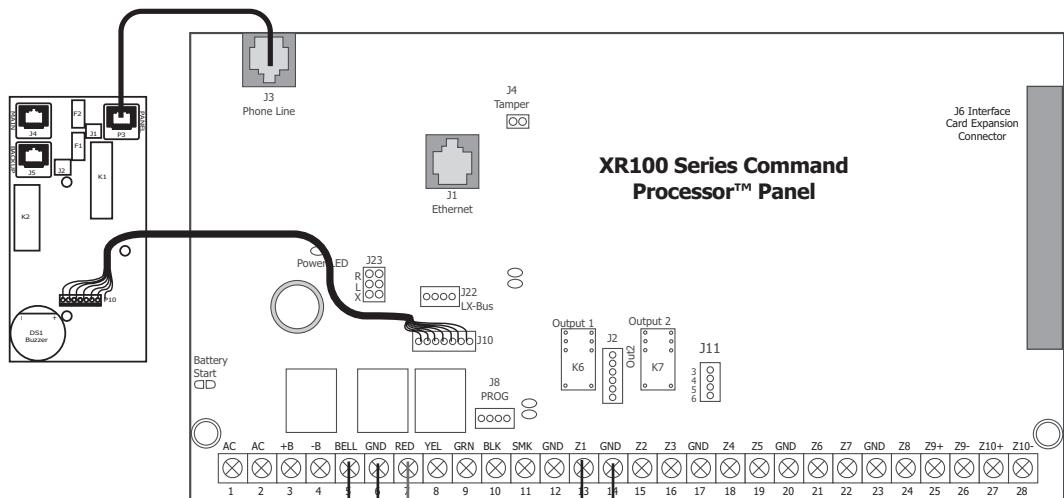


DMP Model 865  
26mA @ 12 VDC

The Model 865  
Notification Appliance  
Circuit Module in  
alarm draws up to  
59mA through its  
Terminal 3 Alarm  
Input and 26mA from  
the Terminal 1  
Aux Power Input.

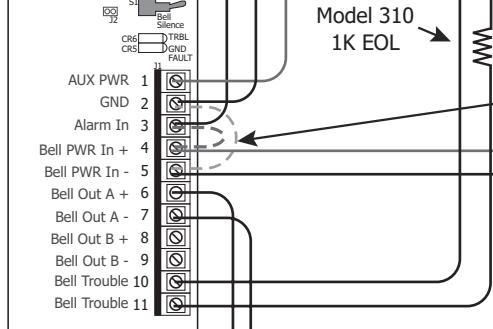


Auxiliary Power Supply must be Listed for Fire Protective Signaling Service. Power Supplies must have battery backup.

**Note:** If an auxiliary power supply is not used, terminals 3 and 4 can be jumpered together to supply Bell Power from the panel.

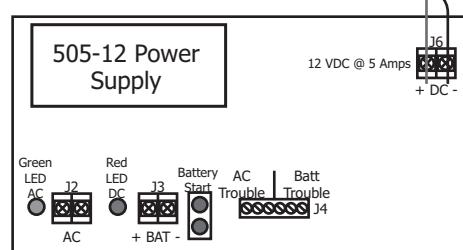


Sync module required  
when using multiple  
notification appliances

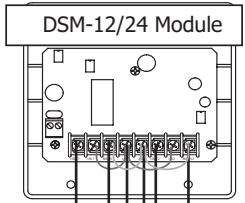

When using a separate  
power supply, the  
maximum current is 3  
Amps.


The Bell Output  
programming for Fire  
type zones must be set  
to Steady.

The Auxiliary Power Supply and Notification  
Circuit Module trouble contact zone must be  
programmed as a Supervisory Type zone and  
must be selected for display in the keypad  
status list.

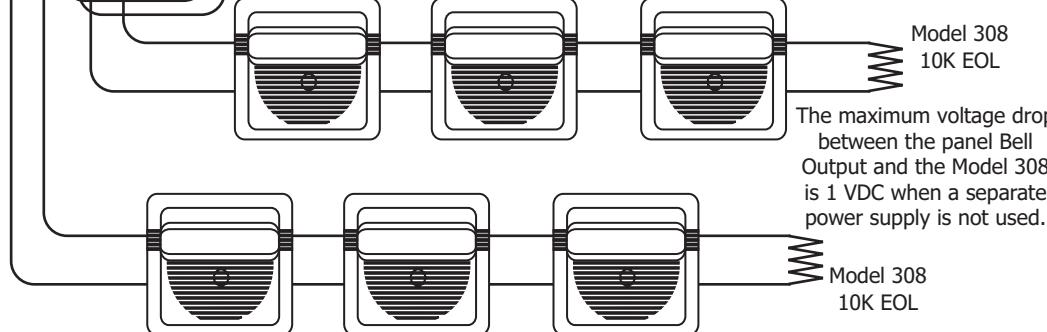


Polarized Notification Appliances  
See the Notification Appliance section for a list of appliances.

## 29.8 865 Class A Style X using Single Notification Appliance

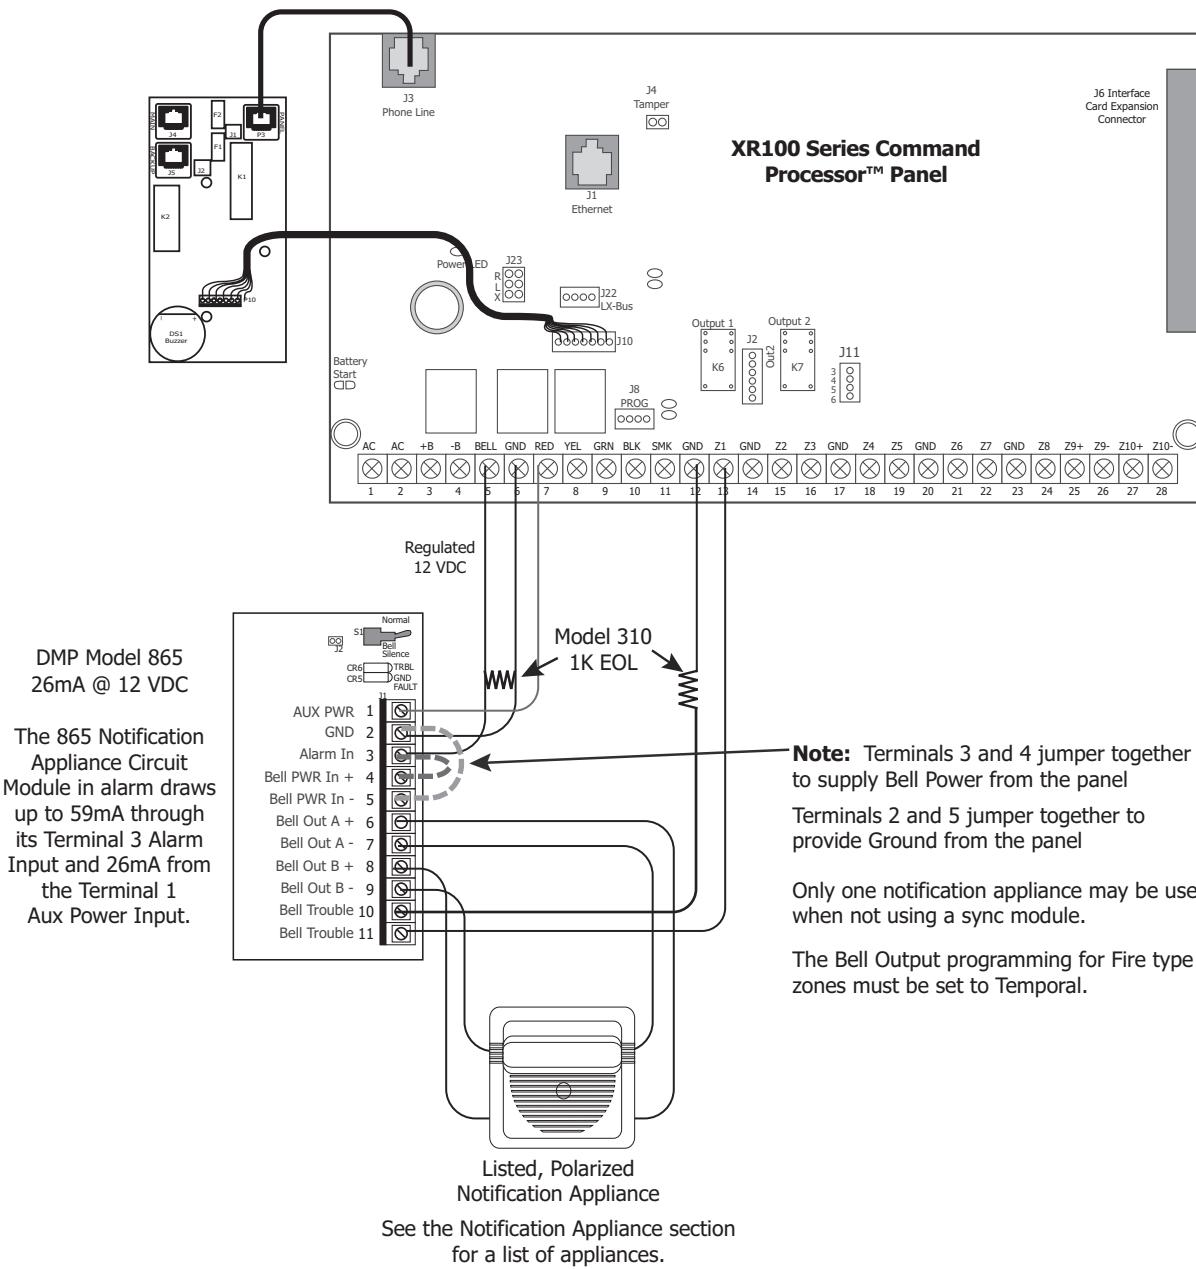

# WIRING DIAGRAMS

## 29.9 867 Class B Style W Notification Appliance Circuit

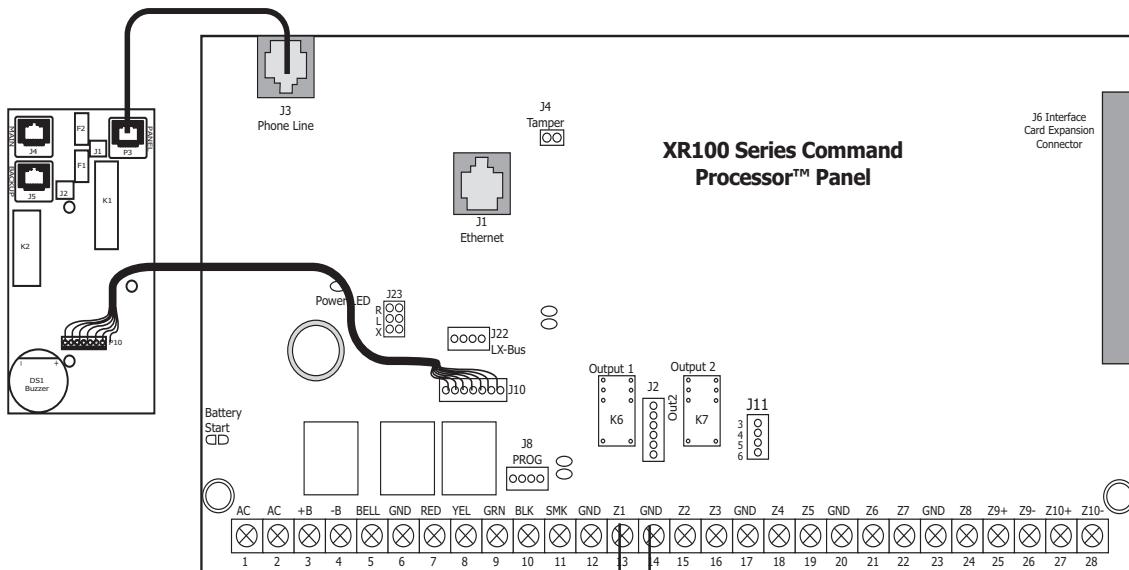

DMP Model 867  
30mA @ 12 VDC

The 867 must have its own independent address ranging from 500 to 599. A Supervisory zone must be programmed to properly supervise each module.

Bell Relay  
Address  
Supervisory  
Address

Normal/Silence Switch  
Ground Fault LED  
Bell Trouble LED  
Bell In + 1  
Bell In - 2  
Bell Out + 3  
Bell Out - 4  
Bell Trouble 5  
Bell Trouble 6  
PWR Mon. 7  
Mon. RTN 8

Model 310  
1K EOL

Auxiliary Power Supply must be listed for Fire Protective Signaling Service. Power Supplies must have battery backup.

LX-Bus Wiring

Model 308  
10K EOL

Listed, Polarized  
Notification Appliances

See the Notification Appliance section  
for a list of appliances.


Only one notification appliance may be  
used when not using a sync module.

505-12 Power Supply


12 VDC @ 5 Amps  
+ DC -

The Auxiliary Power Supply and Notification Circuit Module trouble contact zone must be programmed as a Supervisory Type zone and must be selected for display in the keypad status list.

## 29.10867 Class B Style W Multiple Notification Appliance Circuit

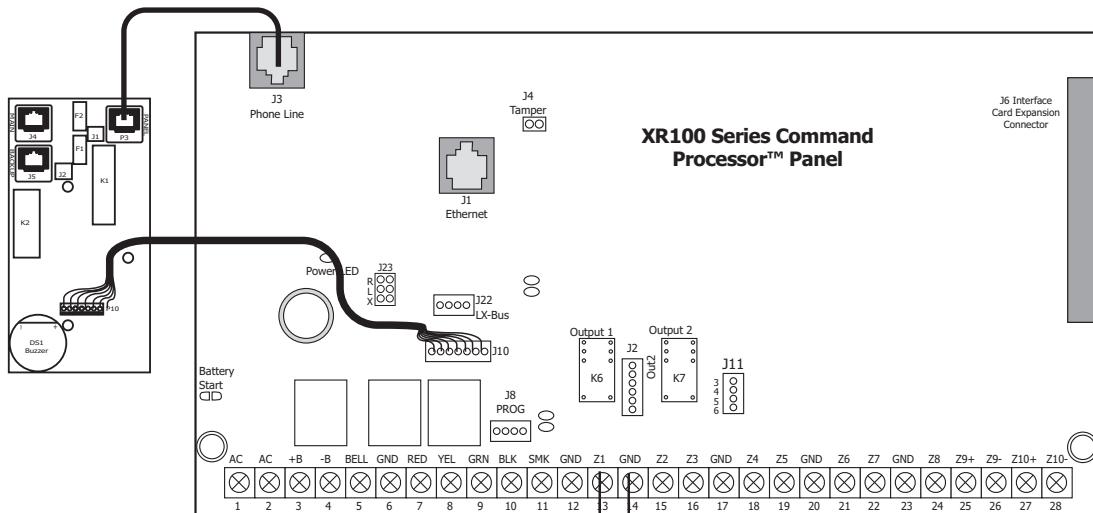


DMP Model 867  
30mA @ 12 VDC  
  
The 867 must have its own independent address ranging from 500 to 599. A Supervisory zone must be programmed into the panel to properly supervise each module.

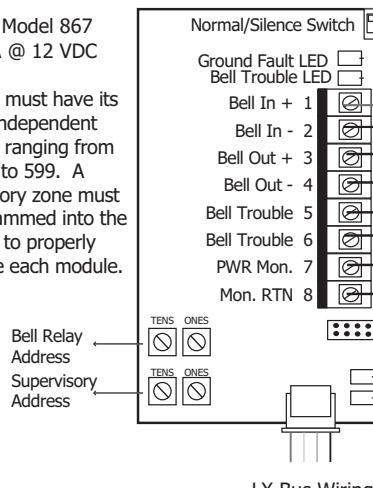

Model 310  
1K EOL


Auxiliary Power Supply must be Listed for Fire Protective Signaling Service. Power Supplies must have battery backup.

When using an SM Sync Module, the maximum current is 3 Amps.

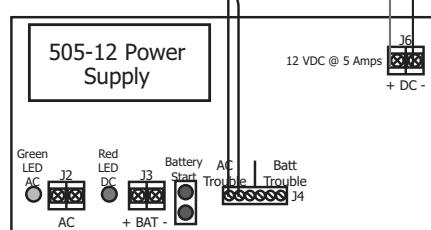

The Auxiliary Power Supply and Notification Circuit Module trouble contact zone must be programmed as a Supervisory Type zone and must be selected for display in the keypad status list.

Sync module required when using multiple notification appliances

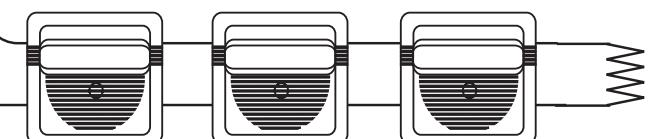


Model 308  
10K EOL

Listed, Polarized  
Notification Appliances

See the Notification Appliance section for a list of appliances.


# WIRING DIAGRAMS

## **29.11 867 Class B Style W Dual Notification Appliance Circuits**

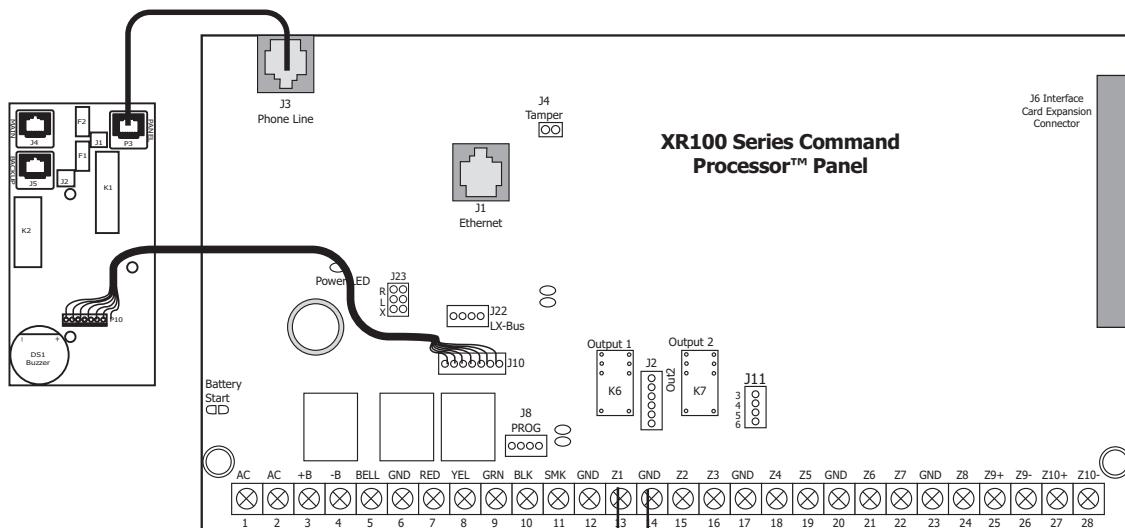

DMP Model 867  
30mA @ 12 VDC


The 867 must have its own independent address ranging from 500 to 599. A Supervisory zone must be programmed into the panel to properly supervise each module.

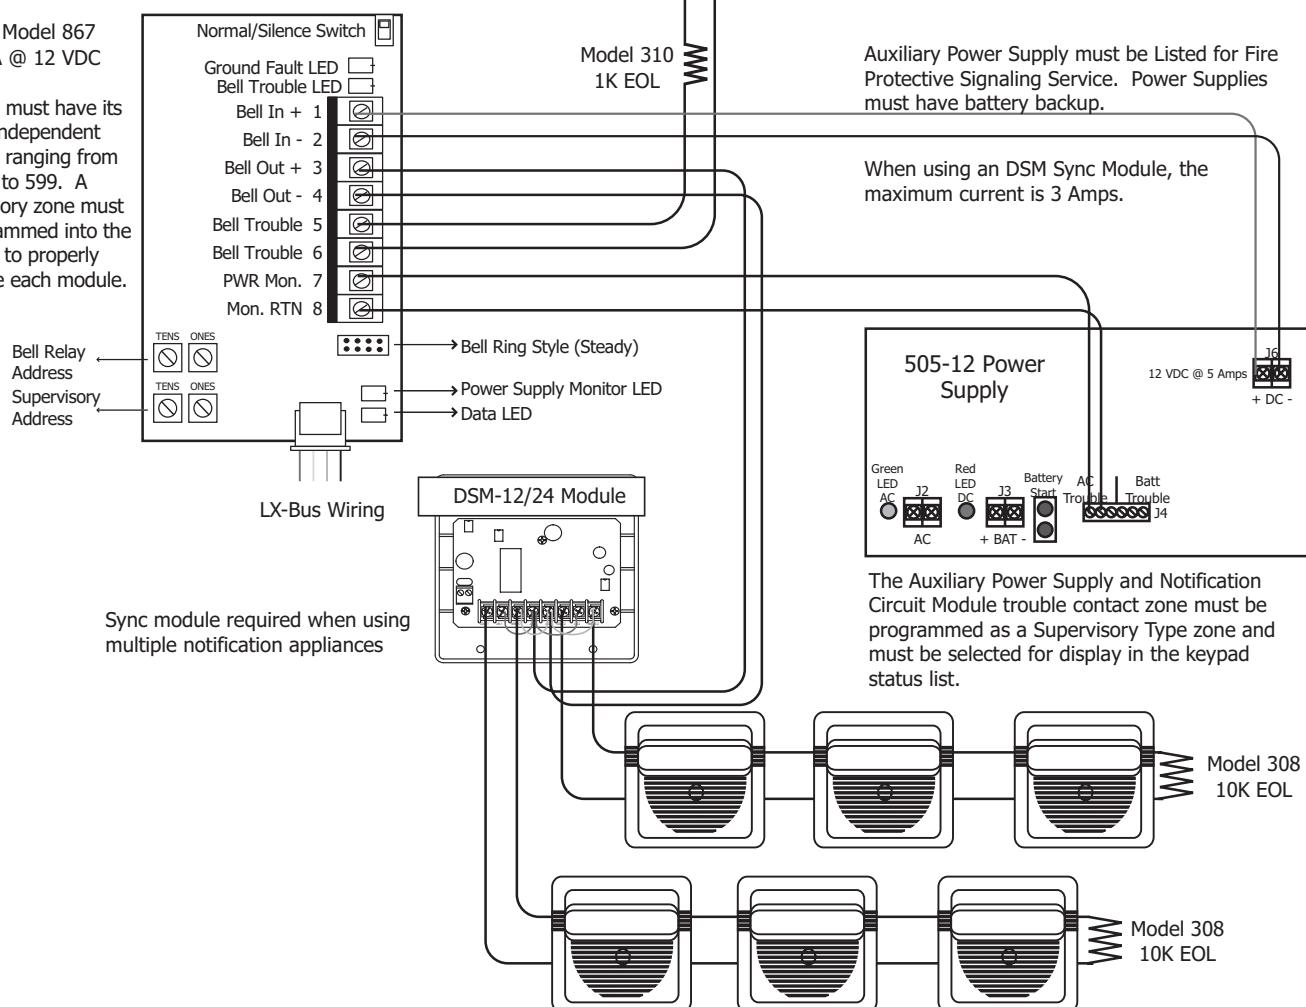

### Listed, Polarized Notification Appliances


See the **Notification Appliance** section for a list of appliances.

## 29.12 Panel Slave Communicator for FACP using 630F Annunciator

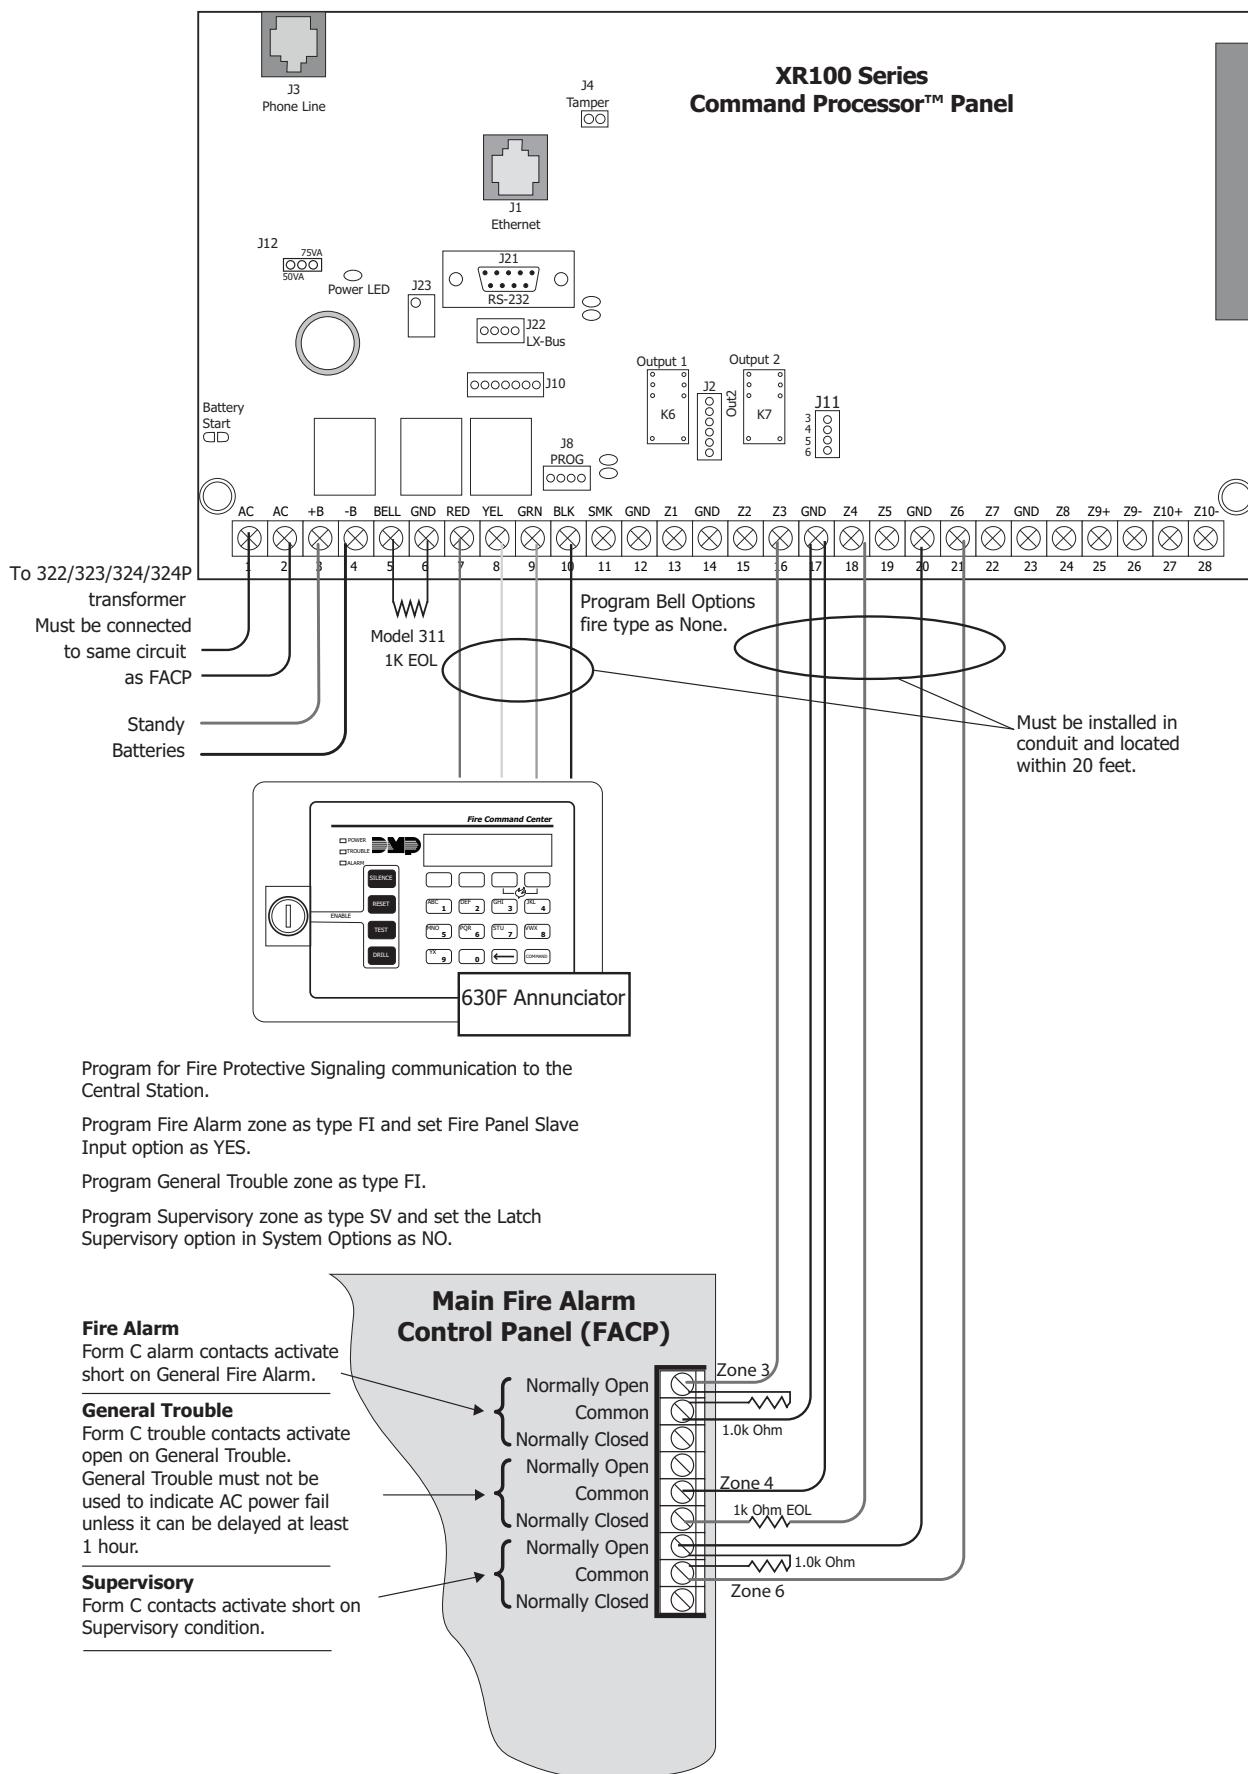


# WIRING DIAGRAMS

## 29.13 Dual Style D Zone Module Installation

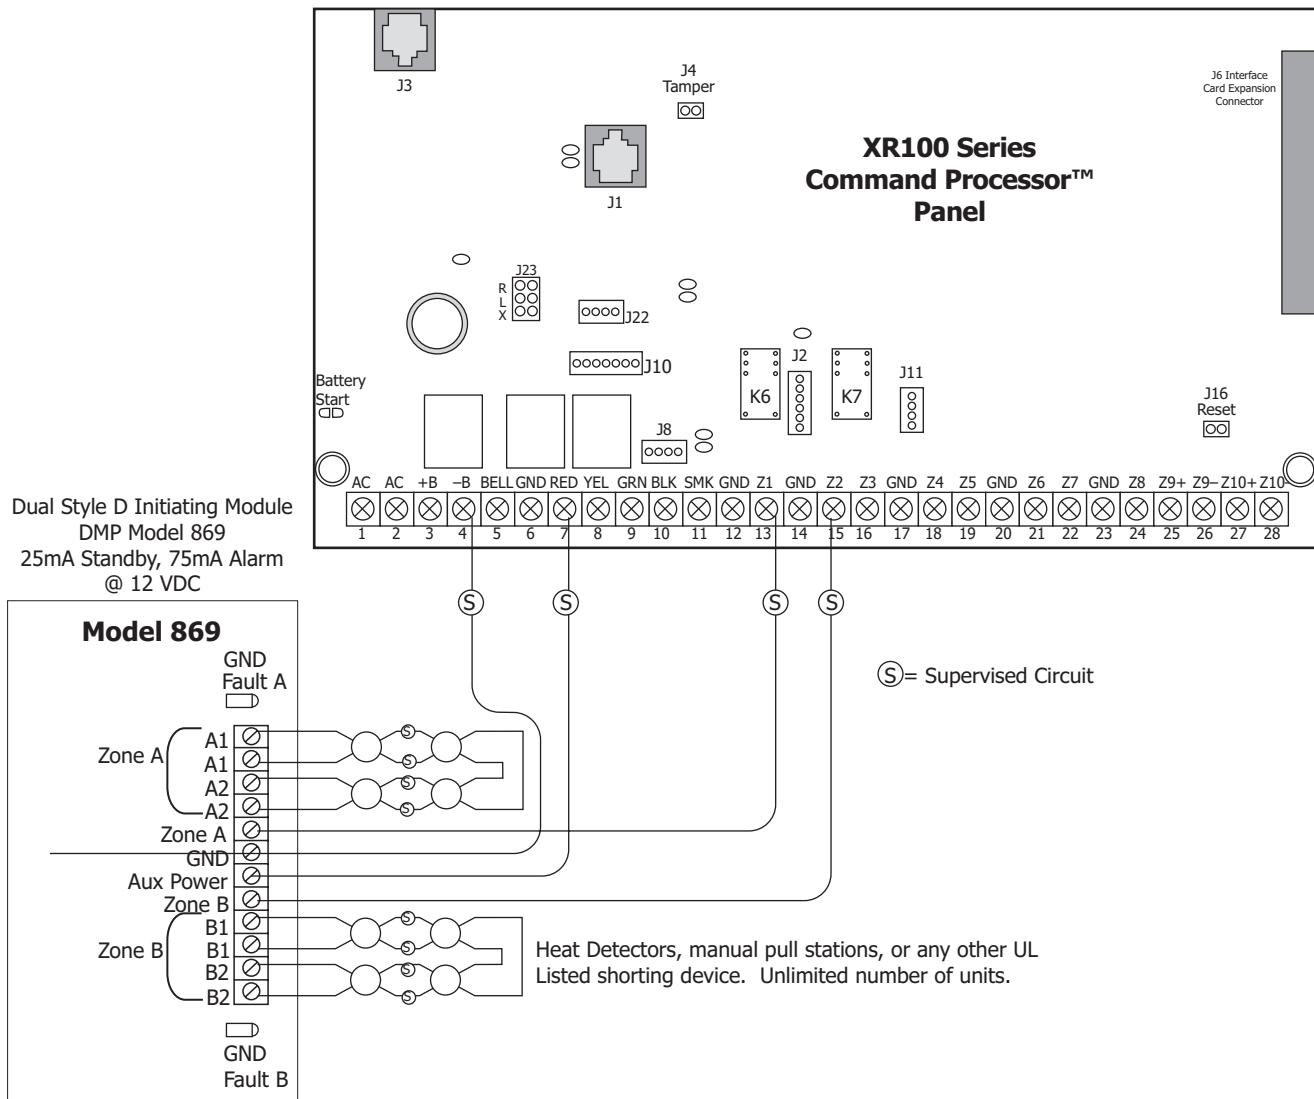

## 29.14 Derived Channel Installation Using Bosch D8122

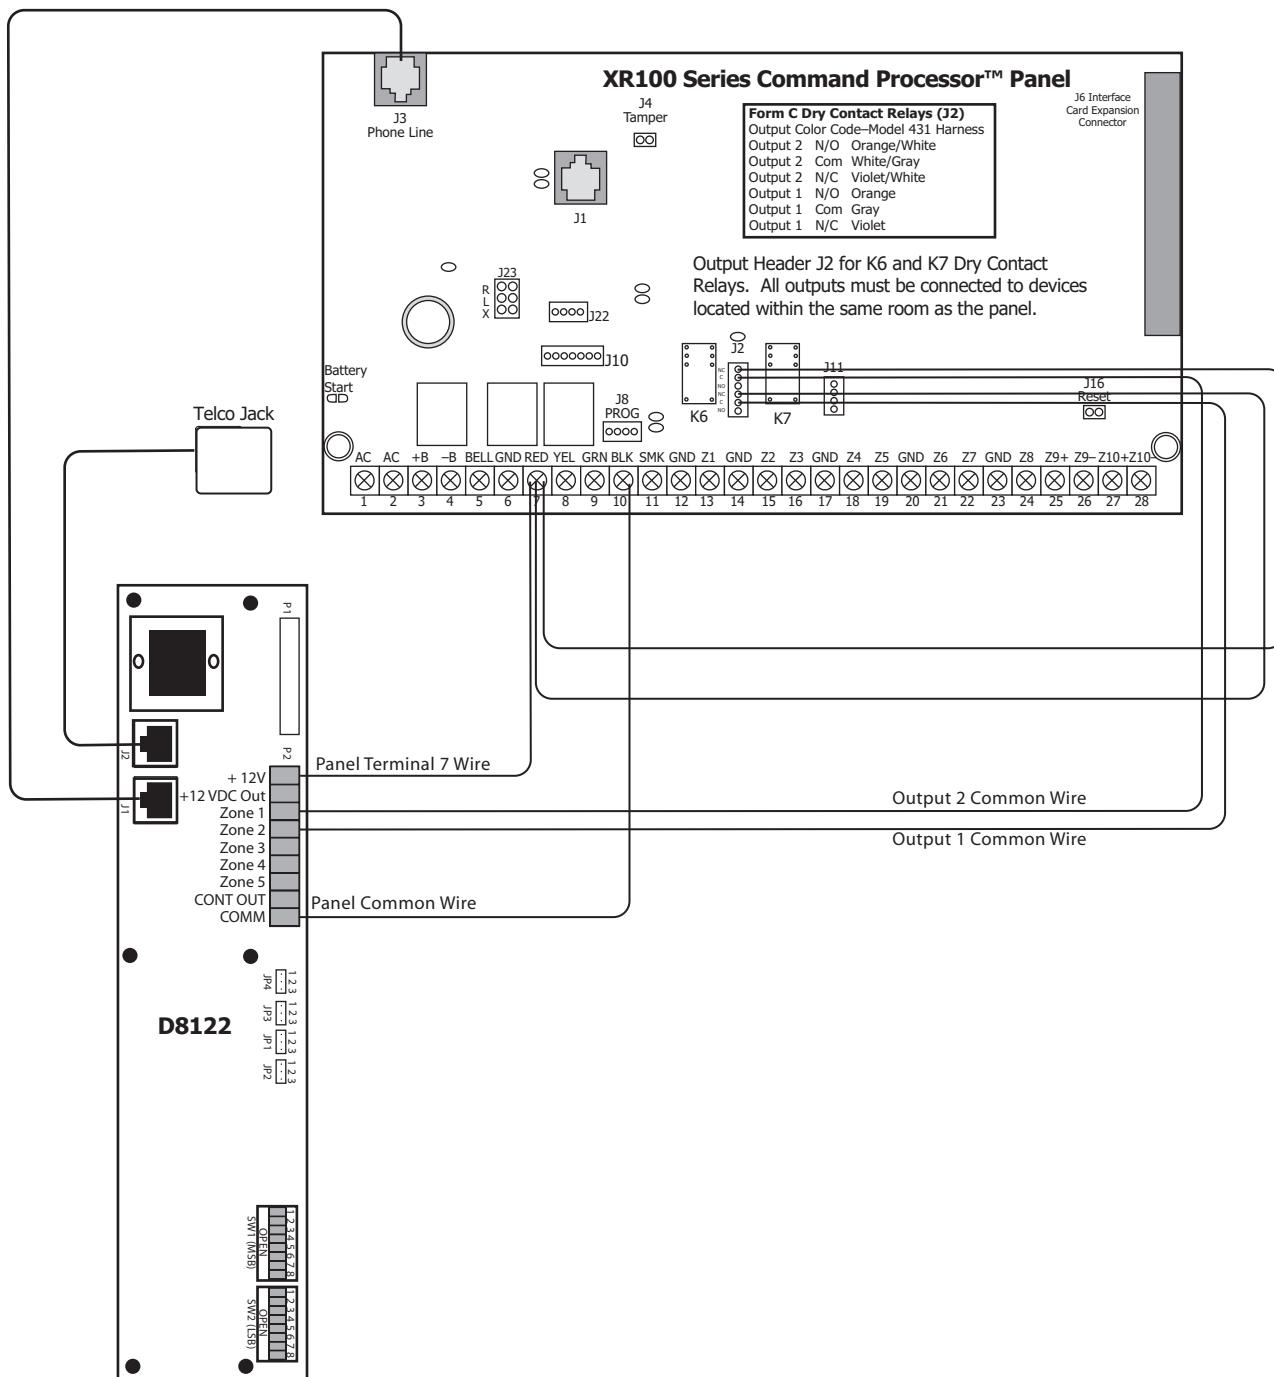


## Interfacing D8122 to the XR100FC Series Panels

The D8122 may only be used in conjunction with telephone systems that support Derived Channel network. For installation instructions, see the Derived Channel STUD8121A/D8122 Operation and Installation Guide.


- For UL Standard Line Security applications, the panel must be installed and programmed to meet burglary alarm system requirements.
- The panel must be installed and programmed for reporting all alarm conditions through the integral DACT or network connection to the same central station that monitors the D8122.
- The D8122 must be installed in the same enclosure as the XR100FC Series panel using the supplied mounting hardware. Refer to the STUD8121A/D8122 Operation and Installation Guide.

# WIRING DIAGRAMS


## 29.15 LX-Bus™ Module Connection

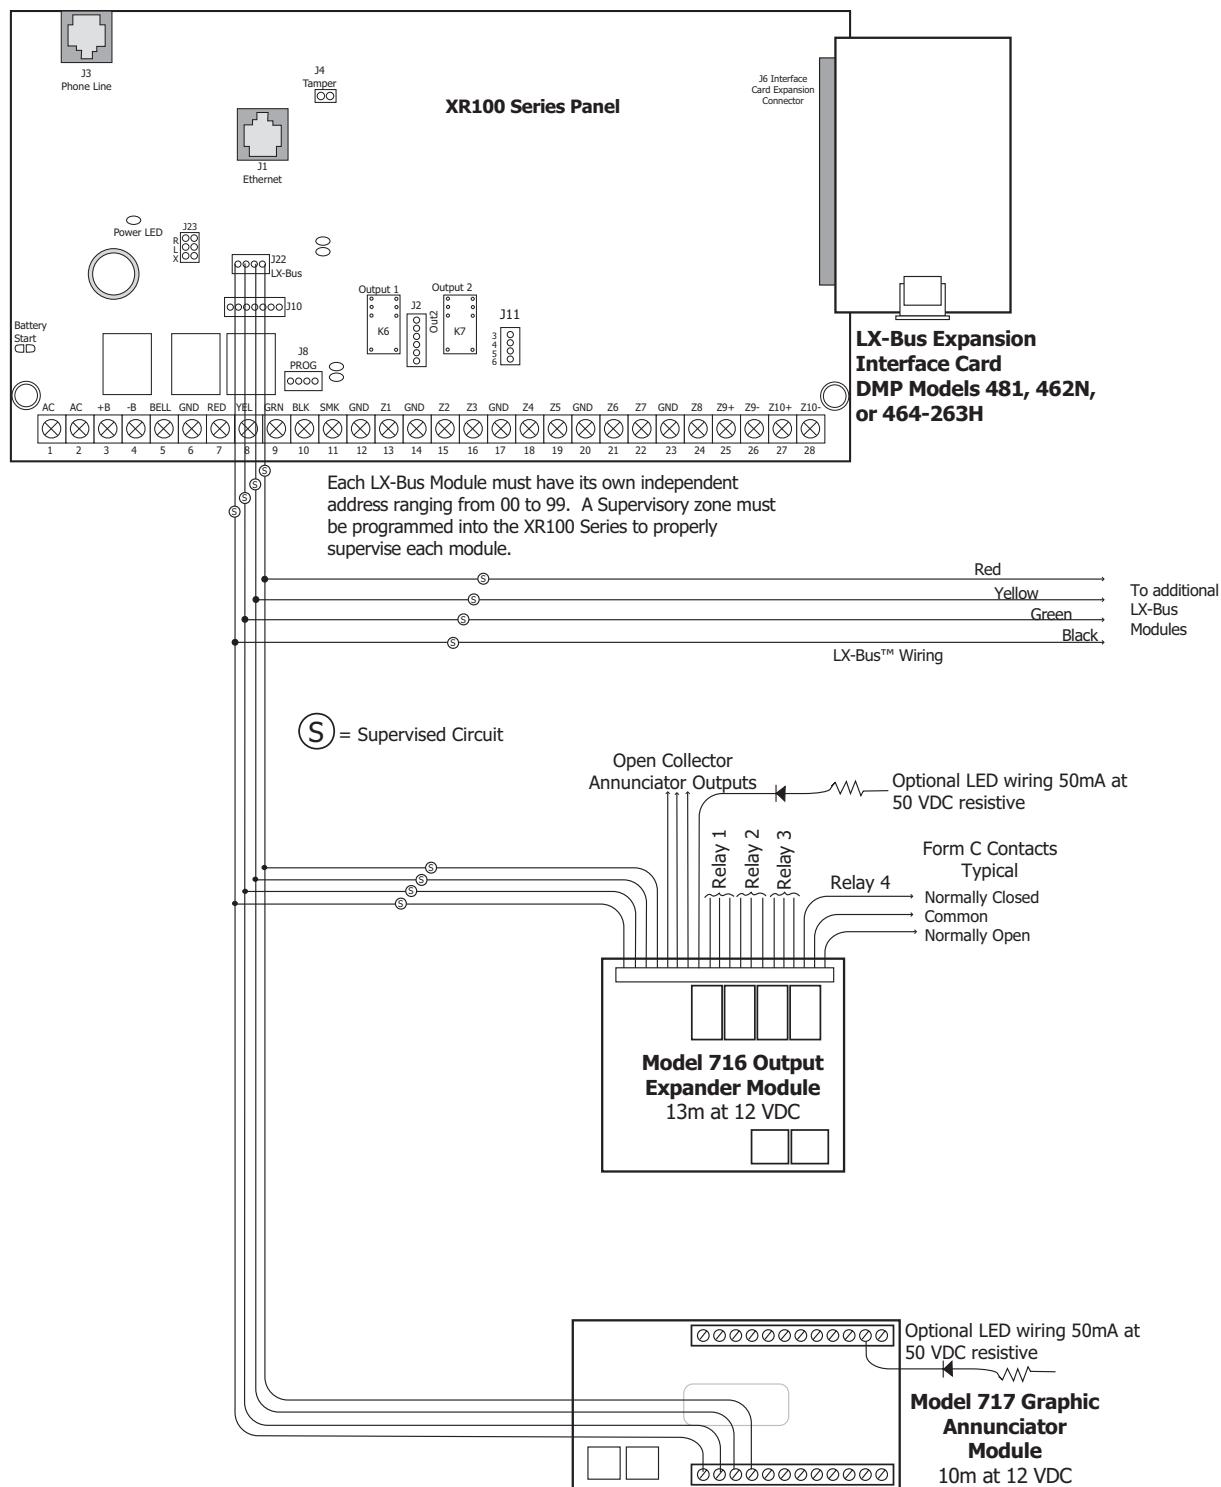

## 29.16 Model 860 Relay Module Connection

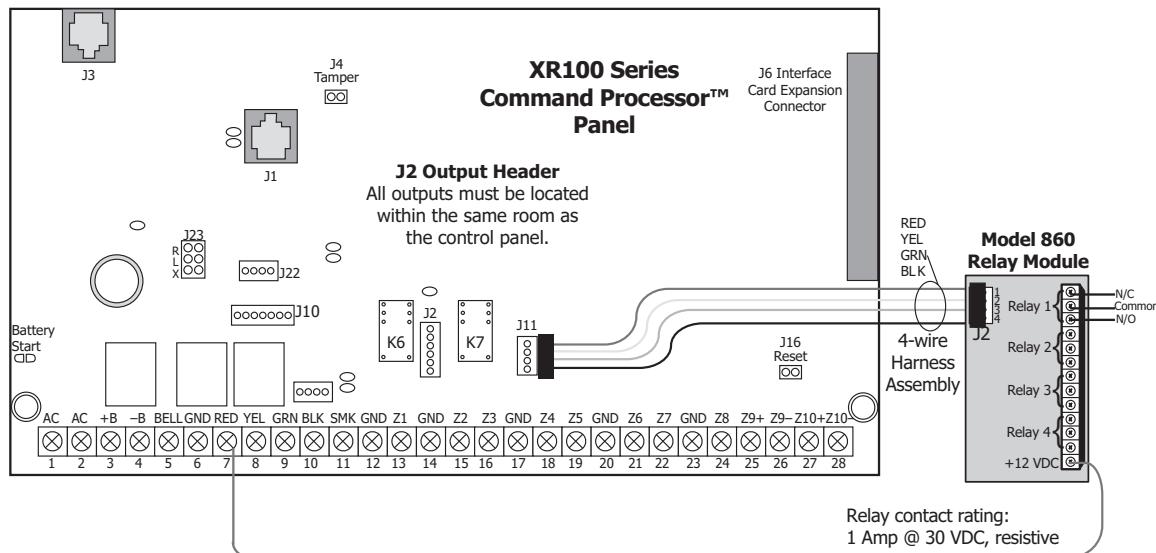


## 29.17 Powered Burglary Devices

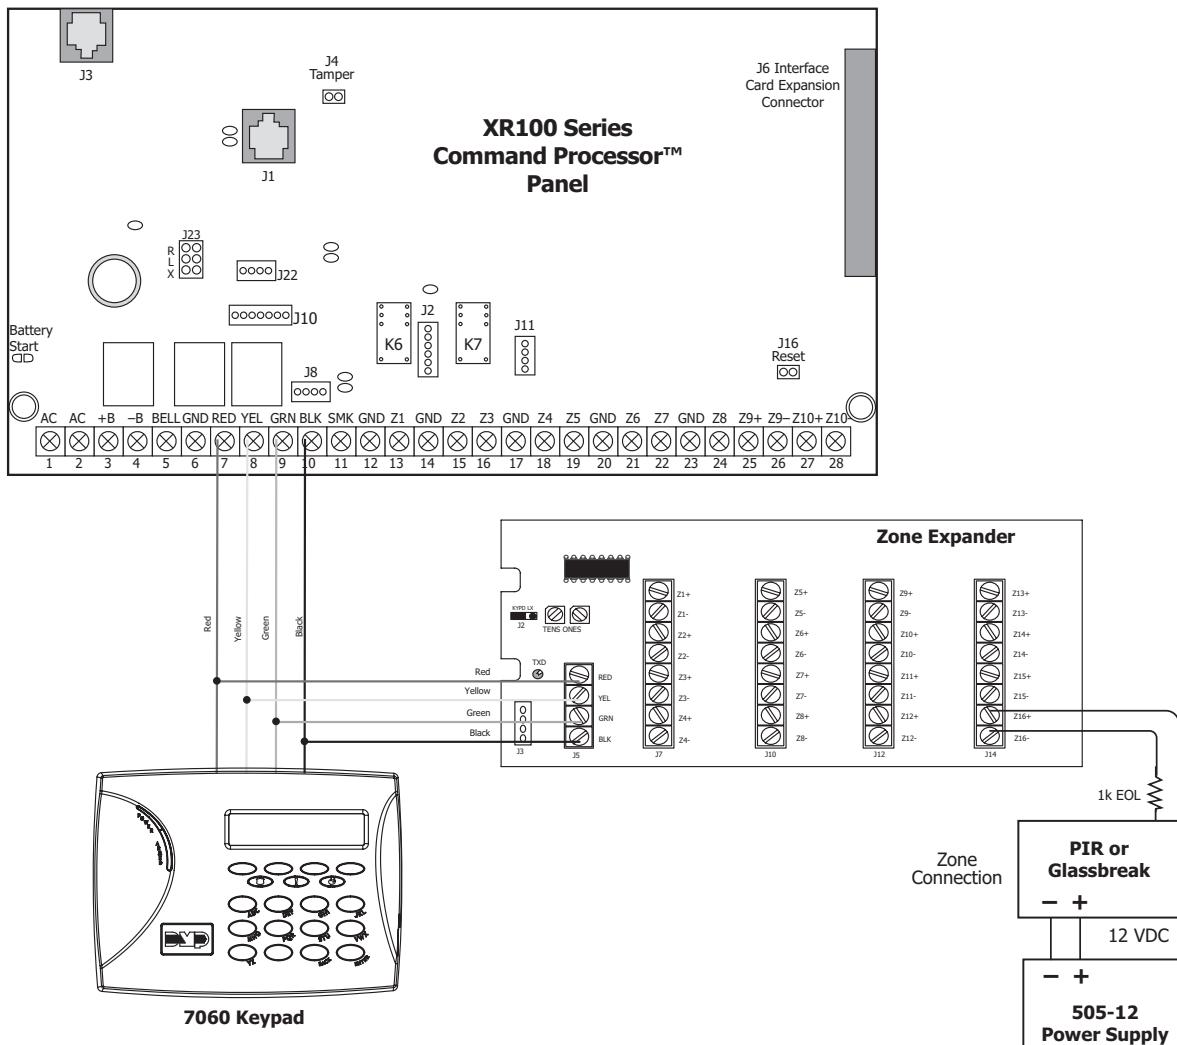


# WIRING DIAGRAMS

## 29.18 System Sensor 2-Wire Smoke Detectors

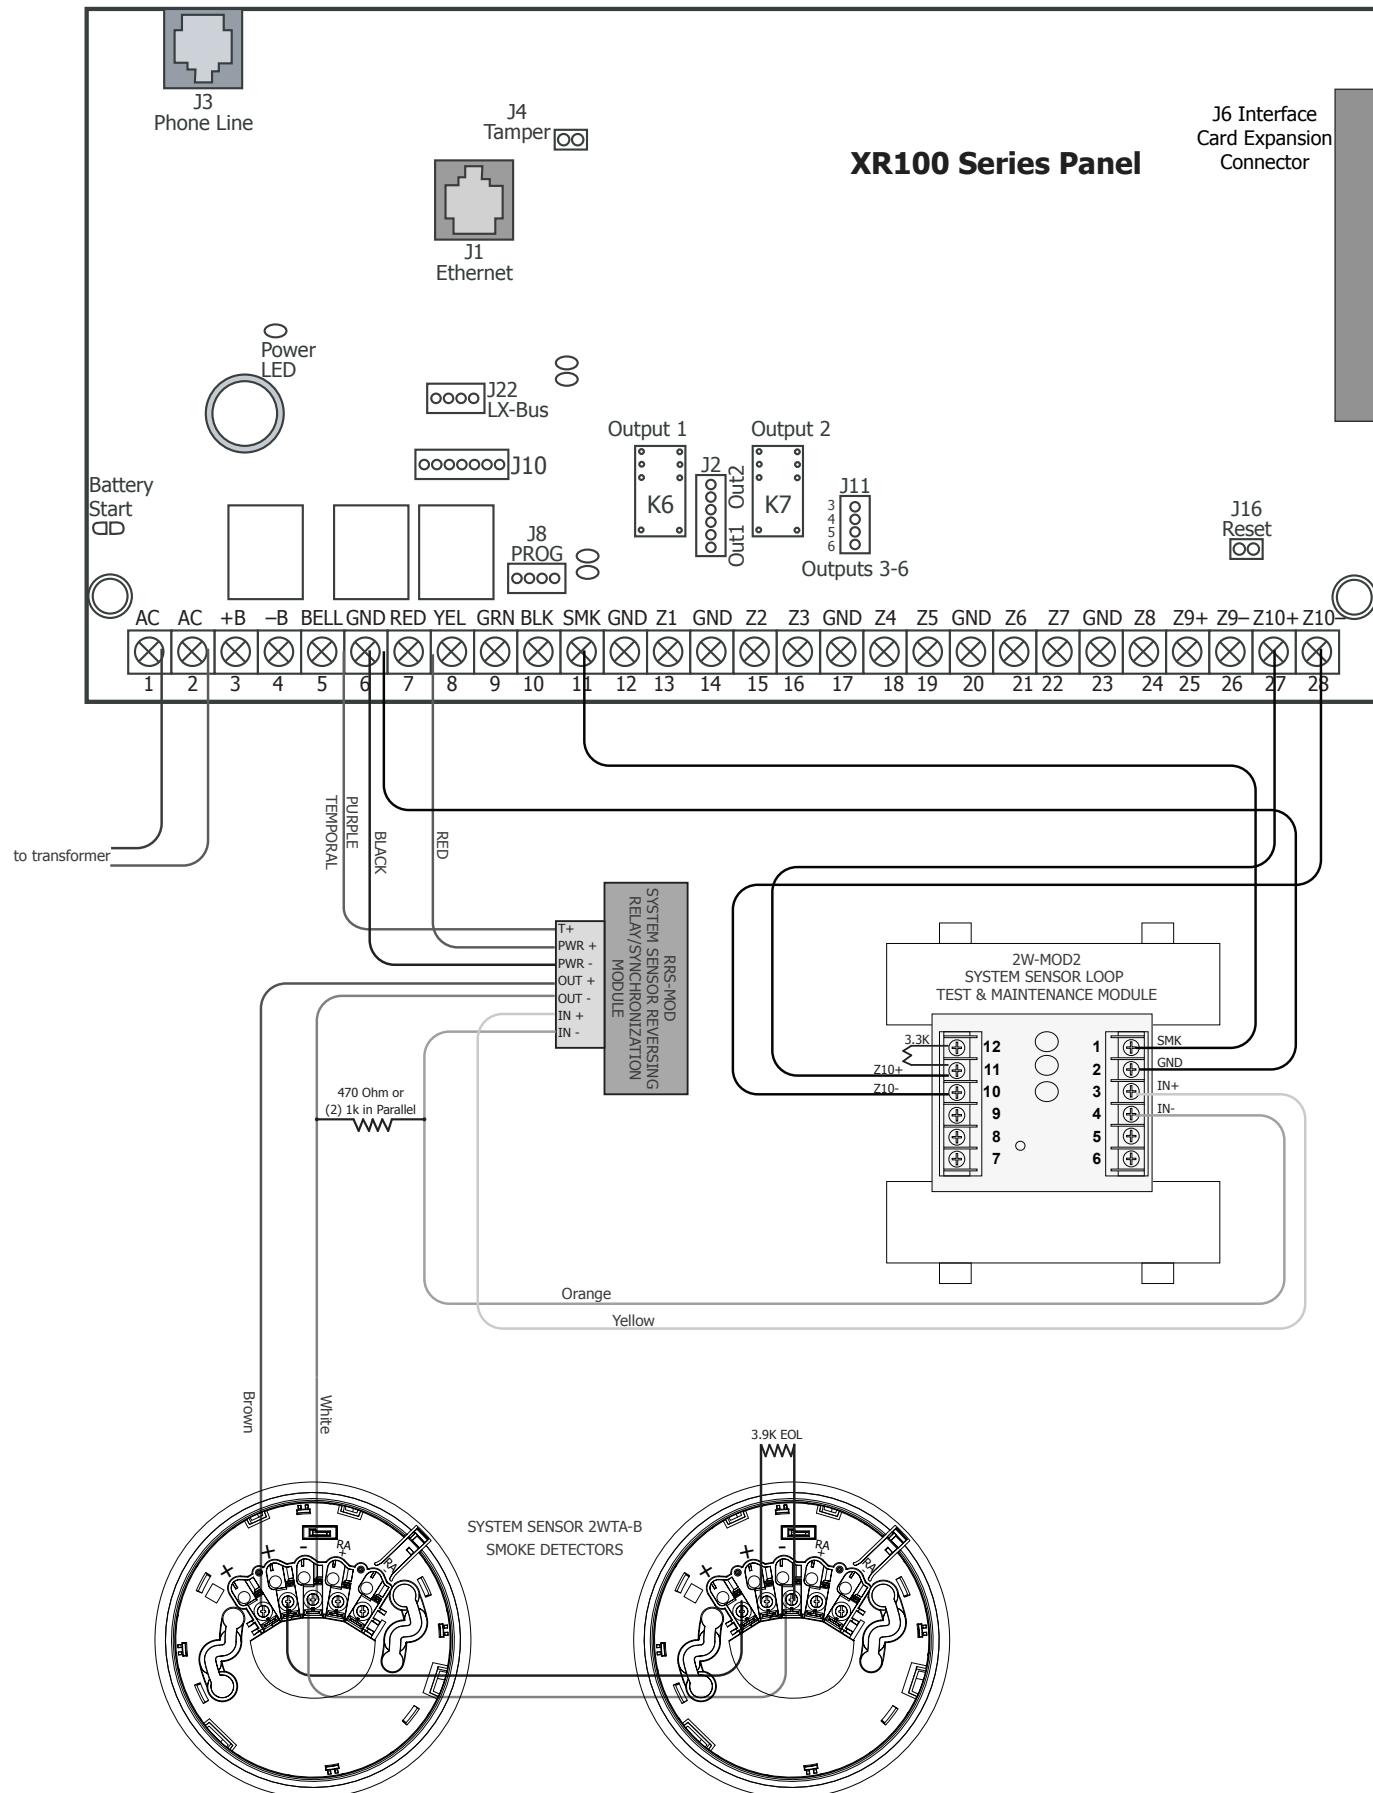

## 29.19 System Sensor i4 Series Smoke and CO Detectors Using A Single COSMOD2W Module


See i4 Series Interface Module Installation and Maintenance Instructions for additional information.

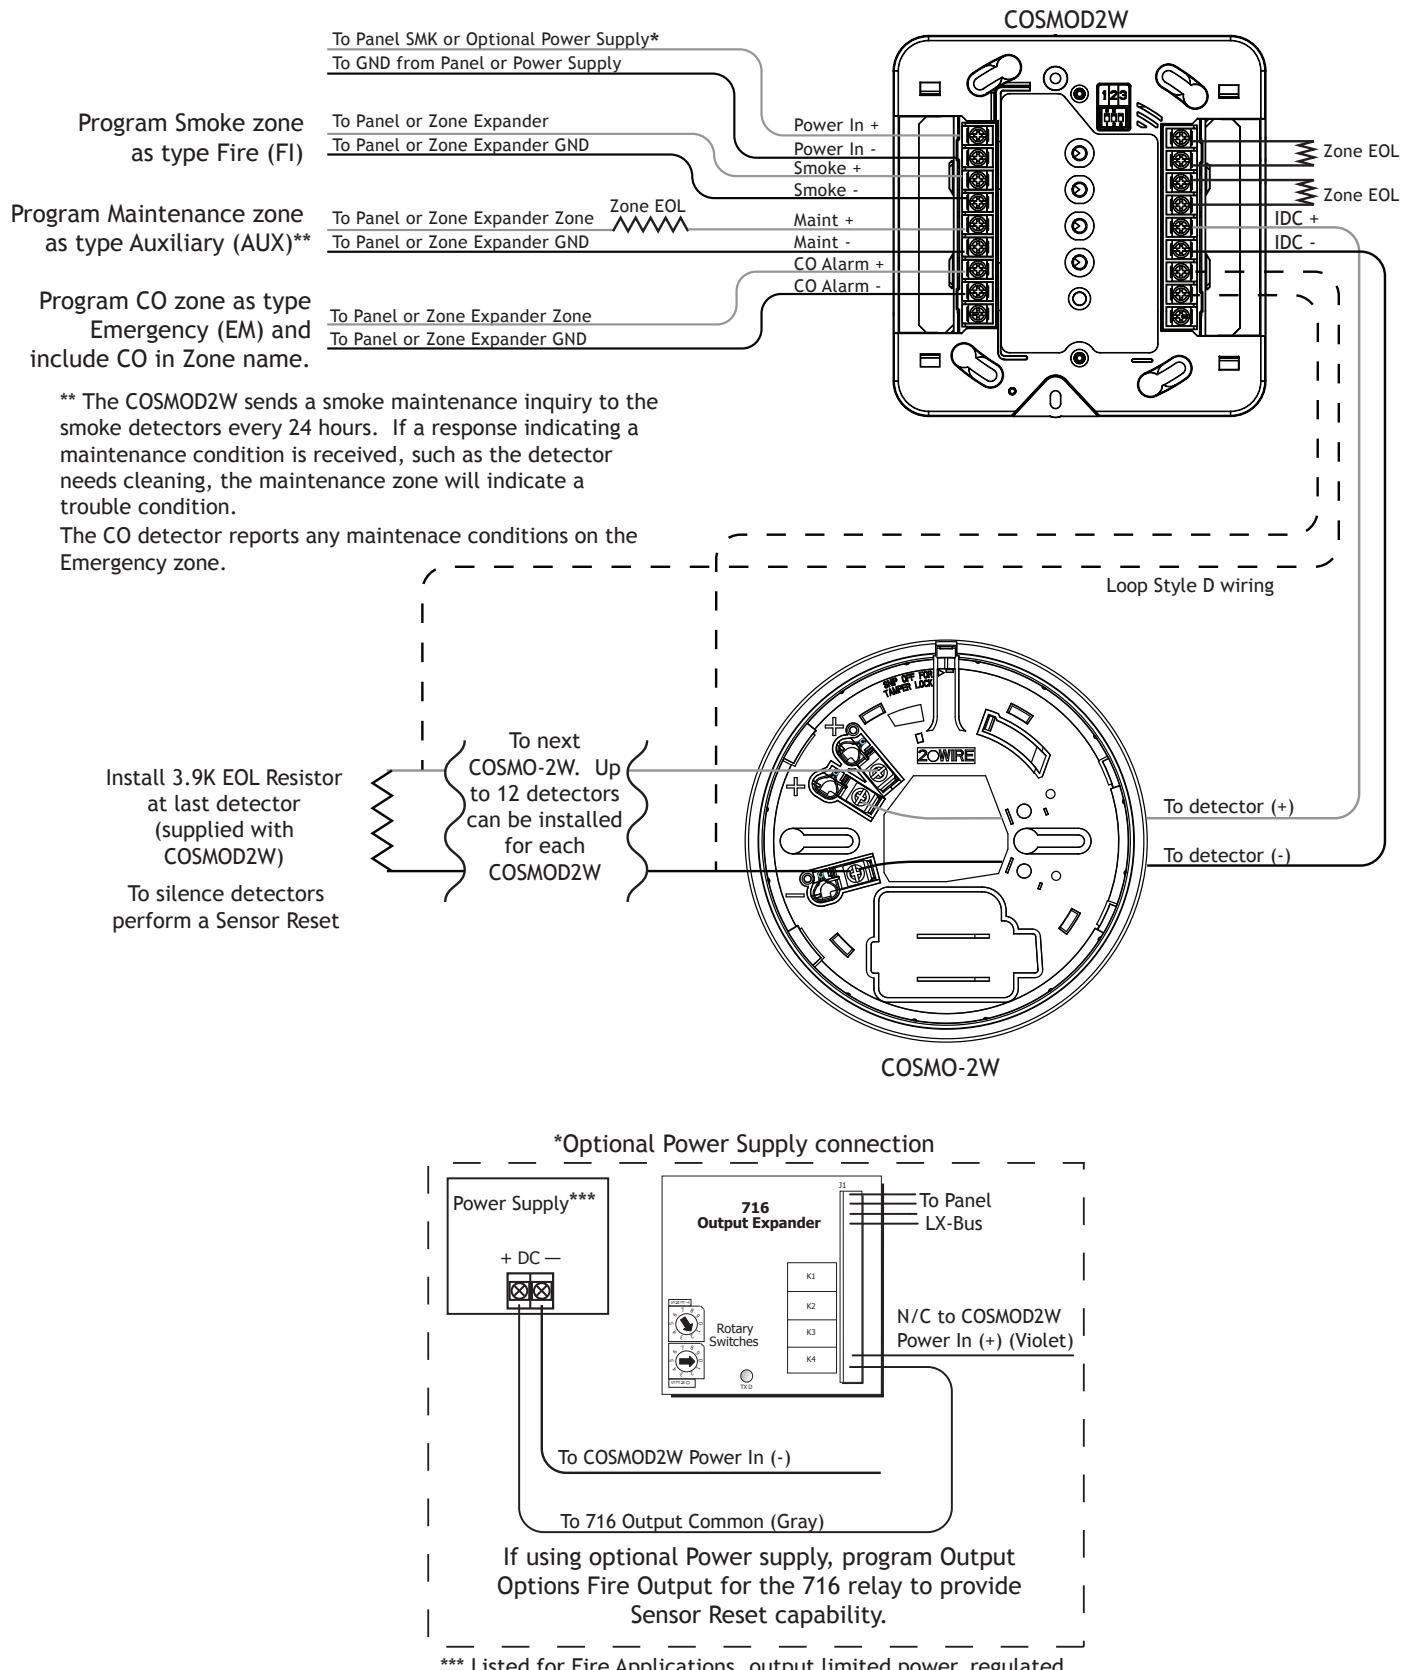

# WIRING DIAGRAMS

## 29.20 System Sensor i4 Series Smoke and CO Detectors Using Multiple COSMOD2W Modules

See i4 Series Interface Module Installation and Maintenance Instructions for additional information.

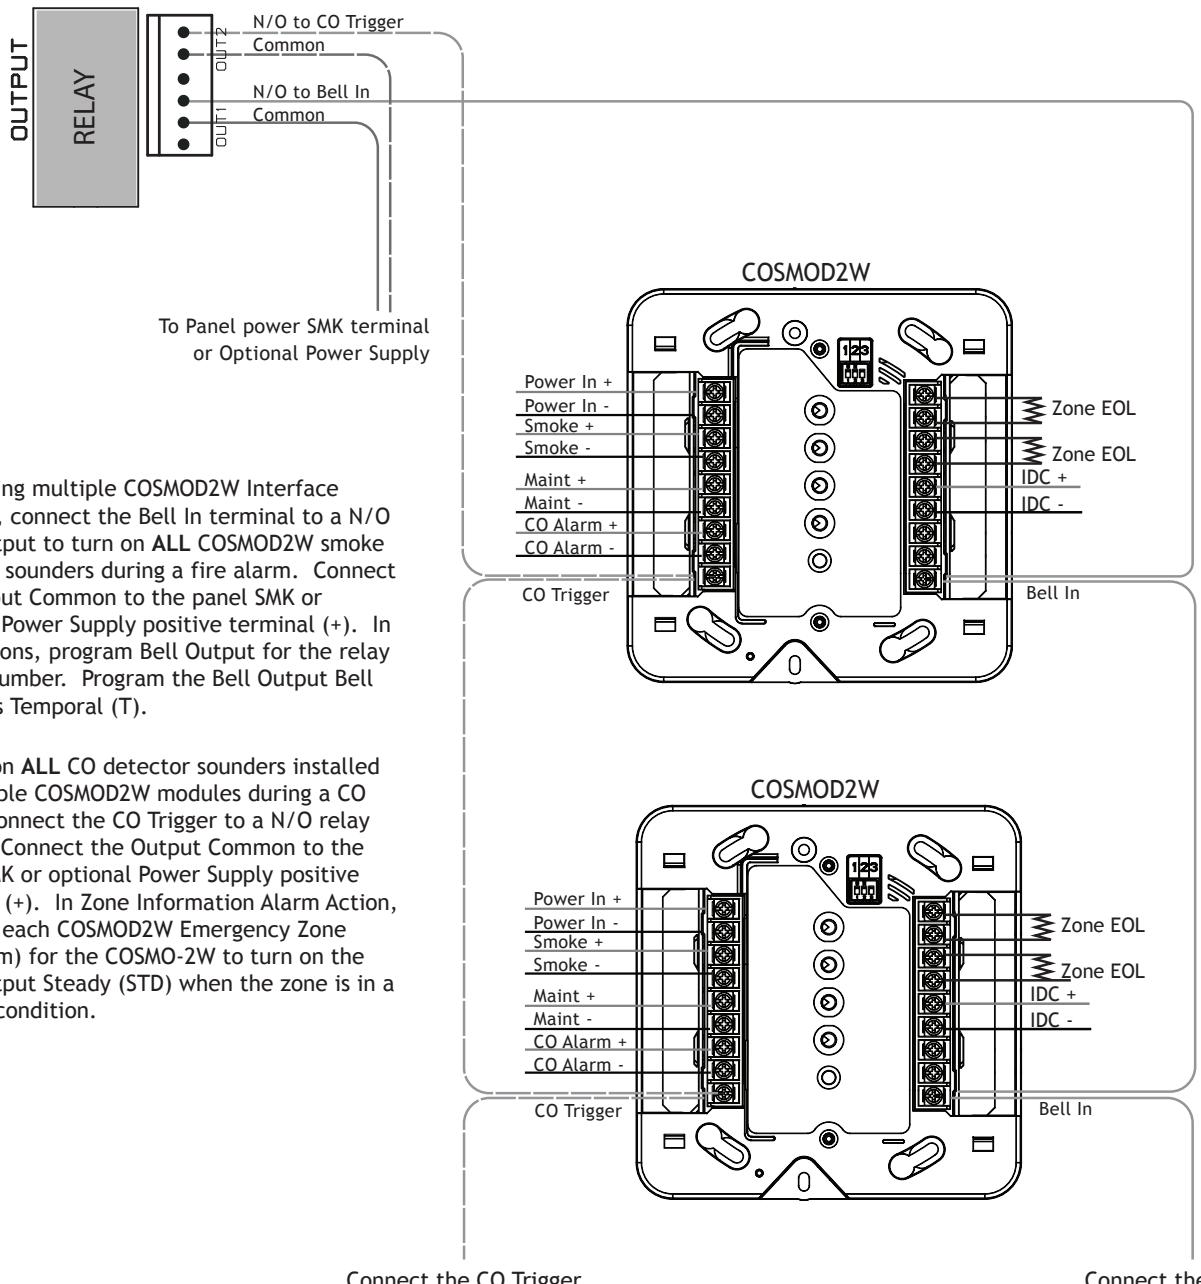

If installing multiple COSMOD2W Interface modules, connect the Bell In terminal to a N/O relay output to turn on ALL COSMOD2W smoke detector sounders during a fire alarm. Connect the Output Common to the panel SMK or optional Power Supply positive terminal (+). In Bell Options, program Bell Output for the relay output number. Program the Bell Output Bell Action as Temporal (T).

To turn on ALL CO detector sounders installed on multiple COSMOD2W modules during a CO alarm, connect the CO Trigger to a N/O relay output. Connect the Output Common to the panel SMK or optional Power Supply positive terminal (+). In Zone Information Alarm Action, program each COSMOD2W Emergency Zone (CO Alarm) for the COSMO-2W to turn on the relay output Steady (STD) when the zone is in a shorted condition.

## Revisions to This Document

This section explains the changes that were made to this document during this revision. This section lists the date the change was made, the section number and heading, and a quick summary of the change.

Ver.	Section Number and Heading	Summary of Changes
1.11	11.2 Compatible 2-Wire Smoke Detector Chart 29.19 System Sensor i4 Series Smoke and CO Detectors Using A Single COSMOD2W Module 29.20 System Sensor i4 Series Smoke and CO Detectors Using Multiple COSMOD2W Modules	Updated to current devices Added Wiring Diagram Added Wiring Diagram
1.10	1.5 LX-Bus 3.4 Accessory Devices 6.8 XR100 Power Requirements	Added Model 2W-BLX and 2WT-BLX Smoke Detector references Added Model 2W-BLX and 2WT-BLX Smoke Detector references Added Model 2W-BLX and 2WT-BLX Smoke Detector references
1.09	Complete Guide 3.4 Accessory Devices 6.8 Power Requirements	Added 464 Series references Updated for current product Updated for current product
1.08	1.5 LX-Bus 2.2 Zone Expansion 3.4 Accessory Devices 4.4 Connecting the LX-Bus and Keypad Bus Devices 6.8 Power Requirements 15.3 LX-Bus Interface Card 22.8 Model 463G, 463C, or CellCom, CELL Only, Standard Line Security 29.15 LX-Bus Module Connection	Added reference for Model 463C CDMA Cellular Communicator Added reference for Model 463C CDMA Cellular Communicator Updated diagram and added DMP Interface Cards

## Certifications

FCC Part 15

FCC Part 68 Registration ID CCKAL00BXR500

New York City (FDNY COA #6167)

ANSI/UL 294 Access Control System Units

ANSI/UL 1076 Proprietary Burglar

ANSI/UL 1610 Central Station Burglar

ANSI/UL 2017 General Purpose Signaling Devices and Systems

ANSI/UL 864 Fire Protective Signaling

Compatible with Devices listed for

ANSI/UL 268 Smoke-Automatic Fire Detectors

ANSI/UL 346 Waterflow Indicators for Fire Protective Signaling Systems

ANSI/UL 636 Holdup Alarm Units and Systems Accessory

UL Standard Line Security



800-641-4282

[www.dmp.com](http://www.dmp.com)

Designed, Engineered and Assembled in U.S.A.

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard

Springfield, Missouri 65803-8877

