



## Operating Instructions

VLT® AQUA Drive FC 202 0.25-90 kW



## Safety

### Safety

#### **⚠ WARNING**

##### **HIGH VOLTAGE!**

Frequency converters contain high voltage when connected to AC mains input power. Installation, start up, and maintenance should be performed by qualified personnel only. Failure to perform installation, start up, and maintenance by qualified personnel could result in death or serious injury.

##### **High Voltage**

Frequency converters are connected to hazardous mains voltages. Extreme care should be taken to protect against shock. Only trained personnel familiar with electronic equipment should install, start, or maintain this equipment.

#### **⚠ WARNING**

##### **UNINTENDED START!**

When the frequency converter is connected to AC mains, the motor may start at any time. The frequency converter, motor, and any driven equipment must be in operational readiness. Failure to be in operational readiness when the frequency converter is connected to AC mains could result in death, serious injury, equipment, or property damage.

##### **Unintended Start**

When the frequency converter is connected to the AC mains, the motor may be started by means of an external switch, a serial bus command, an input reference signal, or a cleared fault condition. Use appropriate cautions to guard against an unintended start.

#### **⚠ WARNING**

##### **DISCHARGE TIME!**

Frequency converters contain DC-link capacitors that can remain charged even when the frequency converter is not powered. To avoid electrical hazards, disconnect AC mains, any permanent magnet type motors, and any remote DC-link power supplies, including battery backups, UPS and DC-link connections to other frequency converters. Wait for the capacitors to fully discharge before performing any service or repair work. The amount of wait time is listed in the *Discharge Time* table. Failure to wait the specified time after power has been removed before doing service or repair could result in death or serious injury.

Voltage [V]	Minimum Waiting Time (Minutes)		
	4	7	15
200-240	0.25-3.7 kW		5.5-45 kW
380-480	0.37-7.5 kW		11-90 kW
525-600	0.75-7.5 kW		11-90 kW
525-690		1.1-7.5 kW	11-90 kW
High voltage may be present even when the warning LED display lights are off.			

##### **Discharge Time**

##### **Symbols**

The following symbols are used in this manual.

#### **⚠ WARNING**

Indicates a potentially hazardous situation which could result in death or serious injury.

#### **⚠ CAUTION**

Indicates a potentially hazardous situation which can result in minor or moderate injury. It can also be used to alert against unsafe practices.

### **CAUTION**

Indicates a situation that could result in equipment or property-damage-only accidents.

### **NOTE**

Indicates highlighted information to regard with attention to avoid mistakes or operate equipment at less than optimal performance.



##### **Approvals**

### **NOTE**

**Imposed limitations on the output frequency (due to export control regulations):**

From software version 1.99 the output frequency of the frequency converter is limited to 590 Hz. Software versions 1x.xx also limit the maximum output frequency to 590 Hz, but these versions cannot be flashed, i.e. neither downgraded nor upgraded.



## Contents

<b>1 Introduction</b>	<b>4</b>
1.1 Purpose of the Manual	6
1.2 Additional Resources	6
1.3 Product Overview	6
1.4 Internal Components Functions	6
1.5 Frame Sizes and Power Ratings	7
1.6 Safe Stop	7
1.6.1 Terminal 37 Safe Stop Function	8
1.6.2 Safe Stop Commissioning Test	10
<b>2 Installation</b>	<b>12</b>
2.1 Installation Site Check List	12
2.2 Frequency Converter and Motor Pre-installation Check List	12
2.3 Mechanical Installation	12
2.3.1 Cooling	12
2.3.2 Lifting	13
2.3.3 Mounting	13
2.3.4 Tightening Torques	13
2.4 Electrical Installation	14
2.4.1 Requirements	16
2.4.2 Earth (Grounding) Requirements	16
2.4.2.1 Leakage Current (>3.5 mA)	17
2.4.2.2 Grounding Using Shielded Cable	17
2.4.3 Motor Connection	17
2.4.4 AC Mains Connection	18
2.4.5 Control Wiring	19
2.4.5.1 Access	19
2.4.5.2 Control Terminal Types	20
2.4.5.3 Wiring to Control Terminals	21
2.4.5.4 Using Screened Control Cables	21
2.4.5.5 Control Terminal Functions	22
2.4.5.6 Jumper Terminals 12 and 27	22
2.4.5.7 Terminal 53 and 54 Switches	22
2.4.5.8 Mechanical Brake Control	22
2.4.6 Serial Communication	23
<b>3 Start Up and Functional Testing</b>	<b>24</b>
3.1 Pre-start	24
3.1.1 Safety Inspection	24
3.2 Applying Power to the Frequency Converter	26

3.3 Basic Operational Programming	26
3.3.1 Required Initial Frequency Converter Programming	26
3.4 PM Motor Setup in VVC <sup>plus</sup>	27
3.5 Automatic Motor Adaptation	28
3.6 Check Motor Rotation	28
3.7 Local-control Test	29
3.8 System Start Up	29
3.9 Acoustic Noise or Vibration	29
<b>4 User Interface</b>	<b>30</b>
4.1 Local Control Panel	30
4.1.1 LCP Layout	30
4.1.2 Setting LCP Display Values	31
4.1.3 Display Menu Keys	31
4.1.4 Navigation Keys	32
4.1.5 Operation Keys	32
4.2 Back Up and Copying Parameter Settings	32
4.2.1 Uploading Data to the LCP	33
4.2.2 Downloading Data from the LCP	33
4.3 Restoring Default Settings	33
4.3.1 Recommended Initialisation	33
4.3.2 Manual Initialisation	33
<b>5 About Frequency Converter Programming</b>	<b>34</b>
5.1 Introduction	34
5.2 Programming Example	34
5.3 Control Terminal Programming Examples	35
5.4 International/North American Default Parameter Settings	36
5.5 Parameter Menu Structure	37
5.5.1 Quick Menu Structure	38
5.5.2 Main Menu Structure	40
5.6 Remote Programming with MCT 10 Set-up Software	44
<b>6 Application Set Up Examples</b>	<b>45</b>
6.1 Introduction	45
6.2 Application Examples	45
<b>7 Status Messages</b>	<b>49</b>
7.1 Status Display	49
7.2 Status Message Definitions	49
<b>8 Warnings and Alarms</b>	<b>52</b>

8.1 System Monitoring	52
8.2 Warning and Alarm Types	52
8.3 Warning and Alarm Displays	52
8.4 Warning and Alarm Definitions	53
<b>9 Basic Troubleshooting</b>	<b>54</b>
9.1 Start Up and Operation	54
<b>10 Specifications</b>	<b>57</b>
10.1 Power-dependent Specifications	57
10.2 General Technical Data	68
10.3 Fuse Specifications	73
10.3.1 CE Compliance	73
10.3.2 Fuse Tables	73
10.3.3 UL Compliance	76
10.4 Connection Tightening Torques	81
<b>Index</b>	<b>82</b>

# 1 Introduction

1

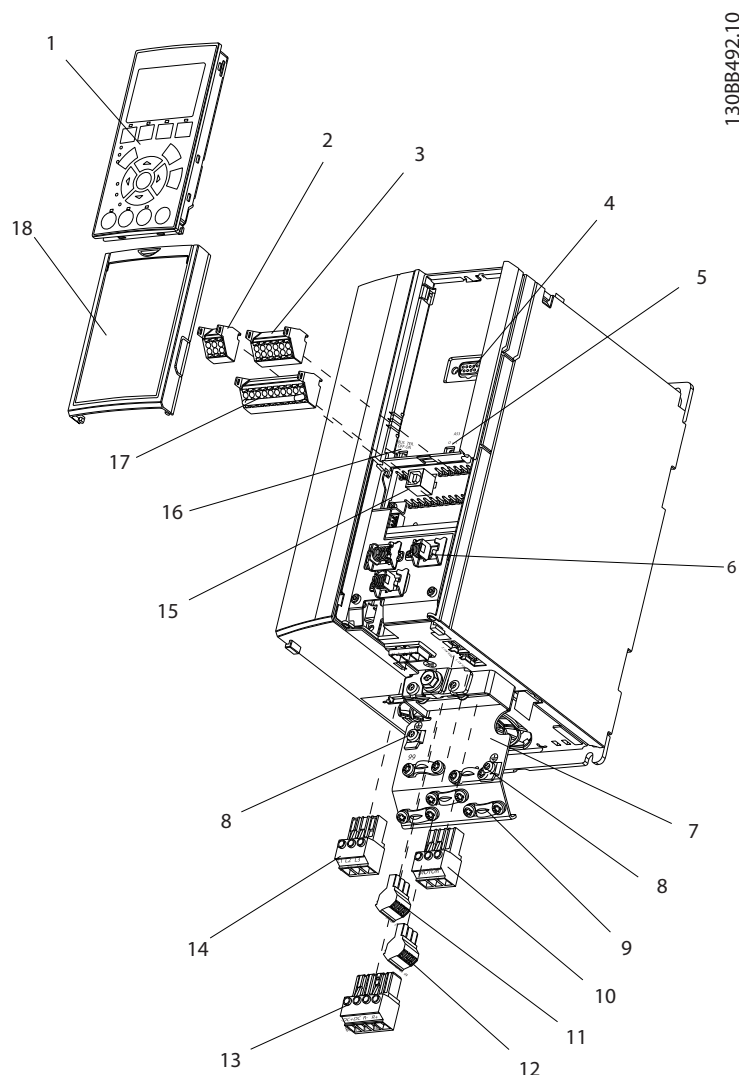


Illustration 1.1 Exploded View A Size

1	LCP	10	Motor output terminals 96 (U), 97 (V), 98 (W)
2	RS-485 serial bus connector (+68, -69)	11	Relay 2 (01, 02, 03)
3	Analog I/O connector	12	Relay 1 (04, 05, 06)
4	LCP input plug	13	Brake (-81, +82) and load sharing (-88, +89) terminals
5	Analog switches (A53), (A54)	14	Mains input terminals 91 (L1), 92 (L2), 93 (L3)
6	Cable strain relief/PE ground	15	USB connector
7	Decoupling plate	16	Serial bus terminal switch
8	Grounding clamp (PE)	17	Digital I/O and 24 V power supply
9	Shielded cable grounding clamp and strain relief	18	Control cable cover plate

Table 1.1 Legend to Illustration 1.1



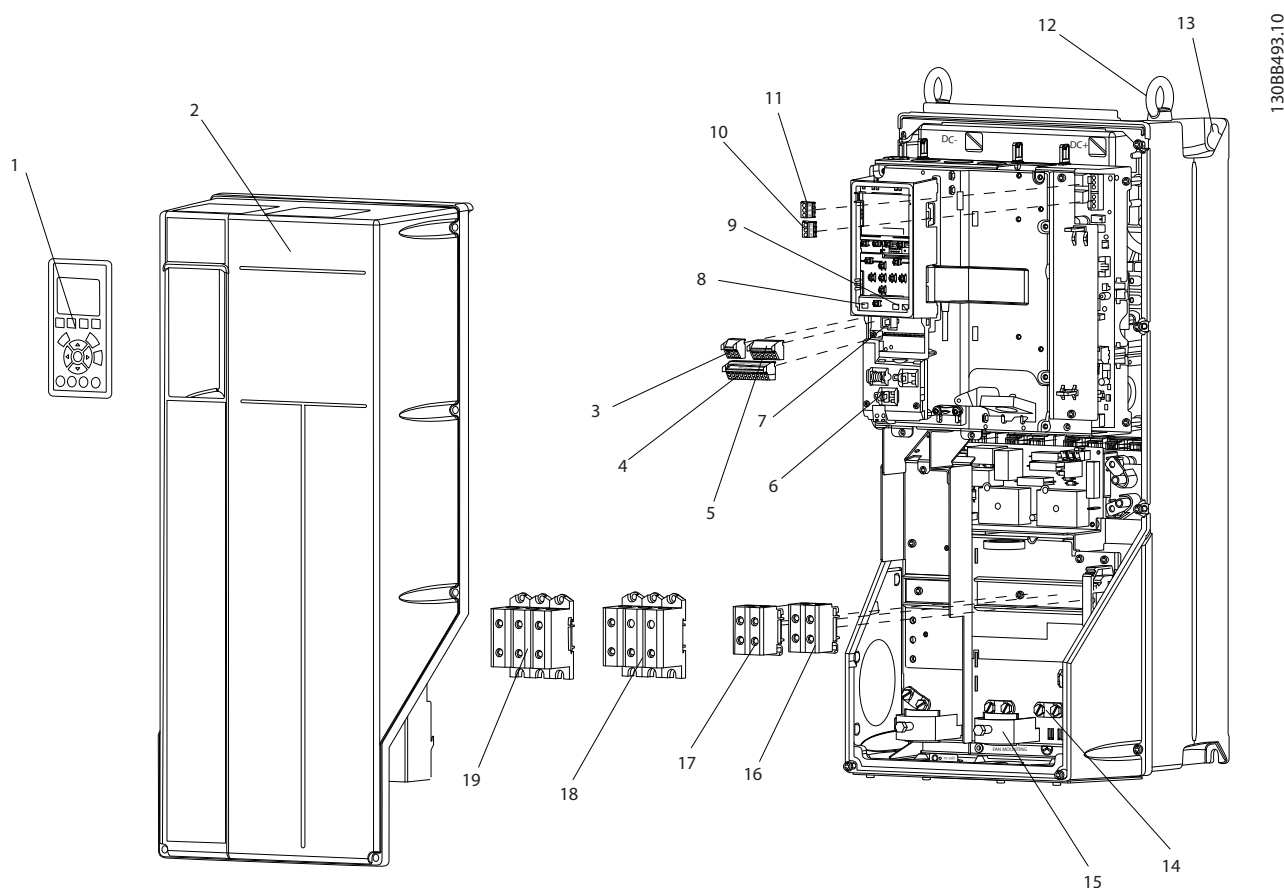


Illustration 1.2 Exploded View B and C Sizes

1	LCP	11	Relay 2 (04, 05, 06)
2	Cover	12	Lifting ring
3	RS-485 serial bus connector	13	Mounting slot
4	Digital I/O and 24 V power supply	14	Grounding clamp (PE)
5	Analog I/O connector	15	Cable strain relief / PE ground
6	Cable strain relief/PE ground	16	Brake terminal (-81, +82)
7	USB connector	17	Load sharing terminal (DC bus) (-88, +89)
8	Serial bus terminal switch	18	Motor output terminals 96 (U), 97 (V), 98 (W)
9	Analog switches (A53), (A54)	19	Mains input terminals 91 (L1), 92 (L2), 93 (L3)
10	Relay 1 (01, 02, 03)		

Table 1.2 Legend to Illustration 1.2

## 1.1 Purpose of the Manual

This manual is intended to provide detailed information for the installation and of the frequency converter. *2 Installation* provides requirements for mechanical and electrical installation, including input, motor, control and serial communications wiring, and control terminal functions. *3 Start Up and Functional Testing* provides detailed procedures for start up, basic operational programming, and functional testing. The remaining chapters provide supplementary details. These include user interface, detailed programming, application examples, start-up troubleshooting, and specifications.

## 1.2 Additional Resources

Other resources are available to understand advanced frequency converter functions and programming.

- The *VLT® Programming Guide* provides greater detail on working with parameters and many application examples.
- The *VLT® Design Guide* is intended to provide detailed capabilities and functionality to design motor control systems.
- Supplemental publications and manuals are available from Danfoss. See *Danfoss website /BusinessAreas/DrivesSolutions/Documentations/VLT+Technical+Documentation.htm* for listings.
- Optional equipment is available that may change some of the procedures described. Reference the instructions supplied with those options for specific requirements. Contact the local Danfoss supplier or visit the Danfoss website / *BusinessAreas/DrivesSolutions/Documentations/VLT+Technical+Documentation.htm*, for downloads or additional information.

## 1.3 Product Overview

A frequency converter is an electronic motor controller that converts AC mains input into a variable AC waveform output. The frequency and voltage of the output are regulated to control the motor speed or torque. The frequency converter can vary the speed of the motor in response to system feedback, such as changing temperature or pressure for controlling fan, compressor, or pump motors. The frequency converter can also regulate the motor by responding to remote commands from external controllers.

In addition, the frequency converter monitors the system and motor status, issues warnings or alarms for fault

conditions, starts and stops the motor, optimizes energy efficiency, and offers many more control, monitoring, and efficiency functions. Operation and monitoring functions are available as status indications to an outside control system or serial communication network.

For single phase frequency converters (S2 and S4) installed in the EU the following applies:

Single phase frequency converters (S2 and S4) with an input current less than 16 A and an input of more than 1 kW are intended for use as professional equipment in trades, professions, or industries. Designated application areas are:

- Public pools, public water supplies, agriculture, commercial buildings and industries.

They are not intended for general public use or use in residential areas. All other single phase frequency converters are only intended for use in private low-voltage systems interfacing with public supply only at a medium or high voltage level. Operators of private systems must ensure that the EMC environment complies with IEC 61000-3-6 and/or the contractual agreements.

## 1.4 Internal Components Functions

*Illustration 1.3* is a block diagram of the frequency converter's internal components. See *Table 1.3* for their functions.

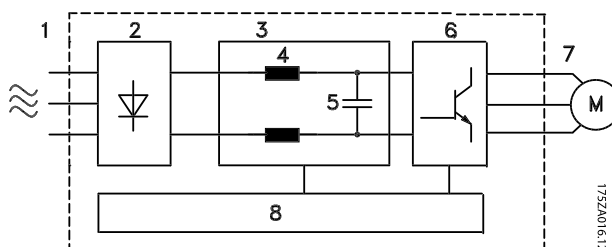


Illustration 1.3 Frequency Converter Block Diagram

Area	Title	Functions
1	Mains input	<ul style="list-style-type: none"> <li>• Three-phase AC mains power supply to the frequency converter</li> </ul>
2	Rectifier	<ul style="list-style-type: none"> <li>• The rectifier bridge converts the AC input to DC current to supply inverter power</li> </ul>
3	DC bus	<ul style="list-style-type: none"> <li>• Intermediate DC-bus circuit handles the DC current</li> </ul>

Area	Title	Functions
4	DC reactors	<ul style="list-style-type: none"> <li>Filter the intermediate DC circuit voltage</li> <li>Provide line transient protection</li> <li>Reduce RMS current</li> <li>Raise the power factor reflected back to the line</li> <li>Reduce harmonics on the AC input</li> </ul>
5	Capacitor bank	<ul style="list-style-type: none"> <li>Stores the DC power</li> <li>Provides ride-through protection for short power losses</li> </ul>
6	Inverter	<ul style="list-style-type: none"> <li>Converts the DC into a controlled PWM AC waveform for a controlled variable output to the motor</li> </ul>

Area	Title	Functions
7	Output to motor	<ul style="list-style-type: none"> <li>Regulated three-phase output power to the motor</li> </ul>
8	Control circuitry	<ul style="list-style-type: none"> <li>Input power, internal processing, output, and motor current are monitored to provide efficient operation and control</li> <li>User interface and external commands are monitored and performed</li> <li>Status output and control can be provided</li> </ul>

Table 1.3 Legend to Illustration 1.3

## 1.5 Frame Sizes and Power Ratings

References to frames sizes used in this manual are defined in Table 1.4.

	Frame Size [kW]											
Volts [V]	A2	A3	A4	A5	B1	B2	B3	B4	C1	C2	C3	C4
200-240	0.25-2.2	3.0-3.7	0.25-2.2	0.25-3.7	5.5-11	15	5.5-11	15-18.5	18.5-30	37-45	22-30	37-45
380-480	0.37-4.0	5.5-7.5	0.37-4.0	0.37-7.5	11-18.5	22-30	11-18.5	22-37	37-55	75-90	45-55	75-90
525-600	n/a	0.75-7.5	n/a	0.75-7.5	11-18.5	22-30	11-18.5	22-37	37-55	75-90	45-55	75-90
525-690	n/a	1.1-7.5	n/a	n/a	n/a	11-30	n/a	n/a	n/a	37-90	45-55	n/a
<b>Single phase</b>												
200-240	n/a	1.1	n/a	1.1	1.5-5.5	7.5	n/a	n/a	15	22	n/a	n/a
380-480	n/a	n/a	n/a	n/a	7.5	11	n/a	n/a	18.5	37	n/a	n/a

Table 1.4 Frames Sizes and Power Ratings

## 1.6 Safe Stop

The frequency converter can perform the safety function *Safe Torque Off* (STO, as defined by EN IEC 61800-5-2<sup>1)</sup>) and *Stop Category 0* (as defined in EN 60204-1<sup>2)</sup>). Danfoss has named this functionality *Safe Stop*. Before integration and use of Safe Stop in an installation, perform a thorough risk analysis to determine whether the Safe Stop functionality and safety levels are appropriate and sufficient. Safe Stop is designed and approved suitable for the requirements of:

- Safety Category 3 according to EN ISO 13849-1
- Performance Level "d" according to EN ISO 13849-1:2008
- SIL 2 Capability according to IEC 61508 and EN 61800-5-2
- SILCL 2 according to EN 62061

<sup>1)</sup> Refer to EN IEC 61800-5-2 for details of Safe torque off (STO) function.

<sup>2)</sup> Refer to EN IEC 60204-1 for details of stop category 0 and 1.

### Activation and Termination of Safe Stop

The Safe Stop (STO) function is activated by removing the voltage at Terminal 37 of the Safe Inverter. By connecting the Safe Inverter to external safety devices providing a safe delay, an installation for a safe Stop Category 1 can be obtained. The Safe Stop function can be used for asynchronous, synchronous, and permanent magnet motors.

### **WARNING**

After installation of Safe Stop (STO), a commissioning test as specified in 1.6.2 *Safe Stop Commissioning Test* must be performed. A passed commissioning test is mandatory after first installation and after each change to the safety installation.

### Safe Stop Technical Data

The following values are associated to the different types of safety levels:

### Reaction time for T37

- Maximum reaction time: 20 ms

Reaction time = delay between de-energizing the STO input and switching off the frequency converter output bridge.

### Data for EN ISO 13849-1

- Performance Level "d"
- MTTF<sub>d</sub> (Mean Time To Dangerous Failure): 14000 years
- DC (Diagnostic Coverage): 90%
- Category 3
- Lifetime 20 years

### Data for EN IEC 62061, EN IEC 61508, EN IEC 61800-5-2

- SIL 2 Capability, SILCL 2
- PFH (Probability of Dangerous failure per Hour)=1E-10/h
- SFF (Safe Failure Fraction) >99%
- HFT (Hardware Fault Tolerance)=0 (1001 architecture)
- Lifetime 20 years

### Data for EN IEC 61508 low demand

- PFDavg for one year proof test: 1E-10
- PFDavg for three year proof test: 1E-10
- PFDavg for five year proof test: 1E-10

No maintenance of the STO functionality is needed.

Security measures have to be taken by the user e.g. installation in a closed cabinet that is only accessible for skilled personnel.

### SISTEMA Data

Functional safety data is available via a data library for use with the SISTEMA calculation tool from the IFA (Institute for Occupational Safety and Health of the German Social Accident Insurance), and data for manual calculation. The library is permanently completed and extended.

## 1.6.1 Terminal 37 Safe Stop Function

The frequency converter is available with safe stop functionality via control terminal 37. Safe stop disables the control voltage of the power semiconductors of the frequency converter output stage. This in turn prevents generating the voltage required to rotate the motor. When the Safe Stop (T37) is activated, the frequency converter issues an alarm, trips the unit, and coasts the motor to a stop. Manual restart is required. The safe stop function can be used as an emergency stop for the frequency converter. In normal operating mode when safe stop is not required, use the regular stop function instead. When automatic

restart is used, ensure the requirements of ISO 12100-2 paragraph 5.3.2.5 are fulfilled.

### Liability Conditions

It is the responsibility of the user to ensure that qualified personnel installs and operates the safe stop function:

- Read and understand the safety regulations concerning health and safety/accident prevention
- Understand the generic and safety guidelines given in this description and the extended description in the relevant *Design Guide*
- Have a good knowledge of the generic and safety standards applicable to the specific application

User is defined as: integrator, operator, service technician, maintenance technician.

### Standards

Use of safe stop on terminal 37 requires that the user satisfies all provisions for safety including relevant laws, regulations and guidelines. The optional safe stop function complies with the following standards.

- IEC 60204-1: 2005 category 0 – uncontrolled stop
- IEC 61508: 1998 SIL2
- IEC 61800-5-2: 2007 – safe torque off (STO) function
- IEC 62061: 2005 SIL CL2
- ISO 13849-1: 2006 Category 3 PL d
- ISO 14118: 2000 (EN 1037) – prevention of unexpected startup

The information and instructions of the instruction manual are not sufficient for a proper and safe use of the safe stop functionality. The related information and instructions of the relevant *Design Guide* must be followed.

### Protective Measures

- Qualified and skilled personnel are required for installation and commissioning of safety engineering systems
- The unit must be installed in an IP54 cabinet or in an equivalent environment. In special applications a higher IP degree is required
- The cable between terminal 37 and the external safety device must be short circuit protected according to ISO 13849-2 table D.4
- When external forces influence the motor axis (for example, suspended loads), additional measures are required (for example, a safety holding brake) to eliminate potential hazards

## Safe Stop Installation and Set-Up

### **⚠ WARNING**

#### SAFE STOP FUNCTION!

The safe stop function does NOT isolate mains voltage to the frequency converter or auxiliary circuits. Perform work on electrical parts of the frequency converter or the motor only after isolating the mains voltage supply and waiting the length of time specified in *Table 1.1*. Failure to isolate the mains voltage supply from the unit and waiting the time specified could result in death or serious injury.

- It is not recommended to stop the frequency converter by using the Safe Torque Off function. If a running frequency converter is stopped by using the function, the unit trips and stops by coasting. If unacceptable or dangerous, use another stopping mode to stop the frequency converter and machinery, before using this function. Depending on the application, a mechanical brake can be required.
- For synchronous and permanent magnet motor frequency converters, in a multiple IGBT power semiconductor failure: In spite of the activation of the Safe Torque Off function, the system can produce an alignment torque which maximally rotates the motor shaft by  $180/p$  degrees.  $p$  denotes the pole pair number.
- This function is suitable for performing mechanical work on the system or affected area of a machine only. It does not provide electrical safety. Do not use this function as a control for starting and/or stopping the frequency converter.

Follow these steps to perform a safe installation of the frequency converter:

- Remove the jumper wire between control terminals 37 and 12 or 13. Cutting or breaking the jumper is not sufficient to avoid short-circuiting. (See jumper on *Illustration 1.4*.)
- Connect an external Safety monitoring relay via a NO safety function to terminal 37 (safe stop) and either terminal 12 or 13 (24 V DC). Follow the instruction for the safety device. The Safety monitoring relay must comply with Category 3 /PL "d" (ISO 13849-1) or SIL 2 (EN 62061).

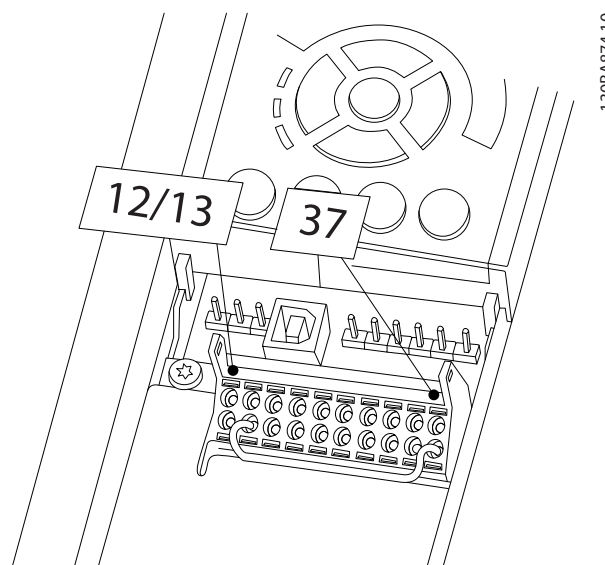


Illustration 1.4 Jumper between Terminal 12/13 (24 V) and 37

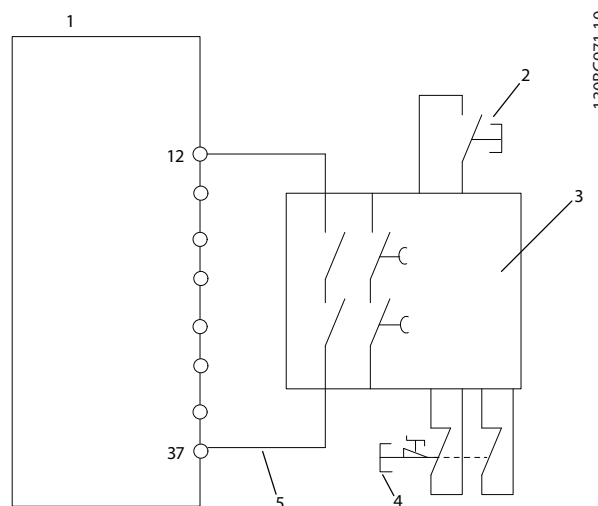


Illustration 1.5 Installation to Achieve a Stopping Category 0 (EN 60204-1) with Cat. 3 /PL "d" (ISO 13849-1) or SIL 2 (EN 62061).

1	Frequency converter
2	[Reset] key
3	Safety relay (cat. 3, PL d or SIL2)
4	Emergency stop button
5	Short-circuit protected cable (if not inside installation IP54 cabinet)

Table 1.5 Legend to *Illustration 1.5*

#### Safe Stop Commissioning Test

After installation and before first operation, perform a commissioning test of the installation using safe stop. Moreover, perform the test after each modification of the installation.

## ⚠ WARNING

Safe Stop activation (that is removal of 24 V DC voltage supply to terminal 37) does not provide electrical safety. The Safe Stop function itself is therefore not sufficient to implement the Emergency-Off function as defined by EN 60204-1. Emergency-Off requires measures of electrical isolation, for example, by switching off mains via an additional contactor.

1. Activate the Safe Stop function by removing the 24 V DC voltage supply to the terminal 37.
2. After activation of Safe Stop (that is, after the response time), the frequency converter coasts (stops creating a rotational field in the motor). The response time is typically less than 10 ms.

The frequency converter is guaranteed not to restart creation of a rotational field by an internal fault (in accordance with Cat. 3 PL d acc. EN ISO 13849-1 and SIL 2 acc. EN 62061). After activation of Safe Stop, the display shows the text "Safe Stop activated". The associated help text says, "Safe Stop has been activated". This means that the Safe Stop has been activated, or that normal operation has not been resumed yet after Safe Stop activation.

## NOTE

The requirements of Cat. 3 /PL "d" (ISO 13849-1) are only fulfilled while 24 V DC supply to terminal 37 is kept removed or low by a safety device which itself fulfills Cat. 3 PL "d" (ISO 13849-1). If external forces act on the motor, it must not operate without additional measures for fall protection. External forces can arise for example, in the event of vertical axis (suspended loads) where an unwanted movement, for example caused by gravity, could cause a hazard. Fall protection measures can be additional mechanical brakes.

By default the Safe Stop function is set to an Unintended Restart Prevention behaviour. Therefore, to resume operation after activation of Safe Stop,

1. reapply 24 V DC voltage to terminal 37 (text Safe Stop activated is still displayed)
2. create a reset signal (via bus, Digital I/O, or [Reset] key).

The Safe Stop function can be set to an Automatic Restart behaviour. Set the value of *5-19 Terminal 37 Digital Input* from default value [1] to value [3].

Automatic Restart means that Safe Stop is terminated, and normal operation is resumed, as soon as the 24 V DC are applied to Terminal 37. No Reset signal is required.

## ⚠ WARNING

Automatic Restart Behaviour is permitted in one of the two situations:

1. The Unintended Restart Prevention is implemented by other parts of the Safe Stop installation.
2. A presence in the dangerous zone can be physically excluded when Safe Stop is not activated. In particular, paragraph 5.3.2.5 of ISO 12100-2 2003 must be observed

## 1.6.2 Safe Stop Commissioning Test

After installation and before first operation, perform a commissioning test of an installation or application, using Safe Stop.

Perform the test again after each modification of the installation or application involving the Safe Stop.

## NOTE

A passed commissioning test is mandatory after first installation and after each change to the safety installation.

The commissioning test (select one of cases 1 or 2 as applicable):

**Case 1: Restart prevention for Safe Stop is required (that is Safe Stop only where *5-19 Terminal 37 Digital Input* is set to default value [1], or combined Safe Stop and MCB 112 where *5-19 Terminal 37 Digital Input* is set to [6] PTC 1 & Relay A or [9] PTC 1 & Relay W/A):**

1.1 Remove the 24 V DC voltage supply to terminal 37 using the interrupt device while the frequency converter drives the motor (that is mains supply is not interrupted). The test step is passed when

- the motor reacts with a coast, and
- the mechanical brake is activated (if connected)
- the alarm "Safe Stop [A68]" is displayed in the LCP, if mounted

1.2 Send Reset signal (via Bus, Digital I/O, or [Reset] key). The test step is passed if the motor remains in the Safe Stop state, and the mechanical brake (if connected) remains activated.

1.3 Reapply 24 V DC to terminal 37. The test step is passed if the motor remains in the coasted state, and the mechanical brake (if connected) remains activated.

1.4 Send Reset signal (via Bus, Digital I/O, or [Reset] key). The test step is passed when the motor becomes operational again.

The commissioning test is passed if all four test steps 1.1, 1.2, 1.3 and 1.4 are passed.

**Case 2: Automatic Restart of Safe Stop is wanted and allowed (that is, Safe Stop only where 5-19 Terminal 37 Digital Input is set to [3], or combined Safe Stop and MCB 112 where 5-19 Terminal 37 Digital Input is set to [7] PTC 1 & Relay W or [8] PTC 1 & Relay A/W):**

2.1 Remove the 24 V DC voltage supply to terminal 37 by the interrupt device while the frequency converter drives the motor (that is mains supply is not interrupted). The test step is passed when

- the motor reacts with a coast, and
- the mechanical brake is activated (if connected)
- the alarm "Safe Stop [A68]" is displayed in the LCP, if mounted

2.2 Reapply 24 V DC to terminal 37.

The test step is passed if the motor becomes operational again. The commissioning test is passed if both test steps 2.1 and 2.2 are passed.

## NOTE

See warning on the restart behaviour in *1.6.1 Terminal 37 Safe Stop Function*

## WARNING

The Safe Stop function can be used for asynchronous, synchronous and permanent magnet motors. Two faults can occur in the power semiconductor of the frequency converter. When using synchronous or permanent magnet motors a residual rotation can result from the faults. The rotation can be calculated to  $\text{Angle} = 360 / (\text{Number of Poles})$ . The application using synchronous or permanent magnet motors must take this residual rotation into consideration and ensure that it does not pose a safety risk. This situation is not relevant for asynchronous motors.

2

## 2 Installation

### 2.1 Installation Site Check List

- The frequency converter relies on the ambient air for cooling. Observe the limitations on ambient air temperature for optimal operation
- Ensure that the installation location has sufficient support strength to mount the frequency converter
- Keep the manual, drawings, and diagrams accessible for detailed installation and operation instructions. It is important that the manual is available for equipment operators.
- Locate equipment as near to the motor as possible. Keep motor cables as short as possible. Check the motor characteristics for actual tolerances. Do not exceed
  - 300 m (1000 ft) for unshielded motor leads
  - 150 m (500 ft) for shielded cable.
- Ensure that the ingress protection rating of the frequency converter is suitable for the installation environment. IP55 (NEMA 12) or IP66 (NEMA 4) enclosures may be necessary.

#### **⚠ CAUTION**

##### Ingress protection

IP54, IP55 and IP66 ratings can only be guaranteed if the unit is properly closed.

- Ensure that all cable glands and unused holes for glands are properly sealed.
- Ensure that the unit cover is properly closed

#### **⚠ CAUTION**

##### Device damage through contamination

Do not leave the frequency converter uncovered.

### 2.2 Frequency Converter and Motor Pre-installation Check List

- Compare the model number of unit on the nameplate to what was ordered to verify the proper equipment
- Ensure each of the following are rated for same voltage:
  - Mains (power)
  - Frequency converter
  - Motor

- Ensure that the frequency converter output current rating is equal to or greater than motor full load current for peak motor performance

Motor size and frequency converter power must match for proper overload protection

If frequency converter rating is less than motor, full motor output cannot be achieved

### 2.3 Mechanical Installation

#### 2.3.1 Cooling

- To provide cooling airflow, mount the unit to a solid flat surface or to the optional back plate (see 2.3.3 Mounting)
- Top and bottom clearance for air cooling must be provided. Generally, 100-225 mm (4-10 in) is required. See *Illustration 2.1* for clearance requirements
- Improper mounting can result in over heating and reduced performance
- Derating for temperatures starting between 40 °C (104 °F) and 50 °C (122 °F) and elevation 1000 m (3300 ft) above sea level must be considered. See the equipment Design Guide for detailed information.



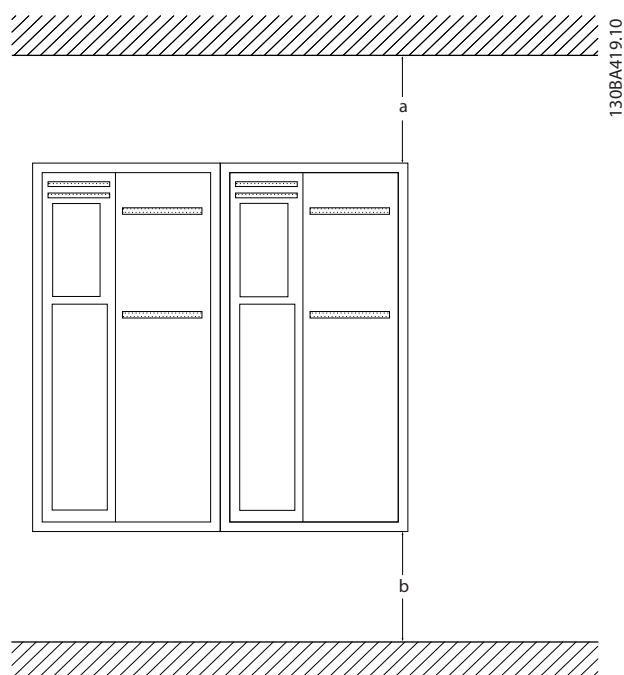


Illustration 2.1 Top and Bottom Cooling Clearance

Enclosure	A2-A5	B1-B4	C1, C3	C2, C4
a/b [mm]	100	200	200	225

Table 2.1 Minimum Airflow Clearance Requirements

### 2.3.2 Lifting

- Check the weight of the unit to determine a safe lifting method
- Ensure that the lifting device is suitable for the task
- If necessary, plan for a hoist, crane, or forklift with the appropriate rating to move the unit
- For lifting, use hoist rings on the unit, when provided

### 2.3.3 Mounting

- Mount the unit vertically
- The frequency converter allows side by side installation
- Ensure that the strength of the mounting location will support the unit weight
- Mount the unit to a solid flat surface or to the optional back plate to provide cooling airflow (see *Illustration 2.2* and *Illustration 2.3*)
- Improper mounting can result in over heating and reduced performance
- Use the slotted mounting holes on the unit for wall mounting, when provided

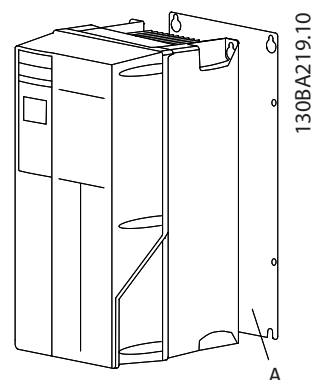


Illustration 2.2 Proper Mounting with Back Plate

Item A is a back plate properly installed for required airflow to cool the unit.

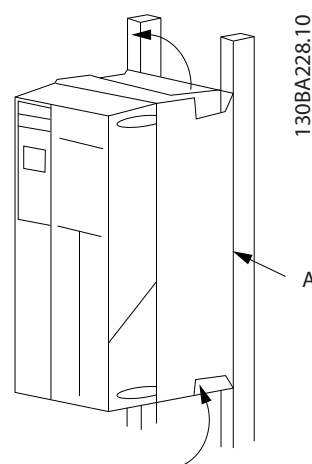


Illustration 2.3 Proper Mounting with Railings

## NOTE

Back plate is needed when mounted on railings.

### 2.3.4 Tightening Torques

See *10.4 Connection Tightening Torques* for proper tightening specifications.

## 2.4 Electrical Installation

This section contains detailed instructions for wiring the frequency converter. The following tasks are described.

- Wiring the motor to the frequency converter output terminals
- Wiring the AC mains to the frequency converter input terminals

- Connecting control and serial communication wiring
- After power has been applied, checking input and motor power; programming control terminals for their intended functions

Illustration 2.4 shows a basic electrical connection.

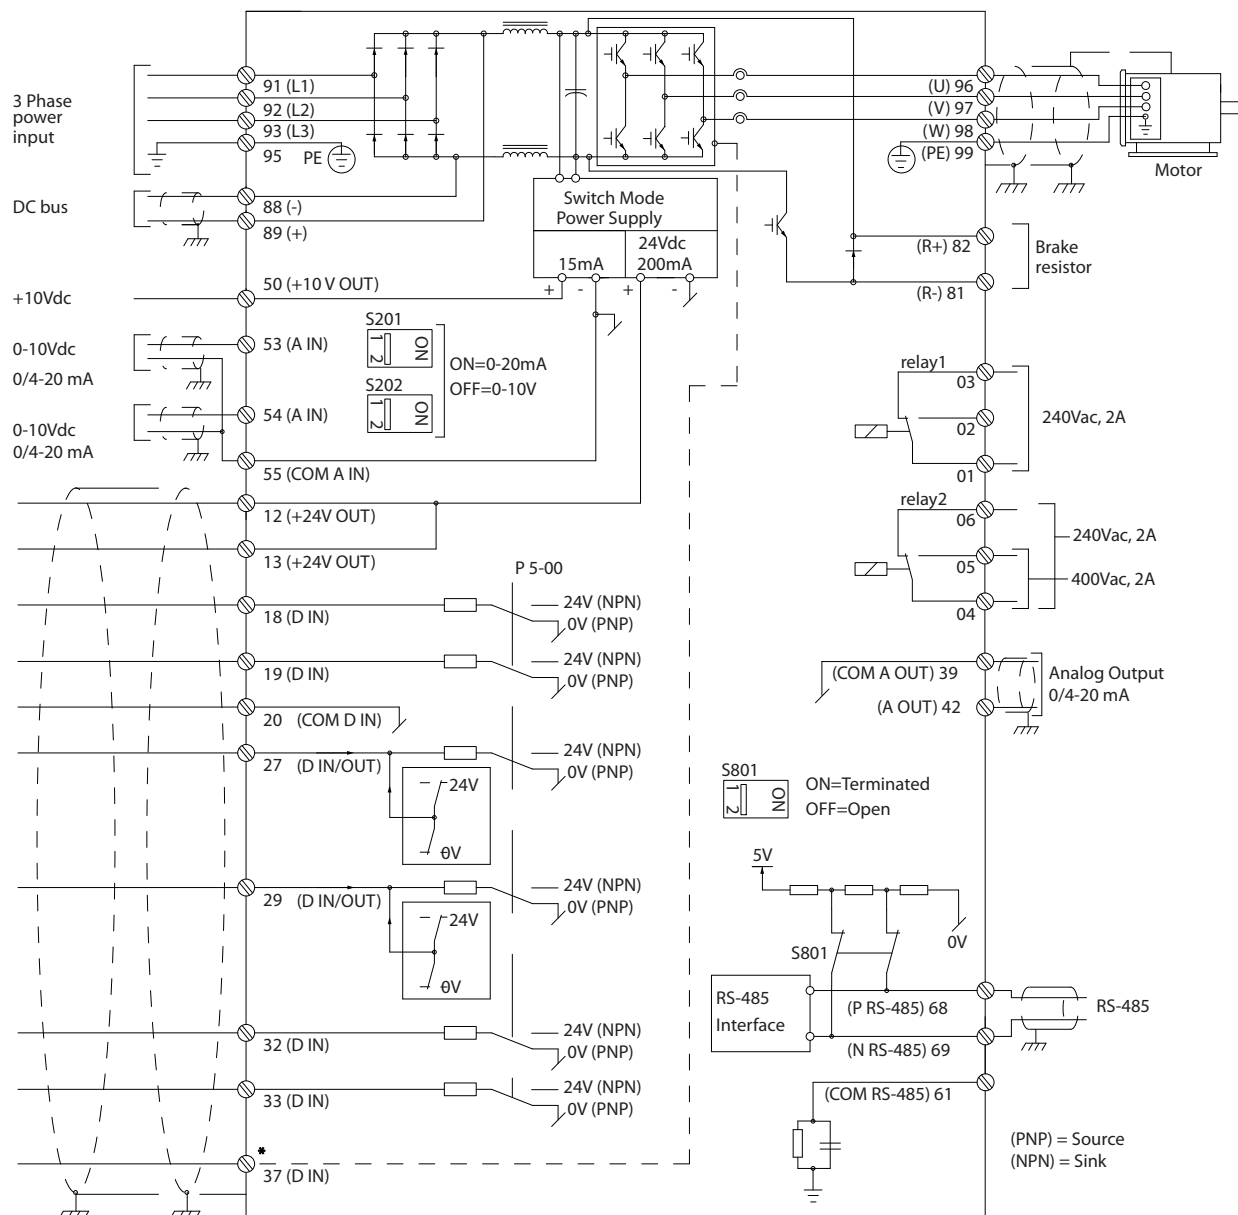


Illustration 2.4 Basic Wiring Schematic Drawing.

\* Terminal 37 is an option



**Table 2.2 Legend to *Illustration 2.5***

## 2.4.1 Requirements

### **⚠ WARNING**

#### **EQUIPMENT HAZARD!**

Rotating shafts and electrical equipment can be hazardous. All electrical work must conform to national and local electrical codes. It is strongly recommended that installation, start up, and maintenance be performed only by trained and qualified personnel. Failure to follow these guidelines could result in death or serious injury.

### **CAUTION**

#### **WIRING ISOLATION!**

Run input power, motor wiring and control wiring in three separate metallic conduits or use separated shielded cable for high frequency noise isolation. Failure to isolate power, motor and control wiring could result in less than optimum frequency converter and associated equipment performance.

For your safety, comply with the following requirements.

- Electronic controls equipment is connected to hazardous mains voltage. Extreme care should be taken to protect against electrical hazards when applying power to the unit.
- Run motor cables from multiple frequency converters separately. Induced voltage from output motor cables run together can charge equipment capacitors even with the equipment turned off and locked out.

#### **Overload and Equipment Protection**

- An electronically activated function within the frequency converter provides overload protection for the motor. The overload calculates the level of increase to activate timing for the trip (controller output stop) function. The higher the current draw, the quicker the trip response. The overload provides Class 20 motor protection. See *8 Warnings and Alarms* for details on the trip function.
- Because the motor wiring carries high frequency current, it is important that wiring for mains, motor power, and control are run separately. Use metallic conduit or separated shielded wire. Failure to isolate power, motor, and control wiring could result in less than optimum equipment performance.
- All frequency converters must be provided with short-circuit and over-current protection. Input fusing is required to provide this protection, see *Illustration 2.6*. If not factory supplied, fuses must be provided by the installer as part of installation.

See maximum fuse ratings in *10.3 Fuse Specifications*.

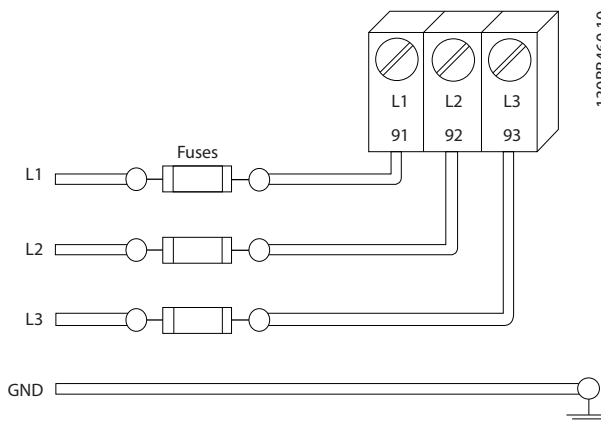


Illustration 2.6 Fuses

#### **Wire Type and Ratings**

- All wiring must comply with local and national regulations regarding cross-section and ambient temperature requirements.
- Danfoss recommends that all power connections be made with a minimum 75° C rated copper wire.
- See *10.1 Power-dependent Specifications* for recommended wire sizes.

## 2.4.2 Earth (Grounding) Requirements

### **⚠ WARNING**

#### **GROUNDING HAZARD!**

For operator safety, it is important to ground the frequency converter properly in accordance with national and local electrical codes as well as instructions contained within this document. Ground currents are higher than 3.5 mA. Failure to ground the frequency converter properly could result in death or serious injury.

### **NOTE**

It is the responsibility of the user or certified electrical installer to ensure correct grounding (earthing) of the equipment in accordance with national and local electrical codes and standards.

- Follow all local and national electrical codes to ground electrical equipment properly
- Proper protective grounding for equipment with ground currents higher than 3.5 mA must be established, see *2.4.2.1 Leakage Current (>3.5 mA)*
- A dedicated ground wire is required for input power, motor power and control wiring

- Use the clamps provided with the equipment for proper ground connections
- Do not ground one frequency converter to another in a “daisy chain” fashion
- Keep the ground wire connections as short as possible
- Using high-strand wire to reduce electrical noise is recommended
- Follow motor manufacturer wiring requirements

### 2.4.2.1 Leakage Current (>3.5 mA)

Follow national and local codes regarding protective earthing of equipment with a leakage current > 3.5 mA. Frequency converter technology implies high frequency switching at high power. This will generate a leakage current in the earth connection. A fault current in the frequency converter at the output power terminals might contain a DC component which can charge the filter capacitors and cause a transient earth current. The earth leakage current depends on various system configurations including RFI filtering, screened motor cables, and frequency converter power.

EN/IEC61800-5-1 (Power Drive System Product Standard) requires special care if the leakage current exceeds 3.5 mA. Earth grounding must be reinforced in one of the following ways:

- Earth ground wire of at least 10 mm<sup>2</sup>
- Two separate earth ground wires both complying with the dimensioning rules

See EN 60364-5-54 § 543.7 for further information.

#### Using RCDs

Where residual current devices (RCDs), also known as earth leakage circuit breakers (ELCBs), are used, comply with the following:

- Use RCDs of type B only which are capable of detecting AC and DC currents
- Use RCDs with an inrush delay to prevent faults due to transient earth currents
- Dimension RCDs according to the system configuration and environmental considerations

### 2.4.2.2 Grounding Using Shielded Cable

Earthing (grounding) clamps are provided for motor wiring (see *Illustration 2.7*).

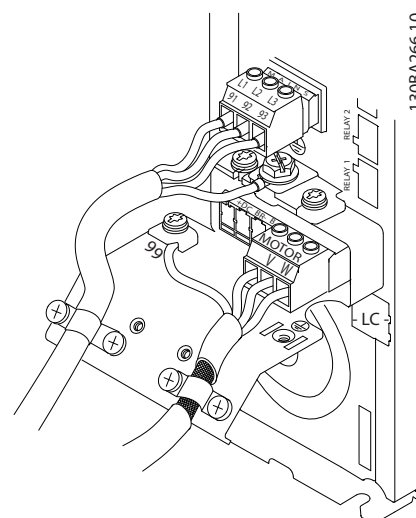


Illustration 2.7 Grounding with Shielded Cable

### 2.4.3 Motor Connection

#### **WARNING**

##### INDUCED VOLTAGE!

Run output motor cables from multiple frequency converters separately. Induced voltage from output motor cables run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately could result in death or serious injury.

- For maximum wire sizes see *10.1 Power-dependent Specifications*
- Comply with local and national electrical codes for cable sizes
- Motor wiring knockouts or access panels are provided at the base of IP21 and higher (NEMA1/12) units
- Do not install power factor correction capacitors between the frequency converter and the motor
- Do not wire a starting or pole-changing device between the frequency converter and the motor
- Connect the 3-phase motor wiring to terminals 96 (U), 97 (V), and 98 (W)
- Ground the cable in accordance with grounding instructions provided
- Torque terminals in accordance with the information provided in *10.4.1 Connection Tightening Torques*
- Follow motor manufacturer wiring requirements

The three following illustrations represent mains input, motor, and earth grounding for basic frequency converters.

Actual configurations vary with unit types and optional equipment.

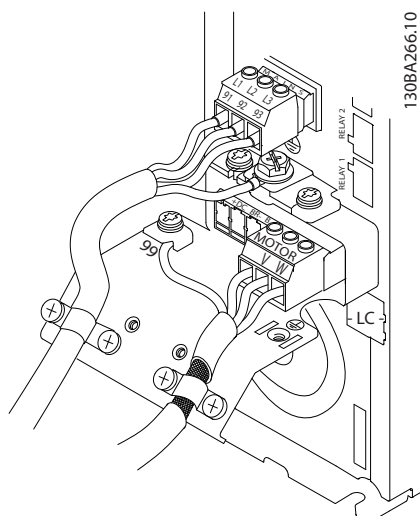


Illustration 2.8 Motor, Mains and Earth Wiring for A-Frame Sizes

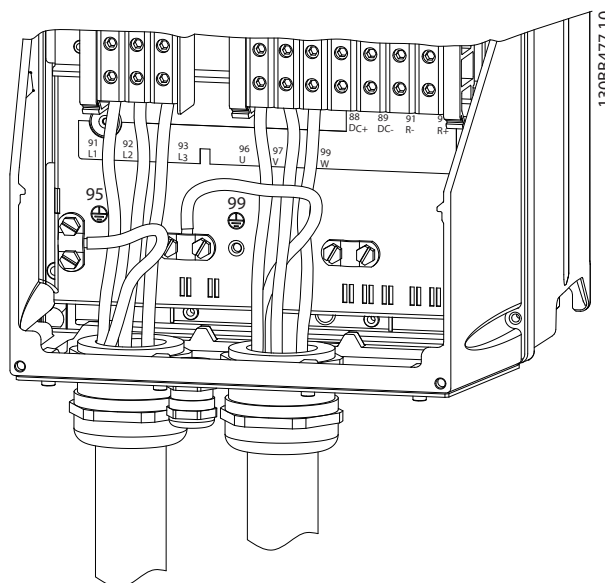


Illustration 2.10 Motor, Mains and Earth Wiring for B-Frame Sizes and Above Using Conduit

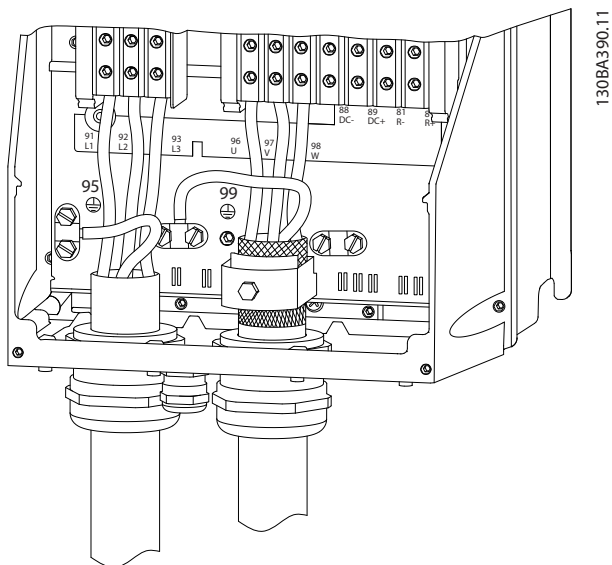


Illustration 2.9 Motor, Mains and Earth Wiring for B-Frame Sizes and Above Using Shielded Cable

## 2.4.4 AC Mains Connection

- Size wiring based upon the input current of the frequency converter. For maximum wire sizes see *10.1 Power-dependent Specifications*.
- Comply with local and national electrical codes for cable sizes.
- Connect 3-phase AC input power wiring to terminals L1, L2, and L3 (see *Illustration 2.11*).
- Depending on the configuration of the equipment, input power will be connected to the mains input terminals or the input disconnect.

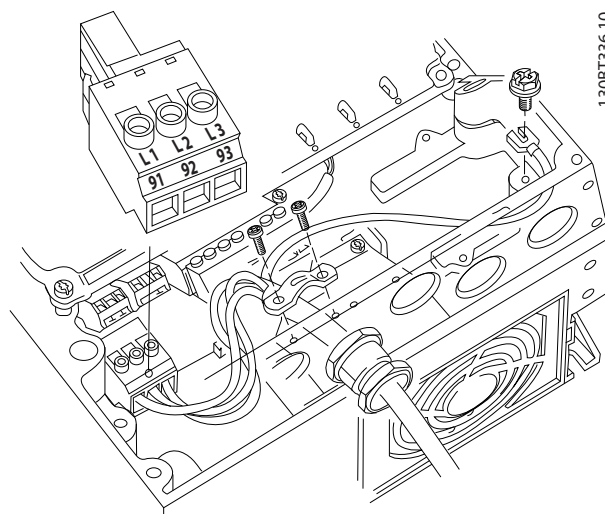


Illustration 2.11 Connecting to AC Mains

- Ground the cable in accordance with grounding instructions provided in 2.4.2 *Earth (Grounding) Requirements*
- All frequency converters may be used with an isolated input source as well as with ground reference power lines. When supplied from an isolated mains source (IT mains or floating delta) or TT/TN-S mains with a grounded leg (grounded delta), set 14-50 RFI Filter to OFF. When off, the internal RFI filtercapacitors between the chassis and the intermediate circuit are isolated to avoid damage to the intermediate circuit and to reduce earth capacity currents in accordance with IEC 61800-3.

## 2.4.5 Control Wiring

- Isolate control wiring from high power components in the frequency converter.
- If the frequency converter is connected to a thermistor, for PELV isolation, optional thermistor control wiring must be reinforced/double insulated. A 24 V DC supply voltage is recommended.

### 2.4.5.1 Access

- Remove access cover plate with a screw driver. See *Illustration 2.12*.
- Or remove front cover by loosening attaching screws. See *Illustration 2.13*.

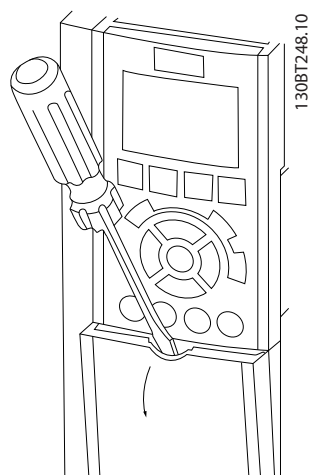


Illustration 2.12 Control Wiring Access for A2, A3, B3, B4, C3 and C4 Enclosures

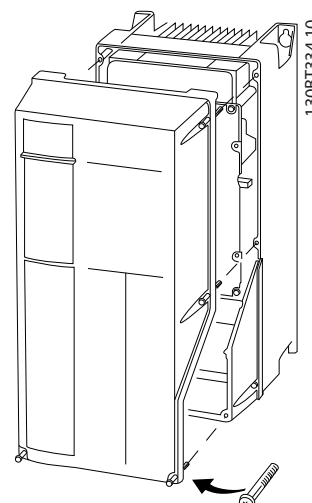


Illustration 2.13 Control Wiring Access for A4, A5, B1, B2, C1 and C2 Enclosures

See *Table 2.3* before tightening the covers.

Frame	IP20	IP21	IP55	IP66
A4/A5	-	-	2	2
B1	-	*	2.2	2.2
B2	-	*	2.2	2.2
C1	-	*	2.2	2.2
C2	-	*	2.2	2.2
* No screws to tighten				
- Does not exist				

Table 2.3 Tightening Torques for Covers (Nm)



## 2.4.5.2 Control Terminal Types

Illustration 2.17 shows the removable frequency converter connectors. Terminal functions and default settings are summarized in Table 2.4.

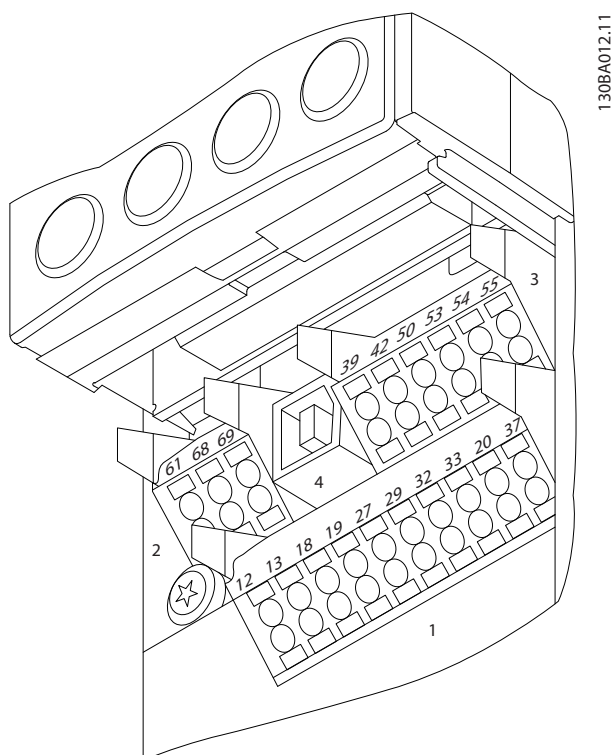


Illustration 2.14 Control Terminal Locations

- **Connector 1** provides four programmable digital inputs terminals, two additional digital terminals programmable as either input or output, a 24V DC terminal supply voltage, and a common for optional customer supplied 24 V DC voltage
- **Connector 2** terminals (+)68 and (-)69 are for an RS-485 serial communications connection
- **Connector 3** provides two analog inputs, one analog output, 10V DC supply voltage, and commons for the inputs and output
- **Connector 4** is a USB port available for use with the MCT 10 Set-up Software
- Also provided are two Form C relay outputs that are in various locations depending upon the frequency converter configuration and size
- Some options available for ordering with the unit may provide additional terminals. See the manual provided with the equipment option.

See 10.2 General Technical Data for terminal ratings details.

Terminal Description			
Digital Inputs/Outputs			
Terminal	Parameter	Default Setting	Description
12, 13	-	+24 V DC	24 V DC supply voltage. Maximum output current is 200 mA total for all 24 V loads. Useable for digital inputs and external transducers.
18	5-10	[8] Start	Digital inputs.
19	5-11	[0] No operation	
32	5-14	[0] No operation	
33	5-15	[0] No operation	
27	5-12	[2] Coast inverse	Selectable for either digital input or output. Default setting is input.
29	5-13	[14] JOG	
20	-		Common for digital inputs and 0 V potential for 24 V supply.
37	-	Safe Torque Off (STO)	(optional) Safe input. Used for STO.
Analog Inputs/Outputs			
39	-		Common for analog output
42	6-50	Speed 0 - High Limit	Programmable analog output. The analog signal is 0-20mA or 4-20 mA at a maximum of 500Ω
50	-	+10 V DC	10 V DC analog supply voltage. 15 mA maximum commonly used for potentiometer or thermistor.
53	6-1	Reference	Analog input. Selectable for voltage or current. Switches A53 and A54 select mA or V.
54	6-2	Feedback	
55	-		Common for analog input
Serial Communication			
61	-		Integrated RC-Filter for cable screen. ONLY for connecting the screen when experiencing EMC problems.



Terminal Description			
Digital Inputs/Outputs			
Terminal	Parameter	Default Setting	Description
68 (+)	8-3		RS-485 Interface. A control card switch is provided for termination resistance.
69 (-)	8-3		
Relays			
01, 02, 03	5-40 [0]	[0] Alarm	Form C relay output.
04, 05, 06	5-40 [1]	[0] Running	Usable for AC or DC voltage and resistive or inductive loads.

Table 2.4 Terminal Description

### 2.4.5.3 Wiring to Control Terminals

Control terminal connectors can be unplugged from the frequency converter for ease of installation, as shown in *Illustration 2.15*.

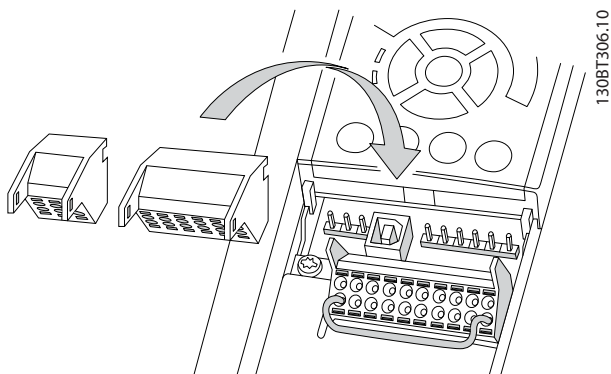


Illustration 2.15 Unplugging Control Terminals

1. Open the contact by inserting a small screwdriver into the slot above or below the contact, as shown in *Illustration 2.16*.
2. Insert the bared control wire into the contact.
3. Remove the screwdriver to fasten the control wire into the contact.
4. Ensure the contact is firmly established and not loose. Loose control wiring can be the source of equipment faults or less than optimal operation.

See 10.1 Power-dependent Specifications for control terminal wiring sizes.

See 6 Application Set Up Examples for typical control wiring connections.

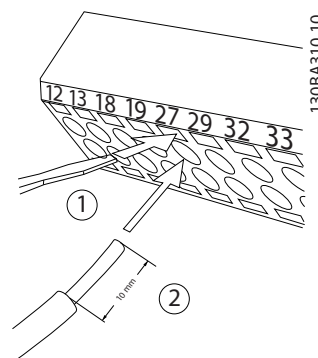


Illustration 2.16 Connecting Control Wiring

### 2.4.5.4 Using Screened Control Cables

#### Correct screening

The preferred method in most cases is to secure control and serial communication cables with screening clamps provided at both ends to ensure best possible high frequency cable contact.

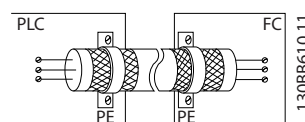


Illustration 2.17 Screening Clamps at Both Ends

#### 50/60 Hz ground loops

With very long control cables, ground loops may occur. To eliminate ground loops, connect one end of the screen-to-ground with a 100 nF capacitor (keeping leads short).




Illustration 2.18 Connection with a 100 nF Capacitor

#### Avoid EMC noise on serial communication

To eliminate low-frequency noise between frequency converters, connect one end of the screen to terminal 61. This terminal is connected to ground via an internal RC link. Use twisted-pair cables to reduce interference between conductors.

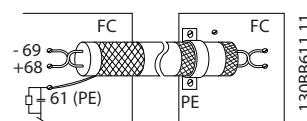


Illustration 2.19 Twisted-pair Cables

### 2.4.5.5 Control Terminal Functions

Frequency converter functions are commanded by receiving control input signals.

- Each terminal must be programmed for the function it will be supporting in the parameters associated with that terminal. See *Table 2.4* for terminals and associated parameters.
- It is important to confirm that the control terminal is programmed for the correct function. See *4 User Interface* for details on accessing parameters and *5 About Frequency Converter Programming* for details on programming.
- The default terminal programming is intended to initiate frequency converter functioning in a typical operational mode.

### 2.4.5.6 Jumper Terminals 12 and 27

A jumper wire may be required between terminal 12 (or 13) and terminal 27 for the frequency converter to operate when using factory default programming values.

- Digital input terminal 27 is designed to receive a 24 V DC external interlock command. In many applications, the user wires an external interlock device to terminal 27
- When no interlock device is used, wire a jumper between control terminal 12 (recommended) or 13 to terminal 27. This provides an internal 24 V signal on terminal 27
- No signal present prevents the unit from operating
- When the status line at the bottom of the LCP reads *AUTO REMOTE COASTING* or *Alarm 60 External Interlock* is displayed, this indicates that the unit is ready to operate but is missing an input signal on terminal 27.
- When factory installed optional equipment is wired to terminal 27, do not remove that wiring.

### 2.4.5.7 Terminal 53 and 54 Switches

- Analog input terminals 53 and 54 can select either voltage (0 to 10 V) or current (0/4-20 mA) input signals
- Remove power to the frequency converter before changing switch positions
- Set switches A53 and A54 to select the signal type. U selects voltage, I selects current.
- The switches are accessible when the LCP has been removed (see *Illustration 2.20*). Note that some option cards available for the unit may

cover these switches and must be removed to change switch settings. Always remove power to the unit before removing option cards.

- Terminal 53 default is for a speed reference signal in open loop set in *16-61 Terminal 53 Switch Setting*
- Terminal 54 default is for a feedback signal in closed loop set in *16-63 Terminal 54 Switch Setting*

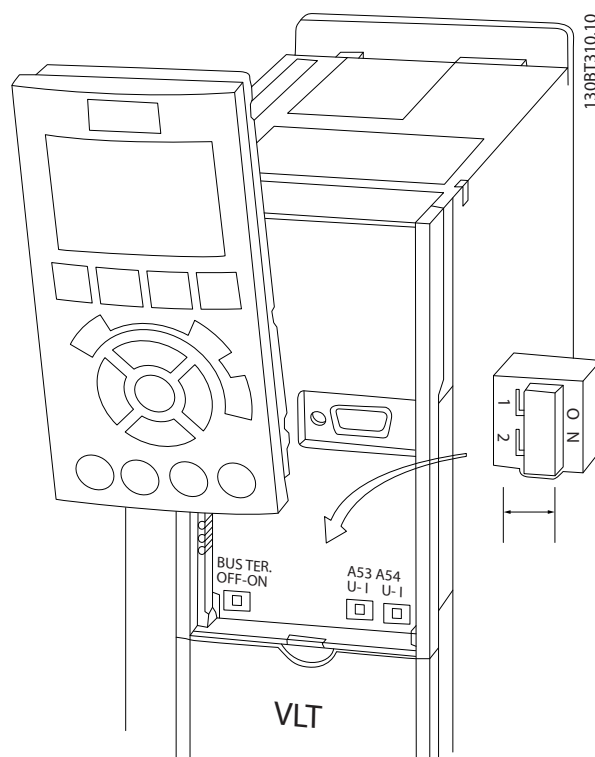


Illustration 2.20 Location of Terminals 53 and 54 Switches

### 2.4.5.8 Mechanical Brake Control

**In hoisting/lowering applications, it is necessary to be able to control an electro-mechanical brake:**

- Control the brake using any relay output or digital output (terminal 27 or 29).
- Keep the output closed (voltage-free) as long as the frequency converter is unable to 'support' the motor, for example due to the load being too heavy.
- Select *[32] Mechanical brake control* in parameter group *5-4\* Relays* for applications with an electro-mechanical brake.
- The brake is released when the motor current exceeds the preset value in *2-20 Release Brake Current*.
- The brake is engaged when the output frequency is less than the frequency set in *2-21 Activate Brake Speed [RPM]* or *2-22 Activate Brake Speed*

[Hz], and only if the frequency converter carries out a stop command.

If the frequency converter is in alarm mode or in an over-voltage situation, the mechanical brake immediately cuts in.

In the vertical movement, the key point is that the load must be held, stopped, controlled (raised, lowered) in a safe mode during the entire operation. Because the frequency converter is not a safety device, the crane/lift designer (OEM) must decide on the type and number of safety devices (e.g. speed switch, emergency brakes etc.) to be used, in order to be able to stop the load in case of emergency or malfunction of the system, according to relevant national crane/lift regulations.

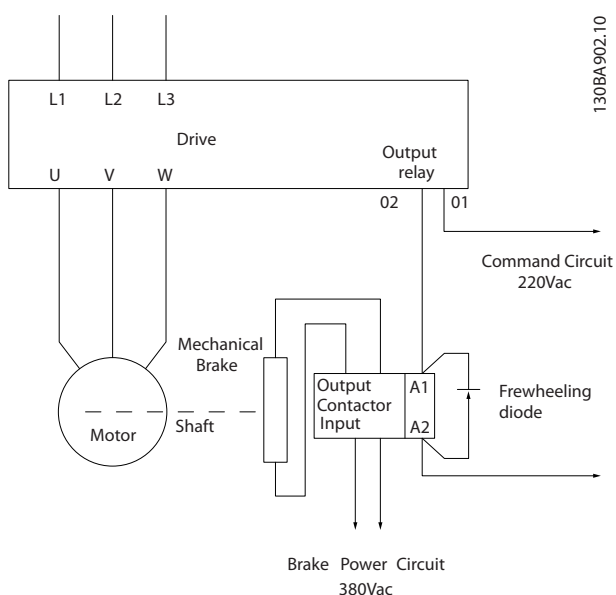


Illustration 2.21 Connecting the Mechanical Brake to the Frequency Converter

## 2.4.6 Serial Communication

Connect RS-485 serial communication wiring to terminals (+)68 and (-)69.

- Screened serial communication cable is recommended
- See 2.4.2 *Earth (Grounding) Requirements* for proper grounding

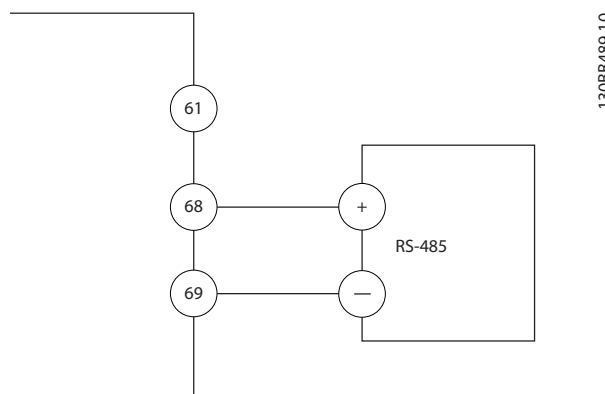


Illustration 2.22 Serial Communication Wiring Diagram

For basic serial communication set up, select the following

1. Protocol type in 8-30 *Protocol*.
  2. Frequency converter address in 8-31 *Address*.
  3. Baud rate in 8-32 *Baud Rate*.
- Four communication protocols are internal to the frequency converter. Follow motor manufacturer wiring requirements.  
Danfoss FC  
Modbus RTU  
Johnson Controls N2®
  - Functions can be programmed remotely using the protocol software and RS-485 connection or in parameter group 8-\*\* *Communications and Options*
  - Selecting a specific communication protocol changes various default parameter settings to match that protocol's specifications along with making additional protocol-specific parameters available
  - Option cards for the frequency converter are available to provide additional communication protocols. See the option-card documentation for installation and operation instructions

## 3 Start Up and Functional Testing

### 3.1 Pre-start

#### 3.1.1 Safety Inspection

3

#### **⚠ WARNING**

##### **HIGH VOLTAGE!**

If input and output connections have been connected improperly, there is potential for high voltage on these terminals. If power leads for multiple motors are improperly run in same conduit, there is potential for leakage current to charge capacitors within the frequency converter, even when disconnected from mains input. For initial start up, make no assumptions about power components. Follow pre-start procedures. Failure to follow pre-start procedures could result in personal injury or damage to equipment.

1. Input power to the unit must be OFF and locked out. Do not rely on the frequency converter disconnect switches for input power isolation.
2. Verify that there is no voltage on input terminals L1 (91), L2 (92), and L3 (93), phase-to-phase and phase-to-ground,
3. Verify that there is no voltage on output terminals 96 (U), 97 (V), and 98 (W), phase-to-phase and phase-to-ground.
4. Confirm continuity of the motor by measuring ohm values on U-V (96-97), V-W (97-98), and W-U (98-96).
5. Check for proper grounding of the frequency converter as well as the motor.
6. Inspect the frequency converter for loose connections on terminals.
7. Record the following motor-nameplate data: power, voltage, frequency, full load current, and nominal speed. These values are needed to program motor nameplate data later.
8. Confirm that the supply voltage matches voltage of frequency converter and motor.

## CAUTION

Before applying power to the unit, inspect the entire installation as detailed in *Table 3.1*. Check mark those items when completed.

Inspect for	Description	☑
Auxiliary equipment	<ul style="list-style-type: none"> <li>Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that may reside on the input power side of the frequency converter or output side to the motor. Ensure that they are ready for full speed operation.</li> <li>Check function and installation of any sensors used for feedback to the frequency converter</li> <li>Remove power factor correction caps on motor(s), if present</li> </ul>	
Cable routing	<ul style="list-style-type: none"> <li>Ensure that input power, motor wiring and control wiring are separated or in three separate metallic conduits for high frequency noise isolation</li> </ul>	
Control wiring	<ul style="list-style-type: none"> <li>Check for broken or damaged wires and loose connections</li> <li>Check that control wiring is isolated from power and motor wiring for noise immunity</li> <li>Check the voltage source of the signals, if necessary</li> <li>The use of shielded cable or twisted pair is recommended. Ensure that the shield is terminated correctly</li> </ul>	
Cooling clearance	<ul style="list-style-type: none"> <li>Measure that top and bottom clearance is adequate to ensure proper air flow for cooling</li> </ul>	
EMC considerations	<ul style="list-style-type: none"> <li>Check for proper installation regarding electromagnetic compatibility</li> </ul>	
Environmental considerations	<ul style="list-style-type: none"> <li>See equipment label for the maximum ambient operating temperature limits</li> <li>Humidity levels must be 5-95% non-condensing</li> </ul>	
Fusing and circuit breakers	<ul style="list-style-type: none"> <li>Check for proper fusing or circuit breakers</li> <li>Check that all fuses are inserted firmly and in operational condition and that all circuit breakers are in the open position</li> </ul>	
Earthing (Grounding)	<ul style="list-style-type: none"> <li>The unit requires an earth wire (ground wire) from its chassis to the building earth (ground)</li> <li>Check for good earth connections (ground connections) that are tight and free of oxidation</li> <li>Earthing (grounding) to conduit or mounting the back panel to a metal surface is not a suitable earth (ground)</li> </ul>	
Input and output power wiring	<ul style="list-style-type: none"> <li>Check for loose connections</li> <li>Check that motor and mains are in separate conduit or separated screened cables</li> </ul>	
Panel interior	<ul style="list-style-type: none"> <li>Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion</li> </ul>	
Switches	<ul style="list-style-type: none"> <li>Ensure that all switch and disconnect settings are in the proper positions</li> </ul>	
Vibration	<ul style="list-style-type: none"> <li>Check that the unit is mounted solidly or that shock mounts are used, as necessary</li> <li>Check for an unusual amount of vibration</li> </ul>	

**Table 3.1 Start Up Check List**

## 3.2 Applying Power to the Frequency Converter

### ⚠ WARNING

#### HIGH VOLTAGE!

Frequency converters contain high voltage when connected to AC mains. Installation, start-up and maintenance should be performed by qualified personnel only. Failure to comply could result in death or serious injury.

### ⚠ WARNING

#### UNINTENDED START!

When the frequency converter is connected to AC mains, the motor may start at any time. The frequency converter, motor, and any driven equipment must be in operational readiness. Failure to comply could result in death, serious injury, equipment, or property damage.

1. Confirm that the input voltage is balanced within 3%. If not, correct input voltage imbalance before proceeding. Repeat this procedure after the voltage correction.
2. Ensure that optional equipment wiring, if present, matches the installation application.
3. Ensure that all operator devices are in the OFF position. Panel doors should be closed or cover mounted.
4. Apply power to the unit. DO NOT start the frequency converter at this time. For units with a disconnect switch, turn to the ON position to apply power to the frequency converter.

## NOTE

If the status line at the bottom of the LCP reads **AUTO REMOTE COASTING** or **Alarm 60 External Interlock** is displayed, this indicates that the unit is ready to operate but is missing an input signal on terminal 27. See *Illustration 1.4* for details.

## 3.3 Basic Operational Programming

### 3.3.1 Required Initial Frequency Converter Programming

Frequency converters require basic operational programming before running for best performance. Basic operational programming requires entering motor-nameplate data for the motor being operated and the minimum and maximum motor speeds. Enter data in accordance with the following procedure. Parameter settings recommended are intended for start up and

checkout purposes. Application settings may vary. See *4 User Interface* for detailed instructions on entering data through the LCP.

Enter data with power ON, but before operating the frequency converter.

1. Press [Main Menu] twice on the LCP.
2. Use the navigation keys to scroll to parameter group 0-\*\* Operation/Display and press [OK].

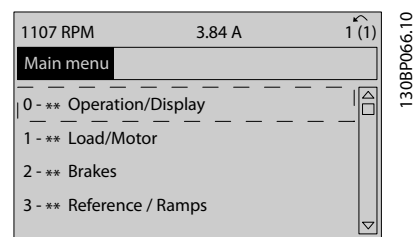


Illustration 3.1 Main Menu

3. Use navigation keys to scroll to parameter group 0-0\* Basic Settings and press [OK].

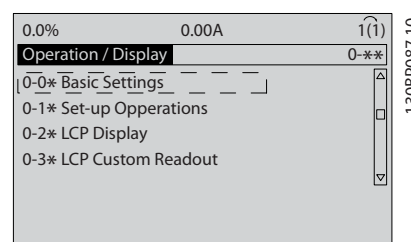


Illustration 3.2 Operation/Display

4. Use navigation keys to scroll to 0-03 Regional Settings and press [OK].

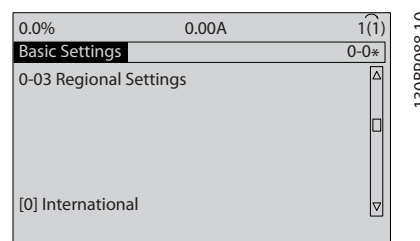


Illustration 3.3 Basic Settings

5. Use navigation keys to select [0] International or [1] North America as appropriate and press [OK]. (This changes the default settings for a number of basic parameters. See *5.4 International/North American Default Parameter Settings* for a complete list.)
6. Press [Quick Menu] on the LCP.

7. Use the navigation keys to scroll to parameter group *Q2 Quick Setup* and press [OK].

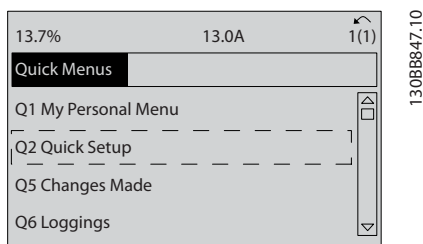


Illustration 3.4 Quick Menus

8. Select language and press [OK].
9. A jumper wire should be in place between control terminals 12 and 27. If this is the case, leave *5-12 Terminal 27 Digital Input* at factory default. Otherwise select *No Operation*. For frequency converters with an optional Danfoss bypass, no jumper wire is required.
10. *3-02 Minimum Reference*
11. *3-03 Maximum Reference*
12. *3-41 Ramp 1 Ramp Up Time*
13. *3-42 Ramp 1 Ramp Down Time*
14. *3-13 Reference Site*. Linked to Hand/Auto\* Local Remote.

### 3.4 PM Motor Setup in VVC<sup>plus</sup>

## CAUTION

Do only use PM motor with fans and pumps.

#### Initial Programming Steps

1. Activate PM motor operation *1-10 Motor Construction*, select *[1] PM, non salient SPM*
2. Make sure to set *0-02 Motor Speed Unit* to *[0] RPM*

#### Programming motor data.

After selecting PM motor in *1-10 Motor Construction*, the PM motor-related parameters in parameter groups 1-2\*, 1-3\* and 1-4\* are active.

The information can be found on the motor nameplate and in the motor data sheet.

Following parameters must be programmed in the listed order

1. *1-24 Motor Current*
2. *1-26 Motor Cont. Rated Torque*
3. *1-25 Motor Nominal Speed*
4. *1-39 Motor Poles*
5. *1-30 Stator Resistance (Rs)*

Enter line to common stator winding resistance (Rs). If only line-line data are available, divide the line-line value with 2 to achieve the line to common (starpoint) value.

It is also possible to measure the value with an ohmmeter, which will also take the resistance of the cable into account. Divide the measured value by 2 and enter the result.

6. *1-37 d-axis Inductance (Ld)*

Enter line to common direct axis inductance of the PM motor.

If only line-line data are available, divide the line-line value with 2 to achieve the line-common (starpoint) value.

It is also possible to measure the value with an inductancemeter, which will also take the inductance of the cable into account. Divide the measured value by 2 and enter the result.

7. *1-40 Back EMF at 1000 RPM*

Enter line to line back EMF of PM Motor at 1000 RPM mechanical speed (RMS value). Back EMF is the voltage generated by a PM motor when no drive is connected and the shaft is turned externally. Back EMF is normally specified for nominal motor speed or for 1000 RPM measured between two lines. If the value is not available for a motor speed of 1000 RPM, calculate the correct value as follows: If back EMF is e.g. 320 V at 1800 RPM, it can be calculated at 1000 RPM as follows: Back EMF= (Voltage / RPM)\*1000 = (320/1800)\*1000 = 178. This is the value that must be programmed for *1-40 Back EMF at 1000 RPM*

#### Test Motor Operation

1. Start the motor at low speed (100 to 200 RPM). If the motor does not turn, check installation, general programming and motor data.
2. Check if start function in *1-70 PM Start Mode* fits the application requirements.

#### Rotor detection

This function is the recommended choice for applications where the motor starts from standstill e.g. pumps or conveyors. On some motors, an acoustic sound is heard when the impulse is sent out. This does not harm the motor.

#### Parking

This function is the recommended choice for applications where the motor is rotating at slow speed eg. windmilling in fan applications. *2-06 Parking Current* and *2-07 Parking Time* can be adjusted. Increase the factory setting of these parameters for applications with high inertia.

Start the motor at nominal speed. In case the application does not run well, check the VVC<sup>plus</sup> PM settings.

Recommendations in different applications can be seen in Table 3.2.

Application	Settings
Low inertia applications $I_{Load}/I_{Motor} < 5$	1-17 Voltage filter time const. to be increased by factor 5 to 10 1-14 Damping Gain should be reduced 1-66 Min. Current at Low Speed should be reduced (<100%)
Low inertia applications $50 > I_{Load}/I_{Motor} > 5$	Keep calculated values
High inertia applications $I_{Load}/I_{Motor} > 50$	1-14 Damping Gain, 1-15 Low Speed Filter Time Const. and 1-16 High Speed Filter Time Const. should be increased
High load at low speed <30% (rated speed)	1-17 Voltage filter time const. should be increased 1-66 Min. Current at Low Speed should be increased (>100% for longer time can overheat the motor)

Table 3.2 Recommendations in Different Applications

If the motor starts oscillating at a certain speed, increase 1-14 Damping Gain. Increase the value in small steps. Depending on the motor, a good value for this parameter can be 10% or 100% higher than the default value.

Starting torque can be adjusted in 1-66 Min. Current at Low Speed. 100% provides nominal torque as starting torque.

### 3.5 Automatic Motor Adaptation

Automatic motor adaptation (AMA) is a test procedure that measures the electrical characteristics of the motor to optimize compatibility between the frequency converter and the motor.

- The frequency converter builds a mathematical model of the motor for regulating output motor current. The procedure also tests the input phase balance of electrical power. It compares the motor characteristics with the data entered in parameters 1-20 to 1-25.
- It does not cause the motor to run or harm to the motor
- Some motors may be unable to run the complete version of the test. In that case, select [2] Enable reduced AMA
- If an output filter is connected to the motor, select Enable reduced AMA
- If warnings or alarms occur, see 8 Warnings and Alarms

- Run this procedure on a cold motor for best results

## NOTE

The AMA algorithm does not work when using PM motors.

### To run AMA

1. Press [Main Menu] to access parameters.
2. Scroll to parameter group 1-\*\* Load and Motor.
3. Press [OK].
4. Scroll to parameter group 1-2\* Motor Data.
5. Press [OK].
6. Scroll to 1-29 Automatic Motor Adaptation (AMA).
7. Press [OK].
8. Select [1] Enable complete AMA.
9. Press [OK].
10. Follow on-screen instructions.
11. The test will run automatically and indicate when it is complete.

### 3.6 Check Motor Rotation

Before running the frequency converter, check the motor rotation. The motor will run briefly at 5 Hz or the minimum frequency set in 4-12 Motor Speed Low Limit [Hz].

1. Press [Main Menu].
2. Press [OK].
3. Navigate to 1-28 Motor Rotation Check.
4. Press [OK].
5. Scroll to [1] Enable.

The following text will appear: *Note! Motor may run in wrong direction.*

6. Press [OK].
7. Follow the on-screen instructions.

To change the direction of rotation, remove power to the frequency converter and wait for power to discharge. Reverse the connection of any two of the three motor cables on the motor or frequency converter side of the connection.



### 3.7 Local-control Test

#### **CAUTION**

##### **MOTOR START!**

Ensure that the motor, system and any attached equipment are ready for start. It is the responsibility of the user to ensure safe operation under any condition. Failure to ensure that the motor, system, and any attached equipment is ready for start could result in personal injury or equipment damage.

#### **NOTE**

The [Hand On] key provides a local start command to the frequency converter. The [Off] key provides the stop function.

When operating in local mode, [▲] and [▼] increase and decrease the speed output of the frequency converter. [◀] and [▶] move the display cursor in the numeric display.

1. Press [Hand On].
2. Accelerate the frequency converter by pressing [▲] to full speed. Moving the cursor left of the decimal point provides quicker input changes.
3. Note any acceleration problems.
4. Press [Off].
5. Note any deceleration problems.

If acceleration problems were encountered

- If warnings or alarms occur, see *8 Warnings and Alarms*
- Check that motor data is entered correctly
- Increase the ramp-up time in *3-41 Ramp 1 Ramp Up Time*
- Increase current limit in *4-18 Current Limit*
- Increase torque limit in *4-16 Torque Limit Motor Mode*

If deceleration problems were encountered

- If warnings or alarms occur, see *8 Warnings and Alarms*.
- Check that motor data is entered correctly.
- Increase the ramp-down time in *3-42 Ramp 1 Ramp Down Time*.
- Enable overvoltage control in *2-17 Over-voltage Control*.

See *4.1.1 Local Control Panel* for resetting the frequency converter after a trip.

#### **NOTE**

*3.2 Applying Power to the Frequency Converter* to *3.3 Basic Operational Programming* conclude the procedures for applying power to the frequency converter, basic programming, set-up and functional testing.

### 3.8 System Start Up

The procedure in this section requires user-wiring and application programming to be completed. *6 Application Set Up Examples* is intended to help with this task. Other aids to application set-up are listed in *1.2 Additional Resources*. The following procedure is recommended after application set-up by the user is completed.

#### **CAUTION**

##### **MOTOR START!**

Ensure that the motor, system and any attached equipment is ready for start. It is the responsibility of the user to ensure safe operation under any condition. Failure to do so could result in personal injury or equipment damage.

1. Press [Auto On].
2. Ensure that external control functions are properly wired to the frequency converter and all programming is completed.
3. Apply an external run command.
4. Adjust the speed reference throughout the speed range.
5. Remove the external run command.
6. Note any problems.

If warnings or alarms occur, see *8 Warnings and Alarms*.

### 3.9 Acoustic Noise or Vibration

If the motor or the equipment driven by the motor - e.g. a fan blade - is making noise or vibrations at certain frequencies, try the following:

- Speed Bypass, parameter group 4-6\*
- Over-modulation, *14-03 Overmodulation* set to off
- Switching pattern and switching frequency parameter group 14-0\*
- Resonance Dampening, *1-64 Resonance Dampening*

## 4 User Interface

### 4.1 Local Control Panel

The local control panel (LCP) is the combined display and keypad on the front of the unit. The LCP is the user interface to the frequency converter.


The LCP has several user functions.

- Start, stop, and control speed when in local control
- Display operational data, status, warnings and cautions
- Programming frequency converter functions
- Manually reset the frequency converter after a fault when auto-reset is inactive

An optional numeric LCP (NLCP) is also available. The NLCP operates in a manner similar to the LCP. See the *Programming Guide*, for details on use of the NLCP.

#### 4.1.1 LCP Layout

The LCP is divided into four functional groups (see *Illustration 4.1*).

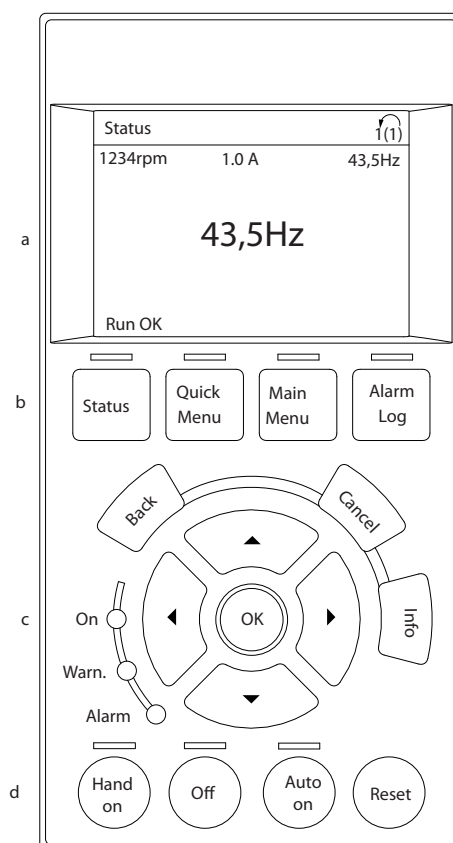

130BC362.10

Illustration 4.1 LCP

- Display area.
- Display menu keys for changing the display to show status options, programming, or error message history.
- Navigation keys for programming functions, moving the display cursor, and speed control in local operation. Also included are the status indicator lights.
- Operational mode keys and reset.

## 4.1.2 Setting LCP Display Values

The display area is activated when the frequency converter receives power from mains voltage, a DC bus terminal, or an external 24 V DC supply.

The information displayed on the LCP can be customized for user application.

- Each display readout has a parameter associated with it
- Options are selected in the quick menu Q3-13 *Display Settings*
- Display 2 has an alternate larger display option
- The frequency converter status at the bottom line of the display is generated automatically and is not selectable

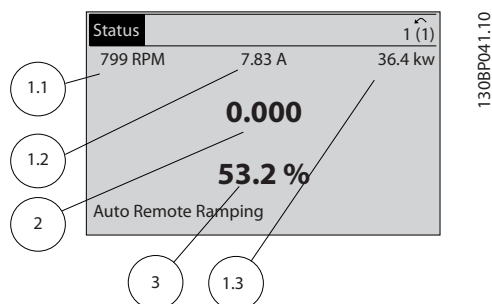


Illustration 4.2 Display Readouts

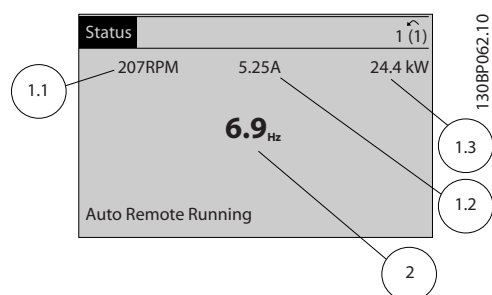


Illustration 4.3 Display Readouts

Display	Parameter number	Default setting
1.1	0-20	Motor RPMs
1.2	0-21	Motor current
1.3	0-22	Motor power (kW)
2	0-23	Motor frequency
3	0-24	Reference in percent

Table 4.1 Legend to Illustration 4.2 and Illustration 4.3

## 4.1.3 Display Menu Keys

Menu keys are used for menu access for parameter set-up, toggling through status display modes during normal operation, and viewing fault log data.



Illustration 4.4 Menu Keys

Key	Function
<b>Status</b>	Shows operational information. <ul style="list-style-type: none"> <li>• In Auto mode, press to toggle between status read-out displays</li> <li>• Press repeatedly to scroll through each status display</li> <li>• Press [Status] plus [▲] or [▼] to adjust the display brightness</li> <li>• The symbol in the upper right corner of the display shows the direction of motor rotation and which set-up is active. This is not programmable.</li> </ul>
<b>Quick Menu</b>	Allows access to programming parameters for initial set up instructions and many detailed application instructions. <ul style="list-style-type: none"> <li>• Press to access Q2 <i>Quick Setup</i> for sequenced instructions to program the basic frequency controller set up</li> <li>• Follow the sequence of parameters as presented for the function set up</li> </ul>
<b>Main Menu</b>	Allows access to all programming parameters. <ul style="list-style-type: none"> <li>• Press twice to access top-level index</li> <li>• Press once to return to the last location accessed</li> <li>• Press to enter a parameter number for direct access to that parameter</li> </ul>
<b>Alarm Log</b>	Displays a list of current warnings, the last 10 alarms, and the maintenance log. <ul style="list-style-type: none"> <li>• For details about the frequency converter before it entered the alarm mode, select the alarm number using the navigation keys and press [OK].</li> </ul>

Table 4.2 Function Description Menu Keys

#### 4.1.4 Navigation Keys

Navigation keys are used for programming functions and moving the display cursor. The navigation keys also provide speed control in local (hand) operation. Three frequency converter status indicator lights are also located in this area.

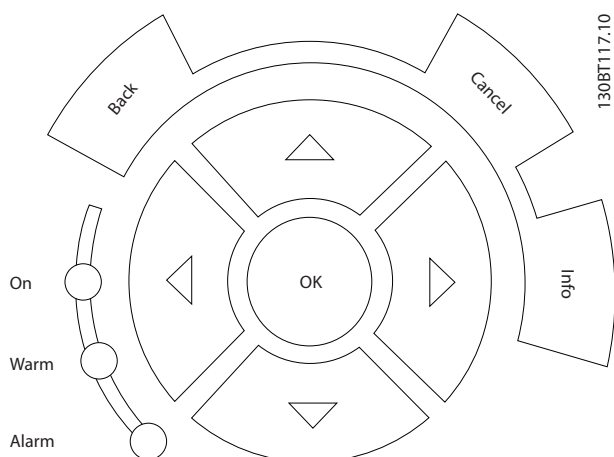


Illustration 4.5 Navigation Keys

Key	Function
Back	Reverts to the previous step or list in the menu structure.
Cancel	Cancels the last change or command as long as the display mode has not changed.
Info	Press for a definition of the function being displayed.
Navigation Keys	Use the four navigation keys to move between items in the menu.
OK	Use to access parameter groups or to enable a choice.

Table 4.3 Navigation Keys Functions

Light	Indicator	Function
Green	ON	The ON light activates when the frequency converter receives power from mains voltage, a DC bus terminal, or an external 24 V supply.
Yellow	WARN	When warning conditions are met, the yellow WARN light comes on and text appears in the display area identifying the problem.
Red	ALARM	A fault condition causes the red alarm light to flash and an alarm text is displayed.

Table 4.4 Indicator Lights Functions

#### 4.1.5 Operation Keys

Operation keys are found at the bottom of the LCP.

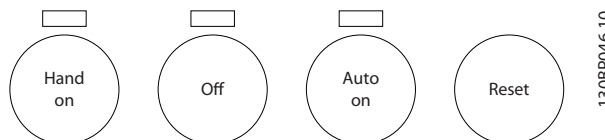


Illustration 4.6 Operation Keys

Key	Function
Hand On	Starts the frequency converter in local control. <ul style="list-style-type: none"> <li>Use the navigation keys to control frequency converter speed</li> <li>An external stop signal by control input or serial communication overrides the local hand on</li> </ul>
Off	Stops the motor but does not remove power to the frequency converter.
Auto On	Puts the system in remote operational mode. <ul style="list-style-type: none"> <li>Responds to an external start command by control terminals or serial communication</li> <li>Speed reference is from an external source</li> </ul>
Reset	Resets the frequency converter manually after a fault has been cleared.

Table 4.5 Operation Keys Functions

#### 4.2 Back Up and Copying Parameter Settings

Programming data is stored internally in the frequency converter.

- The data can be uploaded into the LCP memory as a storage back up
- Once stored in the LCP, the data can be downloaded back into the frequency converter
- Data can also be downloaded into other frequency converters by connecting the LCP into those units and downloading the stored settings. (This is a quick way to program multiple units with the same settings).
- Initialisation of the frequency converter to restore factory default settings does not change data stored in the LCP memory

## ⚠ WARNING

### UNINTENDED START!

When the frequency converter is connected to AC mains, the motor may start at any time. The frequency converter, motor, and any driven equipment must be in operational readiness. Failure to be in operational readiness when the frequency converter is connected to AC mains could result in death, serious injury, or equipment or property damage.

#### 4.2.1 Uploading Data to the LCP

1. Press [Off] to stop the motor before uploading or downloading data.
2. Go to *0-50 LCP Copy*.
3. Press [OK].
4. Select *All to LCP*.
5. Press [OK]. A progress bar shows the uploading process.
6. Press [Hand On] or [Auto On] to return to normal operation.

#### 4.2.2 Downloading Data from the LCP

1. Press [Off] to stop the motor before uploading or downloading data.
2. Go to *0-50 LCP Copy*.
3. Press [OK].
4. Select *All from LCP*.
5. Press [OK]. A progress bar shows the downloading process.
6. Press [Hand On] or [Auto On] to return to normal operation.

#### 4.3 Restoring Default Settings

## CAUTION

Initialisation restores the unit to factory default settings. Any programming, motor data, localization, and monitoring records will be lost. Uploading data to the LCP provides a backup before initialisation.

Restoring the frequency converter parameter settings back to default values is done by initialisation of the frequency converter. Initialisation can be through *14-22 Operation Mode* or manually.

- Initialisation using *14-22 Operation Mode* does not change frequency converter data such as operating hours, serial communication selections,

personal menu settings, fault log, alarm log, and other monitoring functions

- Using *14-22 Operation Mode* is generally recommended
- Manual initialisation erases all motor, programming, localization, and monitoring data and restores factory default settings

#### 4.3.1 Recommended Initialisation

1. Press [Main Menu] twice to access parameters.
2. Scroll to *14-22 Operation Mode*.
3. Press [OK].
4. Scroll to *Initialisation*.
5. Press [OK].
6. Remove power to the unit and wait for the display to turn off.
7. Apply power to the unit.

Default parameter settings are restored during start up. This may take slightly longer than normal.

8. Alarm 80 is displayed.
9. Press [Reset] to return to operation mode.

#### 4.3.2 Manual Initialisation

1. Remove power to the unit and wait for the display to turn off.
2. Press and hold [Status], [Main Menu], and [OK] at the same time and apply power to the unit.

Factory default parameter settings are restored during start up. This may take slightly longer than normal.

Manual initialisation does not reset the following frequency converter information

- *15-00 Operating Hours*
- *15-03 Power Up's*
- *15-04 Over Temp's*
- *15-05 Over Volt's*

## 5 About Frequency Converter Programming

### 5.1 Introduction

The frequency converter is programmed for its application functions using parameters. Parameters are accessed by pressing either [Quick Menu] or [Main Menu] on the LCP. (See 4 *User Interface* for details on using the LCP function keys.) Parameters may also be accessed through a PC using the MCT 10 Set-up Software (see 5.6 *Remote Programming with MCT 10 Set-up Software*).

5

The quick menu is intended for initial start up (Q2-\*\* *Quick Set Up*) and detailed instructions for common frequency converter applications (Q3-\*\* *Function Set Up*). Step-by-step instructions are provided. These instructions enable the user to walk through the parameters used for programming applications in their proper sequence. Data entered in a parameter can change the options available in the parameters following that entry. The quick menu presents easy guidelines for getting most systems up and running.

The Quick Menu also contains Q7-\*\* *Water and Pumps* providing very quick access to all dedicated water and pump features of the VLT® AQUA Drive

The main menu accesses all parameters and allows for advanced frequency converter applications.

### 5.2 Programming Example

Here is an example for programming the frequency converter for a common application in open loop.

- This procedure programs the frequency converter to receive a 0-10 V DC analog control signal on input terminal 53
- The frequency converter will respond by providing 6-60 Hz output to the motor proportional to the input signal (0-10 V DC = 6-60 Hz)

Select the following parameters using the navigation keys to scroll to the titles and press [OK] after each action.

1. 3-15 *Reference 1 Source*

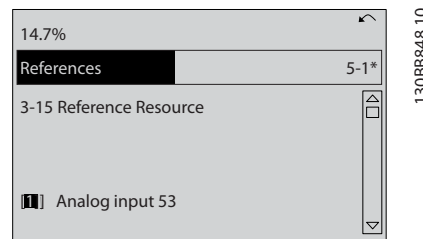


Illustration 5.1 References 3-15 Reference 1 Source

2. 3-02 *Minimum Reference*. Set minimum internal frequency converter reference to 0 Hz. (This sets the minimum frequency converter speed at 0 Hz.)

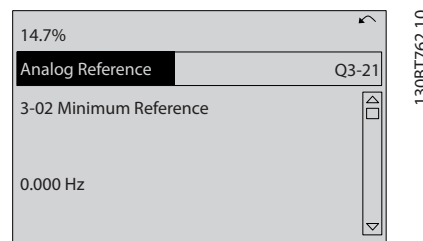


Illustration 5.2 Analog Reference 3-02 Minimum Reference

3. 3-03 *Maximum Reference*. Set maximum internal frequency converter reference to 60 Hz. (This sets the maximum frequency converter speed at 60 Hz. Note that 50/60 Hz is a regional variation.)

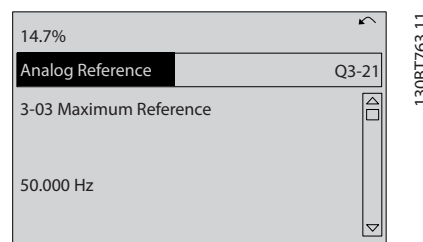


Illustration 5.3 Analog Reference 3-03 Maximum Reference

4. 6-10 *Terminal 53 Low Voltage*. Set minimum external voltage reference on Terminal 53 at 0 V. (This sets the minimum input signal at 0 V.)

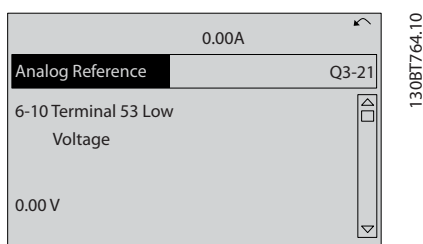


Illustration 5.4 Analog Reference 6-10 Terminal 53 Low Voltage

5. 6-11 Terminal 53 High Voltage. Set maximum external voltage reference on Terminal 53 at 10 V. (This sets the maximum input signal at 10 V.)

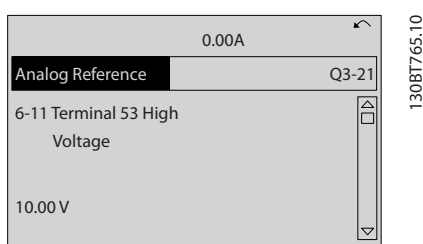


Illustration 5.5 Analog Reference 6-11 Terminal 53 High Voltage

6. 6-14 Terminal 53 Low Ref./Feedb. Value. Set minimum speed reference on Terminal 53 at 6 Hz. (This tells the frequency converter that the minimum voltage received on Terminal 53 (0 V) equals 6 Hz output.)

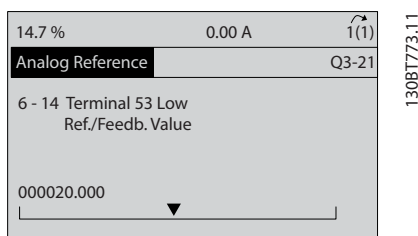


Illustration 5.6 Analog Reference 6-14 Terminal 53 Low Ref./Feedb. Value

7. 6-15 Terminal 53 High Ref./Feedb. Value. Set maximum speed reference on Terminal 53 at 60 Hz. (This tells the frequency converter that the maximum voltage received on Terminal 53 (10 V) equals 60 Hz output.)

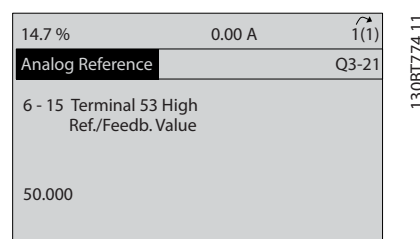


Illustration 5.7 Analog Reference 6-15 Terminal 53 High Ref./Feedb. Value

With an external device providing a 0-10 V control signal connected to frequency converter terminal 53, the system is now ready for operation. Note that the scroll bar on the right in the last illustration of the display is at the bottom, indicating the procedure is complete.

Illustration 5.8 shows the wiring connections used to enable this set up.

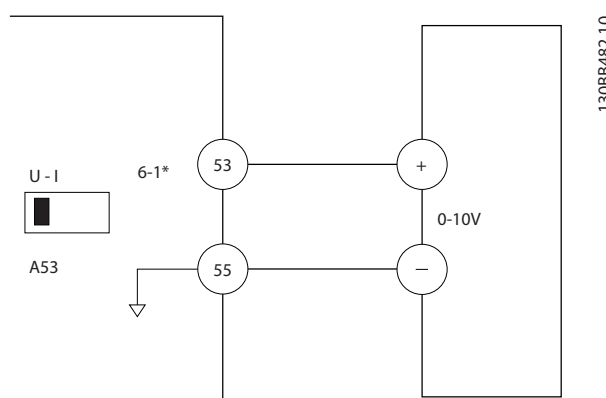


Illustration 5.8 Wiring Example for External Device Providing 0-10 V Control Signal (Frequency Converter Left, External Device Right)

## 5.3 Control Terminal Programming Examples

Control terminals can be programmed.

- Each terminal has specified functions it is capable of performing
- Parameters associated with the terminal enable the function

See Table 2.4 for control terminal parameter number and default setting. (Default setting can change based on the selection in 0-03 Regional Settings.)

The following example shows accessing Terminal 18 to see the default setting.

1. Press [Main Menu] twice, scroll to parameter group 5-\*\* *Digital In/Out* and press [OK].

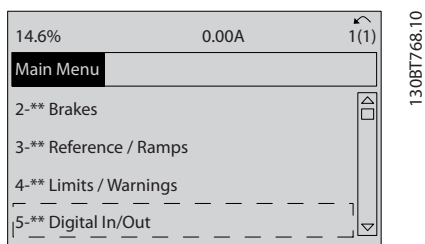


Illustration 5.9 6-15 Terminal 53 High Ref./Feedb. Value

2. Scroll to parameter group 5-1\* *Digital Inputs* and press [OK].

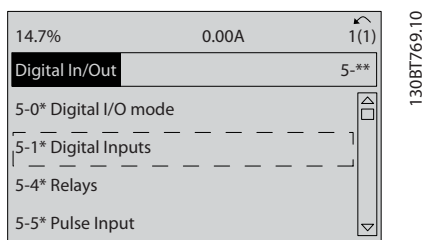


Illustration 5.10 Digital In/Out

3. Scroll to 5-10 *Terminal 18 Digital Input*. Press [OK] to access function choices. The default setting *Start* is shown.

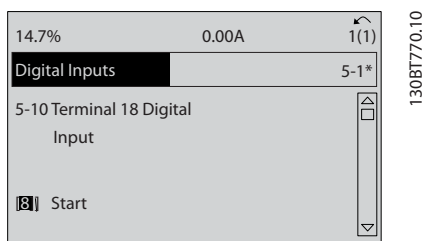


Illustration 5.11 Digital Inputs

## 5.4 International/North American Default Parameter Settings

Setting 0-03 *Regional Settings* to International or North America changes the default settings for some parameters. Table 5.1 lists those parameters that are effected.

Parameter	International Default Parameter Value	North American Default Parameter Value
0-03 Regional Settings	International	North America
0-71 Date Format	YYYY-MM-DD	MM/DD/YYYY
0-72 Time Format	24h	12h

Parameter	International Default Parameter Value	North American Default Parameter Value
1-20 Motor Power [kW]	See Note 1	See Note 1
1-21 Motor Power [HP]	See Note 2	See Note 2
1-22 Motor Voltage	230 V/400 V/575 V	208 V/460 V/575 V
1-23 Motor Frequency	20-1000 Hz	60 Hz
3-03 Maximum Reference	50 Hz	60 Hz
3-04 Reference Function	Sum	External/Preset
4-13 Motor Speed High Limit [RPM] See Note 3	1500 RPM	1800 RPM
4-14 Motor Speed High Limit [Hz] See Note 4	50 Hz	60 Hz
4-19 Max Output Frequency	1.0 - 1000.0 Hz	120 Hz
4-53 Warning Speed High	1500 RPM	1800 RPM
5-12 Terminal 27 Digital Input	Coast inverse	External interlock
5-40 Function Relay	Alarm	No alarm
6-15 Terminal 53 High Ref./Feedb. Value	50	60
6-50 Terminal 42 Output	100	Speed 4-20mA
14-20 Reset Mode	Automatic reset x 10	Infinite auto reset
22-85 Speed at Design Point [RPM] See Note 3	1500 RPM	1800 RPM
22-86 Speed at Design Point [Hz]	50 Hz	60 Hz

Table 5.1 International/North American Default Parameter Settings

Note 1: 1-20 Motor Power [kW] is only visible when 0-03 *Regional Settings* is set to [0] International.

Note 2: 1-21 Motor Power [HP], is only visible when 0-03 *Regional Settings* is set to [1] North America.

Note 3: This parameter is only visible when 0-02 Motor Speed Unit is set to [0] RPM.

Note 4: This parameter is only visible when 0-02 Motor Speed Unit is set to [1] Hz.

Changes made to default settings are stored and available for viewing in the quick menu along with any programming entered into parameters.

1. Press [Quick Menu].
2. Scroll to Q5 *Changes Made* and press [OK].



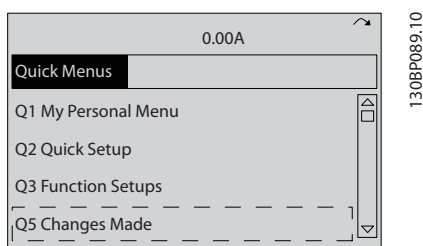


Illustration 5.12 Quick Menu

3. Select *Q5-2 Since Factory Setting* to view all programming changes or *Q5-1 Last 10 Changes* for the most recent.

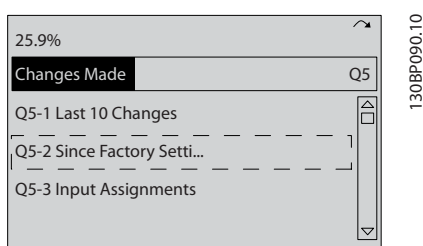


Illustration 5.13 Changes Made

## 5.5 Parameter Menu Structure

Establishing the correct programming for applications often requires setting functions in several related parameters. These parameter settings provide the frequency converter with system details it needs to operate properly. System details may include such things as input and output signal types, programming terminals, minimum and maximum signal ranges, custom displays, automatic restart, and other features.

- See the LCP display to view detailed parameter programming and setting options
- Press [Info] in any menu location to view additional details for that function
- Press and hold [Main Menu] to enter a parameter number for direct access to that parameter
- Details for common application set ups are provided in *6 Application Set Up Examples*.

## 5.5.1 Quick Menu Structure

Q2 Quick Setup	0-37 Display Text 1	20-12 Reference/Feedback Unit	Trending Comparison	29-13 Derag Speed [RPM]
0-01 Language	0-38 Display Text 2	3-02 Minimum Reference	<b>Q7 Water and Pumps</b>	29-14 Derag Speed [Hz]
0-02 Motor Speed Unit	0-39 Display Text 3	3-03 Maximum Reference	<b>Q7-1 Pipe Fill</b>	29-15 Derag Off Delay
1-20 Motor Power [kW]	<b>Q3-12 Analog Output</b>	6-20 Terminal 54 Low Voltage	<b>Q7-10 Horizontal Pipes</b>	29-22 Derag Power Factor
1-22 Motor Voltage	6-50 Terminal 42 Output	6-21 Terminal 54 High Voltage	29-00 Pipe Fill Enable	29-23 Derag Power Delay
1-23 Motor Frequency	6-51 Terminal 42 Output Min Scale	6-24 Terminal 54 Low Ref./Feedb. Value	29-01 Pipe Fill Speed [RPM]	29-24 Low Speed [RPM]
1-24 Motor Current	6-52 Terminal 42 Output Max Scale	6-25 Terminal 54 High Ref./Feedb. Value	29-02 Pipe Fill Speed [Hz]	29-25 Low Speed [Hz]
1-25 Motor Nominal Speed	<b>Q3-13 Relays</b>	6-00 Live Zero Timeout Time	29-03 Pipe Fill Time	29-26 Low Speed Power [kW]
	Option relays if applicable			
3-41 Ramp 1 Ramp Up Time	Relay 1 ⇒ 5-40 Function Relay	6-01 Live Zero Timeout Function	29-04 Pipe Fill Rate	29-27 Low Speed Power [HP]
3-42 Ramp 1 Ramp Down Time	Relay 2 ⇒ 5-40 Function Relay	<b>Q3-31 PID Settings</b>	29-05 Filled Setpoint	29-28 High Speed [RPM]
4-11 Motor Speed Low Limit [RPM]	<b>Q3-2 Open Loop Settings</b>	20-81 PID Normal/ Inverse Control	29-05 Filled Setpoint	29-29 High Speed [Hz]
4-13 Motor Speed High Limit [RPM]	<b>Q3-20 Digital Reference</b>	20-82 PID Start Speed [RPM]	29-06 No-Flow Disable Timer	29-30 High Speed Power [kW]
1-29 Automatic Motor Adaptation (AMA)	3-02 Minimum Reference	20-21 Setpoint 1	<b>Q7-11 Vertical Pipes</b>	29-31 High Speed Power [HP]
<b>Q3 Function Setup</b>	3-03 Maximum Reference	20-93 PID Proportional Gain	29-00 Pipe Fill Enable	29-32 Derag On Ref Bandwidth
<b>Q3-1 General Settings</b>	3-10 Preset Reference	20-94 PID Integral Time	29-04 Pipe Fill Rate	<b>Q7-3 Dry Run</b>
<b>Q3-10 Clock Settings</b>	5-13 Terminal 29 Digital Input	<b>Q5 Changes Made</b>	29-05 Filled Setpoint	22-21 Low Power Detection
0-70 Date and Time	5-14 Terminal 32 Digital Input	<b>Q5-1 Last 10 Changes</b>	29-06 No-Flow Disable Timer	22-20 Low Power Auto Set-up
0-71 Date Format	5-15 Terminal 33 Digital Input	<b>Q5-2 Since Factory Setting</b>	<b>Q7-12 Mixed Systems</b>	22-27 Dry Pump Delay
0-72 Time Format	<b>Q3-21 Analog Reference</b>	<b>Q5-3 Input Assignments</b>	29-00 Pipe Fill Enable	22-26 Dry Pump Function
0-74 DST/Summertime	3-02 Minimum Reference	<b>Q6 Loggings</b>	29-01 Pipe Fill Speed [RPM]	<b>Q7-4 End of Curve Detection</b>
0-76 DST/Summertime Start	3-03 Maximum Reference	Reference [Unit]	29-02 Pipe Fill Speed [Hz]	22-50 End of Curve Function
0-77 DST_Summertime End	6-10 Terminal 53 Low Voltage	Analog Input 53	29-03 Pipe Fill Time	22-51 End of Curve Delay
<b>Q3-11 Display Settings</b>	6-11 Terminal 53 High Voltage	Motor current	29-05 Filled Setpoint	<b>Q7-5 Sleep Mode</b>
0-20 Display Line 1.1 Small	6-14 Terminal 53 Low Ref./Feedb. Value	Frequency	29-06 No-Flow Disable Timer	<b>Q7-50 Low Speed</b>
0-21 Display Line 1.2 Small	6-15 Terminal 53 High Ref./Feedb. Value	Feedback [Unit]	<b>Q7-2 Deragging</b>	22-22 Low Speed Detection
0-22 Display Line 1.3 Small	<b>Q3-3 Closed Loop Settings</b>	Energy Log	29-10 Derag Cycles	22-23 No-Flow Function
0-23 Display Line 2 Large	<b>Q3-30 Feedback Settings</b>	Trending Cont Bin	29-11 Derag at Start/Stop	22-24 No-Flow Delay
0-24 Display Line 3 Large	1-00 Configuration Mode	Trending Timed Bin	29-12 Deragging Run Time	22-28 No-Flow Low Speed [RPM]

Table 5.2 Quick Menu Structure

22-29 No-Flow Low Speed [Hz]	22-24 No-Flow Delay	22-20 Low Power Auto Set-up	<b>Q7-6 Flow Compensation</b>	22-90 Flow at Rated Speed
22-40 Minimum Run Time	22-20 Low Power Auto Set-up	22-22 Low Speed Detection	22-80 Flow Compensation	<b>Q7-7 Special Ramps</b>
22-41 Minimum Sleep Time	22-40 Minimum Run Time	22-28 No-Flow Low Speed [RPM]	22-81 Square-linear Curve Approximation	3-84 Initial Ramp Time
22-42 Wake-up Speed [RPM]	22-41 Minimum Sleep Time	22-29 No-Flow Low Speed [Hz]	22-82 Work Point Calculation	3-88 Final Ramp Time
22-43 Wake-up Speed [Hz]	22-42 Wake-up Speed [RPM]	22-40 Minimum Run Time	22-83 Speed at No-Flow [RPM]	3-85 Check Valve Ramp Time
22-44 Wake-up Ref./FB Difference	22-43 Wake-up Speed [Hz]	22-41 Minimum Sleep Time	22-84 Speed at No-Flow [Hz]	3-86 Check Valve Ramp End Speed [RPM]
22-45 Setpoint Boost	22-44 Wake-up Ref./FB Difference	22-42 Wake-up Speed [RPM]	22-85 Speed at Design Point [RPM]	3-87 Check Valve Ramp End Speed [Hz]
22-46 Maximum Boost Time	22-45 Setpoint Boost	22-43 Wake-up Speed [Hz]	22-86 Speed at Design Point [Hz]	
<b>Q7-51 Low Power</b>	22-46 Maximum Boost Time	22-44 Wake-up Ref./FB Difference	22-87 Pressure at No-Flow Speed	
22-21 Low Power Detection	<b>Q7-52 Low Speed/Power</b>	22-45 Setpoint Boost	22-88 Pressure at Rated Speed	
22-23 No-Flow Function	22-21 Low Power Detection	22-46 Maximum Boost Time	22-89 Flow at Design Point	

Table 5.3

## 5.5.2 Main Menu Structure

5.5.2 Main Menu Structure

0-89	Date and Time Readout	1-8*	Stop Adjustments	3-93	Maximum Limit	5-53	Term. 29 High Ref./Feedb. Value
1-0*	Load and Motor	1-80	Function at Stop	3-94	Minimum Limit	5-54	Pulse Filter Time Constant #29
1-0*	General Settings	1-81	Min Speed for Function at Stop [RPM]	3-95	Ramp Delay	5-55	Term. 33 Low Frequency
1-00	Configuration Mode	1-82	Min Speed for Function at Stop [Hz]	4-2*	Limits / Warnings	5-56	Term. 33 High Frequency
1-01	Motor Control Principle	1-86	Trip Speed Low [RPM]	4-1*	Motor Limits	5-57	Term. 33 Low Ref./Feedb. Value
1-03	Torque Characteristics	1-87	Trip Speed Low [Hz]	4-10	Motor Speed Direction	5-58	Term. 33 High Ref./Feedb. Value
1-06	Clockwise Direction	1-9*	Motor Temperature	4-11	Motor Speed Low Limit [RPM]	5-59	Pulse Filter Time Constant #33
1-1*	Motor Selection	1-90	Motor Thermal Protection	4-12	Motor Speed Low Limit [Hz]	5-60	Term. 27 Pulse Output Variable
1-10	Motor Construction	1-91	Motor External Fan	4-13	Motor Speed High Limit [RPM]	5-62	Pulse Output Max Freq #27
1-1*	WC+ PM	1-93	Thermistor Source	4-14	Motor Speed High Limit [Hz]	5-63	Term. 29 Pulse Output Variable
1-14	Damping Gain	2-*	Brakes	4-16	Torque Limit Motor Mode	5-65	Pulse Output Max Freq #29
1-15	Low Speed Filter Time Const.	2-0*	DC-Brake	4-17	Torque Limit Generator Mode	5-66	Term. X30/6 Pulse Output Variable
1-16	High Speed Filter Time Const.	2-00	DC Hold/Preheat Current	4-18	Current Limit	5-68	Pulse Output Max Freq #X30/6
1-17	Voltage filter time const.	2-01	DC Brake Current	4-19	Max Output Frequency	5-8*	I/O Options
1-2*	Motor Data	2-02	DC Braking Time	4-5*	Adj. Warnings	5-80	AHF Cap Reconnect Delay
1-20	Motor Power [kW]	2-03	DC Brake Cut In Speed [RPM]	4-50	Warning Current Low	5-9*	Bus Controlled
1-21	Motor Power [HP]	2-04	DC Brake Cut In Speed [Hz]	4-51	Warning Current High	5-90	Digital & Relay Bus Control
1-22	Motor Voltage	2-06	Parking Current	4-52	Warning Speed Low	5-93	Pulse Out #27 Bus Control
1-23	Motor Frequency	2-07	Parking Time	4-53	Warning Speed High	5-94	Pulse Out #27 Timeout Preset
1-24	Motor Current	2-1*	Brake Energy Funct.	4-54	Warning Reference Low	5-95	Pulse Out #29 Bus Control
1-25	Motor Nominal Speed	2-10	Brake Function	4-55	Warning Reference High	5-96	Pulse Out #29 Timeout Preset
1-26	Motor Cont. Rated Torque	2-11	Brake Resistor (ohm)	4-56	Warning Feedback Low	5-97	Pulse Out #X30/6 Bus Control
1-28	Motor Rotation Check	2-12	Brake Power Limit (kW)	4-57	Warning Feedback High	5-98	Pulse Out #X30/6 Timeout Preset
1-29	Automatic Motor Adaptation (AMA)	2-13	Brake Power Monitoring	4-58	Missing Motor Phase Function	6-*	Analog I/O
1-3*	Adv. Motor Data	2-15	Brake Check	4-6*	Speed Bypass	6-0*	Analog I/O Mode
1-30	Stator Resistance (Rs)	2-16	AC brake Max. Current	4-60	Bypass Speed From [RPM]	6-00	Live Zero Timeout Time
1-31	Stator Resistance (Rr)	2-17	Over-voltage Control	4-61	Bypass Speed From [Hz]	6-01	Live Zero Timeout Function
1-33	Stator Leakage Reactance (X1)	3-*	Reference / Ramps	4-62	Bypass Speed To [RPM]	6-1*	Analog Input 53
1-34	Stator Leakage Reactance (X2)	3-0*	Reference Limits	4-63	Bypass Speed To [Hz]	6-10	Terminal 53 Low Voltage
1-35	Main Reactance (Xh)	3-02	Minimum Reference	4-64	Semi-Auto Bypass Set-up	6-11	Terminal 53 High Voltage
1-36	Iron Loss Resistance (Rfe)	3-03	Maximum Reference	5-*	Digital In/Out	6-12	Terminal 53 Low Current
1-37	d-axis Inductance (Ld)	3-04	Reference Function	5-0*	Digital I/O mode	6-13	Terminal 53 High Current
1-39	Motor Poles	3-1*	References	5-00	Digital I/O Mode	6-14	Terminal 53 Low Ref./Feedb. Value
1-40	Back EMF at 1000 RPM	3-10	Preset Reference	5-01	Terminal 27 Mode	6-15	Terminal 53 High Ref./Feedb. Value
1-46	Position Detection Gain	3-11	Jog Speed [Hz]	5-02	Terminal 29 Mode	6-16	Terminal 53 Filter Time Constant
1-5*	Load Indep. Setting	3-13	Reference Site	5-1*	Digital Inputs	6-17	Terminal 53 Live Zero
1-50	Motor Magnetisation at Zero Speed	3-14	Preset Relative Reference	5-10	Terminal 18 Digital Input	6-2*	Analog Input 54
1-51	Min Speed Normal Magnetising [RPM]	3-15	Reference 1 Source	5-11	Terminal 19 Digital Input	6-20	Terminal 54 Low Voltage
1-52	Min Speed Normal Magnetising [Hz]	3-16	Reference 2 Source	5-12	Terminal 29 Digital Input	6-21	Terminal 54 High Voltage
1-55	V/f Characteristic - V	3-17	Reference 3 Source	5-13	Terminal 32 Digital Input	6-22	Terminal 54 Low Current
1-56	V/f Characteristic - f	3-19	Jog Speed [RPM]	5-14	Terminal 33 Digital Input	6-23	Terminal 54 High Current
1-58	Flystart Test Pulses Current	3-4*	Ramp 1	5-15	Terminal X30/2 Digital Input	6-24	Terminal 54 Low Ref./Feedb. Value
1-59	Flystart Test Pulses Frequency	3-41	Ramp 1 Ramp Up Time	5-16	Terminal X30/3 Digital Input	6-25	Terminal 54 High Ref./Feedb. Value
1-6*	Load Depen. Setting	3-42	Ramp 1 Ramp Down Time	5-17	Terminal X30/4 Digital Input	6-26	Terminal 54 Filter Time Constant
1-60	Low Speed Load Compensation	3-5*	Ramp 2	5-18	Terminal 37 Digital Input	6-27	Terminal 54 Live Zero
1-61	High Speed Load Compensation	3-51	Ramp 2 Ramp Up Time	5-19	Terminal 37 Digital Input	6-3*	Analog Input X30/11
1-62	Slip Compensation	3-52	Ramp 2 Ramp Down Time	5-3*	Digital Outputs	6-30	Terminal X30/11 Low Voltage
1-63	Slip Compensation Time Constant	3-8*	Other Ramps	5-30	Terminal 27 Digital Output	6-31	Terminal X30/11 High Voltage
1-64	Resonance Dampening	3-80	Jog Ramp Time	5-31	Terminal 29 Digital Output	6-34	Term. X30/11 Low Ref./Feedb. Value
1-65	Resonance Dampening Time Constant	3-81	Quick Stop Ramp Time	5-32	Term X30/7 Digi Out (MCB 101)	6-35	Term. X30/11 High Ref./Feedb. Value
1-66	Min. Current at Low Speed	3-84	Initial Ramp Time	5-33	Relays	6-36	Term. X30/11 Filter Time Constant
1-7*	Start Adjustments	3-85	Check Valve Ramp Time	5-4*	Function Relay	6-37	Term. X30/11 Live Zero
1-70	PM Start Mode	3-86	Check Valve Ramp End Speed [RPM]	5-40	On Delay, Relay	6-40	Analog Input X30/12
1-71	Start Delay	3-87	Check Valve Ramp End Speed [Hz]	5-41	Off Delay, Relay	6-41	Terminal X30/12 Low Voltage
1-72	Start Function	3-88	Final Ramp Time	5-42	Pulse Input	6-44	Terminal X30/12 High Voltage
1-73	Flying Start	3-9*	Digital Pot.Meter	5-5*	Term. 29 Low Frequency	6-45	Term. X30/12 Low Ref./Feedb. Value
1-74	Start Speed [RPM]	3-90	Step Size	5-50	Term. 29 High Frequency	6-46	Term. X30/12 High Ref./Feedb. Value
1-75	Start Speed [Hz]	3-91	Ramp Time	5-51	Term. 29 Low Ref./Feedb. Value		
1-76	Start Current	3-92	Power Restore	5-52	Term. 29 High Ref./Feedb. Value		

6-47	Term. X30/12 Live Zero	8-90	Bus Jog 1 Speed	10-23	COS Filter 4	12-98	Interface Counters	14-60	Function at Over Temperature
6-50	Terminal 42 Output	8-91	Bus Jog 2 Speed	10-30	Parameter Access	12-99	Media Counters	14-61	Function at Inverter Overload
6-52	Terminal 42 Output Min Scale	8-94	Bus Feedback 1	10-30	Array Index	13-00	Smart Logic	14-62	Inv. Overload Derate Current
6-53	Terminal 42 Output Max Scale	8-95	Bus Feedback 2	10-31	Store Data Values	13-00	SLC Settings	14-8*	Options
6-54	Terminal 42 Output Bus Control	8-96	Bus Feedback 3	10-32	DeviceNet Revision	13-01	SL Controller Mode	14-80	Option Supplied by External 24VDC
6-55	Terminal 42 Output Timeout Preset	9-00	PRODrive	10-33	Store Always	13-02	Start Event	14-9*	Fault Settings
6-56	Terminal 42 Output Filter	9-00	Setpoint	10-34	DeviceNet Product Code	13-02	Stop Event	14-90	Fault Level
6-6*	Analog Output X30/8	9-07	Actual Value	10-39	DeviceNet F Parameters	13-03	Reset SLC	15-0*	Drive Information
6-61	Terminal X30/8 Output	9-15	PCD Write Configuration	12-00	Ethernet	13-1*	Comparators	15-0*	Operating Data
6-62	Terminal X30/8 Min. Scale	9-16	PCD Read Configuration	12-00	IP Settings	13-10	Comparator Operand	15-00	Operating Hours
6-63	Terminal X30/8 Max. Scale	9-18	Node Address	12-01	IP Address	13-11	Comparator Operator	15-01	Running Hours
6-64	Terminal X30/8 Output Bus Control	9-22	Telegram Selection	12-02	Subnet Mask	13-12	Comparator Value	15-02	kWh Counter
6-65	Terminal X30/8 Output Timeout Preset	9-23	Parameters for Signals	12-03	Default Gateway	13-2*	Timers	15-03	Power Up's
8-0*	Comm. and Options	9-27	Parameter Edit	12-04	DHCP Server	13-20	SL Controller Timer	15-04	Over Temp's
8-01	Control Site	9-28	Process Control	12-05	DHCP Server	13-4*	Logic Rules	15-05	Over Volt's
8-02	Control Source	9-31	Safe Address	12-06	Lease Expires	13-40	Logic Rule Boolean 1	15-06	Reset kWh Counter
8-03	Control Timeout Time	9-44	Fault Message Counter	12-07	Name Servers	13-41	Logic Rule Operator 1	15-07	Reset Running Hours Counter
8-04	Control Timeout Function	9-45	Fault Code	12-08	Domain Name	13-42	Logic Rule Boolean 2	15-08	Number of Starts
8-05	End-of-Timeout Function	9-47	Fault Situation Counter	12-09	Host Name	13-43	Logic Rule Operator 2	15-1*	Data Log Settings
8-06	Reset Control Timeout	9-53	Profibus Warning Word	12-10	Physical Address	13-44	Logic Rule Boolean 3	15-10	Logging Source
8-07	Diagnosis Trigger	9-63	Actual Baud Rate	12-11	Ethernet Link Parameters	13-5*	States	15-11	Logging Interval
8-08	Readout Filtering	9-64	Device Identification	12-12	Link Status	13-51	SL Controller Event	15-12	Trigger Event
8-1*	Control Settings	9-65	Profile Number	12-13	Link Speed	13-52	SL Controller Action	15-13	Logging Mode
8-10	Control Profile	9-67	Control Word 1	12-14	Link Duplex	14-0*	Special Functions	15-14	Samples Before Trigger
8-13	Configurable Status Word STW	9-68	Status Word 1	12-2*	Process Data	14-00	Inverter Switching	15-2*	Historic Log
8-14	Configurable Control Word CTW	9-71	Profibus Save Data Values	12-20	Control Instance	14-01	Switching Frequency	15-20	Historic Log: Event
8-3*	FC Port Settings	9-72	ProfibusDriveReset	12-21	Process Data Config Write	14-03	Overmodulation	15-21	Historic Log: Value
8-30	Protocol	9-75	DO Identification	12-22	Process Data Config Read	14-04	PWM Random	15-22	Historic Log: Time
8-31	Address	9-80	Defined Parameters (1)	12-27	Primary Master	14-1*	Mains On/Off	15-23	Historic log: Date and Time
8-32	Baud Rate	9-81	Defined Parameters (2)	12-28	Store Data Values	14-10	Mains Failure	15-30	Alarm Log: Error Code
8-33	Parity / Stop Bits	9-82	Defined Parameters (3)	12-29	Store Always	14-11	Mains Voltage at Mains Fault	15-31	Alarm Log: Value
8-35	Minimum Response Delay	9-83	Defined Parameters (4)	12-30	Warning Parameter	14-12	Function at Mains Imbalance	15-32	Alarm Log: Time
8-36	Max Response Delay	9-84	Defined Parameters (5)	12-31	Net Reference	14-2*	Reset Functions	15-33	Alarm Log: Date and Time
8-37	Maximum Inter-Char Delay	9-90	Changed Parameters (1)	12-32	Net Control	14-20	Reset Mode	15-34	Alarm Log: Setpoint
8-4*	FC MC protocol set	9-91	Changed Parameters (2)	12-33	CIP Revision	14-21	Automatic Restart Time	15-35	Alarm Log: Feedback
8-40	Telegram Selection	9-92	Changed Parameters (3)	12-34	CIP Product Code	14-22	Operation Mode	15-36	Alarm Log: Current Demand
8-42	PCD Write Configuration	9-93	Changed Parameters (4)	12-35	EDS Parameter	14-23	Typecode Setting	15-37	Alarm Log: Process Ctrl Unit
8-43	PCD Read Configuration	9-94	Changed Parameters (5)	12-36	COS Inhibit Timer	14-25	Trip Delay at Torque Limit	15-4*	Drive Identification
8-5*	Digital/Bus	9-99	Profibus Revision Counter	12-37	COS Filter	14-26	Trip Delay at Inverter Fault	15-40	FC Type
8-50	Coasting Select	10-0*	Common Settings	12-38	COS Filter	14-28	Production Settings	15-41	Power Section
8-52	DC Brake Select	10-00	CAN Protocol	12-40	Status Parameter	14-29	Service Code	15-42	Voltage
8-53	Start Select	10-01	Baud Rate Select	12-41	Slave Message Count	14-3*	Current Limit Ctrl.	15-43	Software Version
8-54	Reversing Select	10-02	MAC ID	12-42	Slave Exception Message Count	14-30	Current Lim Ctrl, Proportional Gain	15-44	Ordered Typecode String
8-55	Set-up Select	10-05	Readout Transmit Error Counter	12-8*	Other Ethernet Services	14-31	Current Lim Ctrl, Integration Time	15-45	Actual Typecode String
8-56	Preset Reference Select	10-06	Readout Receive Error Counter	12-80	FTP Server	14-32	Current Lim Ctrl, Filter Time	15-46	Frequency Converter Ordering No
8-7*	BACnet	10-07	Readout Bus Off Counter	12-81	HTTP Server	14-4*	Energy Optimising	15-47	Power Card Ordering No
8-70	BACnet Device Instance	10-1*	DeviceNet	12-82	SMTP Service	14-40	VT Level	15-48	LCP Id No
8-72	MS/TP Max Masters	10-10	Process Data Type Selection	12-88	Transparent Socket Channel Port	14-41	AO Minimum Magnetisation	15-49	SW ID Control Card
8-74	"I-Am" Service	10-11	Process Data Config Write	12-89	Transparent Socket Channel Port	14-42	Minimum AEO Frequency	15-50	SW ID Power Card
8-75	Initialisation Password	10-12	Process Data Config Read	12-9*	Advanced Ethernet Services	14-43	Motor Cosphi	15-51	Frequency Converter Serial Number
8-8*	FC Port Diagnostics	10-13	Warning Parameter	12-90	Cable Diagnostic	14-5*	Environment	15-53	Power Card Serial Number
8-80	Bus Message Count	10-14	Net Reference	12-91	MDI-X	14-50	RFI Filter	15-59	CSV Filename
8-81	Bus Error Count	10-15	Net Control	12-92	IGMP Snooping	14-51	DC Link Compensation	15-6*	Option Ident
8-82	Slave Error Count	10-20	COS Filter 1	12-93	Cable Error Length	14-52	Fan Control	15-60	Option Mounted
8-83	Slave Error Count	10-21	COS Filter 2	12-94	Broadcast Storm Protection	14-53	Fan Monitor	15-61	Option SW Version
8-9*	Bus Jog / Feedback	10-22	COS Filter 3	12-95	Broadcast Storm Filter	14-55	Output Filter	15-62	Option Ordering No
				12-96	Port Mirroring	14-59	Actual Number of Inverter Units	15-63	Option Serial No
						14-6*	Auto Derate	15-70	Option in Slot A

15-71 Slot A Option SW Version	20-21 Setpoint 1	21-43 Ext. 2 Differentiation Time	22-76 Interval between Starts
15-72 Option in Slot B	20-22 Setpoint 2	21-44 Ext. 2 Diff. Gain Limit	22-77 Minimum Run Time
15-73 Slot B Option SW Version	20-23 Setpoint 3	<b>21-5* Ext. CL 3 Ref/Fb.</b>	22-78 Minimum Run Time Override Value
15-74 Option in Slot C0/E0	<b>20-7* PID Autotuning</b>	21-50 Ext. 3 Ref/Feedback Unit	<b>22-8* Flow Compensation</b>
15-75 Slot C0/E0 Option SW Version	<b>20-70</b> Closed Loop Type	21-51 Ext. 3 Minimum Reference	22-80 Flow Compensation
15-76 Option in Slot C1/E1	20-71 PID Performance	21-52 Ext. 3 Maximum Reference	22-81 Square-Linear Curve Approximation
15-77 Slot C1/E1 Option SW Version	20-72 PID Output Change	21-53 Ext. 3 Reference Source	22-82 Work-Linear Curve Calculation
<b>15-9* Parameter Info</b>	20-73 Minimum Feedback Level	21-54 Ext. 3 Feedback Source	22-83 Speed at No-Flow [RPM]
15-92 Defined Parameters	20-74 Maximum Feedback Level	21-55 Ext. 3 Setpoint	22-84 Speed at No-Flow [Hz]
15-93 Modified Parameters	20-79 PID Autotuning	21-57 Ext. 3 Reference [Unit]	22-85 Speed at Design Point [RPM]
15-98 Drive Identification	<b>20-8* PID Basic Settings</b>	21-58 Ext. 3 Feedback [Unit]	22-86 Speed at Design Point [Hz]
15-99 Parameter Metadata	20-81 PID Normal/ Inverse Control	21-59 Ext. 3 Output [%]	22-87 Pressure at Rated Speed
<b>16-0* Data Readouts</b>	20-82 PID Start Speed [RPM]	<b>21-6* Ext. CL 3 PID</b>	22-88 Flow at Design Point
<b>16-0* General Status</b>	20-83 PID Start Speed [Hz]	21-60 Ext. 3 Normal/Inverse Control	22-89 Flow at Rated Speed
16-00 Control Word	20-84 On Reference Bandwidth	21-61 Ext. 3 Proportional Gain	22-90 Flow at Rated Speed
16-01 Reference [Unit]	<b>20-9* PID Controller</b>	21-62 Ext. 3 Integral Time	<b>23-0* Time-based Functions</b>
16-02 Reference [%]	20-91 PID Anti Windup	21-63 Ext. 3 Differentiation Time	<b>23-0* ON Time</b>
16-03 Status Word	20-93 PID Proportional Gain	21-64 Ext. 3 Diff. Gain Limit	23-01 ON Action
16-05 Main Actual Value [%]	20-94 PID Integral Time	<b>22-0* Appl. Functions</b>	23-02 OFF Time
16-09 Custom Readout	20-95 PID Differentiation Time	<b>22-0* Miscellaneous</b>	23-03 OFF Action
<b>16-1* Motor Status</b>	20-96 PID Diff. Gain Limit	22-00 External Interlock Delay	23-04 Occurrence
16-10 Power [kW]	<b>21-0* Ext. Closed Loop</b>	<b>22-2* No-Flow Detection</b>	<b>23-1* Maintenance</b>
16-11 Power [hp]	<b>21-0* Ext. CL Autotuning</b>	22-20 Low Power Auto Set-up	23-10 Maintenance Item
16-12 Motor Voltage	21-00 Closed Loop Type	22-21 Low Power Detection	23-11 Maintenance Action
16-13 Frequency	21-01 PID Performance	22-22 Low Speed Detection	23-12 Maintenance Time Base
16-14 Motor current	21-02 PID Output Change	22-23 No-Flow Function	23-13 Maintenance Time Interval
16-15 Frequency [%]	21-03 Minimum Feedback Level	22-24 No-Flow Delay	23-14 Maintenance Date and Time
16-16 Torque [Nm]	21-04 Maximum Feedback Level	22-26 Dry Pump Function	<b>23-1* Maintenance Reset</b>
16-17 Speed [RPM]	21-09 PID Auto Tuning	22-27 Dry Pump Delay	23-15 Reset Maintenance Word
16-18 Motor Thermal	<b>21-1* Ext. CL 1 Ref/Fb.</b>	22-28 No-Flow Low Speed [RPM]	23-16 Maintenance Text
16-20 Motor Angle	21-10 Ext. 1 Ref/Feedback Unit	<b>22-3* No-Flow Power Tuning</b>	<b>23-5* Energy Log</b>
16-22 Torque [%]	21-11 Ext. 1 Minimum Reference	22-29 No-Flow Low Speed [Hz]	23-50 Energy Log Resolution
<b>16-3* Drive Status</b>	21-12 Ext. 1 Maximum Reference	22-30 No-Flow Power	23-51 Period Start
16-30 DC Link Voltage	21-13 Ext. 1 Reference Source	22-31 Power Correction Factor	23-53 Energy Log
16-32 Brake Energy /s	21-14 Ext. 1 Feedback Source	22-32 Low Speed [RPM]	23-54 Reset Energy Log
16-33 Brake Energy /2 min	21-15 Ext. 1 Setpoint	22-33 Low Speed [Hz]	<b>23-6* Trending</b>
16-34 Heatsink Temp.	21-17 Ext. 1 Reference [Unit]	22-34 Low Speed Power [kW]	23-60 Trend Variable
16-35 Inverter Thermal	21-18 Ext. 1 Feedback [Unit]	22-35 Low Speed Power [HP]	23-61 Continuous Bin Data
16-36 Inv. Nom. Current	21-19 Ext. 1 Output [%]	22-36 High Speed [RPM]	23-62 Timed Bin Data
16-37 Inv. Max. Current	<b>21-2* Ext. CL 1 PID</b>	22-37 High Speed [Hz]	23-63 Timed Period Start
16-38 SL Controller State	21-20 Ext. 1 Normal/Inverse Control	22-38 High Speed Power [kW]	23-64 Timed Period Stop
16-39 Control Card Temp.	21-21 Ext. 1 Proportional Gain	22-39 High Speed Power [HP]	23-65 Minimum Bin Value
16-40 Logging Buffer Full	21-22 Ext. 1 Integral Time	<b>22-4* Sleep Mode</b>	23-66 Reset Continuous Bin Data
16-49 Current Fault Source	21-23 Ext. 1 Differentiation Time	22-40 Minimum Run Time	23-67 Reset Timed Bin Data
<b>16-5* Ref. &amp; Feeds.</b>	21-24 Ext. 1 Diff. Gain Limit	22-41 Minimum Sleep Time	<b>23-8* Payback Counter</b>
16-50 External Reference	<b>21-3* Ext. CL 2 Ref/Fb.</b>	22-42 Wake-up Speed [RPM]	23-80 Power Reference Factor
16-52 Feedback[Unit]	21-30 Ext. 2 Ref/Feedback Unit	22-43 Wake-up Speed [Hz]	23-81 Energy Cost
16-53 Digi Pot Reference	21-31 Ext. 2 Minimum Reference	22-44 Setpoint Boost	23-82 Investment
16-54 Feedback 1 [Unit]	21-32 Ext. 2 Maximum Reference	22-45 Setpoint Boost	23-83 Energy Savings
16-55 Feedback 2 [Unit]	21-33 Ext. 2 Reference Source	<b>22-5* End of Curve</b>	23-84 Cost Savings
16-56 Feedback 3 [Unit]	21-34 Ext. 2 Feedback Source	22-50 End of Curve Function	<b>24-0* Appl. Functions 2</b>
16-58 PID Output [%]	21-35 Ext. 2 Setpoint	22-51 End of Curve Delay	<b>24-1* Drive Bypass</b>
16-59 Adjusted Setpoint	21-37 Ext. 2 Reference [Unit]	<b>22-6* Broken Belt Detection</b>	24-10 Drive Bypass Function
<b>16-6* Inputs &amp; Outputs</b>	21-38 Ext. 2 Feedback [Unit]	22-60 Broken Belt Function	24-11 Drive Bypass Delay Time
16-60 Digital Input	21-39 Ext. 2 Output [%]	<b>21-4* Ext. CL 2 PID</b>	<b>25-0* Cascade Controller</b>
16-61 Terminal 53 Switch Setting	21-40 Ext. 2 Normal/Inverse Control	21-41 Ext. 2 Proportional Gain	<b>25-0* System Settings</b>
16-62 Analog Input 53	<b>20-2* Feedback/Setpoint</b>	21-42 Ext. 2 Integral Time	25-00 Cascade Controller
16-63 Terminal 54 Switch Setting	20-20 Feedback Function		
16-64 Analog Input 54			

25-02	Motor Start	26-20	Terminal X42/3 Low Voltage	27-34	Stage Off Speed [Hz]	29-25	Low Speed [Hz]
25-04	Pump Cycling	26-21	Terminal X42/3 High Voltage	27-4*	Staging Settings	29-26	Low Speed Power [kW]
25-05	Fixed Lead Pump	26-24	Term. X42/3 Low Ref./Feedb. Value	27-40	Auto Tune Staging Settings	29-27	Low Speed Power [HP]
25-06	Number of Pumps	26-25	Term. X42/3 High Ref./Feedb. Value	27-41	Ramp Down Delay	29-28	High Speed [RPM]
25-2*	Bandwidth Settings	26-26	Term. X42/3 Filter Time Constant	27-42	Ramp Up Delay	29-29	High Speed [Hz]
		26-27	Term. X42/3 Live Zero	27-43	Staging Threshold	29-30	High Speed Power [kW]
25-20	Staging Bandwidth	26-3*	Analog Input X42/5	27-44	Destaging Threshold	29-31	High Speed Power [HP]
25-21	Override Bandwidth	26-30	Terminal X42/5 Low Voltage	27-45	Staging Speed [RPM]	29-32	Derag On Ref Bandwidth
25-22	Fixed Speed Bandwidth	26-31	Terminal X42/5 High Voltage	27-46	Staging Speed [Hz]	29-33	Power Derag Limit
25-23	SBW Staging Delay	26-34	Term. X42/5 Low Ref./Feedb. Value	27-47	Destaging Speed [RPM]	30-*	Special Features
25-24	SBW Destaging Delay	26-35	Term. X42/5 High Ref./Feedb. Value	27-48	Destaging Speed [Hz]		
25-25	OBW Time	26-36	Term. X42/5 Filter Time Constant	27-5*	Alternate Settings	30-8*	Compatibility (I)
25-26	Destage At No-Flow	26-37	Term. X42/5 Live Zero	27-50	Automatic Alternation	30-81	Brake Resistor (ohm)
25-27	Stage Function	26-4*	Analog Out X42/7	27-51	Alternation Event	31-*	Bypass Option
25-28	Stage Function Time	26-40	Terminal X42/7 Output	27-52	Alternation Time Interval	31-00	Bypass Mode
25-29	Destage Function	26-41	Terminal X42/7 Min. Scale	27-53	Alternation Timer Value	31-01	Bypass Start Time Delay
25-30	Destage Function Time	26-42	Terminal X42/7 Max. Scale	27-54	Alternation At Time of Day	31-02	Bypass Trip Time Delay
25-4*	Staging Settings	26-43	Terminal X42/7 Bus Control	27-55	Alternation Predefined Time	31-03	Test Mode Activation
		26-44	Terminal X42/7 Timeout Preset	27-56	Alternate Capacity is <	31-10	Bypass Status Word
25-40	Ramp Down Delay	26-5*	Analog Out X42/9	27-58	Run Next Pump Delay	31-11	Bypass Running Hours
25-41	Ramp Up Delay	26-50	Terminal X42/9 Output	27-6*	Digital Inputs	31-19	Remote Bypass Activation
25-42	Staging Threshold	26-51	Terminal X42/9 Min. Scale	27-60	Terminal X66/1 Digital Input	35-*	Sensor Input Option
25-43	Destaging Threshold	26-52	Terminal X42/9 Max. Scale	27-61	Terminal X66/3 Digital Input	35-0*	Temp. Input Mode
25-44	Staging Speed [RPM]	26-53	Terminal X42/9 Bus Control	27-62	Terminal X66/5 Digital Input	35-00	Term. X48/4 Temperature Unit
25-45	Staging Speed [Hz]	26-54	Terminal X42/9 Timeout Preset	27-63	Terminal X66/7 Digital Input	35-01	Term. X48/4 Input Type
25-46	Destaging Speed [RPM]	26-6*	Analog Out X42/11	27-64	Terminal X66/9 Digital Input	35-02	Term. X48/7 Temperature Unit
25-47	Destaging Speed [Hz]			27-65	Terminal X66/11 Digital Input	35-03	Term. X48/7 Input Type
25-5*	Alternation Settings	26-60	Terminal X42/11 Output	27-66	Terminal X66/13 Digital Input	35-04	Term. X48/10 Temperature Unit
		26-61	Terminal X42/11 Min. Scale	27-7*	Connections	35-05	Term. X48/10 Input Type
25-52	Alternation Time Interval	26-62	Terminal X42/11 Max. Scale	27-70	Relay	35-06	Temperature Sensor Alarm Function
25-53	Alternation Timer Value	26-63	Terminal X42/11 Bus Control	27-9*	Readouts	35-1*	Temp. Input X48/4
25-54	Alternation Predefined Time	26-64	Terminal X42/11 Timeout Preset	27-91	Cascade Reference	35-14	Term. X48/4 Filter Time Constant
25-55	Alternate if Load < 50%	27-0*	Control & Status	27-92	% Of Total Capacity	35-15	Term. X48/4 Temp. Monitor
25-56	Staging Mode at Alternation	27-01	Pump Status	27-93	Cascade Option Status	35-16	Term. X48/4 Low Temp. Limit
25-58	Run Next Pump Delay	27-02	Manual Pump Control	27-94	Cascade System Status	35-17	Term. X48/4 High Temp. Limit
25-59	Run on Mains Delay	27-03	Current Runtime Hours	27-95	Advanced Cascade Relay Output [bin]	35-2*	Temp. Input X48/7
25-8*	Status	27-04	Pump Total Lifetime Hours	27-96	Extended Cascade Relay Output [bin]	35-24	Term. X48/7 Filter Time Constant
		25-80	Cascade Status	29-*	Water Application Functions	35-25	Term. X48/7 Temp. Monitor
25-81	Pump Status	27-1*	Configuration	29-0*	Pipe Fill	35-26	Term. X48/7 Low Temp. Limit
25-82	Lead Pump	27-10	Cascade Controller	29-00	Pipe Fill Enable	35-27	Term. X48/7 High Temp. Limit
25-83	Relay Status	27-11	Number Of Drives	29-01	Pipe Fill Speed [RPM]	35-3*	Temp. Input X48/10
25-84	Pump ON Time	27-12	Number Of Pumps	29-02	Pipe Fill Speed [Hz]	35-34	Term. X48/10 Filter Time Constant
25-85	Relay ON Time	27-13	Pump Capacity	29-03	Pipe Fill Speed [Hz]	35-35	Term. X48/10 Temp. Monitor
25-86	Reset Relay Counters	27-16	Runtime Balancing	29-04	Pipe Fill Rate	35-36	Term. X48/10 Low Temp. Limit
25-9*	Service	27-17	Motor Starters	29-05	Filled Setpoint	35-37	Term. X48/10 High Temp. Limit
		27-18	Spin Time for Unused Pumps	29-06	No-Flow Disable Timer	35-4*	Analog Input X48/2
25-90	Pump Interlock	27-19	Reset Current Runtime Hours	29-1*	Deragging Function	35-42	Term. X48/2 Low Current
25-91	Manual Alternation	27-2*	Bandwidth Settings	29-10	Derag Cycles	35-43	Term. X48/2 High Current
26-0*	Analog I/O Mode	27-20	Normal Operating Range	29-11	Derag at Start/Stop	35-44	Term. X48/2 Low Ref./Feedb. Value
26-00	Terminal X42/1 Mode	27-21	Override Limit	29-12	Deragging Run Time	35-45	Term. X48/2 High Ref./Feedb. Value
26-01	Terminal X42/3 Mode	27-22	Fixed Speed Only Operating Range	29-13	Derag Speed [RPM]	35-46	Term. X48/2 Filter Time Constant
26-02	Terminal X42/5 Mode	27-23	Staging Delay	29-14	Derag Speed [Hz]	35-47	Term. X48/2 Live Zero
26-1*	Analog Input X42/1	27-24	Destaging Delay	29-15	Derag Off Delay		
		26-10	Terminal X42/1 Low Voltage	29-2*	Derag Power Tuning		
26-11	Terminal X42/1 High Voltage	27-27	Min Speed Destage Delay	29-20	Derag Power[kW]		
26-14	Term. X42/1 Low Ref./Feedb. Value	27-3*	Staging Speed	29-21	Derag Power[HP]		
26-15	Term. X42/1 High Ref./Feedb. Value	27-30	Auto Tune Staging Speeds	29-22	Derag Power Delay		
26-16	Term. X42/1 Filter Time Constant	27-31	Stage On Speed [RPM]	29-23	Low Speed [RPM]		
26-17	Term. X42/1 Live Zero	27-32	Stage On Speed [Hz]	29-24			
26-2*	Analog Input X42/3	27-33	Stage Off Speed [RPM]				

## 5.6 Remote Programming with MCT 10 Set-up Software

Danfoss has a software program available for developing, storing, and transferring frequency converter programming. The MCT 10 Set-up Software allows the user to connect a PC to the frequency converter and perform live programming rather than using the LCP. Additionally, all frequency converter programming can be done off-line and simply downloaded to the frequency converter. Or the entire frequency converter profile can be loaded onto the PC for back up storage or analysis.

### 5

The USB connector or RS-485 terminal is available for connecting to the frequency converter.

MCT 10 Set-up Software is available for free download at VLT-software website. A CD is also available by requesting part number 130B1000. For further information, see the Operating Instructions.



## 6 Application Set Up Examples

### 6.1 Introduction

#### NOTE

When the optional safe stop feature is used, a jumper wire may be required between terminal 12 (or 13) and terminal 37 for the frequency converter to operate when using factory default programming values.

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values unless otherwise indicated (selected in 0-03 Regional Settings)
- Parameters associated with the terminals and their settings are shown next to the drawings
- Where switch settings for analog terminals A53 or A54 are required, these are also shown

### 6.2 Application Examples

Parameters	
Function	Setting
6-22 Terminal 54 Low Current	4 mA*
6-23 Terminal 54 High Current	20 mA*
6-24 Terminal 54 Low Ref./Feedb. Value	0*
6-25 Terminal 54 High Ref./Feedb. Value	50*
* = Default Value	
Notes/comments:	

Table 6.1 Analog Current Feedback Transducer

Parameters	
Function	Setting
6-20 Terminal 54 Low Voltage	0.07 V*
6-21 Terminal 54 High Voltage	10 V*
6-24 Terminal 54 Low Ref./Feedb. Value	0*
6-25 Terminal 54 High Ref./Feedb. Value	50*
* = Default Value	
Notes/comments:	

Table 6.2 Analog Voltage Feedback Transducer (3-wire)

Parameters	
Function	Setting
6-20 Terminal 54 Low Voltage	0.07 V*
6-21 Terminal 54 High Voltage	10 V*
6-24 Terminal 54 Low Ref./Feedb. Value	0*
6-25 Terminal 54 High Ref./Feedb. Value	50*
* = Default Value	
Notes/comments:	

Table 6.3 Analog Voltage Feedback Transducer (4-wire)

6

		Parameters	
FC		Function	Setting
+24 V 12○			
+24 V 13○			
D IN 18○		6-10 Terminal 53 Low Voltage	0.07 V*
D IN 19○		6-11 Terminal 53 High Voltage	10 V*
COM 20○		6-14 Terminal 53 Low Ref./Feedb. Value	0*
D IN 27○		6-15 Terminal 53 High Ref./Feedb. Value	50*
D IN 29○			
D IN 32○			
D IN 33○			
D IN 37○			
+10 V 50○			
A IN 53○			
A IN 54○			
COM 55○			
A OUT 42○			
COM 39○			
U - I			
A53			

Table 6.4 Analog Speed Reference (Voltage)

## NOTE

Note switch setting for selecting voltage or current.

		Parameters	
FC		Function	Setting
+24 V 12○			
+24 V 13○			
D IN 18○		6-12 Terminal 53 Low Current	4 mA*
D IN 19○		6-13 Terminal 53 High Current	20 mA*
COM 20○		6-14 Terminal 53 Low Ref./Feedb. Value	0*
D IN 27○		6-15 Terminal 53 High Ref./Feedb. Value	50*
D IN 29○			
D IN 32○			
D IN 33○			
D IN 37○			
+10 V 50○			
A IN 53○			
A IN 54○			
COM 55○			
A OUT 42○			
COM 39○			
U - I			
A53			

Table 6.5 Analog Speed Reference (Current)

## NOTE

Note switch setting for selecting voltage or current.

		Parameters	
FC		Function	Setting
+24 V 12○			
+24 V 13○			
D IN 18○		5-10 Terminal 18 Digital Input	[8] Start*
D IN 19○		5-12 Terminal 27 Digital Input	[7] External Interlock
COM 20○			
D IN 27○			
D IN 29○			
D IN 32○			
D IN 33○			
D IN 37○			
+10 V 50○			
A IN 53○			
A IN 54○			
COM 55○			
A OUT 42○			
COM 39○			

Table 6.6 Run/Stop Command with External Interlock

		Parameters	
FC		Function	Setting
+24 V 12○			
+24 V 13○			
D IN 18○		5-10 Terminal 18 Digital Input	[8] Start*
D IN 19○		5-12 Terminal 27 Digital Input	[7] External Interlock
COM 20○			
D IN 27○			
D IN 29○			
D IN 32○			
D IN 33○			
D IN 37○			
+10 V 50○			
A IN 53○			
A IN 54○			
COM 55○			
A OUT 42○			
COM 39○			
R1			
R2			

Table 6.7 Run/Stop Command without External Interlock

Parameters	
Function	Setting
5-11 Terminal 19 Digital Input	[1] Reset
* = Default Value	
Notes/comments:	

Table 6.8 External Alarm Reset

Parameters	
Function	Setting
6-10 Terminal 53 Low Voltage	0.07 V*
6-11 Terminal 53 High Voltage	10 V*
6-14 Terminal 53 Low Ref./Feedb. Value	0*
6-15 Terminal 53 High Ref./Feedb. Value	50*
* = Default Value	
Notes/comments:	

Table 6.9 Speed Reference (using a manual potentiometer)

Parameters	
Function	Setting
5-10 Terminal 18 Digital Input	[8] Start*
5-11 Terminal 19 Digital Input	[52] Run Permissive
5-12 Terminal 27 Digital Input	[7] External Interlock
5-40 Function Relay	[167] Start command act.
* = Default Value	
Notes/comments:	

Table 6.10 Run Permissive

6

Parameters	
Function	Setting
8-30 Protocol	FC*
8-31 Address	1*
8-32 Baud Rate	9600*
* = Default Value	
Notes/comments:	
Select protocol, address and baud rate in the above mentioned parameters.	

Table 6.11 RS-485 Network Connection (N2, Modbus RTU, FC)

## CAUTION

Thermistors must use reinforced or double insulation to meet PELV insulation requirements.

Parameters	
Function	Setting
1-90 Motor Thermal Protection	[2] Thermistor trip
1-93 Thermistor Source	[1] Analog input 53
* = Default Value	
Notes/comments:	
If only a warning is desired, 1-90 Motor Thermal Protection should be set to [1] Thermistor warning.	

Table 6.12 Motor Thermistor

## 7 Status Messages

### 7.1 Status Display

When the frequency converter is in status mode, status messages are generated automatically from within the frequency converter and appear in the bottom line of the display (see *Illustration 7.1*.)

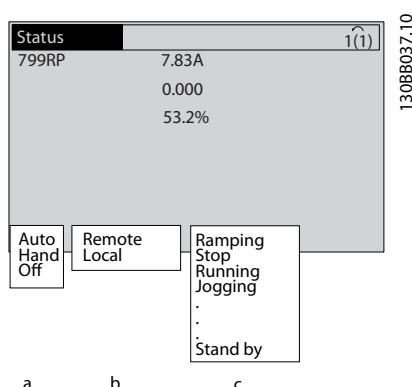


Illustration 7.1 Status Display

- The first part of the status line indicates where the stop/start command originates.
- The second part of the status line indicates where the speed control originates.
- The last part of the status line gives the present frequency converter status. These show the operational mode the frequency converter is in.

### NOTE

In auto/remote mode, the frequency converter requires external commands to execute functions.

### 7.2 Status Message Definitions

The next three tables define the meaning of the status message display words.

	Operation Mode
Off	The frequency converter does not react to any control signal until [Auto On] or [Hand On] is pressed.
Auto On	The frequency converter is controlled from the control terminals and/or the serial communication.
Hand On	The navigation keys on the LCP control the frequency converter. Stop commands, reset, reversing, DC brake, and other signals applied to the control terminals can override local control.

Table 7.1 Status Message Operation Mode

	Reference Site
Remote	The speed reference is given from external signals, serial communication, or internal preset references.
Local	The frequency converter uses [Hand On] control or reference values from the LCP.

Table 7.2 Status Message Reference Site

	Operation Status
AC Brake	AC Brake was selected in 2-10 <i>Brake Function</i> . The AC brake over-magnetizes the motor to achieve a controlled slow down.
AMA finish OK	Automatic motor adaptation (AMA) was carried out successfully.
AMA ready	AMA is ready to start. Press [Hand On] to start.
AMA running	AMA process is in progress.
Braking	The brake chopper is in operation. Generative energy is absorbed by the brake resistor.
Braking max.	The brake chopper is in operation. The power limit for the brake resistor defined in 2-12 <i>Brake Power Limit (kW)</i> has been reached.
Coast	<ul style="list-style-type: none"> <li>Coast inverse was selected as a function for a digital input (parameter group 5-1* <i>Digital Inputs</i>). The corresponding terminal is not connected.</li> <li>Coast activated by serial communication</li> </ul>

	Operation Status
Ctrl. Ramp-down	Control Ramp-down was selected in <i>14-10 Mains Failure</i> . <ul style="list-style-type: none"> <li>The mains voltage is below the value set in <i>14-11 Mains Voltage at Mains Fault</i> at mains fault</li> <li>The frequency converter ramps down the motor using a controlled ramp down</li> </ul>
Current High	The frequency converter output current is above the limit set in <i>4-51 Warning Current High</i> .
Current Low	The frequency converter output current is below the limit set in <i>4-52 Warning Speed Low</i>
DC Hold	DC hold is selected in <i>1-80 Function at Stop</i> and a stop command is active. The motor is held by a DC current set in <i>2-00 DC Hold/ Preheat Current</i> .
DC Stop	The motor is held with a DC current ( <i>2-01 DC Brake Current</i> ) for a specified time ( <i>2-02 DC Braking Time</i> ). <ul style="list-style-type: none"> <li>DC Brake is activated in <i>2-03 DC Brake Cut In Speed [RPM]</i> and a Stop command is active.</li> <li>DC Brake (inverse) is selected as a function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal is not active.</li> <li>The DC Brake is activated via serial communication.</li> </ul>
Feedback high	The sum of all active feedback is above the feedback limit set in <i>4-57 Warning Feedback High</i> .
Feedback low	The sum of all active feedback is below the feedback limit set in <i>4-56 Warning Feedback Low</i> .
Freeze output	The remote reference is active, which holds the present speed. <ul style="list-style-type: none"> <li>Freeze output was selected as a function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal is active. Speed control is only possible via the terminal functions Speed Up and Speed Down.</li> <li>Hold ramp is activated via serial communication.</li> </ul>
Freeze output request	A freeze output command has been given, but until a run permissive signal is received, the motor remains stopped.

	Operation Status
Freeze ref.	<i>Freeze Reference</i> was chosen as a function for a digital input (parameter group <i>5-1* Digital Inputs</i> ). The corresponding terminal is active. The frequency converter saves the actual reference. Changing the reference is now only possible via terminal functions Speed Up and Speed Down.
Jog request	A jog command has been given, but until a run permissive signal is received via a digital input, the motor is stopped
Jogging	The motor is running as programmed in <i>3-19 Jog Speed [RPM]</i> . <ul style="list-style-type: none"> <li><i>Jog</i> was selected as function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal (for example, Terminal 29) is active.</li> <li>The Jog function is activated via the serial communication.</li> <li>The Jog function was selected as a reaction for a monitoring function (for example, No signal). The monitoring function is active.</li> </ul>
Motor check	In <i>1-80 Function at Stop</i> , <i>Motor Check</i> was selected. A stop command is active. To ensure that a motor is connected to the frequency converter, a permanent test current is applied to the motor.
OVC control	<i>Overvoltage</i> control was activated in <i>2-17 Overvoltage Control</i> . The connected motor is supplying the frequency converter with generative energy. The overvoltage control adjusts the V/Hz ratio to run the motor in controlled mode and to prevent the frequency converter from tripping.
PowerUnit Off	(For frequency converters with an external 24 V power supply installed only.) Mains supply to the frequency converter is removed, but the control card is supplied by the external 24 V.
Protection md	Protection mode is active. The unit has detected a critical status (an overcurrent or overvoltage). <ul style="list-style-type: none"> <li>To avoid tripping, switching frequency is reduced to 4 kHz.</li> <li>If possible, protection mode ends after approximately 10 s</li> <li>Protection mode can be restricted in <i>14-26 Trip Delay at Inverter Fault</i></li> </ul>

	<b>Operation Status</b>
QStop	The motor is decelerating using 3-81 <i>Quick Stop Ramp Time</i> . <ul style="list-style-type: none"> <li>Quick stop inverse was chosen as a function for a digital input (parameter group 5-1*). The corresponding terminal is not active.</li> <li>The quick stop function was activated via serial communication.</li> </ul>
Ramping	The motor is accelerating/decelerating using the active Ramp Up/Down. The reference, a limit value or a standstill is not yet reached.
Ref. high	The sum of all active references is above the reference limit set in 4-55 <i>Warning Reference High</i> .
Ref. low	The sum of all active references is below the reference limit set in 4-54 <i>Warning Reference Low</i> .
Run on ref.	The frequency converter is running in the reference range. The feedback value matches the setpoint value.
Run request	A start command has been given, but the motor is stopped until a run permissive signal is received via digital input.
Running	The frequency converter runs the motor.
Sleep Mode	The energy saving function is enabled. The motor has stopped, but will restart automatically when required.
Speed high	Motor speed is above the value set in 4-53 <i>Warning Speed High</i> .
Speed low	Motor speed is below the value set in 4-52 <i>Warning Speed Low</i> .
Standby	In Auto On Auto mode, the frequency converter starts the motor with a start signal from a digital input or serial communication.
Start delay	In 1-71 <i>Start Delay</i> , a delay starting time was set. A start command is activated and the motor will start after the start delay time expires.
Start fwd/rev	Start forward and start reverse were selected as functions for two different digital inputs (parameter group 5-1* <i>Digital Inputs</i> ). The motor starts in forward or reverse depending on which corresponding terminal is activated.
Stop	The frequency converter has received a stop command from the LCP, digital input or serial communication.
Trip	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, the frequency converter can be reset manually by pressing [Reset] or remotely by control terminals or serial communication.

	<b>Operation Status</b>
Trip lock	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, power must be cycled to the frequency converter. The frequency converter can then be reset manually by pressing [Reset] or remotely by control terminals or serial communication.

**Table 7.3 Status Message Operation Status**

## 8 Warnings and Alarms

### 8.1 System Monitoring

The frequency converter monitors the condition of its input power, output, and motor factors as well as other system performance indicators. A warning or alarm may not necessarily indicate a problem internal to the frequency converter itself. In many cases, it indicates failure conditions from input voltage, motor load or temperature, external signals, or other areas monitored by the frequency converter's internal logic. Be sure to investigate those areas exterior to the frequency converter as indicated in the alarm or warning.

### 8.2 Warning and Alarm Types

#### Warnings

A warning is issued when an alarm condition is impending or when an abnormal operating condition is present and may result in the frequency converter issuing an alarm. A warning clears by itself when the abnormal condition is removed.

#### Alarms

##### Trip

An alarm is issued when the frequency converter is tripped, that is, the frequency converter suspends operation to prevent frequency converter or system damage. The motor will coast to a stop. The frequency converter logic will continue to operate and monitor the frequency converter status. After the fault condition is remedied, the frequency converter can be reset. It will then be ready to start operation again.

A trip can be reset in any of 4 ways

- Press [Reset] on the LCP
- Digital reset input command
- Serial communication reset input command
- Auto reset

An alarm that causes the frequency converter to trip-lock requires that input power is cycled. The motor will coast to a stop. The frequency converter logic will continue to operate and monitor the frequency converter status. Remove input power to the frequency converter and correct the cause of the fault, then restore power. This action puts the frequency converter into a trip condition as described above and may be reset in any of those 4 ways.

### 8.3 Warning and Alarm Displays

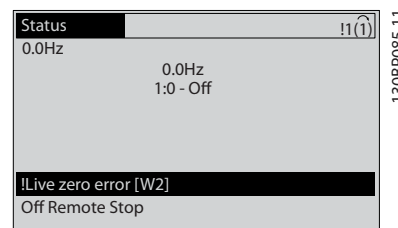


Illustration 8.1 Warning Display

An alarm or trip-lock alarm will flash on display along with the alarm number.

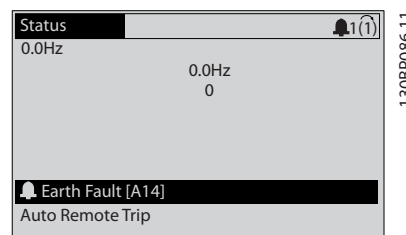


Illustration 8.2 Alarm Display

In addition to the text and alarm code on the frequency converter LCP, there are three status indicator lights.

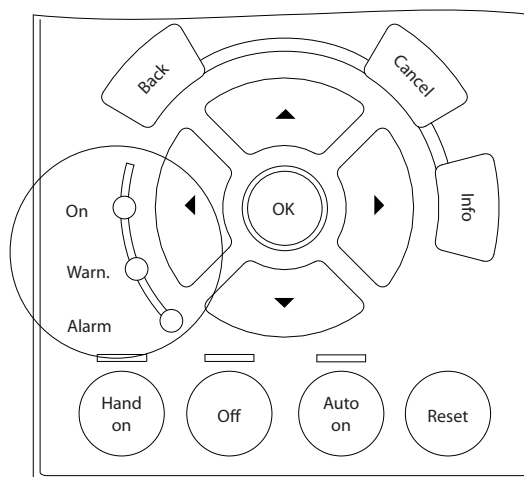


Illustration 8.3 Status Indicator Lights



	Warning LED	Alarm LED
Warning	On	Off
Alarm	Off	On (Flashing)
Trip-Lock	On	On (Flashing)

**Table 8.1 Status Indicator Lights Explanations**

## 8.4 Warning and Alarm Definitions

# CAUTION

Before applying power to the unit, inspect the entire installation as detailed in *Table 3.1*. Check mark those items when completed.

Inspect for	Description	<input checked="" type="checkbox"/>
Auxiliary equipment	<ul style="list-style-type: none"> <li>Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that may reside on the input power side of the frequency converter or output side to the motor. Ensure that they are ready for full speed operation.</li> <li>Check function and installation of any sensors used for feedback to the frequency converter</li> <li>Remove power factor correction caps on motor(s), if present</li> </ul>	
Cable routing	<ul style="list-style-type: none"> <li>Ensure that input power, motor wiring, and control wiring are separated or in three separate metallic conduits for high frequency noise isolation</li> </ul>	
Control wiring	<ul style="list-style-type: none"> <li>Check for broken or damaged wires and loose connections</li> <li>Check that control wiring is isolated from power and motor wiring for noise immunity</li> <li>Check the voltage source of the signals, if necessary</li> <li>The use of shielded cable or twisted pair is recommended. Ensure that the shield is terminated correctly</li> </ul>	
Cooling clearance	<ul style="list-style-type: none"> <li>Measure that top and bottom clearance is adequate to ensure proper air flow for cooling</li> </ul>	
EMC considerations	<ul style="list-style-type: none"> <li>Check for proper installation regarding electromagnetic compatibility</li> </ul>	
Environmental considerations	<ul style="list-style-type: none"> <li>See equipment label for the maximum ambient operating temperature limits</li> <li>Humidity levels must be 5-95% non-condensing</li> </ul>	
Fusing and circuit breakers	<ul style="list-style-type: none"> <li>Check for proper fusing or circuit breakers</li> <li>Check that all fuses are inserted firmly and in operational condition and that all circuit breakers are in the open position</li> </ul>	
Earthing (Grounding)	<ul style="list-style-type: none"> <li>The unit requires an earth wire (ground wire) from its chassis to the building earth (ground)</li> <li>Check for good earth connections (ground connections) that are tight and free of oxidation</li> <li>Earthing (grounding) to conduit or mounting the back panel to a metal surface is not a suitable earth (ground)</li> </ul>	
Input and output power wiring	<ul style="list-style-type: none"> <li>Check for loose connections</li> <li>Check that motor and mains are in separate conduit or separated screened cables</li> </ul>	
Panel interior	<ul style="list-style-type: none"> <li>Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion</li> </ul>	
Switches	<ul style="list-style-type: none"> <li>Ensure that all switch and disconnect settings are in the proper positions</li> </ul>	
Vibration	<ul style="list-style-type: none"> <li>Check that the unit is mounted solidly or that shock mounts are used, as necessary</li> <li>Check for an unusual amount of vibration</li> </ul>	

**Table 8.2 Start Up Check List**

## 9 Basic Troubleshooting

### 9.1 Start Up and Operation

Symptom	Possible cause	Test	Solution
Display dark/No function	Missing input power	See <i>Table 3.1</i>	Check the input power source
	Missing or open fuses or circuit breaker tripped	See open fuses and tripped circuit breaker in this table for possible causes	Follow the recommendations provided
	No power to the LCP	Check the LCP cable for proper connection or damage	Replace the faulty LCP or connection cable
	Shortcut on control voltage (terminal 12 or 50) or at control terminals	Check the 24 V control voltage supply for terminals 12/13 to 20-39 or 10 V supply for terminals 50 to 55	Wire the terminals properly
	Wrong LCP (LCP from VLT® 2800 or 5000/6000/8000/ FCD or FCM)		Use only LCP 101 (P/N 130B1124) or LCP 102 (P/N 130B1107)
	Wrong contrast setting		Press [Status] + [▲]/[▼] to adjust the contrast
	Display (LCP) is defective	Test using a different LCP	Replace the faulty LCP or connection cable
	Internal voltage supply fault or SMPS is defective		Contact supplier
Intermittent display	Overloaded power supply (SMPS) due to improper control wiring or a fault within the frequency converter	To rule out a problem in the control wiring, disconnect all control wiring by removing the terminal blocks.	If the display stays lit, then the problem is in the control wiring. Check the wiring for shorts or incorrect connections. If the display continues to cut out, follow the procedure for display dark.
Motor not running	Service switch open or missing motor connection	Check if the motor is connected and the connection is not interrupted (by a service switch or other device).	Connect the motor and check the service switch
	No mains power with 24 V DC option card	If the display is functioning but no output, check that mains power is applied to the frequency converter.	Apply mains power to run the unit
	LCP Stop	Check if [Off] has been pressed	Press [Auto On] or [Hand On] (depending on operation mode) to run the motor
	Missing start signal (Standby)	Check 5-10 <i>Terminal 18 Digital Input</i> for correct setting for terminal 18 (use default setting)	Apply a valid start signal to start the motor
	Motor coast signal active (Coasting)	Check 5-12 <i>Coast inv.</i> for correct setting for terminal 27 (use default setting)..	Apply 24 V on terminal 27 or program this terminal to <i>No operation</i>
	Wrong reference signal source	Check reference signal: Local, remote or bus reference? Preset reference active? Terminal connection correct? Scaling of terminals correct? Reference signal available?	Program correct settings. Check 3-13 <i>Reference Site</i> . Set preset reference active in parameter group 3-1* <i>References</i> . Check for correct wiring. Check scaling of terminals. Check reference signal.

Symptom	Possible cause	Test	Solution
Motor running in wrong direction	Motor rotation limit	Check that 4-10 <i>Motor Speed Direction</i> is programmed correctly.	Program correct settings
	Active reversing signal	Check if a reversing command is programmed for the terminal in parameter group 5-1* <i>Digital inputs..</i>	Deactivate reversing signal
	Wrong motor phase connection		See in this manual
Motor is not reaching maximum speed	Frequency limits set wrong	Check output limits in 4-13 <i>Motor Speed High Limit [RPM]</i> , 4-14 <i>Motor Speed High Limit [Hz]</i> and 4-19 <i>Max Output Frequency</i> .	Program correct limits
	Reference input signal not scaled correctly	Check reference input signal scaling in 6-0* <i>Analog I/O Mode</i> and parameter group 3-1* <i>References</i> . Reference limits in parameter group 3-0* <i>Reference Limit</i> .	Program correct settings
Motor speed unstable	Possible incorrect parameter settings	Check the settings of all motor parameters, including all motor compensation settings. For closed loop operation, check PID settings.	Check settings in parameter group 1-6* <i>Analog I/O mode</i> . For closed loop operation, check settings in parameter group 20-0* <i>Feedback..</i>
Motor runs rough	Possible over-magnetization	Check for incorrect motor settings in all motor parameters	Check motor settings in parameter groups 1-2* <i>Motor Data</i> , 1-3* <i>Adv Motor Data</i> , and 1-5* <i>Load Indep. Setting</i> .
Motor will not brake	Possible incorrect settings in the brake parameters. Possible too short ramp down times	Check brake parameters. Check ramp time settings	Check parameter group 2-0* <i>DC Brake</i> and 3-0* <i>Reference Limits</i> .
Open power fuses or circuit breaker trip	Phase to phase short	Motor or panel has a short phase to phase. Check motor and panel phase for shorts	Eliminate any shorts detected
	Motor overload	Motor is overloaded for the application	Perform startup test and verify motor current is within specifications. If motor current is exceeding nameplate full load current, motor may run only with reduced load. Review the specifications for the application.
	Loose connections	Perform pre-startup check for loose connections	Tighten loose connections
Mains current imbalance greater than 3%	Problem with mains power (See <i>Alarm 4 Mains phase loss</i> description)	Rotate input power leads into the frequency converter one position: A to B, B to C, C to A.	If imbalanced leg follows the wire, it is a power problem. Check mains power supply.
	Problem with the frequency converter	Rotate input power leads into the frequency converter one position: A to B, B to C, C to A.	If imbalance leg stays on same input terminal, it is a problem with the unit. Contact the supplier.
Motor current imbalance greater than 3%	Problem with motor or motor wiring	Rotate output motor leads one position: U to V, V to W, W to U.	If imbalanced leg follows the wire, the problem is in the motor or motor wiring. Check motor and motor wiring.
	Problem with the frequency converters	Rotate output motor leads one position: U to V, V to W, W to U.	If imbalance leg stays on same output terminal, it is a problem with the unit. Contact the supplier.

Symptom	Possible cause	Test	Solution
Acoustic noise or vibration	Resonances	Bypass critical frequencies by using parameters in parameter group 4-6* <i>Speed Bypass</i>	Check if noise and/or vibration have been reduced to an acceptable limit
		Turn off over-modulation in 14-03 <i>Overmodulation</i>	
		Change switching pattern and frequency in parameter group 14-0* <i>Inverter Switching</i>	
		Increase Resonance Dampening in 1-64 <i>Resonance Dampening</i>	

Table 9.1 Troubleshooting

## 10 Specifications

### 10.1 Power-dependent Specifications

#### 10.1.1 Mains Supply 1 x 200-240 V AC

Mains Supply 1 x 200-240 V AC - Normal overload 110% for 1 minute									
Frequency converter	P1K1	P1K5	P2K2	P3K0	P3K7	P5K5	P7K5	P15K	P22K
Typical Shaft Output [kW]	1.1	1.5	2.2	3.0	3.7	5.5	7.5	15	22
Typical Shaft Output [HP] at 240 V	1.5	2.0	2.9	4.0	4.9	7.5	10	20	30
IP20/Chassis	A3	-	-	-	-	-	-	-	-
IP21/NEMA 1	-	B1	B1	B1	B1	B1	B2	C1	C2
IP55/NEMA 12	A5	B1	B1	B1	B1	B1	B2	C1	C2
IP66	A5	B1	B1	B1	B1	B1	B2	C1	C2
Output current									
Continuous (3 x 200-240 V) [A]	6.6	7.5	10.6	12.5	16.7	24.2	30.8	59.4	88
Intermittent(3 x 200-240 V) [A]	7.3	8.3	11.7	13.8	18.4	26.6	33.4	65.3	96.8
Continuous kVA (208 V AC) [kVA]						5.00	6.40	12.27	18.30
Max. input current									
Continuous (1 x 200-240 V) [A]	12.5	15	20.5	24	32	46	59	111	172
Intermittent (1 x 200-240 V) [A]	13.8	16.5	22.6	26.4	35.2	50.6	64.9	122.1	189.2
Max. pre-fuses <sup>1)</sup> [A]	20	30	40	40	60	80	100	150	200
Additional specifications									
Estimated power loss at rated max. load [W] <sup>4)</sup>	44	30	44	60	74	110	150	300	440
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	[0.2-4]/(4-10)					[10]/(7)	[35]/(2)	[50]/(1)/0	[95]/(4)/0
Weight enclosure IP20 [kg]	4.9	-	-	-	-	-	-	-	-
Weight enclosure IP21 [kg]	-	23	23	23	23	23	27	45	65
Weight enclosure IP55 [kg]	-	23	23	23	23	23	27	45	65
Weight enclosure IP66 [kg]	-	23	23	23	23	23	27	45	65
Efficiency <sup>3)</sup>	0.968	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98

Table 10.1 Mains Supply 1 x 200-240 V AC - Normal Overload 110% for 1 Minute

## 10.1.2 Mains Supply 3 x 200-240 V AC

<b>Mains Supply 3 x 200-240 V AC - Normal overload 110% for 1 minute</b>									
Frequency converter	<b>PK25</b>	<b>PK37</b>	<b>PK55</b>	<b>PK75</b>	<b>P1K1</b>	<b>P1K5</b>	<b>P2K2</b>	<b>P3K0</b>	<b>P3K7</b>
Typical Shaft Output [kW]	<b>0.25</b>	<b>0.37</b>	<b>0.55</b>	<b>0.75</b>	<b>1.1</b>	<b>1.5</b>	<b>2.2</b>	<b>3</b>	<b>3.7</b>
Typical Shaft Output [HP] at 208 V	0.25	0.37	0.55	0.75	1.5	2.0	2.9	4.0	4.9
IP20/NEMA Chassis	A2	A2	A2	A2	A2	A2	A2	A3	A3
IP21/NEMA 1	A2	A2	A2	A2	A2	A2	A2	A3	A3
IP55/NEMA 12	A5	A5	A5	A5	A5	A5	A5	A5	A5
IP66	A5	A5	A5	A5	A5	A5	A5	A5	A5
<b>Output current</b>									
Continuous (3 x 200-240 V) [A]	1.8	2.4	3.5	4.6	6.6	7.5	10.6	12.5	16.7
Intermittent (3 x 200-240 V) [A]	1.98	2.64	3.85	5.06	7.26	8.3	11.7	13.8	18.4
Continuous kVA (208 V AC) [kVA]	0.65	0.86	1.26	1.66	2.38	2.70	3.82	4.50	6.00
<b>Max. input current</b>									
Continuous (3 x 200-240 V) [A]	1.6	2.2	3.2	4.1	5.9	6.8	9.5	11.3	15.0
Intermittent (3 x 200-240 V) [A]	1.7	2.42	3.52	4.51	6.5	7.5	10.5	12.4	16.5
Max. pre-fuses <sup>1)</sup> [A]	10	10	10	10	20	20	20	32	32
<b>Additional specifications</b>									
Estimated power loss at rated max. load [W] <sup>4)</sup>	21	29	42	54	63	82	116	155	185
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	[0.2-4]/(4-10)								
Weight enclosure IP20 [kg]	4.9	4.9	4.9	4.9	4.9	4.9	4.9	6.6	6.6
Weight enclosure IP21 [kg]	5.5	5.5	5.5	5.5	5.5	5.5	5.5	7.5	7.5
Weight enclosure IP55 [kg]	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5
Weight enclosure IP66 [kg]	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5
Efficiency <sup>3)</sup>	0.94	0.94	0.95	0.95	0.96	0.96	0.96	0.96	0.96

Table 10.2 Mains Supply 3 x 200-240 V AC - Normal Overload 110% for 1 Minute

## Specifications

## VLT® AQUA Drive Operating Instructions

Mains supply 3 x 200-240 V AC - Normal overload 110% for 1 minute									
Frequency converter	<b>P5K5</b>	<b>P7K5</b>	<b>P11K</b>	<b>P15K</b>	<b>P18K</b>	<b>P22K</b>	<b>P30K</b>	<b>P37K</b>	<b>P45K</b>
Typical Shaft Output [kW]	<b>5.5</b>	<b>7.5</b>	<b>11</b>	<b>15</b>	<b>18.5</b>	<b>22</b>	<b>30</b>	<b>37</b>	<b>45</b>
Typical Shaft Output [HP] at 208 V	7.5	10	15	20	25	30	40	50	60
IP20/NEMA Chassis*	B3	B3	B3	B4	B4	C3	C3	C4	C4
IP21/NEMA 1	B1	B1	B1	B2	C1	C1	C1	C2	C2
IP55/NEMA 12	B1	B1	B1	B2	C1	C1	C1	C2	C2
IP66	B1	B1	B1	B2	C1	C1	C1	C2	C2
Output current									
Continuous (3 x 200-240 V) [A]	24.2	30.8	46.2	59.4	74.8	88.0	115	143	170
Intermittent (3 x 200-240 V) [A]	26.6	33.9	50.8	65.3	82.3	96.8	127	157	187
Continuous kVA (208 V AC) [kVA]	8.7	11.1	16.6	21.4	26.9	31.7	41.4	51.5	61.2
Max. input current									
Continuous (3 x 200-240 V) [A]	22.0	28.0	42.0	54.0	68.0	80.0	104.0	130.0	154.0
Intermittent (3 x 200-240 V) [A]	24.2	30.8	46.2	59.4	74.8	88.0	114.0	143.0	169.0
Max. pre-fuses <sup>1)</sup> [A]	63	63	63	80	125	125	160	200	250
Additional specifications									
Estimated power loss at rated max. load [W] <sup>4)</sup>	269	310	447	602	737	845	1140	1353	1636
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	[10]/(7)			[35]/(2)	[50]/(1/0)			[95]/(4/0)	[120]/(250 MCM)
Weight enclosure IP20 [kg]	12	12	12	23.5	23.5	35	35	50	50
Weight enclosure IP21 [kg]	23	23	23	27	45	45	65	65	65
Weight enclosure IP55 [kg]	23	23	23	27	45	45	65	65	65
Weight enclosure IP66 [kg]	23	23	23	27	45	45	65	65	65
Efficiency <sup>3)</sup>	0.96	0.96	0.96	0.96	0.96	0.97	0.97	0.97	0.97

**Table 10.3 Mains supply 3 x 200-240 V AC - Normal Overload 110% for 1 Minute**

\* B3+4 and C3+4 may be converted to IP21 using a conversion kit  
(contact Danfoss)

### 10.1.3 Mains Supply 1 x 380-480 V AC

Mains Supply 1 x 380 V AC - Normal overload 110% for 1 minute				
Frequency converter	<b>P7K5</b>	<b>P11K</b>	<b>P18K</b>	<b>P37K</b>
Typical Shaft Output [kW]	<b>7.5</b>	<b>11</b>	<b>18.5</b>	<b>37</b>
Typical Shaft Output [HP] at 460 V	10	15	25	50
IP21/NEMA 1	B1	B2	C1	C2
IP55/NEMA 12	B1	B2	C1	C2
IP66	B1	B2	C1	C2
Output current				
Continuous (3 x 380-440 V) [A]	16	24	37.5	73
Intermittent (3 x 380-440 V) [A]	17.6	26.4	41.2	80.3
Continuous (3 x 441-480 V) [A]	14.5	21	34	65
Intermittent (3 x 441-480 V) [A]	15.4	23.1	37.4	71.5
Continuous kVA (400 V AC) [kVA]	11.0	16.6	26	50.6
Continuous kVA (460 V AC) [kVA]	11.6	16.7	27.1	51.8
Max. input current				
Continuous (1 x 380-440 V) [A]	33	48	78	151
Intermittent (1 x 380-440 V) [A]	36	53	85.8	166
Continuous (1 x 441-480 V) [A]	30	41	72	135
Intermittent (1 x 441-480 V) [A]	33	46	79.2	148
Max. pre-fuses <sup>1)</sup> [A]	63	80	160	250
Additional specifications				
Estimated power loss at rated max. load [W] <sup>4)</sup>	300	440	740	1480
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	[10]/(7)	[35]/(2)	[50]/(1/0)	[120]/(4/0)
Weight enclosure IP21 [kg]	23	27	45	65
Weight enclosure IP55 [kg]	23	27	45	65
Weight enclosure IP66 [kg]	23	27	45	65
Efficiency <sup>3)</sup>	0.96	0.96	0.96	0.96

Table 10.4 Mains Supply 1 x 380 V AC - Normal Overload 110% for 1 Minute



## 10.1.4 Mains Supply 3 x 380-480 V AC

Mains Supply 3 x 380-480 V AC - Normal overload 110% for 1 minute										
Frequency converter	PK37	PK55	PK75	P1K1	P1K5	P2K2	P3K0	P4K0	P5K5	P7K5
Typical Shaft Output [kW]	0.37	0.55	0.75	1.1	1.5	2.2	3	4	5.5	7.5
Typical Shaft Output [HP] at 460 V	0.5	0.75	1.0	1.5	2.0	2.9	4.0	5.3	7.5	10
IP20/NEMA Chassis	A2	A2	A2	A2	A2	A2	A2	A2	A3	A3
IP21/NEMA 1										
IP55/NEMA 12	A5	A5	A5	A5	A5	A5	A5	A5	A5	A5
IP66	A5	A5	A5	A5	A5	A5	A5	A5	AA	A5
Output current										
Continuous (3 x 380-440 V) [A]	1.3	1.8	2.4	3	4.1	5.6	7.2	10	13	16
Intermittent (3 x 380-440 V) [A]	1.43	1.98	2.64	3.3	4.5	6.2	7.9	11	14.3	17.6
Continuous (3 x 441-480 V) [A]	1.2	1.6	2.1	2.7	3.4	4.8	6.3	8.2	11	14.5
Intermittent (3 x 441-480 V) [A]	1.32	1.76	2.31	3.0	3.7	5.3	6.9	9.0	12.1	15.4
Continuous kVA (400 V AC) [kVA]	0.9	1.3	1.7	2.1	2.8	3.9	5.0	6.9	9.0	11.0
Continuous kVA (460 V AC) [kVA]	0.9	1.3	1.7	2.4	2.7	3.8	5.0	6.5	8.8	11.6
Max. input current										
Continuous (3 x 380-440 V) [A]	1.2	1.6	2.2	2.7	3.7	5.0	6.5	9.0	11.7	14.4
Intermittent (3 x 380-440 V) [A]	1.32	1.76	2.42	3.0	4.1	5.5	7.2	9.9	12.9	15.8
Continuous (3 x 441-480 V) [A]	1.0	1.4	1.9	2.7	3.1	4.3	5.7	7.4	9.9	13.0
Intermittent (3 x 441-480 V) [A]	1.1	1.54	2.09	3.0	3.4	4.7	6.3	8.1	10.9	14.3
Max. pre-fuses <sup>1)</sup> [A]	10	10	10	10	10	20	20	20	30	30
Additional specifications										
Estimated power loss at rated max. load [W] <sup>4)</sup>	35	42	46	58	62	88	116	124	187	255
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	[4]/(10)									
Weight enclosure IP20 [kg]	4.7	4.7	4.8	4.8	4.9	4.9	4.9	4.9	6.6	6.6
Weight enclosure IP21 [kg]										
Weight enclosure IP55 [kg]	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	14.2	14.2
Weight enclosure IP66 [kg]	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	14.2	14.2
Efficiency <sup>3)</sup>	0.93	0.95	0.96	0.96	0.97	0.97	0.97	0.97	0.97	0.97

Table 10.5 Mains Supply 3 x 380-480 V AC - Normal Overload 110% for 1 Minute

# Specifications

## VLT® AQUA Drive Operating Instructions

Mains Supply 3 x 380 - 480V AC - Normal overload 110% for 1 minute										
Frequency converter	P11K	P15K	P18K	P22K	P30K	P37K	P45K	P55K	P75K	P90K
Typical Shaft Output [kW]	11	15	18.5	22	30	37	45	55	75	90
Typical Shaft Output [HP] at 460 V	15	20	25	30	40	50	60	75	100	125
IP20/NEMA Chassis *	B3	B3	B3	B4	B4	B4	C3	C3	C4	C4
IP21/NEMA 1	B1	B1	B1	B2	B2	C1	C1	C1	C2	C2
IP55/NEMA 12	B1	B1	B1	B2	B2	C1	C1	C1	C2	C2
IP66	B1	B1	B1	B2	B2	C1	C1	C1	C2	C2
Output current										
Continuous (3 x 380-440 V) [A]	24	32	37.5	44	61	73	90	106	147	177
Intermittent (3 x 380-440 V) [A]	26.4	35.2	41.3	48.4	67.1	80.3	99	117	162	195
Continuous (3 x 441-480 V) [A]	21	27	34	40	52	65	80	105	130	160
Intermittent (3 x 441-480 V) [A]	23.1	29.7	37.4	44	61.6	71.5	88	116	143	176
Continuous kVA (400 V AC) [kVA]	16.6	22.2	26	30.5	42.3	50.6	62.4	73.4	102	123
Continuous kVA (460 V AC) [kVA]	16.7	21.5	27.1	31.9	41.4	51.8	63.7	83.7	104	128
Max. input current										
Continuous (3 x 380-440 V) [A]	22	29	34	40	55	66	82	96	133	161
Intermittent (3 x 380-440 V) [A]	24.2	31.9	37.4	44	60.5	72.6	90.2	106	146	177
Continuous (3 x 441-480 V) [A]	19	25	31	36	47	59	73	95	118	145
Intermittent (3 x 441-480 V) [A]	20.9	27.5	34.1	39.6	51.7	64.9	80.3	105	130	160
Max. pre-fuses <sup>1)</sup> [A]	63	63	63	63	80	100	125	160	250	250
Additional specifications										
Estimated power loss at rated max. load [W] <sup>4)</sup>	278	392	465	525	698	739	843	1083	1384	1474
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	[10]/(7)			[35]/(2)		[50]/(1/0)			[120]/(4/0)	[120]/(4/0)
Weight enclosure IP20 [kg]	12	12	12	23.5	23.5	23.5	35	35	50	50
Weight enclosure IP21 [kg]	23	23	23	27	27	45	45	45	65	65
Weight enclosure IP55 [kg]	23	23	23	27	27	45	45	45	65	65
Weight enclosure IP66 [kg]	23	23	23	27	27	45	45	45	65	65
Efficiency <sup>3)</sup>	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.99

**Table 10.6 Mains Supply 3 x 380-480 V AC - Normal Overload 110% for 1 Minute**

\* B3+B4 and C3+C4 may be converted to IP21 using a conversion kit (contact Danfoss)

## 10.1.5 Mains Supply 3 x 525-600 V AC

Normal overload 110% for 1 minute									
Frequency converter	<b>PK75</b>	<b>P1K1</b>	<b>P1K5</b>	<b>P2K2</b>	<b>P3K0</b>	<b>P4K0</b>	<b>P5K5</b>	<b>P7K5</b>	<b>P11K</b>
Typical Shaft Output [kW]	<b>0.75</b>	<b>1.1</b>	<b>1.5</b>	<b>2.2</b>	<b>3</b>	<b>4</b>	<b>5.5</b>	<b>7.5</b>	<b>11</b>
IP20/NEMA Chassis	A2	A2	A2	A2	A2	A2	A3	A3	B3
IP21/NEMA 1	A2	A2	A2	A2	A2	A2	A3	A3	B1
IP55/NEMA 12	A5	A5	A5	A5	A5	A5	A5	A5	B1
IP66	A5	A5	A5	A5	A5	A5	A5	A5	B1
Output current									
Continuous (3 x 525-550 V) [A]	1.8	2.6	2.9	4.1	5.2	6.4	9.5	11.5	19
Intermittent (3 x 525-550 V) [A]		2.9	3.2	4.5	5.7	7.0	10.5	12.7	21
Continuous (3 x 525-600 V) [A]	1.7	2.4	2.7	3.9	4.9	6.1	9.0	11.0	18
Intermittent (3 x 525-600 V) [A]		2.6	3.0	4.3	5.4	6.7	9.9	12.1	20
Continuous kVA (525 V AC) [kVA]	1.7	2.5	2.8	3.9	5.0	6.1	9.0	11.0	18.1
Continuous kVA (575 V AC) [kVA]	1.7	2.4	2.7	3.9	4.9	6.1	9.0	11.0	17.9
Max. input current									
Continuous (3 x 525-600 V) [A]	1.7	2.4	2.7	4.1	5.2	5.8	8.6	10.4	17.2
Intermittent (3 x 525-600 V) [A]		2.7	3.0	4.5	5.7	6.4	9.5	11.5	19
Max. pre-fuses <sup>1)</sup> [A]	10	10	10	20	20	20	32	32	40
Additional specifications									
Estimated power loss at rated max. load [W] <sup>4)</sup>	35	50	65	92	122	145	195	261	225
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	[0.2-4]/(24 - 10)								[16]/(6)
Weight enclosure IP20 [kg]	6.5	6.5	6.5	6.5	6.5	6.5	6.6	6.6	12
Efficiency <sup>4)</sup>	0.97	0.97	0.97	0.97	0.97	0.97	0.97	0.97	0.98

**Table 10.7 Mains Supply 3 x 525-600 V AC**

<sup>1)</sup> For type of fuse see 10.3.2 Fuse Tables

<sup>2)</sup> American Wire Gauge

<sup>3)</sup> Measured using 5 m screened motor cables at rated load and rated frequency

<sup>4)</sup> The typical power loss is at normal load conditions and expected to be within  $\pm 15\%$  (tolerance relates to variety in voltage and cable conditions).

Values are based on a typical motor efficiency (eff2/eff3 border line).

Lower efficiency motors will also add to the power loss in the frequency converter and vice versa.

If the switching frequency is raised from nominal the power losses may rise significantly.

LCP and typical control card power consumptions are included.

Further options and customer load may add up to 30 Watts to the losses. (Though typically only 4 W extra for a fully loaded control card or options for slot A or slot B, each).

Although measurements are made with state of the art equipment, some measurement inaccuracy must be allowed for ( $\pm 5\%$ ).

<sup>5)</sup> Motor and mains cable: 300 MCM/150 mm<sup>2</sup>

## Specifications

## VLT® AQUA Drive Operating Instructions

Normal overload 110% for 1 minute									
Frequency converter	P15K	P18K	P22K	P30K	P37K	P45K	P55K	P75K	P90K
Typical Shaft Output [kW]	15	18.5	22	30	37	45	55	75	90
IP20/NEMA Chassis	B3	B3	B4	B4	B4	C3	C3	C4	C4
IP21/NEMA 1	B1	B1	B2	B2	B2	C1	C1	C2	C2
IP55/NEMA 12	B1	B1	B2	B2	B2	C1	C1	C2	C2
IP66	B1	B1	B2	B2	B2	C1	C1	C2	C2
Output current									
Continuous (3 x 525-550 V) [A]	23	28	36	43	54	65	87	105	137
Intermittent (3 x 525-550 V) [A]	25	31	40	47	59	72	96	116	151
Continuous (3 x 525-600 V) [A]	22	27	34	41	52	62	83	100	131
Intermittent (3 x 525-600 V) [A]	24	30	37	45	57	68	91	110	144
Continuous kVA (525 V AC) [kVA]	21.9	26.7	34.3	41	51.4	61.9	82.9	100	130.5
Continuous kVA (575 V AC) [kVA]	21.9	26.9	33.9	40.8	51.8	61.7	82.7	99.6	130.5
Max. input current									
Continuous (3 x 525-600 V) [A]	20.9	25.4	32.7	39	49	59	78.9	95.3	124.3
Intermittent (3 x 525-600 V) [A]	23	28	36	43	54	65	87	105	137
Max. pre-fuses <sup>1)</sup> [A]	40	50	60	80	100	150	160	225	250
Additional specifications									
Estimated power loss at rated max. load [W] <sup>4)</sup>	285	329	460	560	740	860	890	1020	1130
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>			[35]/(2)			[50]/(1)		[95 <sup>5)</sup> ]/( 3/0)	
Weight enclosure IP20 [kg]	12	12	23.5	23.5	23.5	35	35	50	50
Efficiency <sup>4)</sup>	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98

**Table 10.8 Mains Supply 3 x 525-600 V AC**

<sup>1)</sup> For type of fuse see 10.3.2 Fuse Tables

<sup>2)</sup> American Wire Gauge

<sup>3)</sup> Measured using 5 m screened motor cables at rated load and rated frequency

<sup>4)</sup> The typical power loss is at normal load conditions and expected to be within  $\pm 15\%$  (tolerance relates to variety in voltage and cable conditions).

Values are based on a typical motor efficiency (eff2/eff3 border line). Lower efficiency motors will also add to the power loss in the frequency converter and vice versa.

If the switching frequency is raised from nominal the power losses may rise significantly.

LCP and typical control card power consumptions are included. Further options and customer load may add up to 30 Watts to the losses. (Though typically only 4 W extra for a fully loaded control card or options for slot A or slot B, each).

Although measurements are made with state of the art equipment, some measurement inaccuracy must be allowed for ( $\pm 5\%$ ).

<sup>5)</sup> Motor and mains cable: 300 MCM/150 mm<sup>2</sup>

## 10.1.6 Mains Supply 3 x 525-690 V AC

Mains Supply 3x525-690 V AC							
Frequency Converter	P1K1	P1K5	P2K2	P3K0	P4K0	P5K5	P7K5
Typical Shaft Output [kW]	1.1	1.5	2.2	3	4	5.5	7.5
Enclosure IP20 (only)	A3	A3	A3	A3	A3	A3	A3
<b>Output current</b> High overload 110% for 1 min							
Continuous (3x525-550 V) [A]	2.1	2.7	3.9	4.9	6.1	9	11
Intermittent (3x525-550 V) [A]	2.3	3.0	4.3	5.4	6.7	9.9	12.1
Continuous kVA (3x551-690 V) [A]	1.6	2.2	3.2	4.5	5.5	7.5	10
Intermittent kVA (3x551-690 V) [A]	1.8	2.4	3.5	4.9	6.0	8.2	11
Continuous kVA 525 V AC	1.9	2.6	3.8	5.4	6.6	9	12
Continuous kVA 690 V AC	1.9	2.6	3.8	5.4	6.6	9	12
<b>Max. input current</b>							
Continuous (3x525-550 V) [A]	1.9	2.4	3.5	4.4	5.5	8	10
Intermittent (3x525-550 V) [A]	2.1	2.6	3.8	8.4	6.0	8.8	11
Continuous kVA (3x551-690 V) [A]	1.4	2.0	2.9	4.0	4.9	6.7	9
Intermittent kVA (3x551-690 V) [A]	1.5	2.2	3.2	4.4	5.4	7.4	9.9
<b>Additional specifications</b>							
IP20 max. cable cross section <sup>5)</sup> (mains, motor, brake and load sharing) [mm <sup>2</sup> ]/(AWG)	[0.2-4]/(24-10)						
Estimated power loss at rated max. load [W] <sup>4)</sup>	44	60	88	120	160	220	300
Weight, enclosure IP20 [kg]	6.6	6.6	6.6	6.6	6.6	6.6	6.6
Efficiency <sup>4)</sup>	0.96	0.96	0.96	0.96	0.96	0.96	0.96

Table 10.9 Mains Supply 3 x 525-690 V AC IP20

# Specifications

## VLT® AQUA Drive Operating Instructions

Normal overload 110% for 1 minute										
Frequency converter	<b>P11K</b>	<b>P15K</b>	<b>P18K</b>	<b>P22K</b>	<b>P30K</b>	<b>P37K</b>	<b>P45K</b>	<b>P55K</b>	<b>P75K</b>	<b>P90K</b>
Typical Shaft Output [kW]	<b>11</b>	<b>15</b>	<b>18.5</b>	<b>22</b>	<b>30</b>	<b>37</b>	<b>45</b>	<b>55</b>	<b>75</b>	<b>90</b>
Typical Shaft Output [HP] at 575 V	10	16.4	20.1	24	33	40	50	60	75	100
IP21/NEMA 1	B2	B2	B2	B2	B2	C2	C2	C2	C2	C2
IP55/NEMA 12	B2	B2	B2	B2	B2	C2	C2	C2	C2	C2
Output current										
Continuous (3 x 525-550 V) [A]	14	19	23	28	36	43	54	65	87	105
Intermittent (3 x 525-550 V) [A]	15.4	20.9	25.3	30.8	39.6	47.3	59.4	71.5	95.7	115.5
Continuous (3 x 551-690 V) [A]	13	18	22	27	34	41	52	62	83	100
Intermittent (3 x 551-690 V) [A]	14.3	19.8	24.2	29.7	37.4	45.1	57.2	68.2	91.3	110
Continuous kVA (550 V AC) [kVA]	13.3	18.1	21.9	26.7	34.3	41	51.4	61.9	82.9	100
Continuous kVA (575 V AC) [kVA]	12.9	17.9	21.9	26.9	33.8	40.8	51.8	61.7	82.7	99.6
Continuous kVA (690 V AC) [kVA]	15.5	21.5	26.3	32.3	40.6	49	62.1	74.1	99.2	119.5
Max. input current										
Continuous (3 x 525-690 V) [A]	15	19.5	24	29	36	49	59	71	87	99
Intermittent (3 x 525-690 V) [A]	16.5	21.5	26.4	31.9	39.6	53.9	64.9	78.1	95.7	108.9
Max. pre-fuses <sup>1)</sup> [A]	63	63	63	63	80	100	125	160	160	160
Additional specifications										
Estimated power loss at rated max. load [W] <sup>4)</sup>	201	285	335	375	430	592	720	880	1200	1440
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	[35]/(1/0)					[95]/(4/0)				
Weight IP21 [kg]	27	27	27	27	27	65	65	65	65	65
Weight IP55 [kg]	27	27	27	27	27	65	65	65	65	65
Efficiency <sup>4)</sup>	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98

Table 10.10 Mains Supply 3 x 525-690 V AC IP21-IP55/NEMA 1-NEMA 12

## Specifications

## VLT® AQUA Drive Operating Instructions

Normal overload 110% for 1 minute		
Frequency converter	<b>P45K</b>	<b>P55K</b>
Typical Shaft Output [kW]	<b>45</b>	<b>55</b>
Typical Shaft Output [HP] at 575 V	60	75
IP20/Chassis	C3	C3
Output current		
Continuous (3 x 525-550 V) [A]	54	65
Intermittent (3 x 525-550 V) [A]	59.4	71.5
Continuous (3 x 551-690 V) [A]	52	62
Intermittent (3 x 551-690 V) [A]	57.2	68.2
Continuous kVA (550 V AC) [kVA]	51.4	62
Continuous kVA (575 V AC) [kVA]	62.2	74.1
Continuous kVA (690 V AC) [kVA]	62.2	74.1
Max. input current		
Continuous (3 x 525-550 V) [A]	52	63
Intermittent (3 x 525-550 V) [A]	57.2	69.3
Continuous (3 x 551-690 V) [A]	50	60
Intermittent (3 x 551-690 V) [A]	55	66
Max. pre-fuses <sup>1)</sup> [A]	100	125
Additional specifications		
Estimated power loss at rated max. load [W] <sup>4)</sup>	592	720
Max. cable size (mains, motor, brake) [mm <sup>2</sup> ]/(AWG) <sup>2)</sup>	50 (1)	
Weight IP20 [kg]	35	35
Efficiency <sup>4)</sup>	0.98	0.98

**Table 10.11 Mains Supply 3 x 525-690 V IP20**

<sup>1)</sup> For type of fuse see 10.3.2 Fuse Tables

<sup>2)</sup> American Wire Gauge

<sup>3)</sup> Measured using 5 m screened motor cables at rated load and rated frequency

<sup>4)</sup> The typical power loss is at normal load conditions and expected to be within  $\pm 15\%$  (tolerance relates to variety in voltage and cable conditions).

Values are based on a typical motor efficiency (eff2/eff3 border line).

Lower efficiency motors will also add to the power loss in the frequency converter and vice versa.

If the switching frequency is raised from nominal the power losses may rise significantly.

LCP and typical control card power consumptions are included.

Further options and customer load may add up to 30 W to the losses. (Though typically only 4 W extra for a fully loaded control card or options for slot A or slot B, each).

Although measurements are made with state of the art equipment, some measurement inaccuracy must be allowed for ( $\pm 5\%$ ).

<sup>5)</sup> Motor and mains cable: 300 MCM/150 mm<sup>2</sup>

## 10.2 General Technical Data

### Protection and Features

- Electronic thermal motor protection against overload.
- Temperature monitoring of the heatsink ensures that the frequency converter trips if the temperature reaches  $95^{\circ}\text{C} \pm 5^{\circ}\text{C}$ . An overload temperature cannot be reset until the temperature of the heatsink is below  $70^{\circ}\text{C} \pm 5^{\circ}\text{C}$  (Guideline - these temperatures may vary for different power sizes, enclosures etc.). VLT® AQUA Drive has an auto derating function to avoid it's heatsink reaching  $95^{\circ}\text{C}$ .
- The frequency converter is protected against short-circuits on motor terminals U, V, W.
- If a mains phase is missing, the frequency converter trips or issues a warning (depending on the load).
- Monitoring of the intermediate circuit voltage ensures that the frequency converter trips if the intermediate circuit voltage is too low or too high.
- The frequency converter is protected against earth faults on motor terminals U, V, W.

### Mains supply (L1, L2, L3)

Supply voltage	200-240 V $\pm 10\%$
Supply voltage	380-480 V $\pm 10\%$
Supply voltage	525-600 V $\pm 10\%$
Supply voltage	525-690 V $\pm 10\%$

#### Mains voltage low/mains drop-out:

*During low mains voltage or a mains drop-out, the frequency converter continues until the intermediate circuit voltage drops below the minimum stop level, which corresponds typically to 15% below the frequency converter's lowest rated supply voltage. Power-up and full torque cannot be expected at mains voltage lower than 10% below the frequency converter's lowest rated supply voltage.*

Supply frequency	50/60 Hz +4/-6%
------------------	-----------------

*The frequency converter power supply is tested in accordance with IEC61000-4-28, 50 Hz +4/-6%.*

Max. imbalance temporary between mains phases	3.0% of rated supply voltage
True Power Factor ( $\lambda$ )	$\geq 0.9$ nominal at rated load
Displacement Power Factor ( $\cos\phi$ ) near unity	(> 0.98)
Switching on input supply L1, L2, L3 (power-ups) $\leq$ enclosure type A	maximum 2 times/min.
Switching on input supply L1, L2, L3 (power-ups) $\geq$ enclosure type B, C	maximum 1 time/min.
Switching on input supply L1, L2, L3 (power-ups) $\geq$ enclosure type D, E, F	maximum 1 time/2 min.
Environment according to EN60664-1	overvoltage category III/pollution degree 2

*The unit is suitable for use on a circuit capable of delivering not more than 100.000 RMS symmetrical Amperes, 240/480/600/690 V maximum.*

### Motor output (U, V, W)

Output voltage	0-100% of supply voltage
Output frequency	0-590 Hz*
Switching on output	Unlimited
Ramp times	1-3600 s

\* Dependent on power size.

### Torque characteristics

Starting torque (Constant torque)	maximum 110% for 1 min.*
Starting torque	maximum 135% up to 0.5 s*
Overload torque (Constant torque)	maximum 110% for 1 min.*

\*Percentage relates to VLT AQUA Drive's nominal torque.



**Specifications**

**VLT® AQUA Drive  
Operating Instructions**

**Cable lengths and cross sections**

Max. motor cable length, screened/armoured	150 m
Max. motor cable length, unscreened/unarmoured	300 m
Max. cross section to motor, mains, load sharing and brake *	
Maximum cross section to control terminals, rigid wire	1.5 mm <sup>2</sup> /16 AWG (2 x 0.75 mm <sup>2</sup> )
Maximum cross section to control terminals, flexible cable	1 mm <sup>2</sup> /18 AWG
Maximum cross section to control terminals, cable with enclosed core	0.5 mm <sup>2</sup> /20 AWG
Minimum cross section to control terminals	0.25 mm <sup>2</sup>

\* See Mains Supply tables for more information!

**Control card, RS-485 serial communication**

Terminal number	68 (P,TX+, RX+), 69 (N,TX-, RX-)
Terminal number 61	Common for terminals 68 and 69


The RS-485 serial communication circuit is functionally seated from other central circuits and galvanically isolated from the supply voltage (PELV).

**Analog inputs**

Number of analog inputs	2
Terminal number	53, 54
Modes	Voltage or current
Mode select	Switch S201 and switch S202
Voltage mode	Switch S201/switch S202 = OFF (U)
Voltage level	0 to +10 V (scaleable)
Input resistance, R <sub>i</sub>	approx. 10 kΩ
Max. voltage	±20 V
Current mode	Switch S201/switch S202 = ON (I)
Current level	0/4 to 20 mA (scaleable)
Input resistance, R <sub>i</sub>	approx. 200 Ω
Max. current	30 mA
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	Max. error 0.5% of full scale
Bandwidth	200 Hz

**10**

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

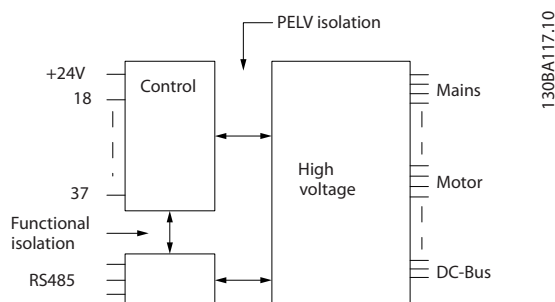

**Illustration 10.1 PELV Isolation of Analog Inputs**

**Analog output**

Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4-20 mA
Max. resistor load to common at analog output	500 Ω
Accuracy on analog output	Max. error: 0.8% of full scale
Resolution on analog output	8 bit

The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

## Specifications

## VLT® AQUA Drive Operating Instructions

### Digital inputs

Programmable digital inputs	4 (6)
Terminal number	18, 19, 27 <sup>1)</sup> , 29 <sup>1)</sup> , 32, 33,
Logic	PNP or NPN
Voltage level	0-24 V DC
Voltage level, logic '0' PNP	<5 V DC
Voltage level, logic '1' PNP	>10 V DC
Voltage level, logic '0' NPN	>19 V DC
Voltage level, logic '1' NPN	<14 V DC
Maximum voltage on input	28 V DC
Input resistance, R <sub>i</sub>	approx. 4 kΩ

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

1) Terminals 27 and 29 can also be programmed as output.

### Digital output

Programmable digital/pulse outputs	2
Terminal number	27, 29 <sup>1)</sup>
Voltage level at digital/frequency output	0-24 V
Max. output current (sink or source)	40 mA
Max. load at frequency output	1 kΩ
Max. capacitive load at frequency output	10 nF
Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	Max. error: 0.1% of full scale
Resolution of frequency outputs	12 bit

1) Terminal 27 and 29 can also be programmed as input.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

10

### Pulse inputs

Programmable pulse inputs	2
Terminal number pulse	29, 33
Max. frequency at terminal, 29, 33	110 kHz (Push-pull driven)
Max. frequency at terminal, 29, 33	5 kHz (open collector)
Min. frequency at terminal 29, 33	4 Hz
Voltage level	see 10.2.1
Maximum voltage on input	28 V DC
Input resistance, R <sub>i</sub>	approx. 4 kΩ
Pulse input accuracy (0.1-1 kHz)	Max. error: 0.1% of full scale
Control card, 24 V DC output	
Terminal number	12, 13
Max. load	200 mA

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

### Relay outputs

Programmable relay outputs	2
<b>Relay 01 Terminal number</b>	1-3 (break), 1-2 (make)
Max. terminal load (AC-1) <sup>1)</sup> on 1-3 (NC), 1-2 (NO) (Resistive load)	240 V AC, 2 A
Max. terminal load (AC-15) <sup>1)</sup> (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Max. terminal load (DC-1) <sup>1)</sup> on 1-2 (NO), 1-3 (NC) (Resistive load)	60 V DC, 1 A
Max. terminal load (DC-13) <sup>1)</sup> (Inductive load)	24 V DC, 0.1 A
<b>Relay 02 Terminal number</b>	4-6 (break), 4-5 (make)
Max. terminal load (AC-1) <sup>1)</sup> on 4-5 (NO) (Resistive load) <sup>2)3)</sup>	400 V AC, 2 A
Max. terminal load (AC-15) <sup>1)</sup> on 4-5 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Max. terminal load (DC-1) <sup>1)</sup> on 4-5 (NO) (Resistive load)	80 V DC, 2 A
Max. terminal load (DC-13) <sup>1)</sup> on 4-5 (NO) (Inductive load)	24 V DC, 0.1 A

## Specifications

## VLT® AQUA Drive Operating Instructions

Max. terminal load (AC-1) <sup>1)</sup> on 4-6 (NC) (Resistive load)	240 V AC, 2 A
Max. terminal load (AC-15) <sup>1)</sup> on 4-6 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Max. terminal load (DC-1) <sup>1)</sup> on 4-6 (NC) (Resistive load)	50 V DC, 2 A
Max. terminal load (DC-13) <sup>1)</sup> on 4-6 (NC) (Inductive load)	24 V DC, 0.1 A
Min. terminal load on 1-3 (NC), 1-2 (NO), 4-6 (NC), 4-5 (NO)	24 V DC 10 mA, 24 V AC 20 mA
Environment according to EN 60664-1	overvoltage category III/pollution degree 2

1) IEC 60947 parts 4 and 5

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

2) Overvoltage Category II

3) UL applications 300 V AC 2 A

### Control card, 10 V DC output

Terminal number	50
Output voltage	10.5 V ±0.5 V
Max. load	25 mA

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

### Control characteristics

Resolution of output frequency at 0-1000 Hz	±0.003 Hz
System response time (terminals 18, 19, 27, 29, 32, 33)	≤ 2 ms
Speed control range (open loop)	1:100 of synchronous speed
Speed accuracy (open loop)	30-4000 rpm: Maximum error of ±8 rpm

All control characteristics are based on a 4-pole asynchronous motor

### Surroundings

Enclosure type A	IP20/Chassis, IP21 kit/Type 1, IP55/Type12, IP66
Enclosure type B1/B2	IP21/Type 1, IP55/Type12, IP66
Enclosure type B3/B4	IP20/Chassis
Enclosure type C1/C2	IP21/Type 1, IP55/Type 12, IP66
Enclosure type C3/C4	IP20/Chassis
Enclosure type D1/D2/E1	IP21/Type 1, IP54/Type12
Enclosure type D3/D4/E2	IP00/Chassis
Enclosure kit available ≤ enclosure type A	IP21/TYPE 1/IP4X top
Vibration test enclosure A/B/C	1.0 g
Vibration test enclosure D/E/F	0.7 g
Max. relative humidity	5% - 95% (IEC 721-3-3; Class 3K3 (non-condensing) during operation
Aggressive environment (IEC 721-3-3), uncoated	class 3C2
Aggressive environment (IEC 721-3-3), coated	class 3C3
Test method according to IEC 60068-2-43 H2S (10 days)	
Ambient temperature	Max. 50 °C

Derating for high ambient temperature, see section on special conditions

Minimum ambient temperature during full-scale operation	0 °C
Minimum ambient temperature at reduced performance	- 10 °C
Temperature during storage/transport	-25 to +65/70 °C
Maximum altitude above sea level without derating	1000 m
Maximum altitude above sea level with derating	3000 m

Derating for high altitude, see section on special conditions

EMC standards, Emission	EN 61800-3, EN 61000-6-3, EN 55011, IEC 61800-3
EMC standards, Immunity	EN 61800-3, EN 61000-6-1/2, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6

See section on special conditions

### Control card performance

Scan interval	5 ms
Control card, USB serial communication	
USB standard	1.1 (Full speed)
USB plug	USB type B "device" plug

**⚠ CAUTION**

Connection to PC is carried out via a standard host/device USB cable.

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

The USB connection is not galvanically isolated from protection earth. Use only isolated laptop/PC as connection to the USB connector on VLT AQUA Drive or an isolated USB cable/converter.

## 10.3 Fuse Specifications

### 10.3.1 CE Compliance

Fuses or Circuit Breakers are mandatory to comply with IEC 60364. Danfoss recommend using a selection of the following.

The fuses below are suitable for use on a circuit capable of delivering 100,000 Arms (symmetrical) with the following voltage

- 240 V
- 480 V
- 600 V
- 690 V

depending on the drive voltage rating. With the proper fusing the drive Short Circuit Current Rating (SCCR) is 100,000 Arms.

### 10.3.2 Fuse Tables

Enclosure	Power [kW]	Recommended fuse size	Recommended Max. fuse	Recommended circuit breaker Moeller	Max trip level [A]
A1	-	gG-10	gG-25	PKZM0-16	16
A2	0.25-2.2	gG-10 (0.25-1.5) gG-16 (2.2)	gG-25	PKZM0-25	25
A3	3.0-3.7	gG-16 (3) gG-20 (3.7)	gG-32	PKZM0-25	25
A4	0.25-2.2	gG-10 (0.25-1.5) gG-16 (2.2)	gG-32	PKZM0-25	25
A5	0.25-3.7	gG-10 (0.25-1.5) gG-16 (2.2-3) gG-20 (3.7)	gG-32	PKZM0-25	25
B1	5.5-11	gG-25 (5.5) gG-32 (7.5)	gG-80	PKZM4-63	63
B2	15	gG-50	gG-100	NZMB1-A100	100
B3	5.5-11	gG-25	gG-63	PKZM4-50	50
B4	15-18	gG-32 (7.5) gG-50 (11) gG-63 (15)	gG-125	NZMB1-A100	100
C1	18.5-30	gG-63 (15) gG-80 (18.5) gG-100 (22)	gG-160 (15-18.5) aR-160 (22)	NZMB2-A200	160
C2	37-45	aR-160 (30) aR-200 (37)	aR-200 (30) aR-250 (37)	NZMB2-A250	250
C3	22-30	gG-80 (18.5) aR-125 (22)	gG-150 (18.5) aR-160 (22)	NZMB2-A200	150
C4	37-45	aR-160 (30) aR-200 (37)	aR-200 (30) aR-250 (37)	NZMB2-A250	250

Table 10.12 200-240 V, Frame Sizes A, B and C

**Specifications**
**VLT® AQUA Drive  
Operating Instructions**

Enclosure	Power [kW]	Recommended fuse size	Recommended Max. fuse	Recommended circuit breaker Moeller	Max trip level [A]
A1	-	gG-10	gG-25	PKZM0-16	16
A2	1.1-4.0	gG-10 (0.37-3) gG-16 (4)	gG-25	PKZM0-25	25
A3	5.5-7.5	gG-16	gG-32	PKZM0-25	25
A4	1.1-4.0	gG-10 (0.37-3) gG-16 (4)	gG-32	PKZM0-25	25
A5	1.1-7.5	gG-10 (0.37-3) gG-16 (4-7.5)	gG-32	PKZM0-25	25
B1	11-18.5	gG-40	gG-80	PKZM4-63	63
B2	22-30	gG-50 (18.5) gG-63 (22)	gG-100	NZMB1-A100	100
B3	11-18	gG-40	gG-63	PKZM4-50	50
B4	22-37	gG-50 (18.5) gG-63 (22) gG-80 (30)	gG-125	NZMB1-A100	100
C1	37-55	gG-80 (30) gG-100 (37) gG-160 (45)	gG-160	NZMB2-A200	160
C2	75-90	aR-200 (55) aR-250 (75)	aR-250	NZMB2-A250	250
C3	45-55	gG-100 (37) gG-160 (45)	gG-150 (37) gG-160 (45)	NZMB2-A200	150
C4	75-90	aR-200 (55) aR-250 (75)	aR-250	NZMB2-A250	250

**Table 10.13 380-480 V, Frame Sizes A, B and C**

**Specifications**
**VLT® AQUA Drive  
Operating Instructions**

Enclosure	Power [kW]	Recommended fuse size	Recommended Max. fuse	Recommended circuit breaker Moeller	Max trip level [A]
A2	1.1-4.0	gG-10	gG-25	PKZM0-25	25
A3	5.5-7.5	gG-10 (5.5) gG-16 (7.5)	gG-32	PKZM0-25	25
A5	1.1-7.5	gG-10 (0.75-5.5) gG-16 (7.5)	gG-32	PKZM0-25	25
B1	11-18	gG-25 (11) gG-32 (15) gG-40 (18.5)	gG-80	PKZM4-63	63
B2	22-30	gG-50 (22) gG-63 (30)	gG-100	NZMB1-A100	100
B3	11-18.5	gG-25 (11) gG-32 (15)	gG-63	PKZM4-50	50
B4	22-37	gG-40 (18.5) gG-50 (22) gG-63 (30)	gG-125	NZMB1-A100	100
C1	37-55	gG-63 (37) gG-100 (45) aR-160 (55)	gG-160 (37-45) aR-250 (55)	NZMB2-A200	160
C2	75-90	aR-200 (75)	aR-250	NZMB2-A250	250
C3	45-55	gG-63 (37) gG-100 (45)	gG-150	NZMB2-A200	150
C4	75-90	aR-160 (55) aR-200 (75)	aR-250	NZMB2-A250	250

**Table 10.14 525-600 V, Frame Sizes A, B and C**

Enclosure	Power [kW]	Recommended fuse size	Recommended max. fuse	Recommended circuit breaker Danfoss	Max trip level[A]
A3	1.1	gG-6	gG-25	CTI25M 10-16	16
	1.5	gG-6	gG-25	CTI25M 10-16	16
	2.2	gG-6	gG-25	CTI25M 10-16	16
	3	gG-10	gG-25	CTI25M 10-16	16
	4	gG-10	gG-25	CTI25M 10-16	16
	5.5	gG-16	gG-25	CTI25M 10-16	16
	7.5	gG-16	gG-25	CTI25M 10-16	16
B2	11	gG-25	gG-63		
	15	gG-25	gG-63		
	18	gG-32			
	22	gG-32			
C2	30	gG-40			
	37	gG-63	gG-80		
	45	gG-63	gG-100		
	55	gG-80	gG-125		
	75	gG-100	gG-160		
C3	37	gG-100	gG-125		
	45	gG-125	gG-160		
D	37	gG-125	gG-125		
	45	gG-160	gG-160		
	55-75	gG-200	gG-200		
	90	aR-250	aR-250		

**Table 10.15 525-690 V, Frame Sizes A, C and D (non UL fuses)**

### 10.3.3 UL Compliance

Fuses or Circuit Breakers are mandatory to comply with UL for NEC 2009. We recommend using a selection of the following

- 240 V
- 480 V
- 600 V
- 690 V

The fuses below are suitable for use on a circuit capable of delivering 100,000 Arms (symmetrical) with the following voltage

depending on the drive voltage rating. With the proper fusing the drive Short Circuit Current Rating (SCCR) is 100,000 Arms.

Recommended max. fuse													
Power [kW]	Max prefuse size [A]	Bussmann JFHR2	Bussmann RK1	Bussmann J	Bussmann T	Bussmann CC	Bussmann CC	Bussmann CC	SIBA RK1	Littel fuse RK1	Ferraz-Shawmut CC	Ferraz-Shawmut RK1	Ferraz-Shawmut J
1.1	15	FWX-1 5	KTN-R15	JKS-15	JJN-15	FNQ-R-15	KTK-R-15	LP-CC-15	501790 6-016	KLN-R15	ATM-R15	A2K-15R	HSJ15
1.5	20	FWX-2 0	KTN-R20	JKS-20	JJN-20	FNQ-R-20	KTK-R-20	LP-CC-20	501790 6-020	KLN-R20	ATM-R20	A2K-20R	HSJ20
2.2	30*	FWX-3 0	KTN-R30	JKS-30	JJN-30	FNQ-R-30	KTK-R-30	LP-CC-30	501240 6-032	KLN-R30	ATM-R30	A2K-30R	HSJ30
3.0	35	FWX-3 5	KTN-R35	JKS-35	JJN-35				---	KLN-R35	---	A2K-35R	HSJ35
3.7	50	FWX-5 0	KTN-R50	JKS-50	JJN-50				501400 6-050	KLN-R50	---	A2K-50R	HSJ50
5.5	60**	FWX-6 0	KTN-R60	JKS-60	JJN-60				501400 6-063	KLN-R60	---	A2K-60R	HSJ60
7.5	80	FWX-8 0	KTN-R80	JKS-80	JJN-80				501400 6-080	KLN-R80	---	A2K-80R	HSJ80
15	150	FWX-1 50	KTN-R150	JKS-15 0	JJN-15 0				202822 0-150	KLN-R150		A2K-150R	HSJ150
22	200	FWX-2 00	KTN-R200	JKS-20 0	JJN-20 0				202822 0-200	KLN-R200		A2K-200R	HSJ200

**Table 10.16 1 x 200-240 V**

\* Siba allowed up to 32 A

\*\* Siba allowed up to 63 A

Recommended max. fuse													
Power [kW]	Max prefuse size [A]	Bussmann JFHR2	Bussmann RK1	Bussmann J	Bussmann T	Bussmann CC	Bussmann CC	Bussmann CC	SIBA RK1	Littel fuse RK1	Ferraz-Shawmut CC	Ferraz-Shawmut RK1	Ferraz-Shawmut J
7.5	60	FWH-6 0	KTS-R60	JKS-60	JJS-60				501400 6-063	KLS-R60	-	A6K-60R	HSJ60
11	80	FWH-8 0	KTS-R80	JKS-80	JJS-80				202822 0-100	KLS-R80	-	A6K-80R	HSJ80
22	150	FWH-1 50	KTS-R150	JKS-15 0	JJS-15 0				202822 0-160	KLS-R150	-	A6K-150R	HSJ150
37	200	FWH-2 00	KTS-R200	JKS-20 0	JJS-20 0				202822 0-200	KLS-20 0		A6K-200R	HSJ200

**Table 10.17 1 x 380-500 V**

KTS-fuses from Bussmann may substitute KTN for 240 V frequency converters

FWH-fuses from Bussmann may substitute FWX for 240 V frequency converters

JJS-fuses from Bussmann may substitute JJN for 240 V frequency converters

KLSR fuses from LITTLE FUSES may substitute KLN for 240 V frequency converters

A6KR fuses from FERRAZ SHAWMUT may substitute A2KR for 240 V frequency converters



Power [kW]	Recommended max. fuse					Bussmann Type CC
	Bussmann Type RK1 <sup>1)</sup>	Bussmann Type J	Bussmann Type T	Bussmann Type CC	Bussmann	
0.25-0.37	KTN-R-05	JKS-05	JJN-05	FNQ-R-5	KTK-R-5	LP-CC-5
0.55-1.1	KTN-R-10	JKS-10	JJN-10	FNQ-R-10	KTK-R-10	LP-CC-10
1.5	KTN-R-15	JKS-15	JJN-15	FNQ-R-15	KTK-R-15	LP-CC-15
2.2	KTN-R-20	JKS-20	JJN-20	FNQ-R-20	KTK-R-20	LP-CC-20
3.0	KTN-R-25	JKS-25	JJN-25	FNQ-R-25	KTK-R-25	LP-CC-25
3.7	KTN-R-30	JKS-30	JJN-30	FNQ-R-30	KTK-R-30	LP-CC-30
5.5-7.5	KTN-R-50	KS-50	JJN-50	-	-	-
11	KTN-R-60	JKS-60	JJN-60	-	-	-
15	KTN-R-80	JKS-80	JJN-80	-	-	-
18.5-22	KTN-R-125	JKS-125	JJN-125	-	-	-
30	KTN-R-150	JKS-150	JJN-150	-	-	-
37	KTN-R-200	JKS-200	JJN-200	-	-	-
45	KTN-R-250	JKS-250	JJN-250	-	-	-

**Table 10.18 3 x 200-240 V, Frame Sizes A, B and C**

Power [kW]	Recommended max. fuse			
	SIBA Type RK1	Littel fuse Type RK1	Ferraz- Shawmut Type CC	Ferraz- Shawmut Type RK1 <sup>3)</sup>
0.25-0.37	5017906-005	KLN-R-05	ATM-R-05	A2K-05-R
0.55-1.1	5017906-010	KLN-R-10	ATM-R-10	A2K-10-R
1.5	5017906-016	KLN-R-15	ATM-R-15	A2K-15-R
2.2	5017906-020	KLN-R-20	ATM-R-20	A2K-20-R
3.0	5017906-025	KLN-R-25	ATM-R-25	A2K-25-R
3.7	5012406-032	KLN-R-30	ATM-R-30	A2K-30-R
5.5-7.5	5014006-050	KLN-R-50	-	A2K-50-R
11	5014006-063	KLN-R-60	-	A2K-60-R
15	5014006-080	KLN-R-80	-	A2K-80-R
18.5-22	2028220-125	KLN-R-125	-	A2K-125-R
30	2028220-150	KLN-R-150	-	A2K-150-R
37	2028220-200	KLN-R-200	-	A2K-200-R
45	2028220-250	KLN-R-250	-	A2K-250-R

**Table 10.19 3 x 200-240 V, Frame Sizes A, B and C**

# Specifications

## VLT® AQUA Drive Operating Instructions

Power [kW]	Recommended max. fuse			
	Bussmann Type JFHR2 <sup>2)</sup>	Littel fuse JFHR2	Ferraz- Shawmut JFHR2 <sup>4)</sup>	Ferraz- Shawmut J
0.25-0.37	FWX-5	-	-	HSJ-6
0.55-1.1	FWX-10	-	-	HSJ-10
1.5	FWX-15	-	-	HSJ-15
2.2	FWX-20	-	-	HSJ-20
3.0	FWX-25	-	-	HSJ-25
3.7	FWX-30	-	-	HSJ-30
5.5-7.5	FWX-50	-	-	HSJ-50
11	FWX-60	-	-	HSJ-60
15	FWX-80	-	-	HSJ-80
18.5-22	FWX-125	-	-	HSJ-125
30	FWX-150	L25S-150	A25X-150	HSJ-150
37	FWX-200	L25S-200	A25X-200	HSJ-200
45	FWX-250	L25S-250	A25X-250	HSJ-250

**Table 10.20 3 x 200-240 V, Frame Sizes A, B and C**

1) KTS-fuses from Bussmann may substitute KTN for 240 V frequency converters.

2) FWH-fuses from Bussmann may substitute FWX for 240 V frequency converters.

3) A6KR fuses from FERRAZ SHAWMUT may substitute A2KR for 240 V frequency converters.

4) A50X fuses from FERRAZ SHAWMUT may substitute A25X for 240 V frequency converters.

Power [kW]	Recommended max. fuse					
	Bussmann Type RK1	Bussmann Type J	Bussmann Type T	Bussmann Type CC	Bussmann Type CC	Bussmann Type CC
-	KTS-R-6	JKS-6	JJS-6	FNQ-R-6	KTK-R-6	LP-CC-6
1.1-2.2	KTS-R-10	JKS-10	JJS-10	FNQ-R-10	KTK-R-10	LP-CC-10
3	KTS-R-15	JKS-15	JJS-15	FNQ-R-15	KTK-R-15	LP-CC-15
4	KTS-R-20	JKS-20	JJS-20	FNQ-R-20	KTK-R-20	LP-CC-20
5.5	KTS-R-25	JKS-25	JJS-25	FNQ-R-25	KTK-R-25	LP-CC-25
7.5	KTS-R-30	JKS-30	JJS-30	FNQ-R-30	KTK-R-30	LP-CC-30
11	KTS-R-40	JKS-40	JJS-40	-	-	-
15	KTS-R-50	JKS-50	JJS-50	-	-	-
22	KTS-R-60	JKS-60	JJS-60	-	-	-
30	KTS-R-80	JKS-80	JJS-80	-	-	-
37	KTS-R-100	JKS-100	JJS-100	-	-	-
45	KTS-R-125	JKS-125	JJS-125	-	-	-
55	KTS-R-150	JKS-150	JJS-150	-	-	-
75	KTS-R-200	JKS-200	JJS-200	-	-	-
90	KTS-R-250	JKS-250	JJS-250	-	-	-

**Table 10.21 3 x 380-480 V, Frame Sizes A, B and C**

Power [kW]	Recommended max. fuse			
	SIBA Type RK1	Littell fuse Type RK1	Ferraz- Shawmut Type CC	Ferraz- Shawmut Type RK1
-	5017906-006	KLS-R-6	ATM-R-6	A6K-6-R
1.1-2.2	5017906-010	KLS-R-10	ATM-R-10	A6K-10-R
3	5017906-016	KLS-R-15	ATM-R-15	A6K-15-R
4	5017906-020	KLS-R-20	ATM-R-20	A6K-20-R
5.5	5017906-025	KLS-R-25	ATM-R-25	A6K-25-R
7.5	5012406-032	KLS-R-30	ATM-R-30	A6K-30-R
11	5014006-040	KLS-R-40	-	A6K-40-R
15	5014006-050	KLS-R-50	-	A6K-50-R
22	5014006-063	KLS-R-60	-	A6K-60-R
30	2028220-100	KLS-R-80	-	A6K-80-R
37	2028220-125	KLS-R-100	-	A6K-100-R
45	2028220-125	KLS-R-125	-	A6K-125-R
55	2028220-160	KLS-R-150	-	A6K-150-R
75	2028220-200	KLS-R-200	-	A6K-200-R
90	2028220-250	KLS-R-250	-	A6K-250-R

**Table 10.22 3 x 380-480 V, Frame Sizes A, B and C**

Power [kW]	Recommended max. fuse			
	Bussmann JFHR2	Ferraz- Shawmut J	Ferraz- Shawmut JFHR2 <sup>1)</sup>	Littell fuse JFHR2
-	FWH-6	HSJ-6	-	-
1.1-2.2	FWH-10	HSJ-10	-	-
3	FWH-15	HSJ-15	-	-
4	FWH-20	HSJ-20	-	-
5.5	FWH-25	HSJ-25	-	-
7.5	FWH-30	HSJ-30	-	-
11	FWH-40	HSJ-40	-	-
15	FWH-50	HSJ-50	-	-
22	FWH-60	HSJ-60	-	-
30	FWH-80	HSJ-80	-	-
37	FWH-100	HSJ-100	-	-
45	FWH-125	HSJ-125	-	-
55	FWH-150	HSJ-150	-	-
75	FWH-200	HSJ-200	A50-P-225	L50-S-225
90	FWH-250	HSJ-250	A50-P-250	L50-S-250

**Table 10.23 3 x 380-480 V, Frame Sizes A, B and C**

1) Ferraz-Shawmut A50QS fuses may substitute for A50P fuses.

Power [kW]	Recommended max. fuse					Bussmann Type CC
	Bussmann Type RK1	Bussmann Type J	Bussmann Type T	Bussmann Type CC	Bussmann Type CC	
0.75-1.1	KTS-R-5	JKS-5	JJS-6	FNQ-R-5	KTK-R-5	LP-CC-5
1.5-2.2	KTS-R-10	JKS-10	JJS-10	FNQ-R-10	KTK-R-10	LP-CC-10
3	KTS-R15	JKS-15	JJS-15	FNQ-R-15	KTK-R-15	LP-CC-15
4	KTS-R20	JKS-20	JJS-20	FNQ-R-20	KTK-R-20	LP-CC-20
5.5	KTS-R-25	JKS-25	JJS-25	FNQ-R-25	KTK-R-25	LP-CC-25
7.5	KTS-R-30	JKS-30	JJS-30	FNQ-R-30	KTK-R-30	LP-CC-30
11-15	KTS-R-35	JKS-35	JJS-35	-	-	-
18	KTS-R-45	JKS-45	JJS-45	-	-	-
22	KTS-R-50	JKS-50	JJS-50	-	-	-
30	KTS-R-60	JKS-60	JJS-60	-	-	-
37	KTS-R-80	JKS-80	JJS-80	-	-	-
45	KTS-R-100	JKS-100	JJS-100	-	-	-
55	KTS-R-125	JKS-125	JJS-125	-	-	-
75	KTS-R-150	JKS-150	JJS-150	-	-	-
90	KTS-R-175	JKS-175	JJS-175	-	-	-

**Table 10.24 3 x 525-600 V, Frame Sizes A, B and C**

Power [kW]	Recommended max. fuse			Ferraz- Shawmut Type RK1	Ferraz- Shawmut J
	SIBA Type RK1	Littell fuse Type RK1			
0.75-1.1	5017906-005	KLS-R-005		A6K-5-R	HSJ-6
1.5-2.2	5017906-010	KLS-R-010		A6K-10-R	HSJ-10
3	5017906-016	KLS-R-015		A6K-15-R	HSJ-15
4	5017906-020	KLS-R-020		A6K-20-R	HSJ-20
5.5	5017906-025	KLS-R-025		A6K-25-R	HSJ-25
7.5	5017906-030	KLS-R-030		A6K-30-R	HSJ-30
11-15	5014006-040	KLS-R-035		A6K-35-R	HSJ-35
18	5014006-050	KLS-R-045		A6K-45-R	HSJ-45
22	5014006-050	KLS-R-050		A6K-50-R	HSJ-50
30	5014006-063	KLS-R-060		A6K-60-R	HSJ-60
37	5014006-080	KLS-R-075		A6K-80-R	HSJ-80
45	5014006-100	KLS-R-100		A6K-100-R	HSJ-100
55	2028220-125	KLS-R-125		A6K-125-R	HSJ-125
75	2028220-150	KLS-R-150		A6K-150-R	HSJ-150
90	2028220-200	KLS-R-175		A6K-175-R	HSJ-175

**Table 10.25 3 x 525-600 V, Frame Sizes A, B and C**

1) 170M fuses shown from Bussmann use the -/80 visual indicator. -TN/80 Type T, -/110 or TN/110 Type T indicator fuses of the same size and amperage may be substituted.

Power [kW]	Recommended max. fuse							
	Max. prefuse [A]	Bussmann E52273 RK1/JDDZ	Bussmann E4273 J/JDDZ	Bussmann E4273 T/JDDZ	SIBA E180276 RK1/JDDZ	Littelfuse E81895 RK1/JDDZ	Ferraz- Shawmut E163267/E2137 RK1/JDDZ	Ferraz- Shawmut E2137 J/HSJ
11-15	30	KTS-R-30	JKS-30	JKJS-30	5017906-030	KLS-R-030	A6K-30-R	HST-30
22	45	KTS-R-45	JKS-45	JJS-45	5014006-050	KLS-R-045	A6K-45-R	HST-45
30	60	KTS-R-60	JKS-60	JJS-60	5014006-063	KLS-R-060	A6K-60-R	HST-60
37	80	KTS-R-80	JKS-80	JJS-80	5014006-080	KLS-R-075	A6K-80-R	HST-80
45	90	KTS-R-90	JKS-90	JJS-90	5014006-100	KLS-R-090	A6K-90-R	HST-90
55	100	KTS-R-100	JKS-100	JJS-100	5014006-100	KLS-R-100	A6K-100-R	HST-100
75	125	KTS-R-125	JKS-125	JJS-125	2028220-125	KLS-150	A6K-125-R	HST-125
90	150	KTS-R-150	JKS-150	JJS-150	2028220-150	KLS-175	A6K-150-R	HST-150

\* UL compliance 525-600 V only

Table 10.26 3 x 525-690 V\*, Frame Sizes B and C

## 10.4 Connection Tightening Torques

Enclo- sure	Power (kW)			Torque (Nm)						
	200-240 V	380-480/500 V	525-600 V	525-690 V	Mains	Motor	DC connecti on	Brake	Earth	Relay
A2	0.25-2.2	0.37-4.0			1.8	1.8	1.8	1.8	3	0.6
A3	3.0-3.7	5.5-7.5	0.75-7.5	1.1-7.5	1.8	1.8	1.8	1.8	3	0.6
A4	0.25-2.2	0.37-4.0			1.8	1.8	1.8	1.8	3	0.6
A5	0.25-3.7	0.37-7.5	0.75-7.5		1.8	1.8	1.8	1.8	3	0.6
B1	5.5-7.5	11-15	11-15		1.8	1.8	1.5	1.5	3	0.6
B2	11	18	18	11	4.5	4.5	3.7	3.7	3	0.6
		22	22	22	4.5	4.5	3.7	3.7	3	0.6
B3	5.5 -7.5	11-15	11-15		1.8	1.8	1.8	1.8	3	0.6
B4	11-15	18-30	18-30		4.5	4.5	4.5	4.5	3	0.6
C1	15-22	30-45	30-45		10	10	10	10	3	0.6
C2	30-37	55 -75	55-75	30-75	14/24 <sup>1)</sup>	14/24 <sup>1)</sup>	14	14	3	0.6
C3	18-22	37-45	37-45	45-55	10	10	10	10	3	0.6
C4	30-37	55-75	55-75		14/24 <sup>1)</sup>	14/24 <sup>1)</sup>	14	14	3	0.6

Table 10.27 Tightening of Terminals

<sup>1)</sup> For different cable dimensions x/y, where  $x \leq 95 \text{ mm}^2$  and  $y \geq 95 \text{ mm}^2$ .

## Index

<b>A</b>		<b>Copying Parameter Settings</b> .....	32
<b>A53</b> .....	22	<b>Current</b>	
<b>A54</b> .....	22	Limit.....	29
<b>AC</b>		Rating.....	12
Input.....	7, 18	<b>D</b>	
Mains.....	6, 7, 14, 18	<b>Danfoss FC</b> .....	23
Waveform.....	6, 7	<b>DC Current</b> .....	7, 49
<b>Accel Time</b> .....	29	<b>Derating</b> .....	12
<b>Alarm Log</b> .....	31	<b>Digital</b>	
<b>Alarms</b> .....	52	Input.....	22, 49
<b>Analog</b>		Inputs.....	20, 70, 36
Inputs.....	20, 69	Output.....	70
Output.....	20, 69	<b>Disconnect</b>	
<b>Application Examples</b> .....	45	Switch.....	26
<b>Approvals</b> .....	iii	Switches.....	24
<b>Auto</b>		<b>Downloading Data From The LCP</b> .....	33
Auto.....	32	<b>E</b>	
Mode.....	31	<b>Earth</b>	
On.....	32, 49	Connections.....	25, 53
<b>Automatic Motor Adaptation</b> .....	28, 49	Wire.....	25, 53
<b>Auto-reset</b> .....	30	<b>Earthing</b>	
<b>AWG</b> .....	58	Earthing.....	25, 53
		(Grounding).....	25
<b>B</b>		<b>Electrical Noise</b> .....	17
<b>Back Plate</b> .....	13	<b>EMC</b> .....	25, 53
<b>Braking</b> .....	49	<b>External</b>	
		Commands.....	7, 49
<b>C</b>		Controllers.....	6
<b>Cable Lengths And Cross Sections</b> .....	69	Interlock.....	22, 36, 46
<b>Circuit Breakers</b> .....	25, 53	Voltage.....	34
<b>Clearance</b>		<b>F</b>	
Clearance.....	13	<b>Fault Log</b> .....	31
Requirements.....	12	<b>Feedback</b> .....	22, 25, 45, 53, 49
<b>Closed Loop</b> .....	22	<b>Floating Delta</b> .....	19
<b>Conduit</b> .....	16, 18, 25, 53	<b>Frequency Converter Block Diagram</b> .....	6
<b>Control</b>		<b>Full Load Current</b> .....	12, 24
Cables.....	21	<b>Functional Testing</b> .....	6, 29
Card Performance.....	71	<b>Fuses</b> .....	25, 53, 54
Card, 10 V DC Output.....	71	<b>Fusing</b> .....	16, 53, 25
Card, 24 V DC Output.....	70	<b>G</b>	
Card, RS-485 Serial Communication.....	69	<b>Ground</b>	
Card, USB Serial Communication.....	71	Connections.....	17, 25, 53
Characteristics.....	71	Loops.....	21
Signal.....	34, 35, 49	Wire.....	16, 17, 25, 53
System.....	6	<b>Grounded Delta</b> .....	19
Terminals.....	14, 21, 27, 32, 49, 35	<b>Grounding</b>	
Wire.....	21	Grounding.....	16, 17, 18, 19, 24, 25, 53
Wiring.....	16, 21, 25, 53, 19	Using Shielded Cable.....	17
<b>Cooling</b>			
Cooling.....	12		
Clearance.....	25, 53		

<b>H</b>	
<b>Hand</b>	
Hand.....	29, 32
On.....	29, 32, 49
<b>Harmonics.....</b>	7
<b>I</b>	
<b>IEC 61800-3.....</b>	19
<b>Induced Voltage.....</b>	16
<b>Initialisation.....</b>	33
<b>Input</b>	
Current.....	18
Disconnect.....	18
Power.....	16, 18, 24, 25, 52, 53, 54, 7
Signal.....	35
Signals.....	22
Terminals.....	14, 18, 22, 24
Voltage.....	26, 52
<b>Installation.....</b>	6, 12, 13, 16, 21, 23, 25, 26, 53
<b>Isolated Mains.....</b>	19
<b>J</b>	
<b>Johnson Controls N2° .....</b>	23
<b>L</b>	
<b>Leakage Current.....</b>	24
<b>Lifting.....</b>	13
<b>Local</b>	
Control.....	30, 32, 49
Control Panel.....	30
Mode.....	29
Operation.....	30
Start.....	29
<b>Local-control Test.....</b>	29
<b>M</b>	
<b>Main Menu.....</b>	34, 31
<b>Mains</b>	
Mains.....	16
Supply.....	58, 63
Supply (L1, L2, L3).....	68
Supply 1 X 200-240 V AC.....	57
Voltage.....	31, 32, 49
<b>Manual Initialisation.....</b>	33
<b>Mechanical Brake Control.....</b>	22
<b>Menu</b>	
Keys.....	30, 31
Structure.....	32, 38, 37
<b>Modbus RTU.....</b>	23

## Motor

Cables.....	12, 16, 17, 28
Current.....	7, 28, 31
Data.....	29, 28
Frequency.....	31
Output.....	68
Power.....	14, 16, 31
Protection.....	16, 68
Rotation.....	28, 31
Speeds.....	26
Status.....	6
Wiring.....	16, 17, 25, 53

<b>Mounting.....</b>	13, 25, 53
----------------------	------------

## Multiple

Frequency Converters.....	16, 17
Motors.....	24

## N

<b>Navigation Keys.....</b>	26, 34, 49, 30, 32
<b>Noise Isolation.....</b>	16, 25, 53

## O

<b>Open Loop.....</b>	22, 34
<b>Operation Keys.....</b>	32
<b>Optional Equipment.....</b>	18, 22, 26, 6
<b>Output</b>	
Current.....	49
Performance (U, V, W).....	68
Signal.....	37
Terminals.....	14, 24
<b>Overcurrent.....</b>	49
<b>Overload Protection.....</b>	12, 16
<b>Overvoltage.....</b>	29, 49

## P

<b>PELV.....</b>	19, 48
<b>Power</b>	
Connections.....	16
Factor.....	7, 17, 25, 53
<b>Power-dependent.....</b>	57
<b>Pre-start.....</b>	24
<b>Programming</b>	
Programming.....	6, 22, 29, 31, 36, 37, 44, 30, 32
Example.....	34
<b>Protection And Features.....</b>	68
<b>Pulse Inputs.....</b>	70

## Q

<b>Quick Menu.....</b>	31, 34, 36, 31
------------------------	----------------

## R

<b>Ramp-down Time.....</b>	29
<b>Ramp-up Time.....</b>	29

Index	VLT® AQUA Drive Operating Instructions
RCD.....	17
Reference.....	iii, 45, 49, 31
Relay Outputs.....	20, 70
Remote	
Commands.....	6
Programming.....	44
Reference.....	49
Reset.....	30, 33, 49, 52, 32
RFI Filter.....	19
RMS Current.....	7
Run	
Command.....	29
Permissive.....	49
S	
Safe Stop.....	7
Safety Inspection.....	24
Screened Control Cables.....	21
Serial Communication.....	6, 14, 20, 21, 32, 49, 71, 52, 23
Set Up.....	31
Setpoint.....	49
Set-up.....	29, 31
Shielded	
Cable.....	12, 16, 25, 53
Wire.....	16
Sleep Mode.....	49
Specifications.....	6, 13, 23, 57
Speed Reference.....	22, 29, 35, 46, 49
Start Up.....	6, 33, 34, 54
Status Mode.....	49
Stop Command.....	49
Supply Voltage.....	19, 20, 24
Surroundings.....	71
Switching Frequency.....	49
Symbols.....	iii
System	
Feedback.....	6
Monitoring.....	52
Start Up.....	29
T	
Technical Data.....	68
Temperature Limits.....	25, 53
Terminal	
53.....	22, 34
54.....	22
Programming.....	22
Programming Examples.....	35
Thermistor	
Thermistor.....	19, 48
Control Wiring.....	19
Tightening Of Terminals.....	81
Torque	
Characteristics.....	68
Limit.....	29
Transient Protection.....	7
Trip	
Trip.....	52
Function.....	16
Lock.....	52
Troubleshooting.....	6
U	
Uploading Data To The LCP.....	33
V	
Voltage Level.....	70
W	
Warning	
And Alarm Definitions.....	53
And Alarm Displays.....	52
And Alarm Types.....	52
Wire Sizes.....	16, 17







---

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

---

