




ADC Spectrum 7.0

Installation Guide

ADCP-77-xxx • Issue 1 • 12/2009

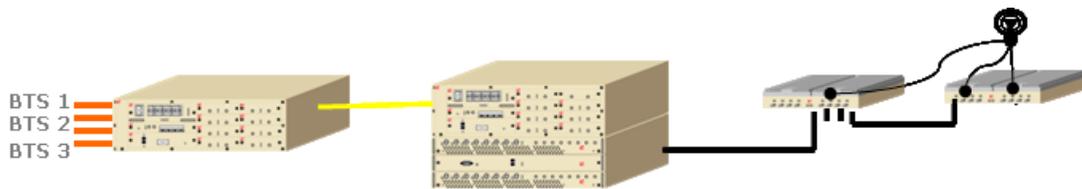

Copyright

© 2009 ADC Telecommunications, Inc. All Rights Reserved.

Information contained in this document is company private to ADC Telecommunications, Inc. and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

Trademark Information

ADC is a registered trademark and FlexWave and Universal Radio Head are trademarks of ADC Telecommunications, Inc. No right, license, or interest to such trademarks is granted hereunder, and you agree that no such right, license, or interest shall be asserted by you with respect to such trademark.

Other product names mentioned in this practice are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

Disclaimer of Liability

Contents herein are current as of the date of publication. ADC reserves the right to change the contents without prior notice. Should the content of printed user documentation shipped with product differ from documentation provided on a product CD (inclusive of the associated Help modules), the printed user documentation supersedes the documentation on the product CD. In no event shall ADC be liable for any damages resulting from loss of data, loss of use, or loss of profits, and ADC further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.

Specific Disclaimer for High-Risk Activities

This Product is not specifically designed, manufactured, tested or intended for use in high-risk activities including, without restricting the generality of the foregoing, on-line control of aircraft, air traffic, aircraft navigation or aircraft communications; or in the design, construction, operation or maintenance of any nuclear facility. ADC (including its affiliates) and its suppliers specifically disclaim any express or implied warranty of fitness for such purposes or any other purposes.

Screenshots in User Documentation

Due to concurrent development of this documentation, artwork, and the FlexWave URH EMS product, there may be some minor discrepancies between screenshots contained in this documentation and those actually displayed in the FlexWave URH EMS. These discrepancies will generally be few and minor and should not affect your understanding of FlexWave URH EMS.



ADC Telecommunications, Inc.
P.O. Box 1101, Minneapolis, Minnesota 55440-1101
In U.S.A. and Canada: 1-800-366-3891
Outside U.S.A. and Canada: (952) 938-8080
Fax: (952) 917-1717

TABLE OF CONTENTS

Preface.....	2
Revision History.....	2
Document Cautions and Notes	2
General Safety Precautions	2
Standards Certification	3
Introduction	4
Host Unit	5
DART Remote Unit	6
IF Expansion Unit.....	7
Main Remote Access Unit	8
Secondary Remote Access Unit	9
Omni Antenna	10
Installation	11
Cascading	14
Specifications	15
Contacting ADC	17

PREFACE

This manual provides basic installation instructions for a ADC® Spectrum 7.0 system.

Revision History

Initial release.

Document Cautions and Notes

Two types of messages, identified below, appear in the text:

CAUTION! Caution text indicates operations or steps that could cause personal injury, induce a safety problem in a managed device, destroy or corrupt information, or interrupt or stop services.

NOTE: Note text contains information about special circumstances.

General Safety Precautions

CAUTION! Wet conditions increase the potential for receiving an electrical shock when installing or using electrically-powered equipment. To prevent electrical shock, never install or use electrical equipment in a wet location or during a lightning storm.

CAUTION! This equipment uses a Class 1 Laser according to FDA/CDRH rules. Laser radiation can seriously damage the retina of the eye. Do not look into the ends of any optical fiber. Do not look directly into the optical transceiver of any digital unit or exposure to laser radiation may result. An optical power meter should be used to verify active fibers. A protective cap or hood **MUST** be immediately placed over any radiating transceiver or optical fiber connector to avoid the potential of dangerous amounts of radiation exposure. This practice also prevents dirt particles from entering the adapter or connector.

CAUTION! This system is an RF Transmitter and continuously emits RF energy. Maintain 3 foot (91.4 cm) minimum clearance from the antenna while the system is operating. Wherever possible, shut down the RAN before servicing the antenna.

CAUTION! Always allow sufficient fiber length to permit routing of patch cords and pigtails without severe bends. Fiber optic patch cords or pigtails may be permanently damaged if bent or curved to a radius of less than 2 inches (5.1 cm).

CAUTION! Exterior surfaces of the Remote may be hot. Use caution during servicing.

Standards Certification

FCC: This equipment complies with the applicable sections of Title 47 CFR Part 15 (Host unit), Part 22 (800 MHz Cellular), Part 24 (1900 MHz - PCS), Part 90 (800/900 - SMR), and Part 27 (700 MHz, 2100 MHz - AWS).

IC: This equipment complies with the applicable sections of RSS-131. The term "IC:" before the radio certification number only signifies that Industry Canada Technical Specifications were met.

The Manufacturer's rated output power of this equipment is for single carrier operation. For situations when multiple carrier signals are present, the rating would have to be reduced by 3.5 dB, especially where the output signal is re-radiated and can cause interference to adjacent band users. This power reduction is to be by means of input power or gain reduction and not by an attenuator at the output of the device.

NOTE: To comply with Maximum Permissible Exposure (MPE) requirements, the maximum composite output from the antenna cannot exceed 1000 Watts ERP (Cellular and SMR), the antenna cannot exceed 1640 Watts EIRP (PCS), and the antenna must be permanently installed in a fixed location that provides at least 6 meters (20 feet) of separation from all persons.

NOTE: The U.S. Federal Communications Commission (FCC) has developed guidelines for evaluation of human exposure to RF emissions. The guidelines incorporate limits for Maximum Permissible Exposure (MPE) for power density of transmitter operating at frequencies between 300 kHz and 100 GHz. Limits have been set for portable, mobile, and fixed equipment. ADC products fall in the category of fixed equipment; products intended to be permanently secured and exposures are evaluated for distances greater than 20cm (7-7/8"). Portable devices fall into exposures of less than 20cm, where SAR evaluations are used.

Antenna gain is restricted to 1.5 W ERP (2.49 W EIRP) in order to satisfy RF exposure compliance requirements. If higher than 1.5 W ERP, routine MPE evaluation is needed. The antennas should be installed to provide at least 20cm from all persons to satisfy MPE requirements of FCC Part 2, 2.1091.

UL/CUL: This will be installed in a restricted access location. This equipment complies, per UL and CUL 50, Standard for Enclosures for Electrical Equipment.

FDA/CDRH: This equipment uses a Class 1 LASER according to FDA/CDRH Rules. This product conforms to all applicable standards of 21 CFR Part 1040.

Caution: Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


INTRODUCTION

InterReach Spectrum is an addition to the InterReach family of Distributed Antenna Systems. It offers a flexible multi-operator/multi-protocol single platform system supporting up to 8 Radio Frequency (RF) bands.


InterReach Spectrum has a Host Unit, an Expansion Unit (comprised of a DART Remote Module (DRU), IF Expansion Module (IFEU), and Power Supply), and Remote Amplifiers Units (RAUs). The Host, DRU and IFEU are intended for telecom closet indoor use. The RAU is intended to be installed above a false ceiling in an environmentally controlled office.

The standard configuration is:

- one Host Unit
- up to sixteen Expansion Units
- with each IFEU in the Expansion Unit supporting up to eight Main RAUs (one per IFEU FWD/REV F connector paired ports).

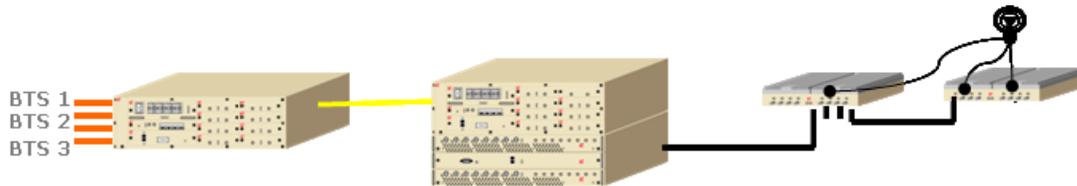


Host Unit

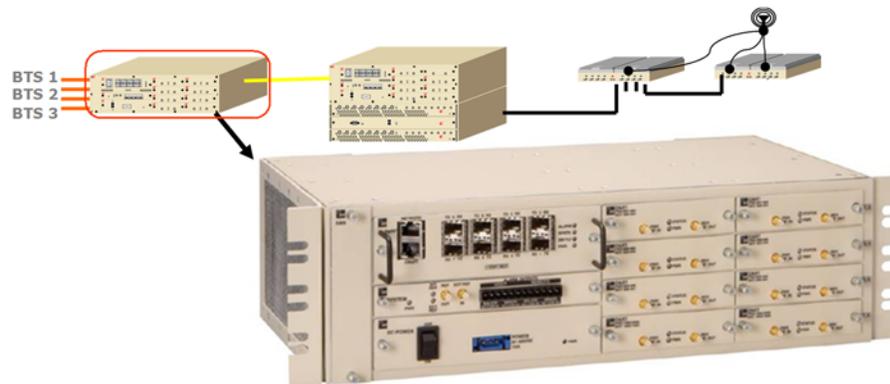

The Host Unit is installed into a 19-inch, rack-mounted chassis, that is 9-inches deep and can hold up to three Host Units. Each Host Unit can have up to eight hot swappable plug in cards. Host Unit components are as follows:

- One SeRF board with eight SFP connectors, that go to the DART Remote Unit SFPs
- Two Ethernet connections for Craft and Network access
- One System board with an Alarm connector
- One DCV Power board
- Eight RF DART modules for Wireless Operator RF input from BTS or BDA
- Replaceable Fans for cooling


DART Remote Unit

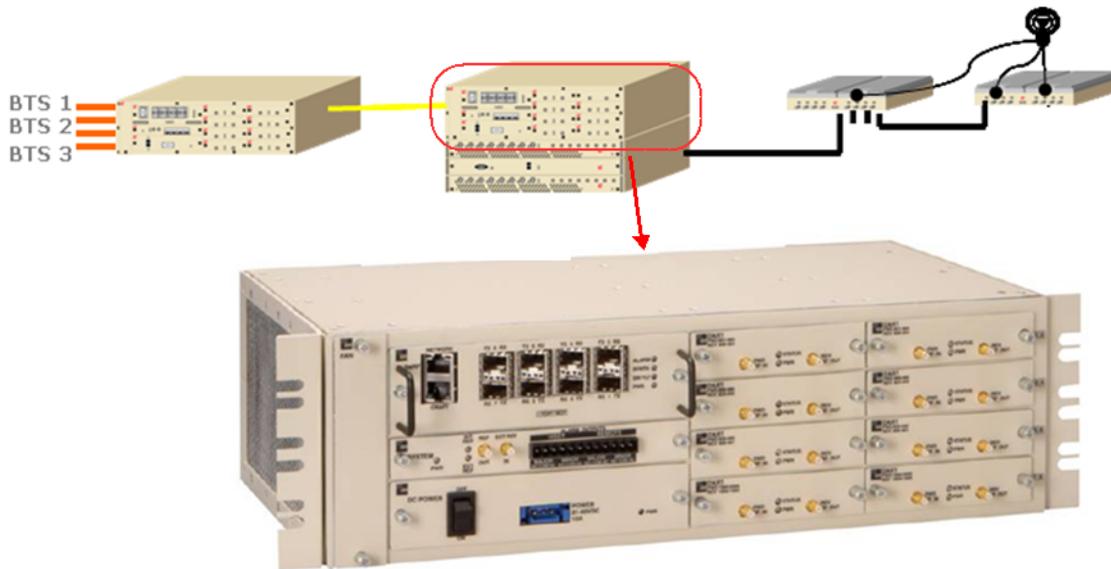

The DART Remote Unit (DRU) is installed into a 19-inch, rack-mounted chassis, that is 9-inches deep and can have up to eight hot swappable plug in cards. DRU components are as follows:

- One SeRF board with eight SFP connectors, that go to the Host Unit SFPs
- Two Ethernet connections for Craft and Network access
- One System board with an Alarm connector
- One DCV Power board
- Eight RF DART boards with eight QMA connector IF inputs and eight QMA connector IF outputs to the IF Expansion Unit (IFEU)
- Replaceable Fans for cooling

IF Expansion Unit

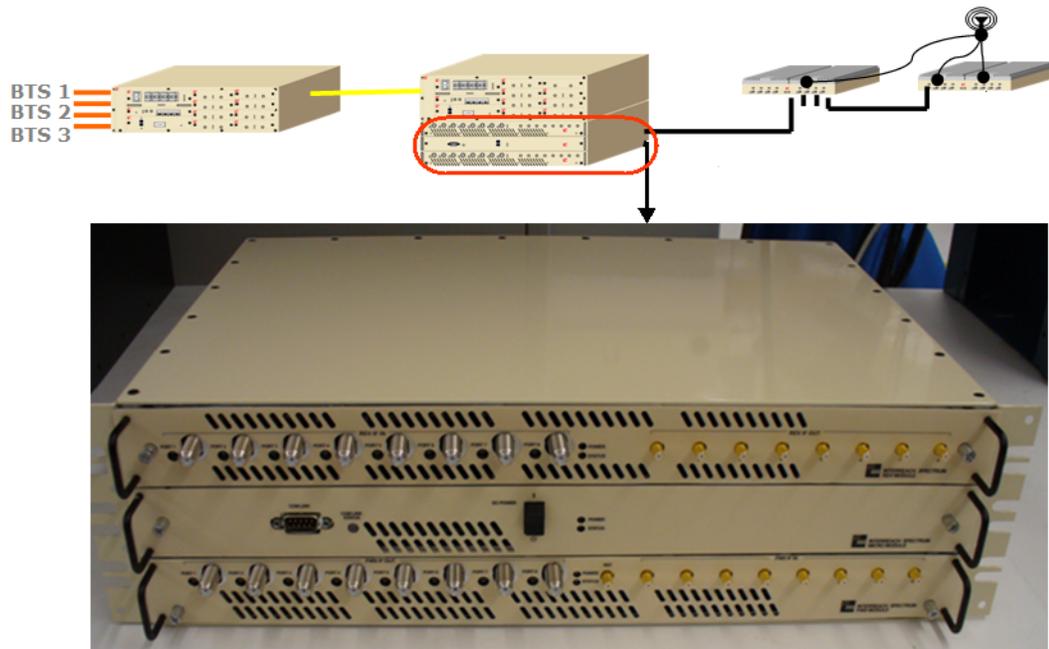


The IF Expansion Unit (IFEU) is installed into a 19-inch, rack-mounted chassis, that is 15-inches deep with three plug-in cards. IFEU components are as follows:

- One Reverse Link Module with
 - eight F connectors that go to the RAUs
 - eight QMA connectors that go to the DRU
- One DL PCBA with
 - eight F connectors that go to the RAUs
 - eight QMA connectors that go to the DRU
- One Micro controller board
- One DC/DC board
- Backplane
- Replaceable Fans for cooling


Main Remote Access Unit

The Main Remote Access Unit (MRAU) design allows for easier Band 1 and Band 2 Mix-and-Matching per country and/or market needs. MRAU components are as shown in the following figure.

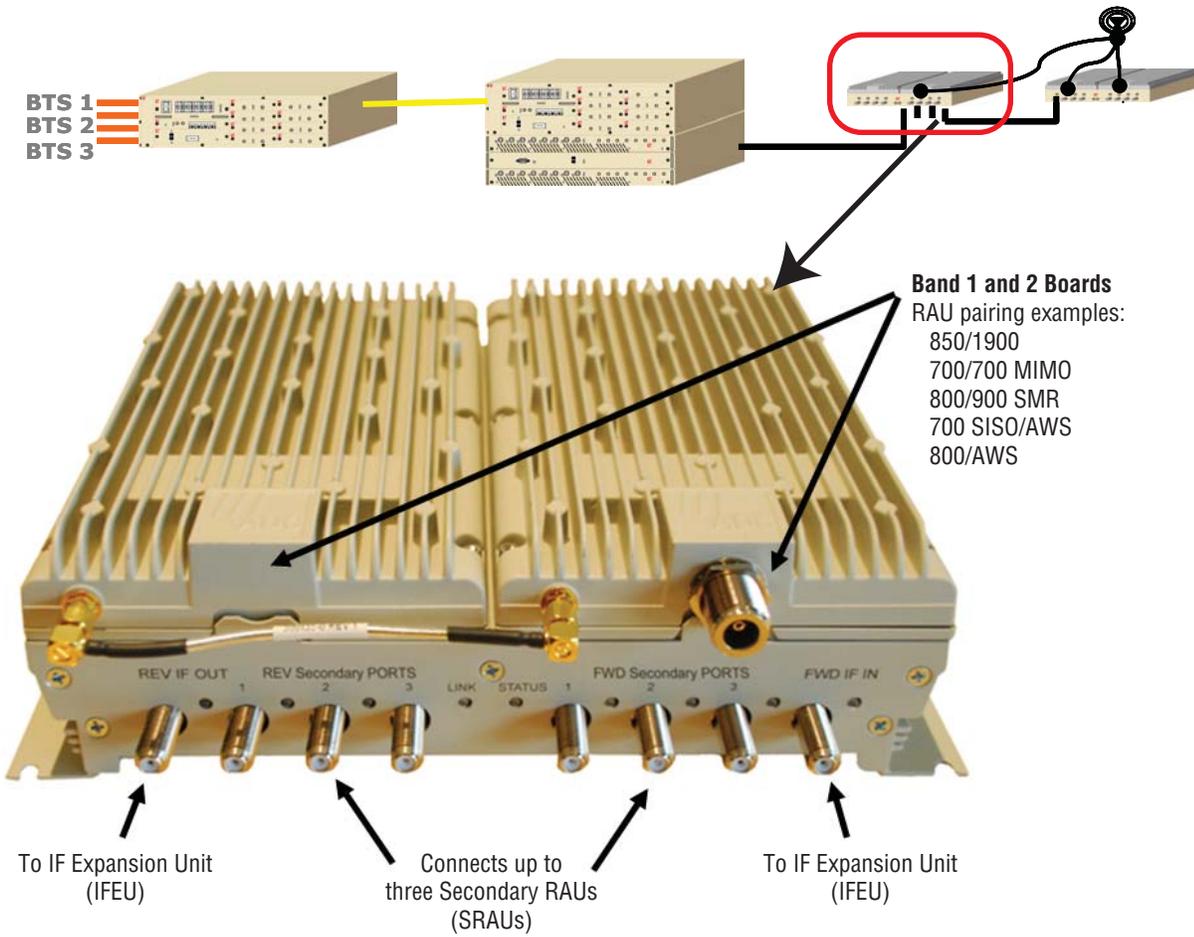

Secondary Remote Access Unit

The Secondary Remote Access Unit (SRAU) design allows for easier Band 1 and Band 2 Mix-and-Matching per country and/or market needs. SRAU components are as shown in the following figure.

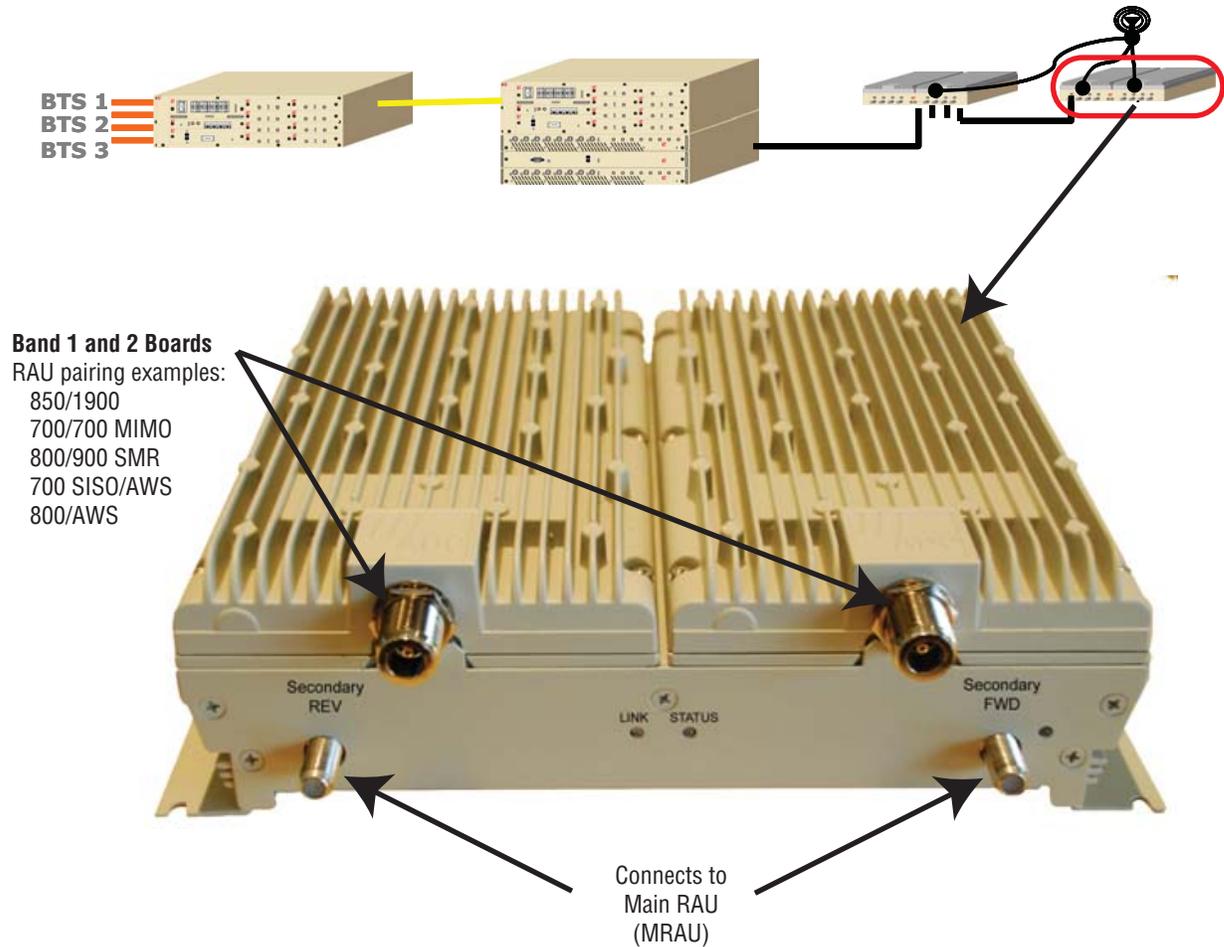

Omni Antenna

The Omni Antenna (4214-M727) supports the following:

- Port 1
 - 698-806 MHz (700 LTE)
 - 1710-2170 MHz (AWS)
- Port 2
 - 806-941 MHz (Cellular/SMR)
 - 1850-1990 MHz (PCS)
- Port 3
 - 2500-2700 MHz (WiMAX)

The Omni Antenna (see figure below) is a round radome with the following specifications:

- 8.5-inch diameter
- 1.65-inch height
- 72-inch pigtails that are plenum-rated cables with N (male) connectors




NOTE: Two antennas per RAU is required for MIMO performance.

INSTALLATION

Follow the steps in the order in which they are presented.

- 1 Connect the Host single-mode fiber SFPs (1-4) to the DART Remote Unit SFPs (5-8):
 - HU SFP 1 to DRU SFP 5
 - HU SFP 2 to DRU SFP 6
 - HU SFP 3 to DRU SFP 7
 - HU SFP 4 to DRU SFP 8
- 2 Connect the provided Vdc power cables to the +V and -V power-supply terminals.


CAUTION! The Power Supply requires 2-20amp 120VAC outlets.

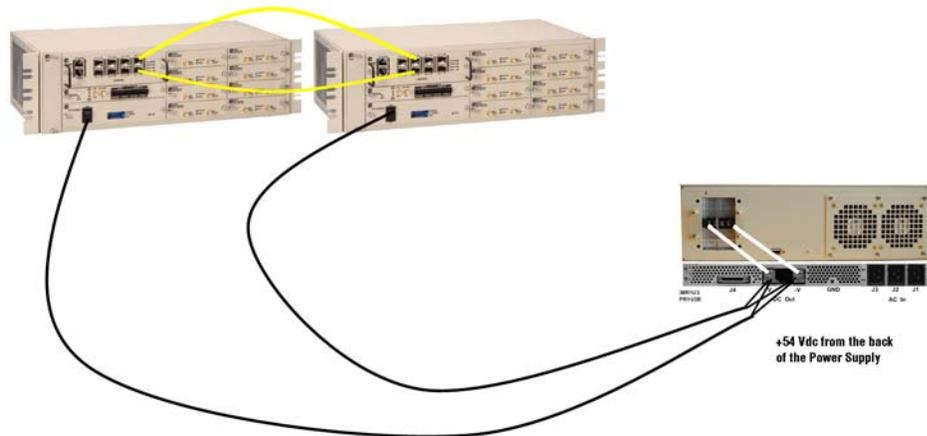

- 3** Connect IF DART QMA cables to IFEU:
 - a** Connect QMA cable from all IF DART FWD OUT connectors to any IFEU FWD Module IF IN connector.
 - b** Connect QMA cable from all IF DART REV IN connector to any IFEU REV Module IF OUT connector.




- 4** Connect F connector CATV cable from IFEU FWD Module Port IF OUT to MRAU FWD IF IN F connector.

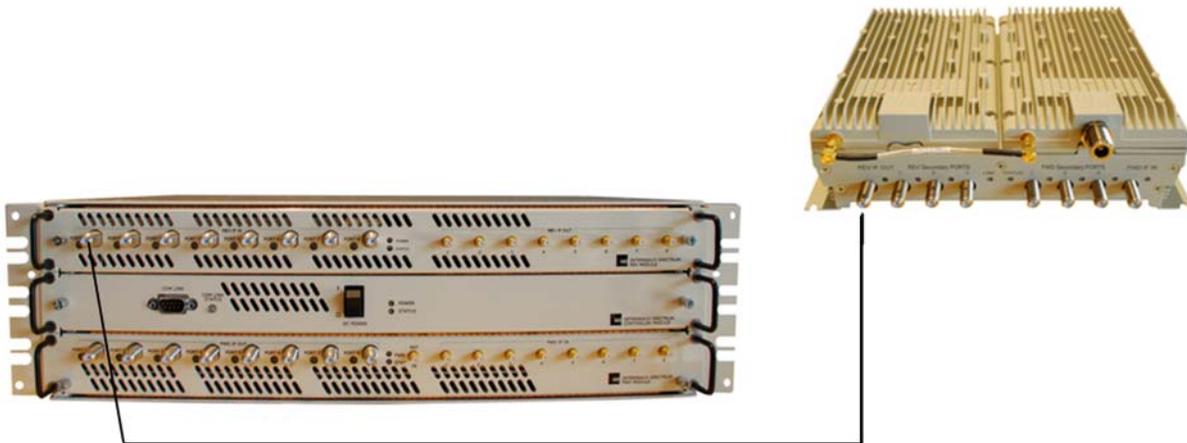


- 5 Connect F connector CATV cable from IFEU REV Module Port IF IN to MRAU REV IF OUT F connector.




- 6 Connect MRAU and SRAU F FWD and REV connectors:
 - a Connect F connector CATV jumper cable from MRAU FWD Secondary F connector to SRAU Secondary FWD F connector.
 - b Connect F connector CATV jumper cable from MRAU REV Secondary F connector to SRAU Secondary REV F connector.

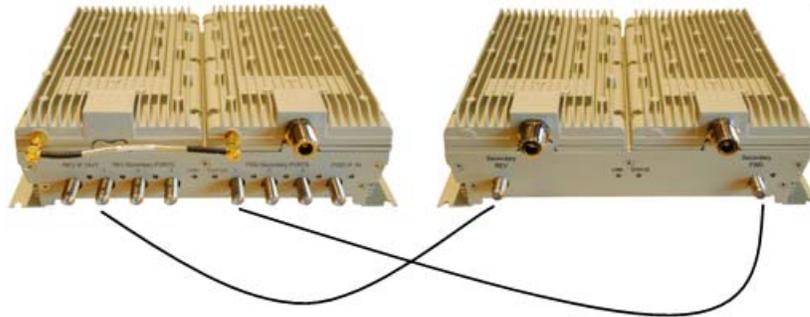

CASCADING

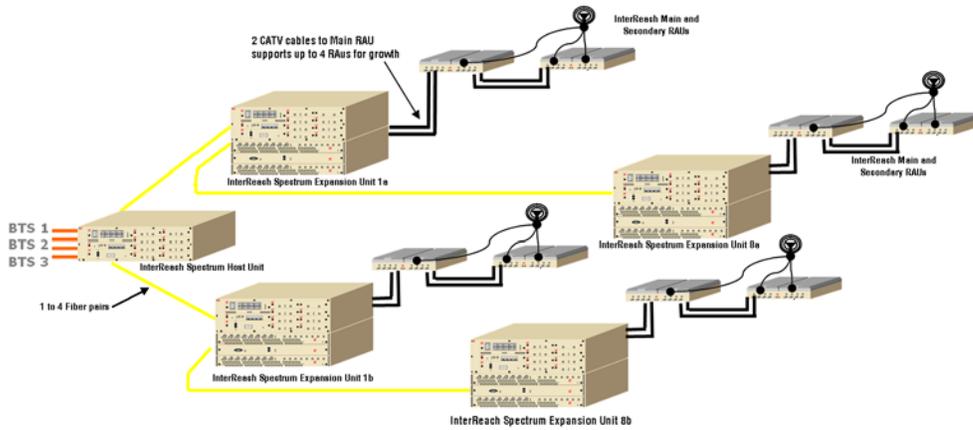

You add bands by inserting DART cards and CATV jumper between the Main and new Secondary RAUs, as shown below. 1 to 16 cascaded Expansion Units support up to 128 RAU locations.

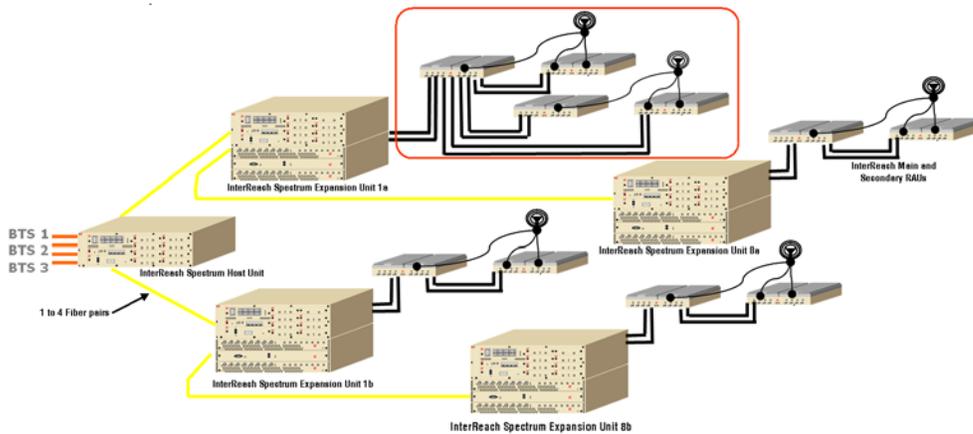

SPECIFICATIONS

RF Specification

Supported Frequency Blocks	2 per Remote Antenna Unit; 1-8 per Host Unit
Bandwidth	1.5 to 75 MHz non-contiguous
Frequency Band Supported	850 Cellular, 1900 PCS, 700 2100 AWS (Future Release) E-SMR 800/900 (Future Release)

Propagation Delay

System Delay	<12 microseconds
Delay Management Digital	(Manual or Automatic)

Noise Figure

Noise Figure	<12 dB
Input IP3	>-10 dBm

Optical Specifications

Optical Budget	10 dB (Standard); 26 dB (Optional)
Digital Transport Rate	3.072 Gbps

Output Power

Output Power per Band	26 dBm 850MHz Cell 26 dBm 1900MHz PCS 26 dBm 700MHz LTE 26 dBm 2100MHz AWS (future)
-----------------------	--

Remote Access Unit

Operating Temp	-25°C to +50°C
Storage Temperature	-40°C to +70°C
Humidity	10% to 90% non-condensing
Dimensions	10.67" x 8.25" x 3.00"
Weight	7.49 Pounds

Host Unit and Dart Remote Unit

Mounting	19- and 23-inch rack
Dimensions (Rack mountable)	5.25" x 19.00" x 19.00"
Weight	<25 Pounds

Host Unit and DART Remote Unit Power Requirements

Power Source	21 to 60 VDC floating
Battery Backup	UPS

IF Expansion Unit

Mounting	19- and 23-inch rack
Dimensions (Rack mountable)	5.25" x 17.11" x 11.93"
Weight	<19.5 Pounds

IF Expansion Unit Power Requirements

Power Source	+51 to +57 VDC
Battery Backup	UPS

Remote Access Unit

Operating Temp	-25°C to +50°C
Storage Temperature	-40°C to +70°C
Humidity	10% to 90% non-condensing
Dimensions	11.50" x 9.00" x 3.50"
Weight	7.49 Pounds

Remote Access Unit Power Requirements

Power Source	54 VDC (from IFEU)
--------------	--------------------

Element Management

Embedded EMS	Yes
SNMP Based Management	Yes

CONTACTING ADC



PHONE :

U.S.A. or CANADA

Sales: 1-800-366-3891
 Extension 73000
 Technical Assistance: 1-800-366-3891
 Connectivity Extension: 73475
 Wireless Extension: 73476

EUROPE

Sales Administration: +32-2-712-65 00
 Technical Assistance: +32-2-712-65 42

EUROPEAN TOLL FREE NUMBERS


Germany: 0180 2232923
 UK: 0800 960236
 Spain: 900 983291
 France: 0800 914032
 Italy: 0800 782374

ASIA/PACIFIC

Sales Administration: +65-6294-9948
 Technical Assistance: +65-6393-0739

ELSEWHERE

Sales Administration: +1-952-917-3000
 Technical Assistance: +1-952-917-3475

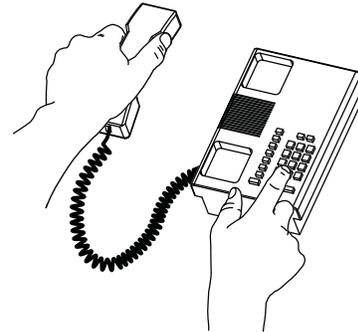


13944-Q

WRITE:

ADC Telecommunications (S'PORE) PTE, LTD;
100 Beach Road, #18-01, Shaw Towers.
Singapore 189702.

ADC Telecommunications, INC
PO Box 1101,
Minneapolis, MN 55440-1101, USA

ADC European Customer Service, INC
Belgicastraat 2,
1930 Zaventem, Belgium

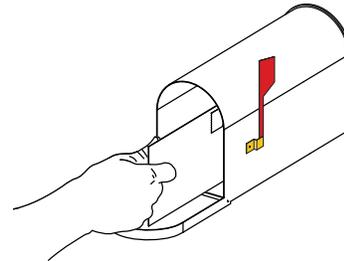


PRODUCT INFORMATION AND TECHNICAL ASSISTANCE:

connectivity.tac@adc.com

wireless.tac@adc.com

euro.tac@adc.com

asiapacific.tac@adc.com

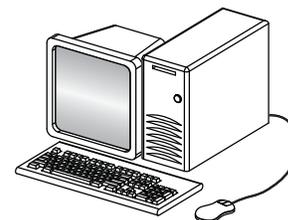

REPRINTS:

PDF copies of manuals are available
 for downloading at the following link:

www.adc.com/manuals

ADCP Number: 77-079

Contents herein are current as of the date of publication. ADC reserves the right to change the contents without prior notice. **In no event shall ADC be liable for any damages resulting from loss of data, loss of use, or loss of profits and ADC further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.**



Website: www.adc.com