

Digital Satellite Receiver

User' s Guide

FOR YOUR SAFETY

Information contained in this manual is subject to change without notice. No part of this publication may be copied, reproduced, or translated to another language for any purpose.

FOR YOUR SAFETY

- Be sure to read the user manual before starting the operation of the receiver.
- Do not open the housing. The receiver contains high-voltage components and parts.
- Even after switching off the receiver still contains high-voltage for a while.
- Do not expose to rain or moisture.
- Do not make objects or fluid enter the housing through the ventilation slot. If any spilt liquid went into to the housing, unplug the power cord and call your local service provider.
- Do not place close to any heat source.
- Do not press with hard or heavy object.
- To protect possible malfunction by lightning, we recommend you to use power surge unit. Call your local dealer for advise.

For Your Safety

1. Before Getting Started	1
1.1 Main Features	1
1.2 Accessories	2
2. Controls and Functions	3
2.1 Front Panel	3
2.2 Rear Panel	4
2.3 Remote Control Unit	5
3. Connections	7
3.1 Connecting to the TV, VCR and Satellite Antenna	7
3.2 Connecting DiSEqC switch	7
3.3 Connecting to the TV, HiFi system and SPDIF	8
4. Settings and Operations	9
4.1 Basic Settings	9
4.2 Viewing TV(or Radio)	14
4.3 Other functions	18
4.4 System Settings	21
4.5 Game	24
5. Appendix	25
5.1 Troubleshooting	25
5.2 Specification	25
5.3 Glossary	26

BEFORE GETTING STARTED

1.1 Main Features

- Easy Menu Function
- TV Guide Function
- RF Output Function
- Electronic Program Guide(EPG) for On Screen Channel Information
- Software Upgrading Function Through RS-232C Cable by PC
- Perfect DiSEqC 1.2 and 0/12V Support for Various Antenna System or 2-LNB on 1 Antenna System
- Supports of Ku/C band, SCPC and MCPC
- Additional Audio Output Function for Connection to Hi-Fi Audio System
- Other Functions of Remote Controller, Receiving Level Selection, Channel Editing, Menu Language Selection and Audio Selection
- Digital free-to-air Satellite Receiver
- NTSC & PAL Output Function

Regardless of the TV type, NTSC and PAL channels can be viewed by selection

Note

When PAL channel is viewed on NTSC TV, small deletion on up & down sides of the screen may occur and it is normal, as its conversion is managed by software. And darker color on the bottom side of the screen may occur, when NTSC channel is viewed on PAL TV.

- 1200 Transponders and 1820 Channel Memory Function
- Teletext Supported
- Multi Language Function(Menu, Audio)

1.2 Accessories

RCA cable

User's Guide

Batteries(AAA)

Remote Control Unit



RCA Cable



User's Guide




Batteries (AAA)



Remote Control Unit

CONTROLS AND FUNCTIONS

2.1 Front panel

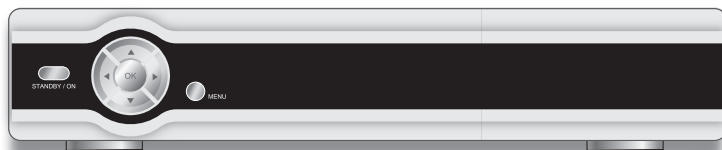

STANDBY / ON

Turn the power on/off.

MENU

Shows the menu application.


Channel ▲ ▼

Change channel, move menu, or input frequency value.

Volume ◀ ▶

Control volume, change item on menu or input frequency value.

2.2 Rear panel

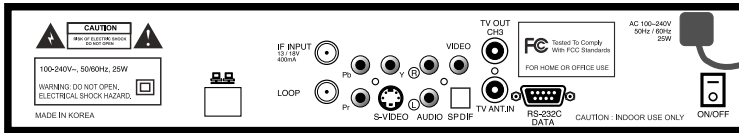

IP Connection

Network interface

IF INPUT

It receives signals from the LNB in the range of 950 ~ 2150MHz. Connect a satellite dish to DIGITAL.

LOOP

It sends signal to the another receiver.

YPbPr

Component analog video signal.

S-Video

It provides high definition screen.

AUDIO

It provides stereo audio output. Connect the audio on TV to AUDIO with RCA cable.

VIDEO

It provides composite video output. Connect the Video on TV to VIDEO with RCA cable.

SPDIF

Output for connection to a digital amplifier

TV OUT CH3

It provides a modulated audio and video from the receiver. Connect the TV/VCR on TV to TV/VCR with the RF cable.

TV ANT IN

The signal supplied to this connector from a TV antenna will be sent to TV antenna output. Connect a TV antenna to TV ANT IN.

RS-232C DATA

It receives data by connecting to PC for software upgrading. Connect with RS-232C cable a PC and receiver.


ON/OFF

The switch is to turn on or off the main power of the receiver mechanically.

CONTROLS AND FUNCTIONS

2.3 Remote Control Unit

Open the controller cover on the back and insert two batteries (AAA - 1.5V).

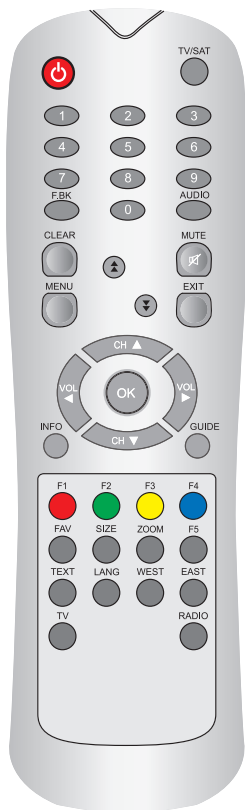

POWER

Turn the power on/off.

TV/SAT

Select between TV Channels and Satellite channels for RF output.

Numeric(0~9)

Change channel or input frequency value.

F. BK

It is to move to previous channel.

AUDIO

Select Stereo, Main or Sub from multi language channels available.

CLEAR

Clear wrong number input or delete channel from TV (Radio) list or favorite channel list.

MUTE

Deactivate current sound.

MENU

Shows the menu application.

Page UP/DOWN

Move to previous/next page on TV(Radio), Favorite Channels or Edit TV(Radio) Channels.

EXIT

Exit from the menu.

Volume ◀ ▶

Control volume, change item on menu or input frequency value.

Channel ▲ ▼

Change channel, move menu, or input frequency value.

OK

Select menu or value on menu item.

INFO

Shows the information of current channel. Click the INFO button twice, EPG mode will be displayed. When pressed in channel list channels will be sorted in alphabetical order A-Z.

GUIDE

Shows EPG[Electronic Program Guide]

FAV

Add TV or Radio channel to the favorite list on Edit TV(Radio) Channels, or watch favorite channel from your favorite list.

SIZE

Select between standard 4:3 and wide 16:9 screen sizes.

ZOOM

2 times zoom in mode. First press, show target area box. Second press, show zoomed screen. Zoom area can be moved with arrow keys. Exit zoom in mode with "EXIT" remote key.

TEXT

Change to Teletext mode.

LANG

Select the audio language from 2 or more audio language channels available.

EAST/WEST

The function of EAST/WEST button is to move the Position Actuator westward/eastward.

TV

Change to TV mode from radio channel.

RADIO


It is for fast change to radio mode from TV channel. .

Connections

3.1 Connecting to the TV, VCR and Satellite Antenna

It is not necessary to adjust power, as the product is of free - voltage (110-220V)


1. Connect the RF cable from the TV OUTPUT on the satellite receiver to a TV and connect the RF modulate on the VCR and the TV ANT.IN.
3. Connect an antenna to the LNB socket on the VCR or other receiver and cable of the satellite dish to the DIGITAL on the satellite receiver.

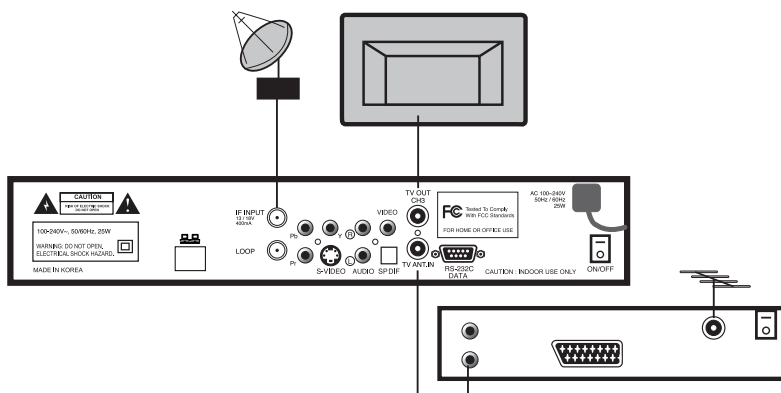

3.2 Connecting DiSeqC switch


If you have one antenna equipped with many LNBs or two antennas with one LNB on each, you need a DiSeqC switch.

1. Connect the LNBs to a DiSeqC switch at first.
2. Connect the antenna cable to the OUT connector on the DiSeqC switch and connect the end of the cable to the DIGITAL on the satellite receiver.

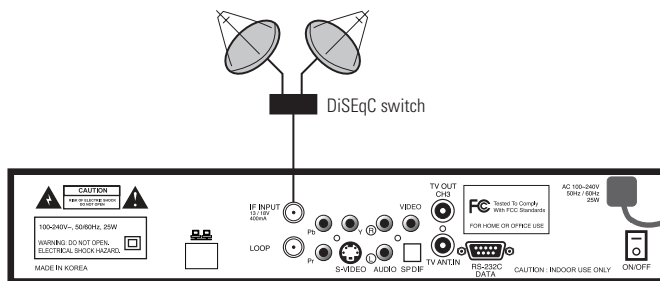

3.3 Connecting to the TV, HiFi system and 0/12V switch

1. Connect the RCA cable from the VIDEO INPUT on the TV to the VIDEO on the satellite receiver.
2. To use 0/12V switch, connect one cable of the 0/12V switch to the 0/12V on the satellite switch and connect another cable to the DIGITAL on the satellite receiver.
3. Connect a RCA stereo cable from the AUDIO RL on the satellite receiver to the AUDIO RL on the HiFi system.

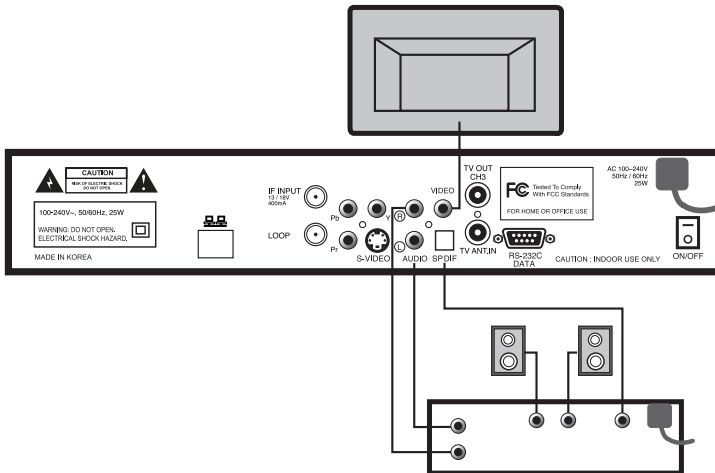

Settings and Operations

4.1 Basic Settings

If it is the first time using a receiver, you should set parameters for system configuration. Refer to the following section.

1. Turn on your TV and Satellite receiver.
2. Press the MENU button, main menu screen will appear as shown below.



<LNB Power>

1. Select Installation on the Main Menu.
2. Select LNB Power.




3. If LNB Power is independently supplied from outside source, set the LNB Power OFF. Otherwise set it ON.




4. After completion of LNB Power setting, go back to Installation menu by pressing MENU.

<DiSEqC 1.2 Limit Settings>

If you have a DiSEqC 1.2 motoried system to control your satellite antenna you have to make the following setting. First, you must select ON on DiSEqC 1.2 of LNB Setting in the TP Configuration. <  **Please refer to the TP Configuration section** >

1. Select DiSEqC 1.2 Limit Settings of the installation.
2. You should set the East Limit and West Limit of your satellite antenna. If you use the satellite receiver at first. Press OK button on the Change Limit item, set the East/West Limit.

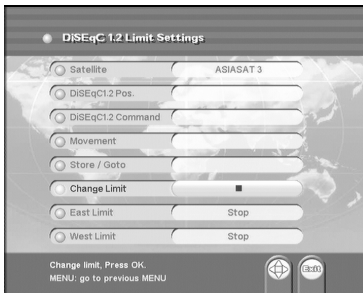

3. Select satellite you want and DiSEqC1.2 Pos. will be set automatically.



Satellite / DiSEqC1.2 Pos.

The Satellite shows current name of satellite, and DiSEqC1.2 Pos. shows positioner value of the current satellite.

DiSEqC1.2 Command

DiSEqC1.2 Command changes the current mode between Installer and User.

Movement

In User mode this is used to tune the position of the motor. In Installer mode this is used

Settings and Operations

to search for the position of a satellite manually.

Store

Stores the current position of the motor for the selected satellite name.


Goto

Moves the motor to the stored position of the selected satellite name.


<TP Configuration>

You have to know valid value for your LNB at first.

1. Select TP Configuration of the installation.
2. Select correct name of Satellite. If there is no proper satellite name listed in the item, select one from any of USER1 ~ USER 19.

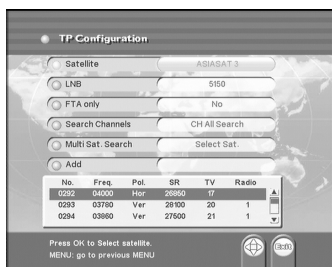

3. To change value of LNB from each satellite, press OK button from LNB.

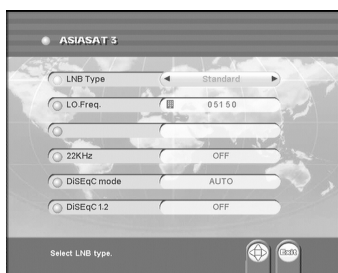

< Standard >



< Universal >


4. For universal type of LNB, select Universal from LNB Type item and input the LNB frequency value on Freq.High and Freq.Low by using VOL ◀ ▶ or numeric key.

For standard type of LNB, select Standard from LNB Type and input correct value on Freq..

5. While only 1 antenna is in use, set the 0/12V switch and DiSEqC mode. to Disable. In case of STANDARD, select OFF from 22KHz. If more then 1 antenna is in use, select 0V or 12V from 0/12V SWITCH, or select a proper position from Mini A, Mini B, DiSEqC 1 ~ DiSEqC 4 by different DiSEqC type as you are using DiSEqC switch.

6. Select Search Channels on the TP Configuration press OK, all the available TP will be searched automatically.

7. Move to desired TP with CH ▲▼ on the RCU. If there are no transponder data which you want, move to Add New TP and press OK button.

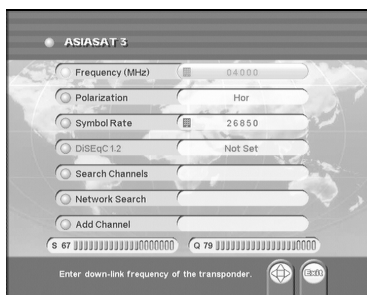

8. Select the desired satellite. And input correct values of Frequency, Polarization and Symbol Rate. Select the Polarization value as Hor or Ver. If you did not know accurate polarization value select Auto.

Note

You should find the correct data from satellite magazine or internet(<http://www.SATCOD>)

9. After all the values are input, select Search Channels and wait until the automatic search is complete

If FTA only is selected as YES, only free channels will be searched without scrambled pay channels. Otherwise all channel with scrambled pay channels will be searched. Scrambled pay channels is marked as \$ at the beginning of the channel name.

After successful completion of channel searching, move to TV Channels or Radio Channels on MAIN MENU to select currently received channels. Then you should select the TV channel or Radio channel which you want. After then you can watch the TV program or listen to the radio.