

ATOMIC

Quick Set-Up Guide

AW880 (900MHz)PLL

Indoor Speakers


Congratulations on the purchase of **AW880** (900MHz) PLL (Phase Locked Loop) Wireless Stereo Speakers!

Table of Contents


- I. Location of functions
- II. Connecting the speaker system
- III. Adjusting the transmitter
- IV. Tuning the speakers
- V. Turning the speakers off
- VI. Troubleshooting
- VII. Specifications & Features

I. Location of Functions

Speaker Front View:

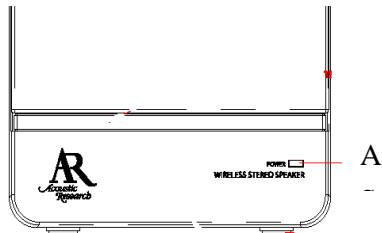


Speaker Back View:

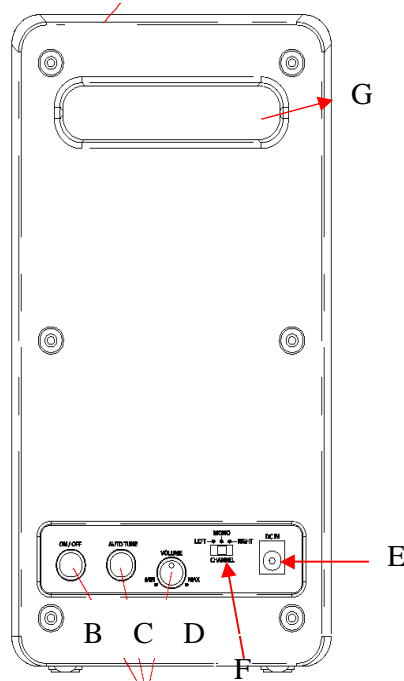

- A. Standby (Red)/Tuned (Blue) indicator light
- B. Power (push button)
- C. Scan control -Auto Tune (push button)
- D. Volume
- E. Left/Mono/Right switch
- F. Speaker Power input jack
- G. Carry Handle

Transmitter Front View:

Transmitter Back View:

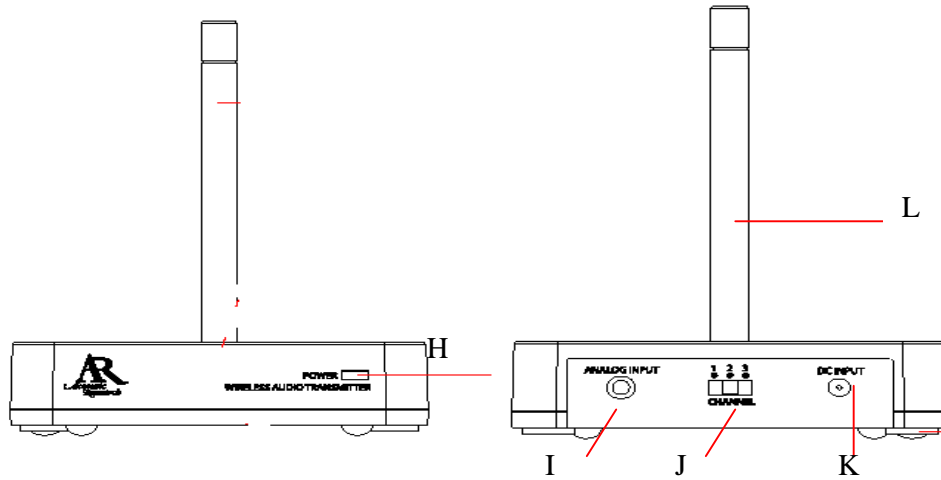

- H. On = Transmitter on (Blue)
- I. Audio input cable (Built in)
- J. Channel Select switch
- K. Transmitter power input jack
- L. Antenna

Accessories:



N. Receiver AC power adaptor
18V DC

II. Connecting the Speaker System:

I. Powering the Transmitter

Connect the small, round plug from the transmitter AC power adapter (M) to the transmitter power input jack (I) and plug the other end of the transmitter AC power adapter (M) into any standard 120V AC wall outlet.

Note: Be sure to use the AC power adapter rated 12V DC 100 mA.

Note: There is no transmitter ON/OFF switch. The transmitter is designed to be left plugged in and powered at all times.

If you do not intend to use the AW880 for an extended period of time, you may wish to unplug the transmitter AC power adapter.

II. Connecting to an Audio Source:

i. Connecting with I-pod, Mp3....etc.

Connect the 3.5mm audio IN cord (I) into the music source out directly.

ii. Connecting to an A/V Receiver:

1. If necessary, connect the “Y” adapter cable (Not included) to the 3.5mm mini plug cable coming out of the transmitter.
2. Connect the RCA-type left (white) and right (red) audio plugs on the “Y” adapter cable to the corresponding left and right audio outputs of your A/V receiver, amp or other audio source.

iii. Connecting to a Stereo or a Computer:

1. Plug the cable coming out of the transmitter into the headphone output of your stereo or the audio output jack on your computer. Or use the included 1/4” headphone adapter (Not included) to convert the 3.5mm plug to a 1/4” plug as needed.

Warning: This product is designed to work with line level outputs or headphone outputs **only**. **DO NOT** connect it directly to speaker outputs, as it will permanently damage the transmitter.

III. Powering the Speakers

There are two options to power your wireless speakers:

i. AC Power Adapter:

1. Turn the speaker volume down by rotating the volume (D) on the rear of the speaker all the way to the left.
2. Insert the small, round plug from one speaker AC power adapter (N) into the speaker power input jack (E).
3. Plug the other end of the speaker AC power adapter into any standard 120V AC wall outlet.

Note: Be sure to use the speaker AC power adapters rated 18V DC 500 mA.

III. Adjusting the Transmitter

1. Turn ON your audio source (i.e., A/V receiver, TV, stereo, etc.) and play music at a normal listening volume.
2. Set the channel select switch (J) on the back of the transmitter to 1, 2 or 3. The transmitter provides three different broadcasting frequencies. In the event that you experience poor reception or interference, try choosing a different frequency by moving the channel select switch to another position.
3. If the transmitter gets the signal from the audio source and ready, the “On” (H) on the front of the transmitter will turn blue.

Note: If the light does not on, please check the following:

- Confirm the transmitter AC power adapter (M) is securely connected.
- Confirm the cable from the transmitter is securely connected to the audio source output (TV, A/V receiver, etc.).

IV. Tuning the Speakers

1. Push the power (B) to turn each speaker ON. The standby/tuned indicator light (A) will illuminate red while the speakers are tuning to the transmitter. The standby/tuned indicator light (A) will illuminate blue, indicating that the speakers are tuned to the transmitter, and you should hear sound coming from the speakers.

Note: Once the speakers have tuned to the transmitter, the standby/tuned indicator light (A) will change from “Red” to “Blue”.

2. Adjust volume on each speaker as desired.
3. For stereo operation, set the left/mono/right switch (F) to “left” on the speaker located to the left of the listener, and set the other speaker to “right” position. Set each speaker to “mono” for the best audio quality, if you plan on using one speaker in a different room from the other.
4. The speaker will automatically retune if it loses the signal from the transmitter. However, you can also push the power/volume/scan control to retune the speaker at any time. While the speaker is tuning, the standby/tuned indicator light (A) will turn red. After locking onto the transmitter signal, the blue standby/tuned indicator light (A) will come back on.
5. The transmitter has auto-cut-off function. When there is no audio signal for a prolonged period, the power of the transmitter will be automatically cut off.

Note: Interference in the form of static and/or distortion can sometimes be heard. If this occurs, confirm the transmitter/speaker adjustments and indicators. If the problem persists, refer to the Troubleshooting section of this manual.

V. Turning the Speakers Off

Push the power (B) to turn each speaker OFF.

VI. Troubleshooting

The following troubleshooting guide takes you through some of the more common problems associated with the installation and/or operation of a wireless system.

Issue:	Cause and solution:
No Sound	<ul style="list-style-type: none">• Check that the transmitter AC power adapter is fully inserted into the wall outlet and the power cord from the AC adapter is firmly connected to the transmitter power input jack.• Confirm that the speakers are turned ON and tuned to the transmitter – standby/tuned light (A) on the front of the speakers should illuminate blue.• Confirm that the speaker AC power adapters are fully inserted into the wall outlet and the power cord from each AC power adapter is firmly connected to the speaker power input jack. <p>or</p> <ul style="list-style-type: none">• Check that the audio source component (stereo, TV, etc.) is turned on and transmitting sound as it normally should.• Check that the speaker volume is turned up.
No sound/ distortion/ static	<ul style="list-style-type: none">• Check that the speaker standby/tuned indicator light (A) is illuminated blue. <p>or</p> <ul style="list-style-type: none">• Change the position of the channel select switch (1, 2 or 3) to change the operating frequency. The speaker will detect the loss of signal and retune automatically. However, you can also press the scan control (C) once to make the speaker retune.• Change the location of the transmitter. Place it as high and away from obstructions as possible. Avoid placing the transmitter directly on top of or behind a TV.• Move the transmitter and speakers closer together. Sending the signal through certain materials, such as glass, tile, and metal, can decrease the effective transmitting distance of the system.

V III. Specifications & Features

Transmitter

Omnidirectional

PLL (Phase lock loop)

Effective transmitting range: up to 80 meters*

3 selectable broadcast frequencies (between 912 and 914 MHz)

Stereo audio input with 3.5mm (built in)

UL-list AC power adapter

Speakers

Push-button, auto-lock tuning

5 Watts per channel RMS (each speaker)

1.5” dome tweeter; 3” woofer

Integrated power/volume/scan control

Left/mono/right switch (rear face)

Frequency response: 20 Hz – 20kHz

Signal- to- noise ratio > 55dB

Stereo separation > 20dB

Distortion : <1.5

* Maximum range; results may vary according to environment.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.**
- Consult the dealer or an experienced radio/TV technician for help.**

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B set conforme a la norme NMB-003 du Canada.

“Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device”.

www.araccessories.com