# XCAM2™ AND WIDEEYE™ INDOOR/OUTDOOR WIRELESS CAMERA SYSTEM

Congratulations! You have purchased X10's most popular wireless camera system. Your XCam2 or Wide Eye is a powerful and versatile video solution.

Your camera uses X10's 900 Megahertz wireless technology to transmit live video through walls to a television up to 100 feet away. It's also designed so that you can combine multiple cameras to provide comprehensive coverage of your home or business.

This owner's manual will take you through setting up and using the camera. The world of wireless video is waiting for you!

Trim to crop marks



## X10 Wireless Technology, Inc. **Limited One Year Warranty**

X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants X10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X10 agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10 within the warranty period and with proof of purchase. If service is required under this warranty:

Trim to crop marks

Call 1-800-442-5065, visit www.x10.com, or e-mail support@x10.com. For help or more information on setup, please visit: www.x10.com/support

X10.com, a division of X10 Wireless Technology, Inc. 400 Forge Way, Rockaway, NJ 07866

> 2 9M XCam2-3/11

Fold

Fold

**OWNER'S MANUAL** 

PLEASE KEEP FOR FUTURE REFERENCE

Fold

Fold

Trim


crop

marks

to

Basic Camera Setup, cont.

Turn on your TV.

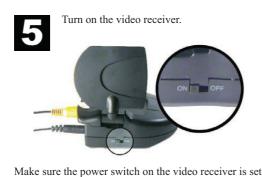

Basic Camera Setup, cont.

Fine tune the antennas



of the receiver's antenna marked with four squares.

Adjust the positions to improve the picture on your TV.

Once the camera and receiver are in place, adjust their antennas so that they face each other. The side of the camera's antenna with the dot on it should face the side

Trim to crop marks

**Options** 

5

Camera

You can attach your



Mounting the

camera to a wall using the supplied screws.



Turn on your TV and select its video input. Use the Video or Select buttons on your TV remote control, or try channel 0 and then Channel Down. The camera's picture should appear.

Trim to crop marks

## **Basic Camera Setup**

Your camera is ready to go out of the box! Follow these steps for a quick setup of your new Camera system.



Trim to crop marks

You should have: a camera and its power supply; a wireless video receiver and its power supply; and a video cable.



Fold

Plug the camera's power supply into a standard wall outlet. Plug the other end into the camera. Remove the protective cover from the camera's lens.

Fold

### Options, cont.

## Recording with a VCR

You can configure your XCam2 camera so that you can record its video signal on your VCR. It's easy:

- Make sure your VCR is connected to play back on your TV.
- 2. Set up your camera according to the instructions in steps 11 thru 7
- Connect the video cable from the video receiver into the Video In jack on your VCR.

Trim to crop marks

With the camera connected to the VCR, you will be able record surveillance video while watching on your TV. Check your VCR owner's manual if you aren't sure how to select the camera as the video source.



# Basic Camera Setup, cont.

Connect the wireless video receiver to power.

Put your video receiver in a convenient place near or on your TV. Plug its power supply into a standard wall outlet and the other end into the video receiver.

4

Connect the video receiver to your TV.



Trim to crop marks

Connect the video cable into the video-out jack on the video receiver and into the video-in jack on your TV.

Fold

Fold

#### **Multi-Camera Systems**

How does it work?

XCam2 cameras are designed so that you can use more than one camera together with one wireless video receiver. You select different cameras using a remote control. The cameras should be set in groups of four, i.e., A1, A2, A3, and A4, or A5, A6, A7, and A8. You change the setting by turning the dials on the camera's power supply. Ensure all of your cameras are set to the same Housecode, e.g. A.

#### **Setting Up Multiple Cameras**

- Get together the parts of your multi-camera system: the cameras and power supplies, video receiver and power supply, video cable, transceiver module, and camera remote control.
- 2. Set up your first camera and your video receiver according to the instructions in steps 1 thru 7
- 3. Plug in the transceiver module and extend the antenna.
- 4. Remove the battery cover and put four AAA batteries into the remote. Make sure to match the batteries to the + and marks inside the battery case.





marks

Trim

crop

to

8

#### Multi-Camera Systems, cont.




5. Press 1 Off on the remote control to turn the first camera off.

- 6. Set the dials on the second camera's power supply to A and 2.
- 7. Connect the second camera to your TV.



Trim to crop marks power. A picture will appear on



Repeat steps 6 through 8 for each additional camera, changing the Unit Code as appropriate. For each extra camera, set the Unit Code (number) dial to the next number. For example, your third camera will be set to '3,' your fourth camera set to '4' and so on. Set all cameras to A.

Fold

# Fold

# **Troubleshooting**

## If there's no camera picture on your TV:

1. Make sure your Wireless Video Receiver is connected to power and turned on.



Trim to crop marks

- 2. Select the appropriate video input on your TV. Usually you can select the input mode by pressing the VIDEO or INPUT button on the remote control. Or, you might have to change the TV to Channel 0 or 2, and then use Channel Down to change video inputs. See your TV's owner's manual if you still aren't sure how to change the video source.
- 3. Make sure your camera is connected to power and turned on.
- 5. Follow the setup steps again (steps 1 thru 7), and check that you have done each step correctly.

For more help on setup, please visit: www.x10.com/support

#### Multi-Camera Systems, cont.

#### Switching Cameras with the Remote

To switch from one camera to another with the remote control, simply press the On button for that camera. For example, press 2 On to switch from the current camera to camera 2. When you do that, the current camera switches off and camera 2 switches on, displaying its picture. Note: If you have 8 cameras set up, before turning on a camera in group 1-4, turn off any cameras in group 5-8, and vice versa.

### Scanning Between Cameras with the Remote

If you select a camera with the remote, you can then use the scan buttons to cycle through cameras 1 through 4. First select a camera using its On button. Then use the blue arrow buttons at the bottom of the remote to go to the next or previous cameras. Each press of the button switches to the next or previous camera in order.

Cameras 1-4 on Write camera names here. and off. Cameras 5-8 on and off. Next/Previous camera. Set House Unit Switch Code the same

Trim to crop marks

Fold

#### **FCC & IC Caution**

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEVIED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Fold

Trim to crop marks

13 14

# Trim to crop marks

#### Multi-Camera Systems, cont.

#### **Using Different Unit Codes**

If you need to set your cameras to unit codes other than 1 through 4, make sure that you use Unit Codes within one of the three other camera groups: 5-8, 9-12, and 13-16. The camera switching system is designed to work within these groups.

When you change the Unit Codes on your cameras, you will also need to change the Unit Code grouping on your remote control.

# Trim to crop marks

To set to group:	Put the switch to:	Then press and hold:	And then:
1-4	1-8	1 On	Flip the switch back and forth once, and release the button.
5-8	1-8	5 On	
9-12	9-16	9 On	
13-16	9-16	13 On	

Flip the label on the remote over if you are using cameras 9 thru 12 or 13 thru 16.

#### Accessories



#### Ninja Pan 'n Tilt

Increase the viewable area of your camera by 400%. The standard XCam2 sees everything within a 60° x 60° field of view. But with the Ninja Robotic Mount, you get sweeping 240° x 130° views.

#### VCR Commander

Record only when there's movement in your camera's field of view. The VCR Commander issues "STOP" and "START" commands to your VCR anytime there's movement within 30 feet of your camera.



Trim to crop marks

#### **XRay Vision**



11

Monitor your home from anywhere in the world! With XRay Vision Software you can monitor your home from any computer with an Internet connection. E-mail video snapshots to your personal account or view them on your own secure Web Site.

Fold

Visit x10.com for more details.

Fold

Fold

12

# Fold

Trim

crop

marks

to

### FCC & IC Caution, cont.

This Class B digital apparatus complies with Canadian ICES-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada licenceexempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**NOTE:** Modifications to this product will void the user's authority to operate this equipment.

# **Home Control**

X10 remote controls are your gateway to a world of useful control and automation solutions built by X10. Why enter a dark room when there is a simple and affordable solution that can keep you safe and secure? From a simple remote control that can turn on a lamp, to a full-blown automation system, X10 provides you with all the products you need. With the right components in your X10 system, you can have all of these powerful options at your control:

- Enhance the color, brightness and detail of your camera's subject by adding more light automatically.
- Give your home a secure appearance by scheduling when lights and other electronics turn on and off.
- Distribute audio and video to stereos and televisions using wireless technology.
- Turn on house lights while sitting in your car.
- · Schedule sprinkler systems.
- Control your lights and electronic devices using your personal computer.

X10's control and automation products are easy to install and extremely affordable. Visit X10.com today for more information on the latest products to build and enhance your X10 system.

Trim to crop marks

15 16