


BR2-900



2 Relay Logic Module
with Built-In 900 MHz
Wireless Technology


(US version)

DESCRIPTION

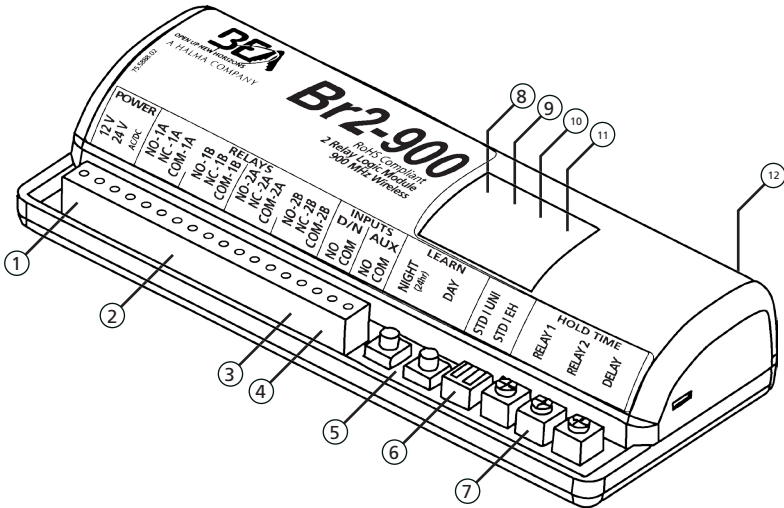


- | | | |
|--------------------|------------------------------|-----------------------------------|
| 1. Power input | 5. Learn buttons | 9. Relay 2 LED (white) |
| 2. Relay outputs | 6. DIP switches | 10. Relay 1 LED (blue) |
| 3. Day/Night input | 7. Potentiometers | 11. Tri-color signal strength LED |
| 4. AUX input | 8. Radio frequency LED (red) | 12. Antenna |


HAND HELD TRANSMITTERS

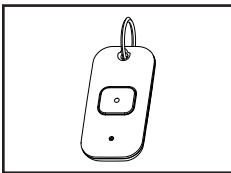


10TD900HH1

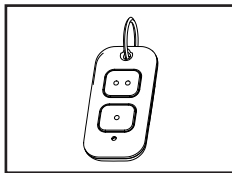


10TD900HH2

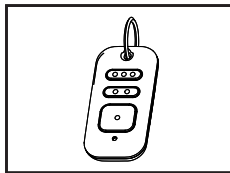


10TD900HH3

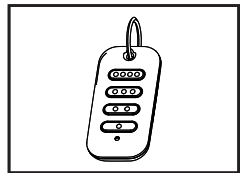

10TD900HH4

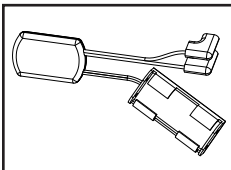

10TD900PB

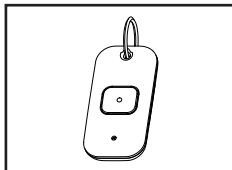

10TD900HH1U



- The device should not be used for purposes other than its intended use. All other uses cannot be guaranteed by the manufacturer of the product.
- The installer of the door system is responsible for carrying out a risk assessment and installing the product and the door system in compliance with applicable national and international regulations and standards on door safety.
- The manufacturer of the product cannot be held responsible for incorrect installations or inappropriate adjustments of the product.

PRECAUTIONS




CAUTION

- ❑ Shut off all power going to header before attempting any wiring procedures.
- ❑ Maintain a clean & safe environment when working in public areas.
- ❑ Constantly be aware of pedestrian traffic around the door area.
- ❑ Always stop pedestrian traffic through the doorway when performing tests that may result in unexpected reactions by the door.
- ❑ ESD (electrostatic discharge): Circuit boards are vulnerable to damage by electrostatic discharge. Before handling any board ensure you dissipate your body's ESD charge.
- ❑ Always check placement of all wiring before powering up to ensure that moving door parts will not catch any wires and cause damage to equipment.
- ❑ Ensure compliance with all applicable safety standards (i.e. ANSI A156.10) upon completion of installation.
- ❑ DO NOT attempt any internal repair of the components. All repairs and/or component replacements must be performed by BEA, Inc. Unauthorized disassembly or repair:
 1. May jeopardize personal safety and may expose one to the risk of electrical shock.
 2. May adversely affect the safe and reliable performance of the product resulting in a voided warranty.

INSTALLATION

Wiring

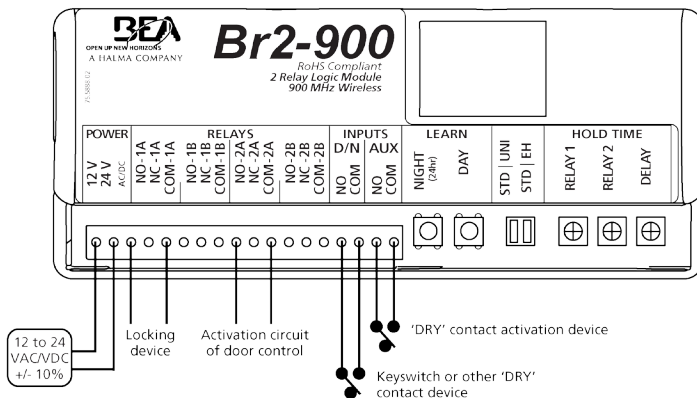

Relays 1 and 2 are DPDT: relays **1A and 1B** fire simultaneously and relays **2A and 2B** fire simultaneously.

Relays **1B and 2B** are commonly used in applications with two (2) locking devices and/or with two (2) independent door controls.

INPUT D/N, when open, allows transmitters learned in both NIGHT (24HR) mode and DAY mode to function and, when closed, only allows transmitters learned in NIGHT (24HR) mode to function.

INPUT AUX functions regardless of learn, DIP switch, or potentiometer settings.

USER INTERFACE

DIP Switches

DIP switches can be set to achieve desired functionality based upon specific application requirements.

DIP	STATUS	FUNCTION	DESCRIPTION
1	STD	standard mode	allows only learned/programmed transmitters to function
	UNI ¹	universal mode ²	allows programmed/learned and "universal transmitters" to function
2	STD	standard hold	pressing/holding or pressing/releasing transmitter activates and holds relay according to HOLD TIME POTs (single shot)
	EH	extended hold	pressing/holding transmitter holds relay as long as transmitter is pressed/held once released, relay acts according to HOLD TIME POTs

NOTES:

- 1. Day/Night mode does not function when DIP switch 1 is set to UNI.
- 2. See Universal Mode in Setup section on page 5.

Learn Buttons

900 MHz wireless transmitters can be programmed, or "learned", as either NIGHT (24 HR) transmitters or a DAY transmitters. Any combination of up to 75 transmitters may be programmed.

BUTTON	FUNCTION	DESCRIPTION
NIGHT (24 HR)	night / 24 hr transmitter learn	learned transmitter functions when INPUT D/N is open or closed
DAY	day transmitter learn	learned transmitter only functions when INPUT D/N is open

Potentiometers

Potentiometers control output relay functionality.


POT	FUNCTION	DESCRIPTION
HOLD 1	relay 1 hold time	0.5 to 10 seconds
HOLD 2	relay 2 hold time	0.5 to 10 seconds
DELAY	delay between relay 1 and relay 2	0 to 3 seconds

Signal Strength Indicator


Pressing and holding transmitter button for three (3) seconds activates signal strength LED on Br2-900.

LED COLOR	DESCRIPTION
GREEN	strong wireless signal
YELLOW	moderate wireless signal
RED	weak wireless signal


Hand Held Configuration

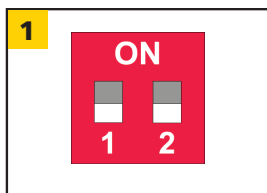


Set DIP switches as desired¹.

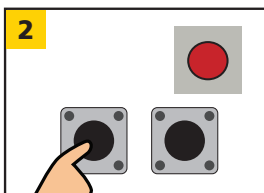

Press and release desired learn button (red LED on Br2-900 will illuminate).

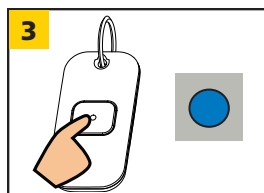

Press transmitter twice (white and blue LEDs on receiver will illuminate).

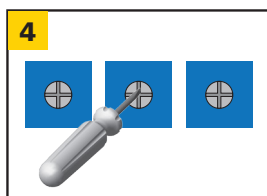


Adjust POTs as desired.


NOTES:

1: For DIP switch settings, please refer to table on page 3 under USER INTERFACE.


Push Plate Configuration

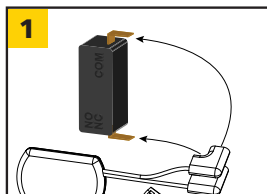

Connect transmitter¹ to push plate (NO & COM) and insert into box.

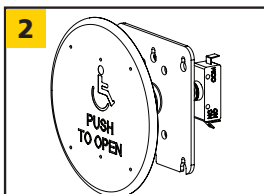

Install push plate.

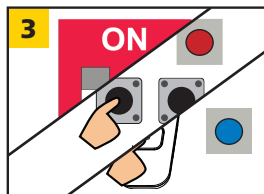

Follow steps 1-4 in Hand Held Configuration.

NOTES:

1: 10TD900PB required for push plates

Universal Mode

Universal transmitters (10TD900HH1U) do not need programmed, or "learned", to the Br2-900. Their unique serial number is automatically recognized by the Br2-900.

When set to Universal Mode, standard transmitters will function normally and must be programmed/learned as either "day" or "night" transmitters, following the Hand Held Configuration or Push Plate Configuration steps under SETUP on page 4.

SETUP (cont.)


Vestibule Configuration

Vestibule applications may be installed and programmed so that either door 1 and door 2 **open simultaneously** or door 1 opens first and door 2 **opens after a delay** (set by HOLD TIME potentiometers).

For 2-way traffic, two (2) Br2-900 modules are required.


1-Way Traffic (Simultaneous)

Door 1 and Door 2 will open simultaneously.

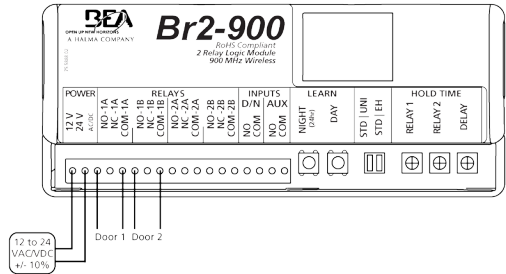


1-Way Traffic (Lock + Sim)

Lock(s) will unlock and then Door 1 and Door 2 will open simultaneously.

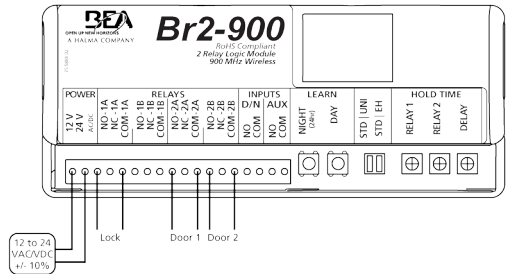


1-Way Traffic (Delay)


Door 1 will open and then Door 2 will open after a delay set by DELAY POT.

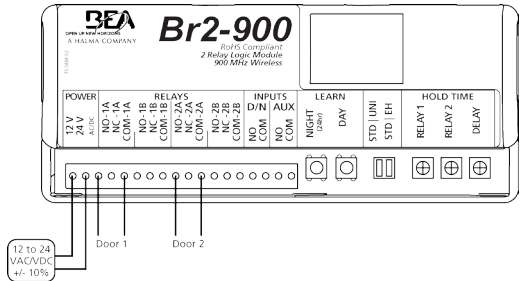

2-Way Traffic

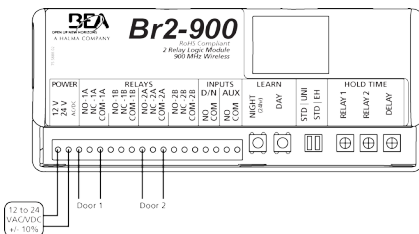


Door 1 will open and then Door 2 will open after a delay set by DELAY POT.

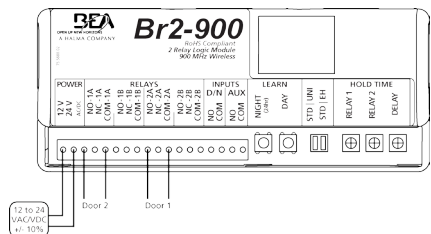


Door 2 will open and then Door 1 will open after a delay set by DELAY POT.

Removing Transmitters

Single Transmitter

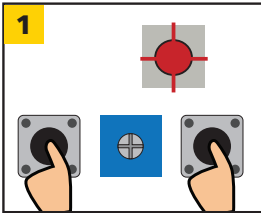


Press BOTH learn buttons until red LED flashes once (~2 s).

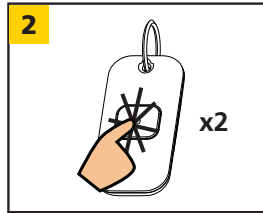

Press transmitter TWICE within 10 seconds.


All Transmitters

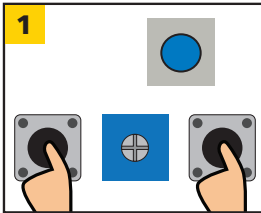


Press BOTH learn buttons until blue LED illuminates (~10 s).

Battery Replacement

Handheld (TD900HHx)

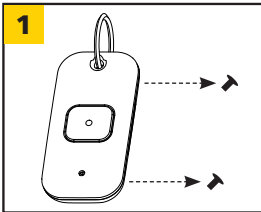


Remove back screws and disassemble.

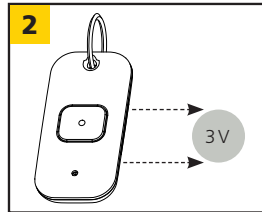

Replace 3 volt (CR2032) battery observing polarity and reassemble.

Push Plate (TD900PB)

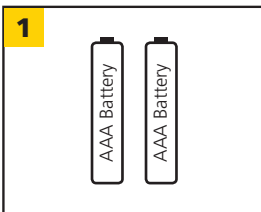

Replace 2 AAA batteries observing polarity.

Low Battery Indicator - After transmitter button is pressed, low battery is indicated by three (3) transmitter red LED blinks.

TROUBLESHOOTING



Br2-900 will not react to any inputs	Incorrect power	Verify power supply of 12 to 24 VAC/VDC +/-10% is wired to correct terminals
	Not programmed	Ensure a Br2-900 is programmed with wireless transmitter
	Incorrect wiring	Verify wiring
	Defective Br2-900	Replace Br2-900
Br2-900 has no output	Incorrect output devices	Ensure proper devices are connected to outputs
	Incorrect wiring	Verify wiring
	Incorrect settings	Verify programming and potentiometer settings
	Defective Br2-900	Replace Br2-900
red LED on receiver flickering; unable to program	Stuck push plate	Disconnect push plates to determine which is stuck (LED should go out)
	Faulty transmitter	If LED does not go out, remove transmitter batteries to determine which is faulty, replace transmitter
weak signal	Antenna positioned poorly	Position antenna outside of door header



TECHNICAL SPECIFICATIONS

Supply Voltage	12-24 VAC/VDC +/- 10%
Current Consumption	45 mA DC 75 mA AC
Frequency	908-918 MHz (frequency hopping)
Emitted radio power	-25 dBm (TX)
Power consumption	0.5 - 1.5 W
Programmable transmitters per receiver	75
Temperature Rating	-22° to 158° F (-30° to 70° C)
Input	
Day / Night (24hr)	DRY contact
AUX	DRY contact
Contact Rating	
Relay 1 DPDT / Relay 2 DPDT	2 A @ 30 VDC or 2 A @ 24 VAC
LEDs	blue (relay 1 activation) white (relay 2 activation) red (radio frequency / learn) tri-color (signal strength)
Certification	FCC, IC
Dimensions	5.2" x 2.2" x 1" (133 mm x 55 mm x 25 mm)
Housing	ABS - white translucent

Specifications are subject to change without prior notice.
All values measured in specific conditions.

FCC / IC

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Changes or modifications not expressly approved by BEA Incorporated could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC ID: 2ABWS-10BR2900	IC: 4680A-10BR2900	MODEL: 10BR2900
FCC ID: 2ABWS-10TD900PB	IC: 4680A-10TD900PB	MODEL: 10TD900PB
FCC ID: 2ABWS-10TD900HH4	IC: 4680A-10TD900HH4	MODEL: 10TD900HH1
FCC ID: 2ABWS-10TD900HH4	IC: 4680A-10TD900HH4	MODEL: 10TD900HH2
FCC ID: 2ABWS-10TD900HH4	IC: 4680A-10TD900HH4	MODEL: 10TD900HH3
FCC ID: 2ABWS-10TD900HH4	IC: 4680A-10TD900HH4	MODEL: 10TD900HH4
FCC ID: 2ABWS-10TD900HH1U	IC: 4680A-10TD900HH1U	MODEL: 10TD900HH1U

ANSI / AAADM Compliance

Upon completion of the installation or service work, at a minimum, perform a daily safety check in accordance with the minimum inspection guidelines provided by AAADM. Provide each equipment owner with an owner's manual that includes a daily safety checklist and contains, at a minimum, the information recommended by AAADM. Offer an information session with the equipment owner explaining how to perform daily inspections and point out the location of power/operation switches to disable the equipment if a compliance issue is noted. The equipment should be inspected annually in accordance with the minimum inspection guidelines. A safety check that includes, at a minimum, the items listed on the safety information label must be performed during each service call. If you are not an AAADM certified inspector, BEA strongly recommends you have an AAADM certified inspector perform an AAADM inspection and place a valid inspection sticker below the safety information label prior to putting the equipment into operation.

