

## IDENTIFICATION

Badger Meter Pit ORION Transmitters are available in a single transmitter configuration for easy adaptation to the complete Badger® Recordall® Disc, Turbo, Compound Series, and Mag meter lines. The single pit design offers a factory prewired ORION module to either of Badger Meter's encoders, including the Recordall Transmitter Register (RTR®) or the Absolute Digital Encoder (ADE™).

Each pit ORION transmitter can be identified using the unique eight-digit serial number located on a tag attached to the wire harness. At the end of the serial number a letter 'M' or 'N' appears. This alpha character represents whether the transmitter is for Metal (M) or Nonmetal (N) pit lid applications. Each Badger Meter encoder is clearly identified on the face of the register with an assembly number, unit of measure and meter model (see figure 1). It is essential that the correct transmitter is used for the correct pit lid application. Failure to do so will result in a violation of FCC regulations.

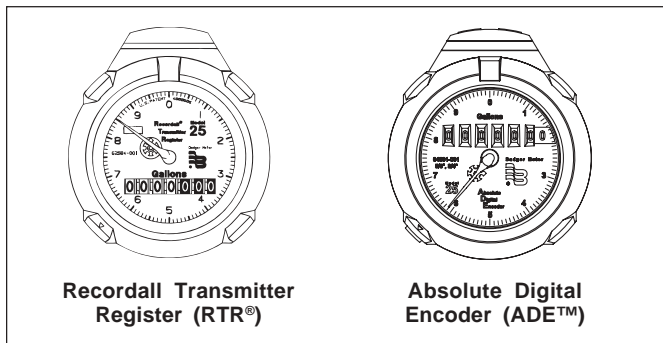


Figure 1

### ORION Pit Installation Kits

Through Lid Installation Kit	64394-001
Below Lid with Knuckles	64394-003
Vault Installation Kit	64394-008
Armour Cast Installation Kit	64394-009

## INSTALLATION

### UNPACKING

Carefully remove the prewired pit ORION transmitter and encoder from the shipping carton and inspect the assembly for damage. Retain the contents of the installation kit for use in mounting the pit transmitter in the field. Prior to installing any pit ORION transmitter, it is important to determine whether it should be installed in a pit with a metal or nonmetal lid. To determine the type of pit ORION transmitter, look at the serial number tag attached to the wire harness. At the end of the serial number, either a 'M' for metal or an 'N' for nonmetal will designate the proper lid application for the transmitter.

After determining the proper application, the ORION pit transmitter can be installed either through or beneath the lid. An installation kit is provided with each transmitter for mounting through or beneath a pit

lid. Note that the ORION transmitter should not be mounted through the lid in applications where vehicle traffic and exposure to snow plow blades and other objects may damage the ORION transmitter.

## PIT ORION INSTALLATION

The Pit ORION Transmitter (see Figure 4) is shipped prewired to the Badger Meter encoder for single pit configurations. Due to the factory prewired shipment, there is no splicing required and only the mounting of the register with tightening of the Torx seal screw is necessary. Excess wire should be coiled up inside the pit and cable tied to avoid any damage.

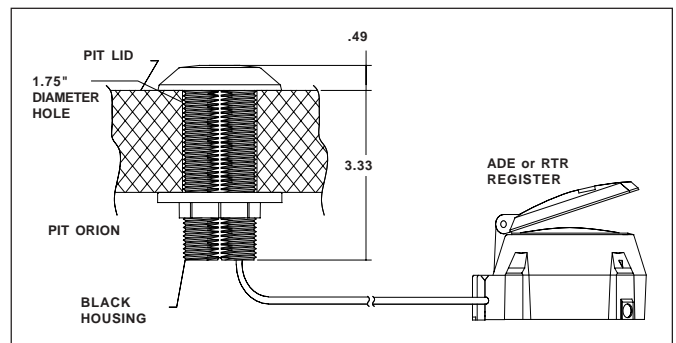


Figure 2 Identification - Pit ORION Transmitter

ORION Pit transmitters can be mounted through or below the pit lid. See figures 4 and 6 for details. For below the lid installations, a special mounting bracket (figure 3) is available. This mounting bracket is designed for use with 3/8", 1/2" and 5/8" rebar or 1/2" schedule 40 PVC pipe.

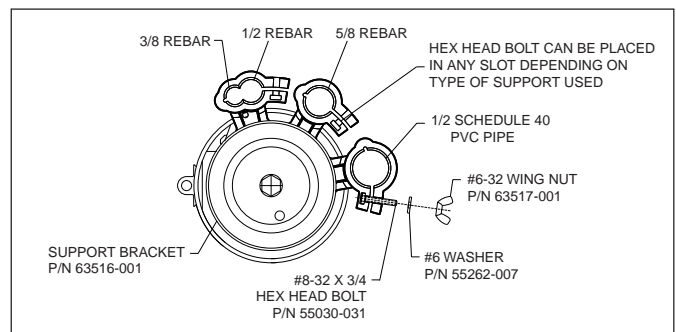


Figure 3 Identification - Pit Mounting Bracket - Top View

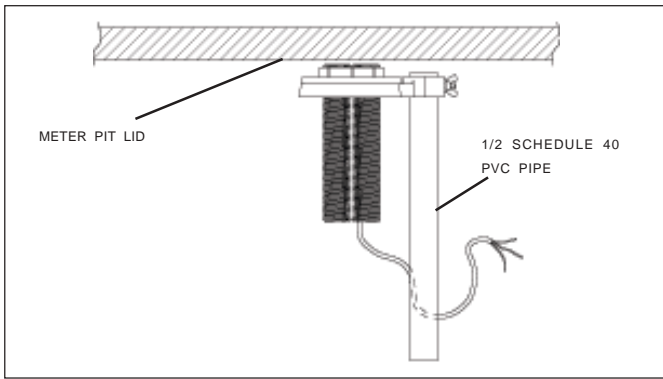


Figure 4 Identification - Pit ORION Beneath Lid Installation

## CAUTION

To install, drive rebar or stake into the ground prior to attaching Pit ORION Transmitter to avoid damage. Once in the ground, secure the mounting bracket on the appropriate rebar or pipe using the enclosed washer, wing nut and hex head bolt provided with the bracket. Insert the Pit ORION Transmitter through the bracket and thread the locking nut to secure the ORION transmitter (see Figure 4). **For best results mount the Pit Transmitter approximately 1-2" below the underside of the lid.**

If installation of the ORION pit transmitter will occur in a deep vault, Badger offers a kit that can be used to mount the transmitter to the side of the vault. To install, mount the 'C' clamp on the side of the vault. Select a location close to the top of the vault that will not be damaged when access to the meter is required. Place the tape supplied in the installation kit around the transmitter approximately 1/2" from the top of the transmitter. Thread the locking ring on the transmitter until it makes contact with the tape. Insert the transmitter into the 'C' clamp. Close the 'C' clamp and lock in place so that the it closes over the tape and securely holds the transmitter.

**NOTE: ORION radio transmitters perform best with a clear line**



Figure 5



Figure 6

**of site and performance will vary by installation and lid construction.**

ORION®, Recordall® and RTR® are registered trademarks of Badger Meter, Inc. ADE™ is a trademark of Badger Meter, Inc. TORX® is a registered trademark of Camcar, Division of Textron, Inc.

ORION pit transmitters can also be installed in composite and plastic lids like Armourcast. An installation kit for installing an ORION pit transmitter to the lid is available. To install an ORION transmitter to a composite or plastic lid, thread the locking ring onto the top of the Orion transmitter. Slide the transmitter into the mounting bracket. Thread the locking ring so that the transmitter is held firmly in place.

## RTR INSTALLATION

Install the RTR on the water meter and secure it using either the Torx® screw or standard seal screw provided.

## TESTING

Once the pit ORION transmitter is securely installed and the RTR has been mounted on the water meter, the ORION system is ready for operation. Run water through the meter to increment the RTR 1/10<sup>th</sup> of the test circle. Upon receiving the first digital signal from the RTR, the transmitter will count the signal and begin its radio frequency transmissions. No specific testing of the wiring or programming of the transmitter is required. Reading each pit transmitter installed immediately after installation will verify proper operation and reading performance. ORION reading equipment only can be used to read installed ORION transmitters.

## LICENSE REQUIREMENTS

This device complies with Part 15 of the FCC Rules. Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes made by the user not approved by Badger Meter can void the user's authority to operate the equipment. No license is required by the utility to operate an ORION meter reading system.



Please see our website at  
[www.badgermeter.com](http://www.badgermeter.com)  
 for specific contacts.

Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding bid obligation exists.



**BadgerMeter, Inc.**

P.O. Box 245036, Milwaukee, WI 53224-9536  
 (800) 876-3837 / Fax: (888) 371-5982  
[www.badgermeter.com](http://www.badgermeter.com)